



(Continued on next page.)

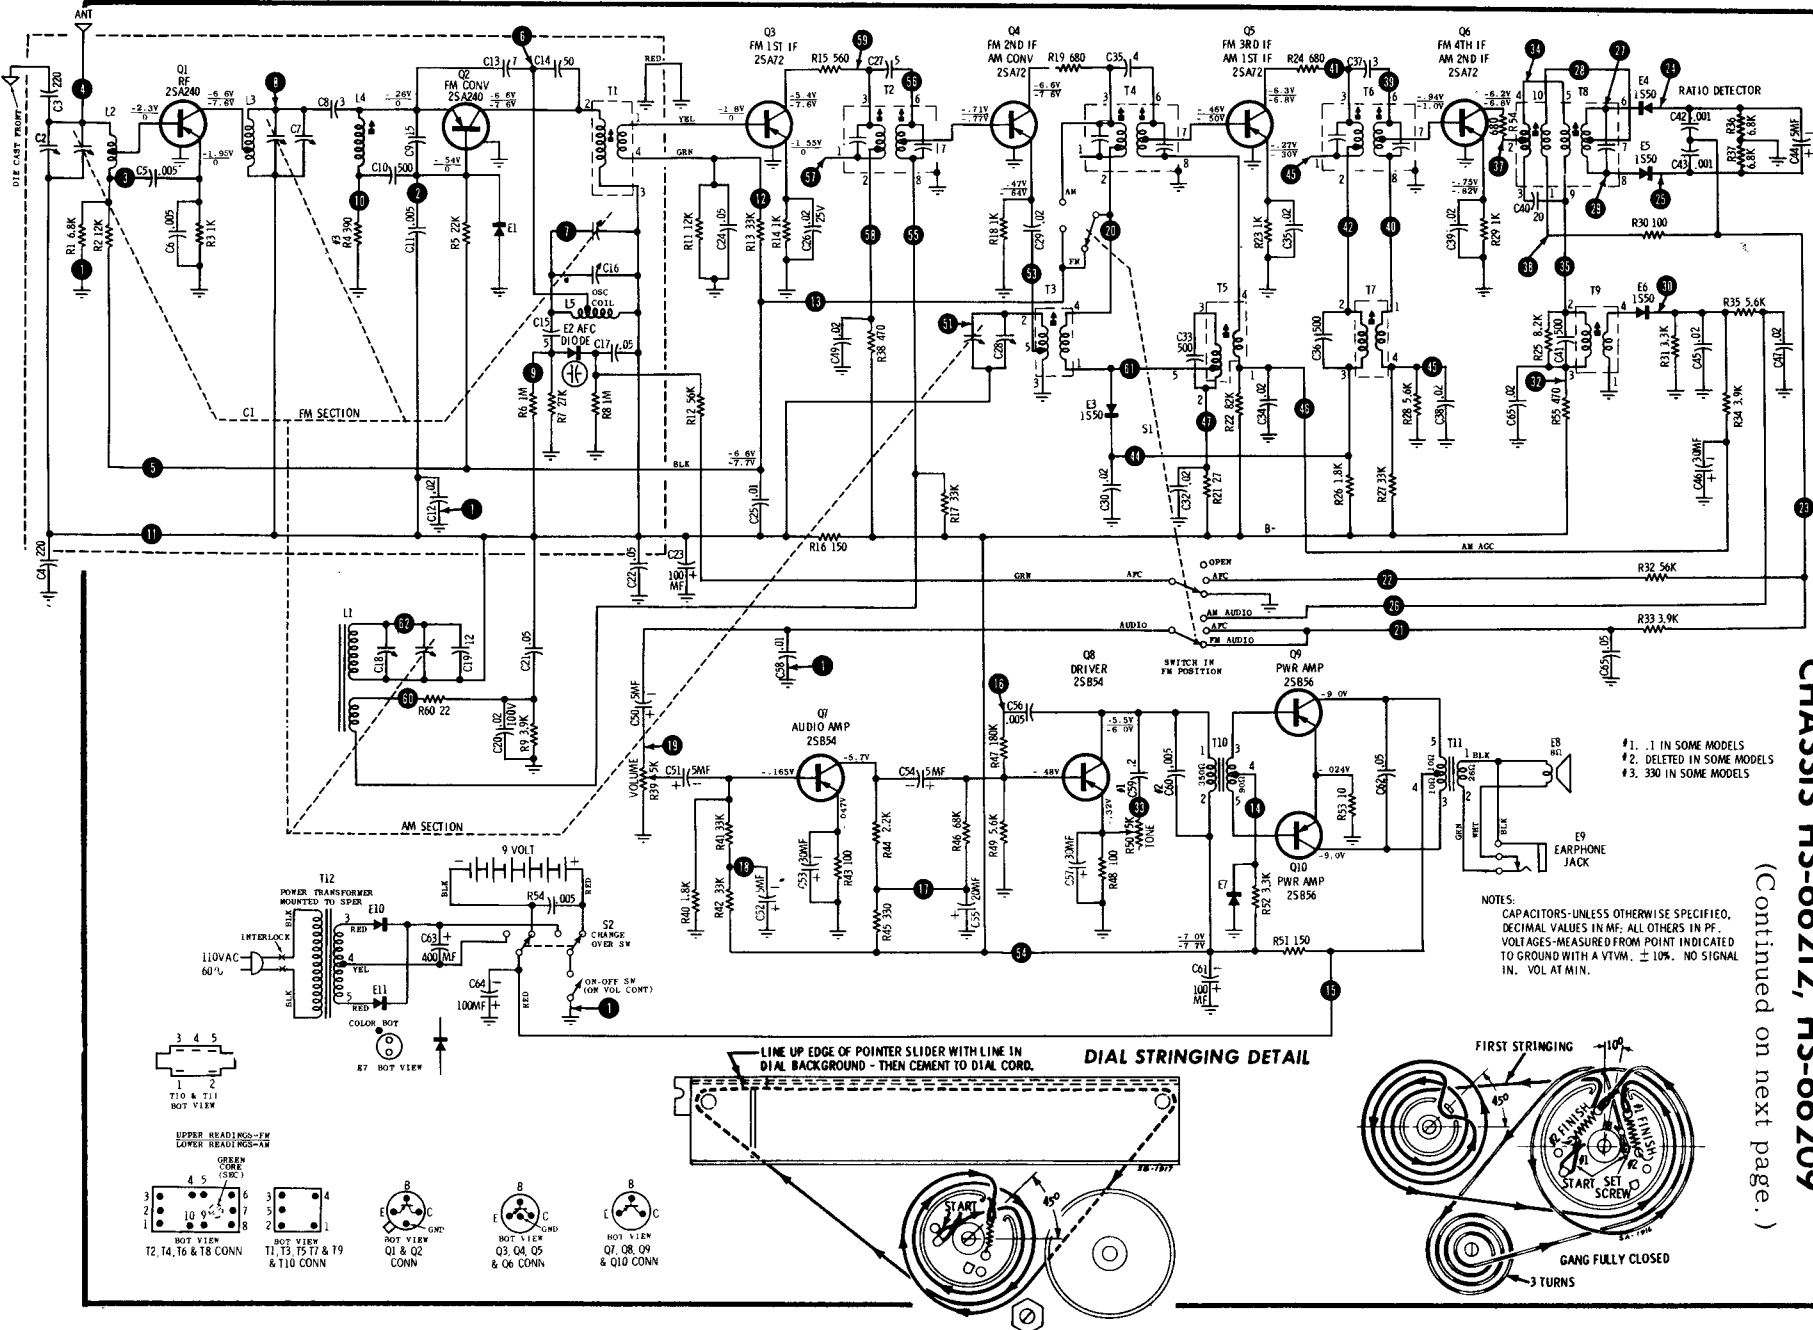

MODELS TP11C & TP12C

BOTTOM VIEW


PLATED CHASSIS REFERENCE POINTS AND PARTS LOCATION (VIEW FROM WIRING SIDE OF BOARD)

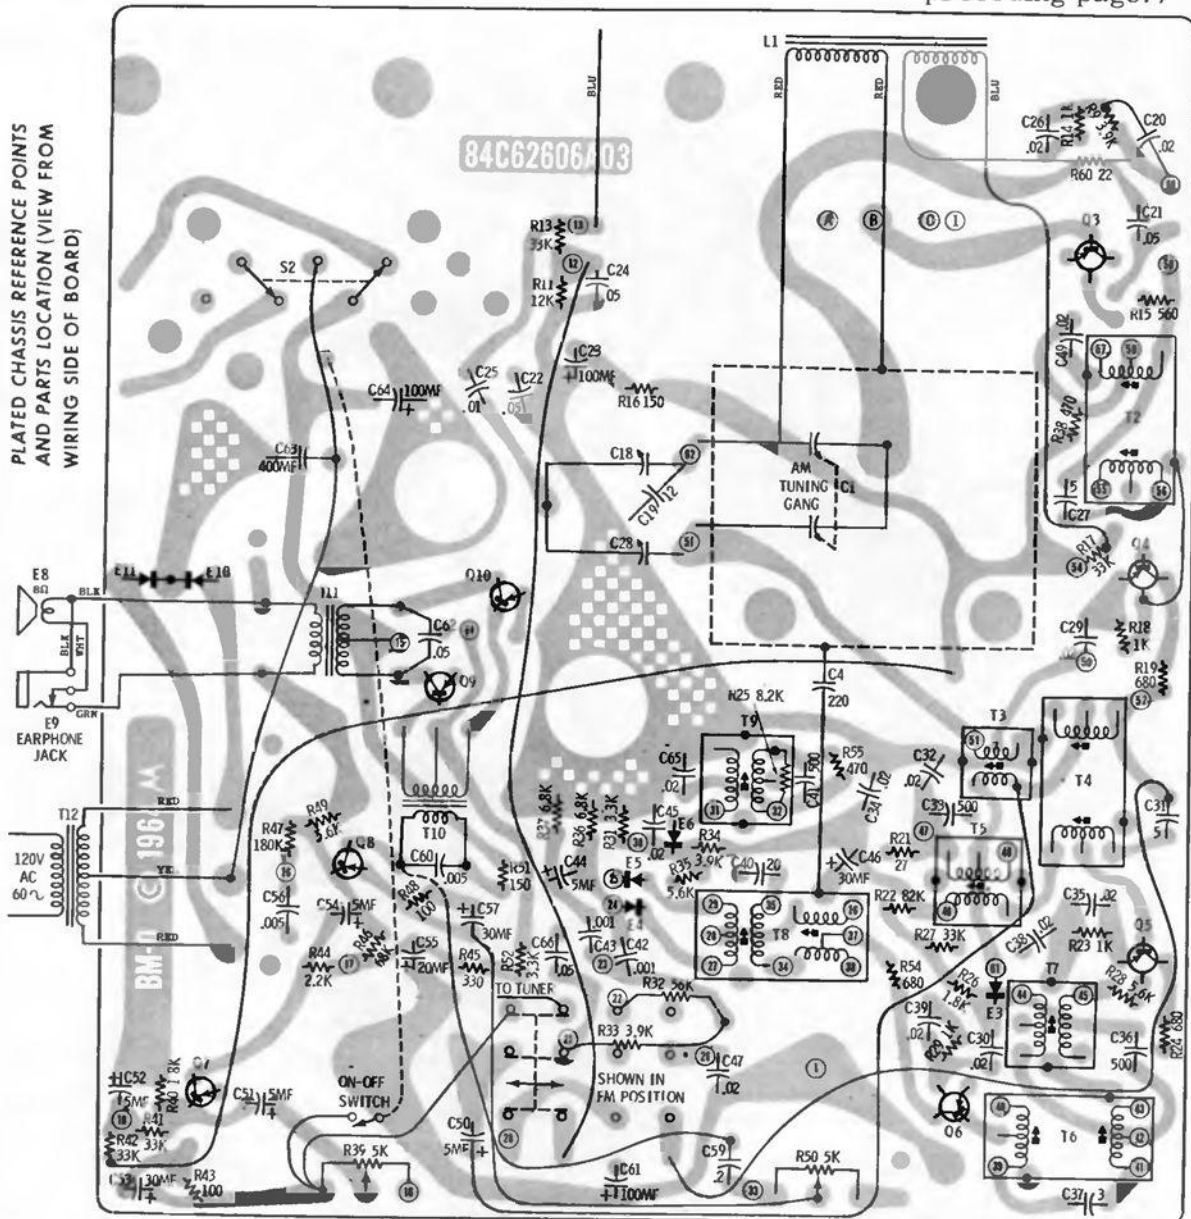

ALIGNMENT POINTS

- | | |
|--------------------|----------------------|
| ① RATIO DET | ⑬ ANT TRIM 106MC |
| ② 10.7MC | ⑭ RF COIL (PRI) 90MC |
| ③ IF 10.7MC | ⑮ ANT COIL 90MC |
| ④ IF 10.7MC | ⑯ RF CORE (SEC) 98MC |
| ⑤ IF 10.7MC | ⑰ IF 455KC |
| ⑥ IF 10.7MC | ⑱ IF 455KC |
| ⑦ IF 10.7MC | ⑲ IF 455KC |
| ⑧ IF 10.7MC | ⑳ OSC TRIM 1620KC |
| ⑨ IF 10.7MC | ㉑ ANT TRIM 1400KC |
| ⑩ OSC TRIM 108.5MC | ㉒ OSC CORE 532KC |
| ⑪ OSC COIL 87.5MC | |
| ⑫ RF TRIM 106MC | |

FM TUNER BOARD REFERENCE POINTS BOTTOM VIEW

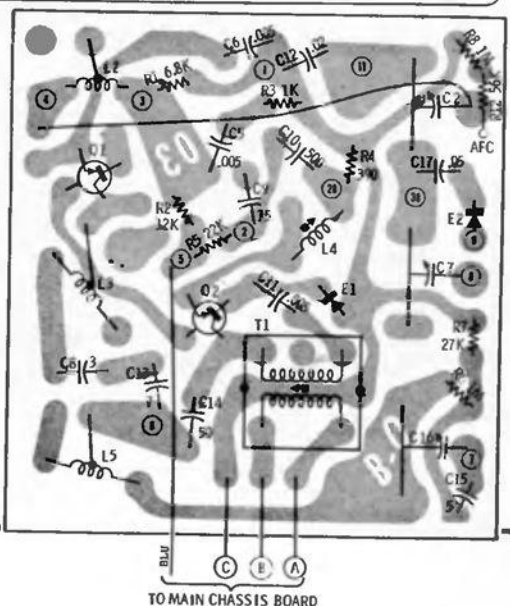

TO MAIN CHASSIS BOARD