


Composite Panel View — Showing Parts Replacement and Tuning Adjustments

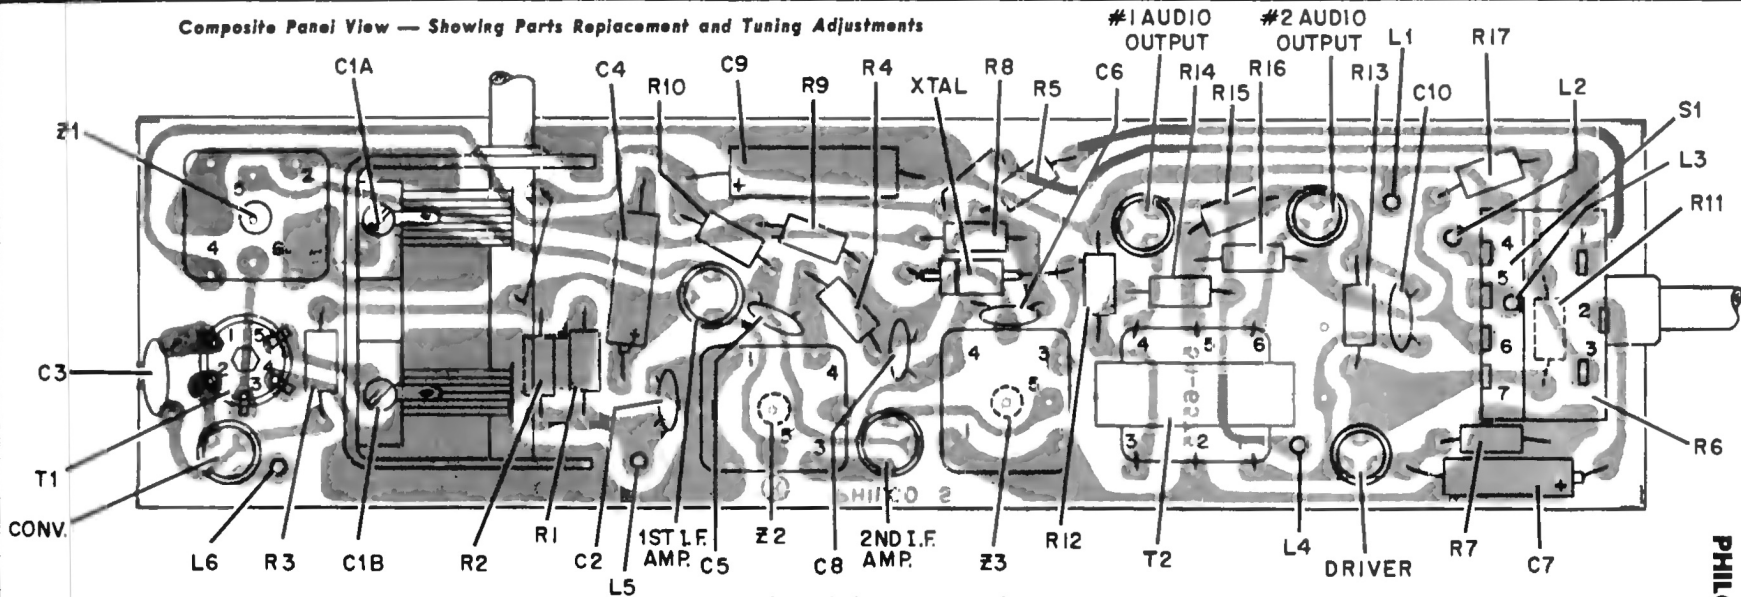

* VOLTAGES READ UNDER NO SIGNAL CONDITIONS WITH A 20,000 PER VOLT METER.
COIL RESISTANCES READ WITH COIL CONNECTED IN THE CIRCUIT.

- L1 Black lead, battery ground.
- L2 Orange lead, 1.5V battery.
- L3 Red lead, 3.0V battery.
- L4 Orange lead, audio output to speaker.
- L5 Antenna lead, low side of secondary, lead #3.

INTERMEDIATE FREQUENCY—455 KC.

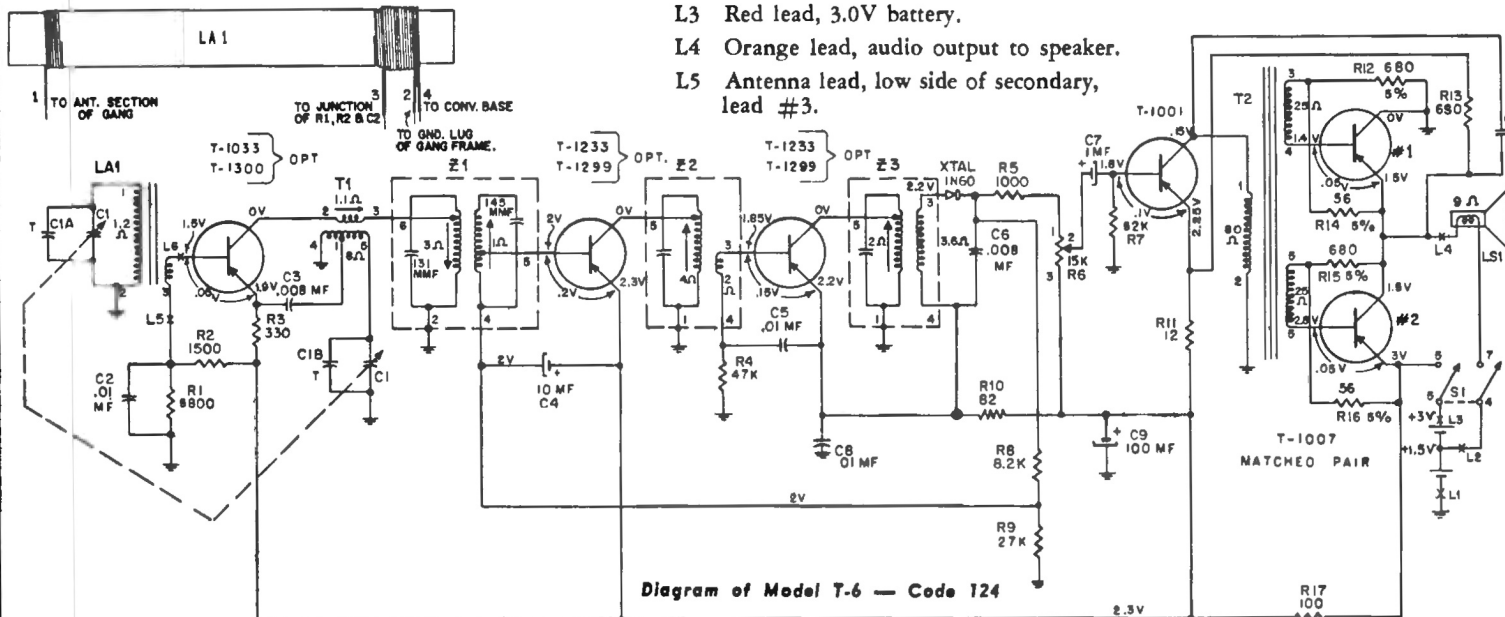


Diagram of Model T-6 — Code 124

Model T-600 identical to Model T-6 except C10 has been deleted and R5 has been changed from 1000 ohms to 330 ohms, part no. 66-1338340.

MODEL T-600 — CODE 124

PHILCO TRANSISTOR RADIO — MODEL T-6 — CODE 124