


Model KX-440 / FW

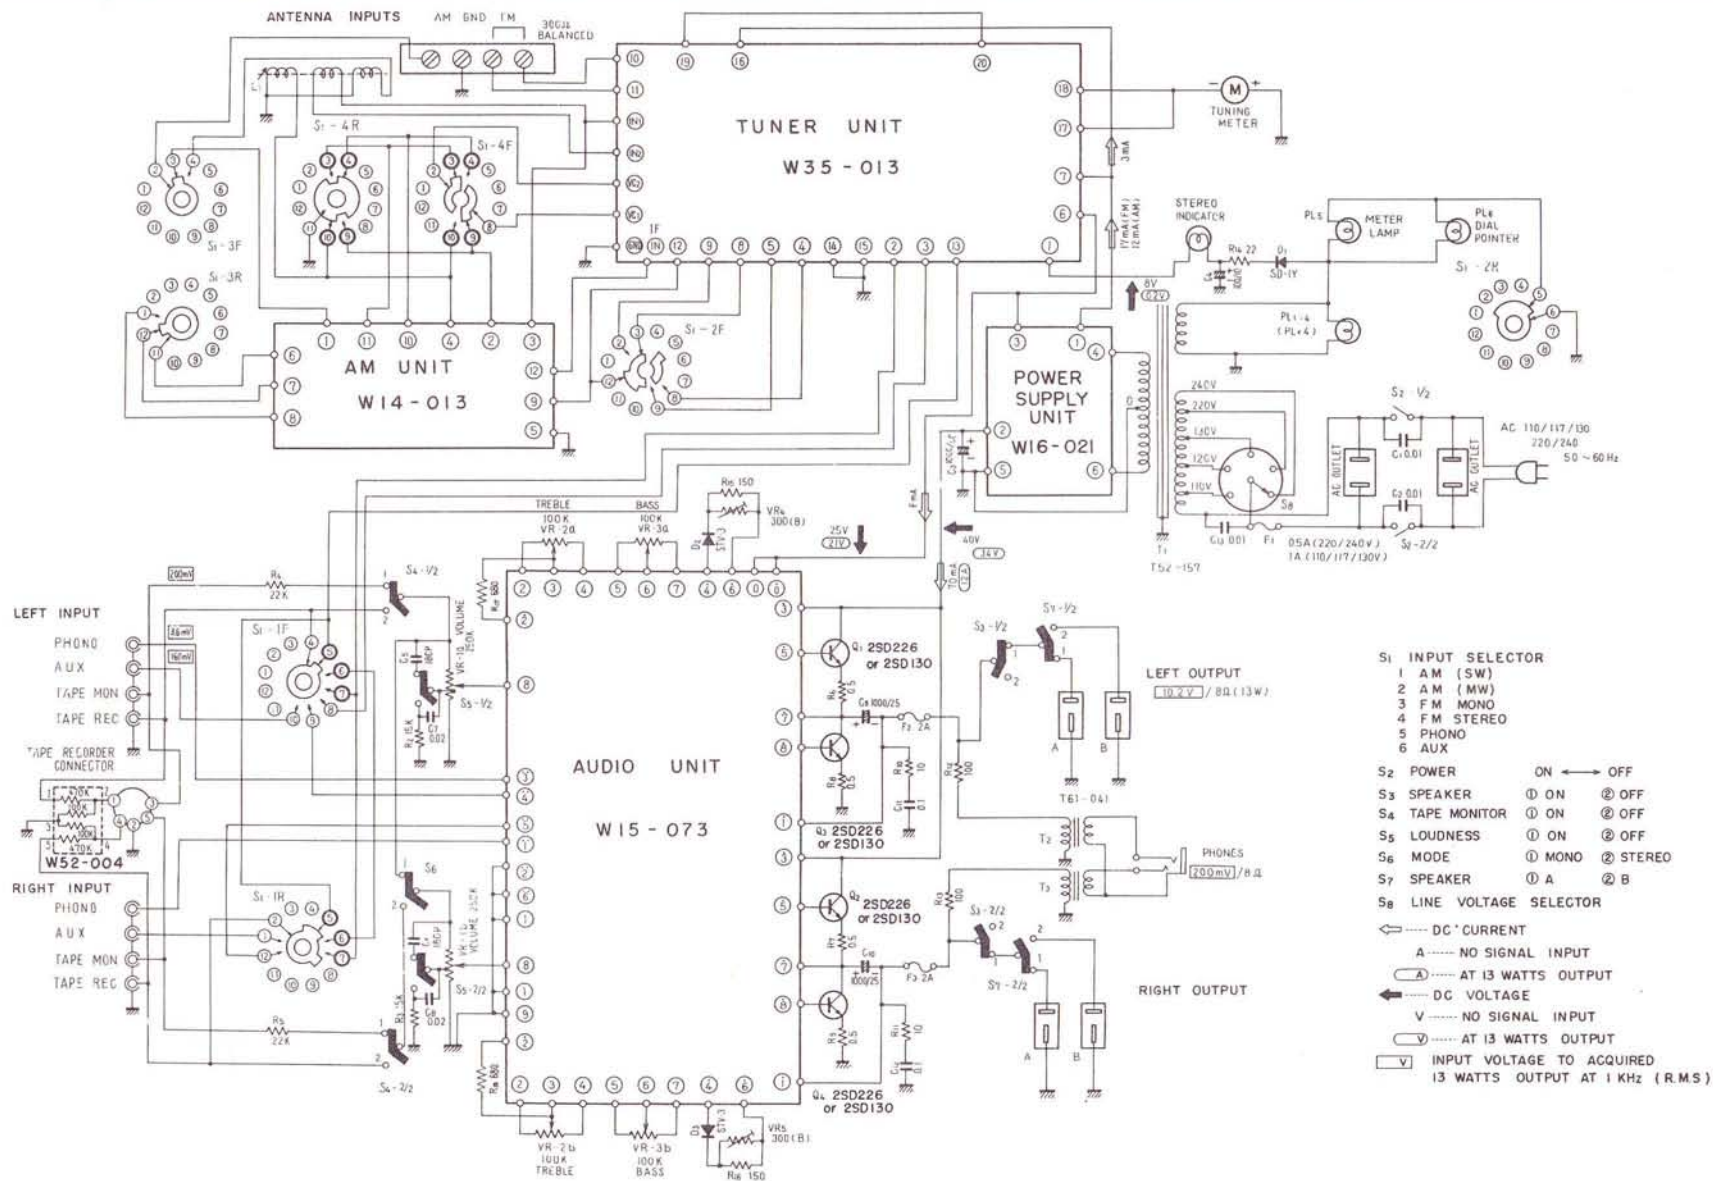

S1 INPUT SELECTOR

- 1 AM (SW)
- 2 AM (MW)
- 3 FM MONO
- 4 FM STEREO
- 5 PHONO
- 6 AUX

S2 POWER

ON ← OFF

S3 SPEAKER ① ON ② OFF

S4 TAPE MONITOR ① ON ② OFF

S5 LOUDNESS ① ON ② OFF

S6 MODE ① MONO ② STEREO

S7 SPEAKER ① A ② B

S8 LINE VOLTAGE SELECTOR

← DC CURRENT

A → NO SIGNAL INPUT

Ⓐ → AT 13 WATTS OUTPUT

← DC VOLTAGE

V → NO SIGNAL INPUT

Ⓥ → AT 13 WATTS OUTPUT


Ⓥ → INPUT VOLTAGE TO ACQUIRED

Ⓥ → 13 WATTS OUTPUT AT 1 KHz (R.M.S.)

TUNER UNIT W35-013

TUNER UNIT

W35-013

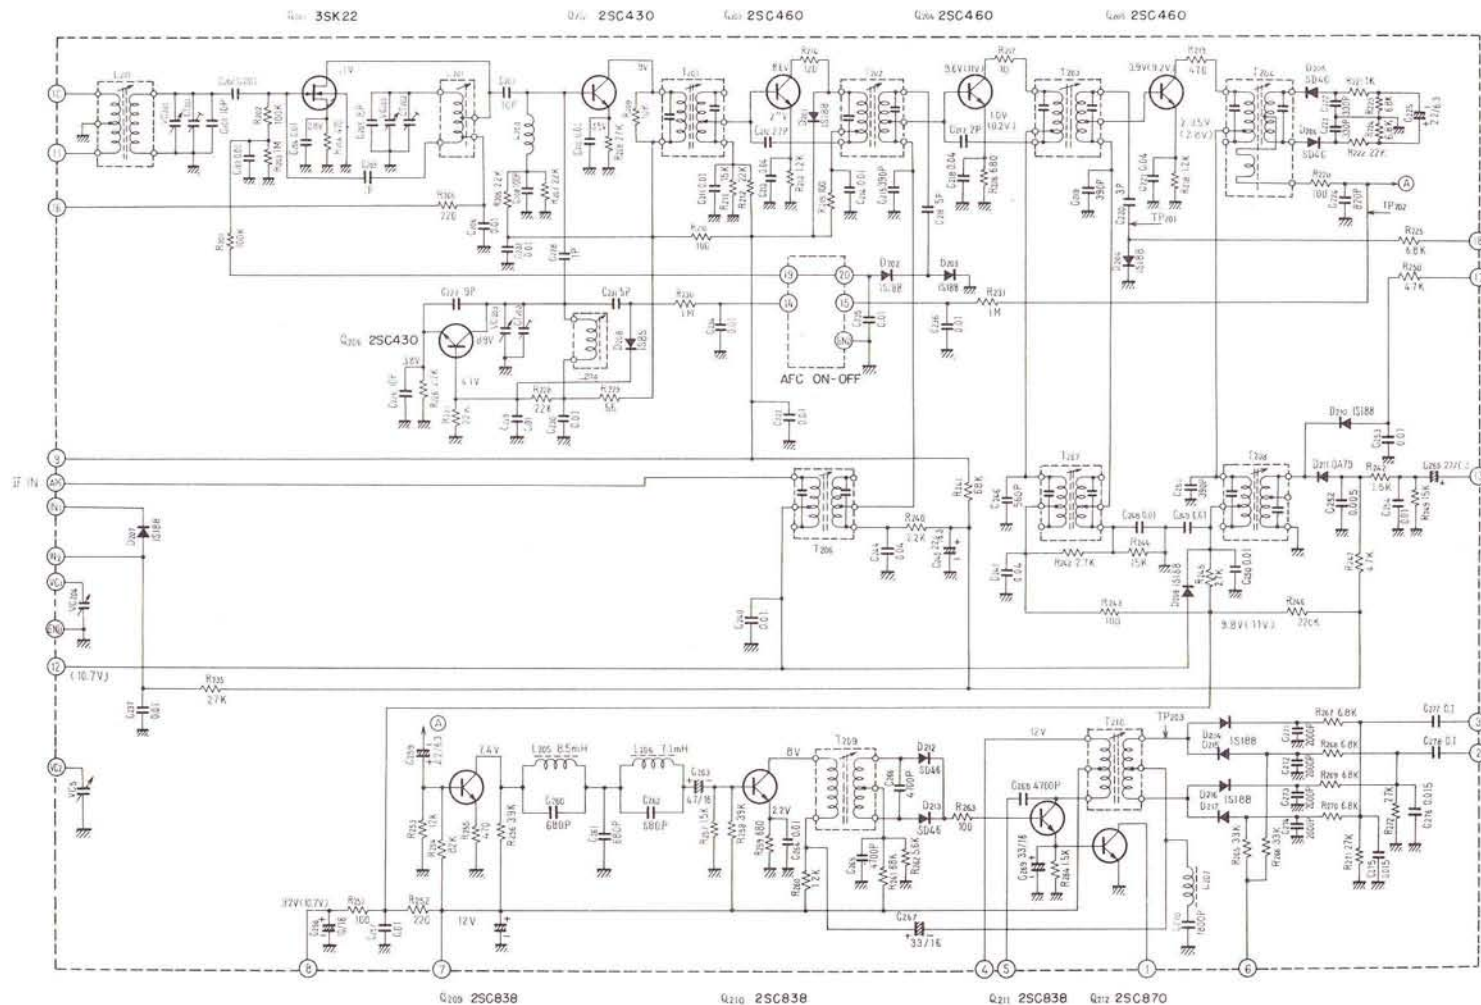


V : DC VOLTAGE (FM)
(V) : DC VOLTAGE (AM)

AM UNIT W14-013


AM UNIT

W14-013

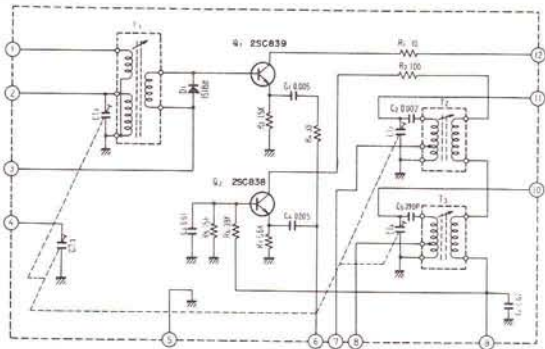

W15-073

Q307 2SC870 Q309 2SC734 Q311 2SC734

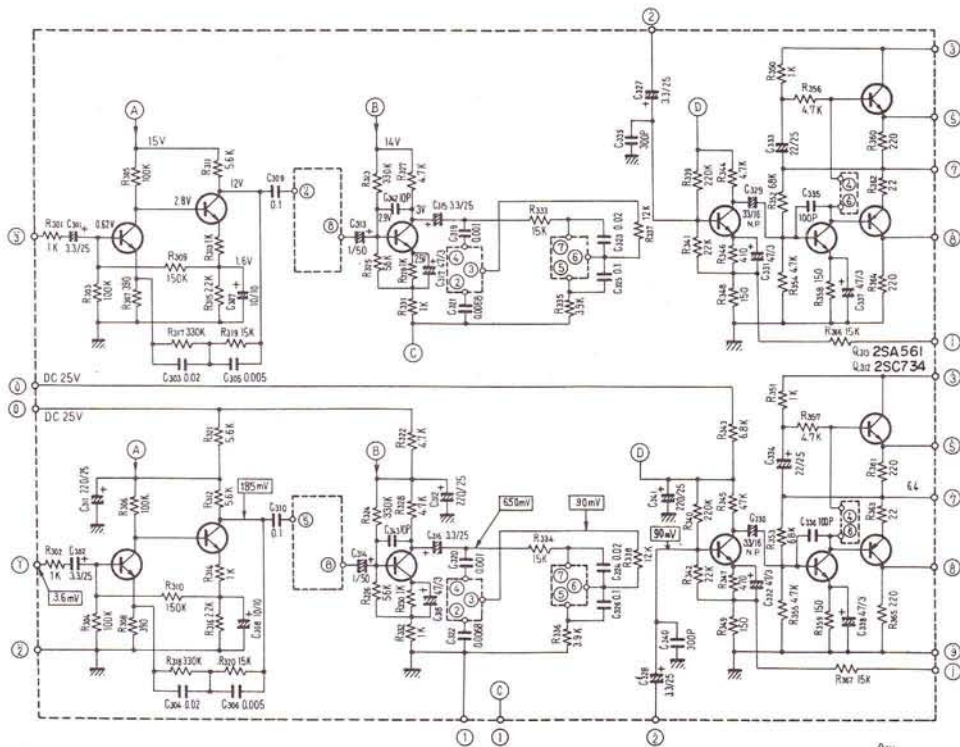

Q308 2SC870 Q310 2SC734 Q314 2SA561

POWER SUPPLY UNIT

W16-021

POWER SUPPLY UNIT

W16-021

