
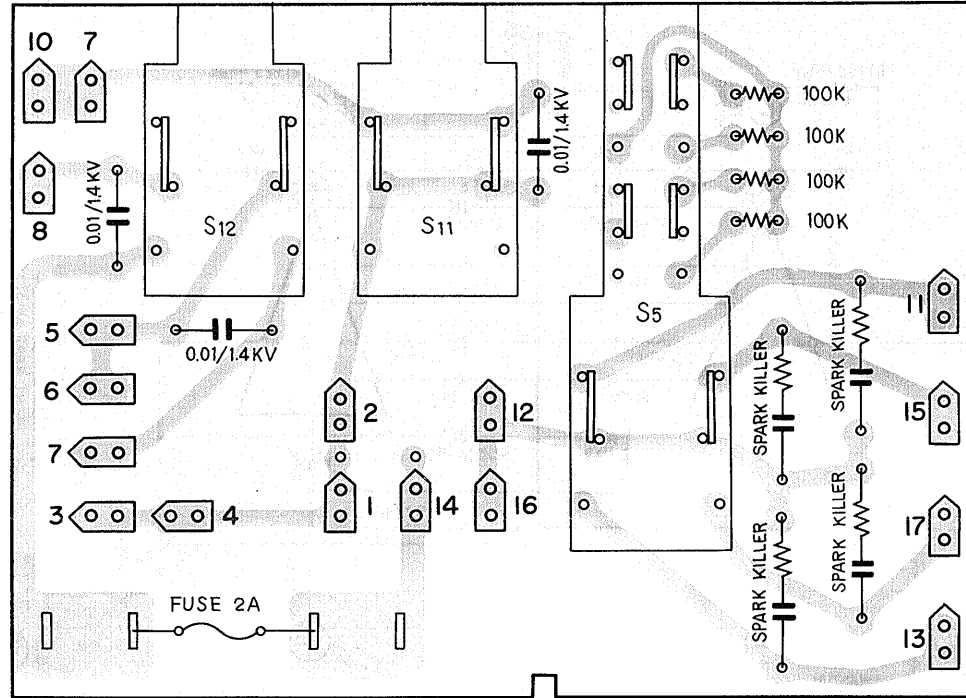

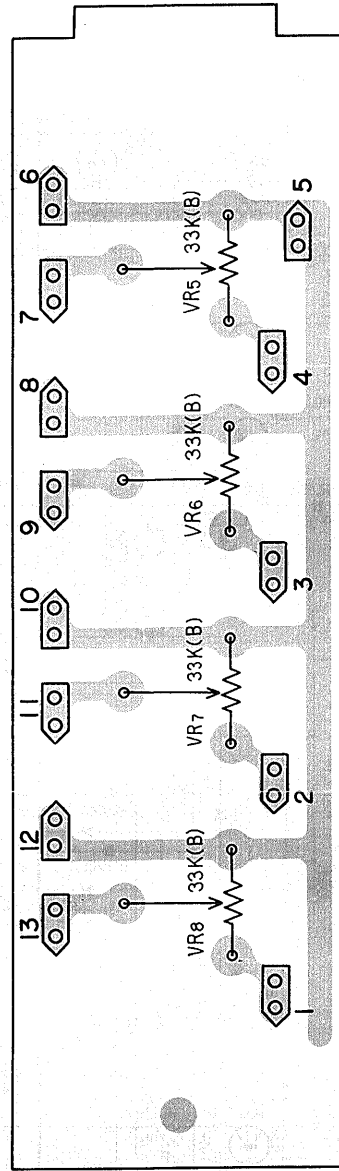

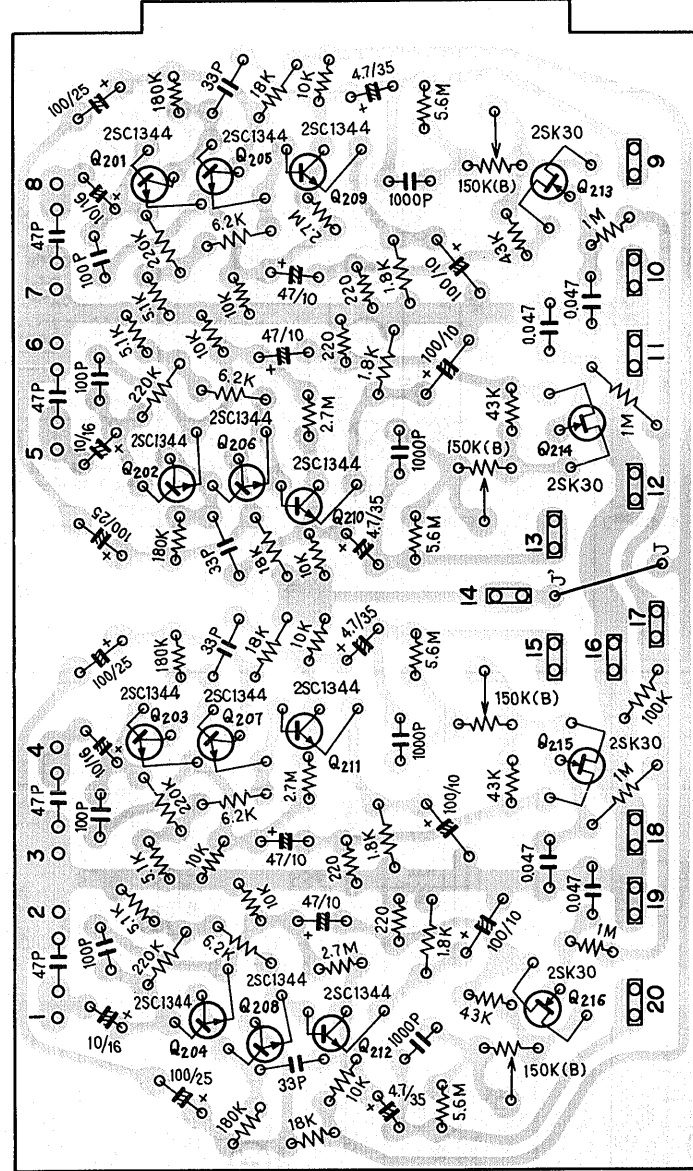

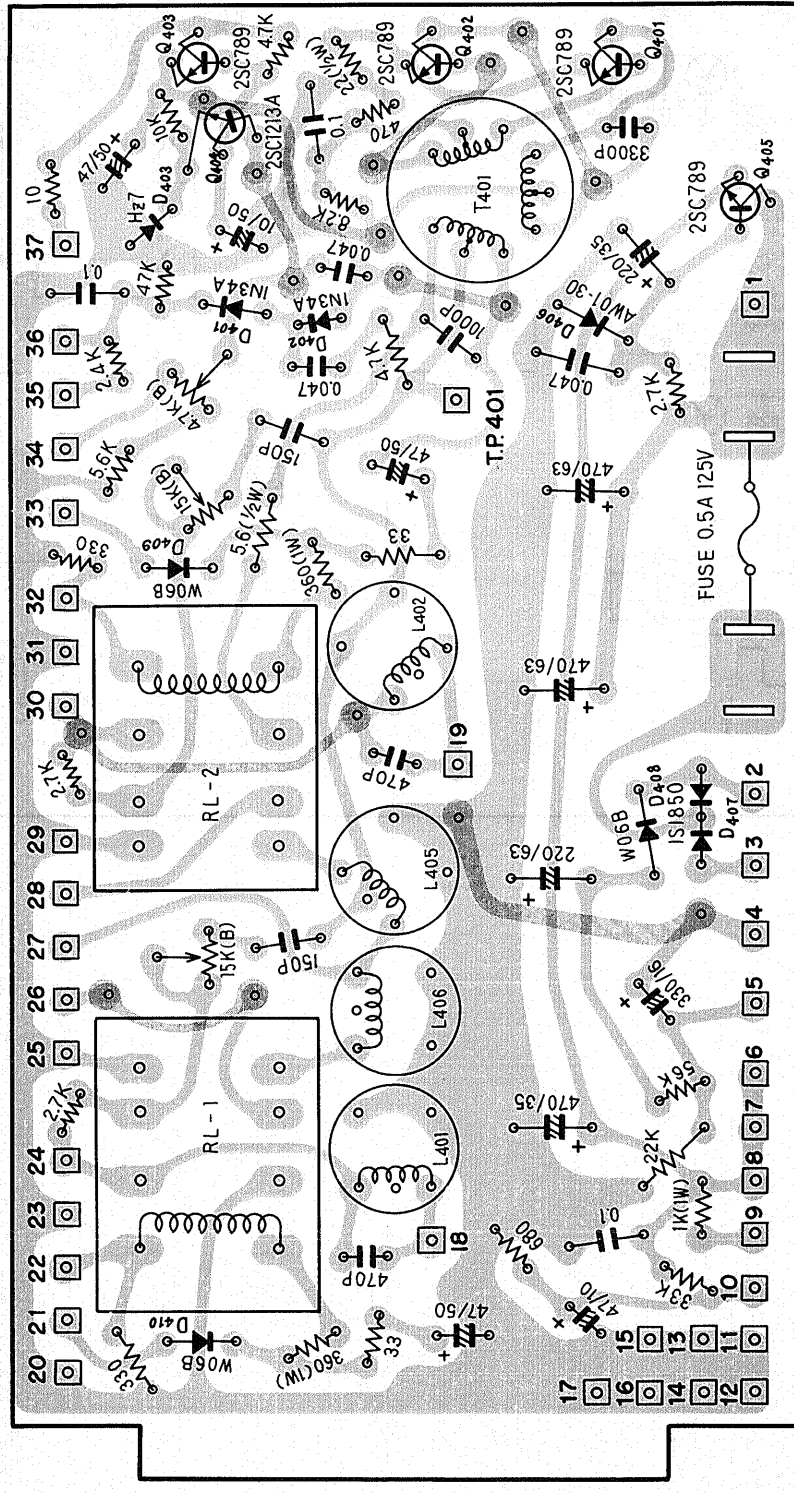
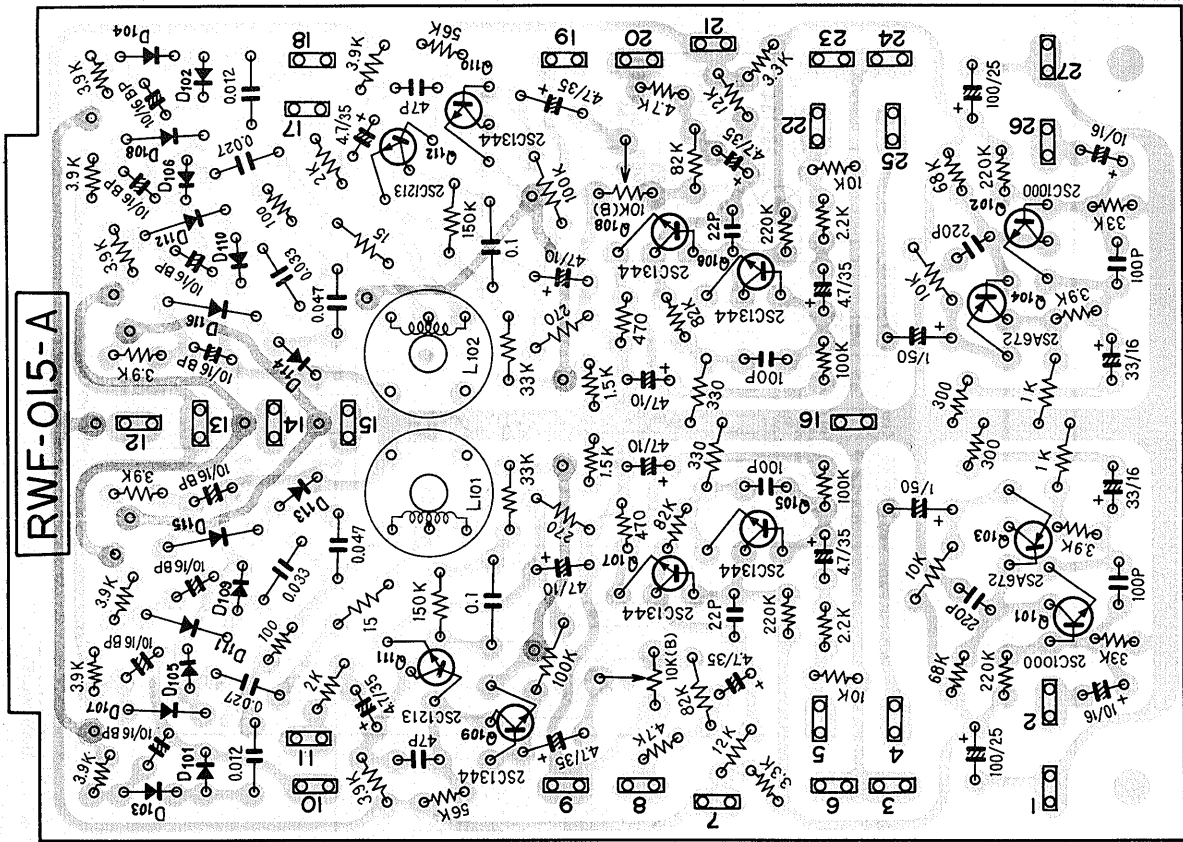
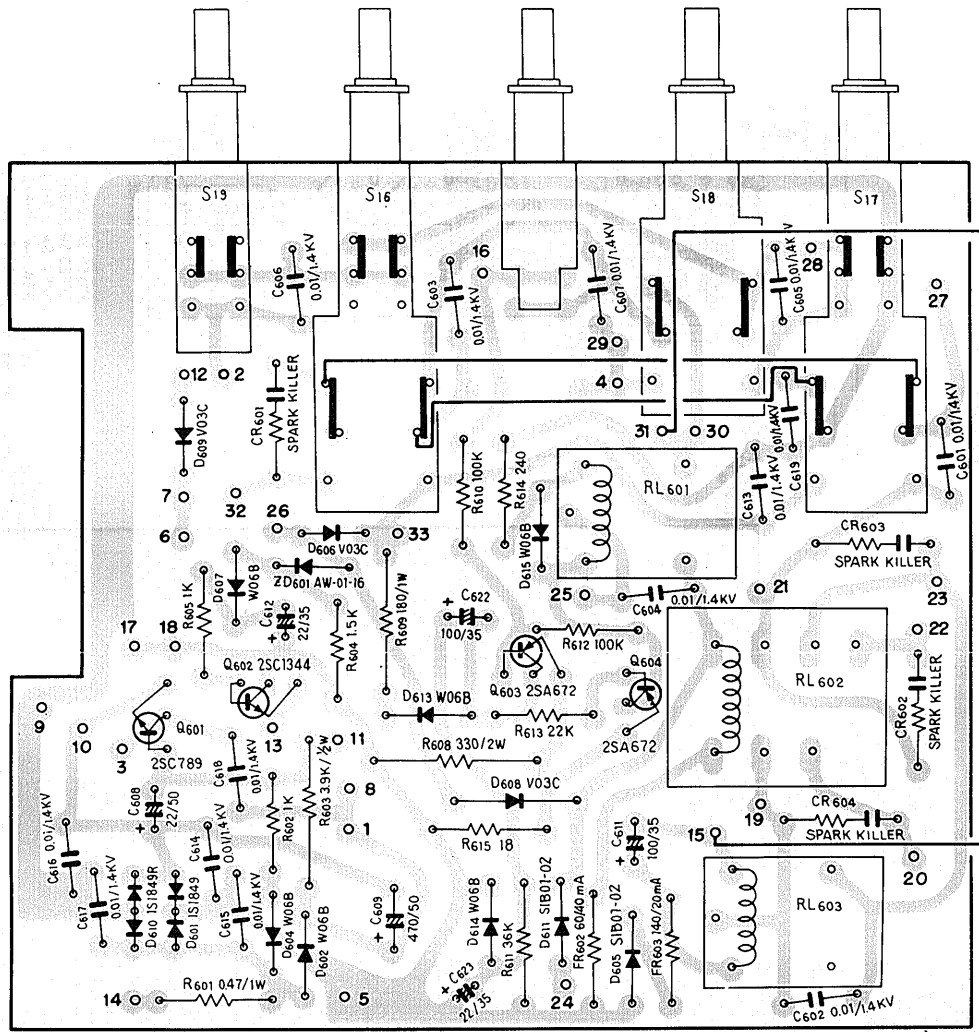
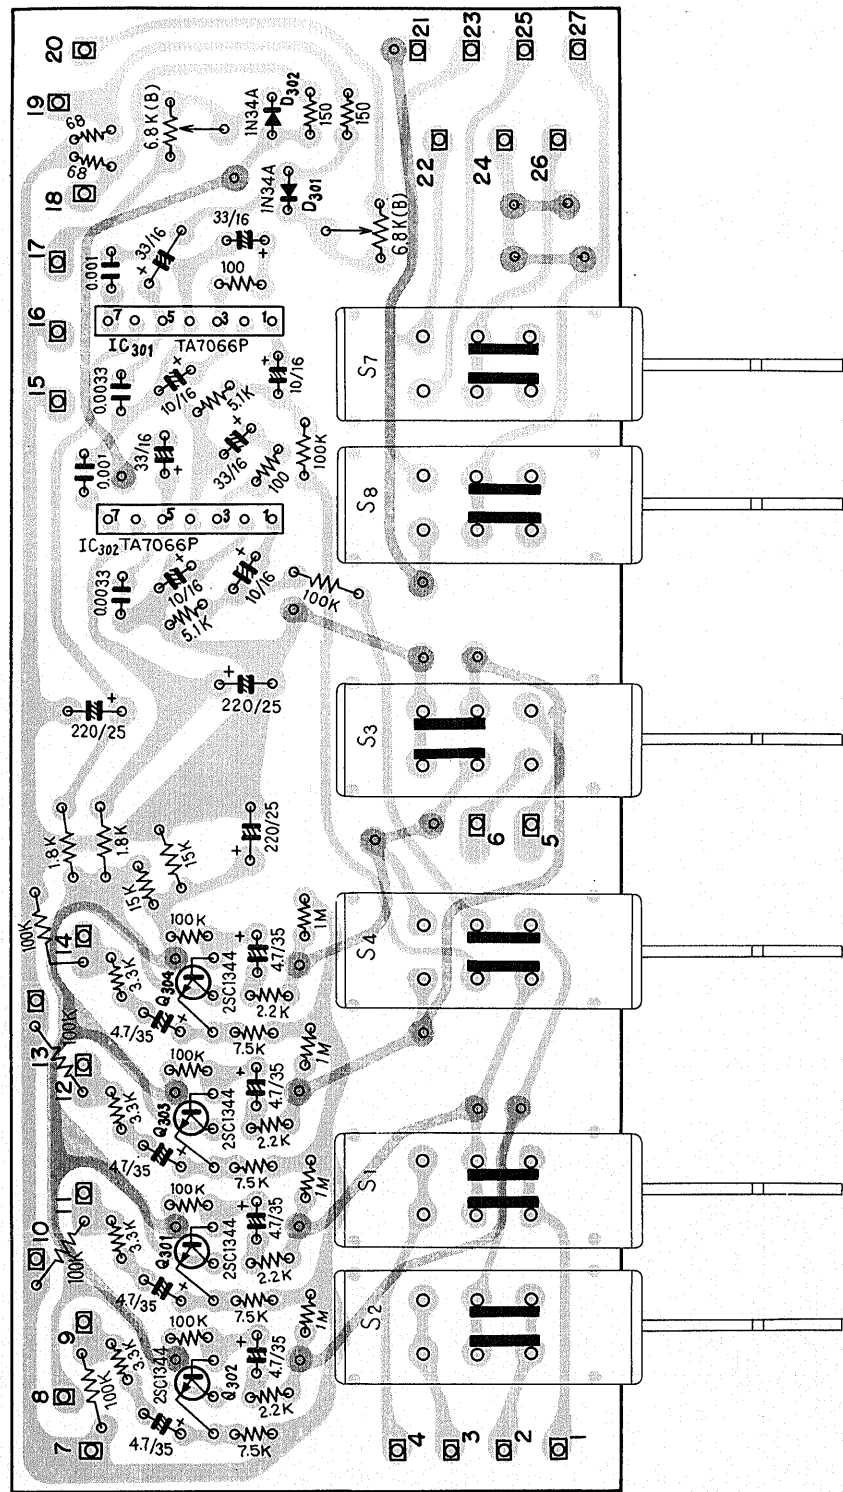





RT-1020L

Q₂₀₁₋₂₀₂ 2SC1000

Q₂₀₃₋₂₀₄ 2SA672

Q₂₀₅₋₂₁₀ 2SC1344

Q₂₁₁₋₂₁₂ 2SC1213

D₁₀₁₋₁₁₆ 1S2473


Q₂₀₁₋₂₁₂ 2SC1344

Q₂₁₃₋₂₁₆ 2SK30

Q₃₀₁₋₃₀₄ 2SC1344

IC₃₀₁₋₃₀₂ TA7066P


D₃₀₁₋₃₀₂ 1N34A

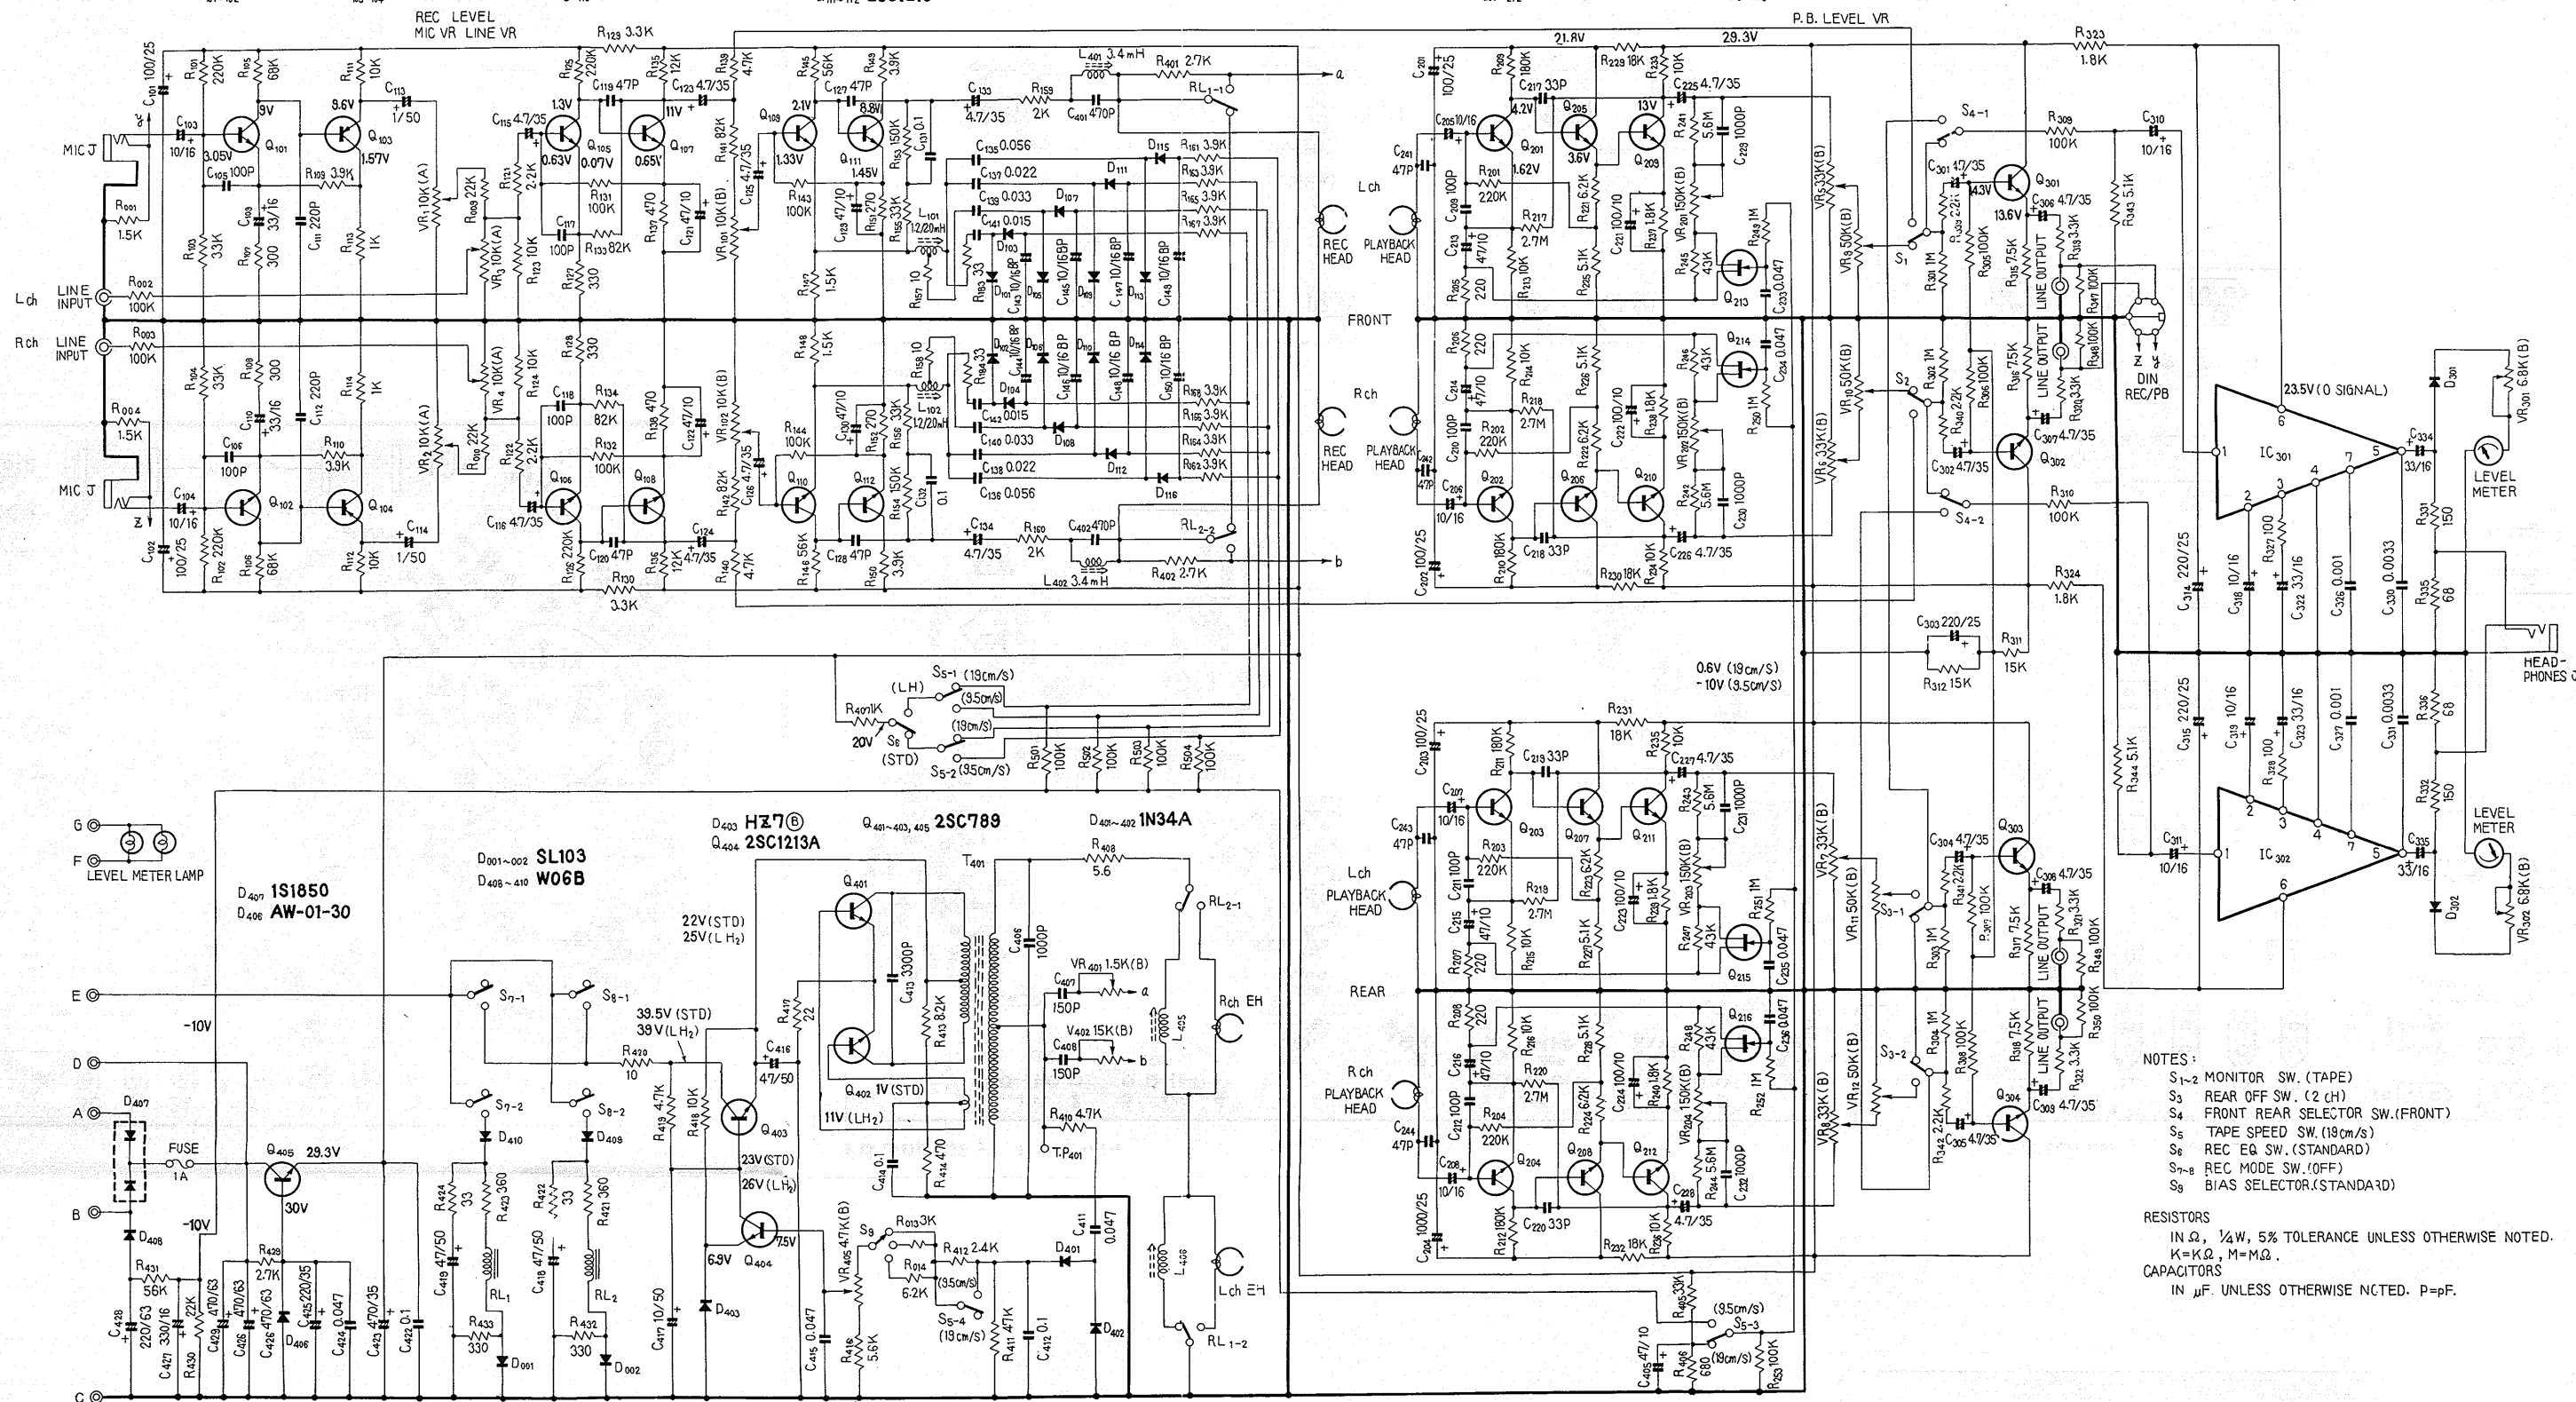

- NOTES:
- S₁₋₂ MONITOR SW. (TAPE)
 - S₃ REAR OFF SW. (2 CH)
 - S₄ FRONT REAR SELECTOR SW. (FRONT)
 - S₅ TAPE SPEED SW. (18 CM/S)
 - S₆ REC EQ SW. (STANDARD)
 - S₇₋₈ REC MODE SW. (OFF)
 - S₉ BIAS SELECTOR (STANDARD)

RESISTORS
IN Ω, 1/4 W, 5% TOLERANCE UNLESS OTHERWISE NOTED.
K=KΩ, M=MΩ.
CAPACITORS
IN μF, UNLESS OTHERWISE NOTED. P=pF.

CONTROL SECTION






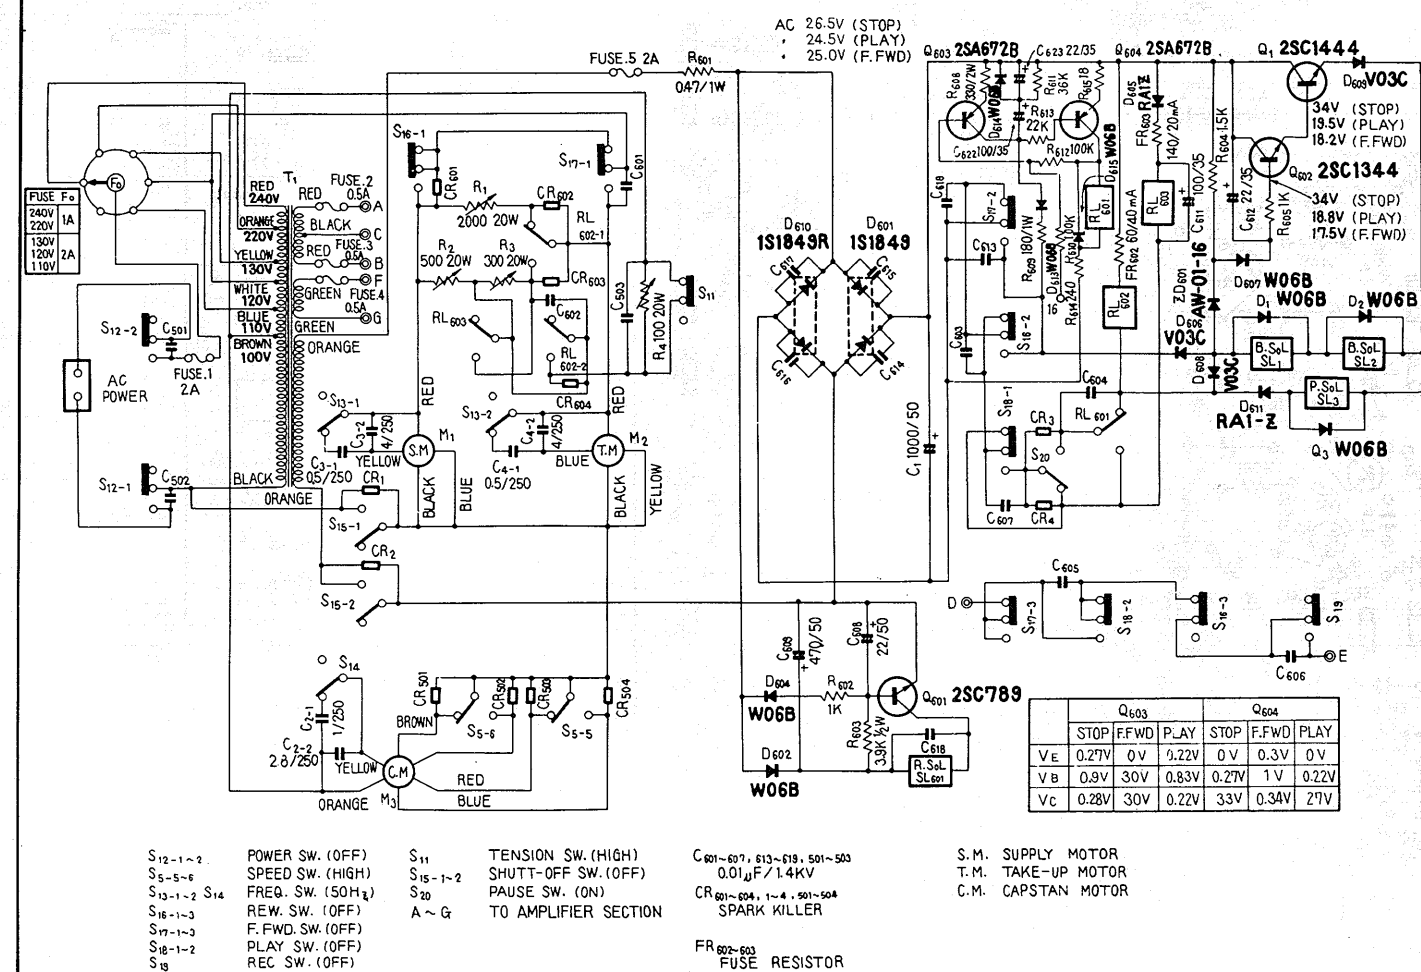


- S₁₂₋₁₋₂ POWER SW. (OFF)
S₅₋₅₋₆ SPEED SW. (HIGH)
S₁₃₋₁₋₂ FREQ. SW. (50 Hz)
S₁₆₋₁₋₃ REW. SW. (OFF)
S₁₇₋₁₋₃ F.FWD. SW. (OFF)
S₁₈₋₁₋₂ PLAY SW. (OFF)
S₉ REC SW. (OFF)
- S₁₁ TENSION SW. (HIGH)
S₁₅₋₁₋₂ SHUTT-OFF SW. (OFF)
S₂₀ PAUSE SW. (ON)
A ~ G TO AMPLIFIER SECTION

C₆₀₁₋₆₀₇, 613-619, 501-503
0.01 μF/14KV
CR₆₀₁₋₆₀₄, 1-4, 501-504
SPARK KILLER
FR₆₀₂₋₆₀₃
FUSE RESISTOR

S.M. SUPPLY MOTOR
T.M. TAKE-UP MOTOR
C.M. CAPSTAN MOTOR

	Q ₆₀₃	Q ₆₀₄
STOP	0.27V	0.22V
F.FWD	0.9V	0.83V
PLAY	0.22V	0.34V
PAUSE	0.27V	0.22V
REC	0.27V	0.22V

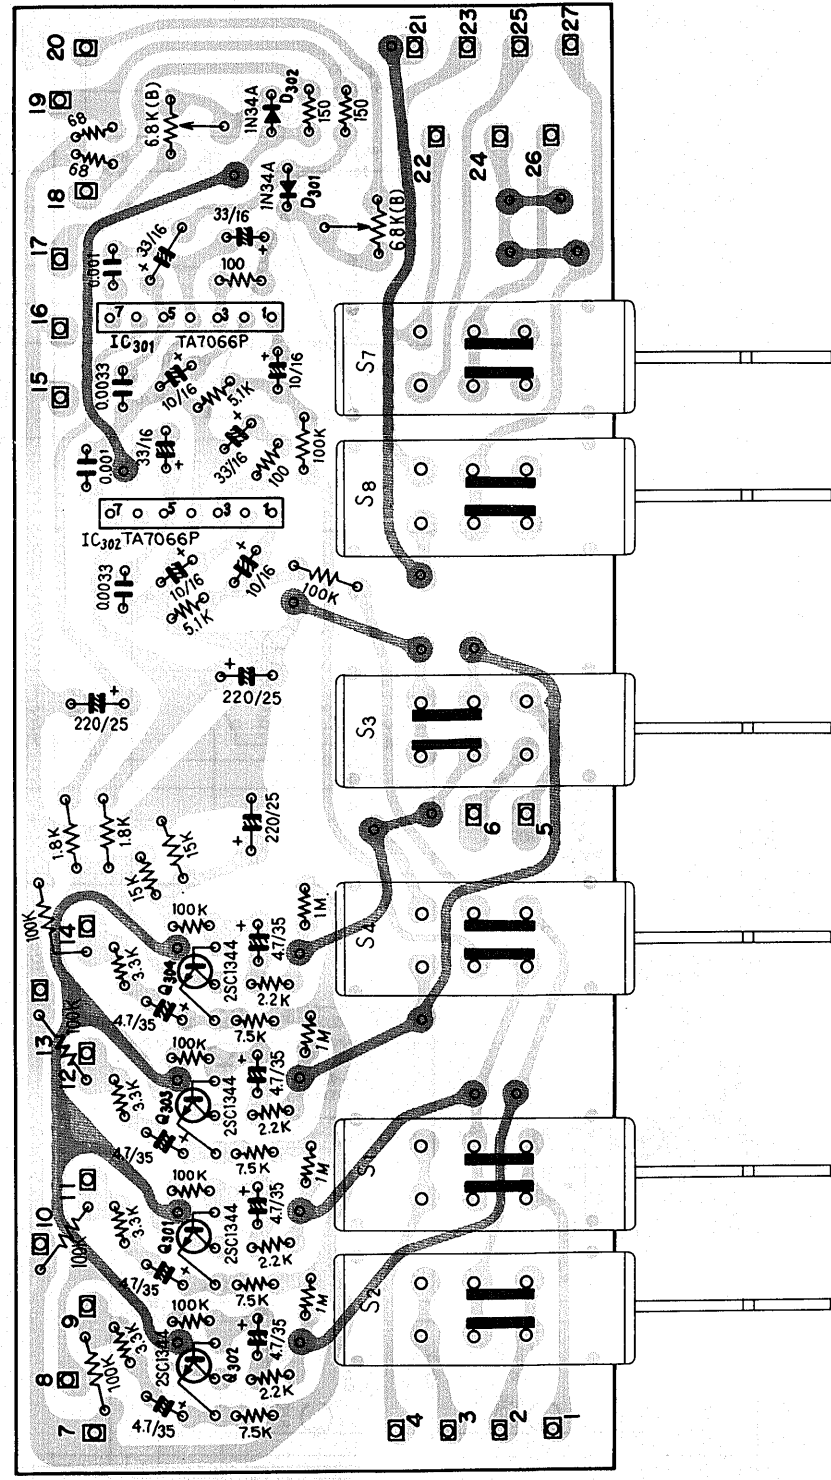

RT-1020L

RT-1020L

