


STEREO AMPLIFIER

SA-500


UNIT \ ROUND LABEL	FA	FV	KC	NB		
UNIT						
FM FRONT END						
FM IF UNIT						
MPX UNIT						
AM TUNER UNIT						
MUTING UNIT						
HEAD AMP UNIT	W15-032	W15-032	W15-032	W15-032		
CONTROL AMP UNIT	AWG-009	AWG-009	AWG-009	AWG-009		
MAIN AMP UNIT	W15-055	W15-055	W15-055	AWH-004		
POWER SUPPLY UNIT						
SWITCH UNIT	W15-075	W15-075	W15-075	W15-075		
SWITCH UNIT						
SWITCH UNIT						
TONE COLOR UNIT						
CONTROL UNIT						
MIC AMP UNIT						
REVERBE AMP UNIT						
REVERBE UNIT						



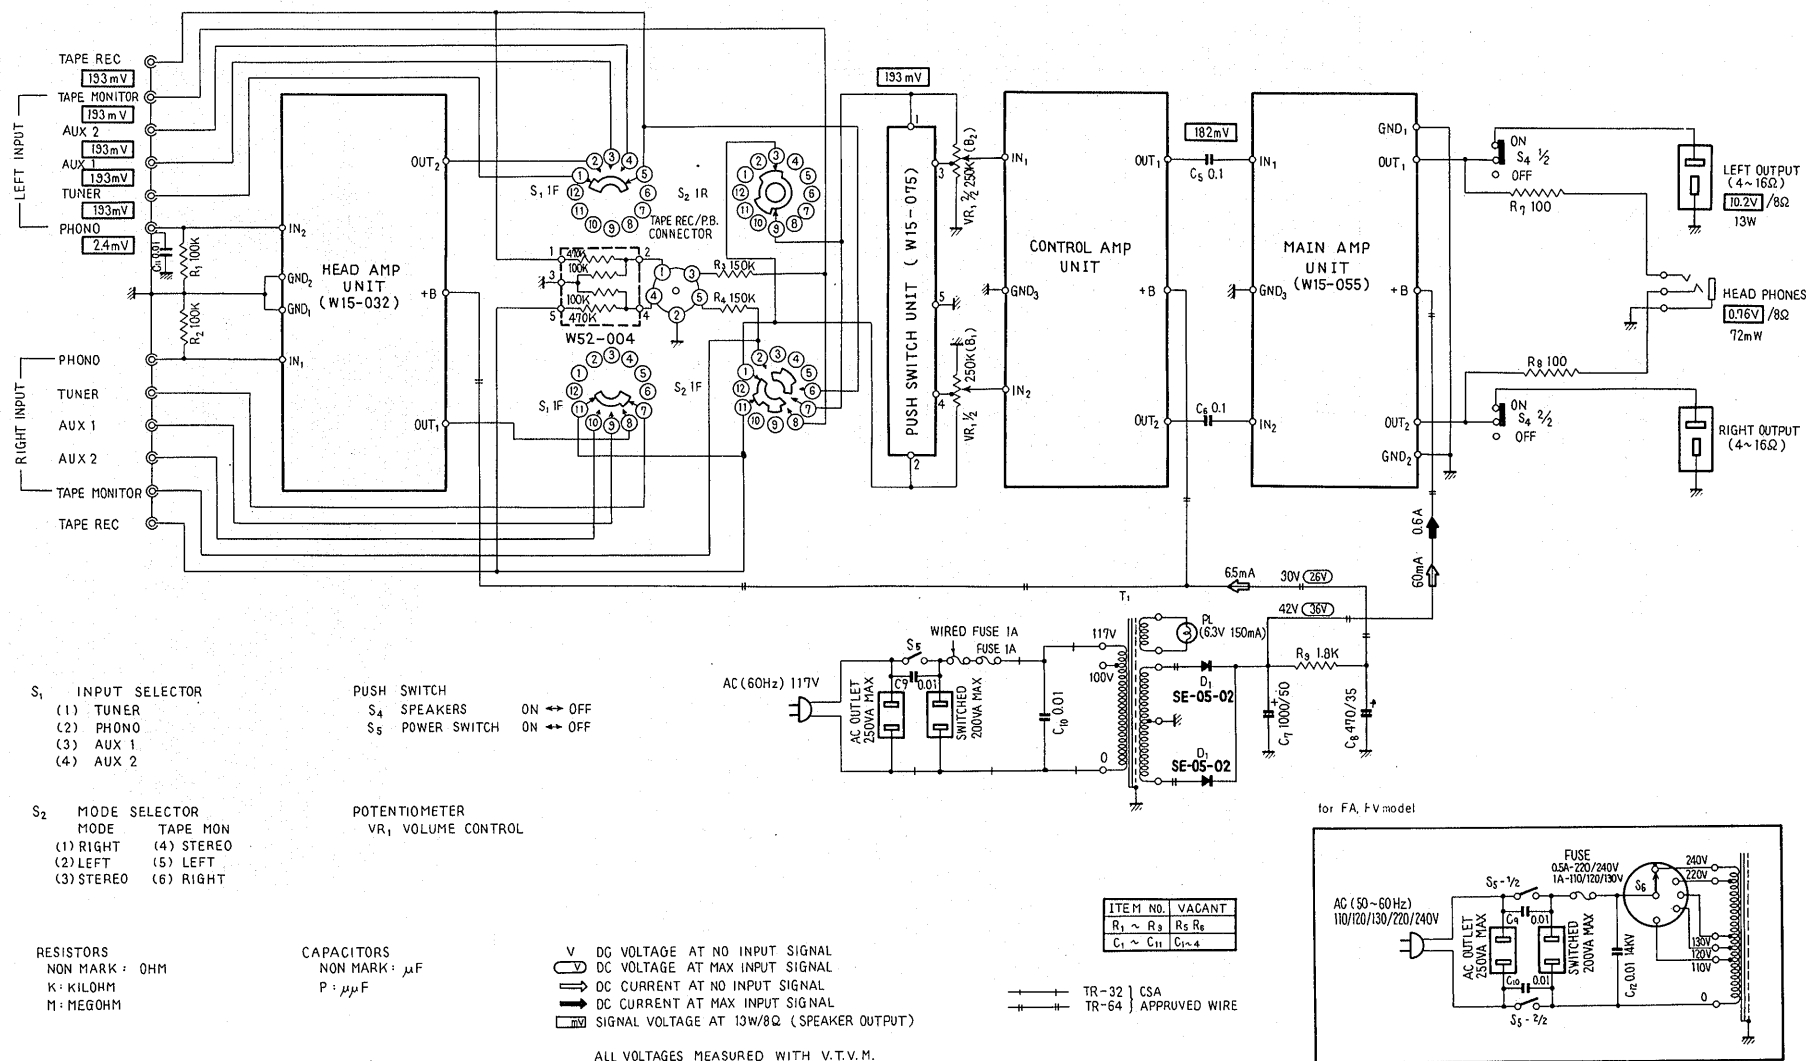

ITEM NO.	VACANT
R ₁ ~ R ₄	R ₅ R ₆
C ₁ ~ C ₁₁	C ₁₂ ~ C ₁₄

TR-32 | CSA
TR-64 | APPROVED WIRE

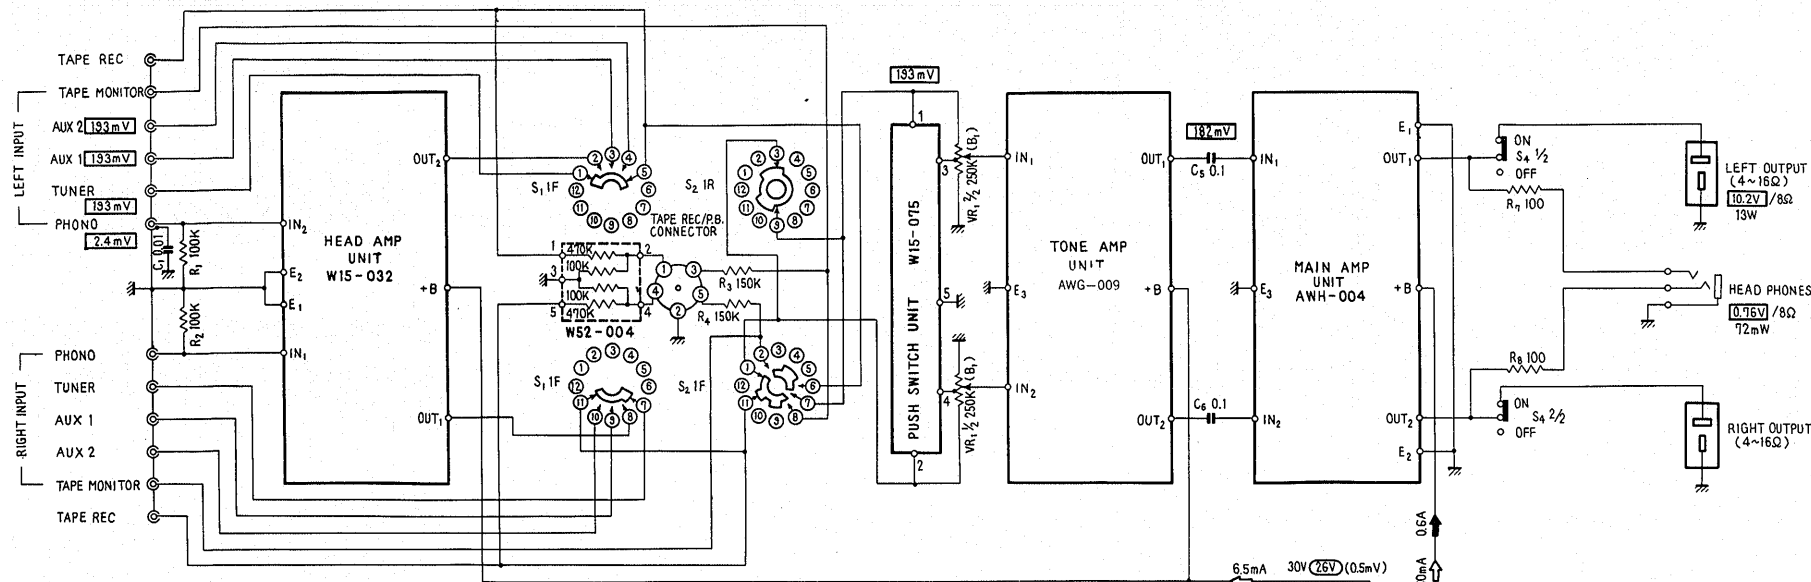

S₁ : INPUT SELECTOR

- (1) TUNER
- (2) PHONO
- (3) AUX 1
- (4) AUX 2

S₂ : MODE SELECTOR

- | | |
|------------|------------|
| MODE | TAPE MON |
| (1) RIGHT | (4) STEREO |
| (2) LEFT | (5) LEFT |
| (3) STEREO | (6) RIGHT |

RESISTORS

NON MARK : OHM
K : KILOHM

PUSH SWITCHES

- S₄ SPEAKERS ON ↔ OFF
- S₅ POWER SWITCH ON ↔ OFF
- S₆ LINE VOLTAGE SELECTOR

POTENTIOMETER

VR₁ VOLUME CONTROL

CAPACITORS


NON MARK : μF
P : μμF

- V : DC VOLTAGE AT NO INPUT SIGNAL
- (V) : DC VOLTAGE AT MAX INPUT SIGNAL
- (V) : RIPPLE VOLTAGE
- : DC CURRENT AT NO INPUT SIGNAL
- : DC CURRENT AT MAX INPUT SIGNAL
- : SIGNAL VOLTAGE AT 18W/8Ω (SPEAKER OUTPUT)


ALL VOLTAGES MEASURED WITH V.T.V.M.

ITEM NO.	VACANT
R ₁ ~ R ₉	R ₅ R ₆
C ₁ ~ C ₁₂	C ₁₀ ~ C ₁₂


HEAD AMP UNIT

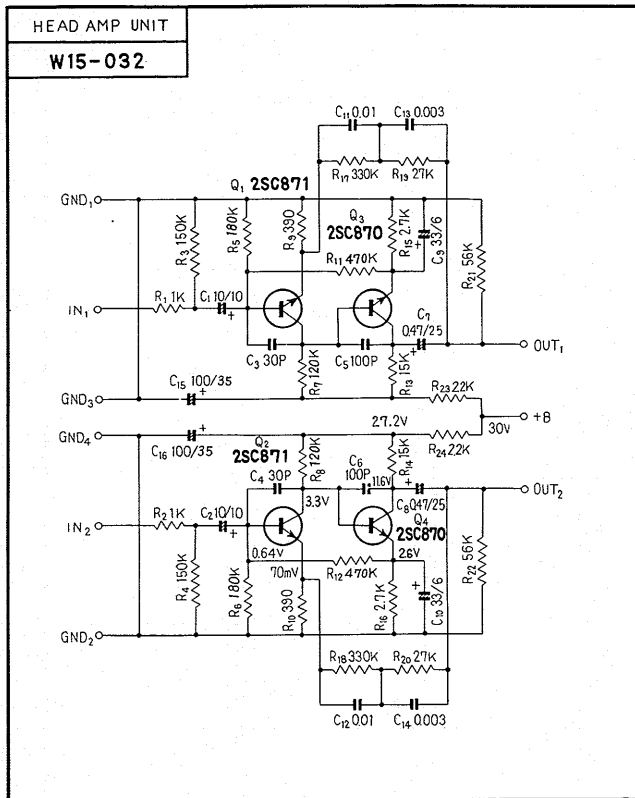


CONTROL AMP UNIT

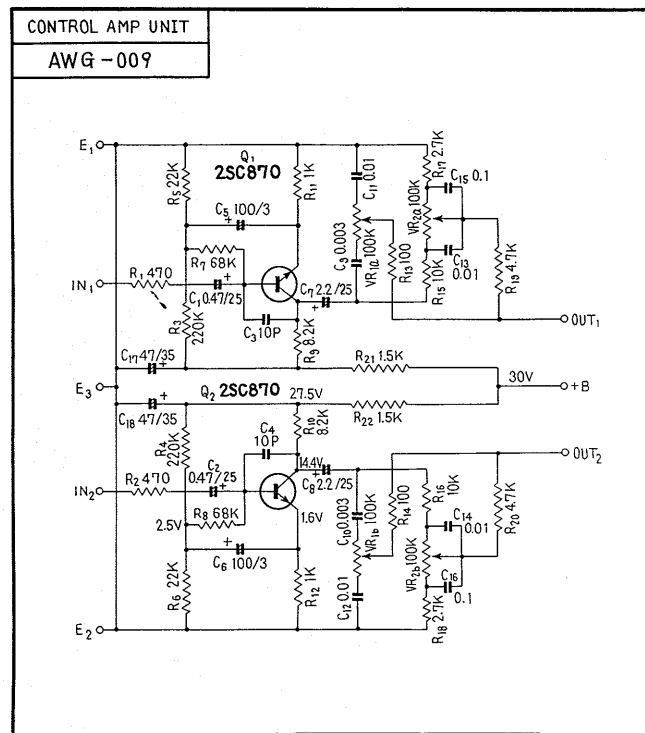

PUSH SWITCH UNIT

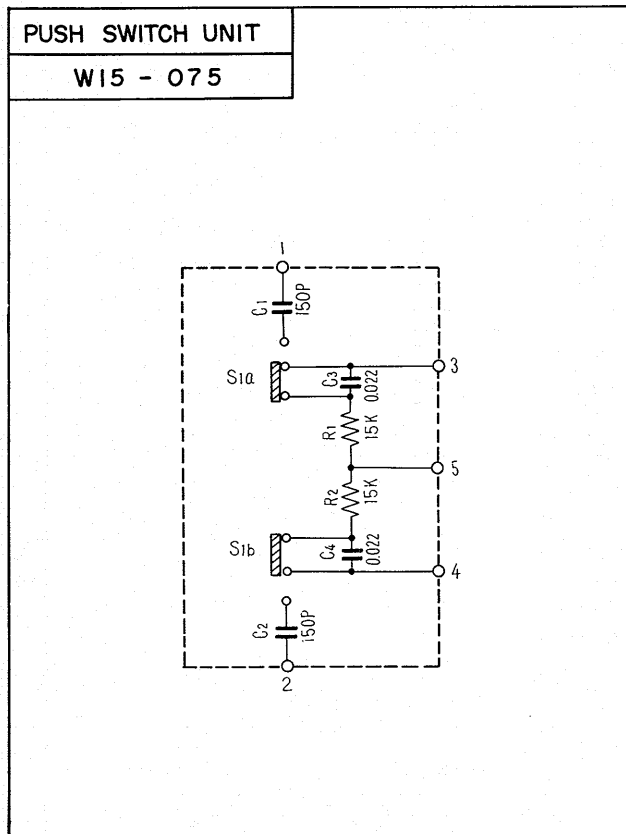

MAIN AMP UNIT

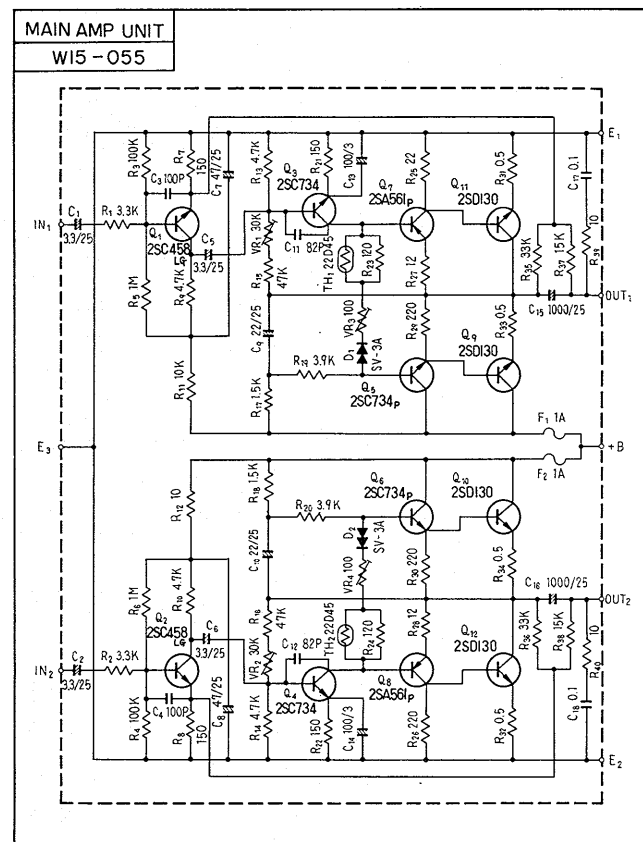

MAIN AMP UNIT for NB model

MAIN AMP UNIT

AWH-004

