
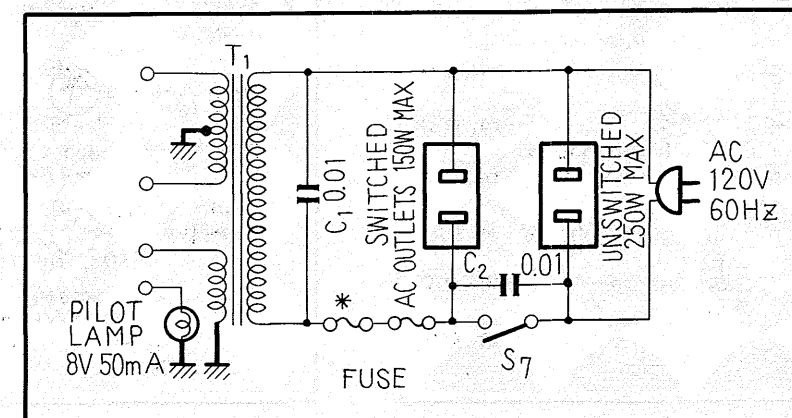
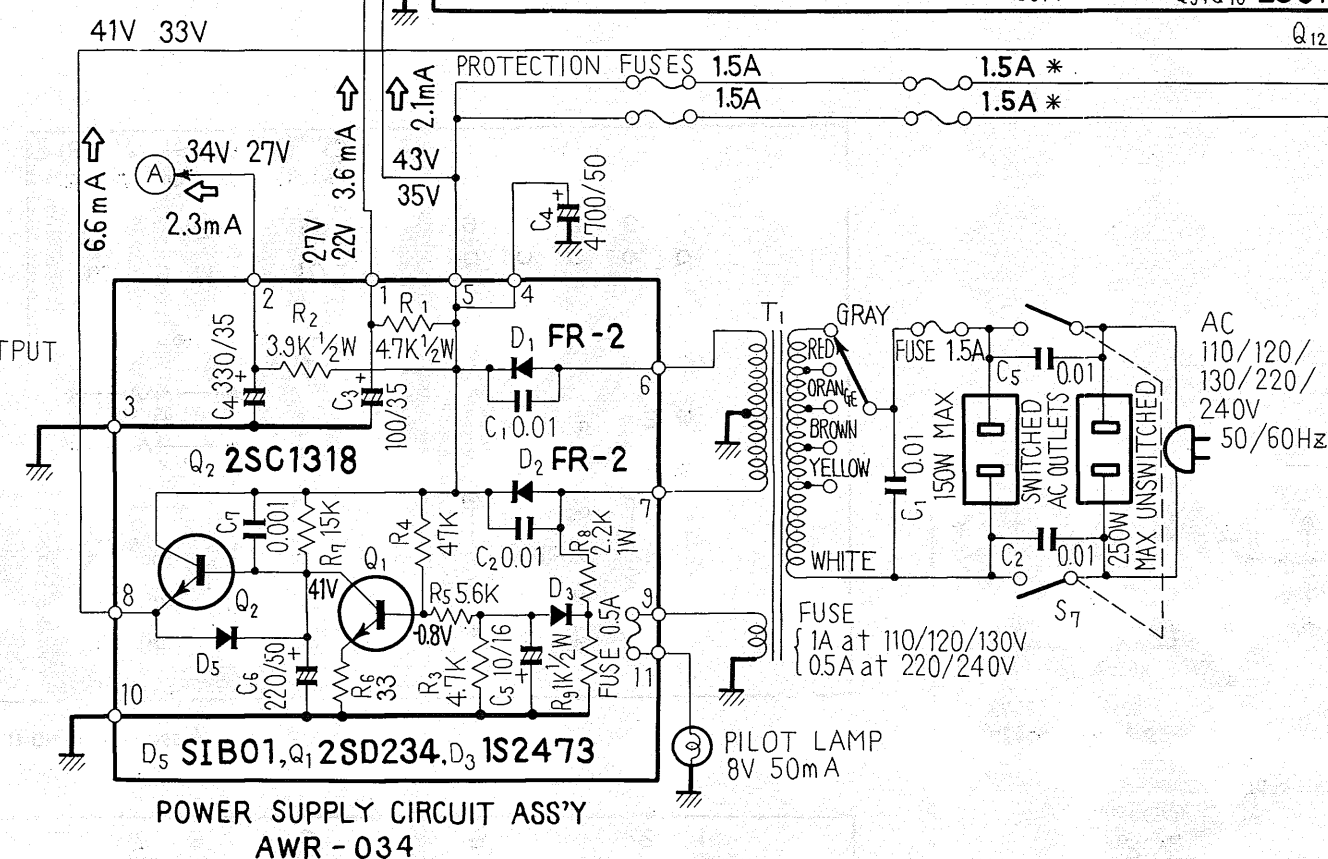
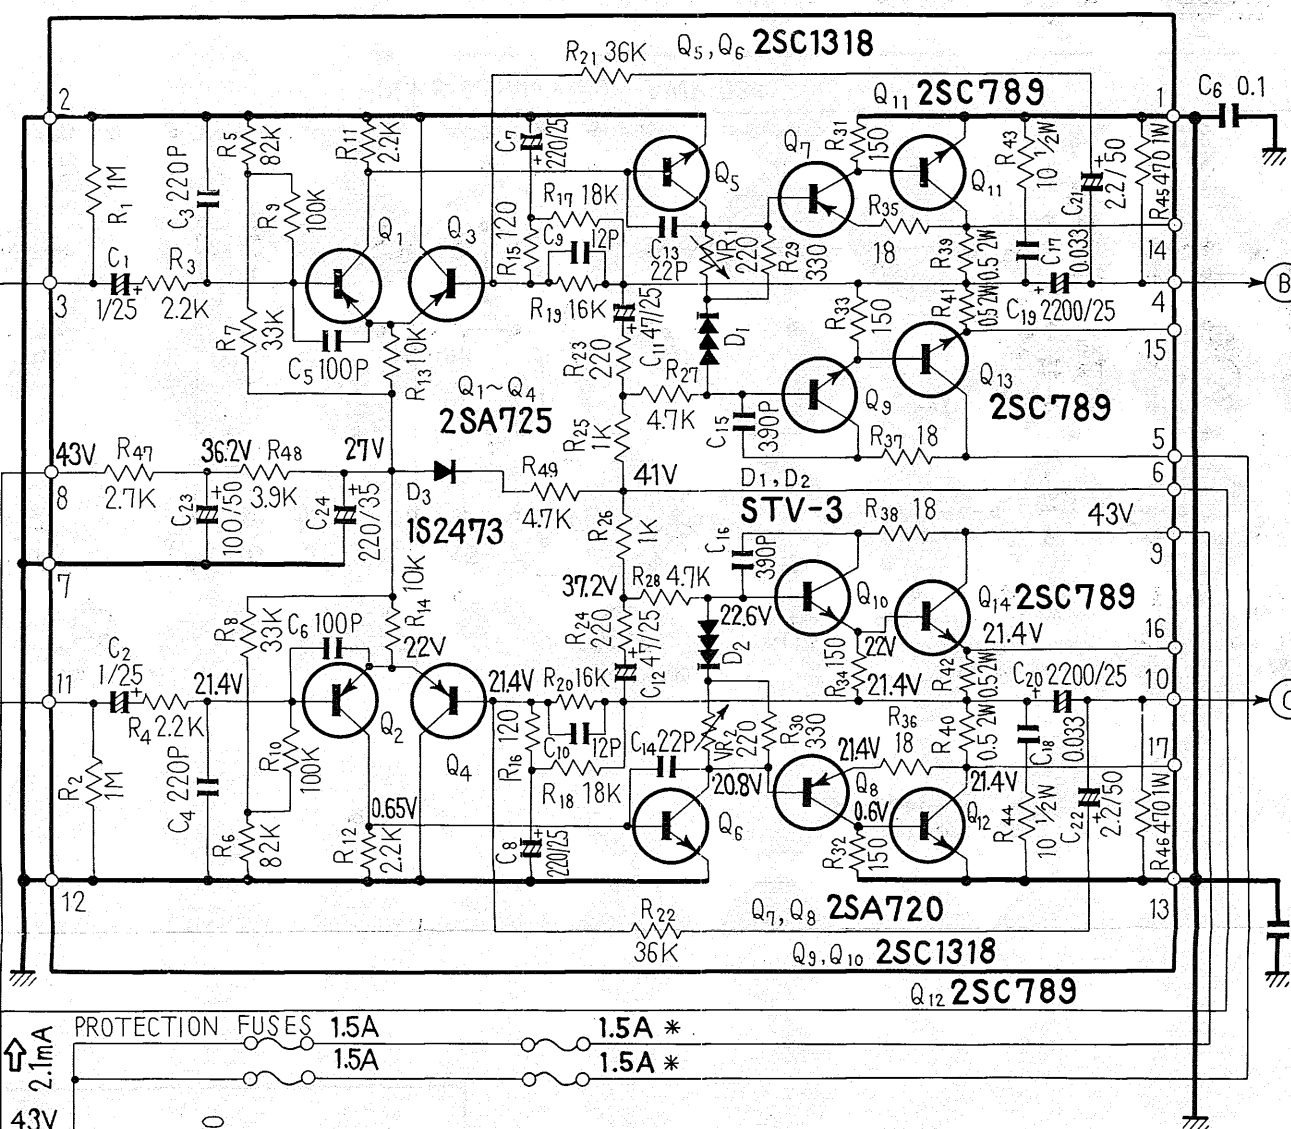



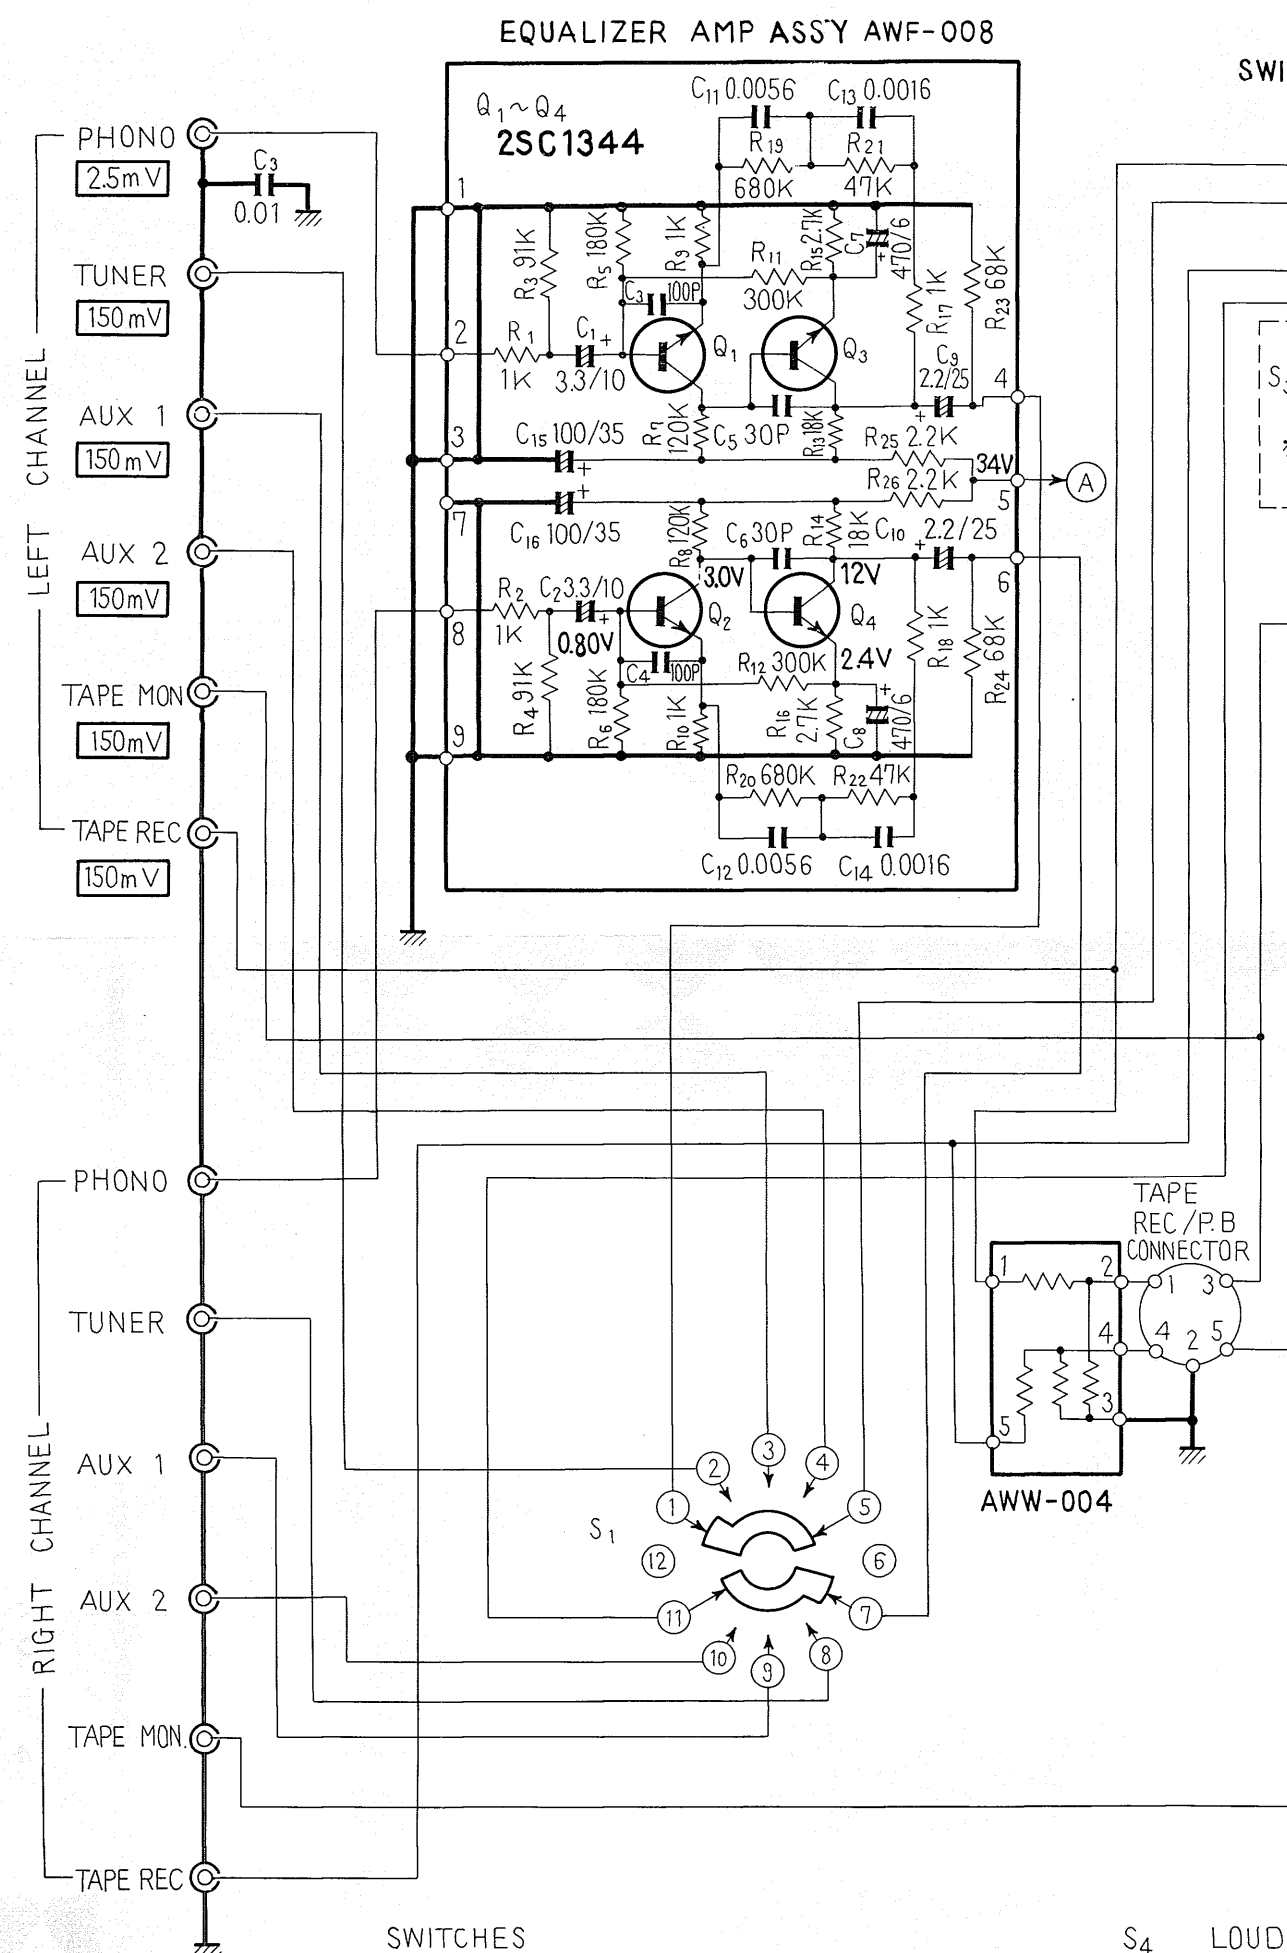

NOTES

V : DC VOLTAGE AT NO INPUT SIGNAL

(V) : DC VOLTAGE AT 16W/8Ω OUTPUT POWER

← A : DC CURRENT AT NO INPUT SIGNAL

V : SIGNAL VOLTAGE NECESSARY FOR
OBTAINING 16W/8Ω OUTPUT POWER (1kHz)

* Asterisked fuses are attached only to CSA approved version.

CAPACITORS
IN μ F UNLESS OTHERWISE NOTED P=pF

RESISTORS
IN Ω , $\frac{1}{4}W$, $\pm 5\%$ TOLERANCE UNLESS
OTHERWISE NOTED K=K Ω , M=M Ω

SWITCHES

- S₁ FUNCTION (PHONO position)
 - (1) PHONO
 - (2) TUNER
 - (3) AUX 1
 - (4) AUX 2
- S₂ MODE (STEREO position)
 - (1) STEREO
 - (2) MONO
- S₃ TAPE MONITOR (OFF position)
 - (1) OFF
 - (2) ON

S₄ LOUDNESS (OFF position)
(1) OFF
(2) ON

S₅ SPEAKER A (ON position)
(1) OFF
(2) ON

S₆ SPEAKER B (ON position)
(1) OFF
(2) ON

S₇ POWER (OFF position)
(1) OFF
(2) ON