


Model SX-770 / FVW

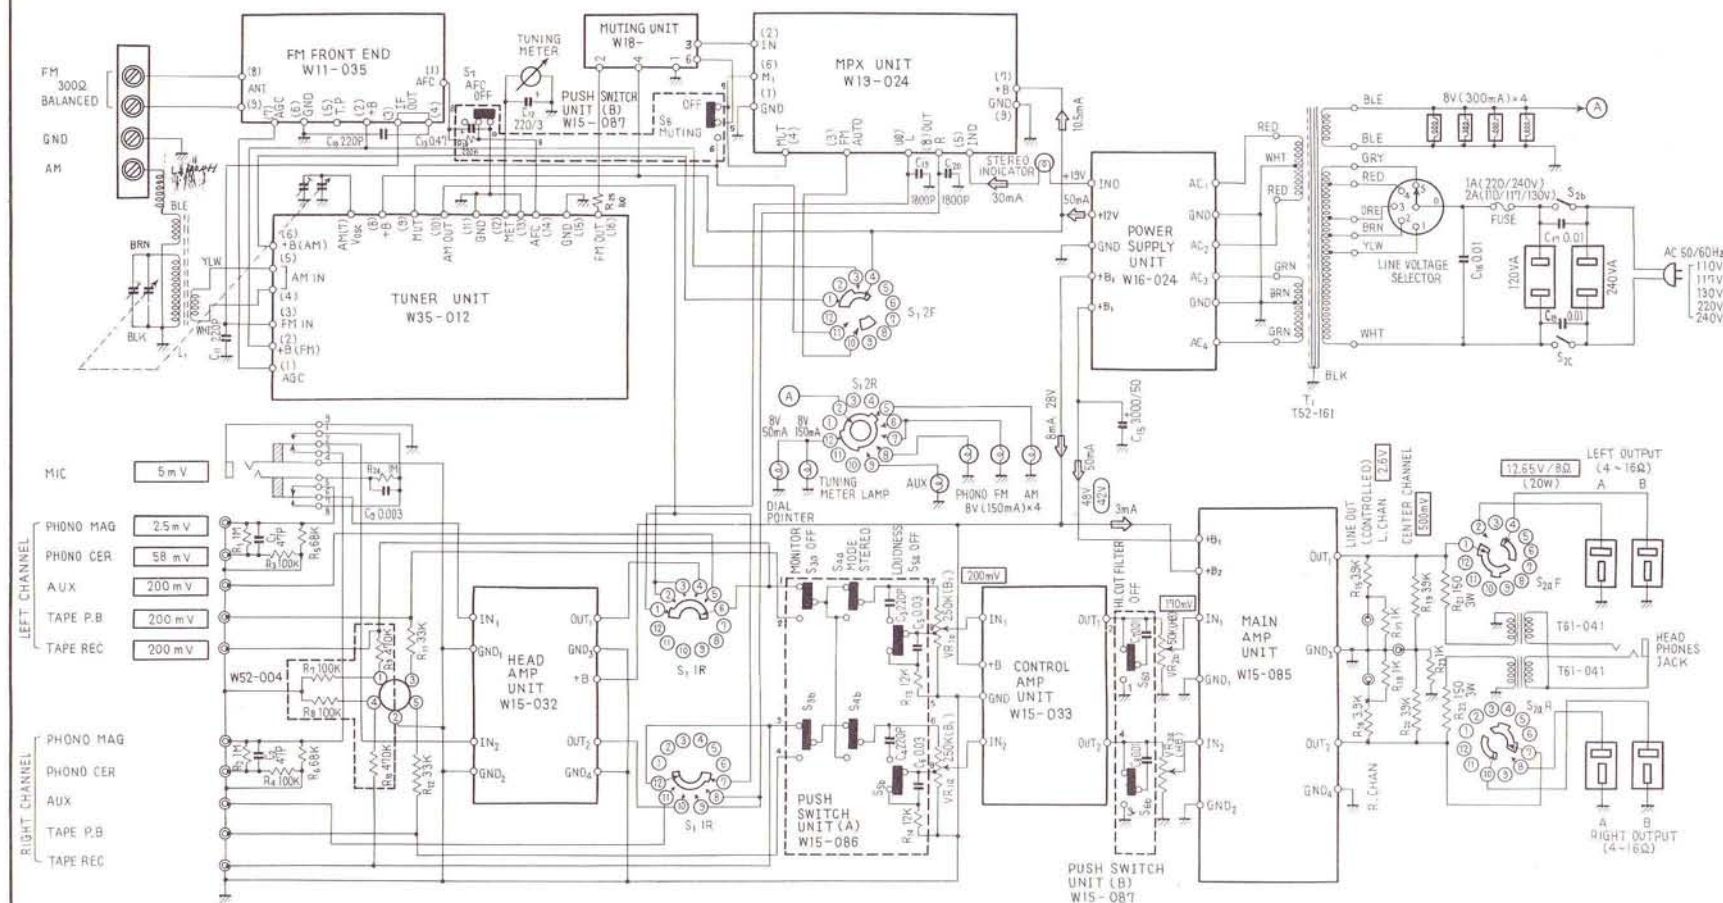

S₁ INPUT SELECTOR

1. AM
2. FM
3. FM AUTO
4. PHONO & MIC
5. AUX

S₂ OUTPUT SELECTOR

1. POWER OFF
2. A
3. SP. OFF (PHONES)
4. B
5. A+B

S₃ TAPE MONITOR

- S₄ MODE STEREO ↔ MONO
 S₅ LOUDNESS OFF ↔ ON
 S₆ HIGH CUT FILTER OFF ↔ ON
 S₇ AFC OFF ↔ ON
 S₈ MUTING OFF ↔ ON

POTENTIOMETERS

- VR₁ MAIN VOLUME CONTRL.
 VR₂ BALANCE VOLUME CONTROL

RESISTORS

- NON MARKED ΩHm K: KILOHm
 M: MEGOHm W: WATT

CAPACITORS

- 10% TOLERANCE UNLESS NOTED
 P: μF

⏏ SIGNAL VOLTAGE AT 70W/8Ω

- (SPEAKER OUTPUT)
 ALL VOLTAGE MEASURED WITH VT.V.M.


- ⏏ NO INPUT SIGNAL DC CURRENT
 V NO INPUT SIGNAL DC VOLTAGE
 ⏏ MAX INPUT SIGNAL DC VOLTAGE (ONE CHANNEL)

SECTION	ITEM NO.	VACANT
1	C	R ₁ ~ R ₂₈ R ₂₉ ~
2	R	C ₁ ~ C ₂₀ C ₂₁ ~

FM FRONTEND W11-035

FM FRONT END


W11-035

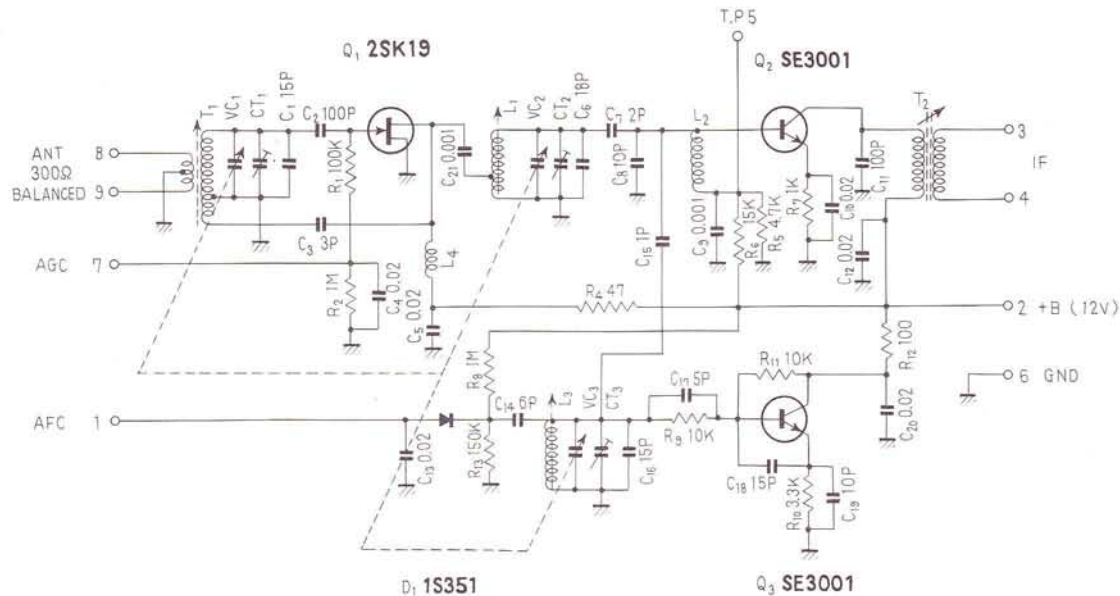

TUNER UNIT W35-012

TUNER UNIT


W35-012

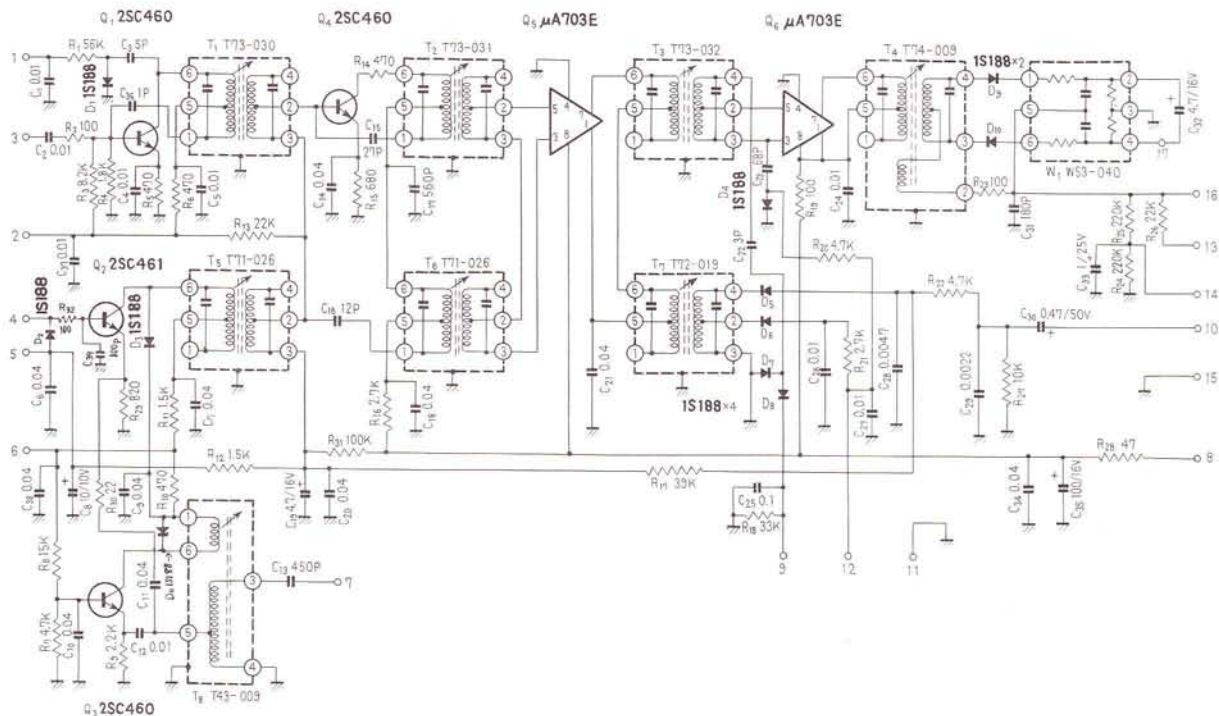

MPX UNIT W13-024

MPX UNIT


W13-024

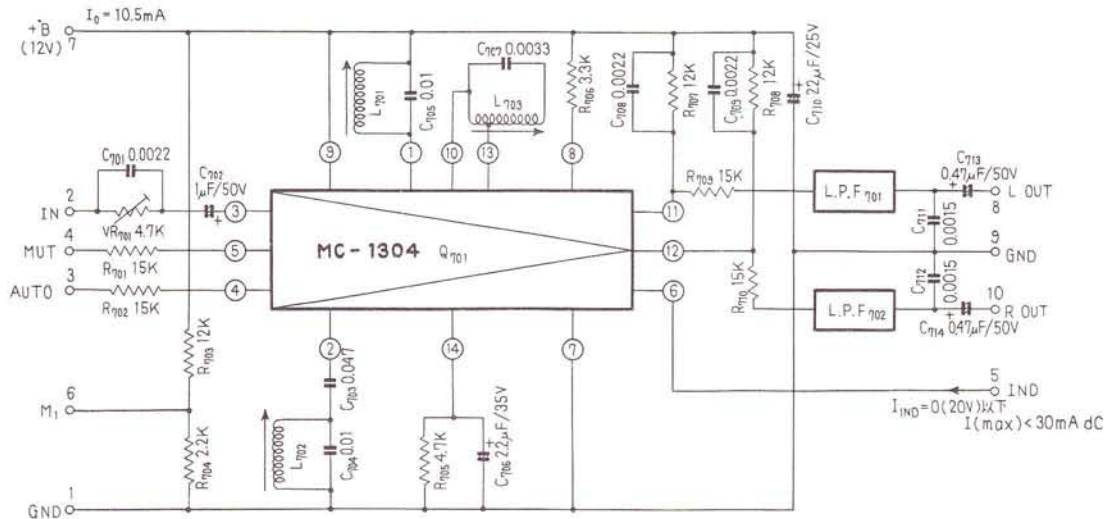

MUTING UNIT W18-011 OR W18-026


MUTING UNIT

W18-011

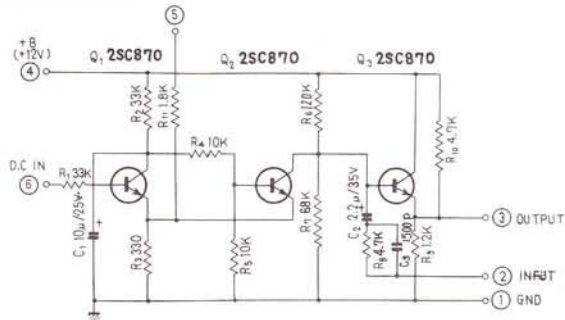

MUTING UNIT


W18-026

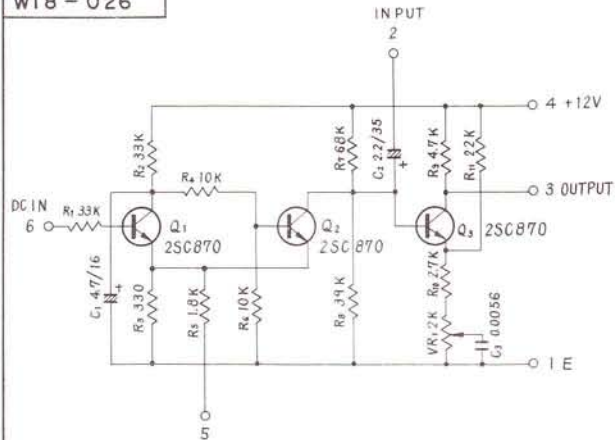

HEAD AMP UNIT W15-032

HEAD AMP UNIT

W15-032

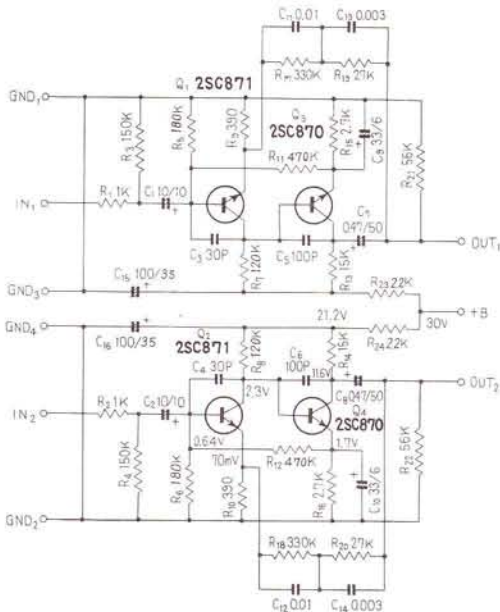


CONTROL AMP UNIT

W15-033

CONTROL AMP UNIT

W15-033

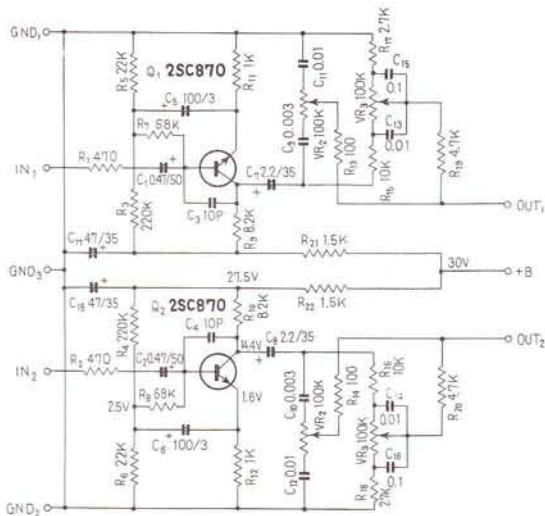


VR₂ TREBLE CONTROL
VR₃ BASS CONTROL

MAIN AMP UNIT W15-085

MAIN AMP UNIT

W15-085

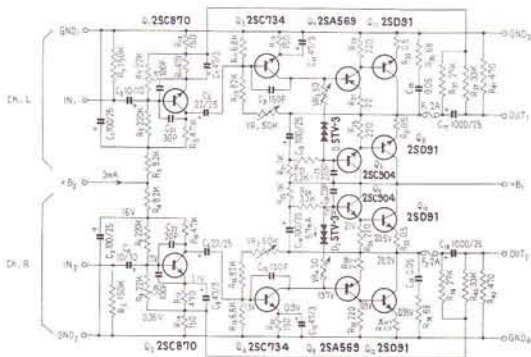

POWER SUPPLY UNIT

W16-024

POWER SUPPLY UNIT

W16-024

