



RCA Victor 7-BX-8 Series

Chassis No. RC-1162

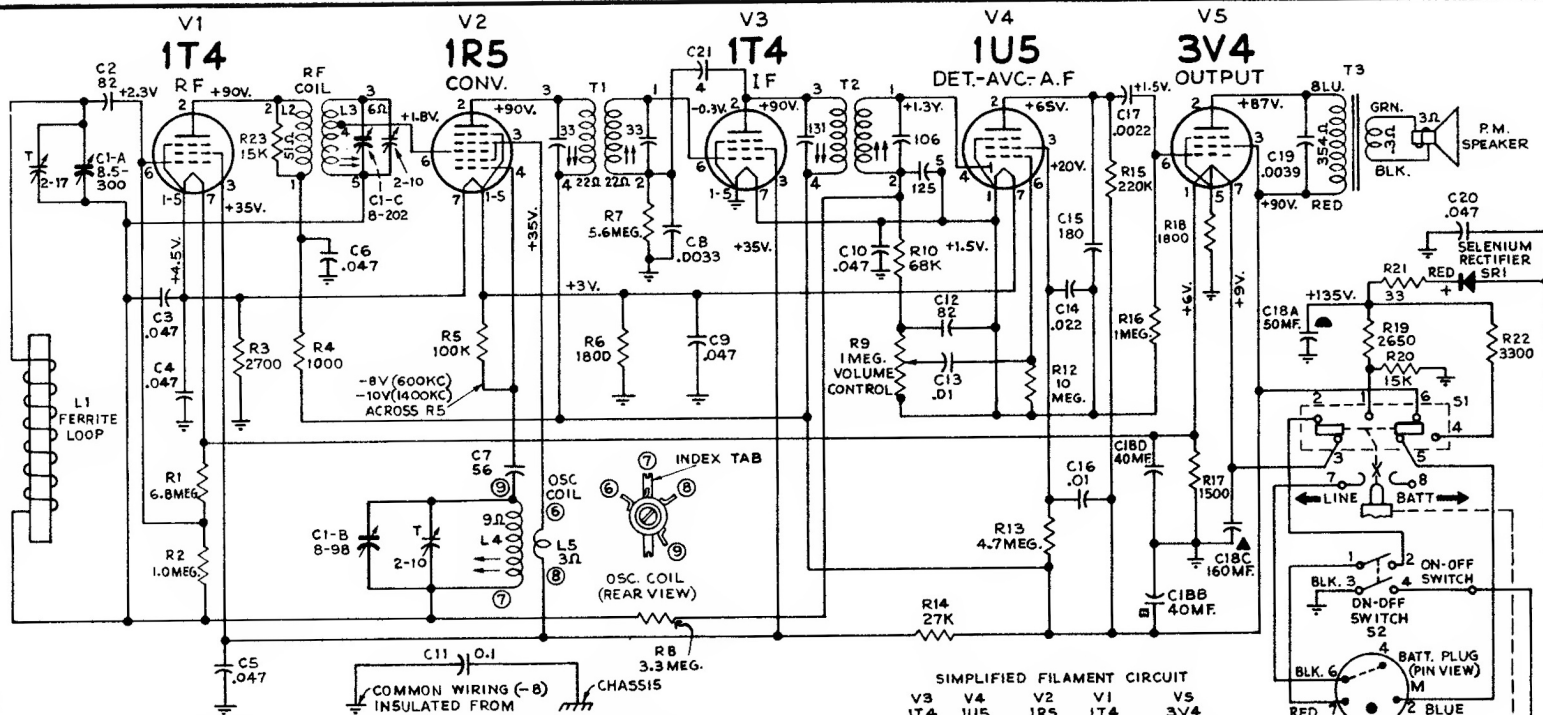


K=1000
ALL CAPACITOR VALUES LESS THAN 1.0
ARE IN MF. & ABOVE 1.0 ARE IN MMF.
EXCEPT THOSE INDICATED.

Do not remove any tubes from the chassis with the set
operating and the plug connected to the power line.

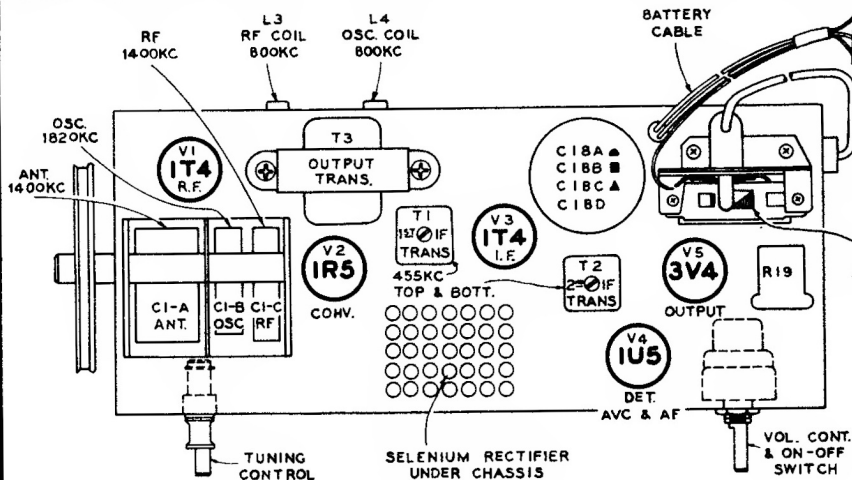


Tube and Trimmer Locations

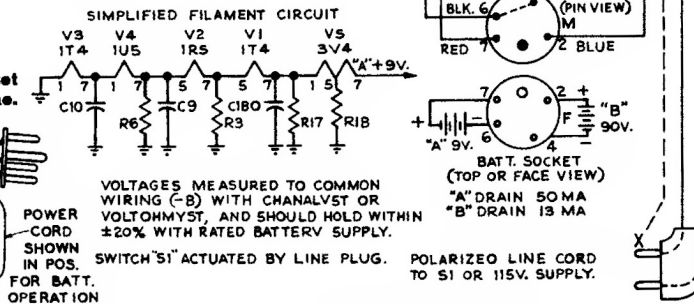


VOLTAGES MEASURED TO COMMON
WIRING (-B) WITH CHANALYST OR
VOLTOHMIST, AND SHOULD HOLD WITHIN
±20% WITH RATED BATTERY SUPPLY.

SWITCH "S1" ACTUATED BY LINE PLUG.
POLARIZED LINE CORD
TO S1 OR 115V. SUPPLY.

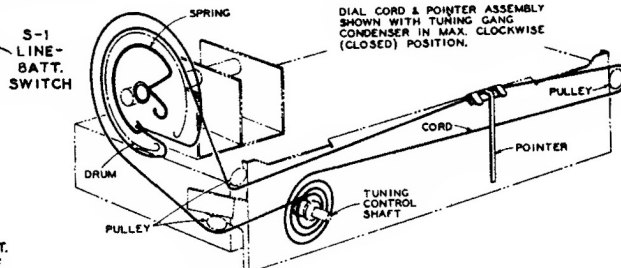

Dial-Indicator and Drive Mechanism

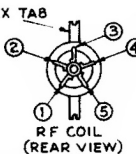

TUBE CURRENTS (MA)

BATTERY OPERATION

	PLATE	5 GRID
V1	.52	.18
V2	.65	1.2
V3	1.07	.49
V4	.08	.013
V5	5.8	1.35

CURRENTS SLIGHTLY HIGHER
ON AC OPERATION.