



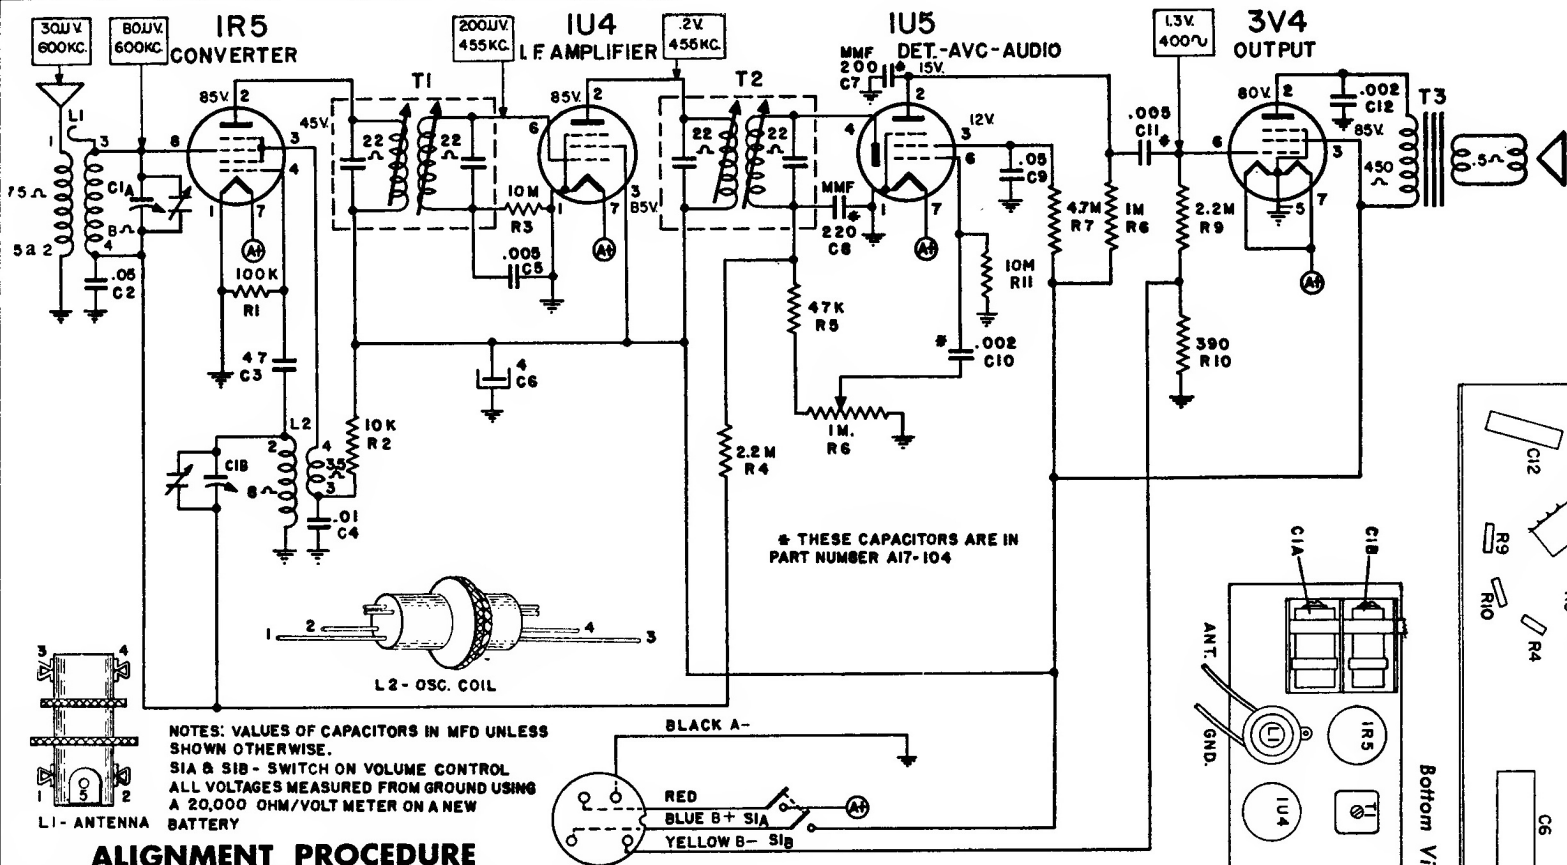

ALIGNMENT PROCEDURE

Output meter reading to indicate 0.05 watt across voice coil	0.4 v.
Generator ground lead connected	To chassis

Position of Tuner	Generator Freq.	Dummy Antenna	Generator Connection	Adjustments to be made (in order shown) for max. output	Function	Max. Microvolts Input to produce .05 w. output
Min. Cap.	455 kc	0.1 mfd.	Pin #6 of 1U4 I-F Amp.	T2 (top and bottom)	I.F.	5000
Min. Cap.	455 kc	0.1 mfd.	Pin #6 of 1R5 Conv.	T1 (top and bottom)	I.F.	100
Min. Cap.	1625 kc	0.1 mfd.	Stator ant. tuner	C1B	Osc.	
1400 kc	1400 kc	200 mmfd.	Antenna lead	C1A	Antenna coil	35

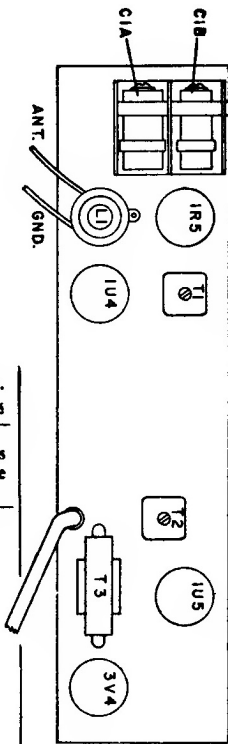

Bottom View—Pictorial.

