


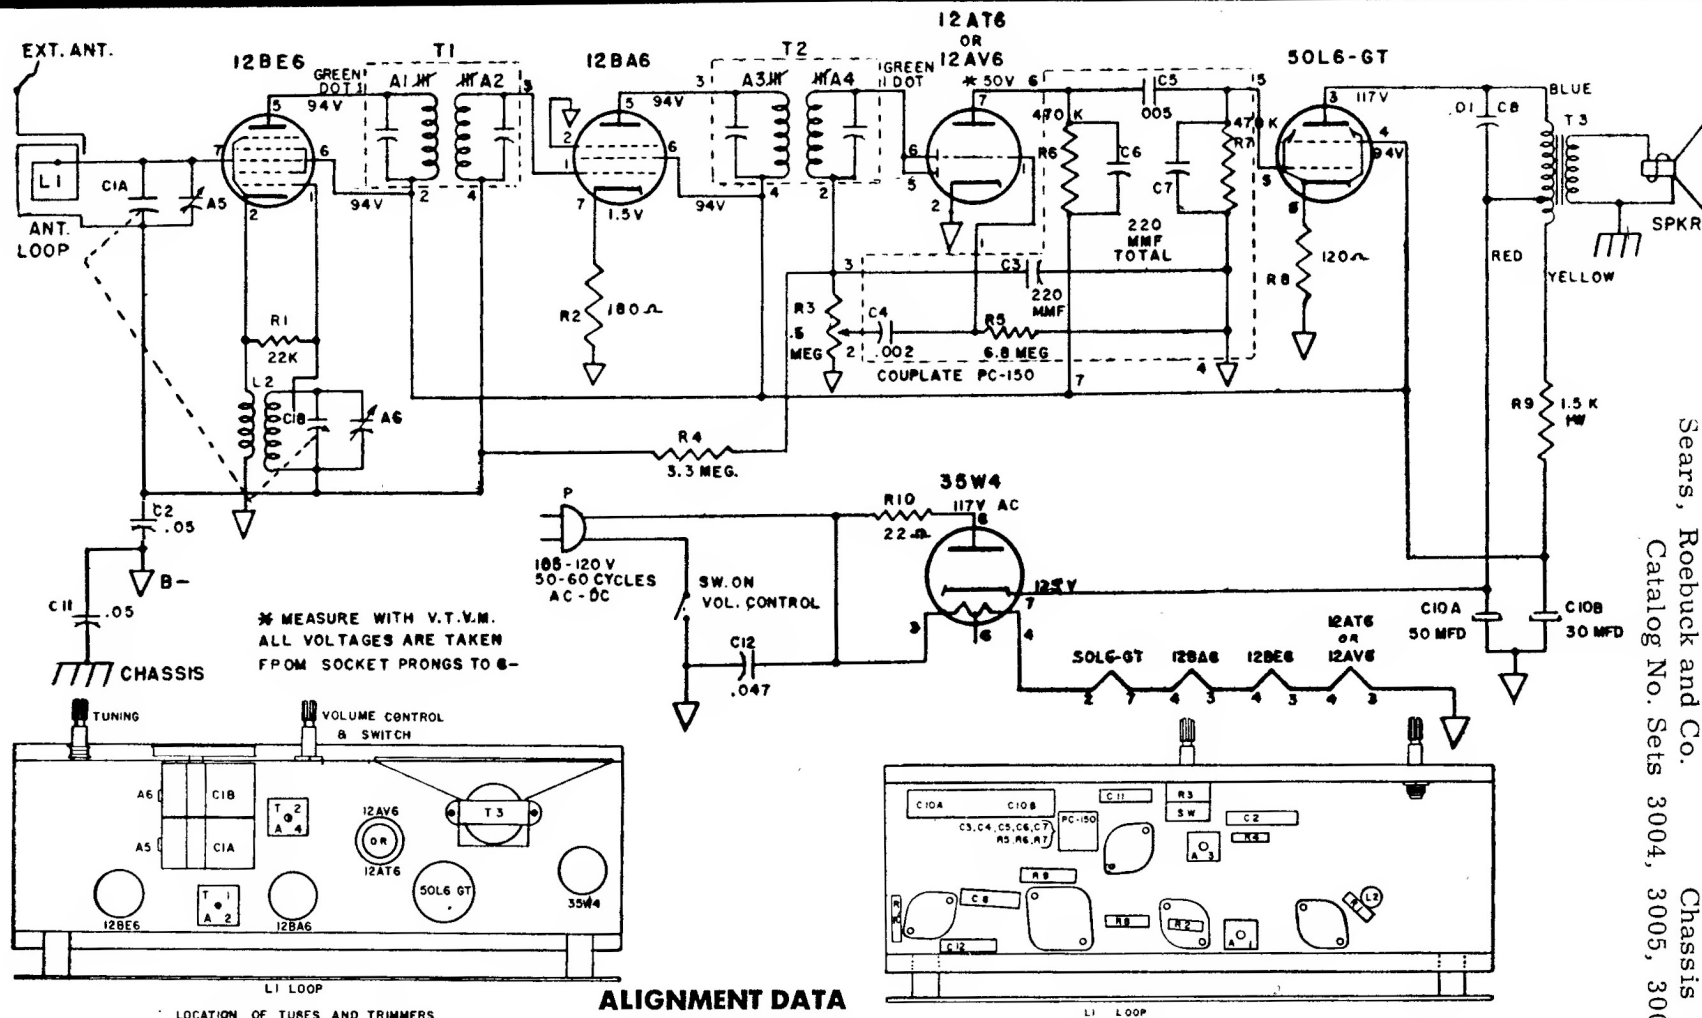

Position of Variable	Generator Frequency	Dummy Ant.
Open	455 Kc	.05 mfd
Open (Fully)	1640 Kc	50 mmf
1400 Kc	1400 Kc	50 mmf
1000 Kc	1000 Kc	50 mmf
600 Kc	600 Kc	50 mmf

ALIGNMENT DATA

Generator Connection (high)
Mixed Grid
*
*
*
*

Generator Connection (low)
Float Gnd.
Float Gnd.
Float Gnd.
Float Gnd.
Float Gnd.

Adjust Trimmers (In order shown)
A4, A3, A2, A1
A6
A5
Check Point
Check Point

Trimmer Function
I.F.
Osc.
Ant.

* A loop fashioned of several turns of wire radiating the signal into receiver's antenna or through the external antenna connection.