


VOLTAGE TABLE

1U-284W, 1U-284I, 1U-284NI, 1U-284NA, MODELS 284W, 2841, 284NI, 284NA,

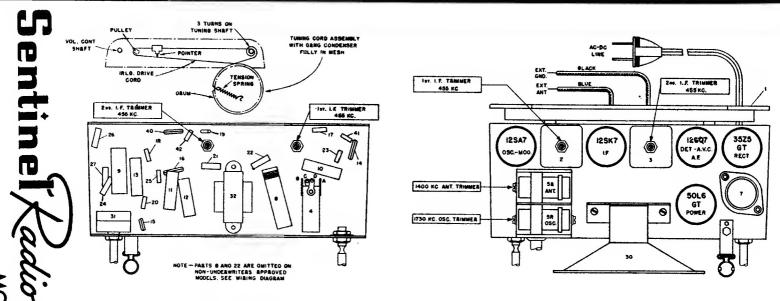

For alignment procedure read tabulations from left to right, and make the adjustment marked (1) first, (2) next, (3) third.

Before starting alignment:

- (a) Check tuning dial adjustment by tuning gang condenser until plates touch maximum capacity stop (completely in mesh) at which point the dial needle must be exactly even with the last line at the low frequency end of the dial calibration. If dial needle does not point exactly to last line move to correct position.
- (b) Use an accurately calibrated test oscillator with some type of output measuring device.
- (c) PLACE LOOP ANTENNA IN THE SAME POSITION IT WILL BE IN WHEN THE SET IS IN THE CABINET.

		TEST CSCILLATOR			
Steps	Set receiver dial to:	Adjust test escillator frespency tx:	Use dummy antenna la series with output of test escillator consisting af:	Attach output of test esciliator to:	Refor to parts layout diagram for location of trimmers mentioned below:
1	Any point where no interfering signal is received.	455 K. C.	.02 MFD. condenser	High side to rear stator plates of tun- ing condenser. Low side to frame of condenser through a .02 Mfd. blocking condenser.	Adjust each of the second I. F. transformer trimmers for maximum output— then adjust each of the first I. F. trimmers for maximum output.
2	Eractly 1730 K. C.	Erractly 1730 K., C.	.00025 MITD, condenser	Receiver blue antenna lead Receiver black ground lead	Adjust 1790 K. C. cedillator trimmer for maximum cutput,
3	Approx. 1400 K. C.	Exactly 1400 K. C.	.00025 MJFD. condenser	Receiver blue antenna lead Receiver black ground lead	While rocking gang condensar adjust 1400 K. C. antenna trimmer for maximum output.