

SONY 8FC-69W

X101 2SC629

X102 2SC629

X201 2SC403A


X202 2SC403A

X203 2SC403A

D101 IT26 D102 IT240

D201 IT26

D204 IT23 D202,203 IT26

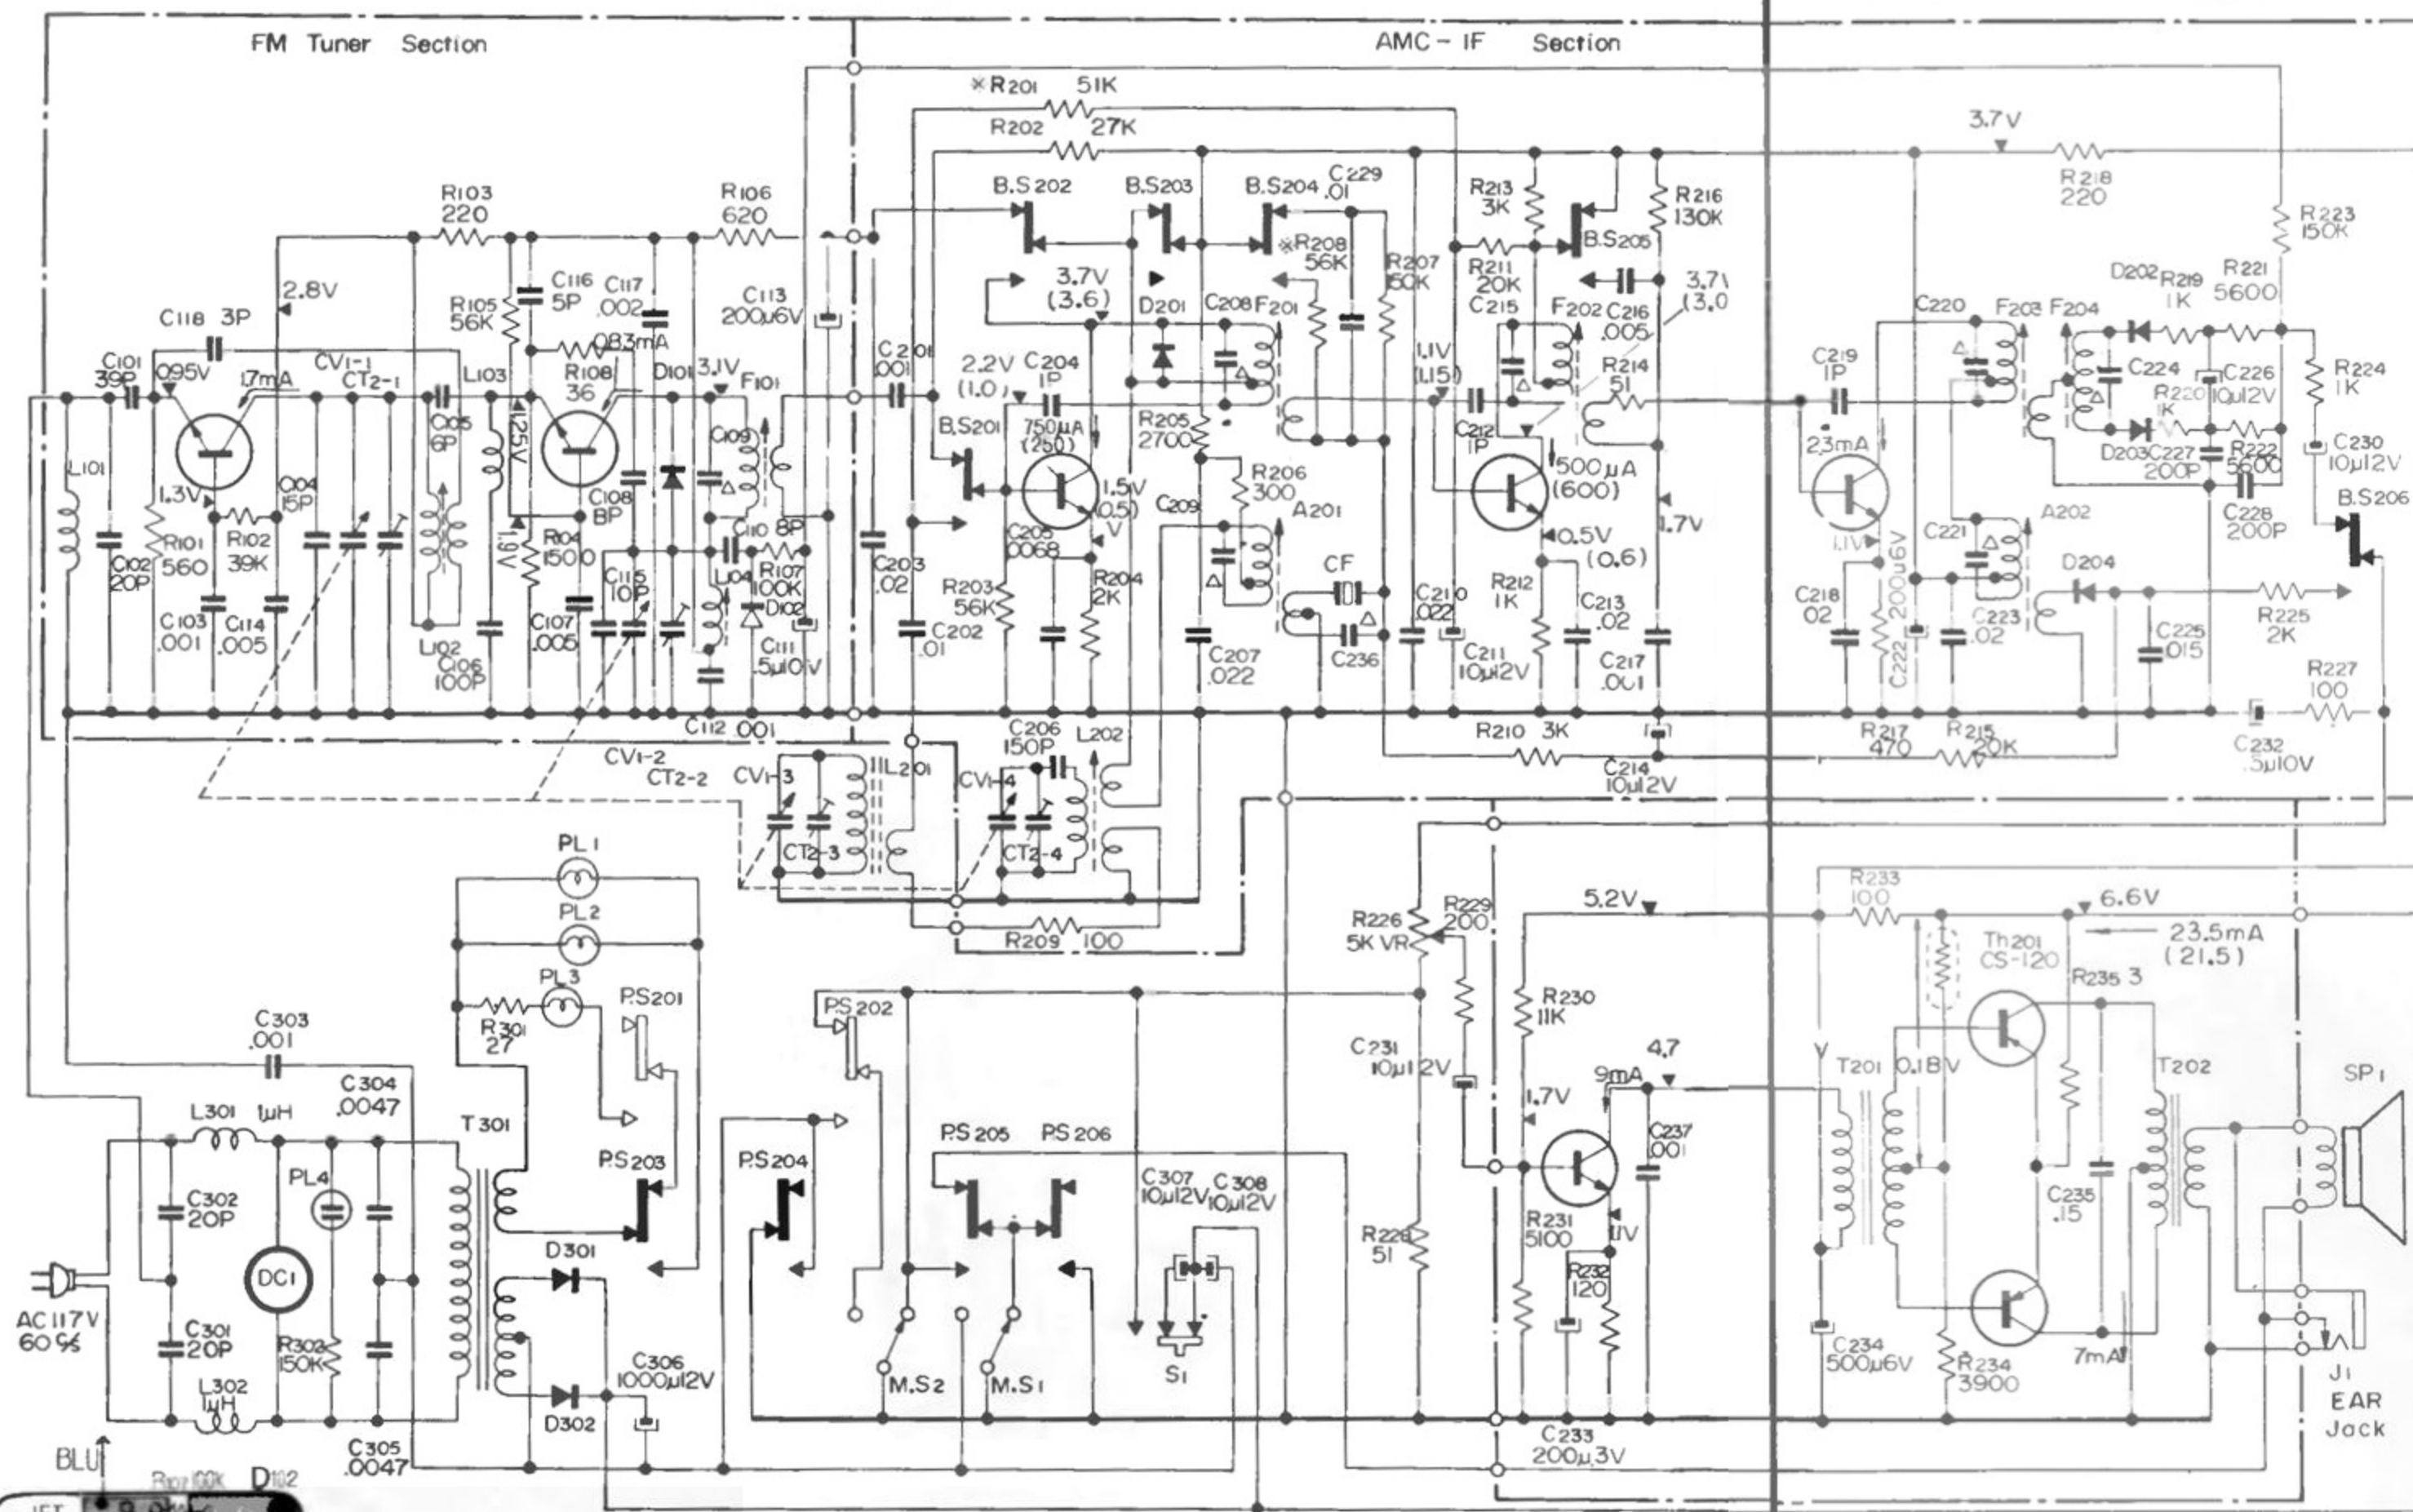

D301 SDIZ



D302 SDIZ

X204 2SC633

Mounting Diagram
FM Tuner Section (FMC)
— Conductor Side —

X101 2SC629
X102 2SC629

D102 IT-240

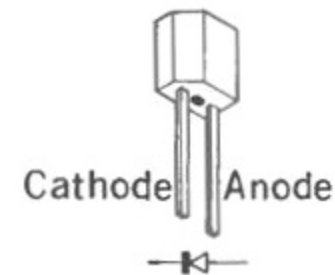
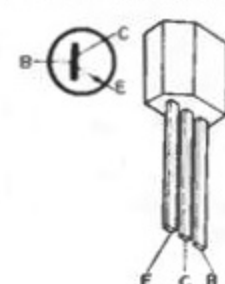


AF Section

X205, 206 2SB383

X201 2SC403
X202 2SC403
X203 2SC403
X204 2SC633


X205 2SB383
X206 2SB383

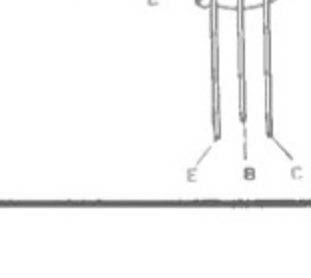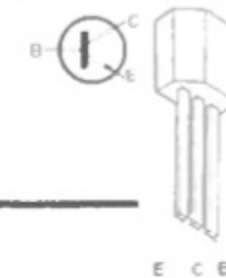

1. Δ Built in IFT.
2. Values in the Parentheses are for AM.
3. * : Resistance Value to be selected.
4. B.S.201-206 : Band Setting Switch.
5. FM Band Setting Switch shown is set to FM position.
6. P.S.201-202 : Automatic Switch.
7. P.S.203-206 : Manual Switch.

Intermediate Frequency: FM 10.7 Mc AM 455 Kc

Mounting Diagram
AMC-IF-AF Section

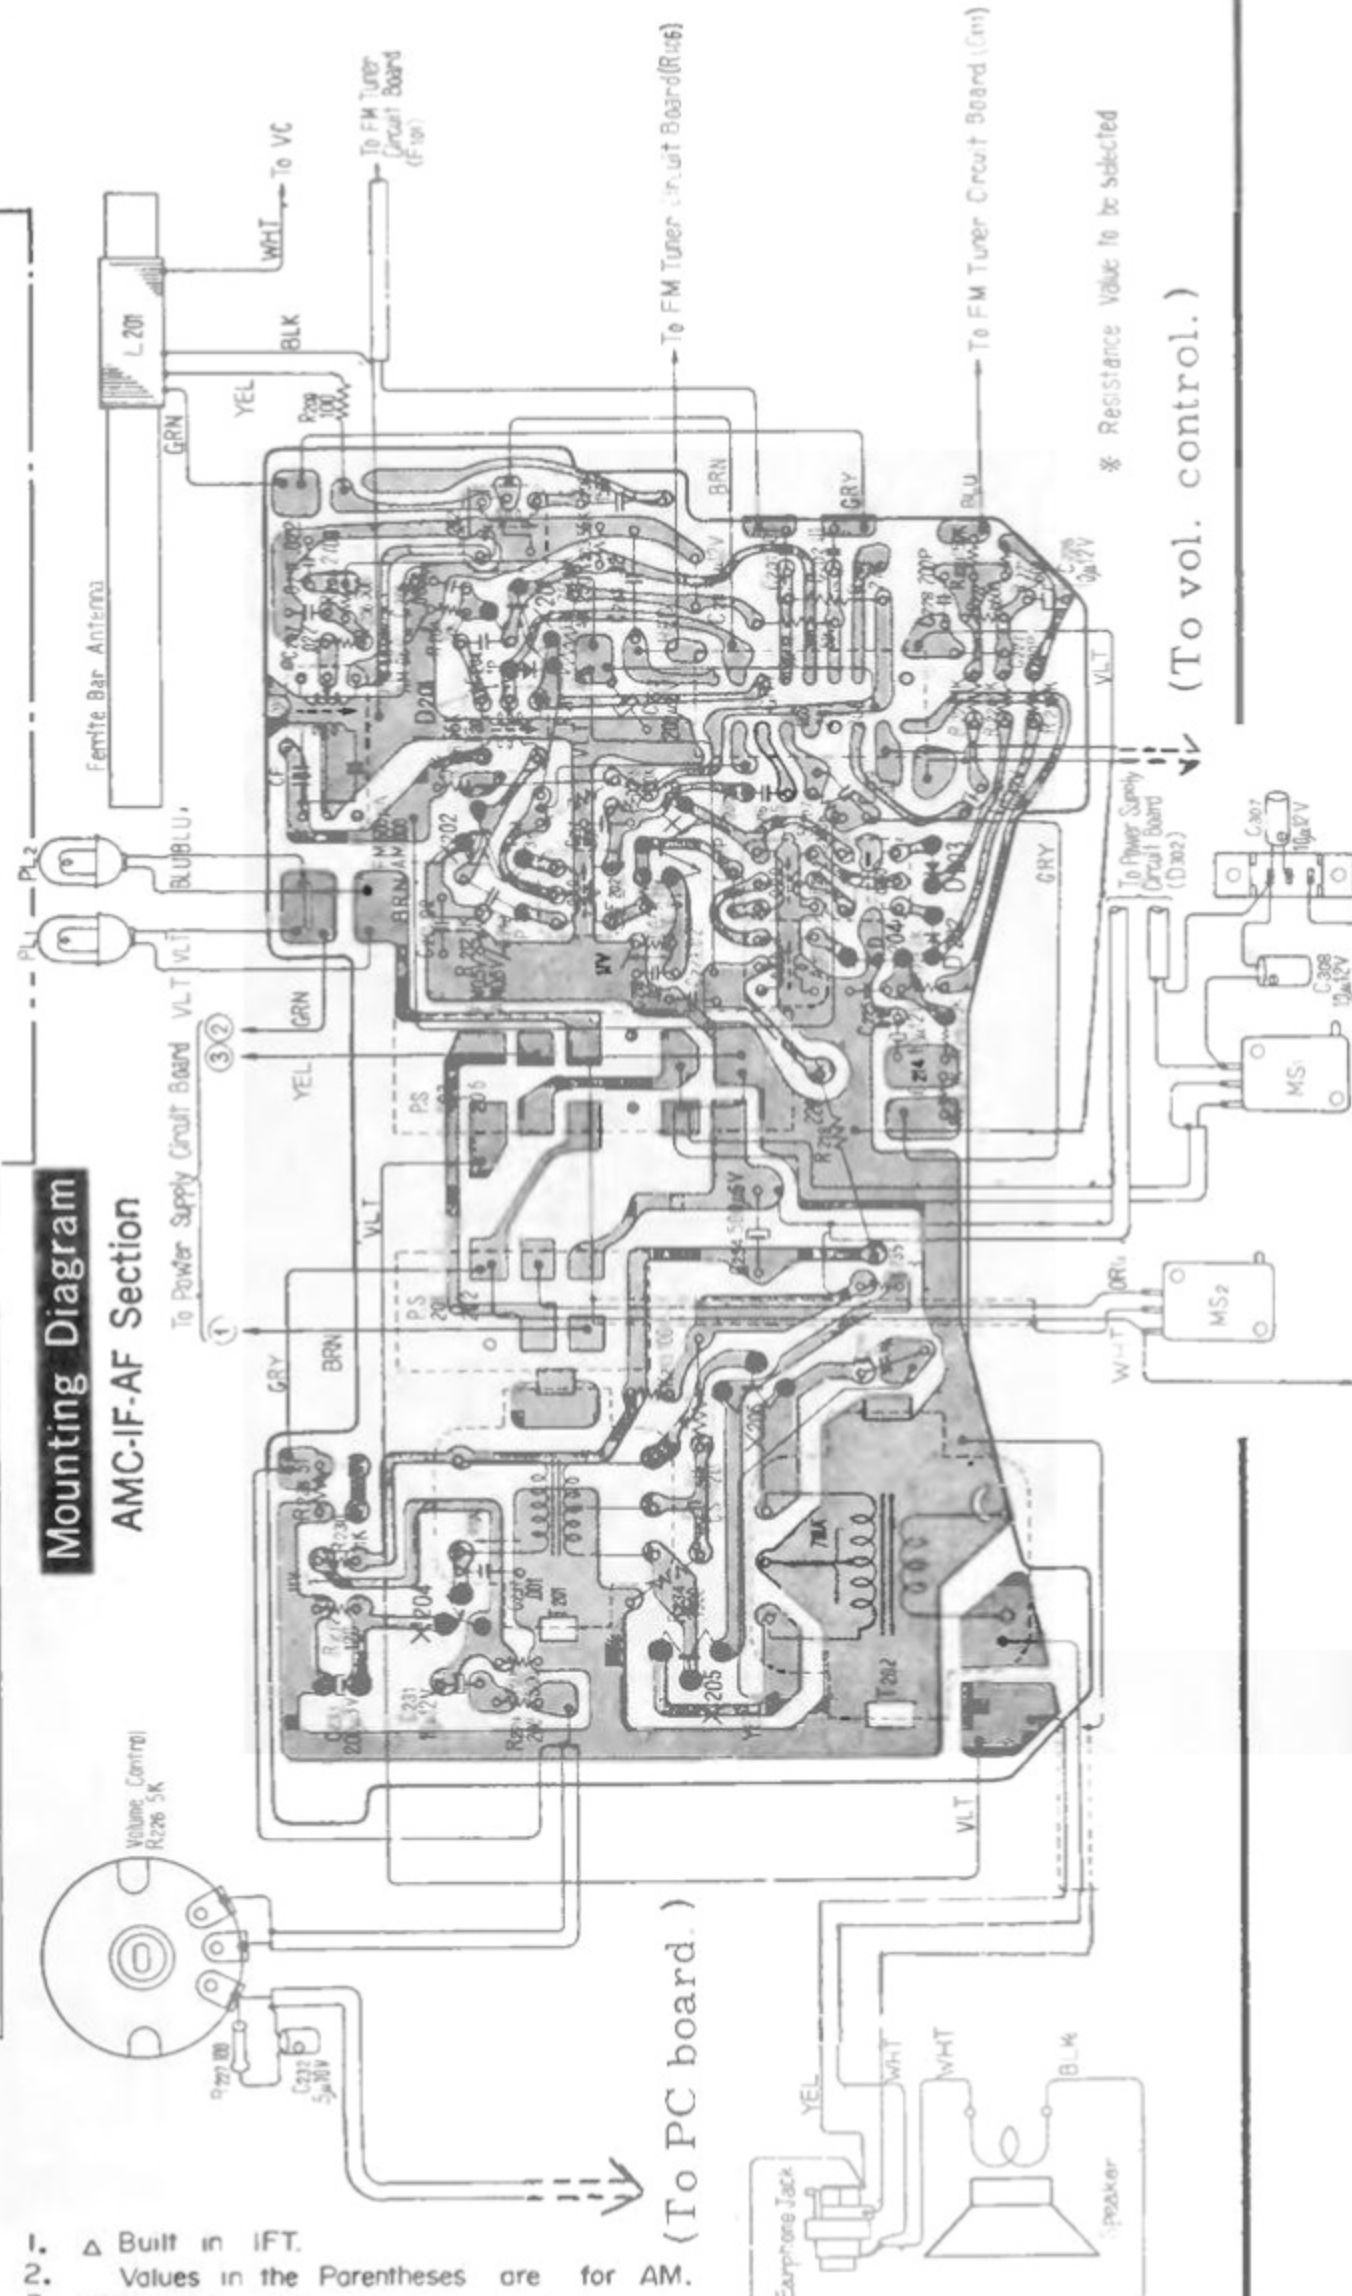

* Resistance Value to be selected
(To vol. control.)