



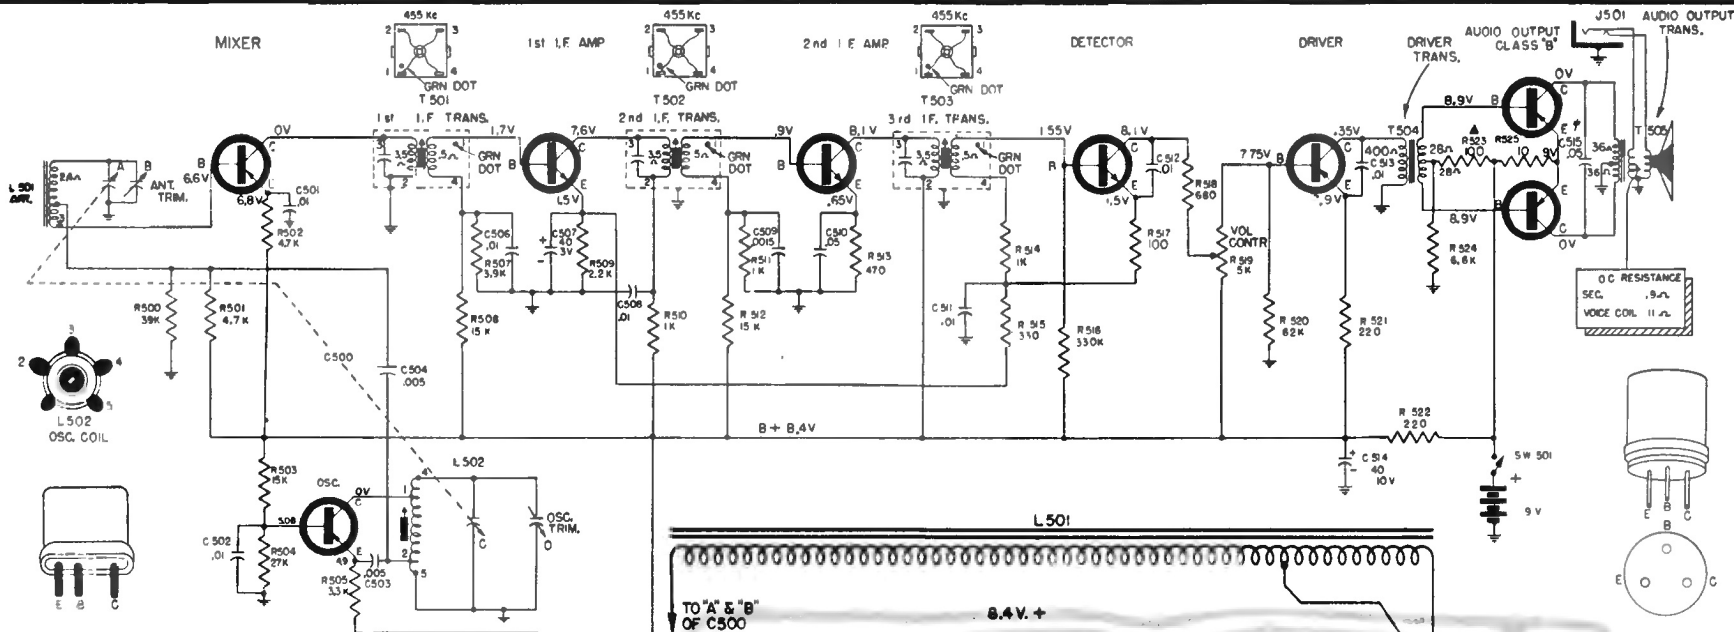

CHASSIS REMOVAL

1. Remove the tuning knob as follows. Insert a loop of string under the tuning knob and pull the knob up and out of the cabinet front.
2. Remove back of cabinet by loosening coin-slot screw on back. Remove the $\frac{1}{4}$ " self tapping screw located at tuning condenser end of board.
3. Hold radio in the palm of the hand with the open back side up. Grip the board with the other hand and slide it down towards the tuning capacitor end of the cabinet, until the upper end of the speaker bracket is free of the plastic lip. Now raise this end of the bracket over lip and slide it out of the cabinet.
4. To insert the board into the cabinet use the reverse procedure, being careful to lock the speaker bracket under both recesses provided in the cabinet front.

WESTINGHOUSE RADIO
 Models H-693P8, H-694P8, H-695P8,
 Chassis V-2278-5

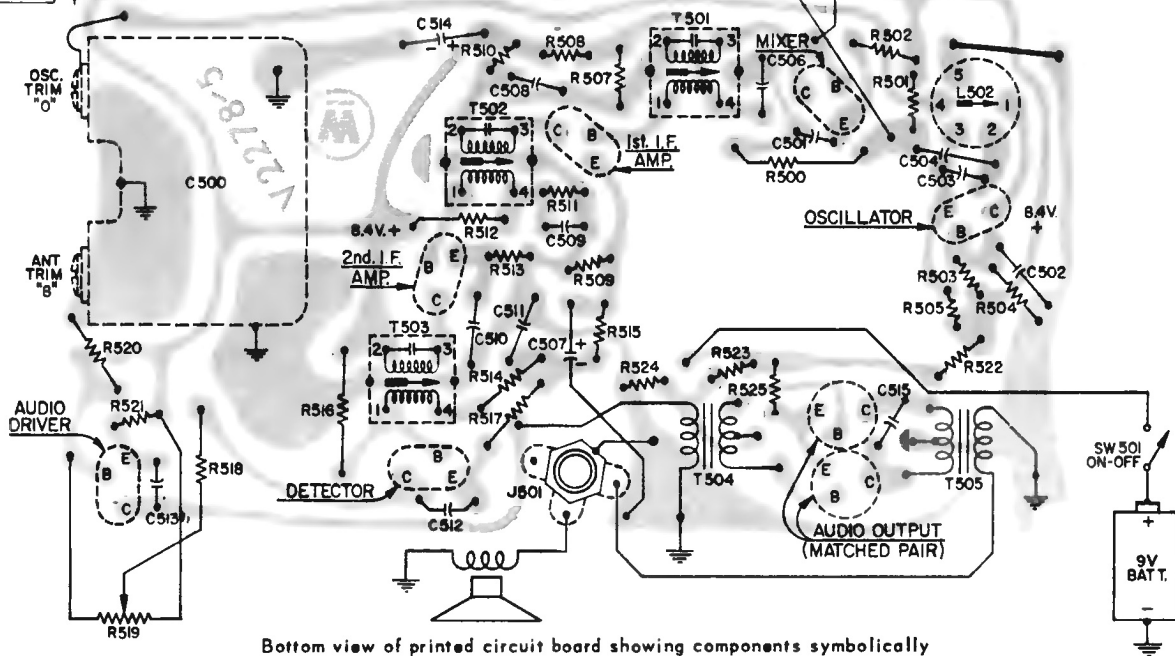

Bottom view of printed circuit board showing components symbolically