


MODELS


(Cameo beige/mocha)

(Pink/Charcoal)

CHASSIS V-2401-2

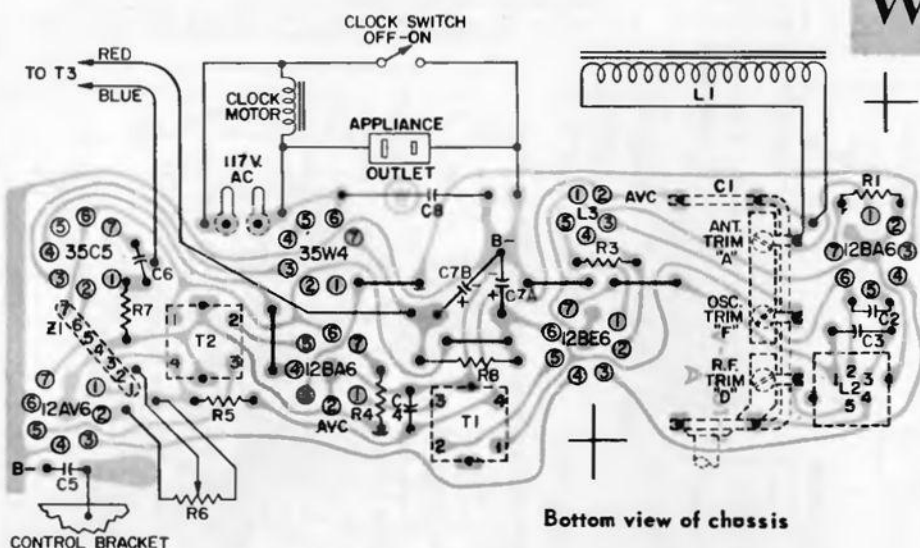


Bottom view of chassis

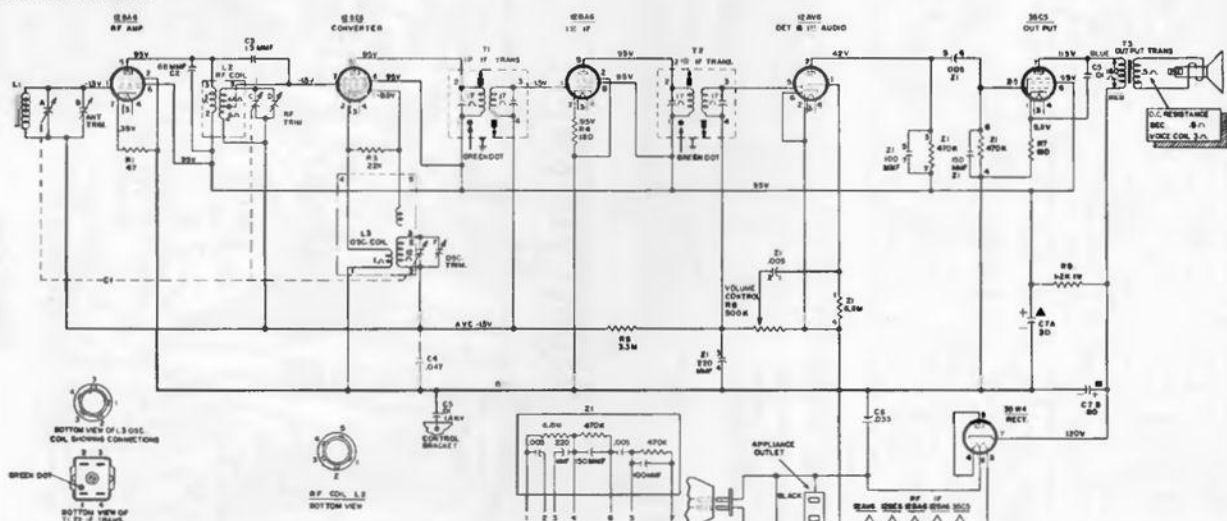

MSD

1. ALL VOLTAGES MEASURED FROM COMMON NEGATIVE USING A V.T.V.M. VOLUME CONTROL AT MINIMUM.
LINE VOLTAGE SET AT 117 V.-A.C. READINGS SHOULD BE AS SHOWN $\pm 2\%$. TUNING CAPACITOR TUNED OFF STATION.

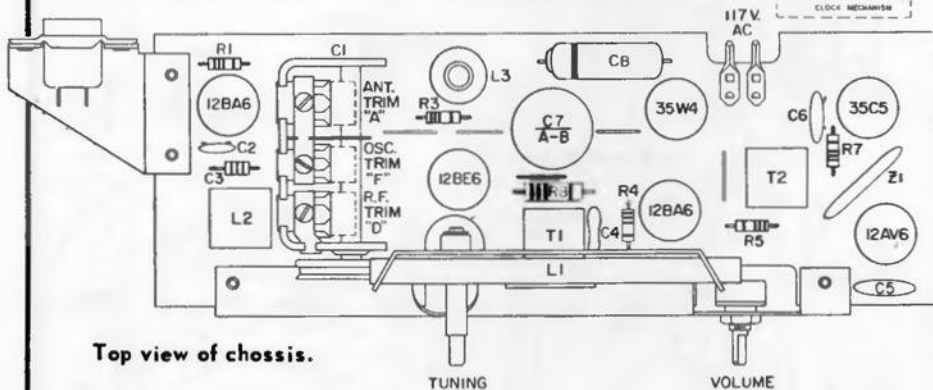

Top view of chossis.

DIAL DRIVE PULLEY —
1½ TURNS

GANG
CLOSED

START

TUNING SHAFT
3 1/4 TURNS

100

Frequency Range 540 to 1600KC
Intermediate Frequency 455KC

CHASSIS REMOVAL

1. Remove four screws, two from top corners on cabinet back and two from cabinet bottom.
2. Slide cabinet front and attached chassis out from cabinet.

1997