


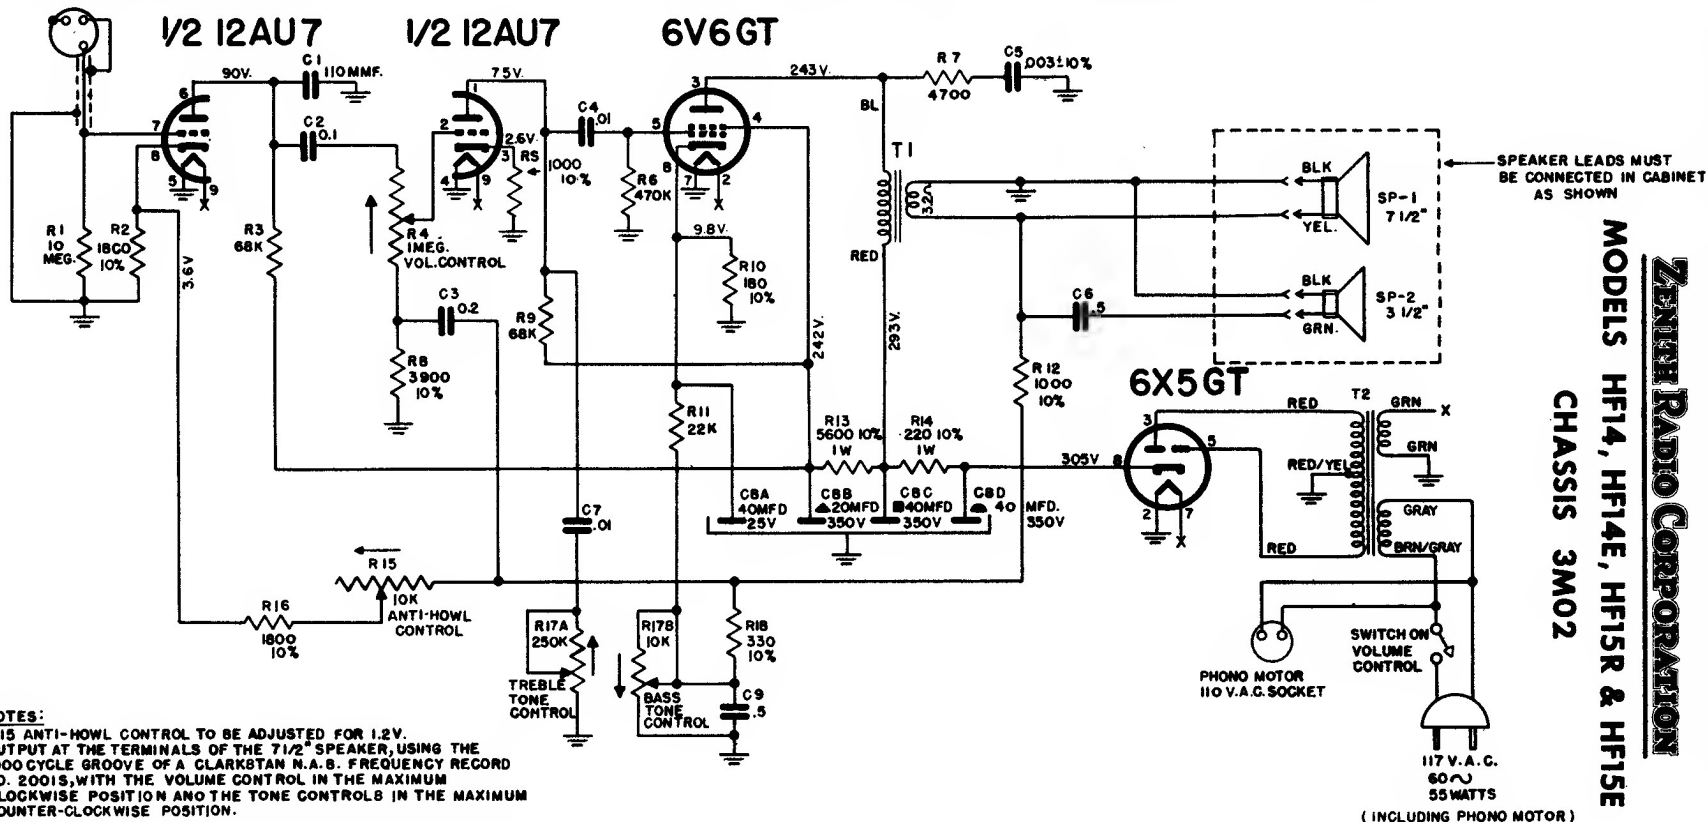

ZENITH RADIO CORPORATION
MODELS HF14, HF14E, HF15R & HF15E
CHASSIS 3M02

REF. NO. DESCRIPTION

CHASSIS PARTS

	Line Cord	
	Socket Shell (part of S-20584)	
C7	.01 Mfd. Ceramic Disc	500V
C1	110 Mmf. Ceramic Disc	500V
C5	.003 Mfd.	600V
C2	.1 Mfd.	600V
C3	.2 Mfd.	200V
C4	.01 Mfd.	600V
C6, C9	.5 Mfd.	120V (2 used)
C8A, B, C, D	Electrolytic	

R18	330 Ohm	1/2 W	Ins.	10%
R5, R12	1 K Ohm	1/2 W	Ins.	10% (2 used)
R2, R16	1.8 K Ohm	1/2 W	Ins.	10% (2 used)
R8	3.9 K Ohm	1/2 W	Ins.	10%
R7	4.7 K Ohm	1/2 W	Ins.	20%
R11	22 K Ohm	1/2 W	Ins.	20%
R3, R9	68 K Ohm	1/2 W	Ins.	20%
R6	470 K Ohm	1/2 W	Ins.	20%
R1	10 Megohm	1/2 W	Ins.	20%
R10	180 Ohm	1 W	Ins.	10%
R15	Feed-Back Control			
R17A, B	Bass & Treble Tone Control			
R4	Volume Control & Switch			
R14	220 Ohm	1 W	Ins.	10%
R13	5.6 Ohm	1 W	Ins.	10%



DESIGNATES CHASSIS

