


MODEL K526 W, Y
CHASSIS 5K04

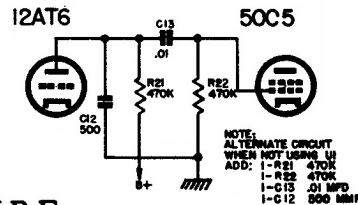

OPERATION	CONNECT OSCILLATOR TO	DUMMY ANTENNA	INPUT SIG. FREQUENCY	SET DIAL AT	TRIMMERS	PURPOSE
1	Convertor Grid	.5 Mfd.	455 Kc.	600 Kc.	Adjust Primary & Secondary Slug	For I.F. Alignment
2	Single Turn Loosely Coupled to Wave Magnet	----	1600 Kc.	1600 Kc.	C1F	Set Oscillator to Dial Scale
3		----	1400 Kc.	1400 Kc.	C1D	Detector Alignment
4		----	1400 Kc.	1400 Kc.	C1B	Antenna Alignment