


CHASSIS 6L20



ALIGNMENT PROCEDURE

OPERATION	CONNECT OSCILLATOR TO	DUMMY ANTENNA	INPUT SIG. FREQUENCY	SET DIAL AT	TRIMMERS	PURPOSE
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc.	L 5, 6, 7, 8	For I.F. Alignment
2	Single Turn Loosely Coupled to Wave Magnet	--	1620 Kc.	1620 Kc.	C 2 F	Set Oscillator to Dial Scale.
3		--	1400 Kc.	1400 Kc.	C 2 D	Detector Alignment
4		--	1400 Kc.	1400 Kc.	C 2 B	Antenna Alignment

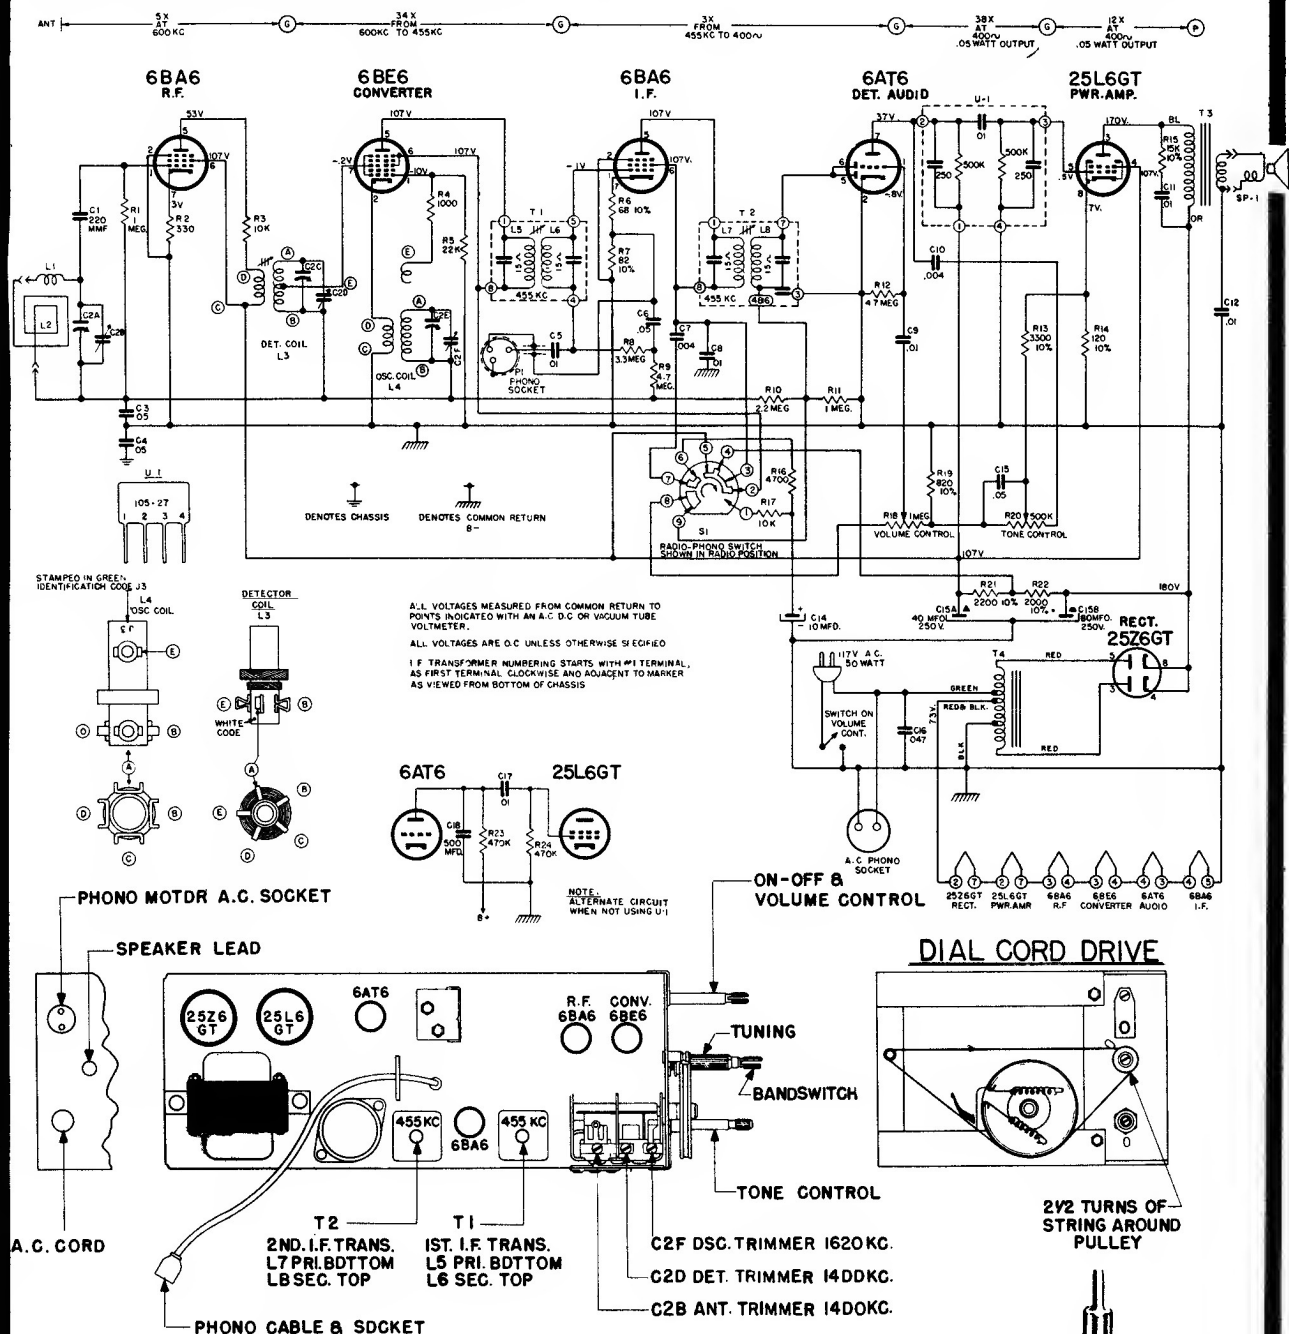