GENERAL ELECTRIC COMPANY

Models T130A, B, T131A, B, T132A, B

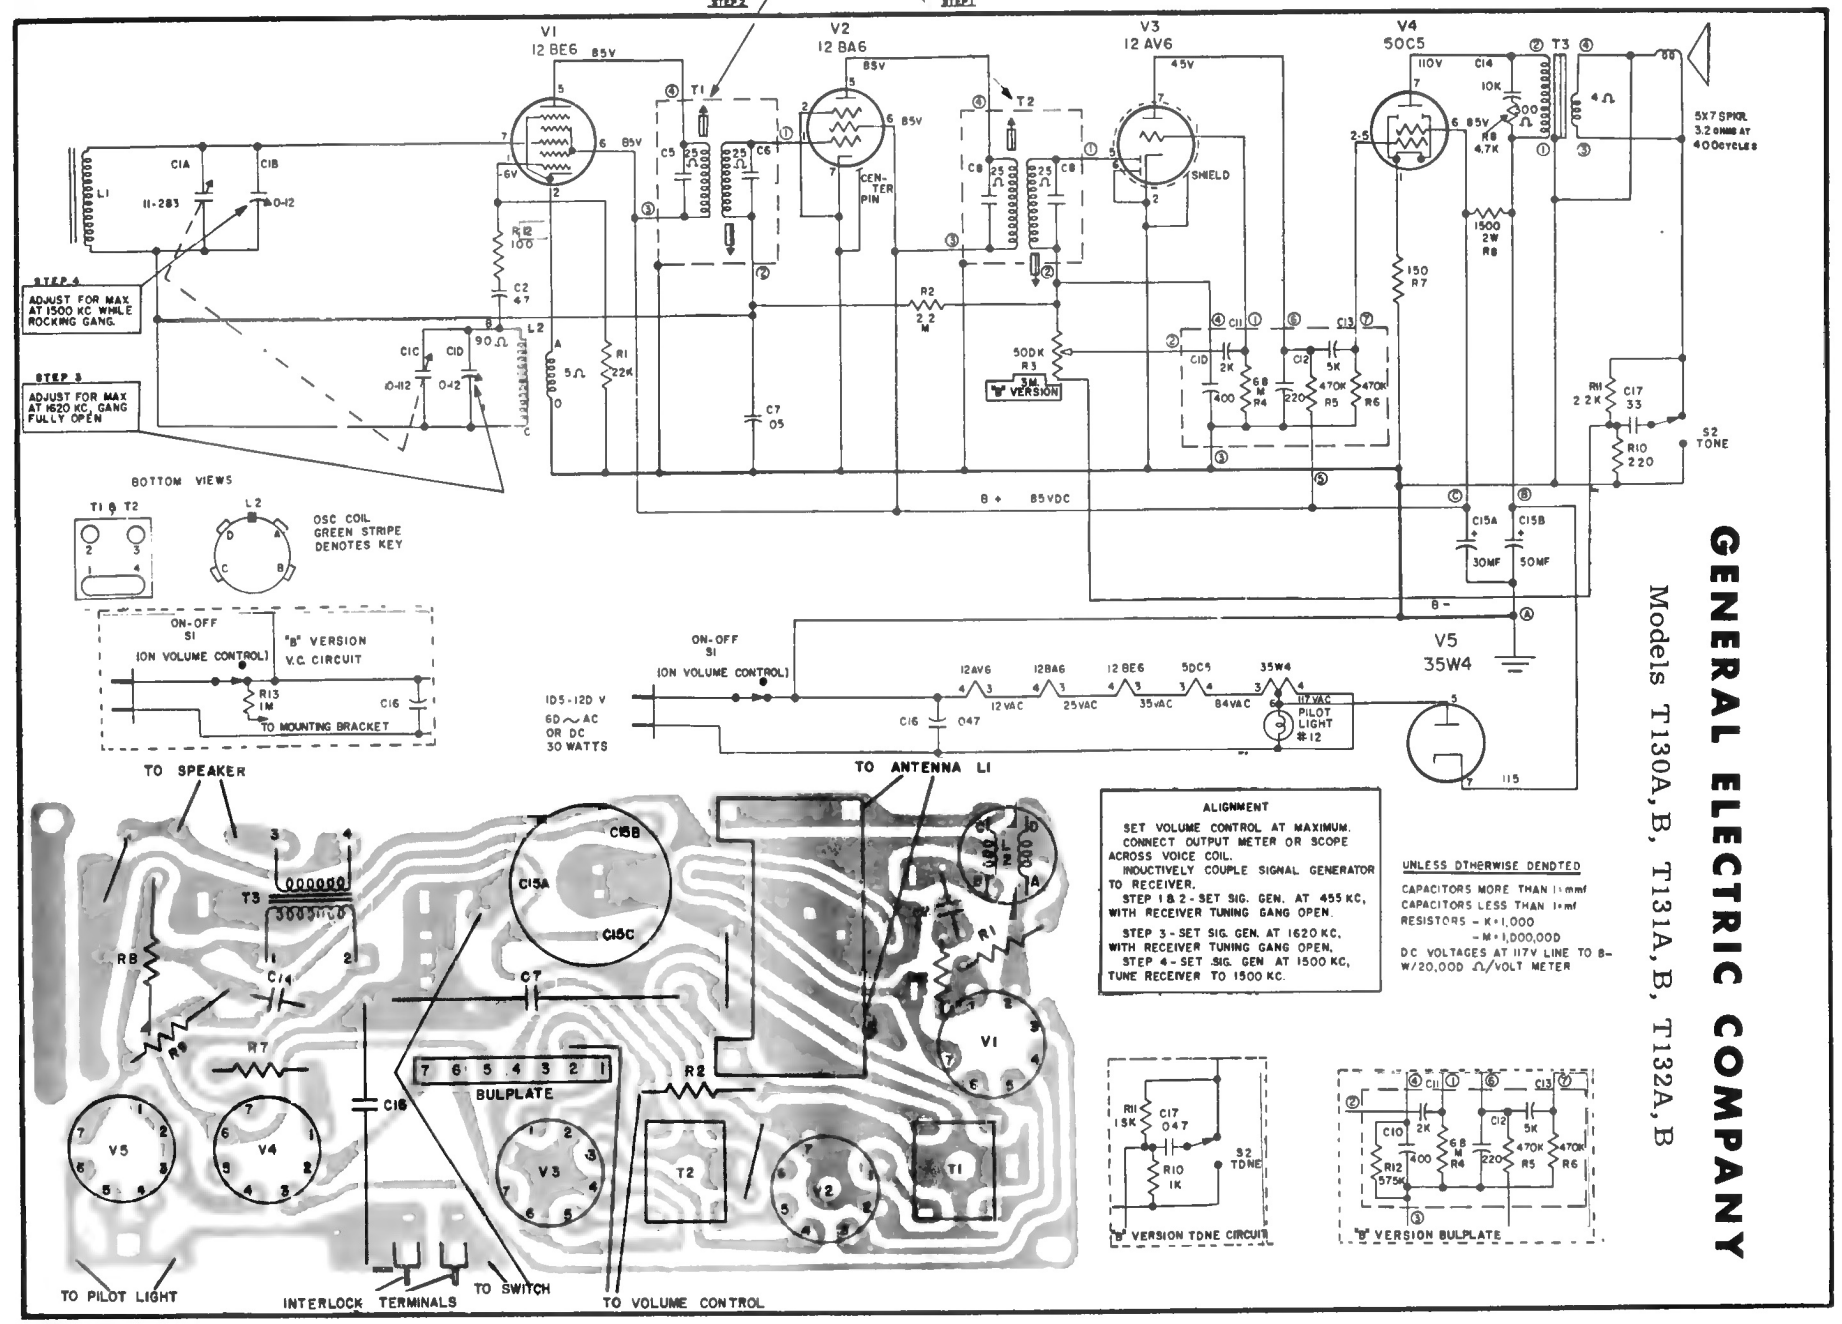

ALIGNMENT

SET VOLUME CONTROL AT MAXIMUM. CONNECT OUTPUT METER OR SCOPE ACROSS VOICE COIL.

INDUCTIVELY COUPLE SIGNAL GENERATOR TO RECEIVER.

STEP 1 & 2 - SET SIG. GEN. AT 455 KC, WITH RECEIVER TUNING GANG OPEN.

STEP 3 - SET SIG. GEN. AT 1620 KC. WITH RECEIVER TUNING GANG OPEN.

STEP 4 - SET SIG. GEN AT 1500 KC, TUNE RECEIVER TO 1500 KC.

UNLESS OTHERWISE DENOTED

CAPACITORS MORE THAN 1 mmf

CAPACITORS LESS THAN 1 mf

RESISTORS - K = 1,000

- M = 1,000,000

DC VOLTAGES AT 117V LINE TO B- W/20,000 Ω/VOLT METER