

CHASSIS: 1-610-1, 1-611-1

MODELS: 3201 SERIES; 3302 SERIES

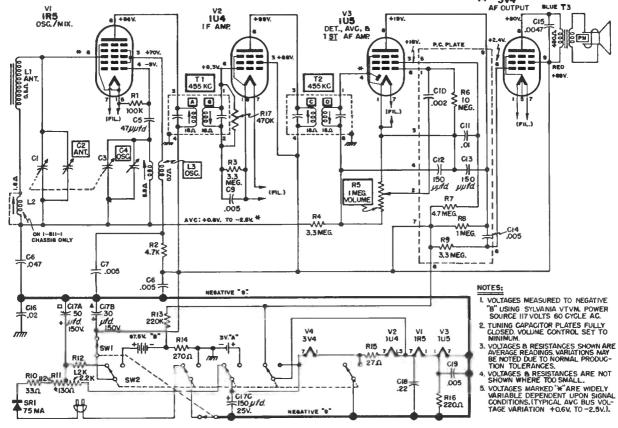

CHASSIS REMOVAL

- 1. Remove Station Selector knob.
- ON MODEL 3201 ONLY, remove back cover as follows:
 - Insert a pencil or any similar object into the hole in center of cabinet bottom.
 - Depress the spring catch by means of the pencil or similar object and lift back cover simultaneously.
- 3. ON MODEL 3302 ONLY, open back cover by pushing up on slide catch on rear of cabinet.

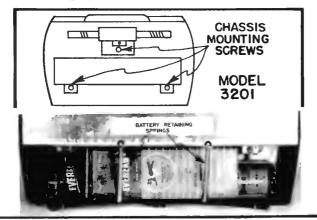

- Remove "A" battery connectors from cabinet mountings.
- ON MODEL 3302 ONLY, disengage line cord retainer on side of cabinet and remove antenna connector pins on inside top of cabinet.
- 6. Remove three (3) chassis mounting screws shown in appropriate sketch below.
- Remove chassis from cabinet by shifting chassis slightly toward cabinet bottom and simultaneously by lifting chassis from cabinet.

