


*Most - Often - Needed*

1939

**RADIO  
DIAGRAMS**  
*and Servicing Information*

*Compiled by*

**M. N. BEITMAN**

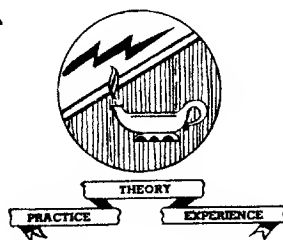

**SUPREME PUBLICATIONS**  
CHICAGO

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## INDEX

Admiral		Continental		Emerson Radio	
see Continental		4D	18	AX-237	40
Air-King Prod.		5L, 5LL	18	AX-238	40
3907	7	8A	19	AX-239	40
4002	7	Coronado		AX-240	40
9822	7	see Gamble-Sk.		AX-257	40
9823	7	Crosley Corp.		Fada Radio	
9922	7	A-158	21	354	41
Airline		A-168	23-24	366	42
see Montgomery		A-258	20-22	366-PT	42
Allied Radio		A-268	23-24	Galvin Mfg. Co.	
5-EA	9	418	25	see Motorola	
E-10845	9	428	27	Gamble-Skogmo	
E-10846	9	548	29-30	A-11	49
E-10847	9	568	28	476	50
E-10848	9	628	26	678	52
E-12215	8	638	26	802	50
Amplifier	8	828	31-32	803	51
Andrea Radio		1118	33-34	806-A	51
25G5	11	1128	33-34	807	50
43F6	10	5548	29-30	813	51
Ansley Radio		5628	26	General Electric	
D-17-A	12	Delco		GD-41	53
D-18-A	12	see United Mot.		GD-41-U	53
D-23-A	12	Detrola Radio		GD-60	54
D-29	12	Pee-Wee	35	GD-63	55
D-30	12	147E	35	GD-500	56
Arvin		165	36	Hallicrafters	
see Noblitt-Sp.		192	37	S-22-R	57-58
Belmont Radio		197	35	Howard Radio	
403	13	Emerson Radio		225	59
520	12	BA-199	38	240	60
632	14	BA-201	38	250	59
665	15	AX-211	40	260	59
Chevrolet		AX-212	40	275, 275C	59
985425	16	AX-217	40	280	59
985426	17	AX-221	39	400, 400A	61-62
		AX-222	39		
		AX-235	40		

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Howard Radio

425	61-62
425A	61-62
430	63

## Knight

see Allied Radio

## Lafayette Radio

C-16	64
C-19	64
259	64
269	64

## Majestic Radio

C. McCarthy	65
3C69	67
3-PW	65
52	66
62A	66
369	67
419-B	67

## Midwest Radio

8-1939	68
14-Z-9	69
17-'39	70-71

## Mission Bell

407	72
416	72

## Montgomery-Ward

04BR-675A	76
04BR-676A	76
62-226	73-74
62-228	73-74
62-259	73-74
62-308	73-74
62-318	73-74
62-350	75
62-351	75
62-352	75
62-408	73-74
62-418	73-74
62-554	77

## Montgomery-Ward

62-713-A	78
93WG-602	79
93WG-603	79
93WG-800	80-81

## Motorola

9-24	44
9-24A	44
9-29	43
9-39	43
9-49	45-46
69K-I	47
89K-1	48

## National Co.

NC-100A	82
---------	----

## Noblitt-Sparks

8-A	83
RE-27	84
RE-31	86
RE-37	85
44-C	83
RE-45	83
RE-46	83
78	85
89	84
91	84
92	86

## Oldsmobile

982126	87
982127	89
982153	88

## Philco Radio

L changer	109
TH-4	91
39-6	90
39-7	90
39-17	92
39-18	93
39-25	94
39-30	95-96
39-31	95-96

## Philco Radio

39-35	95-96
39-40	97-98
39-45	99-100
39-55	101-102
39-55	104
39-70	105-106
39-71	107
39-75	105-106
39-80	105-106
39-116	102-104
920	108

## Pilot Radio

T-1451	111
T-1452	111

## RCA Mfg. Co.

Record Chan.	120
6Q4	113
6Q8	115
6QU	112
7Q4	113
7QK4	113
9TX-21	114
9TX-22	114
9TX-23	114
9TX-31	116
9TX-32	116
9TX-33	116
U-9	117
U-12	118
U-25	119-121
U-26	119-121
BT-40	122
40X-30	123
40X-31	123
40X-50	123
45X-5	124
45X-6	124
45X-111	124
45X-112	124
45X-113	124
46X-1	125

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## RCA Mfg. Co.

46X-2	125
46X-3	125
46X-11	125
46X-12	125
46X-13	125
46X-21	126
46X-23	126
46X-24	126
K-50	127
M-50	128
U-50	130
BP-55	122
T-55	127
BP-56	122
M-70	129
T-80	131
BP-85	122
96T-4	132
96T-5	132
96T-6	132
96X-1	133
96X-2	133
96X-3	133
96X-11	133
96X-12	133
96X-13	133
96X-14	133
98K-2	135
98T	135
98T-2	134
U-121	136
U-123	136
U-127E	136

Radio Wire Tel.  
see Lafayette

## Sears, Roebuck

101.505	137
101.510	138
101.511	139
101.526	140
101.546	141
101.555	142

## Sears, Roebuck

4632A	137
4633A	137
6003	138
6004	138
6014	137
6015	137
6024	138
6034	138
6036	139
6044	137
6045	137
6058	137
6059	137
6063	137
6064	137
6065	137
6102	140
6103	140
6105	140
6119	141
6120	141
6124	138
6126	141
6127	141
6134	138
6136	139
6144	137
6158	142
6159	142
6164	137
6192	142
6200	141
6250	141

Silvertone  
see Sears,

## Sparton

219-P	143
409-GL	144
520	145
520-M	145
699	147
1160	146

## Spiegels, Inc.

TE	149
5N	148
297	149
620	148
Z-7020	149
Z-7021	149
Z-7126	148
Z-7450	148
Z-7456	149
Z-7458	149

## Stewart-Warner

91-61	153
91-81	151
91-111	150
91-648	152
97-56-S	154
97-561 to	
97-569	154
98-61	153
98-81	151
98-111	150
910-61	153
910-81	151
910-111	150

## Stromberg-Carlson

335	155
336	155
340	156
341	156
350	157

Truetone  
see Western Auto

## United Motors

R-675	158
R-678	159-160
R-1134	161
R-1135	161
R-1139	161
R-1142	162
R-1144	163

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

<b>Wells-Gardner</b>		<b>Zenith Radio</b>		<b>Zenith Radio</b>	
5D2	164	6D-410	184	7S-459	189-190
<b>Western Auto</b>		6D-411	184	7S-460	189-190
D-926	165	6D-413	185-186	7S-461	189-190
D-934	166	6D-414	185-186	7S-462	189-190
D-937	167	6D-425	184	7S-487	191
<b>Westinghouse</b>		6D-426	185-186	7S-488	191
WR-165	168	6D-427	185-186	7S-490	191
WR-256	169	6D-446	185-186	8S-359	178
WR-258	170	6D-455	185-186	5412	175
WR-260	170	6P-416	187	5413	176
WR-264	171-172	6P-417	187	5419	180
<b>Wilcox-Gay Corp.</b>		6P-418	188	5537	181
A-52	173	6P-419	188	5538	183
A-53	174	6P-428	187	5539	182
<b>Zenith Radio</b>		6P-429	188	5657	177
4K-310	175	6P-430	188	5659	184
4K-311	175	6P-447	188	5660	185-186
4K-329	176	6P-448	188	5661	187
4K-355	175	6P-456	188	5662	188
4K-402	180	6P-457	188	5719	189-190
5G-401	181	7S-432	189-190	5721	191
5G-441	182	7S-433	189-190	5807	178
5G-442	182	7S-434	189-190	S-6622	179
5G-461	182	7S-449	189-190	S-7000	192
5G-484	183	7S-450	189-190	S-7001	192
6D-315	177	7S-458	189-190	S-7002	192

## A C K N O W L E D G E M E N T




To all radio manufacturers represented in this book, due thanks and acknowledgement are given. It is only with the cooperation of these firms that the most-popular diagrams needed by you have been selected and prepared for publication.

M. N. Beitman

Chicago, Ill.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

AIR-KING PRODUCTS CO., INC.—BROOKLYN, N. Y.

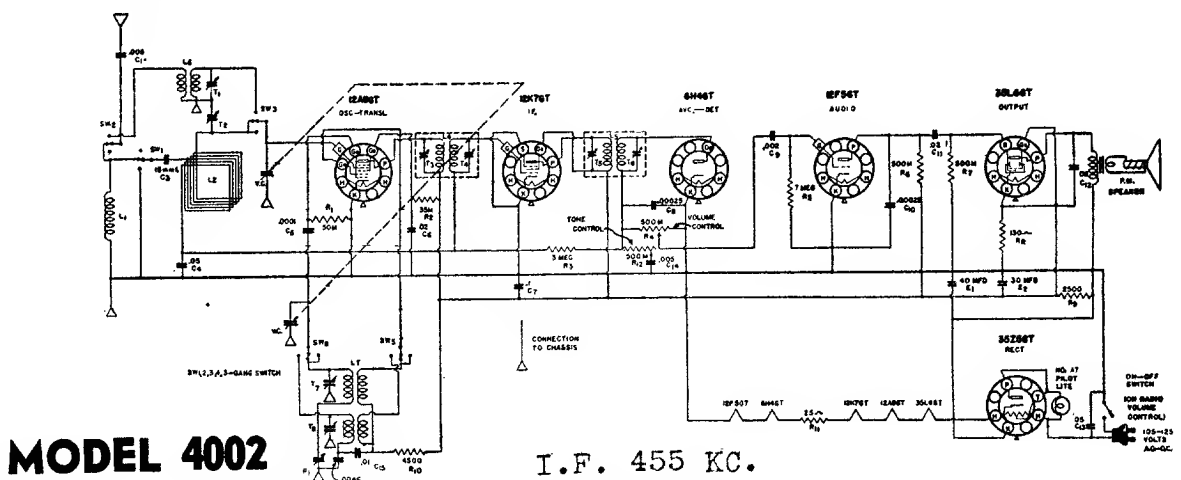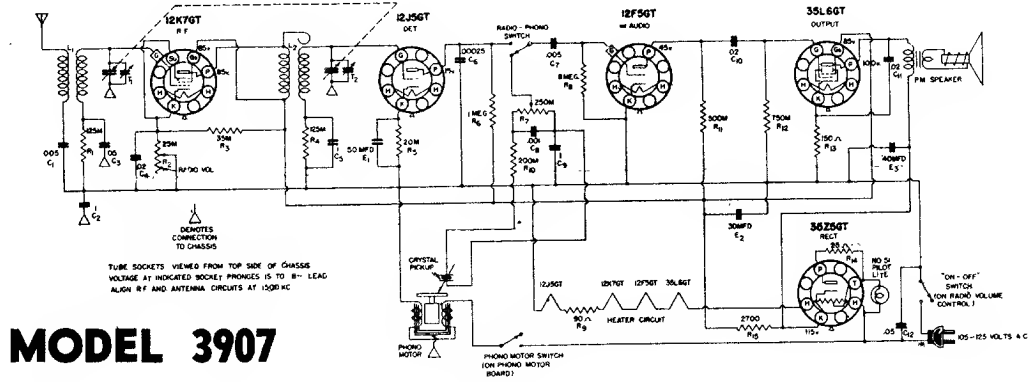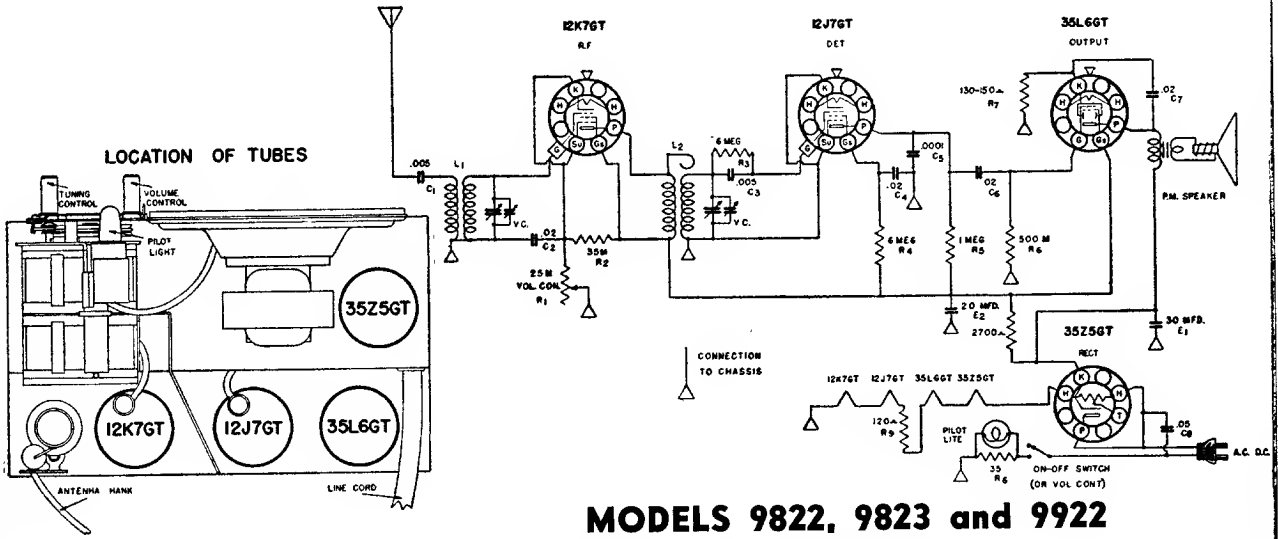

This receiver comprises a six-tube AC-DC two-band superheterodyne incorporating the ingenious "Noise Minimizer" system. An improved filter circuit, automatic volume control, beam power output tube and oversized dynamic speaker are utilized for improved performance. The tuning range of this instrument accommodates two bands of frequencies from 530 to 1700 kilocycles (standard American broadcast) and 5.7 to 18 megacycles (foreign broadcast).


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## ALLIED RADIO CORP.

833 W. JACKSON BLVD.

CHICAGO, ILL.

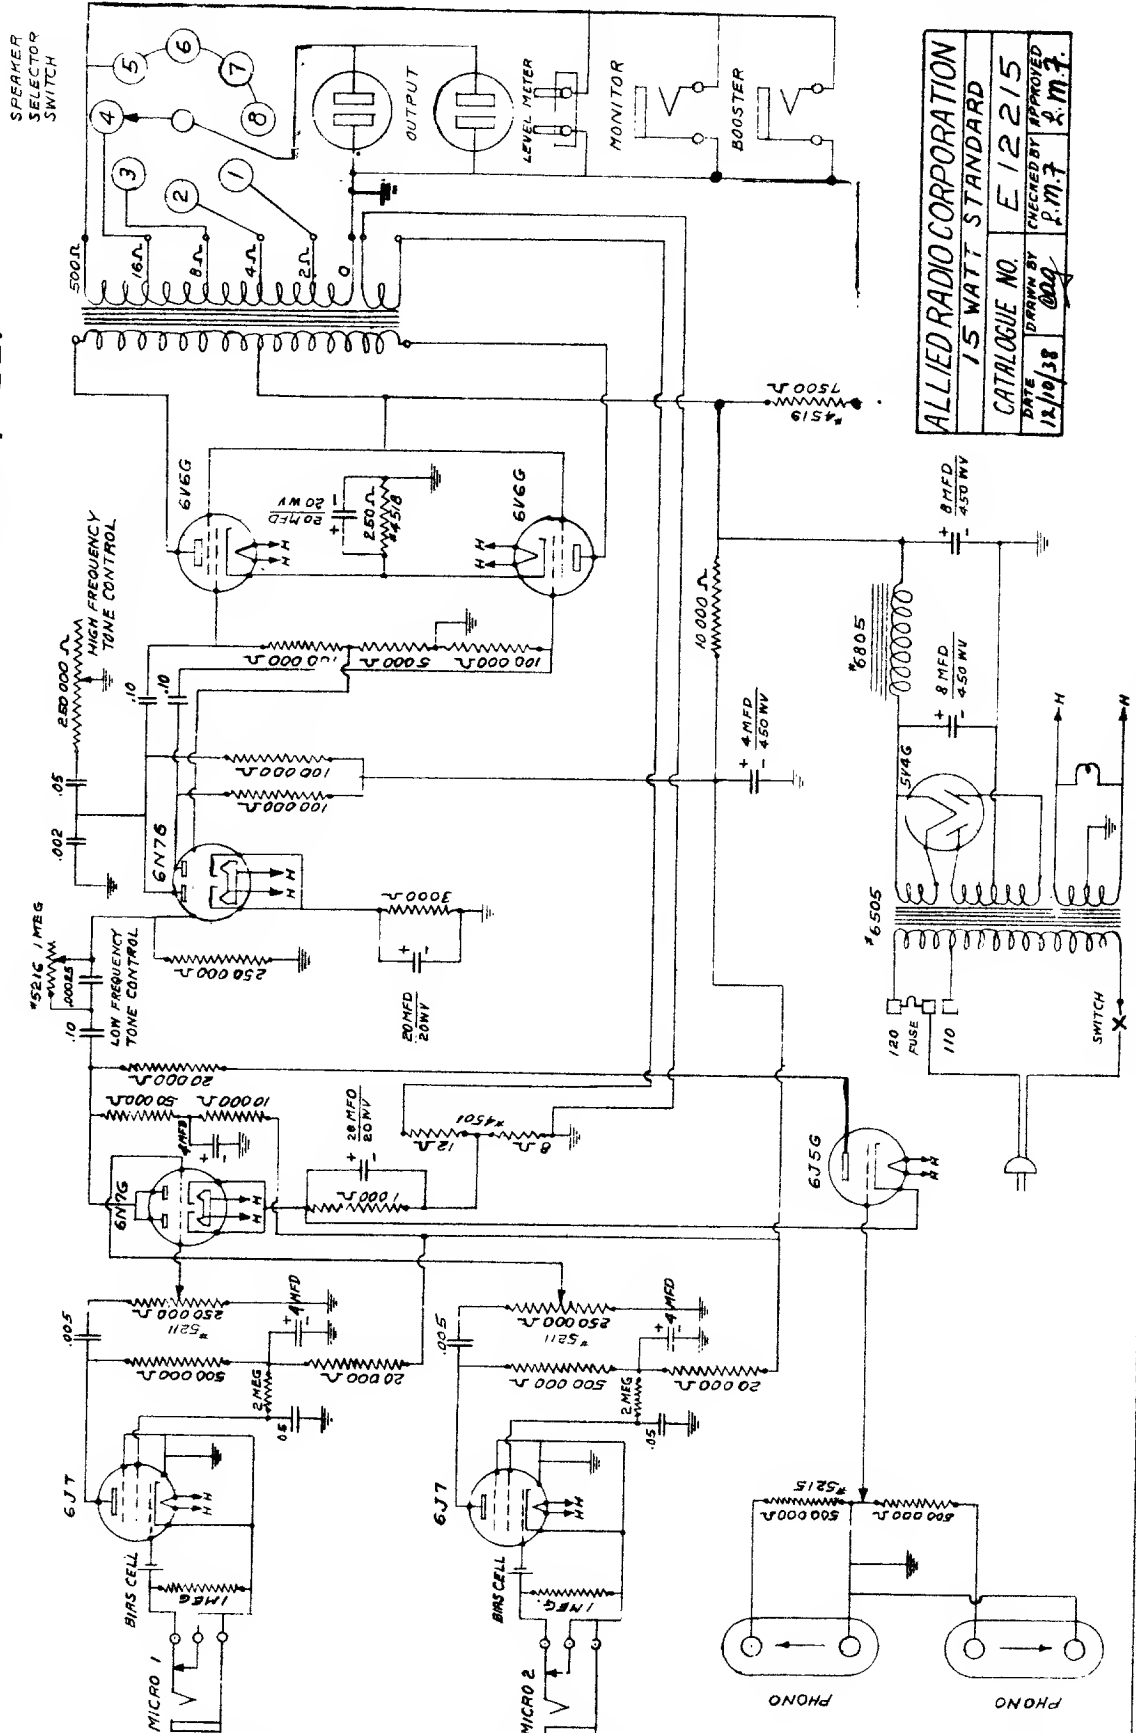


ALLIED RADIO CORPORATION	
1.5 WATT STANDARD	
CATALOGUE NO.	E 12215
DATE DRAWN BY	P.M.F.
12/10/38	009
CHECKED BY	S.M.F.



COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

**Allied Radio**  
CORPORATION

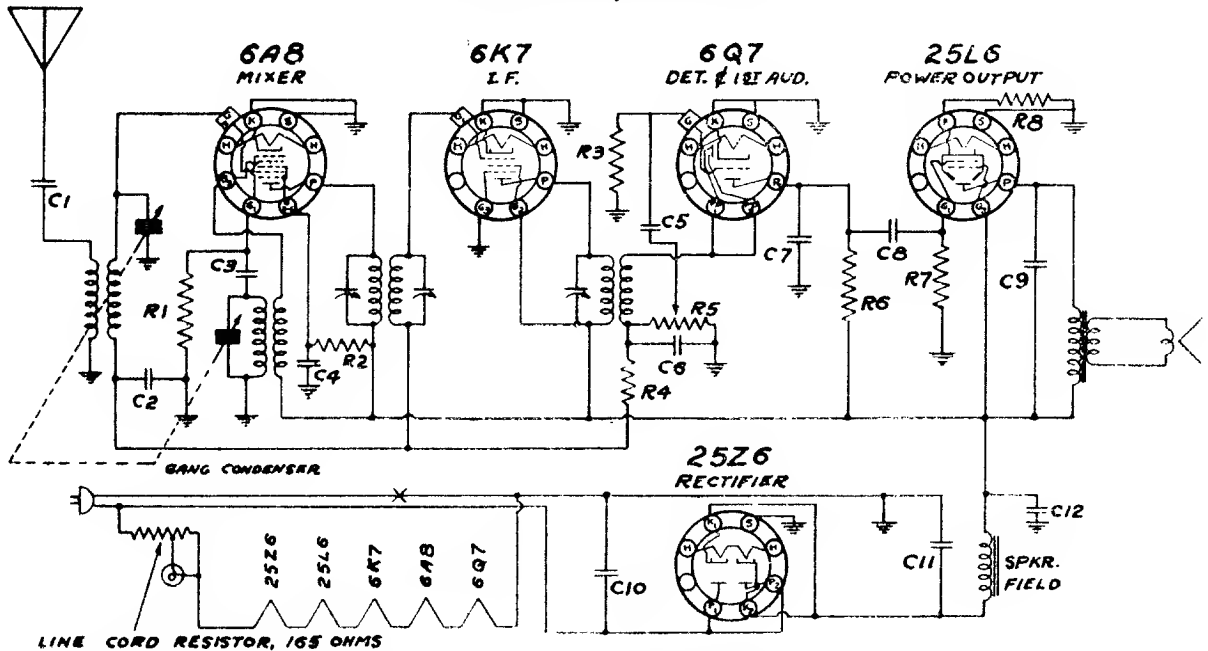

LINE CORD RESISTOR, 165 OHMS

## RESISTORS

NO.	OHMS	WATTS	
R1	50,000	1/4	
R2	40,000	1/4	
R3	15 MEG	1/4	
R4	2 MEG	1/4	
R5	500,000	1/4	VOL. CONT.
R6	250,000	1/4	
R7	500,000	1/4	
R8	110	1/4	±10%

## CONDENSERS

NO.	MFD.	TYPE	NO.	MFD.	TYPE
C1	.005	600V.	C10	.05	400V.
C2	.02	400V.	C11	25.	ELECT. 150V.
C3	.00025	MICA	C12	10.	ELECT. 150V.
C4	.01	400V.			
C5	.01	400V.			
C6	.00025	MICA			
C7	.00025	MICA			
C8	.01	400V.			
C9	.005	600V.			

I.F. - 455 KC

## ALIGNMENT DATA

### I.F. ALIGNMENT

Adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A8) through a .05 or .1 mfd. condenser. Connect ground or test oscillator to chassis ground through a .1 mfd. condenser. Align all three I.F. trimmers to peak or maximum reading on the output meter.

### BROADCAST BAND ALIGNMENT

Adjust the oscillator to 1730 KC and connect the output to the antenna lead, through a .0001 mfd. mica condenser. Set the gang condenser to minimum capacity and adjust the gang condenser trimmer (oscillator) to receive this signal. After this has been carefully done, the next step is to set the generator to 1400 KC and after tuning in the signal adjust the antenna trimmer to peak. This is all that is necessary for the alignment unless the plates of the gang condenser have been bent out of shape. In case of bent plates, set the test oscillator and the receiver to 600 KC and bend the plates into the position for maximum output.












# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

FRONT SECTION


REAR SECTION

REAR SECTION

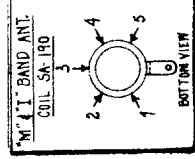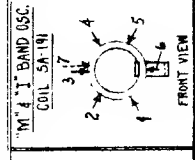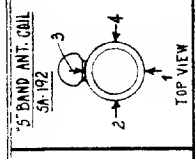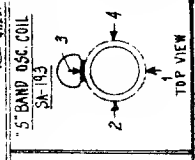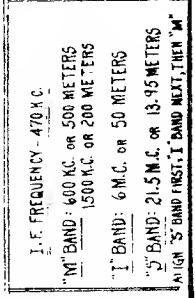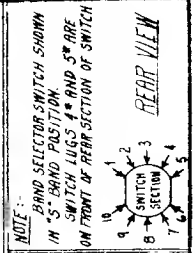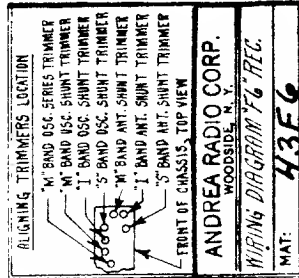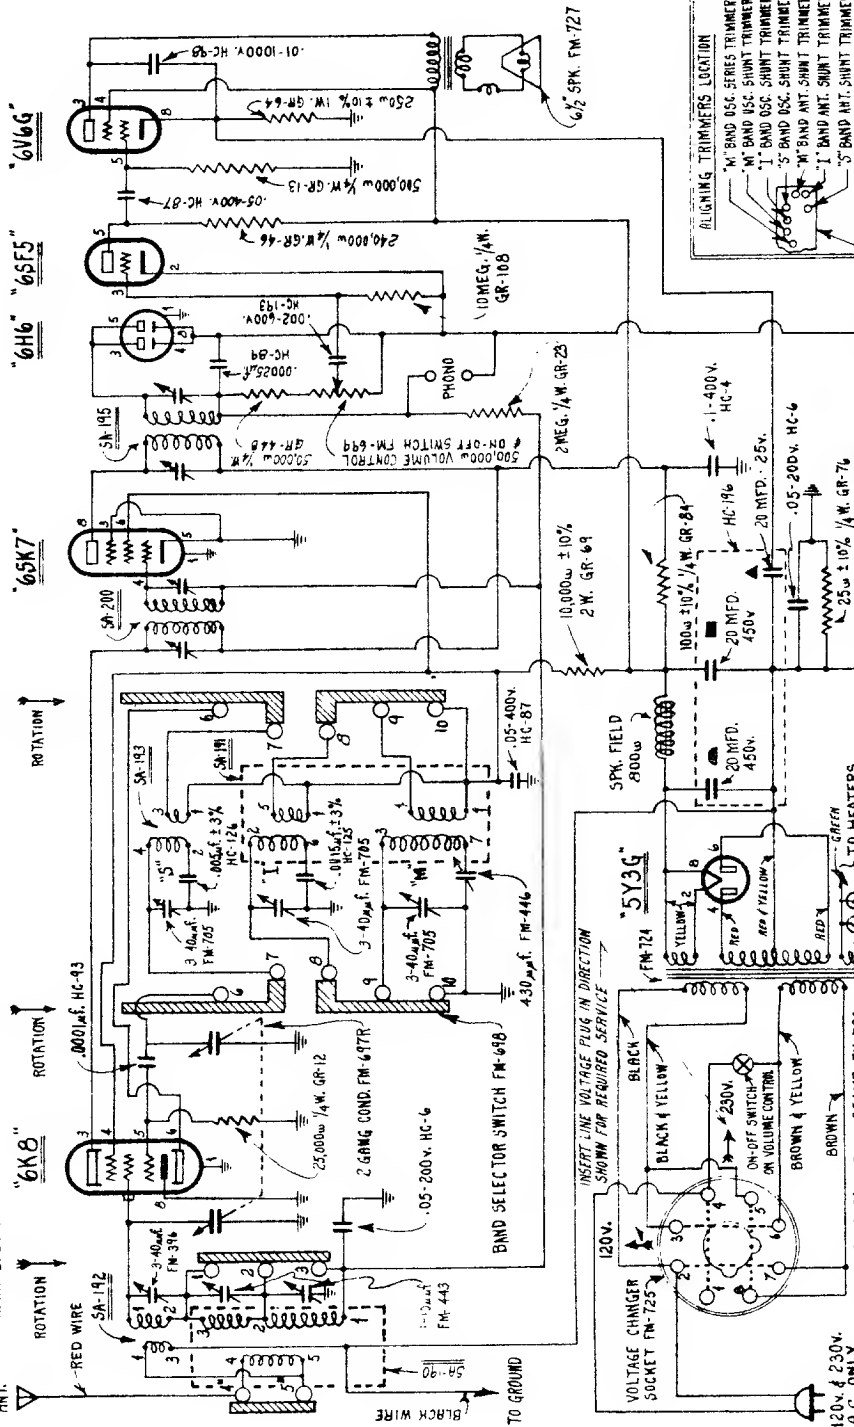

**ANDREA RADIO CORP.**  
48-20 48th Ave., Woodside, L. I., N. Y.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

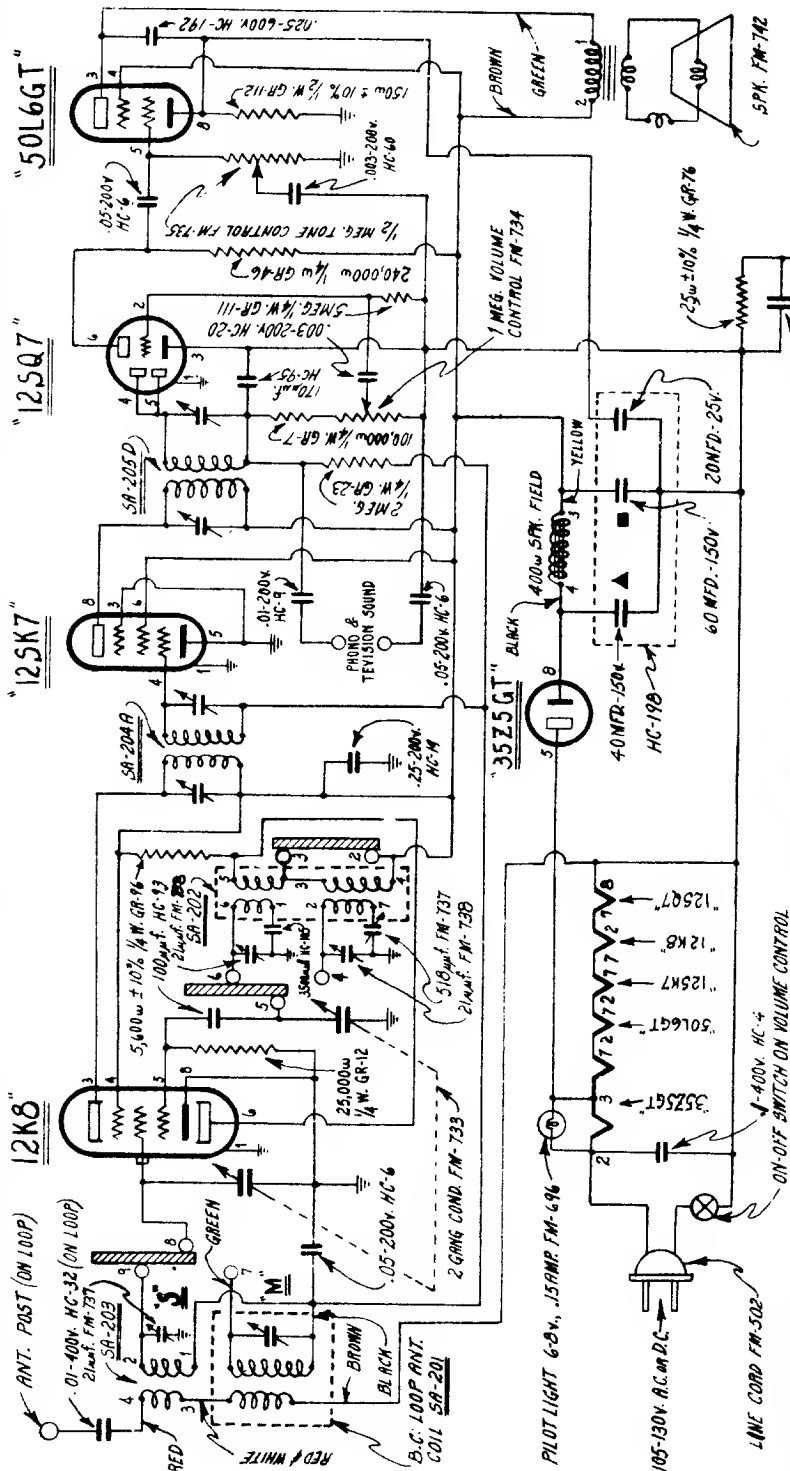

**NOTE:**  
 BRAND SELECTOR SWITCH SHOWN  
 ON "S" BAND POSITION, TO THE  
 EXTREME CLOCKWISE POSITION.

**ANDREA RADIO CORP.**  
 WOODSIDE, N. Y.

**MODEL: 2565**  
 DATE: 2-2-40

---

**I.F. FREQUENCY = 455 K.C.**  
 "M" BAND: 600 K.C. OR 500 METERS  
 1,500 K.C. OR 200 METERS  
 "S" BAND: 18 M.C. OR 16.67 METERS

**IMPORTANT: RECEIVER MUST BE ALIGNED  
 WITH LOOP CORRECTLY ASSEMBLED  
 ON CHASSIS**

**ALIGNING TRIMMERS LOCATION**

**TRIMMERS LOCATION**

1500 K.C. ANT. SHUNT TRIMMER  
 I.F. ADJUSTING TRIMMERS  
 ANT. POST  
 M BAND OSC. SHUNT 1800 K.C. TRIMMER  
 S BAND OSC. SHUNT 18 M.C. TRIMMER  
 S BAND ANT. SHUNT 18 M.C. TRIMMER

---

**"M" & "S" BAND OSC. COIL SA-202**

**REAR VIEW**

---

**"S" BAND ANT. COIL SA-203**

**LUG VIEW**

---

**BAND SELECTOR SWITCH FM-236**


**LUG VIEW**

---


**ANT. POST (ON LOOP)**

**REAR VIEW**

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

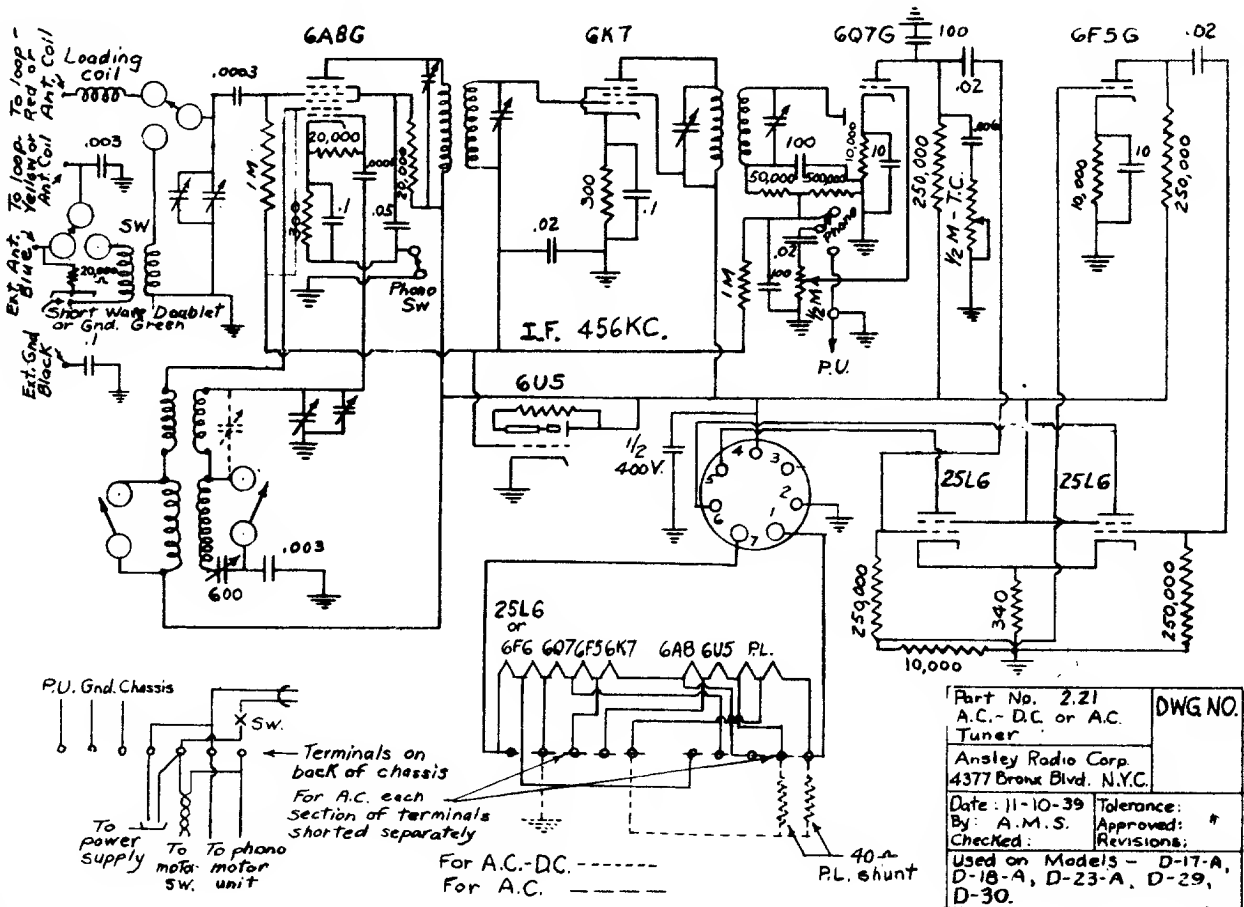


# AUTOMATIC TUNER MODEL 520

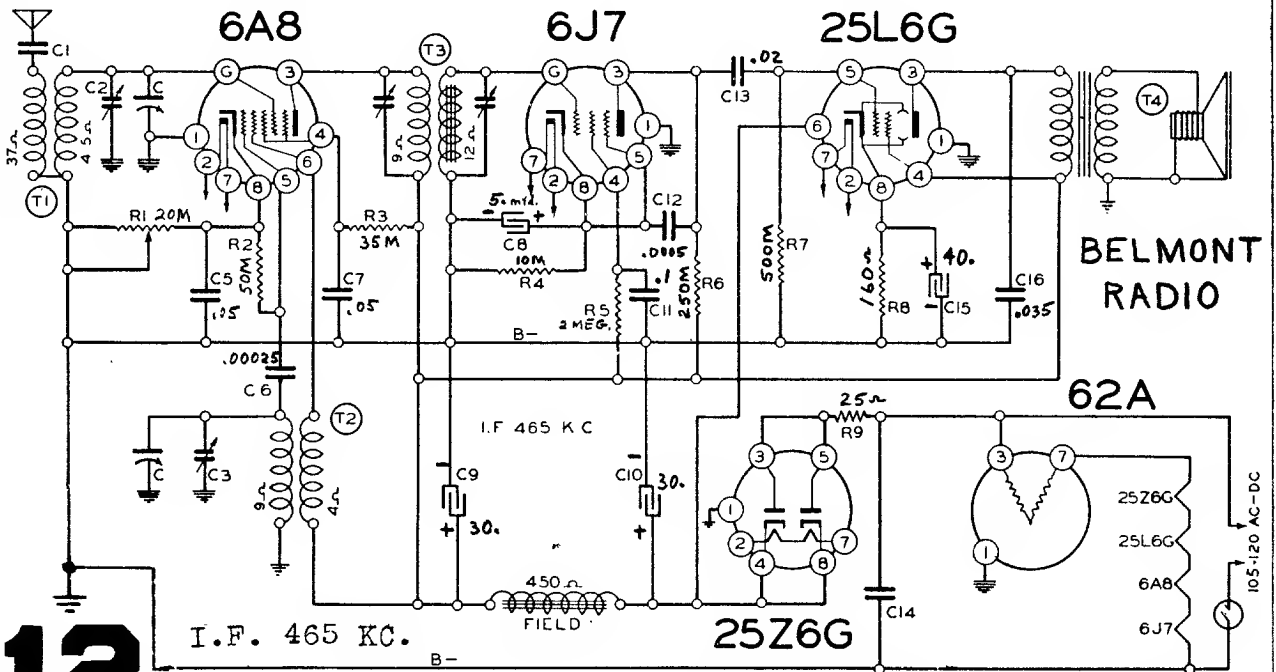

**12**

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

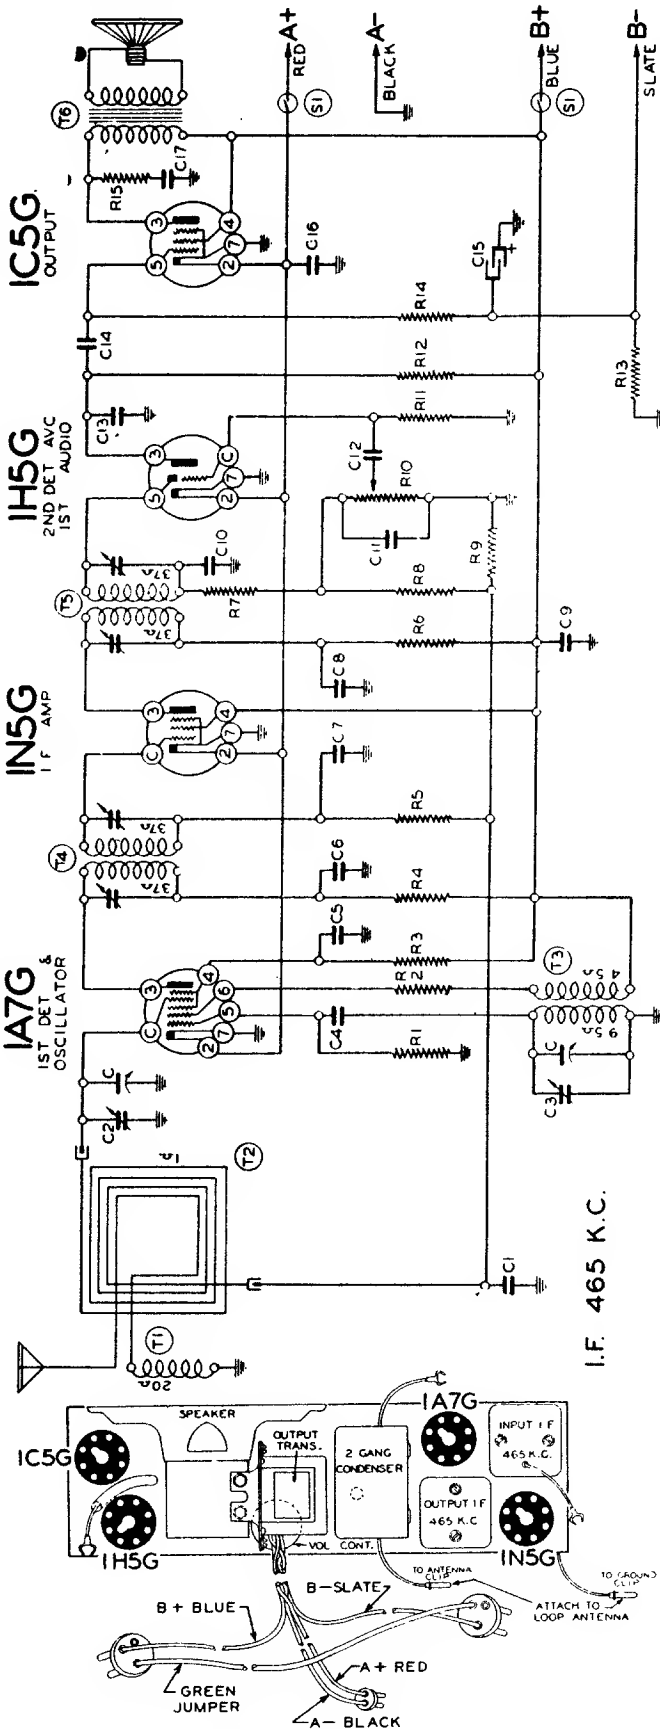

I.F. 465 K.C.

## MODEL 403

Belmont Radio Corporation  
Chicago, Illinois

### IA7G BOTTOM VIEW OF CHASSIS




[A] CANNOT BE READ WITH VOLTMETER.


### IC5G BOTTOM VIEW OF CHASSIS



### IN5G REAR OF CHASSIS



### IH5G REAR OF CHASSIS





Circuit Diagram Ref. No.	Part No.	Description
C2	12912	Loop ant. trimmer on gang
C3	10022	Oscillator trimmer on gang
C4	10022	.0025 mica
C5	10078	.05 x 200 v.
C6	10078	.01 x 200 v.
C7	10078	.01 x 200 v.
C8	10078	.25 x 200 v.
C9	10064	.0001 mica
C10	1295	.0001 mica
C11	1295	.01 x 200 v.
C12	10078	.00025 mica
C13	12912	.01 x 200 v.
C14	10078	.01 x 200 v.
C15	11935	25 mid. 25 v. v. lytic
C16	10056	.5 x 200 v.
C17	10012	.003 x 600 v.

Circuit Diagram Ref. No.	Part No.	Description
R1	1309	200M ohm-1/2 w.
R2	13071	4M ohm-1/2 w.
R3	13026	40M ohm-1/2 w.
R4	13026	1000 ohm-1/2 w.
R5	13026	100M ohm-1/2 w.
R6	13026	1000 ohm-1/2 w.
R7	13040	19M ohm-1/2 w.
R8	13038	2 megohm-1/2 w.
R9	13038	2 megohm-1/2 w.
R10	101163	1 megohm volume control
R11	13019	1 megohm-1/2 w.
R12	1303	500M ohm-1/2 w.
R13	130283	750 ohm-1/2 w.
R14	13038	2 megohm-1/2 w.
R15	130218	5M ohm-1/2 w.

Circuit Diagram Ref. No.	Part No.	Description
C	102103	2 gang variable condenser
C1	10022	.05 x 200 v.

Circuit Diagram Ref. No.	Part No.	Description
T1	1236	Antenna load coil (on loop)
T2	120257	Loop antenna coil (complete)
T3	110110	Oscillator coil
T4	108142	Input I.F. coil
T5	108143	Output I.F. coil
T6	114158	5" P.M. Speaker
Sl		Off-on switch D.P.S.T. on vol. control

# AUTOMATIC TUNER MODEL 632

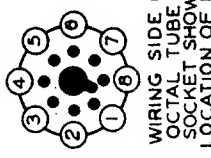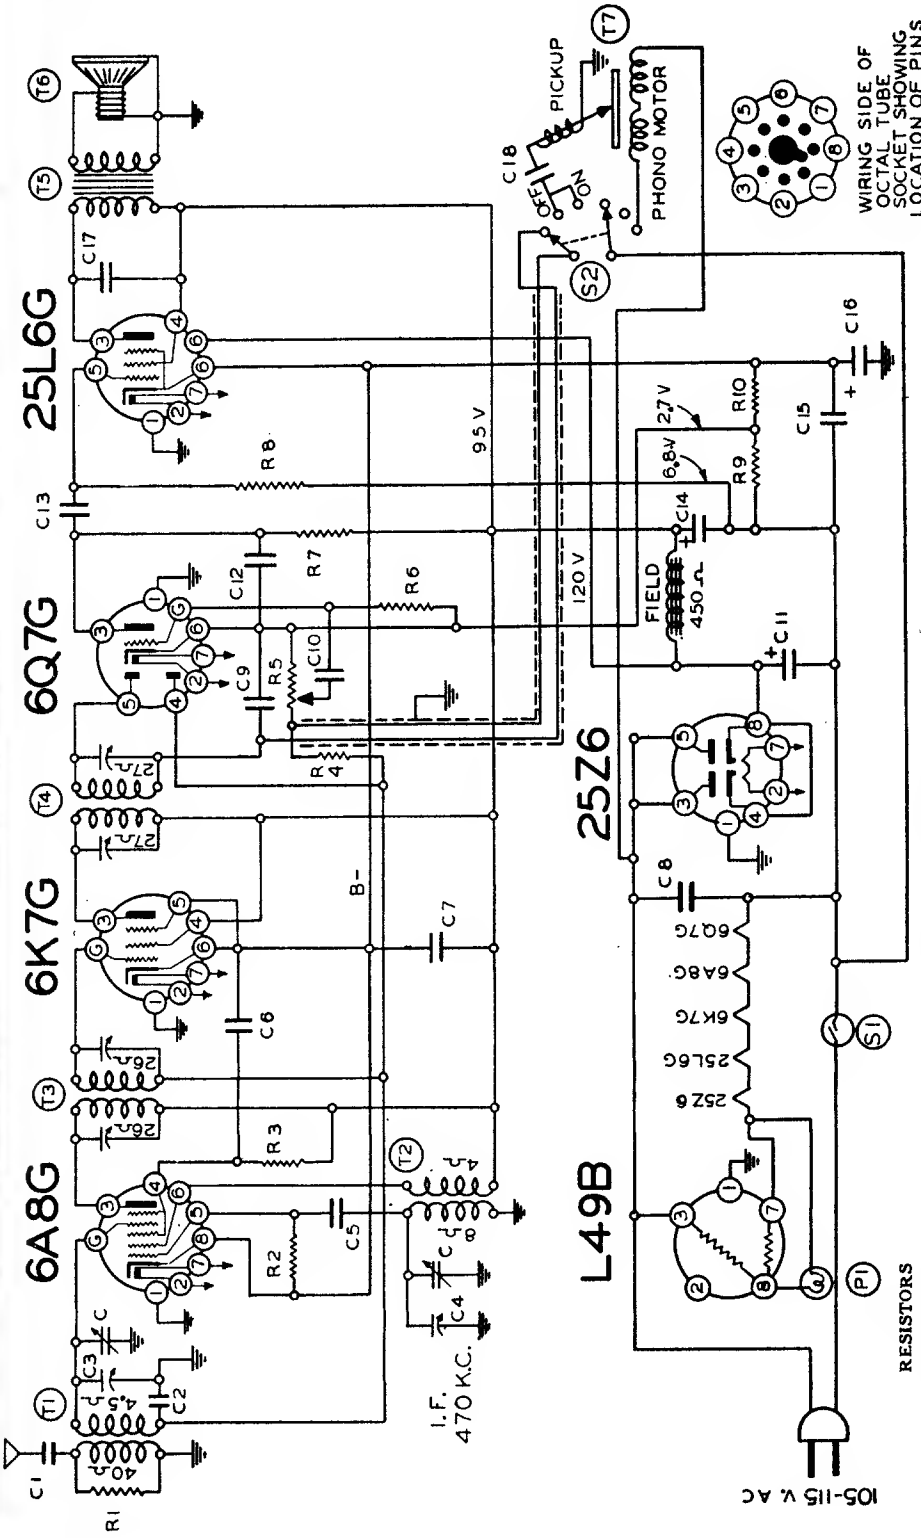

WIRING SIDE OF OCTAL TUBE SOCKET SHOWING LOCATION OF PINS

Belmont Radio Corporation  
Chicago, Illinois

14

- RESISTORS**
- R1 13021 20M ohms— $\frac{1}{2}$  w.
  - R2 13012 50M ohms— $\frac{1}{2}$  w.
  - R3 13014 15M ohms— $\frac{1}{2}$  w.
  - R4 130170 3 megohms— $\frac{1}{2}$  w.
  - R5 10113 1 megohm volume control
  - R6 130225 15 megohms— $\frac{1}{2}$  w.
  - R7 130100 150M ohms— $\frac{1}{2}$  w.
  - R8 13011 250M ohms— $\frac{1}{2}$  w.
  - R9 130231 75 ohms— $\frac{1}{2}$  w.
  - R10 130174 50 ohms— $\frac{1}{2}$  w.
- CONDENSERS**
- C 10278 2 gang variable condenser
  - C1 1292 .0005 ml. Mica
  - C2 10026 .02 x 400 v.
  - C3 Ant. Trimmer Condenser
  - C4 Oscillator Trimmer Condenser
  - C5 .00025 Mica
  - C6 .05 x 200 v.
  - C7 1009 .05 x 200 v.
  - C8 10028 .02 x 400 v.
  - C9 1295 .0001 ml. Mica
  - C10 10011 .01 x 400 v.
  - C11 1962B 60 ml. Lytic
  - C12 12912 .00025 ml. Mica
  - C13 10011 .01 x 400 v.
  - C14 1962B 60 ml. Lytic
  - C15 1962B 40 ml. Lytic
  - C16 10091 .05 x 400 v.
  - C17 10067 .02 x 400 v.
  - C18 10028 .02 x 400 v.
- PARTS**
- T1 1192B Antenna Coil complete
  - T2 11073 Oscillator Coil complete
  - T3 10817 Input I.F.—470 kc. complete
  - T4 10895D Output I.F.—470 kc. complete
  - T5 10560 Output Transformer
  - T6 14116C 5" Dynamic Speaker
  - T7 104138 Phono Motor
  - S1 Off-On Switch on Volume Control

# MODEL 665

Belmont Radio

REAR OF CHASSIS

ANTENNA GROUNDED

A - CANNOT BE MEASURED WITH  
 B - BIAS OF -1.5V READ ACROSS R-12  
 C - BIAS OF -2.5V READ ACROSS R-10  
 E - 5V AC READ ACROSS TER. 2 & B  
 F - 560V AC READ ACROSS TER. 4 & 6

REAR OF CHASSIS

REAR OF CHASSIS

REAR OF CHASSIS

**RESISTORS**



R1	13041	800 ohm— $\frac{1}{2}$ w.
R2	13017	100M ohm— $\frac{1}{4}$ w.
R3	13020	100M ohm— $\frac{1}{4}$ w.
R4	13012	50M ohm— $\frac{1}{4}$ w.
R5	13017	100M ohm— $\frac{1}{4}$ w.
R6	13031	1500 ohm— $\frac{1}{2}$ w.
R7	13042	20M ohm— $\frac{1}{2}$ w.
R8	1304	3 megohm— $\frac{1}{2}$ w.
R9	101126	1 megohm control
R10	130203	60 ohm— $\frac{1}{2}$ w.
R11	1304	3 megohm— $\frac{1}{2}$ w.
R12	130203	40 ohm— $\frac{1}{2}$ w.
R13	1309	200M ohm— $\frac{1}{2}$ w.
R14	13019	1 megohm— $\frac{1}{2}$ w.
R15	130232	25M ohm— $\frac{1}{4}$ w.


**CONDENSERS**

CA	10274	Adjustable Capacitor
CB	12987	Adjustable Capacitor
C1	.000105	Mica
C2	.0009	Mica
C3	.003 x 600 v.	
C4	2439	SW. Antenna Trimmer 2.25 mmfd.
C5	2453	BC. Antenna Trimmer 1-10 mmfd.
C6	10022	.05 x 400 v.
C7	2439	SW. Oscillator Trimmer 2-25 mmfd.
C8	2453	BC. Oscillator Trimmer 2-25 mmfd.
C9	12938	.0005 Mica
C10	10025	.002 x 600 v.
C11	2451B	350 mmfd. W. C. B. C. Series Pad
C12	129112	.0041 Compression Type
C13	10053	.25 x 400 v.
C14	12939	.0005 Mica
C15	10011	.01 x 400 v.
C16	1292	.005 Mica
C17	10011	.01 x 400 v.
C18	10013	.05 x 400 v.
C19	11963B	8 mfd.—350 w. v. lytic
C20	11963B	12 mfd.—350 w. v. lytic


**PARTS**

T1	SW. B. C. Antenna Coil Complete
T2	SW. B. C. Oscillator Coil Complete
T3	Input I. F.—465 kc.
T4	Output I. F.—465 kc.
T5	Output Transformer
T6	Power Transformer
T7	6" Speaker Dynamic (1500 ohm field)
S1	Band Switch
S2	Off-on Switch on volume control
P1	6.3 v. Pilot Light T-44

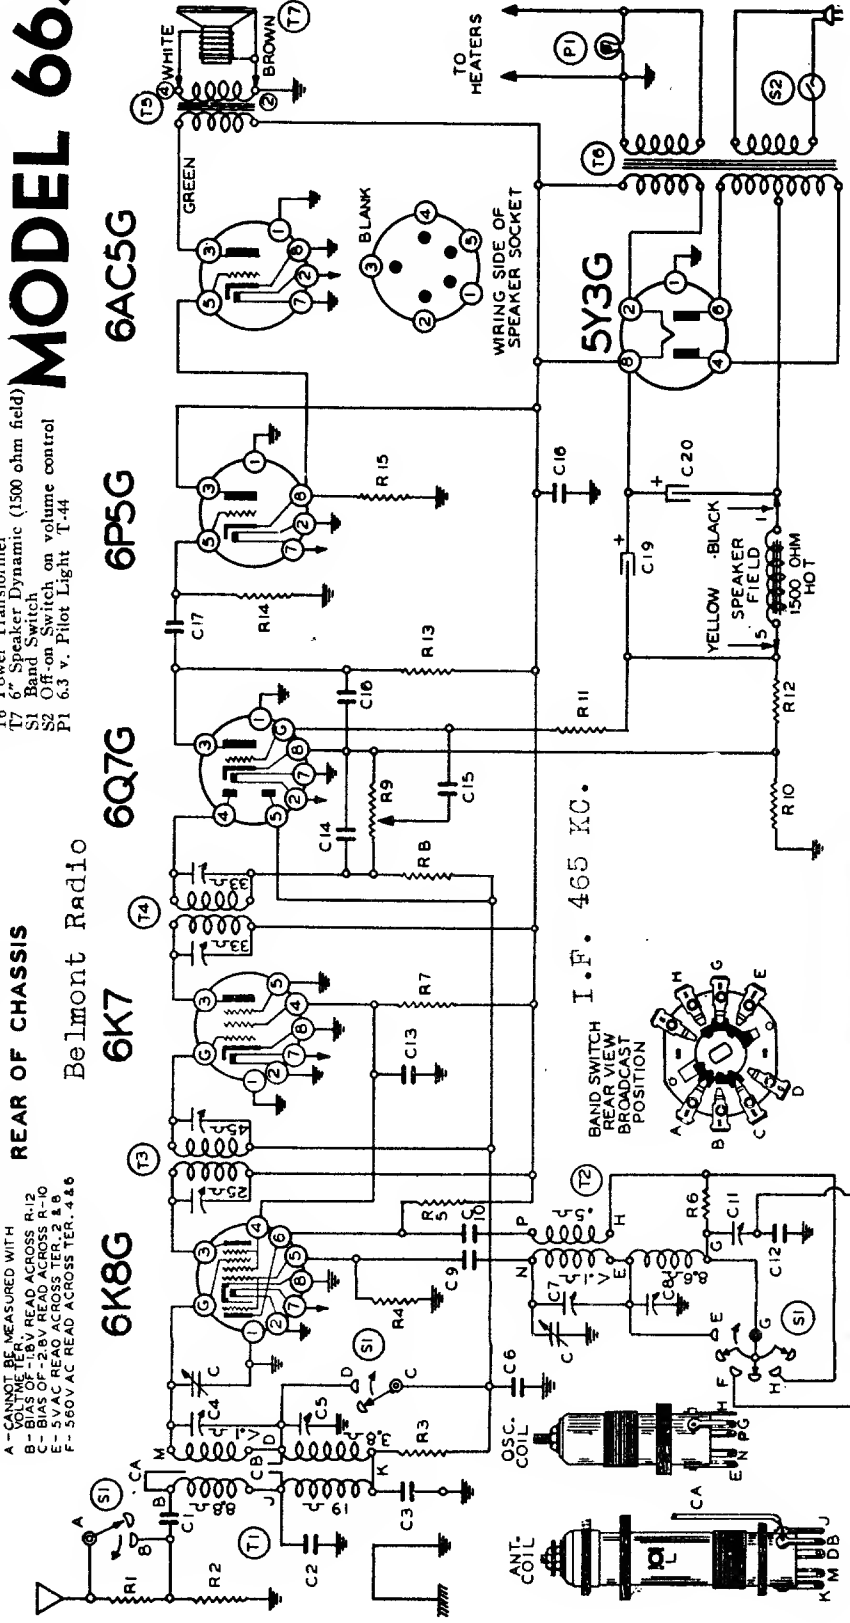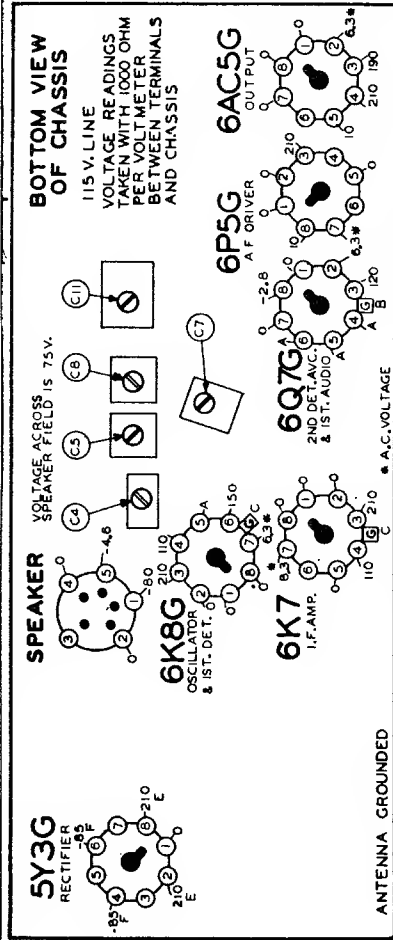


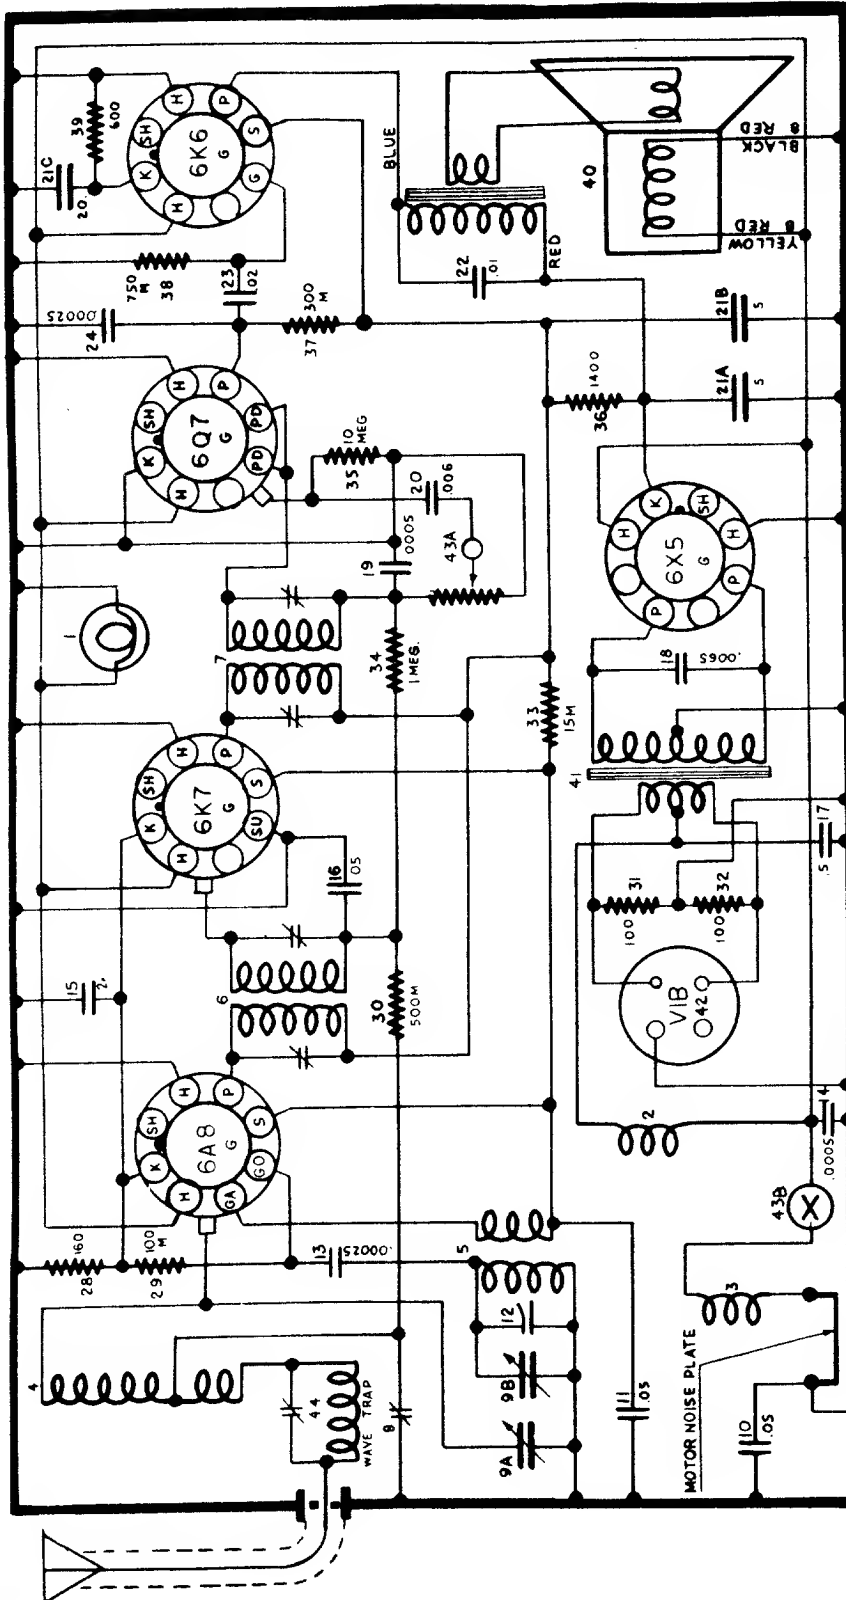

CHEVROLET  
 M=1,000-  
 455 K.C. I.F.



985-425 WIRING DIAGRAM

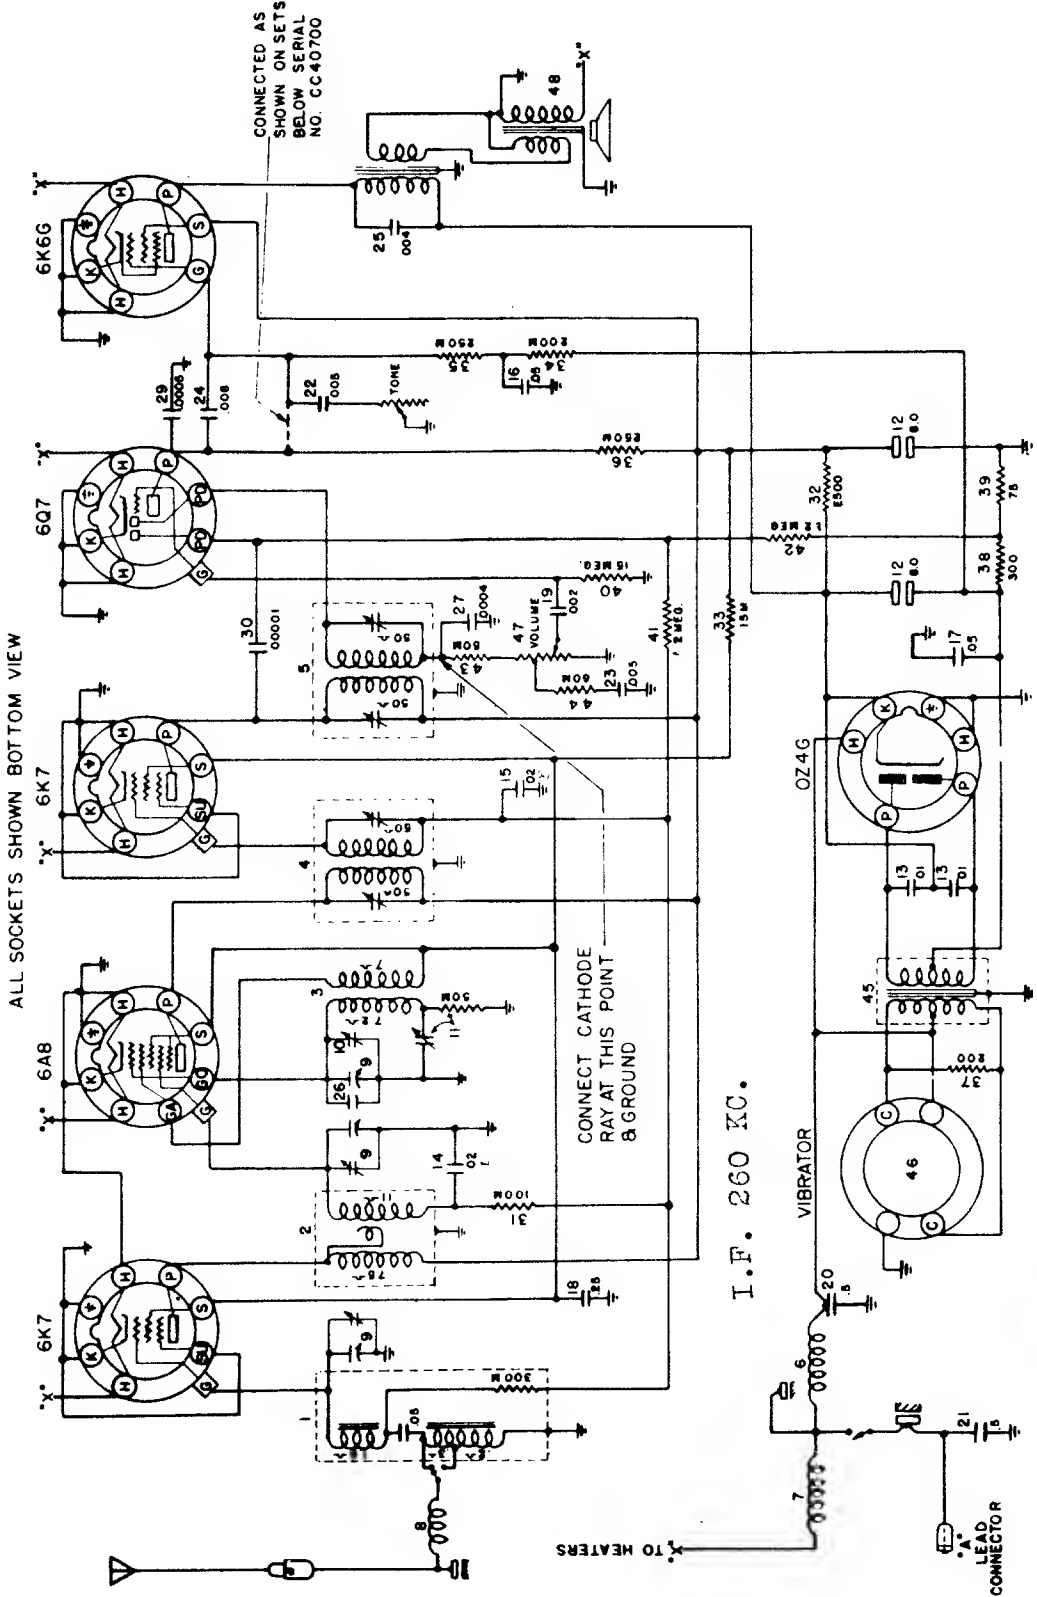


985-426 WIRING DIAGRAM

CHEVROLET



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

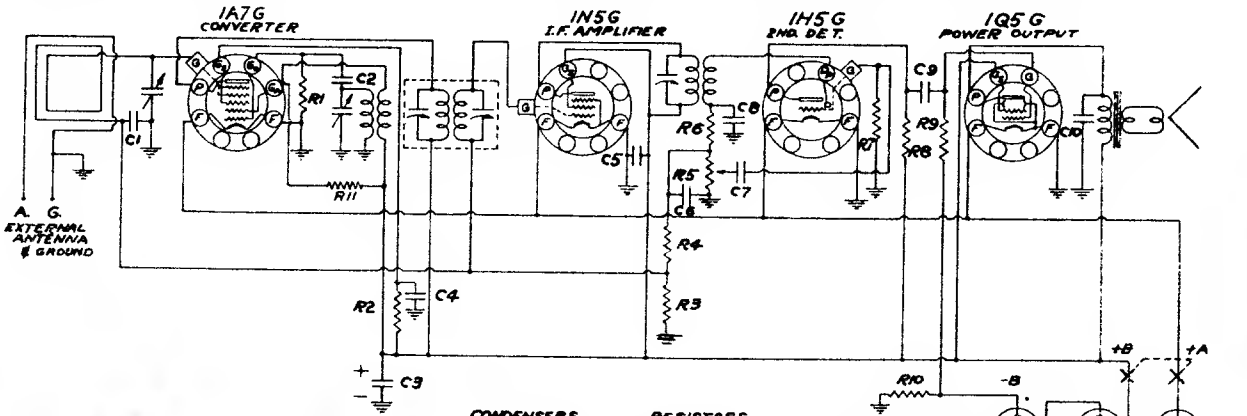

# Admiral

### CONDENSERS


N <sup>o</sup>	MFD.	VOLTS
C1	.05	200
C2	.00005	MICA
C3	4.-150V.	ELEC.
C4	.05	200
C5	.05	200
C6	.0002	MICA
C7	.01	400
C8	.0002	MICA
C9	.01	400
C10	.001	800

### RESISTORS

N <sup>o</sup>	OHMS	WATTS
R1	200000	1/2
R2	70000	1/2
R3	2000000	1/2
R4	2000000	1/2
R5	5000000	1/2 VOL.
R6	70000	1/2
R7	2000000	1/2
R8	5000000	1/2
R9	1000000	1/2
R10	440	1/2
R11	15,000	1/2

BATTERY PLUGS  
SHOW WITH SPRINGS  
AWAY FROM OBSERVER


BATTERY JACKS  
OR SOCKETS

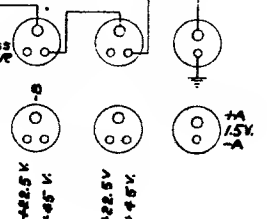

## I.F. ALIGNMENT

Remove the receiver chassis from the cabinet and connect a 100,000 ohm resistor to the green and yellow leads in place of the loop antenna to which they were originally connected. Adjust the signal generator to 455 KC and connect the output to the grid of the first detector tube (1A7) through a .05 or .1 mfd. condenser. The ground on the signal generator should be connected to the chassis ground. Align all I.F. trimmers to peak or maximum reading on the output meter.

Admiral Radio  
Model 4D

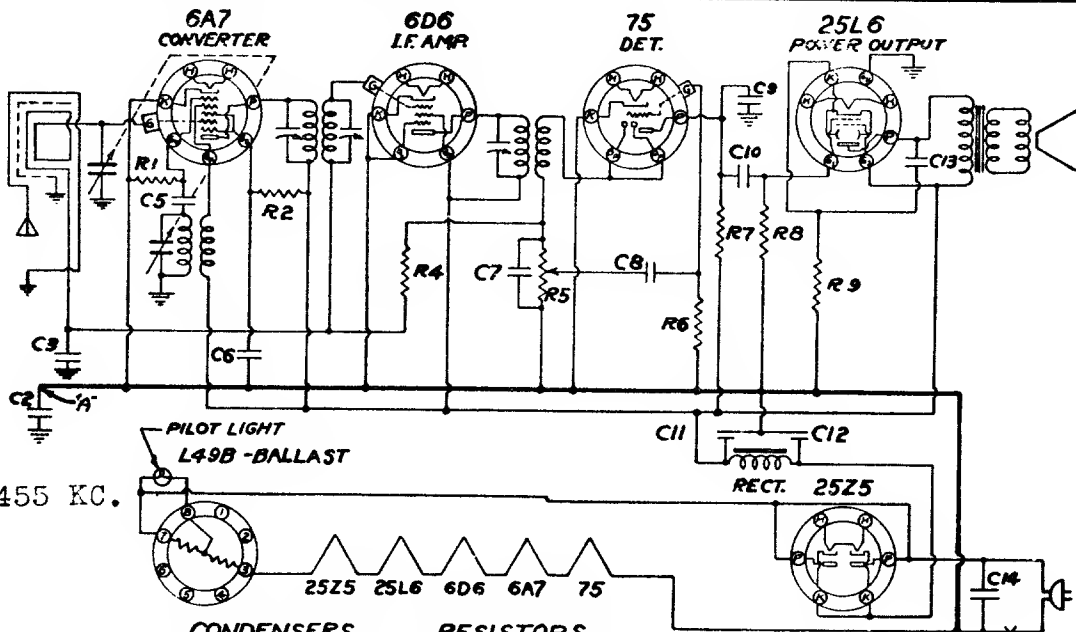

I.F. 455 KC.

### CONDENSERS

N <sup>o</sup>	MFD.	VOLTS
C2	.25	200
C3	.02	400
C5	.00005	MICA
C6	.05	400
C7	.00025	MICA
C8	.01	400
C9	.00025	MICA
C10	.01	400
C11	20.	150
C12	20.	150
C13	.005	600
C14	.05	400

### RESISTORS

N <sup>o</sup>	OHMS	WATTS
R1	50000	1/2
R2	30000	1/2
R4	2000000	1/2
R5	500,000	VOL CONT
R6	5000000	1/2
R7	250,000	1/2
R8	500,000	1/2
R9	150	1/2 ±10%


⊥ IND. CHASSIS GND.

NOTE: C2 USED ON MODEL 5LL ONLY.  
ON MODEL 5L POINT 'A' IS CONNECTED TO CHASSIS

Admiral Radio

SCHEMATIC DIAGRAM  
MODEL 5LL  
MODEL 5L

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

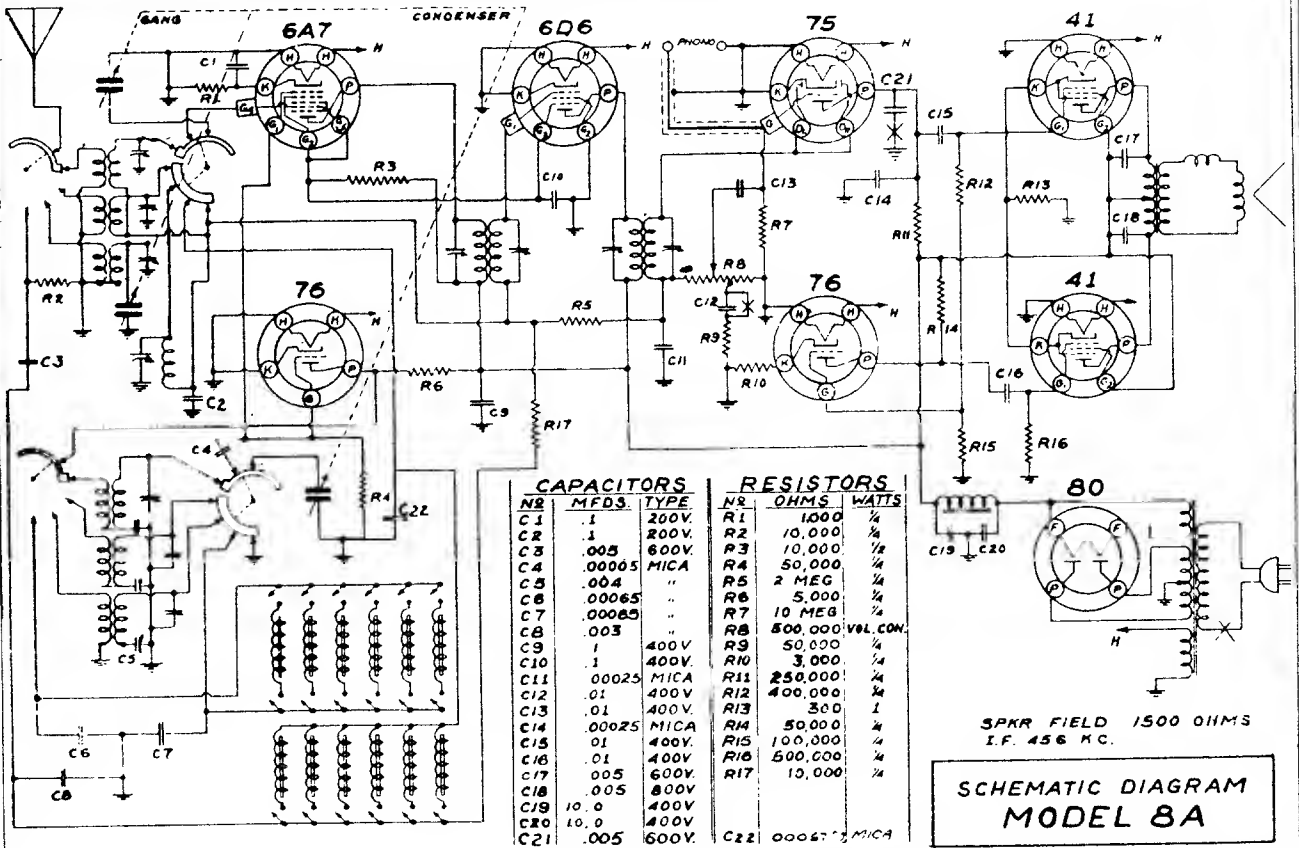

SPKR FIELD 1500 OHMS  
I.F. 456 KC.  
**SCHEMATIC DIAGRAM  
MODEL 8A**

## GENERAL DATA

The alignment of this receiver requires the use of a test oscillator that will cover the frequencies of 456, 600, 1400, 1730, 1800, 4000, 5600, 6000, 16,000 and 18,100 KC and an output meter to be connected across the primary or secondary of the output transformers. If possible, all alignments should be made with the volume control on maximum and the test oscillator output as low as possible, to prevent the AVC from operating and giving false readings.

## CORRECT ALIGNMENT PROCEDURE

The intermediate frequency (I.F.) stage should be aligned properly as the first step. After the I.F. transformers have been properly adjusted and peaked, the Broadcast Band should always be the next procedure, after which, either or both of the Short Wave Bands may be aligned.

## I.F. ALIGNMENT

With the wave switch in the Broadcast Band and the gang condenser set at minimum, adjust the test oscillator to 456 KC and connect the output to the grid of the first detector tube (6A7) through a .05 or .1 mfd. condenser. The ground on the test oscillator can be connected to the chassis ground if the test oscillator is not grounded to one side of the power line. In case one side is connected to ground, connect a large condenser from ground on the test oscillator to ground of the chassis. Align all four I.F. trimmers to peak or maximum reading on the output meter.

## BROADCAST BAND ALIGNMENT

Connect the output of the signal generator to the antenna lead (blue) through a .0002 mfd. mica condenser. Set the gang condenser to minimum and the oscillator to 1730 KC and adjust the "oscillator trimmer" to receive this signal. Make no other adjustments at this frequency. Then set the generator to 1400 KC and tune in this signal by rotating the gang to 1400 on the dial. Adjust the "preselector" and "antenna" trimmer to maximum signal. Set the signal generator to 600 KC and tune in the signal on the receiver. **Note:** approximately the same

sensitivity should be noted at this point as was at 1400 KC. The signal strength may sometimes be improved by padding the circuits. This is done by slowly increasing or decreasing the oscillator padding condenser and, at the same time, continuously tuning back and forth across the signal with the receiver until the maximum reading is obtained on the output meter. This adjustment may seem a little complicated but is the easiest way to adjust the oscillator to the preselector of the R.F. section. Return to 1400 KC and again go over the adjustments of this frequency to be certain that they were not put slightly out of alignment when adjustment was made at 600 KC.

## POLICE BAND ALIGNMENT

The police band is adjusted by first replacing the .0002 dummy with a 400 ohm resistor and setting the generator to 5600 KC. With the gang set at minimum, adjust the "police oscillator trimmer" to receive this signal, then set the signal generator to 4000 KC and adjust "police antenna trimmer" to give maximum output. Next, set the oscillator to 1800 KC and "pad" the circuit of this frequency as described in the instructions for padding the broadcast circuits.

## SHORT WAVE BAND ALIGNMENT



The short wave band is adjusted by setting the generator to 18,100 KC and with the gang at minimum, adjust the "short wave oscillator trimmer" to receive the signal. Set the generator at 16,000 KC, tune in the signal and adjust the "short wave antenna" trimmer to give maximum output. As there is no variable low frequency padding condenser on this band, the sensitivity of the receiver should be checked at 6000 KC to determine whether the circuits are in line at this frequency. Should the receiver lack sensitivity at 6000 KC, the antenna and the oscillator coils, as well as the .004 mica padding condenser, should be tested for defects as sometimes these components become subject to mechanical or electrical injuries, despite their rugged construction and liberal ratings.

Continental Radio & Television Corp., Chicago, Ill.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS


# 19

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

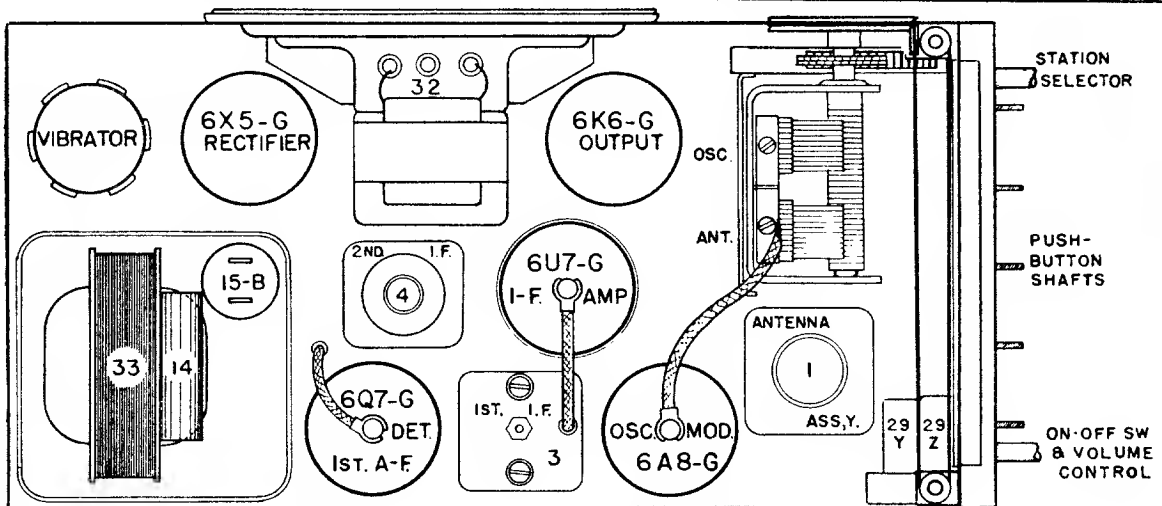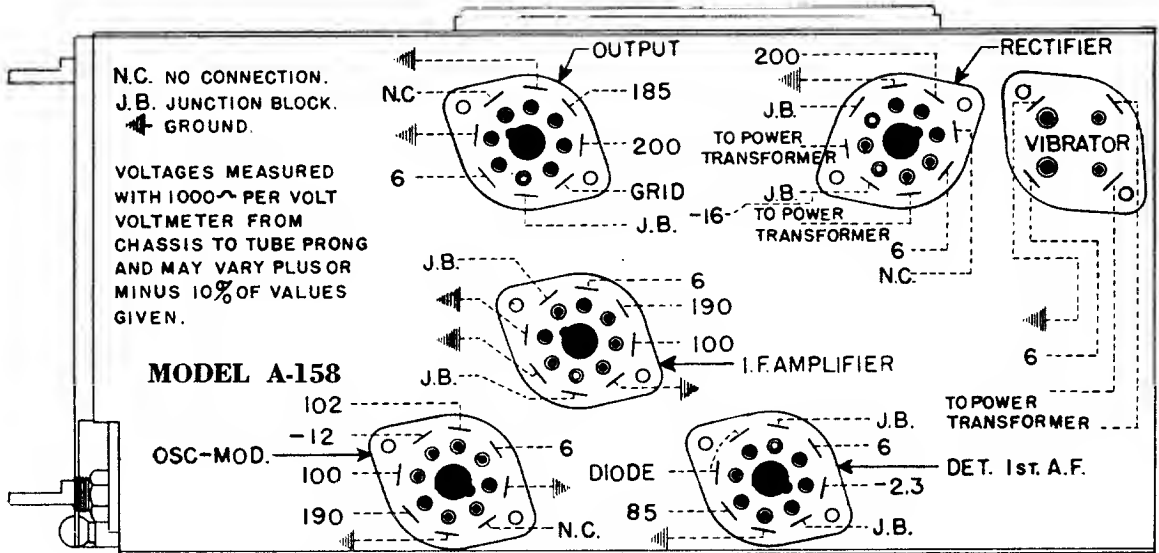

## CROSLEY


Top View A-258

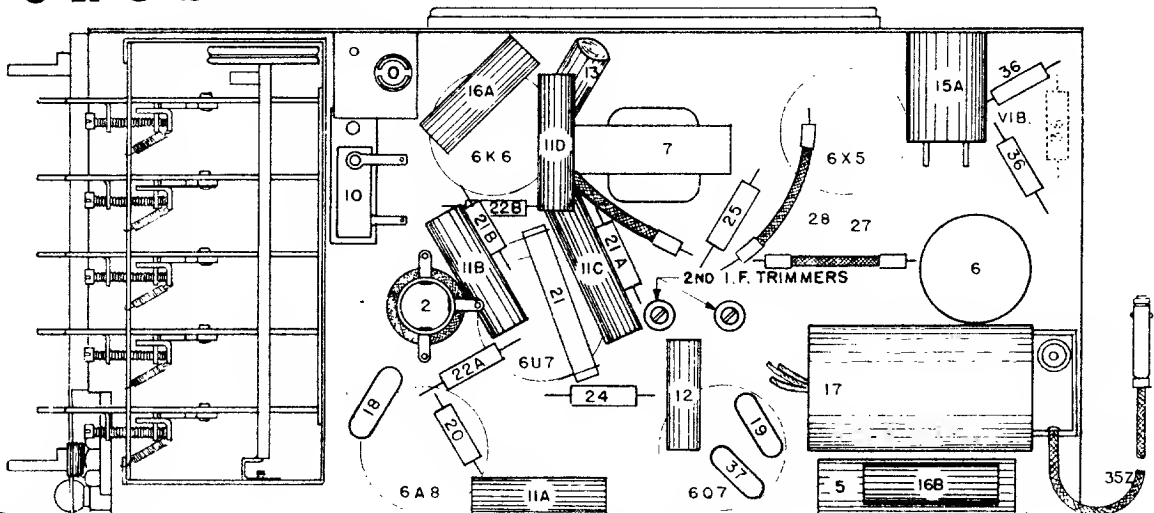


Bottom View A-258

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

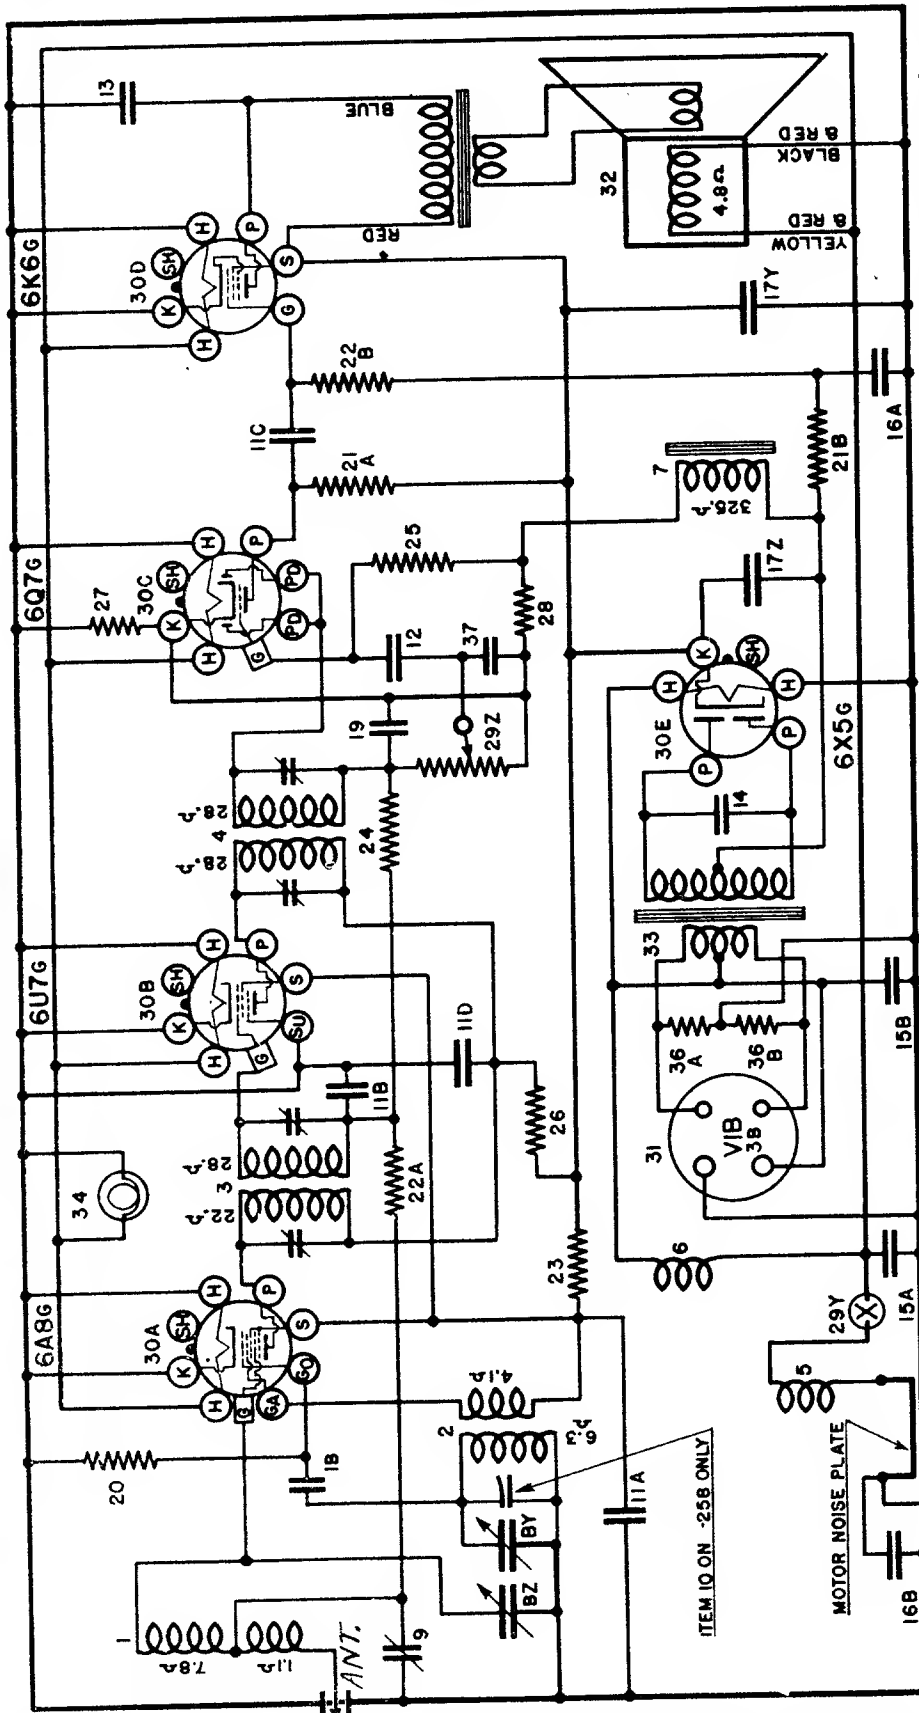

The model A-158 and the model A-258 are the same electrically with the exception of a few minor parts. Mechanically they differ in that the A-258 has Push Button Tuning and the A-158 is manually tuned. When referring to the A-258 Parts List for replacement parts for the A-158 disregard all parts listed between items 7 and 11 and all parts listed under the heading Miscellaneous Mechanical Parts.

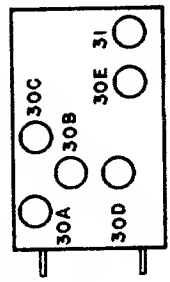

MODEL -158  
MODEL -258  
455 KC. I.F.

**CROSLLEY**

MODEL A-158 AND A-258 (Roamio)

WIRING DIAGRAM—MODEL A-258

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


## PARTS LIST—MODEL A-258

Figures in first column refer to parts in Diagrams.


Item No.	Part No.	Description	Item No.	Part No.	Description
1	G167-32000	Ant. Coil	30	G178-36400	8 Prong Socket
2	G167-32002	Osc. Coil	W	-50176	Tube Shield Half (2 Req.)
3	G185-32004	1st I-F Assy., 455 Kc.	W	-31210	Tube Shield Ring
4	G186-32004	2nd I-F Assy., 455 Kc.	31	G105-28807	Vib. Socket
5	G19-32977	Motor Noise Check	W	-50123A	Vib. Gnd. Clip
6	G27-28067	"A" Filter Choke	32	278-BL-7"U"	Speaker, Mfg. Spec. 5B-122
7	G16-29535	"B" Filter Choke		-45889	Output Trans.
8	G50-33001	2 Section Gang Cond.	33	B	Power Trans.
9	-50054B	Ant. Compensating Cond.	W	-50130	Power Trans. Can
	C	Glass Dial Face	G1	-50631	Dial Light Bulb—6-8 V.
	W	L. H. Dial Mtg. Clip	35Z	G29-32750	"A" Lead—Set to Fuse
	W	R. H. Dial Mtg. Clip	35Y	G27-32750	"A" Lead—Fuse to Ammeter
	W	Dial Mask (Maroon)	36A	-38915	Resistor, 100 Ohm 1/2 W. W. W.
	W	Pointer	36B	-38915	Resistor, 100 Ohm 1/2 W. W. W.
	B	Screw—Dial Clip Mtg.	37	G2-34002	Condenser, .0001 Mf. Molded
	MG23-50550	Dial Mtg. Bracket Assy. (Riveted to Chassis)	38	G10-38000	Vibrator, Interchangeable
	MG28-50550	Manual Drive Shaft Brkt. Assy.		G13-38000	Vibrator
	G8	Pulley and Hub Assy.	W	-32757	Fuse (12 Amp.)
	W	Set Screw—Hub	W	-32776	Fuse Insulator
	-41582	Drive Cord—40 Inches			
	W	Spring—Cord Tension—Large Pulley	MG27-50550		<b>Miscellaneous Mechanical Parts</b>
	W	Spring—Cord Tension—Small Pulley	MG25-50550		Push Button Unit Assy.
	W	Manual Drive Shaft	W	-50542A	Key Assy.
10	G3	Temp. Compensating Cond.	W	-50567	Key Clip (Lock Clamp)
11A	W	Condenser, .05 Mf. 200 V.	W	-50607	3/8" -6x32 Screw (Clamp)
11B	W	Condenser, .05 Mf. 200 V.	W	-50588A	Spring—(Key Return)
11C	W	Condenser, .05 Mf. 200 V.	W	-43882	Adjusting Clip (Heart Shaped)
11D	W	Condenser, .05 Mf. 200 V.	W	-50547	1/4" No. 8 P. K. Screw (Clip Mtg.)
12	W	Condenser, .02 Mf. 160 V.	MG24-50550		Key Plate (Rear Guide)
13	W	Condenser, .01 Mf. 400 V.	W	-50561	Rocker Plate Assy.
14	W	Condenser, .0065 Mf. 1,000 V.	W	-45553B	1/8" -6x40—Fil. H. Screw (Rock Plate Bearing)
15A	W	Condenser, .5 Mf. 120 V.	W	-50551A	Push Button
15B	W	Condenser, .5 Mf. 120 V.	W	-50549	Celluloid Cover
16A	W	Condenser, .1 Mf. 160 V.	D	-50503B	Call Letter Sheet
16B	W	Condenser, .1 Mf. 160 V.	C	-50554A	Case (Rear Half) FS49
17Z	W	Condenser, 4. Mf. 350 V.	W	-50589	Case (Front Half) FS49
17Y	W	Condenser, 4. Mf. 350 V.	W	-50505	Felt (Dial Window)
	W	Cond. Clamp			Knob (2 Req.)
18	G1	Condenser, .00025 Mf. Molded			
19	G3	Condenser, .0005 Mf. Molded			
20	-35600	Resistor, 100,000 Ohm 1/4 W.	W	-38038D	<b>Mounting Parts</b>
21A	-35601	Resistor, 300,000 Ohm 1/4 W.	W	-29754C	Distributor Suppressor
21B	-35601	Resistor, 300,000 Ohm 1/4 W.		-25846	Generator Condenser
22A	-36322	Resistor, 500,000 Ohm 1/4 W.		-6213	3/4" No. 10 P. K. Screw (Set Mtg.)
22B	-36322	Resistor, 500,000 Ohm 1/4 W.		-35065	1/4" -20 Hex. Nut (Brkt. Mtg.)
23	-23616	Resistor, 15,000 Ohm 1 W.	W	-38205	1/4" -20 Screw (Brkt. Mtg.)
24	-35602	Resistor, 1. Megohm 1/4 W.	W	-32783	1/4" Lock Washer (Brkt. Mtg.)
25	-35927	Resistor, 2. Megohm 1/4 W.	W	-50167	Ant. Cable (Accessory)
26	-50641	Resistor, 750 Ohm 1/2 W.	W	-50395	Mtg. Bracket (Set)
27	-50643	Resistor, 60 Ohm 1/2 W.	W	-38935	Ammeter Cond. (Accessory)
28	-50642	Resistor, 40 Ohm 1/2 W.			Case Ground Clip
29Z		Volume Control, 1. Meg.			
29Y	-50526	On-Off Switch			

The Crosley Corporation  
Cincinnati, Ohio


MG27-50550 PUSH BUTTON ASSEMBLY

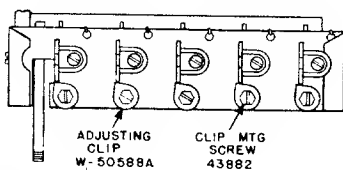

Push Button Assembly

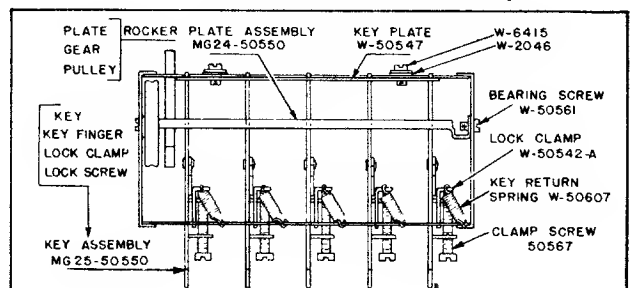


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

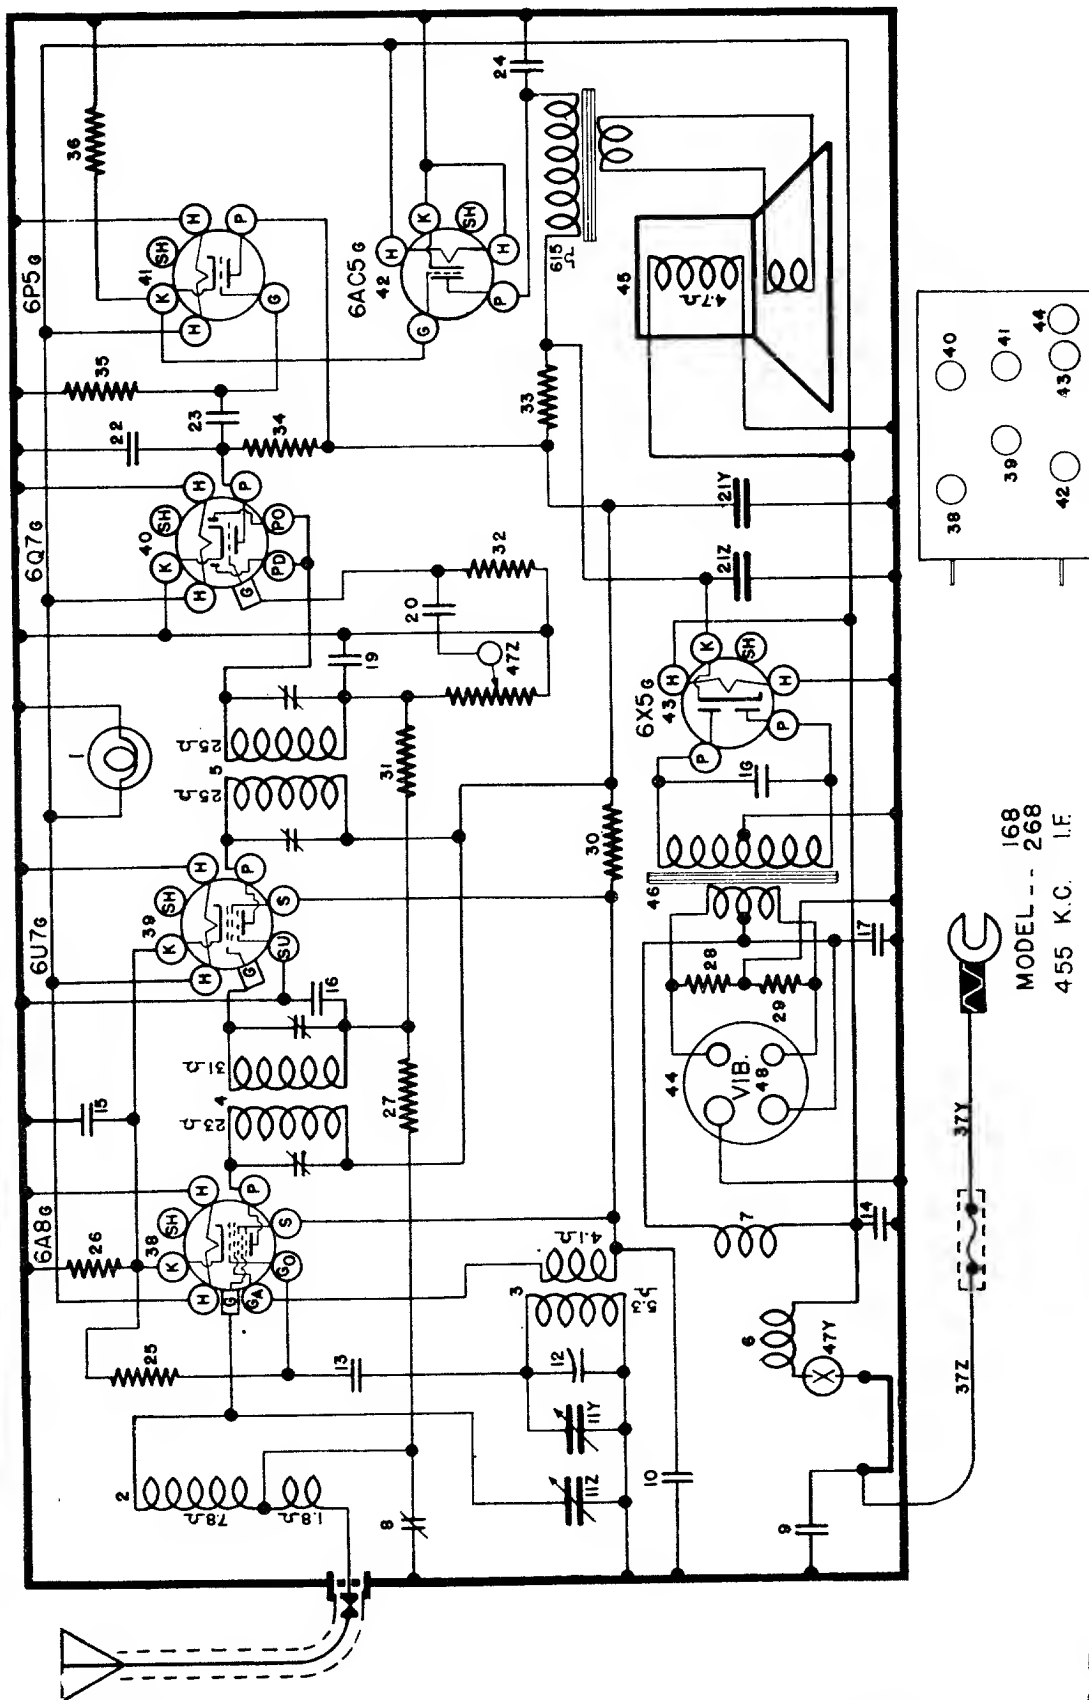

168  
MODEL -- 268  
455 K.C. I.F.

WIRING DIAGRAM—MODELS A-168 and A-268

The Crosley Corporation  
Cincinnati, Ohio

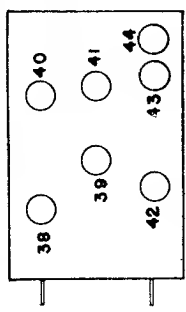

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PARTS LIST—MODELS A-168 and A-268

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —43567	Dial Light Bulb, 6-8 V.	44	G105—28807	Socket Vibrator
2	G175—32000	Antenna Coil	W —50174	Tube Shield Base	
3	G176—32002	Oscillator Coil	W —50176	Tube Shield Half	
4	G191—32004	1st I-F. Trans., 455 Kc.	W —31210	Tube Shield Ring	
5	G196—32004	2nd I-F. Trans., 455 Kc.	45	278BL7"U"	Speaker—Mfg. Spec. No. 5-B-122
6	G19 —32977	Motor Noise Choke	—45889	Output Transformer	
7	G29 —28067	"A" Filter Choke	278BL7"B"	Speaker—Mfg. Spec. No. 55-W-1	
8	—38998B	Ant. Comp. Cond.	—45721	Output Transformer	
	—50049	Nut—Comp. Cond. Mtg.	46	B —50644A	Power Transformer
9	W —35936	Condenser, .05 Mf. 200 V.	W —50680	Shield—P. T.	
10	W —32380	Condenser, .05 Mf. 200 V.	47Z	—50526	Volume Control (1 Meg.)
11	G50 —33001	2 Section Gang Condenser	47Y	—50526	On-Off Switch
	C —50688	Dial (Glass) A-168 only	48	G10 —38000	Vibrator Interchangeable
	W —50517B	Dial Mask (Maroon) A-168 only	G13 —38000	Vibrator	
	W —50518A	Pointer—A-168 only			
	W —50758	Dial (Glass) A-268 only			
	W —50757	Dial Mask (Blue) A-268 only			
	W —50759	Pointer—A-268 only			
	W —50560	R. H. (Dial Mtg.) Clip			
	W —50545	L. H. (Dial Mtg.) Clip			
	B —78	Screws—Clip Mtg.			
	W —2045	Washers—Clip Mtg.			
	W —50524D	Drive Shaft—Manual			
	W —50325A	Washer—Shaft Retaining			
	MG28—50675	Shaft Brkt. Assm. (Rear Bearing)			
	G8 —43564	Pulley and Hub. Assm.			
	W —50590	Spring (Tension—22" Cord)			
	G6 —41582	Drive Cord—22-Inch			
	W —43561	Spring (Tension—18" Cord)			
	G5 —41582	Drive Cord—18-Inch			
	MG23—50675	Dial Brkt. Assm. Riveted to Chassis			
12	G3 —50369	Temp. Comp. Cond. (Bi-metal)			
14	G1 —34002	Condenser, .00025 Mf. Molded			
15	G3 —34002	Condenser, .0005 Mf. Molded			
16	W —50105	Condenser, .1 Mf. 160 V.			
17	W —32380	Condenser, .05 Mf. 200 V.			
18	W —50682A	Condenser, .5 Mf. 120 V.			
19	W —50203	Condenser, .0065 Mf. 1,000 V.			
20	G3 —34002	Condenser, .0005 Mf. Molded			
21Z	W —45810B	Condenser, .006 Mf. 160 V.			
21Y	W —50674	Condenser, 10. Mf. 350 V.			
22	G1 —34002	Condenser, .00025 Mf. Molded			
23	W —37226	Condenser, .02 Mf. 160 V.			
24	W —35758	Condenser, .008 Mf. 400 V.			
25	—35600	Resistor, 100,000 Ohms ¼W. Ins.			
26	—50699	Resistor, 200 Ohms ½W. W. W.			
27	—36322	Resistor, 500,000 Ohms ¼W. Ins.			
28	—38915	Resistor, 100 Ohms ½W. W. W.			
29	—38915	Resistor, 100 Ohms ½W. W. W.			
30	—23616	Resistor, 15,000 Ohms 1 W. Carbon			
31	—35602	Resistor, 1 Meg. ¼W. Ins.			
32	—50671	Resistor, 15 Meg. ¼W. Ins.			
33	—45388	Resistor, 1,400 Ohms 1½W. W. W.			
34	—35601	Resistor, 300,000 Ohms ¼W. Ins.			
35	—38623	Resistor, 750,000 Ohms ¼W. Ins.			
36	—40643	Resistor, 25,000 Ohms ¼W. Ins.			
37Z	G29 —32750	"A" Lead, Set to Fuse			
37Y	G27 —32750	"A" Lead, Fuse to Ammeter			

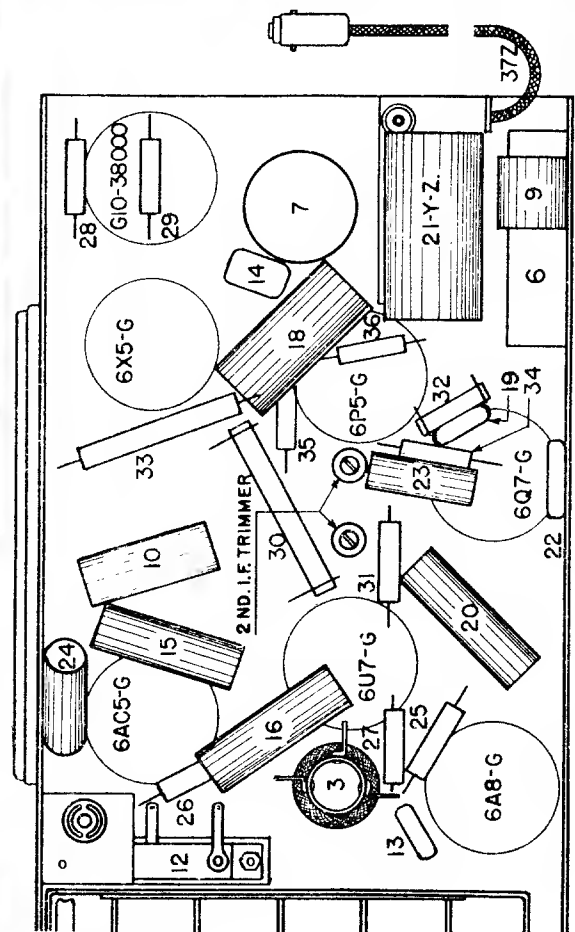


Fig. 3. Bottom View A-168 and A-268

### TUBE SOCKET VOLTAGE READINGS


Tube	Function	H	P	S	Su	K	Ga	Go	G
6A8-G	Oscillator-Modulator	6.0	220	100	—	3.5	100	—	—
6U7-G	I-F. Amplifier	6.0	220	100	—	3.5	—	—	—
6Q7-G	Det., A. V. C. 1st A-F. Amplifier	6.0	60	—	—	—	—	—	—
6P5-G	2nd A-F. Amplifier	6.0	200	—	—	11	—	—	—
6AC5-G	Output	6.0	225	—	—	—	—	—	11
6X5-G	Rectifier	6.0	—	—	—	240	—	—	—

Power Output (max.) 6 Watts—approx.

Battery Drain 6.5 Amperes—approx.

It will be noted that certain terminals on the sockets are used as junction blocks.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

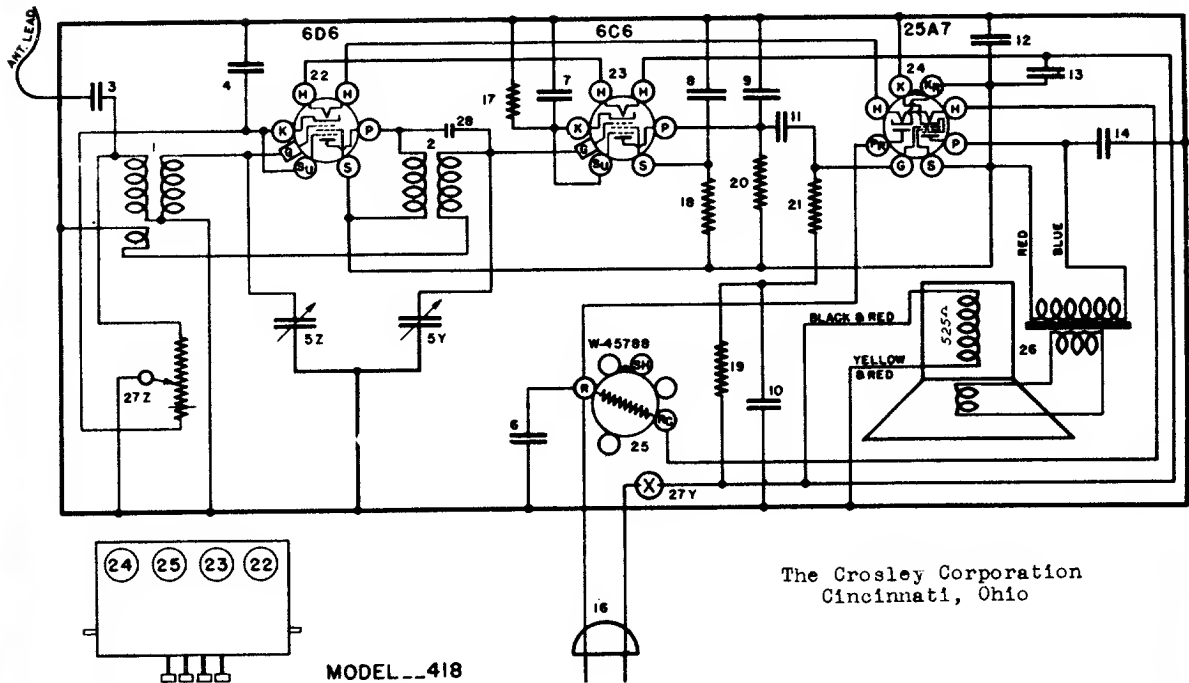


WIRING DIAGRAM—MODEL 418

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	G173—32000	Antenna Coil		—46045	Output Transformer
2	G102—32001	Oscillator Coil		W —45900A	Speaker Mtg. Brkt.
3	W —45780B	Condenser, .02 Mf. 160 Volt	27Z	—45786	Volume Control (40,000
4	W —45780B	Condenser, .02 Mf. 160 Volt	27Y		Line Switch
5Z					V. C. Mtg. Brkt.
5Y	G53 —33001	2 Section Gang Condenser	28	W —45789A	Spring (Key Return)
6	W —45782B	Condenser, .05 Mf. 400 Volt		G3 —50640	Push Button Unit
7	W —45781B	Condenser, .25 Mf. 160 Volt		G27 —45683	Rocker Plate Assy.
8	W —45780B	Condenser, .02 Mf. 160 Volt		G26 —45683	Key Assy.
9	G2 —34002	Condenser, .0001 Mf. Molded		W —50542C	Key Clip (Lock Clamp)
10	W —45781B	Condenser, .25 Mf. 160 Volt		—45717	Adjusting Screw
11	W —45780B	Condenser, .02 Mf. 160 Volt		W —50607B	Spring (Key Return)
12	W —45783	Condenser, 16 Mf. 150 Volt		W —50561	Bearing Screw (Rocker
13	W —45783	Condenser, 16 Mf. 150 Volt		W —50547	Key Plate (Rear Guide)
14	W —45780B	Condenser, .02 Mf. 160 Volt		W —45788	Ballast Tube
15	—None			W —46259	Cabinet Assy. 8BB (Brown)
16	B —45784	Power Cord & Plug		—45828B	Back Cabinet 8BB (Brown)
	W —45902	Clamp—Power Cord		W —45930C	Rubber Foot (Bottom)
17	—24990	Resistor, 25,000 Ohm 1/3 W.		W —45931	Rubber Foot (Screw Type)
18	—37583	Resistor, 2.5 Megohm 1/3 W.			(Back)
19	—34018	Resistor, 200,000 Ohm 1/3 W.		W —45852	Baffle Board
20	—23785	Resistor, 500,000 Ohm 1/3 W.		W —45853	Grille Cloth
21	—21455	Resistor, 300,000 Ohm 1/3 W.		—45553B	Push Button (Brown)
22	G21 —28807	Socket, 6 Prong		—45822	Dial Knob (Brown)
23	G21 —28807	Socket, 6 Prong		—45825A	Vol. Cont. Knob (Brown)
24	G178—36400	Socket, 8 Prong (Octal)		—50549	Station Call Letter List
25	G178—36400	Socket, 8 Prong (Octal)		W —50551A	Celluloid Protector (Cover)
	W —34175	Tube Shield Half (Slotted)			
	W —34174	Tube Shield Half			
	W —31210	Ring—Tube Shield			
26	282-BL-4	Speaker Mfg. Spec.			



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

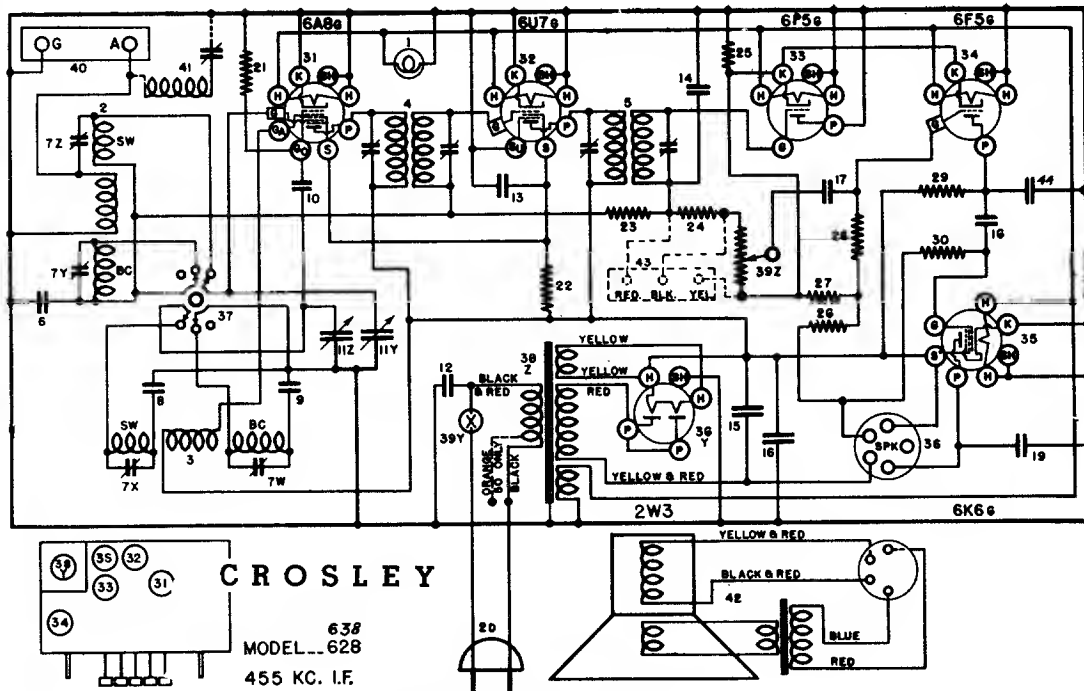


WIRING DIAGRAM—MODEL 628—638—5628

Figures in first column refer to parts in Diagrams.					
Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —37922	Dial Light 6-8 Volt		—45940	Power Trans., 50 Cycle, 220 V.
2	G12 —45398	Dial Light Socket	39Z	—45864	{ Vol. Cont., 1 Meg. (628-5626)
3	G174 —32000	Antenna Coil, B-C and S-W.	39Y	—46314	{ Line Switch
4	G175 —32002	Oscillator Coil, B-C and S-W.	39Z	—46121	{ Vol. Cont., 1 Meg. (636)
5	G187 —32004	1st I-F Assy., 455 Kc.	39Y	—46121	{ Line Switch
6	G188 —32004	2nd I-F Assy., 455 Kc.	40	G1 —28719	A-G Terminal Assy.
7	W —38541	Condenser, .02 Mf., 160 V.	41	G193 —32004	456 Kc. Wave Trap
8	W —41247A	4 Section Trimmer Assy.	42	279-BP-12"U"	Speaker
9	G13 —34005	Condenser, .0014 Mf., Molded	43	—46121	Output Transformer
10	G16 —34002	Condenser, .0004 Mf., Molded	44	G41 —28719	Phono Terminal Assy.
11	G5 —34002	Condenser, .00005 Mf., Molded		G7 —34002	Condenser, .0004 Mf., Molded
	G55 —33001	2 Section Gang Condenser		G3 —45683	Push Button Unit (628-5628)
	C —45747	Glass Dial Face (628-638)		G11 —45683	Push Button Unit (638)
	W —46872	Glass Dial Face (5628)		G32 —45683	Riveted Key & Toggle (626-5626)
	W —46397	Dial Hand (Pointer)		G26 —45683	Riveted Key & Toggle (638)
	B —45743B	Dial Support Bracket		W —50542C	Key Lock Clamp
	W —45984	L. H. Dial Mtg. Clip		—48717	1 7/16 6x32 Lock Clamp Screw
	W —46037A	R. H. Dial Mtg. Clip		W —50607B	Spring Key Return
	W —45766C	Dial Hand Guide		G22 —45683	Rockers & Gear Segment Assy.
	—45885	Felt Strip		W —50561	1/2 6x40 Screw (Rocker Plate Bearing)
	—46056	Manual Drive Shaft (628-5626)		W —50586B	Adjusting Clip
	W —43542B	Manual Drive Shaft (636)		—45242	Rubber Foot (626-5626)
	G12 —43564	Mounting Bracket Drive Shaft			
	G2 —41682	Pulley & Hub Assy.			
	W —50607B	Drive Cord			
	W —46290	Cord Tension Spring			
	W —30805	Drive Cord Clamp			
12	W —28621	Condenser, .01 Mf., 400 V.		—8AA	Cabinet (Brown)
13	W —28621	Condenser, .02 Mf., 200 V.	W	—43552	Clamp, Speaker Plug
14	G1 —34002	Condenser, .00025 Mf., Molded		—45957	Knob, Band Switch
15	W —44012	Condenser 18 Mf., 250 V., Elec.		—45771	Knob, V. C. & Tuning
16	W —45968	Condenser 18 Mf., 250 V., Elec.		—50841	Station Call List
17	W —28619	Condenser, .008 Mf., 200 V.	W	—45553B	Push Button
18	W —28621	Condenser, .02 Mf., 200 V.		—80551A	Celluloid Call Letter Cover
19	W —34847	Condenser, .006 Mf., 400 V.			
20	B —45769	Power Cord and Plug			
21	—38761	Resistor, 40,000 Ohm, 1/4 W.		—8G	Cabinet (Wood Has Inlays)
22	—33390	Resistor, 30,000 Ohm, 1/3 W.		—8K	Cabinet (Wood)
23	—28577	Resistor, 3 Megohm, 1/3 W.		—48399C	Escutcheon
24	—21975	Resistor, 100,000 Ohm, 1/3 W.	D	—30	Screws, Escutcheon Mtg.
25	WAS—A	1/2 W. Resistor from 6P5 Cathode to Gnd. (Deleted)		—46407	Knob, Band Switch
26	—37564	Resistor, 11 Megohm, 1/3 W.		—45406	Knob, V. C. & Tuning
27	WAS—A	1/2 W. Resistor from 6P5 Cathode to Junction of Items 28 and 28 (Deleted)	W	—50841	Station Call List
28	W —21965	Resistor, 375 Ohm, 1 W (was 275 Ohm)		—50551A	Celluloid Cover
29	—21455	Resistor, 300,000 Ohm, 1/3 W.		—46417	Push Button
30	—23785	Resistor, 500,000 Ohm, 1/3 W.			
31	G178 —36400	Socket, 6 Prong			
32	G178 —36400	Socket, 6 Prong			
33	G178 —36400	Socket, 6 Prong	W	—50551A	Call Letter Cover
34	G178 —36400	Socket, 6 Prong		—50617	Push Button
35	G178 —38400	Socket, 6 Prong			
36	W —40911	Tube Shield		—45910	Instructions (626)
37	G103 —28807	Socket, Speaker Plug		—46326	Instructions (636)
	—45901	Band Switch		—48697	Instructions (5628)

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS



WIRING DIAGRAM—MODEL 428

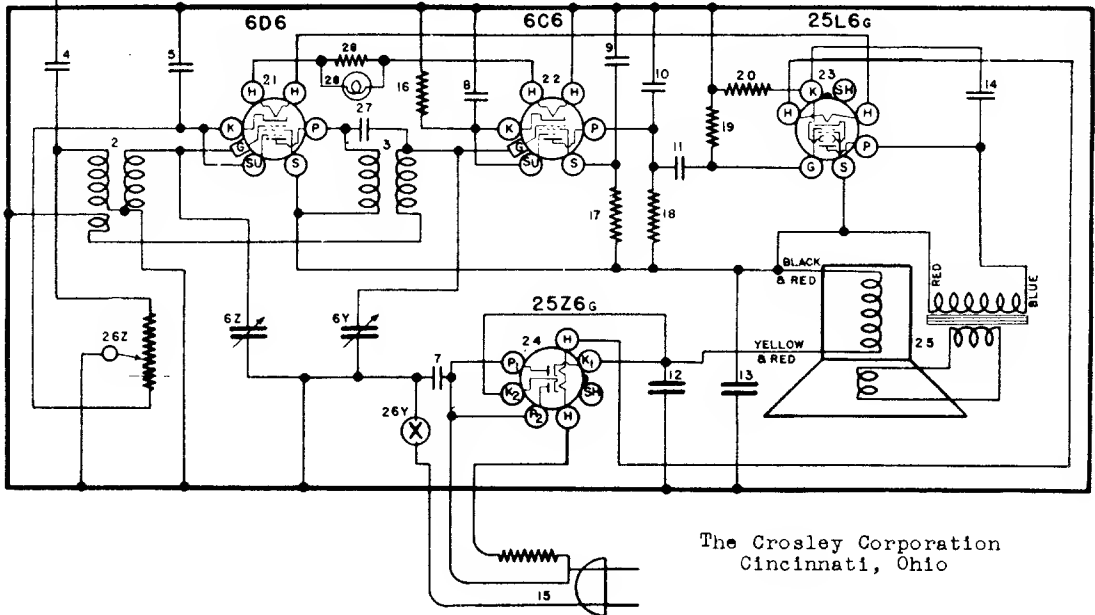


The Crosley Corporation  
Cincinnati, Ohio

Figures in first column refer to parts in Diagrams.


Item No.	Part No.	Description	Item No.	Part No.	Description																														
1	W —45577	Antenna Roll	27	G3 —50640	Condenser Assembly																														
2	G180—32000	Antenna Coil	28	W —44337	Dial Light, 6-8 Volt																														
3	G104—32001	R. F. Coil		W —40570	Dial Light Shield																														
4	W —45780B	Condenser, .02 Mf. 160 V.		G6 —27134	Dial Light Socket																														
5		Condenser, .02 Mf. 160 V.	29	W —44396	Resistor, 40 Ohms 3½W. Flex.																														
6Z	G53 —33001	2 Section Gang Condenser	<p style="text-align: center;"><b>TUBE SOCKET VOLTAGE READINGS</b></p> <table border="1"> <thead> <tr> <th>Tube</th> <th>H</th> <th>P</th> <th>S</th> <th>K</th> <th>Su</th> </tr> </thead> <tbody> <tr> <td>6D6</td> <td>6.3*</td> <td>97</td> <td>98</td> <td>2.5-25</td> <td>as</td> </tr> <tr> <td>6C6</td> <td>6.3*</td> <td>20</td> <td>10</td> <td>7</td> <td></td> </tr> <tr> <td>25L6</td> <td>25*</td> <td>85</td> <td>98</td> <td>6</td> <td></td> </tr> <tr> <td>25Z6</td> <td>25*</td> <td>117*</td> <td></td> <td>126</td> <td></td> </tr> </tbody> </table> <p>Readings taken with a 1000 ohm per volt meter. Volume full on. Readings between terminals indicated and chassis. Values marked with a * are A.C.</p>			Tube	H	P	S	K	Su	6D6	6.3*	97	98	2.5-25	as	6C6	6.3*	20	10	7		25L6	25*	85	98	6		25Z6	25*	117*		126	
Tube						H	P	S	K	Su																									
6D6	6.3*	97				98	2.5-25	as																											
6C6	6.3*	20				10	7																												
25L6	25*	85				98	6																												
25Z6	25*	117*					126																												
7	W —45782B	Condenser, .05 Mf. 400 V.																																	
8	W —45781B	Condenser, .25 Mf. 160 V.																																	
9	W —45780B	Condenser, .02 Mf. 160 V.																																	
10	G2 —34002	Condenser, .0001 Molded																																	
11	W —45780B	Condenser, .02 Mf. 160 V.																																	
12	W —45783	Condenser, 16 Mf. 150 V. Elect.																																	
13	W —45783	Condenser, 16 Mf. 150 V. Elect.																																	
14	W —45817A	Condenser, .05 Mf. 160 V.																																	
15	B —46114	Power Cord (165 Ohm 15W Lead)																																	
	W —45902	Cord Clamp																																	
16	—24990	Resistor, 25,000 Ohms ½W.																																	
17	—37583	Resistor, 2.5 Meg Ohms ½W.																																	
18	—23785	Resistor, 500,000 Ohms ½W.																																	
19	—23785	Resistor, 500,000 Ohms ½W.																																	
20	W —45965	Resistor, 110 Ohms ½W. Flex.																																	
21	G21 —28807	6 Prong Socket																																	
22	G21 —28807	6 Prong Socket																																	
23	G178—36400	8 Prong Socket																																	
24	G178—36400	8 Prong Socket																																	
	W —34175	Tube Shield Half (Slotted)																																	
	W —34174	Tube Shield Half (Plain)																																	
	W —31210	Tube Shield Ring																																	
25	281-BL-5-U	Speaker Spec. 5-B-130																																	
	W —45900A	Speaker Mtg. Bracket																																	
26Z	—45786	Volume Control, 40,000 Ohms																																	
26Y		On-Off Switch																																	

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

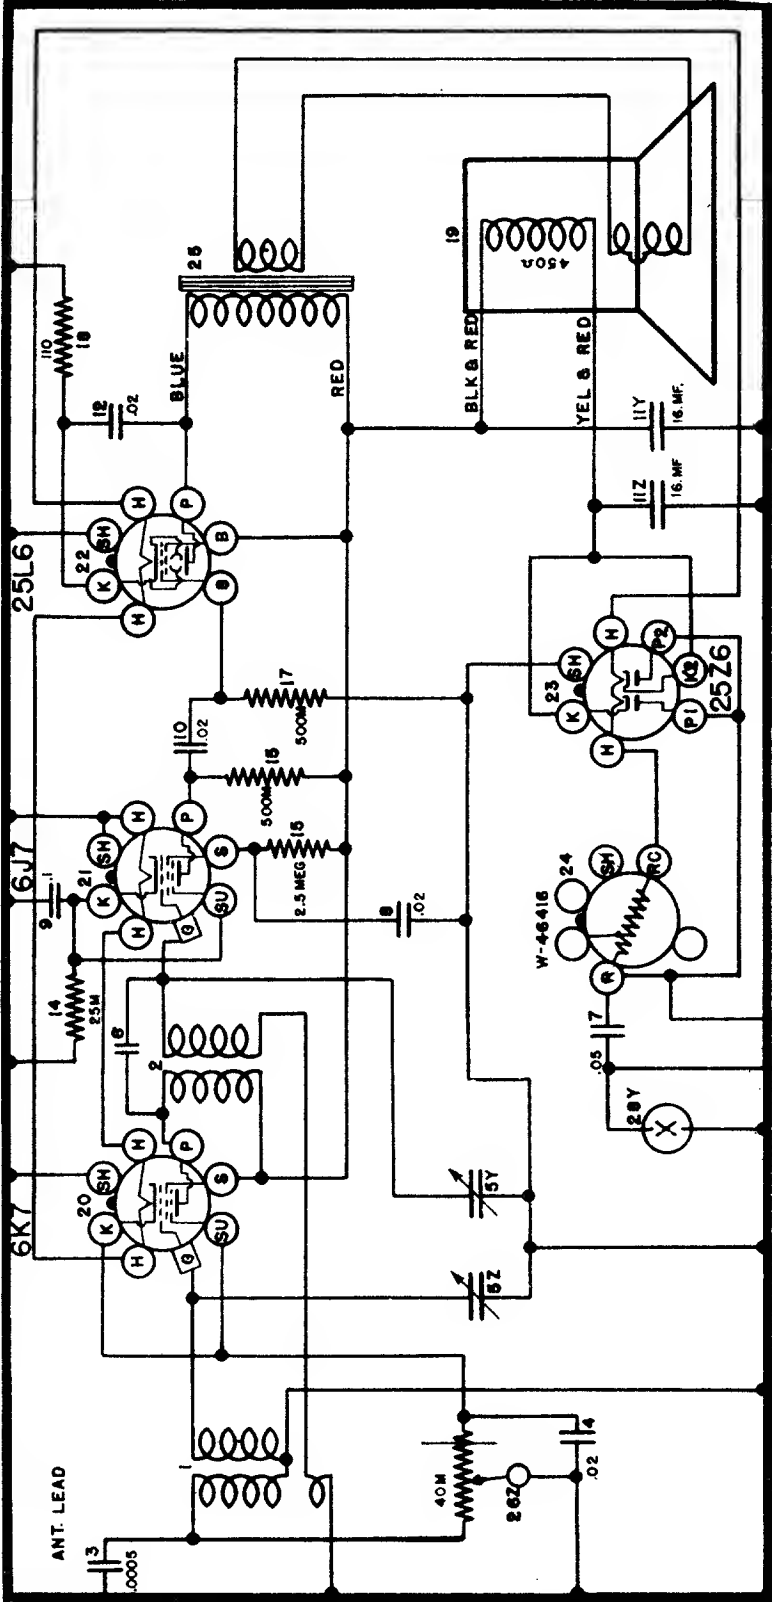

Item No.	Part No.	Description
1	G182-32000	Antenna Coil
2	G102-32001	R-F. Coil
3	G3-34002	Condenser, .0005 Mf. Molded
4	W-45708B	Condenser, .02 Mf. 160 V.
5	G60-33001	2 Section Gang Condenser
6	50640	Twisted Lead—Cap. Coupling
7	45782B	Condenser, .05 Mf. 120 V.
8	45780B	Condenser, .02 Mf. 160 V.
9	W-50105	Condenser, 1 Mf. 160 V.
10	W-45708B	Condenser, .02 Mf. 160 V.
11Z	W-46398	Condenser, 16 Mf. 125 V.
11Y	W-45780B	Condenser, 16 Mf. 125 V.
12	W-24990	Power Cord and Plug
13	W-37583	Resistor, 25,000 Ohm $\frac{3}{8}$ W.
14	W-23785	Resistor, 2.5 Megohm $\frac{3}{8}$ W.
15	W-23785	Resistor, 500,000 Ohm $\frac{3}{8}$ W.
16	W-23785	Resistor, 500,000 Ohm $\frac{3}{8}$ W.
17	W-23785	Resistor, 500,000 Ohm $\frac{3}{8}$ W.
18	W-45965	Resistor, 110 Ohm $\frac{1}{2}$ W.


19	284-BL-4" "B"	Speaker—Spec.
	—46691	Field Coil—450 Ohm
	284-BL-4" "H"	Speaker—Spec.
	—46901	Field Coil—450 Ohm
20 to 24	G178-36400	Socket—8 Prong Octal
	W-46477	Tube Shield
25	G25-29535	Output Transformer
26Z	—46411	Volume Control—
26Y	—46411	Line Switch—

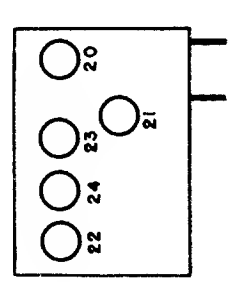

**WIRING DIAGRAM—**

**MODEL 568**


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

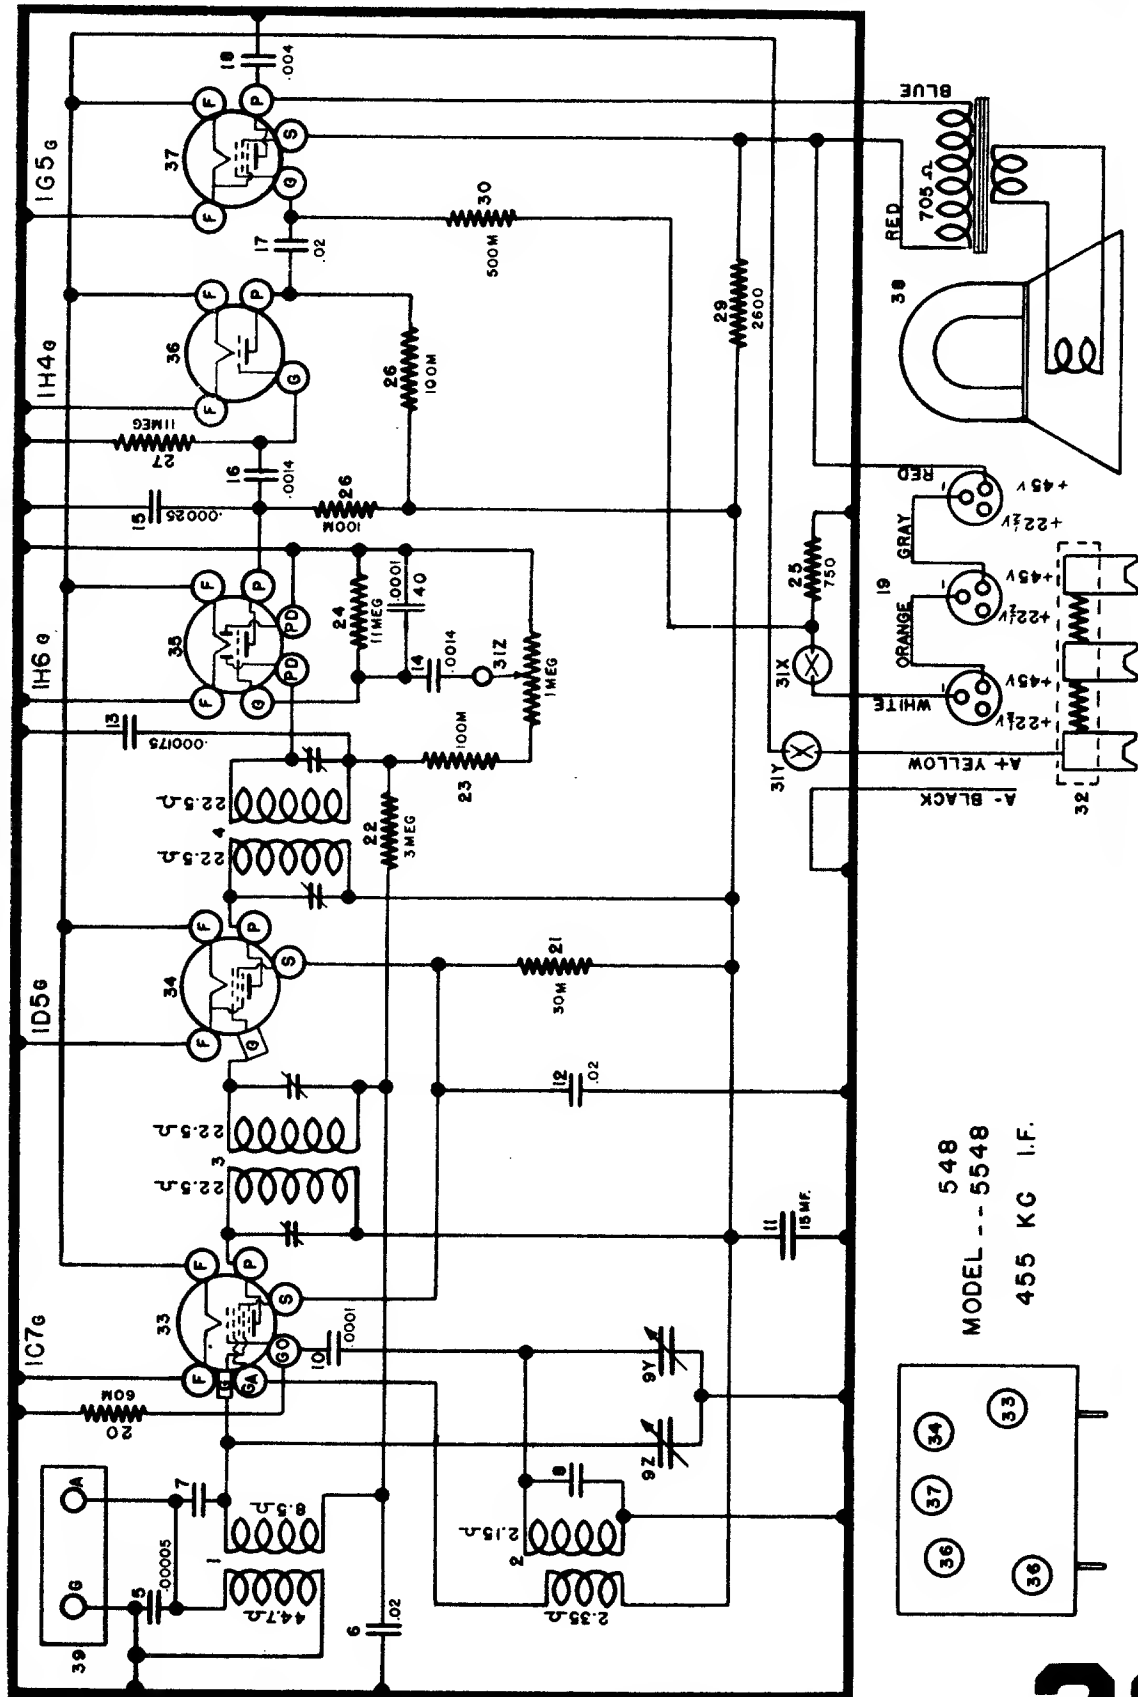

WIRING DIAGRAM MODELS 548, 5548

The Crosley Corporation  
Cincinnati, Ohio

548  
MODEL -- 5548  
455 KC I.F.

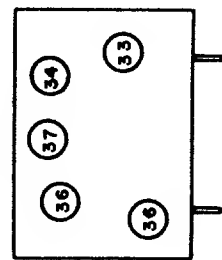


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PARTS LIST—MODELS 548 & 5548

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	G176—32000	Antenna Coil		W —40911	Tube Shield
2	G177—32002	Oscillator Coil	38	274PL18"H"	Speaker, Spec. S-4504 AMD5
3	G194—32004	1st I. F. Transformer		—46800	Speaker Cone Assembly
4	G195—32004	2nd I. F. Transformer		—46802	Output Transformer
5	G5 —34002	Condenser, .00005 Mf. Molded		—46803	Cardboard Ring
6	W —28621	Condenser, .02 Mf. 200 V. Paper	39	G1 —26719	Terminal (A-G)
7	G5 —50640	Condenser (Capacity Coupling) Ant.	40	G2 —34002	Condenser, .0001 Mf. Molded
8	G3 —50640	Condenser (Capacity Coupling) Osc.			
9Z	G52 —33001	2 Sect. Condenser (Antenna Oscillator)			
9Y					
	W —23877	Set Screw (For Pulley-Hub Assembly)			
	G12 —43564	Pulley and Hub Assembly			
	MG14—45894	Riveted Dial Support Bracket, R. H.			
	MG16—46000	Riveted Dial Support Bracket, L. H.			
	C —46042	Dial Glass			
	W —45984	Dial Glass Clip, L. H.			
	W —45985	Dial Glass Clip, R. H.			
	W —46397	Dial Pointer (White)			
	W —46037	Dial Hand Guide			
	W —45742B	Dial Glass Cushion			
	B —45743B	Dial Support			
	—46056	Drive Shaft (5548)			
	—45865	Drive Shaft (548)			
	W —43542B	Drive Shaft Bracket			
	G2 —41582	Drive Cord (44 Inches)			
	W —46290	Cord Clamp			
	W —46087	Drive Cord Spring			
10	G2 —34002	Condenser, .0001 Mf. Molded			
11	W —45968	Condenser, 15 Mf. 250 V. Elect.			
12	W —28621	Condenser, .02 Mf. 200 V. Paper			
13	G11 —34002	Condenser, .000175 Mf. Molded			
14	W —41461	Condenser, .0014 Mf. 200 V. Paper			
15	G1 —34002	Condenser, .00025 Mf. Molded			
16	W —41461	Condenser, .0014 Mf. 200 V. Paper			
17	W —28621	Condenser, .02 Mf. 200 V. Paper			
18	W —28904	Condenser, .004 Mf. 200 V. Paper			
19	C —46014	Battery Cable, Model 548			
19	C —46072A	Battery Cable, Model 5548			
20	—21237A	Resistor, 60,000 Ohms $\frac{1}{3}$ W. Carbon			
21	—33390	Resistor, 30,000 Ohms $\frac{1}{3}$ W. Carbon			
22	—26577	Resistor, 3 Megohms $\frac{1}{3}$ W. Carbon			
23	—21875	Resistor, 100,000 Ohms $\frac{1}{3}$ W. Carbon			
24	—37584	Resistor, 11 Megohms $\frac{1}{3}$ W. Carbon			
25	W —22514	Resistor, 750 Ohms $\frac{1}{2}$ W. Flex.			
26	—21875	Resistor, 100,000 Ohms $\frac{1}{3}$ W. Carbon			
27	—37584	Resistor, 11 Megohms $\frac{1}{3}$ W. Carbon			
28	—21875	Resistor, 100,000 Ohms $\frac{1}{3}$ W. Carbon			
29	W —30960	Resistor, 2,600 Ohms $1\frac{1}{2}$ W. Flex.			
30	—23785	Resistor, 500,000 Ohms $\frac{1}{3}$ W. Carbon			
31Z	—45996A	Volume Control			
31Y		Switch "A" Supply Model 548			
31X	—46057A	Switch "B" Supply			
31Z		Volume Control			
31Y	—46057A	Switch "A" Supply Model 5548			
31X		Switch "B" Supply			
32	W —41995A	Resistance Strip, 1.83 Ohms Tap at 1.1 Ohms			

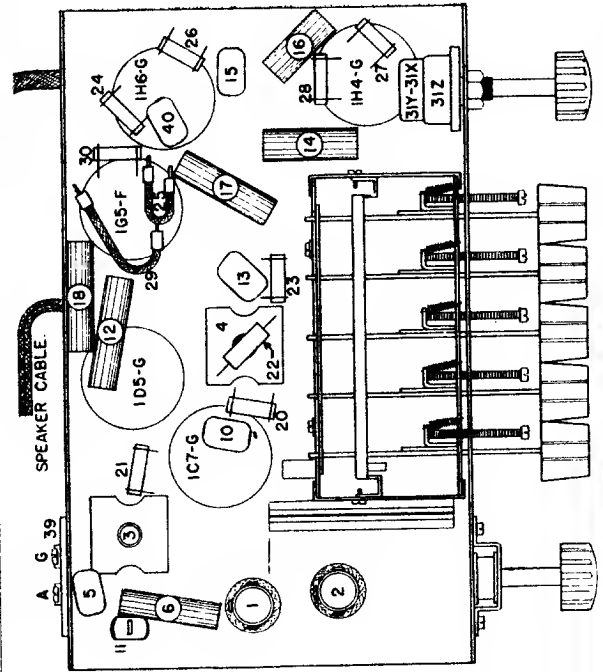

Bottom View Model 548

### TUBE SOCKET VOLTAGE READINGS


Tube	Function	H	P	S	G	Ga	Go
1C7-G	Oscillator-Modulator	2.0	120	40	0	120	-3
1D5-G	I-F Amplifier	2.0	120	40	0	—	—
1H6-G	Detector & 1st A-F Amp.	2.0	50	—	0	—	—
1H4-G	2nd A-F Amplifier	2.0	50	—	0	—	—
1G5-G	Output	2.0	123	129	-6	—	—

Power Output approximately .750 Watt.

"A" Battery Drain approximately .42 Ampere at 2 Volts.


"B" Battery Drain approximately 18 Milliamperes at 135 Volts.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

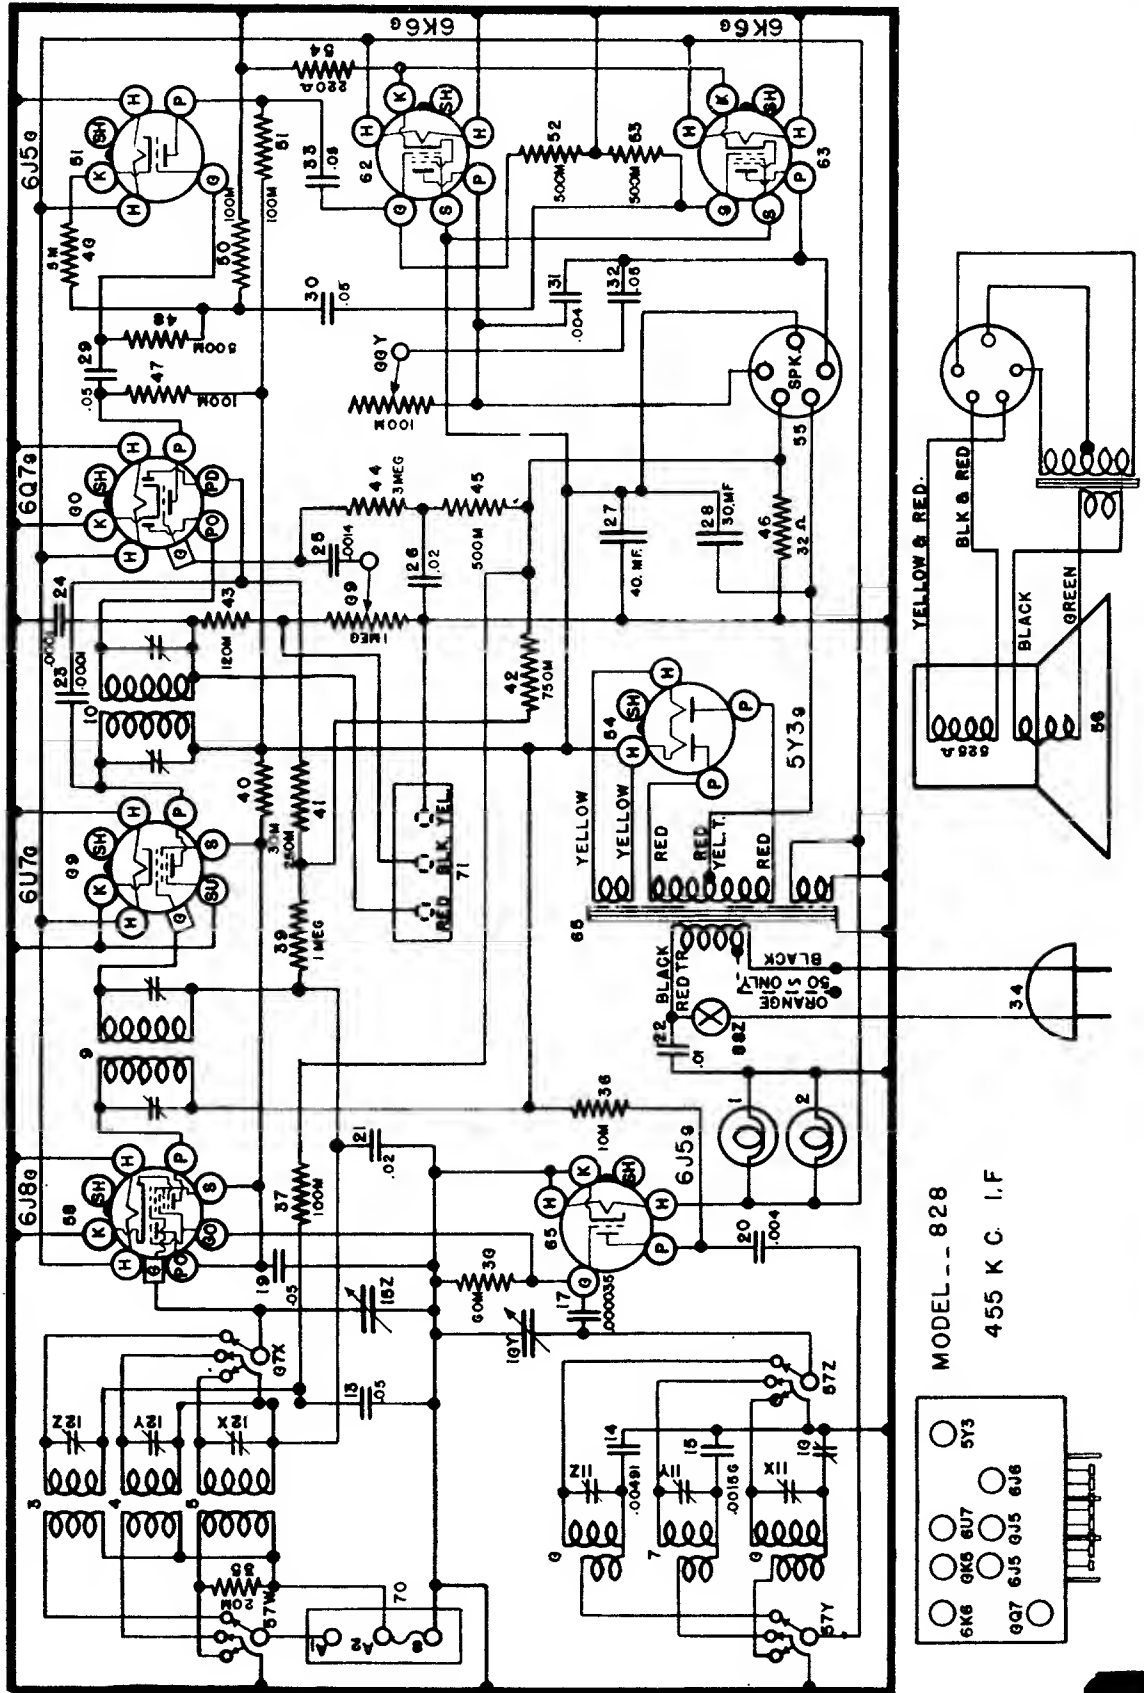

WIRING DIAGRAM—MODEL 828

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

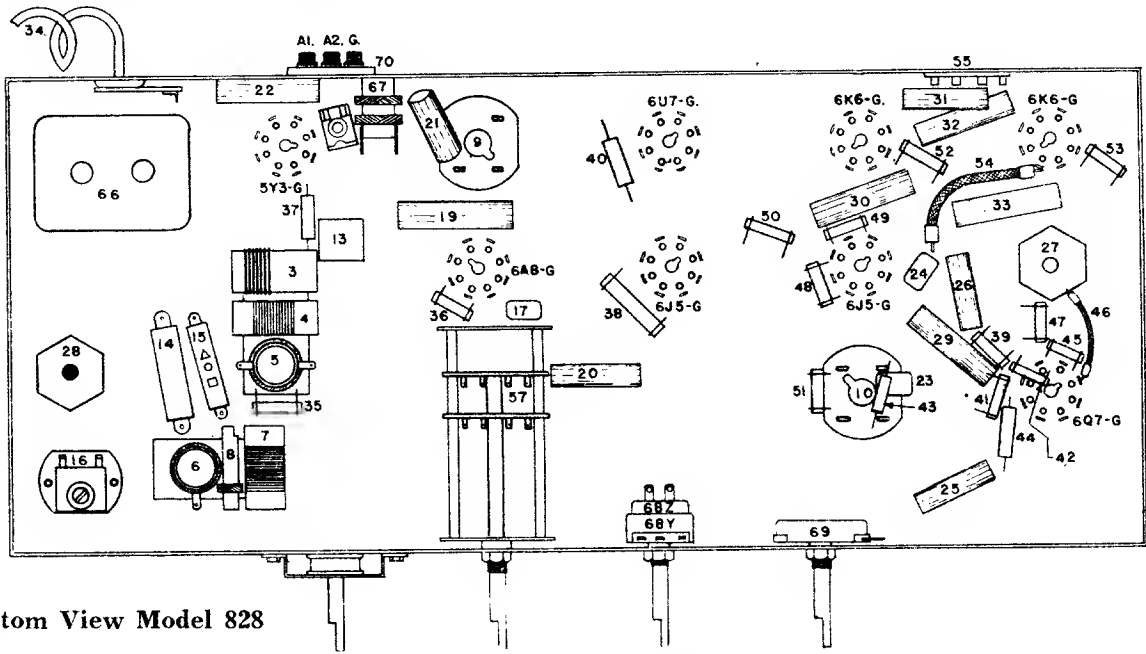

Bottom View Model 828


## PARTS LIST — MODEL 828

Figures in first column refer to parts in Diagrams.

Item No.	Part No.	Description	Item No.	Part No.	Description
1	W —37922	Dial Light—6-8 Volt	48	—23785	Resistor, 500,000 Ohm ½ W.
2	W —37922	Dial Light—6-8 Volt	49	—27121	Resistor, 5,000 Ohm ½ W.
	G16 —45398	Socket and Brkt. Assy., Dial Light	50	—21875	Resistor, 100,000 Ohm ½ W.
3	G170—32000	Antenna Coil—H-F.	51	—21875	Resistor, 100,000 Ohm ½ W.
4	G168—32000	Antenna Coil—Pol.	52	—23785	Resistor, 500,000 Ohm ½ W.
5	G169—32000	Antenna Coil—B-C.	53	—23785	Resistor, 500,000 Ohm ½ W.
6	G170—32002	Oscillator Coil—H-F.	54	W —22873	Resistor, 220 Ohm 2½ W.
7	G168—32002	Oscillator Coil—Pol.	55	G103—28807	Socket—(5 Prong Spkr.)
8	G169—32002	Oscillator Coil—B-C.	W	—43552	Spkr. Plug Clamp
9	G175—32004	1st I-F. Assy., 455 Kc.	56	583-CP-18"K"	Speaker, Spec. No. V. C. and Cone Assy.
10	G176—32004	2nd I-F. Assy., 455 Kc.			Field Coil—(525 Ohm)
11	W —45713	3 Section Trimmer (Osc. Shunt)			Output Transformer
12	W —35951A	3 Section Trimmer (Ant. Shunt)			Cardboard Ring
13	W —35936	Condenser, .05 Mf. 200 V.			Speaker, Spec. No. S-4893N3
14	G20 —34000	Condenser, .004910 Mf. Mica		583-CP-18"H"	V. C. and Cone Assy.
15	G23 —34000	Condenser, .001560 Mf. Mica		—46786	Field Coil (525 Ohm)
16	—40769	B-C. Osc. Series Trimmer		—46787	Output Transformer
17	G13 —34002	Condenser, .000035 Mf. Molded		—46788	Cardboard Ring
18	G59 —33001	2 Section Gang Condenser		—46789	Speaker, Spec. No. E10K326
19	W —23615	Condenser, .05 Mf. 400 V.		583-CP-18"Z"	V. C. and Cone Assy.
20	W —35139	Condenser, .004 Mf. 400 V.		—46758	Field Coil (525 Ohm)
21	W —28621	Condenser, .02 Mf. 200 V.		—46759	Output Transformer
22	W —30805	Condenser, .01 Mf. 400 V.		—46760	Cardboard Ring
23	G2 —34002	Condenser, .0001 Mf. Molded		—46761	Band Selector Switch
24	G2 —34002	Condenser, .0001 Mf. Molded		—46276	8 Prong Socket
25	W —41461	Condenser, .0014 Mf. 200 V.	57	B	Power Transformer, 60 Cy.—110 V.
26	W —28621	Condenser, .02 Mf. 200 V.	58 to 65	G178—36400	Power Transformer, 50 Cy.—110 V.
27	W —36057B	Condenser, 40 Mf. 300 V.		—46318	Power Transformer, 50 Cy.—220 V.
28	W —44054	Condenser, 30 Mf. 350 V.		—46307	Power Transformer, 25 Cy.—110 V.
29	W —23615	Condenser, .05 Mf. 400 V.		—46308	Power Transformer, 25 Cy.—220 V.
30	W —23615	Condenser, .05 Mf. 400 V.		—46309	Power Transformer, 40-100 Cy.—95-267 V.
31	W —35139	Condenser, .004 Mf. 400 V.		—46310	Wave Trap—455 Kc.
32	W —23615	Condenser, .05 Mf. 400 V.	67	MG41—46287	Coil—Only—Wave Trap
33	W —23615	Condenser, .05 Mf. 400 V.		G188—32000	Tone Control
34	B —33906A	Power Cord and Plug		—44024B	Line Switch
35	—22196	Resistor, 20,000 Ohm ½ W.		—44773	Volume Control
36	—21237A	Resistor, 60,000 Ohm ½ W.		G27 —26719	Ant. and Gnd. Terminal Assy.
37	—35600	Resistor, 100,000 Ohm ½ W.		G41 —26719	Phono Terminal Assy.
38	—4921C	Resistor, 10,000 Ohm 1 W.		G10 —45683	Push Button Unit Assy.
39	—21454	Resistor, 1 Megohm ½ W.		G29 —45683	Key and Toggle Assy.
40	—36952	Resistor, 30,000 Ohm 1 W.		—45717	Screw—Key Adjusting
41	—34020	Resistor, 250,000 Ohm ½ W.		W —50507C	Spring—Key Return
42	—37590	Resistor, 750,000 Ohm ½ W.		W —50542C	Clamp—Toggle Lock
43	—36320	Resistor, 120,000 Ohm ¼ W.		W —50588B	Adjusting Clip—(Heart Shaped)
44	—36688	Resistor, 3 Megohm ¼ W.		W —45646B	Adjusting Clip—(Hooked)
45	—23765	Resistor, 500,000 Ohm ½ W.		W —46278	Guide Plate—Key
46	W —37631	Resistor, 22 Ohm ½ W.		G18 —45683	Rocker Plate and Gear Sector Assy.
47	—21875	Resistor, 100,000 Ohm ½ W.		W —50561	Screw—Rocker Plate Bearing
				W —45976	Bronze Spring—Bearing Thrust
				W —50273	Rubber Band—Used on Keys
				8R	Cabinet
				—46360A	Knob—4 Req.
				8T	Cabinet (Lowboy Style)
				—46360A	Knob—Tuning—Volume
				—46784A	Knob—Tone Control—Band Sw.
				C —46228C	Escutcheon
				—46417	Push Button
				W —50841	Station Call List
				W —50551A	Celluloid Call Letter Cover
				—46329	Instruction Booklet

The Crosley Corporation  
Cincinnati, Ohio

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

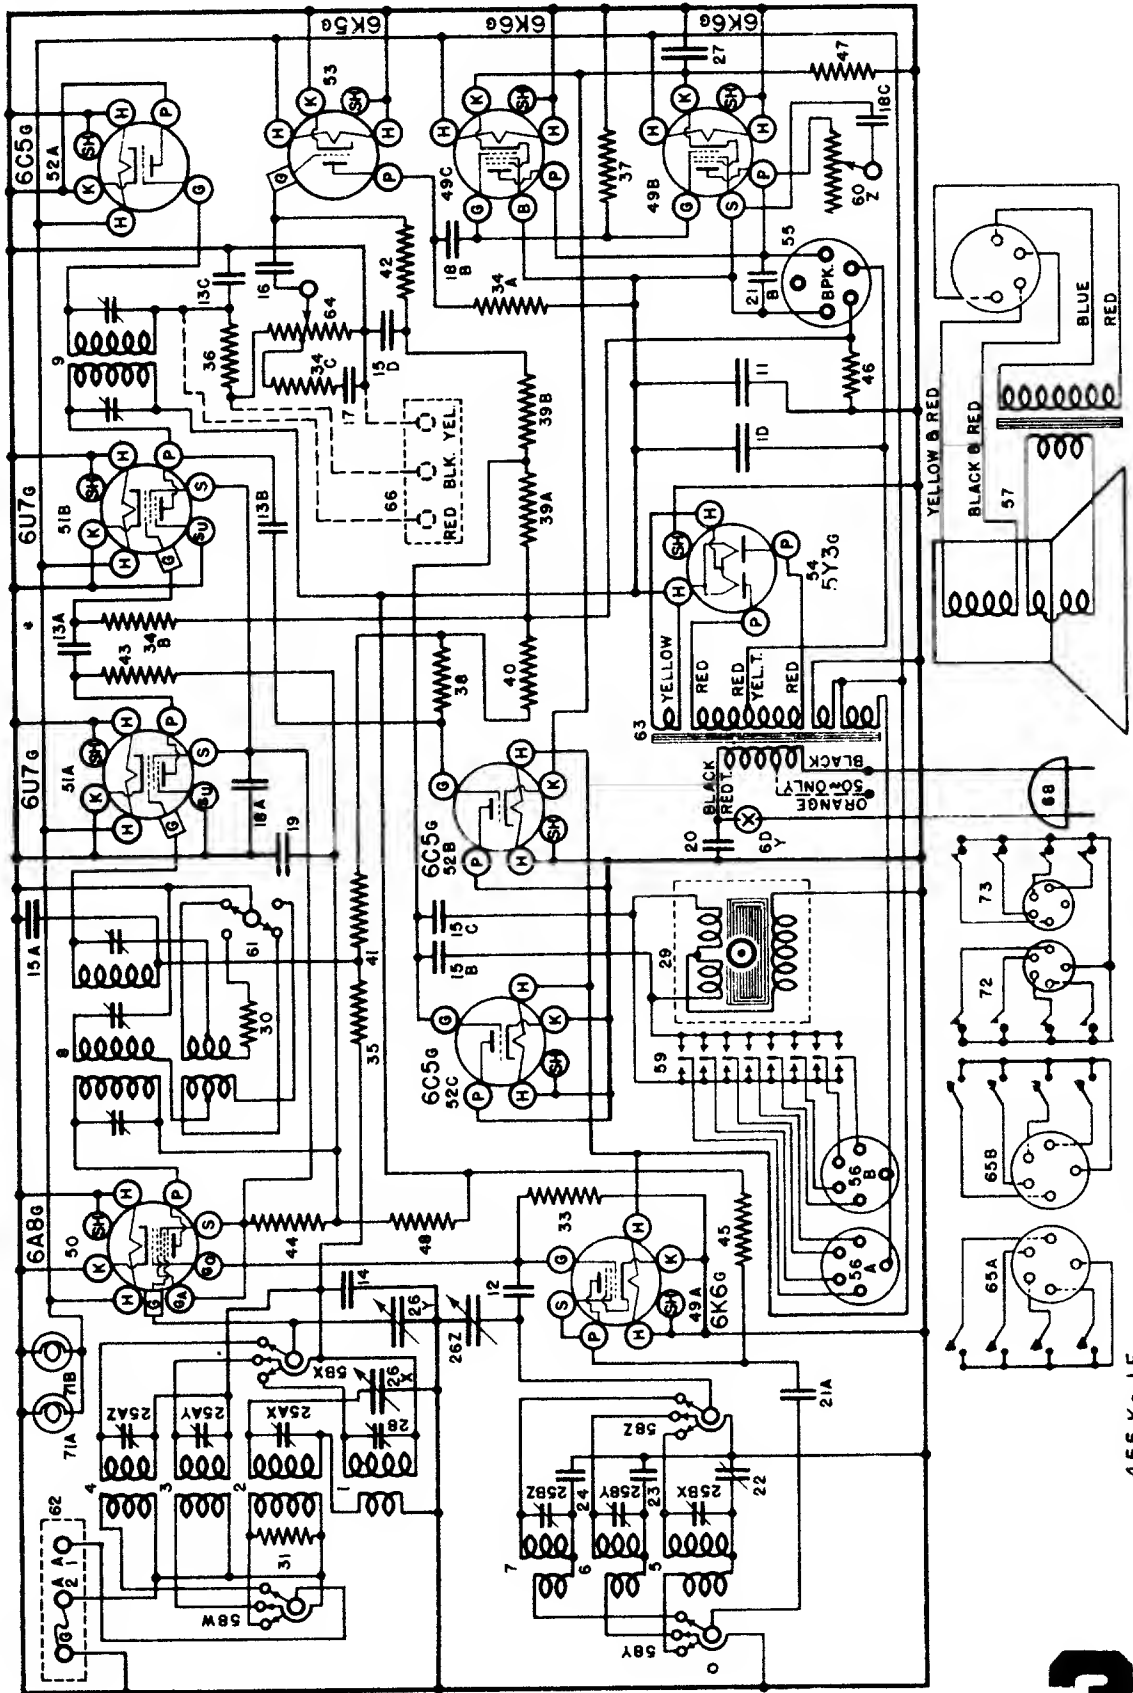

455 Kc. I.F.

WIRING DIAGRAM—MODEL 1118 AND 1128

**CROSLY**



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PARTS LIST — MODEL 1118


Figures in first column refer to parts in Diagrams.

Item	Part No.	Description	Item	Part No.	Description
1	G97 —32001	Pre-Selector Coil, B.C.	35	—35600	Resistor, 100,000 Ohm $\frac{1}{4}$ W. Carb.
2	G138—32000	Antenna Coil, B.C.	36	—36320	Resistor, 120,000 Ohm $\frac{1}{4}$ W. Carb.
3	G151—32000	Antenna Coil, Police	37	—34018	Resistor, 200,000 Ohm $\frac{1}{3}$ W. Carb.
4	G150—32000	Antenna Coil, H.F.	38	—34020	Resistor, 250,000 Ohm $\frac{1}{3}$ W. Carb.
5	G139—32002	Oscillator Coil, B.C.	39A	—23785	Resistor, 500,000 Ohm $\frac{1}{3}$ W. Carb.
6	G154—32002	Oscillator Coil, Police	39B	—23785	Resistor, 500,000 Ohm $\frac{1}{3}$ W. Carb.
7	G153—32002	Oscillator Coil, H.F.	40	—37590	Resistor, 750,000 Ohm $\frac{1}{3}$ W. Carb.
8	G161—32004	1st I-F., 455 Kc. Assy.	41	—21454	Resistor, 1 Megohm $\frac{1}{3}$ W. Carb.
9	G154—32004	2nd I-F., 455 Kc. Assy.	42	—26577	Resistor, 3 Megohm $\frac{1}{3}$ W. Carb.
10	W —44054	Condenser, 30 Mf. 350 V.	43	—44165	Resistor, 5,000 Ohm $\frac{1}{2}$ W. Carb.
11	W —36057B	Condenser, 40 Mf. 300 V.	44	—4921C	Resistor, 10,000 Ohm 1W. Carb.
12	G1 —44886	Condenser, Bimetal Temp. Control	45	—44008	Resistor, 10,000 Ohm 2W. Carb.
13A	G2 —34002	Condenser, .0001 Mf. Molded	46	W —37631	Resistor, 32 Ohm $\frac{1}{2}$ W. Flex.
13B	G2 —34002	Condenser, .0001 Mf. Molded	47	W —45381	Resistor, 300 Ohm 2W. Flex.
13C	G2 —34002	Condenser, .0001 Mf. Molded	48	W —23013	Resistor, 2,000 Ohm 1 $\frac{1}{4}$ W. Flex.
14	W —35936	Condenser, .05 Mf. 200 V.	49		
15A	W —28621	Condenser, .02 Mf. 200 V.	50	G178—36400	Socket, 8 Prong Octal.
15B	W —28621	Condenser, .02 Mf. 200 V.	51		
15C	W —28621	Condenser, .02 Mf. 200 V.	52	G103—28807	Socket, Speaker
15D	W —28621	Condenser, .02 Mf. 200 V.	53	G16 —28807	Socket, Push Button Cable
16	W —41461	Condenser, .0014 Mf. 200 V.	54	W —41007	Cable Clamp, P. B. Cable
17	W —28619	Condenser, .006 Mf. 200 V.	55	W —40911	Tube Shield
18A	W —22688	Condenser, .1 Mf. 400 V.	56	671BP-18-"M"	Speaker, Spec. No. 1-D-1180
18B	W —22688	Condenser, .1 Mf. 400 V.	57	—45184	V. C. and Cone Assembly
18C	W —22688	Condenser, .1 Mf. 400 V.		—45185	Field Coil (515 Ohm)
19	W —23615	Condenser, .05 Mf. 400 V.		—44678	Output Transformer
20	W —30805	Condenser, .01 Mf. 400 V.		—43680	Cone Mounting Ring
21A	W —35139	Condenser, .004 Mf. 400 V.		W —24715	Elastic Mounting Nuts
21B	W —35139	Condenser, .004 Mf. 400 V.		W —22985	Rubber Washer
22	—40769	Condenser, B.C. Osc. Series Trimmer		W —46804	Spacer
23	G23 —34000	Condenser, .001560 Mf. Pol. Osc. Fixed Trimmer		W —24865	Steel Washer
24	G20 —34000	Condenser	58	—44049	Band Selector Switch
25	W —35951A	3 Section Shunt Trimmer Assy.	59	G1 —44628	Switch, Discriminator, Assy.
26	G60 —33002	3 Section Var. Tuning Cond. (1118)		G2 —44628	Flexible Coupling
26	G62 —33002	3 Section Var. Tuning Cond. (1128)	60	—44024B	Tone Control (300,000 Ohm) and Switch
	W —44907A	Idler Pulley (1118)	61	—46086	Switch, Local Distance (1128)
	W —44908	Idler Mtg. Stud (1118)	61	—44665A	Switch, Local Distance (1118)
	D —46239	Dial Face (Glass) (1128)	62	G27 —26719	Ant. and Gnd. Terminal Assy.
	C —46094	Dial Glass Support (1128)	63	—44910	Power Transformer, 110 V. 60 C
	W —46099	Dial Glass Clip (2) (1128)		—44915	Power Transformer, 110 V. 50 C
	W —46096	Dial Glass Clip, R.H. (1128)		—44916	Power Transformer, 220 V. 50 C
	W —46095	Dial Glass Clip, L.H. (1128)		—45527	Power Transformer, Universal
	—46203	Dial Pointer (1128)	64	—44702	Volume Control, 1 Megohm
	W —46097	Dial Pointer Guide (1128)	65A	G8 —45228	Push Button—Cable and Plug (R.H.) (1118)
	G —41582	Drive Cord (50-Inch) (1128)	65B	G9 —45228	Push Button—Cable and Plug (L.H.) (1118)
	W —46941	Dial Glass Cushion (1128)		W —45478	Trip Bar and Connecting Link Switch (1118)
	G13 —43564	Pulley and Hub Assy. (1128)	66	G37 —26719	Phono Terminal Assy.
	MG44—46080	Idler Pulley and Brkt. Assy. (1128)	68	B —33960A	Line Cord and Plug
	W —44989	Cord Tension Spring (1128)	71	W —43567	Dial Light Bulb, 6-8 Volt (1118)
	W —46477	Tubing—Drive Shaft (1128)	71	W —37922	Dial Light Bulb, 6-8 Volt (1128)
	W —45448	Drive Belt (1128)		G9 —44363	Dial Light Socket Assy.
	W —44907B	Idler Pulley (Dual) (1128)	72	MG45—46081	Push Button—Cable and Plug (1128)
	W —44908	Idler Stud (1128)	73		
	D —46949	Dial Glass (Foreign Only) (1128)		7P	Cabinet (1118)
	W —46290	Drive Cord Clamp (1128)		B —45652A	Escutcheon (Dial) (1118)
27	W —41598	Condenser, 50 Mf. 25 V.		—45667	Escutcheon (Push Button) L.H.
28	—44516	Condenser, Pre-Select Shunt		—45666	Escutcheon (Push Button) R.H.
29	MG105—44879	Motor Assembly (50-60 Cycle)		W —44380B	Knob, Vol. Cont. and Tuning (2)
	—45168	Motor		W —44426A	Knob, T. C.—L. D. Sw. and B. C (3) (1118)
	W —45165	Motor Foot		W —44871A	Push Button (Bakelite) (1118)
	W —45164	Motor Mounting Bracket		B —44876A	Switch (Push Button) Only
	W —20800	Shakeproof Washer		8Q	Cabinet (1128)
	—6875	W. H. Machine Screw, $\frac{3}{8}$ " Long		8QA	Cabinet (1128)
	—6876	W. H. Machine Screw, $\frac{1}{4}$ " Long		C —46228C	Escutcheon (1128)
	—44497	Headed Bushing—Brkt. Mtg.		—46360A	Knob, Vol. Cont. and Tuning (2)
	W —36180	Rubber Sleeve—Brkt. Mtg.		—46362A	Knob, T. C.—L. D. Sw. and B. C. (3) (1128)
30	—42401A	Resistor, 99 Ohm $\frac{1}{4}$ W. Ins.		W —45171	Push Button (Bakelite) (1128)
31	—22196	Resistor, 20,000 Ohm $\frac{1}{3}$ W. Carb.		B —46221	Switch (Push Button) Only (1128)
33	—21237A	Resistor, 60,000 Ohm $\frac{1}{3}$ W. Carb.		W —44876A	Celluloid Cover (Button)
34A	—21875	Resistor, 100,000 Ohm $\frac{1}{3}$ W. Carb.			
34B	—21875	Resistor, 100,000 Ohm $\frac{1}{3}$ W. Carb.			
34C	—21875	Resistor, 100,000 Ohm $\frac{1}{3}$ W. Carb.			


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Super Pee-Wee Model



## DETROLA CORPORATION

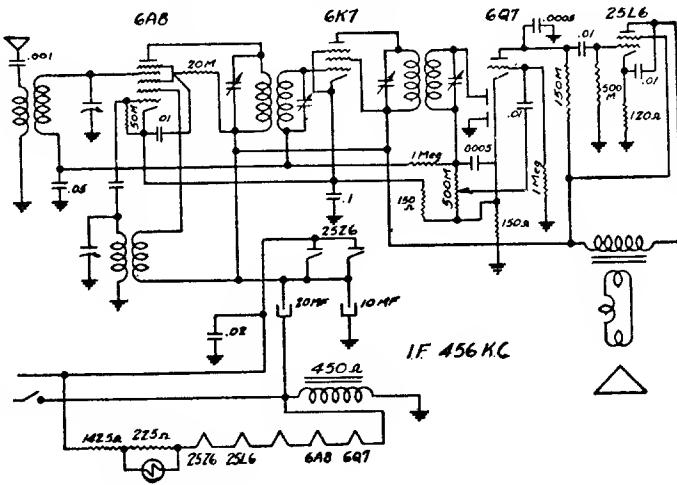


## Model 197, Pee-Wee

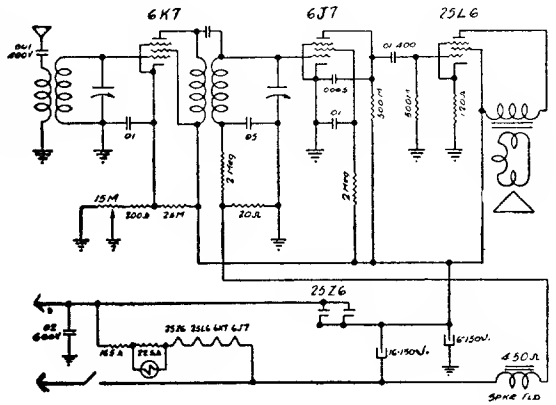

## MODEL 147E

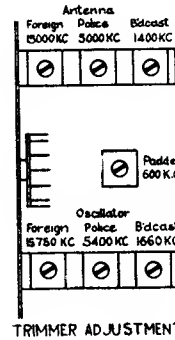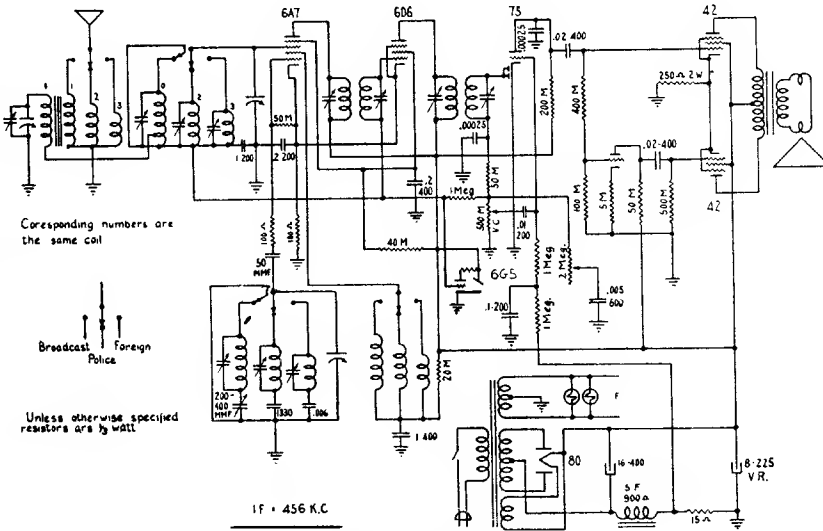


For alignment use a signal generator. Couple through .1 mfd. condenser to grid of 6A7, and chassis. Set for 456 KC. Adjust 2nd I.F. and then 1st. Recheck. For R.F. alignment, feed 1660 KC. to antenna thru a 200 mmfd. condenser. Adjust Broadcast osc. trimmer. Set for 1400 KC. and adjust the two antenna trimmers. Set for 600 KC. and adjust padder while rocking tuning condenser. For short wave alignment see next page.

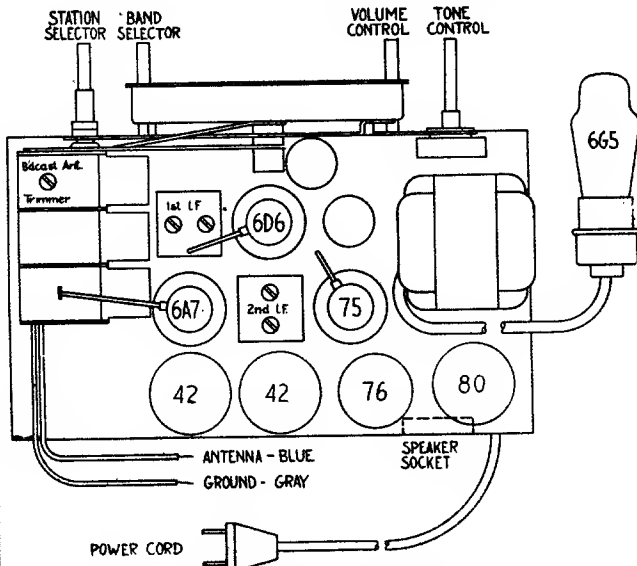

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

DETROLA RADIO AND TELEVISION CORPORATION

DETROIT, MICHIGAN

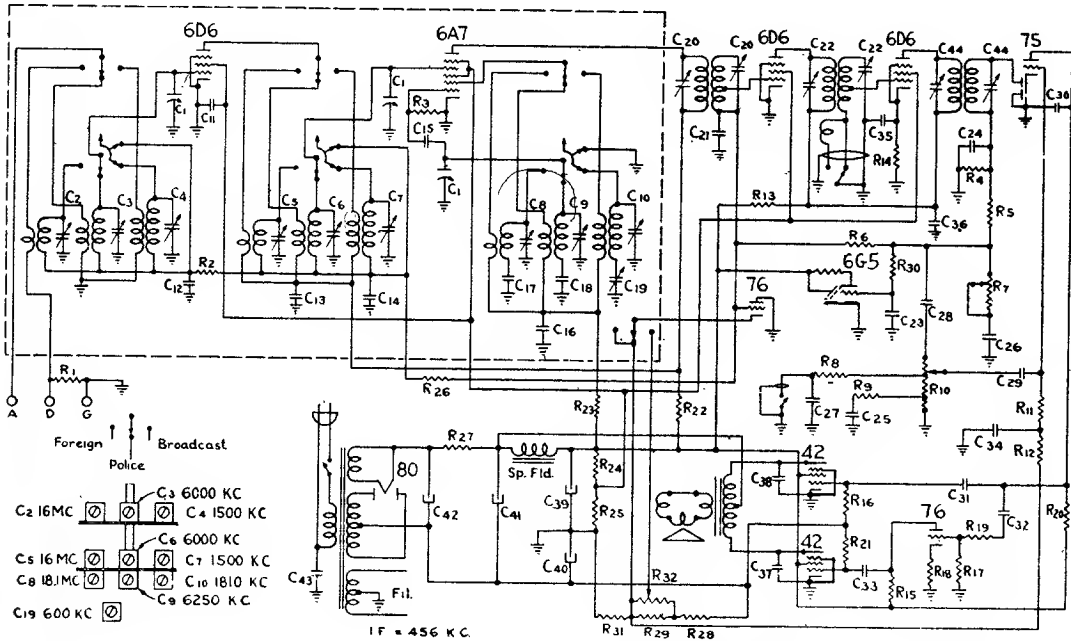

## MODEL 165

Symbol	Part No.	Description
C1	3814	9-400 mmf Variable
C2,3,4	3822	2-35 triple trimmer
C5,6,7	3822	2-35 triple trimmer
C8,9,10	3822	2-35 triple trimmer
C11,21,34	572	.1-200 V.
C12,14,23	580	.05-200 V.
C13	575	.1-400 V.
C15,24	2780	50 mmf mica
C16,35	568	.01-400 V.
C17	2694	.005 5% tolerance
C18	2741	1330 mmf 5% tolerance
C19	2560	350 mmf variable padder
C20,22,44		IF Trimmer
C25	4072	.03-200 V.
C26	2695	.003-600 V.
C27	824	.002-600 V.
C28,29	576	.02-400 V.
C30	1286	250 mmf mica
C31,33	2600	.02-600 V.
C32,36	563	.05-400 V.
C37,38	3138	.001-800 V.
C39	3113	16 MF regulating
C40	3136	20 MF 25 V.
C41	3112	16 MF 450 V.

C42	3111	16 MF 500 V.
C43	3135	.003-800 V.
R1,5,15,26	603	100 M 1/3 W.
R2,3	631	50 M 1/3 W.
R4,16,21	615	500 M 1/3 W.
R6	2693	2 meg 1/3 W.
R7	3799	2 meg tone control
R8	2568	300 M 1/3 W.
R9,23	617	20 M 1/3 W.
R10	3800	3 meg volume control
R11,12	624	1 meg 1/3 W.
R13,14,22	2421	1 M 1/3 W.
R17	2880	100 M 1/3 W. 10 %
R18	614	5 M 1/3 W.
R19	2731	500 M 1/3 W. 10 %
R20	598	200 M 1/3 W.
R24	3805	7 M 3.5 W.
R25	3805	8 M 1.5 W.
R27	3809	100 ohms 2 W. 10 %
R28	3806	120 ohms 1.5 W. 10 %
R29	4111	85 ohms 1.0 W. 10 %
R30	2106	3 meg 1/3 W.
R31	3870	15 ohms .5 W. 10 %
R32	3801	2 M variable






Using 400 ohm resistor in series with generator, set band selector in center position, set generator to 5400 kc and adjust oscillator trimmer for top frequency. Set generator to 5000 kc, tune receiver to signal and adjust antenna trimmer.

Turn band selector to extreme clockwise position. Using 400 ohm resistor in series with generator, set oscillator top frequency for 15,750 kc—screw trimmer down tight, then unscrew to *second* peak. Set generator to 15,000 kc, tune receiver to signal and adjust antenna trimmer—Screw trimmer down tight, then unscrew to *first* peak, rocking the tuning condenser back and forth through the signal while the adjustment is being made. Above procedure for alinement at 15,000 kc must be followed exactly to insure proper tracking. A dead spot at about 12,000 kc will result if antenna and oscillator circuits are not set in proper relation to each other.


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## DETROLA RADIO AND TELEVISION CORPORATION

### 192 Series

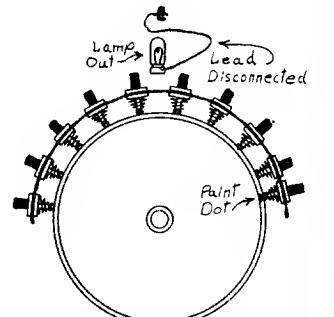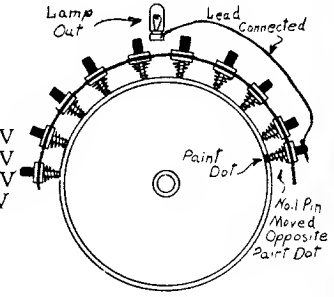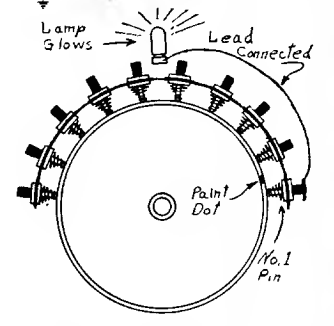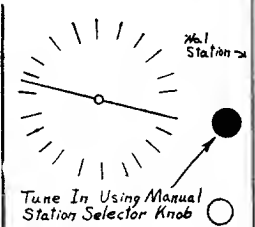
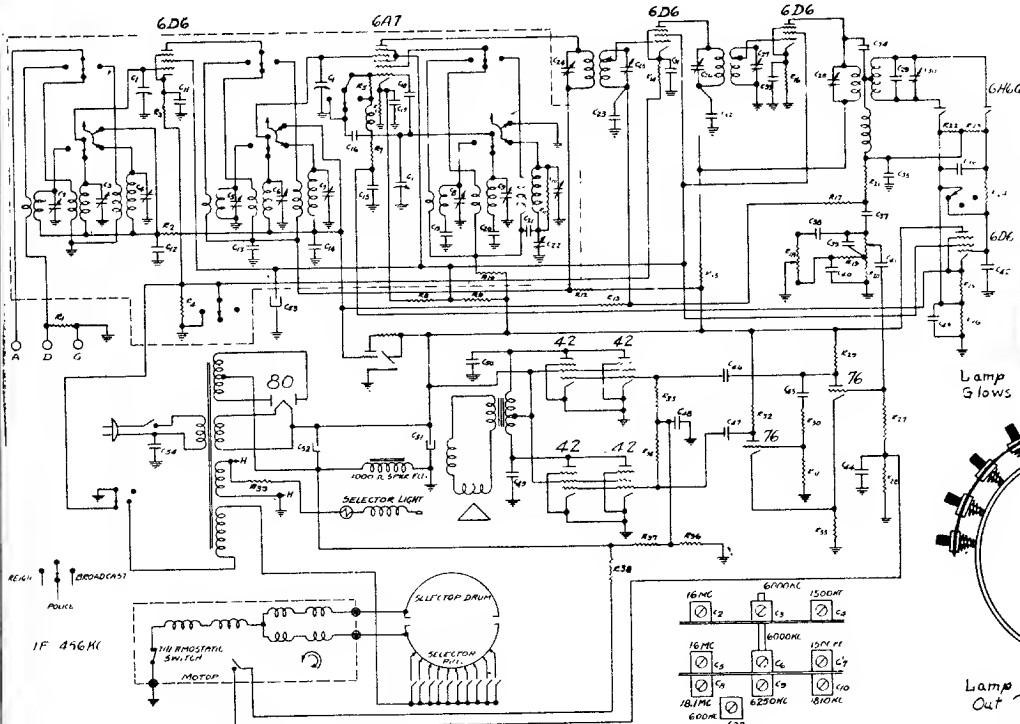


Master Selector Set Up For Station No. 1. Repeat Similar Operations For Station No. 2 Using No. 2 Pin, Etc

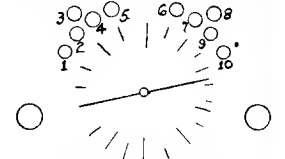


Symbol	Part No.	Description
R1,13,29,32	2880	100 M 1/3W 10%
R2,7,21	631	50 M 1/3W
R3,12,14,15,16	2421	1000 ohm 1/3W
R4	2421	1000 ohm 1/3W
R5	2783	2500 ohm 1/3W 10%
R6	3937	500 ohm 1/2 W Wire-wound ±10%
R8	3805	7000 ohm 3 1/2 W Wirewound
R9	3805	8000 ohm 1 1/2 W Wirewound
R10	600	10M 1/3W
R11	3581	3M 1/3W ±10%
R17,22,23,24,28,27,30	2599	1 meg 1/3W 10%
R18	2737	2 meg tone control
R20	3800	3 meg volume control
R25	2572	400 ohm 1/3W 10%
R26	2691	500 ohm 1/3W 10%
R33,34,19	2730	200 M 1/3W 10%
R36		150 M 1/3W 10%
R38,37	2731	500 M 1/3W 10%
R39		20 ohm 1 W
C1		400 mmf variable
C2,3,4	3822	2-35 mmf triple trimmer
C5,6,7	3822	2-35 mmf triple trimmer
C8,9,10	3822	2-35 mmf triple trimmer
C11,12,14,17,31,33	580	.05—200 V
C13,32	575	.1—400 V
C15,23,42,43,44	572	.1—200 V
C16	2925	25 mmf mica
C18	4676	8 mmf
C19	2694	.005—600 5%
C20	2741	1330 mmf 5%
C21		.01—400 V
C22	2560	350 mmf variable padder
C34,35	1285	100 mmf mica
C36,48	2792	.2—200 V
C37,41	576	.02—400 V
C38,40	824	.002—600 V
C39	2780	50 mmf. mica


C45,46,47	2600	.02—600 V
C49,50	2601	.01—600 V
C51	4062	30 MF 275 V
C52	4649	24 MF 450 V
C53	3079	8 MF 150 V
C54	3135	.003—800 V

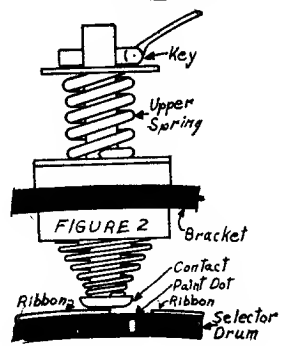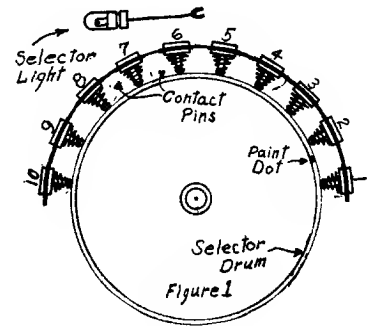

# Emerson Radio

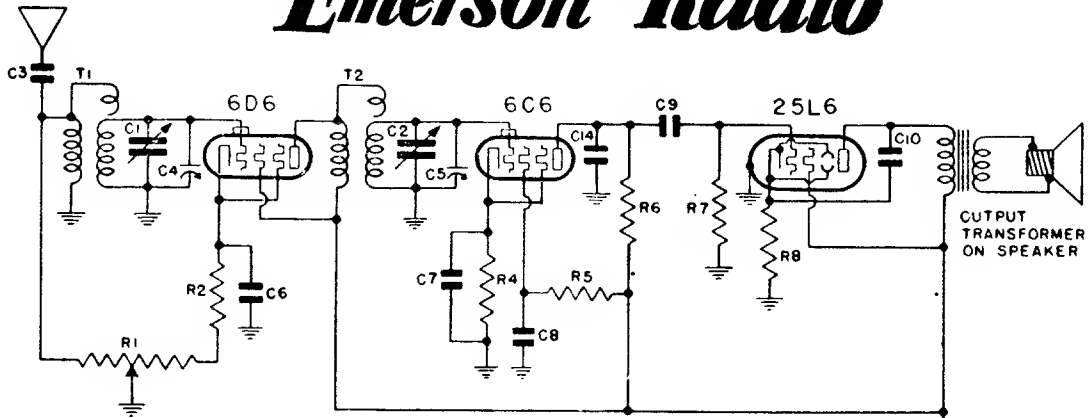

## MODELS BA-199 and BA-201

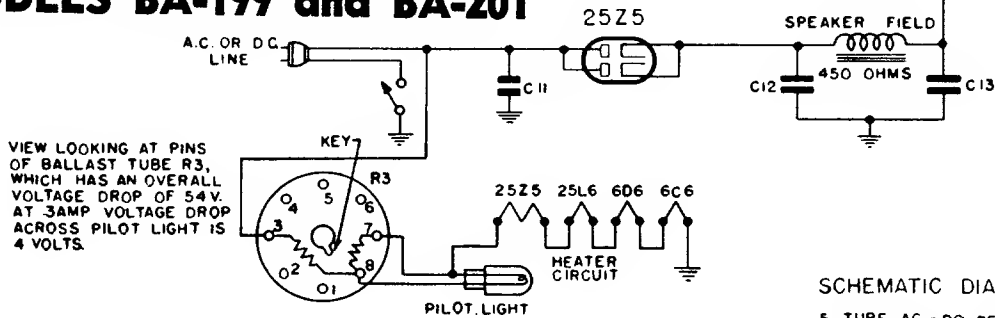

VIEW LOOKING AT PINS OF BALLAST TUBE R3, WHICH HAS AN OVERALL VOLTAGE DROP OF 54 V. AT 3 AMP VOLTAGE DROP ACROSS PILOT LIGHT IS 4 VOLTS.

SCHEMATIC DIAGRAM  
5 TUBE AC-DC RECEIVER

\*Item number locates the article on the schematic diagram.

†These condensers cannot be supplied separately.

‡Note: In replacing the dual 16 mf electrolytic condenser, the green lead should be connected to the rectifier.

### PRODUCTION CHANGES



1. Receivers bearing serial numbers below 1496300, C14 was a 0.0001 mf condenser instead of 0.0002.
2. Receivers bearing serial numbers below 1585100, C10 was a 0.03 mf condenser instead of 0.05.

*Item	Part No.	DESCRIPTION
T1	5AT-422	Broadcast antenna coil
T2	5AT-423	Broadcast detector coil
R1	2VR-219D	Volume control—75,000 ohms, with line switch
R2	3CR-294	240 ohm, ½ watt wire-wound resistor
R3	L55-BG	Plug-in ballast tube (Interchangeable with L55-B)
R4	OR-73U	25,000 ohm, ¼ watt carbon resistor
R5	HR-42U	2 megohm, ¼ watt carbon resistor
R6, R7	KR-56U	500,000 ohm, ¼ watt carbon resistor
R8	3QR-297	110 ohm, ½ watt wire-wound resistor
C1, C2	5AC-376	Two-gang variable condenser
C3	NNC-199	.001 mf, 600 volt tubular condenser
†C4, C5		Trimmers, part of variable condenser.
C6, C8	AC-6	.1 mf, 200 volt tubular condenser
C7	5AC-388	.25 mf, 100 volt tubular condenser
C9	LC-65	.02 mf, 400 volt tubular condenser
C10	LC-64	.05 mf, 400 volt tubular condenser. (See production change No. 2)
C11	EEC-132	.1 mf, 400 volt tubular condenser
‡C12, C13	4DC-345A	Dual 16 mf, 100 volt dry electrolytic condenser. (See note below.)
C14	5AC-384	.0002 mf, 600 volt tubular condenser. (See production change No. 1)
	3TS-312	5" dynamic speaker
	XL-9	Pilot light, 6.3 volt, .25 amp., Mazda No. 46
	5AZ-745	Condenser pulley
	5AZ-746	Pointer pulley
	5AZ-747	Dial pointer
	4YZ-772	Drive cord
	3RZ-519	Drive cord spring
	5AZ-792	Dial face
	5AZ-779A	Dial crystal for Model BA-199
	5AZ-794	Dial crystal for Model BA-201

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Emerson Radio and Phonograph Corp.


- T1** Antenna coil with adjustable 455 kc wave-trap
  - T2** Double-tuned 455 kc first i-f transformer
  - T8** Double-tuned 455 kc second i-f transformer
  - T4** Oscillator coil
  - R1** 30,000 ohm 1/2 watt carbon resistor
  - R2** 50,000 ohm 1/4 watt carbon resistor
  - R3** 140 ohm 1/2 watt wire-wound resistor
  - R4** 1 megohm 1/4 watt carbon resistor
  - R5** Volume control .25 megohm with line switch
  - R6** 15 megohm 1/4 watt carbon resistor
  - R7** 250,000 ohm 1/4 watt carbon resistor
  - R8** 500,000 ohm 1/4 watt carbon resistor
  - R9** Resistance line cord with pilot light ballast section.
  - R10** Tone control .5 megohm with motor line switch
  - R13** 2,500 ohm 1 watt carbon resistor
  - R14** 175 ohm 1 watt metallized resistor
  - R15** 100,000 ohm 1/4 watt carbon resistor
  - R16** Tone control .5 megohm
  - R18** Two-gang variable condenser (for 219 and 221)
  - C1** Two-gang variable condenser (for 222 and 232)
  - C2** 0.00055 mf mica condenser
  - C3** Trimmer, part of wave-trap assembly.
  - C4** Trimmers, part of i-f transformers.
  - C5** Trimmers, part of i-f transformers.
  - C11** 0.05 mf, 200 volt tubular condenser
  - C6** 0.00066 mf mica condenser
  - C7** 0.1 mf, 200 volt tubular condenser
  - C8** 0.1 mf, 400 volt tubular condenser
  - C9** 0.1 mf, 400 volt tubular condenser
  - C10** 0.0022 mf mica condenser
  - C12** 0.002 mf, 600 volt tubular condenser
  - C16** 0.025 mf, 400 volt tubular condenser
  - C17** 0.025 mf, 400 volt tubular condenser
  - C18** Dual 20 mf, 150 volt dry electrolytic condenser
  - C19** 0.0005 mf mica condenser
  - C20** 20 mf, 185 volt dry electrolytic condenser
  - C21** 0.01 mf, 400 volt molded condenser
  - C22** 0.006 mf, 600 volt tubular condenser
  - C23** 0.0003 mf mica condenser
  - C24** Phono-radio switch
  - C25** Pilot light, 6.3 volt, .25 amp., Mazda No. 44
  - C26** Drive cord
  - Drive cord spring
  - Drive shaft
  - Dial face fasteners
  - Needle cup (for 219 and 221)
  - Needle cup (for 222)
  - Dial pointer (for 221, 222 and 232)
  - Dial crystal (for 221, 222 and 232)
  - Dial face (for 221, 222 and 232)
  - 6 1/2" permanent magnet dynamic speaker
- ADDITIONAL PARTS USED ON AX-219
- R11**, **R12** 500,000 ohm 1/4 watt carbon resistor
- ADDITIONAL PARTS USED ON AX-221 and AX-222
- R11**, **R12** 1 megohm 1/4 watt carbon resistor
  - R11**, **R12** 110 volt, a.c. motor (for 221-AC)
  - R11**, **R12** AC-DC motor (for 221AC-DC and 222)

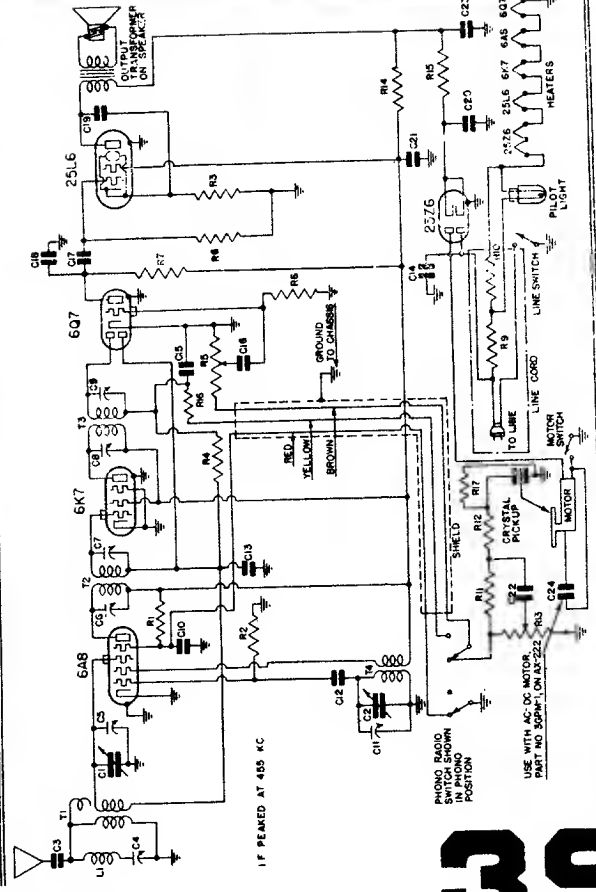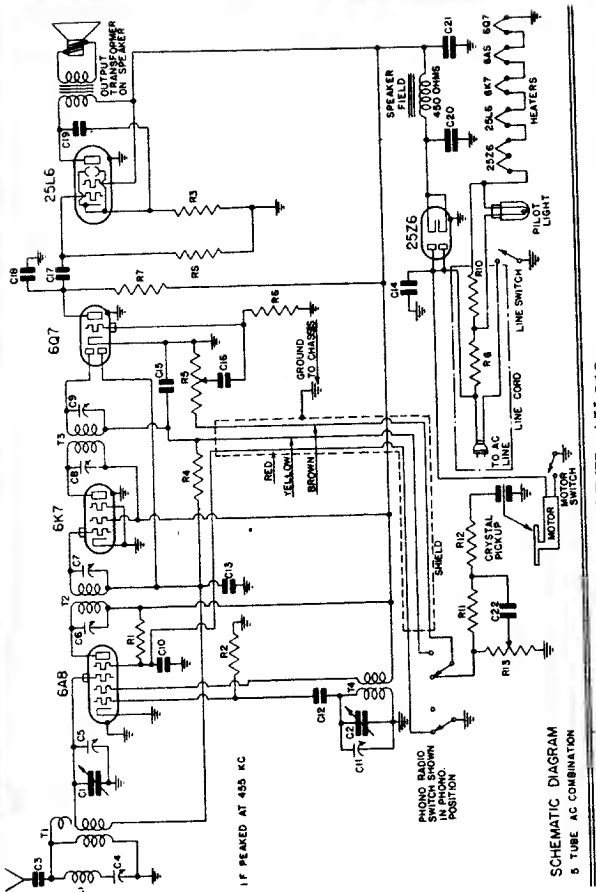

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Emerson Radio and Phonograph Corp.

## Models AX-211, AX-212, AX-217, AX-235, AX-237, AX-238, AX-239, AX-240 and AX-257

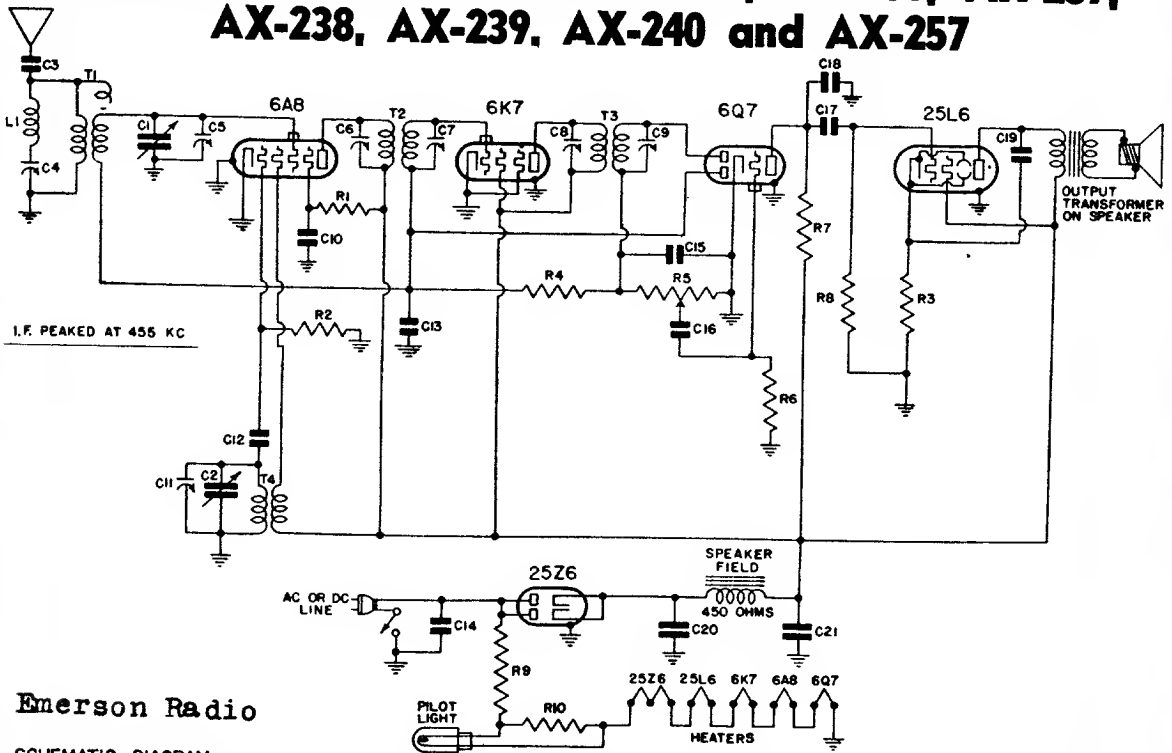

Emerson Radio

SCHEMATIC DIAGRAM

5 TUBE AC-DC RECEIVER


SCHEMATIC DIAGRAM FOR MODELS AX-211, 212, 217, 235, 237, 238, 239 and 257

*Item	Part No.	DESCRIPTION
L1, T1	4XT-432	Antenna coil with adjustable 455 kc wave-trap
T4	4XT-458	Oscillator coil (see production change no. 2)
T2	4XT-434	Double-tuned 455 kc first i-f transformer
T3	4XT-435	Double-tuned 455 kc second i-f transformer
R1	2CR-193	30,000 ohm 1/2 watt carbon resistor
R2	KR-53	50,000 ohm 1/4 watt carbon resistor
R3	3FR-293	140 ohm 1/2 watt wire-wound resistor
R4	KR-57	1 megohm 1/4 watt carbon resistor
R5	4XR-335	Volume control .25 megohm with line switch
R6	4XR-327	15 megohm 1/4 watt carbon resistor
R7	KR-55	250,000 ohm 1/4 watt carbon resistor
R8	KR-56	500,000 ohm 1/4 watt carbon resistor
R9, R10	4XW-112	Resistance line cord with pilot light ballast section R9—150 ohms; R10—40 ohms
R14	4XR-334	2,500 ohm 1 watt carbon resistor
R15	4ZR-325	175 ohm 1 watt metallized resistor
C1, C2	4XC-391A	Two-gang variable condenser
C3	4XC-401	0.00055 mf mica condenser
+C4		Trimmer, part of wave-trap assembly.
+C5, C11		Trimmers, part of variable condensers.
+C6, C7, C8, C9		Trimmers, part of i-f transformers.
C10	BC-12	0.05 mf, 200 volt tubular condenser
C12	4XC-393A	0.00006 mf mica condenser
C13	AC-6	0.1 mf, 200 volt tubular condenser
C14	LC-64	0.05 mf, 400 volt tubular condenser
C15, C18	4XC-394A	0.00022 mf mica condenser
C16	3HC-274	0.002 mf, 600 volt tubular condenser
C17	LC-65	0.02 mf, 400 volt tubular condenser
C19	3FC-336	0.025 mf, 400 volt tubular condenser
C20, C21	4HC-348B	Dual 20 mf, 150 volt dry electrolytic condenser
C23	4XC-404	20 mf, 125 volt dry electrolytic condenser
	4XS-324	6" dynamic speaker (for 211, 212, 217, 235, 237, 238, 239 and 257)
	4PS-303A	6" permanent magnet dynamic speaker (for 240 cabinet)
	4BL-94	Pilot light, 6.3 volt, .25 amp., Mazda No. 44

40

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

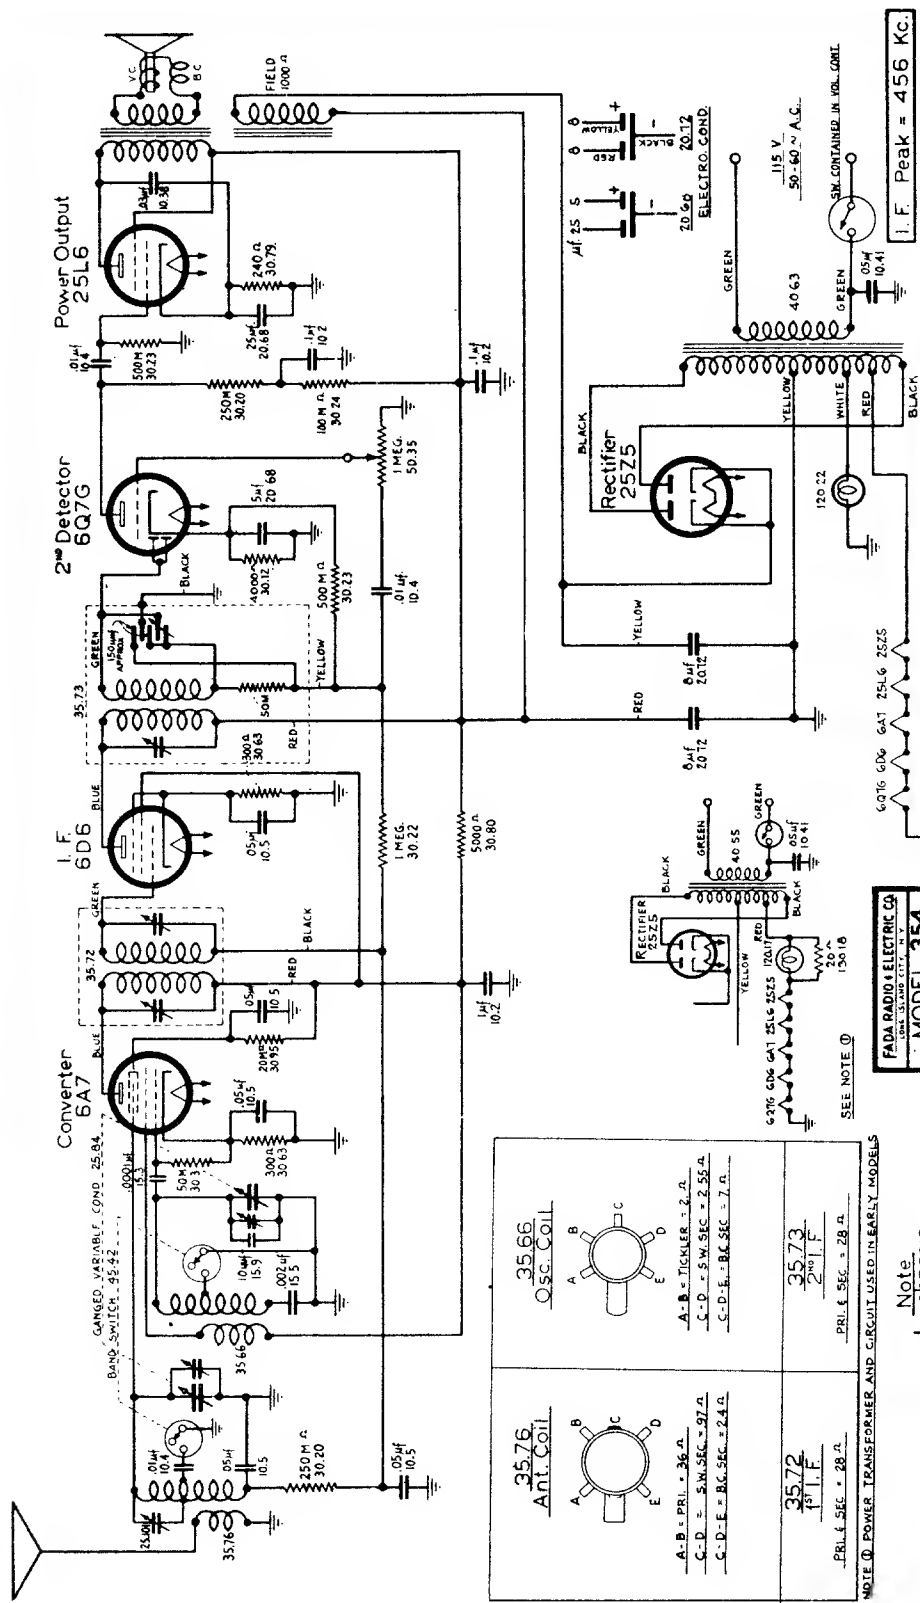

**FADA RADIO & ELECTRIC CO.**  
 115 N. 1ST ST.  
**MODEL 354**  
 DESIGNED BY PHF  
 MANUFACTURED BY PHF  
 PAT. 8-31-37  
 REGISTERED BY PHF

NOTE: ① POWER TRANSFORMER AND CIRCUIT USED IN EARLY MODELS


Note:  
 ⊥ = chassis  
 Band sw. shown in B.C. pos.  
 M = thousand

**30-20 Thomson Ave.**  
**Long Island City**  
**New York**

# FADA Radio



# 1939 MOST POPULAR SERVICE DIAGRAMS

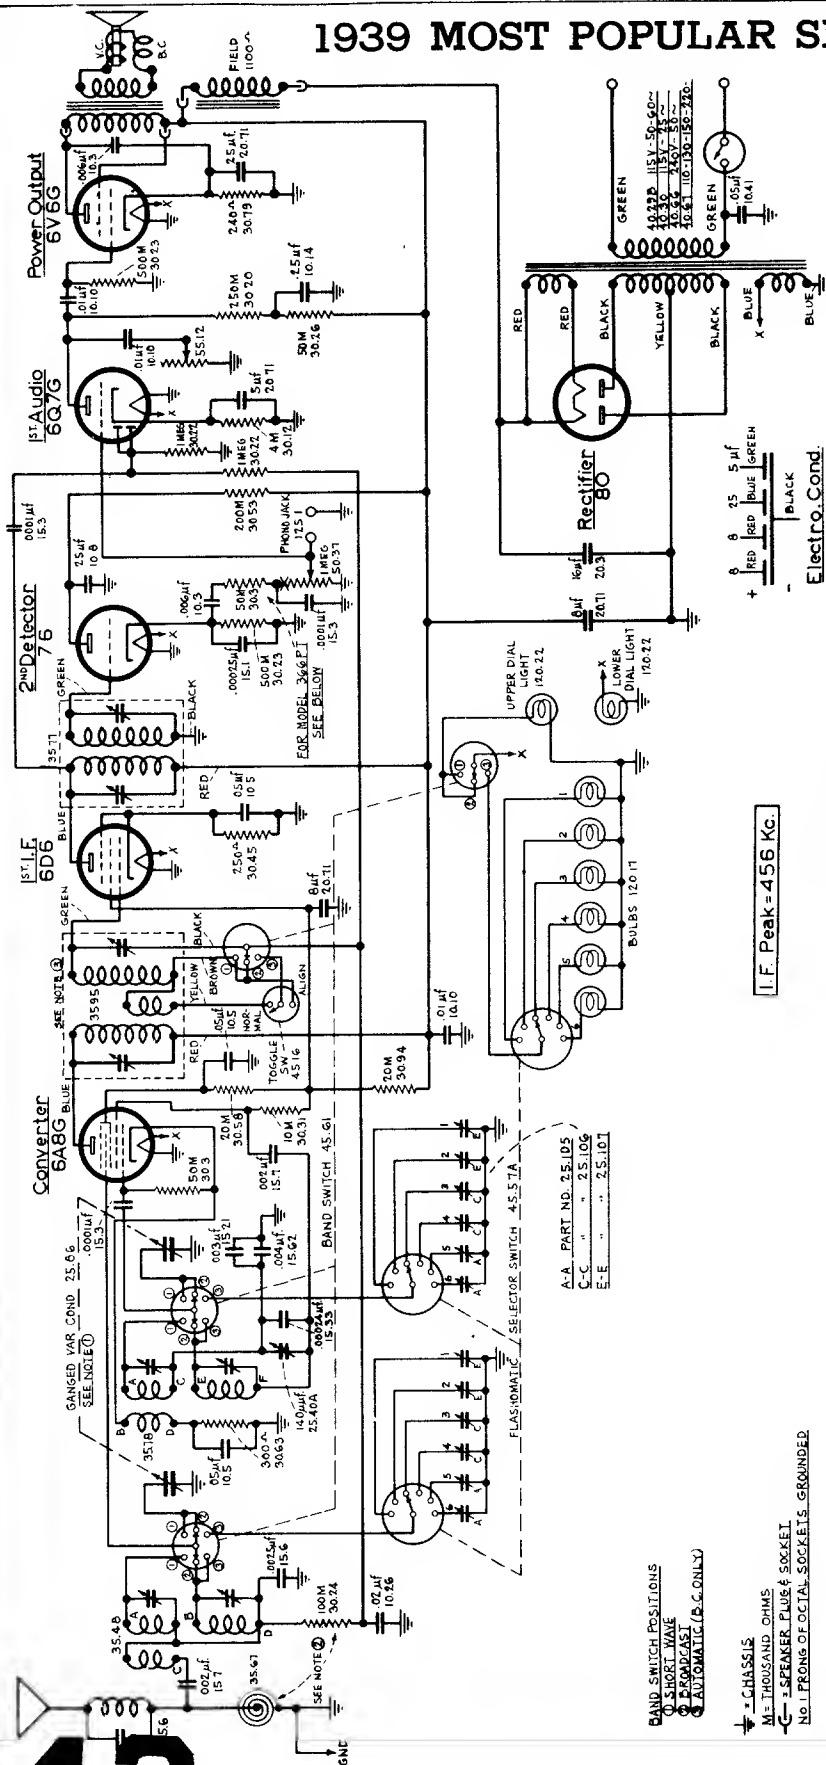


<p><b>Air-Coil</b> 35.48</p> <p>A-D .02<math>\mu</math> B-D .33<math>\mu</math> E-F .515<math>\mu</math></p>	<p><b>Osc-Coil</b> 35.77</p> <p>A-C .02<math>\mu</math> B-D .33<math>\mu</math> E-F .515<math>\mu</math></p>
<p><b>1st I.F.</b> 35.95</p> <p>PR. BLUE-RED .22<math>\mu</math> SEC. GREEN-BLACK .22<math>\mu</math> EXP. WINDG. YELLOW-BROWN .15<math>\mu</math></p>	<p><b>2nd I.F.</b> 35.77</p> <p>PR. BLUE-RED .22<math>\mu</math> SEC. GREEN-BLACK .22<math>\mu</math></p>

FADA RADIO & ELECTRIC CO.  
LONG ISLAND CITY, N. Y.  
MODELS 366 & 366 PT  
DRAWN BY AMY  
DATE 10-23-37  
CHECKED BY J. J. [Signature]  
7/29/38

I.F. Peak = 456 Kc.

## Model 366 PT Phono Combination

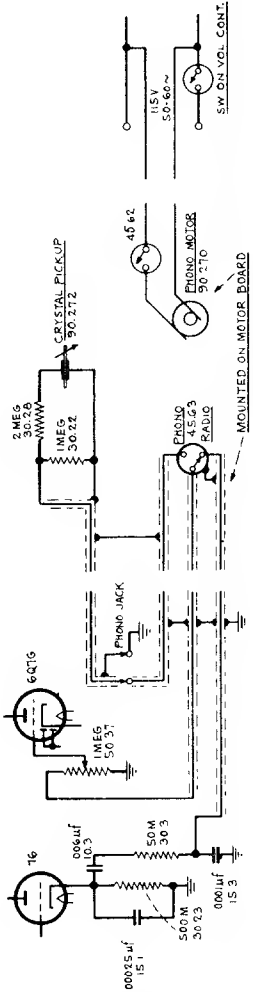


NOTE: ON EARLY MODELS, PART NO. 25.11 IS USED IN PLACE OF PART NO. 25.46.  
NOTE: ON EARLY MODELS, 10M RESISTOR - PART NO. 30.31 IS USED IN PLACE OF 35.61 & 15.00.  
NOTE: ON EARLY MODELS, PART NO. 25.11 IS USED IN PLACE OF PART NO. 25.46.  
NOTE: ON EARLY MODELS, 10M RESISTOR - PART NO. 30.31 IS USED IN PLACE OF 35.61 & 15.00.

NOTE: ON EARLY MODELS I.F. PART NO. 35.69 IS USED IN PLACE OF 35.95.

- BAND SWITCH POSITIONS**
- 1 - SHORT WAVE
  - 2 - BROADCAST
  - 3 - AUTOMATIC (B.C. ONLY)
- CHASSIS**
- M = THOUSAND OHMS
  - K = SPEAKER PLUG & SOCKET
  - No. 1 FRONT OF DIAL SOCKETS GROUNDED


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

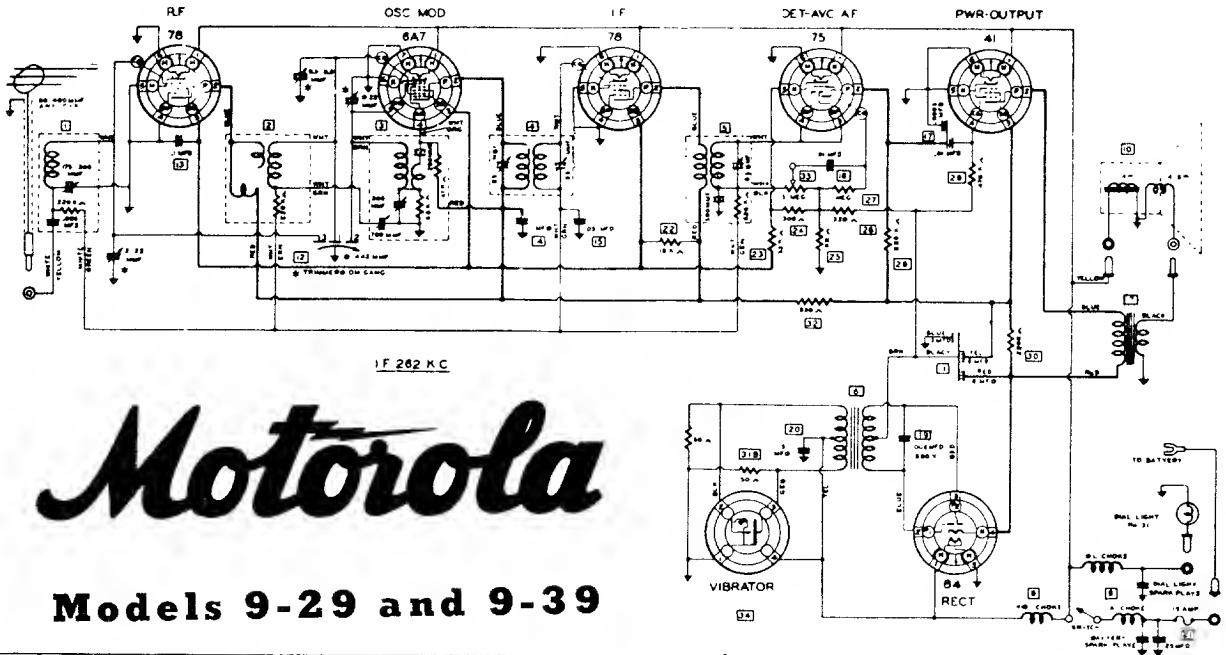

# Motorola

## Models 9-29 and 9-39

Average Microvolt Input *	Generator Set at	Generator Feeder Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter Reading **
.25 Volts	400 Cycles	75 Grid	.1 MF	.5 Meg	2.2 Volts
25,000	262 K.C.	78 Grid (I.F.)	.1 MF	.5 Meg	2.2 Volts
700	262 K.C.	6A7 Grid	.1 MF	.5 Meg	2.2 Volts
800	600 K.C.	6A7 Grid	.1 MF	.5 Meg	2.2 Volts
45	600 K.C.	78 Grid (R.F.)	.1 MF	.5 Meg	2.2 Volts
3	600 K.C.	Ant. Lead	40 MMF	None	2.2 Volts

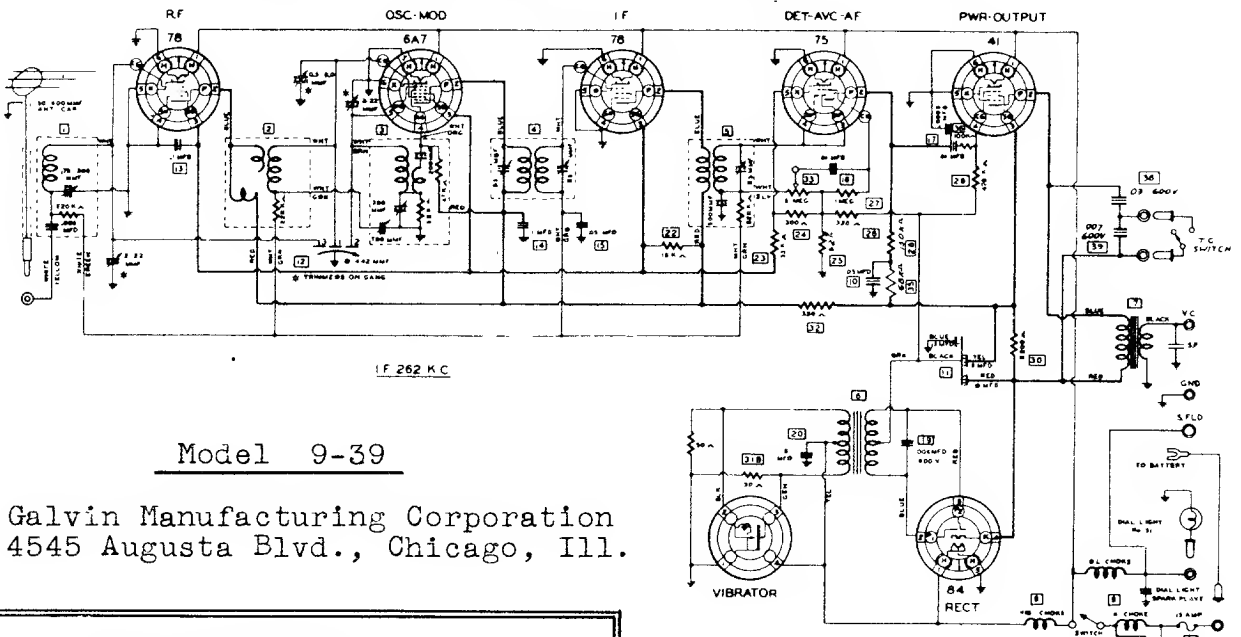

Model 9-39

Galvin Manufacturing Corporation  
4545 Augusta Blvd., Chicago, Ill.

\* For one watt output.



\*\* Meter connected across voice coil.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 43

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## GALVIN MANUFACTURING CORPORATION

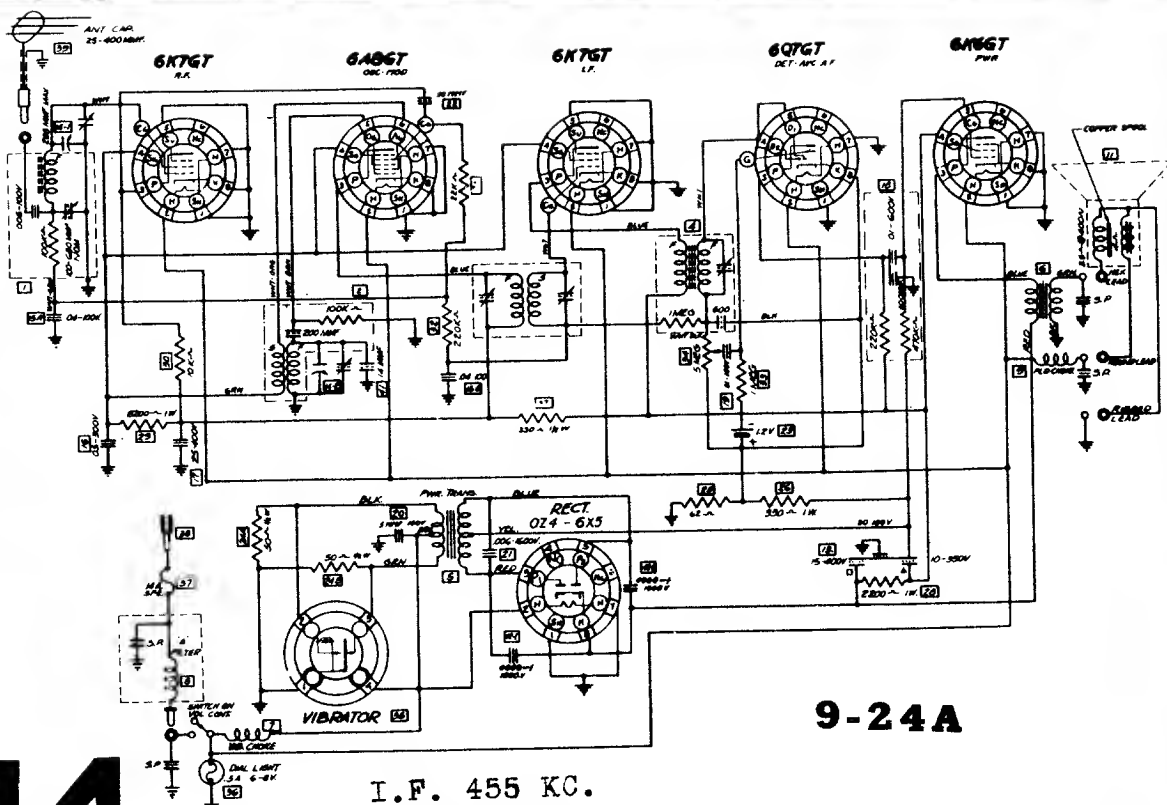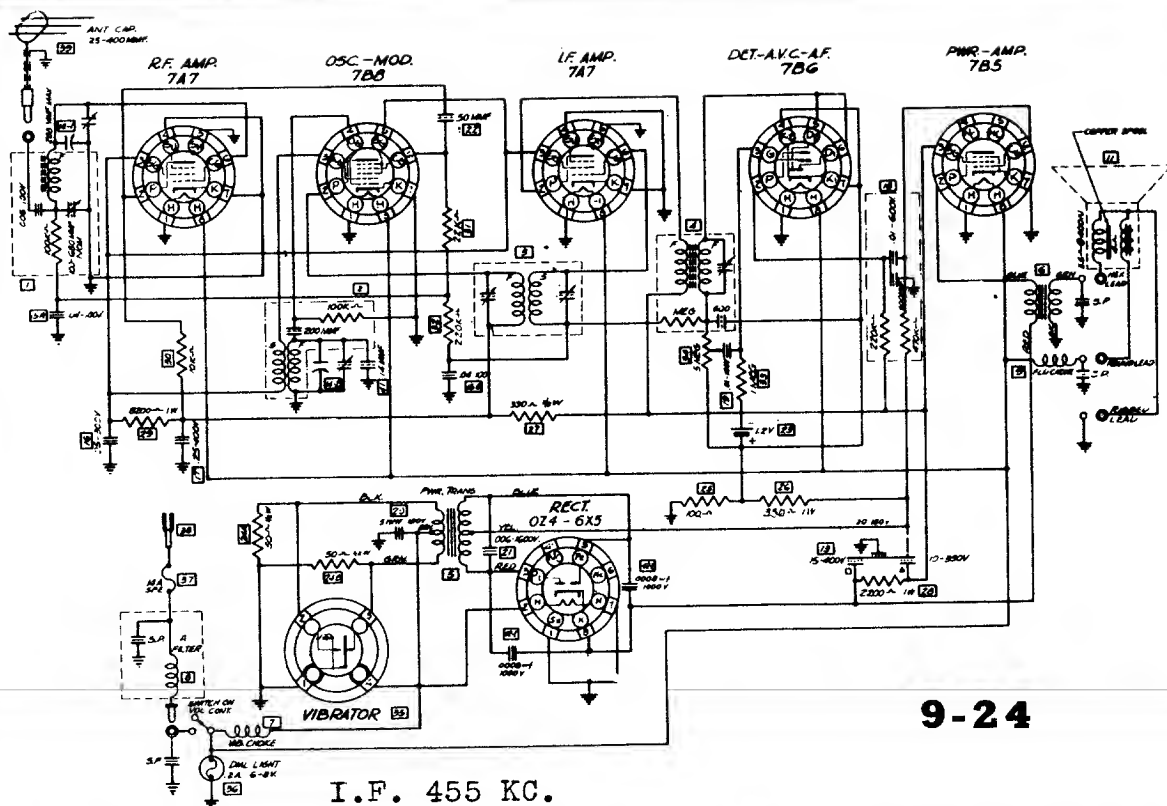

# 44



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## ALIGNMENT PROCEDURE

Place the radio on the service bench with the front cover removed, but with the speaker and battery connected to it.

Turn the volume control to maximum position and leave it there throughout the alignment, reducing the signal generator output if necessary.

NOTE: Do not adjust the trimmer in the R.F. coil can that is covered with Scotch Tape. The original adjustment, made in the factory, should not be tampered with. (Fig. 1 below, shows all trimmer locations.)

### I.F. ALIGNMENT

1. Connect the signal generator to the control grid (Terminal No. 6) of the Osc.-Mod. tube (7B8). Turn the condenser gang completely out of mesh. Connect an output meter across speaker voice coil.

2. Set the signal generator at 262 K.C. and carefully adjust the single trimmer in the Diode coil can to the point showing the highest reading on the output meter.

3. Adjust the two trimmers in the I.F. coil can to the point showing the highest output reading.

4. Repeat the I.F. and Diode adjustment several times for maximum accuracy.

### SETTING THE RANGE

1. Connect the signal generator to the con-

trol grid (Terminal No. 6) of the R.F. tube (7A7) using the same .1 MF condenser.

2. Set the signal generator at 1550 K.C. and with the condenser gang completely out of mesh, adjust the 1550 K.C. trimmer in the oscillator coil can to the point showing the highest output reading.

3. Set the signal generator at 535 K.C. Turn the condenser gang completely in mesh and adjust the 600 K.C. trimmer in the Oscillator coil can for the highest output reading.

NOTE: The adjustments above set the range so the receiver will track with the calibrations in the control head.

### R.F. AND ANTENNA ALIGNMENT

1. Connect the signal generator to the antenna lead through a 40 MMF condenser and to chassis ground. Set the signal generator at 600 K.C. and turn the condenser gang until the signal is heard. Adjust the 600 K.C. trimmer on the antenna coil can for the maximum output reading.

2. Set the signal generator at 1400 K.C. Turn the condenser gang until the signal is heard. Adjust the 1400 K.C. trimmer in the antenna coil can for maximum output reading.

3. Adjust the 1400 K.C. trimmer in the R.F. coil can for maximum output reading.

4. Recheck steps 1, 2, and 3, for accuracy.

### SENSITIVITY AND STAGE GAIN MEASUREMENTS

These stage gain measurements will, if properly used, enable you to localize trouble quickly. They are intended for use with a signal generator that is accurately calibrated in microvolts.

Starting with the I.F., and working back step by step to Osc.-Mod., R.F. and finally to the antenna terminal, the circuit in which the trouble exists will quickly be determined by evidence of low gain, when signal generator attenuation readings are compared to the normal values as shown in the table.

All stage-gain measurements must be made with the volume control set for full volume. The shielded lead from the signal generator is connected to the grid terminal of the tube through a .1 MF condenser, with a 500M ohm resistor connected as a leak resistance between the grid of the tube and the grid lead which has been removed.

When measuring over-all sensitivity at the antenna terminal, use a 40 MMF condenser in place of the .1 MF. It must be remembered that the figures in the table are average and allowance must be made for variations between two sets of the same general type, due to difference of tube characteristics, etc.

Average Microvolt Input *	Generator Set at	Generator Feeder Connected to	Dummy Antenna Capacity	Leak Resistance	Output Meter Reading **
25,000	262 K.C.	Grid(I.F.)	.1 MF	.5 Meg.	1.74 Volts
700	262 K.C.	Grid(Mod.)	.1 MF	.5 Meg	1.74 Volts
800	600 K.C.	Grid(Mod.)	.1 MF	.5 Meg	1.74 Volts
45	600 K.C.	Grid(R.F.)	.1 MF	.5 Meg	1.74 Volts
2	600 K.C.	Ant. Lead	40 MMF	None	1.74 Volts

\* For one watt output.

\*\* Meter connected across voice coil.


V.C. impedance - 3 ohms at 400 cycles.

# 46

## Model 9-49

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

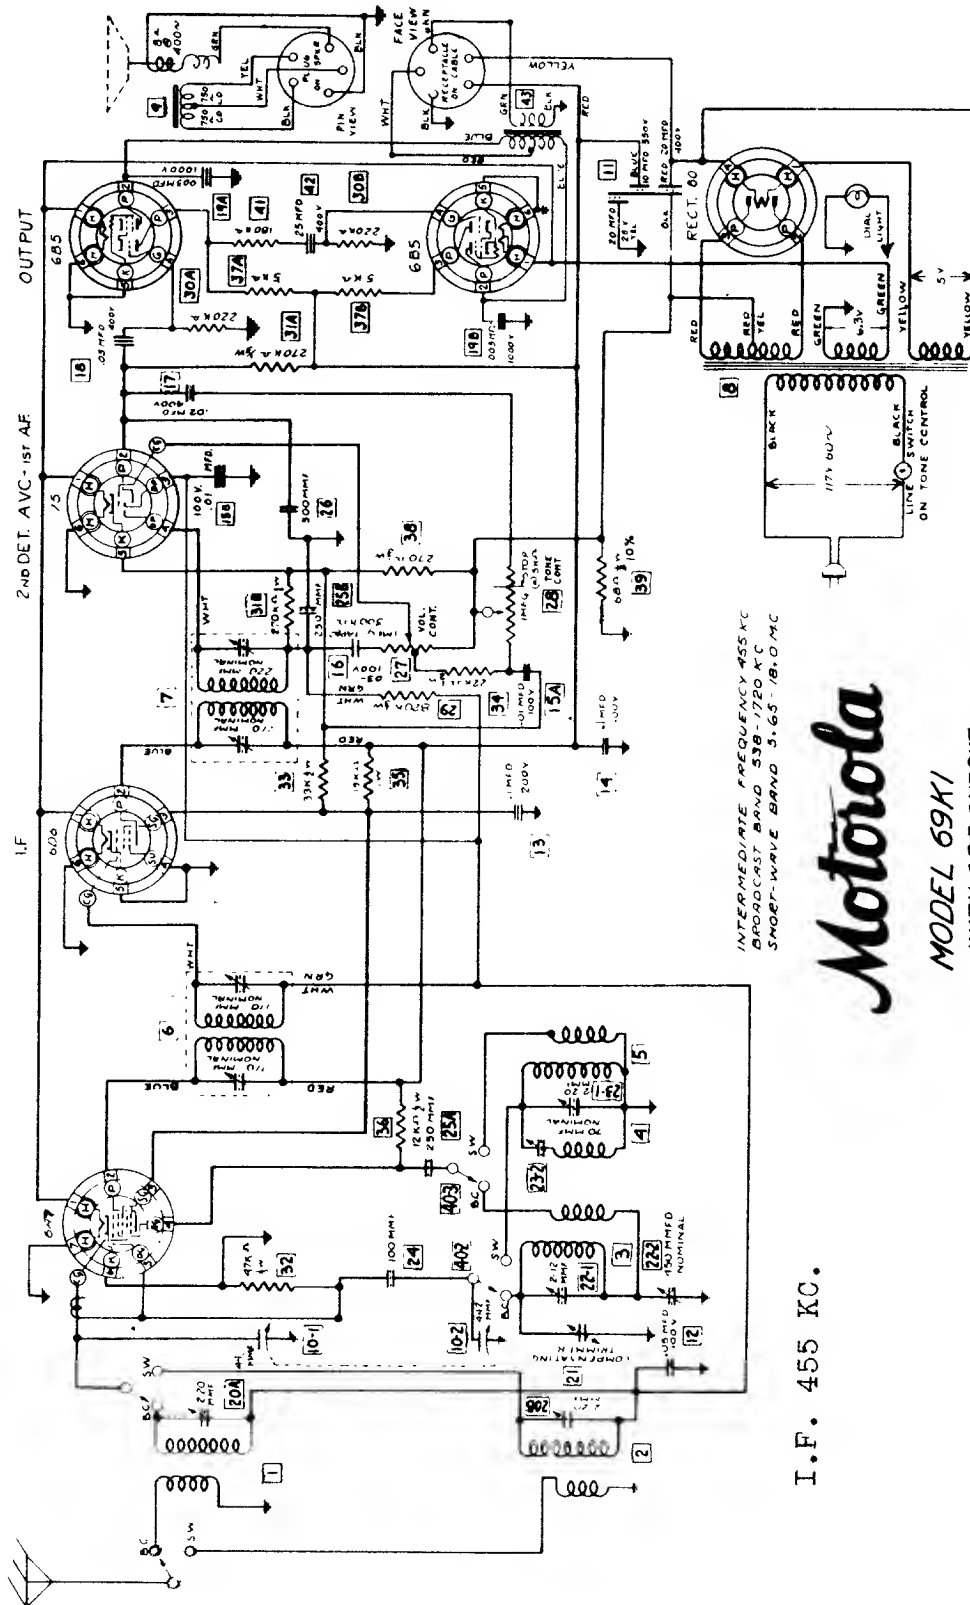


INTERMEDIATE FREQUENCY 455 KC  
 BROADCAST BAND 538-1720 KC  
 SHORT-WAVE BAND 5.65-18.0 MC

I.F. 455 KC.


**Motorola**  
 MODEL 69K1  
 WITH 6B5 OUTPUT

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

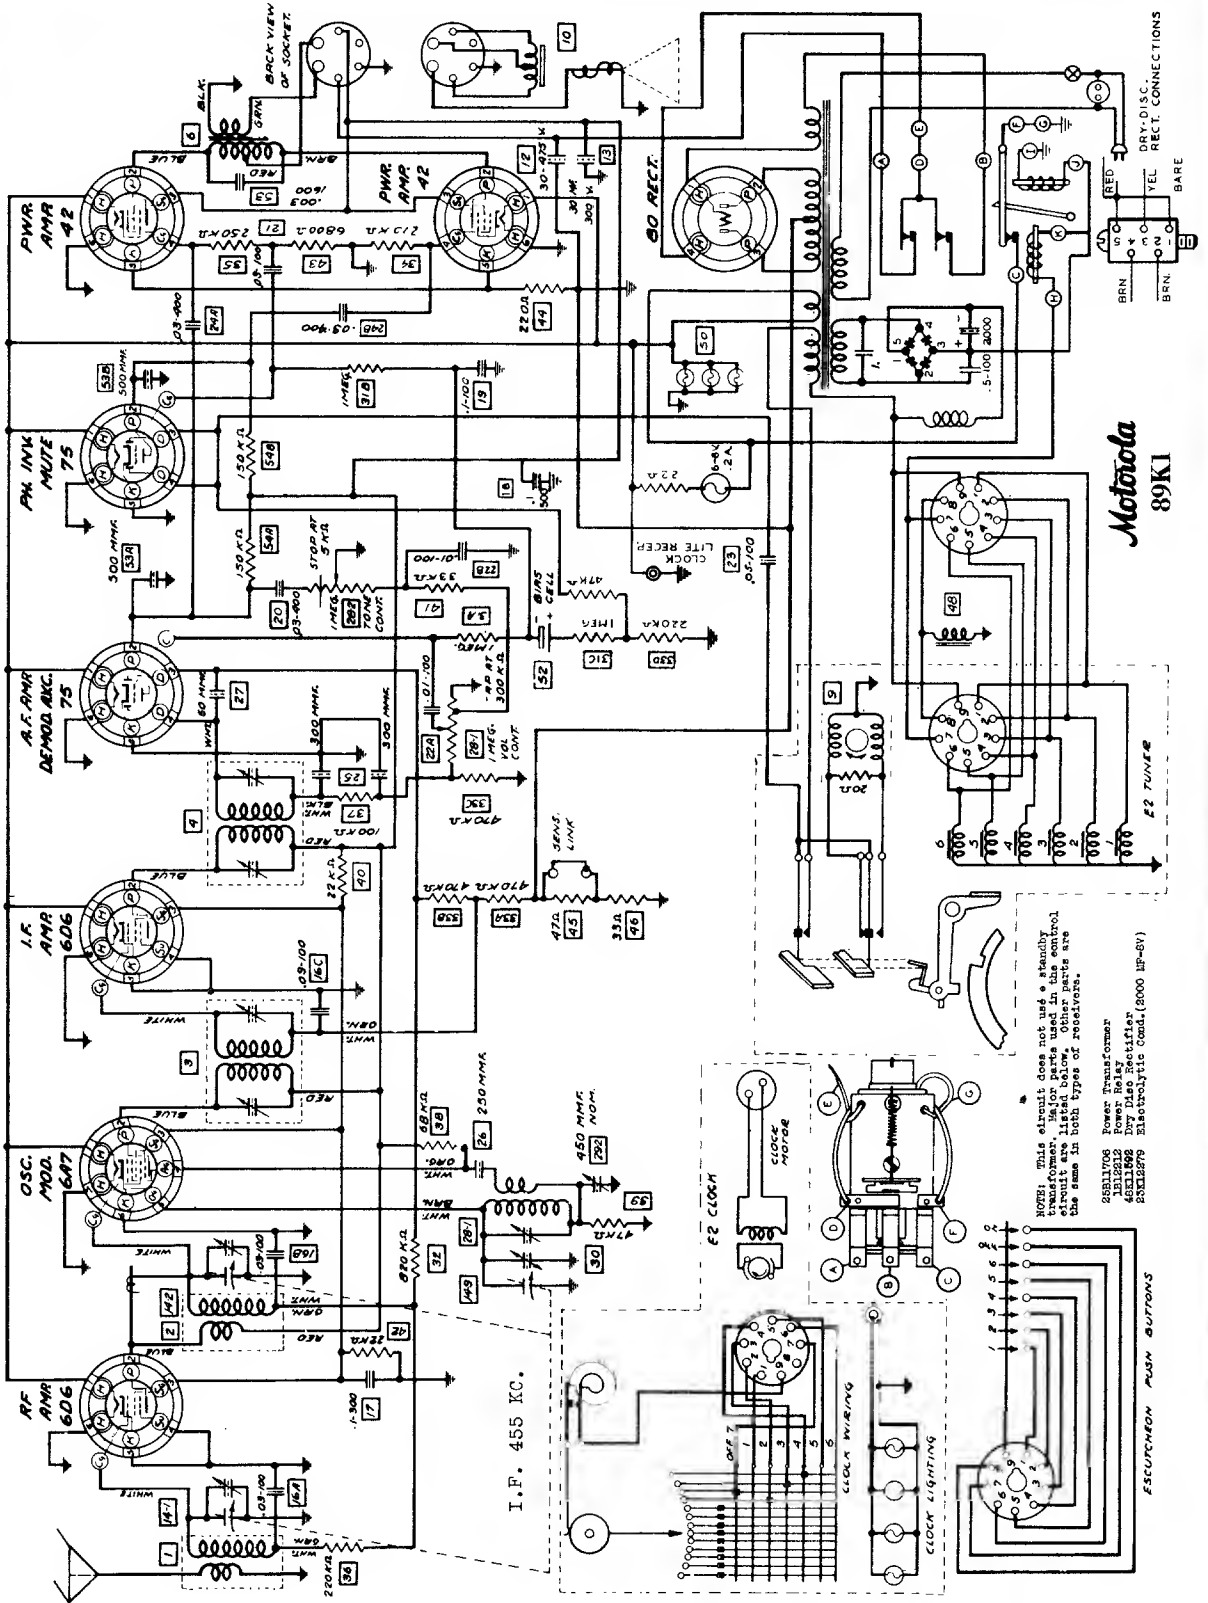

Gamble-Skogmo, Inc.

SERIES A 11

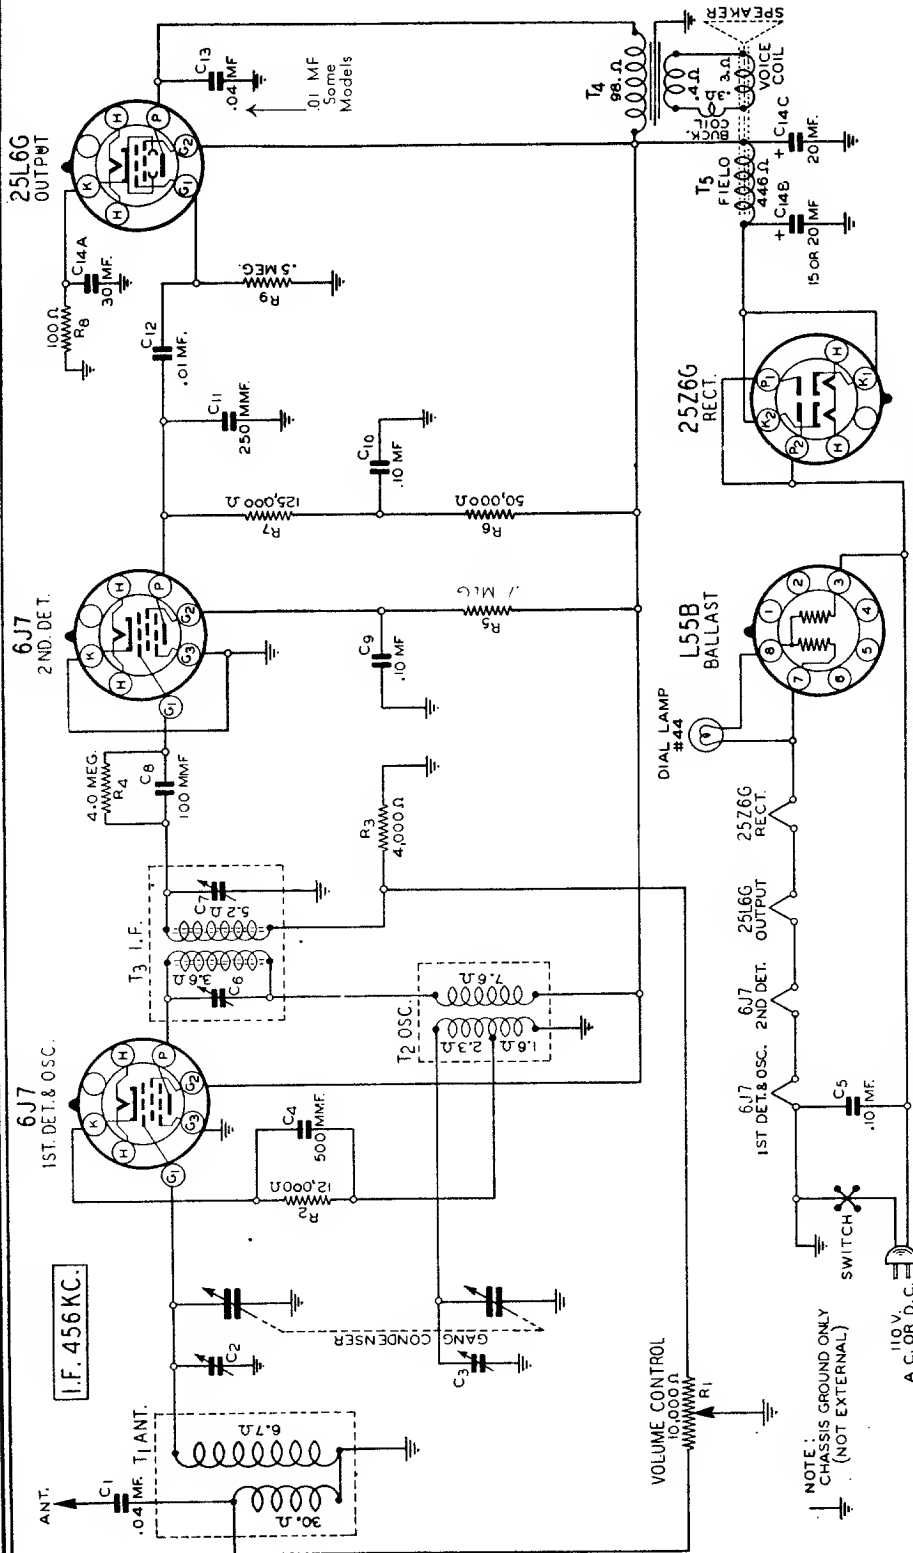


## ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments. Allow Chassis and Signal Generator to "Heat Up" for Several Minutes.

SIGNAL GENERATOR FREQUENCY SETTING	DUMMY ANTENNA CONNECTION AT RADIO	DUMMY ANTENNA SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM (See Illustration)
456 KC	Grid of 1st Det.	.1 mf.	Turn rotor to full open	I.F. (C6) & (C7)
1730 KC	Antenna Lead	200 mmf.	Turn rotor to full open	Oscillator (C3)
1500 KC	Antenna Lead	200 mmf.	Turn rotor to max. output	Antenna (C2)

The following equipment is required for aligning:  
 Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.  
 Output Indicating Meter; Non-Metallic Screwdriver.  
 Dummy Antennas — .1 mf. and 200 mmf.


NOTE—To obtain dial scale calibration, tune in an 800 KC signal. The pointer should be at the 800 KC mark on the dial. If it is not, loosen the pointer screw, set the pointer at the 800 KC mark and retighten the pointer screw.

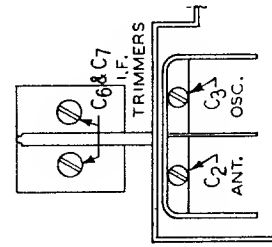




# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Coronado Model 802-A

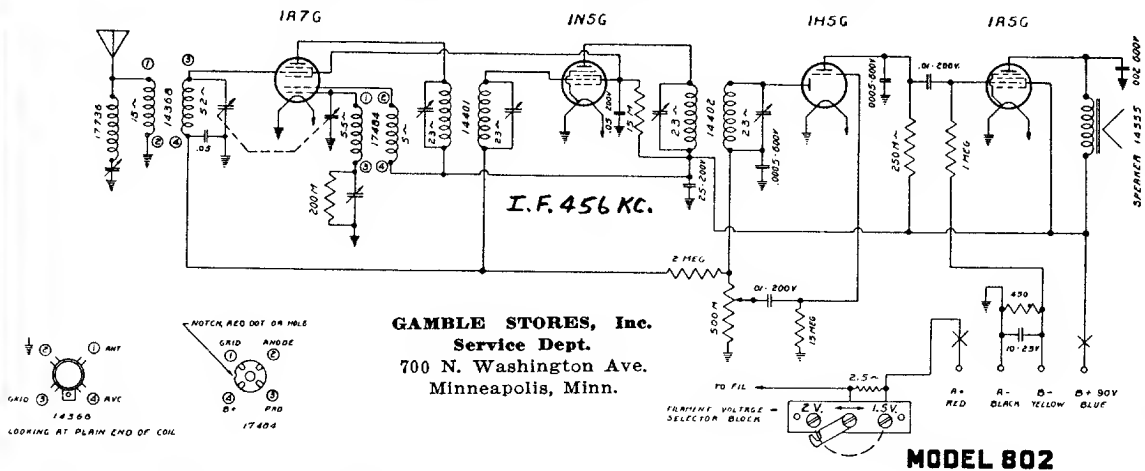


### MODEL 476


Gamble-Skogmo, Inc.

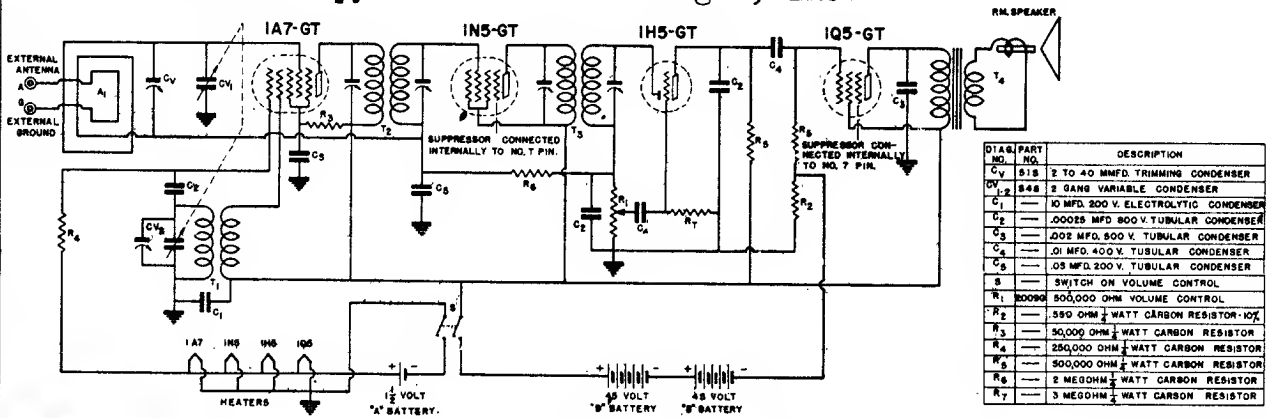


### MODEL 807

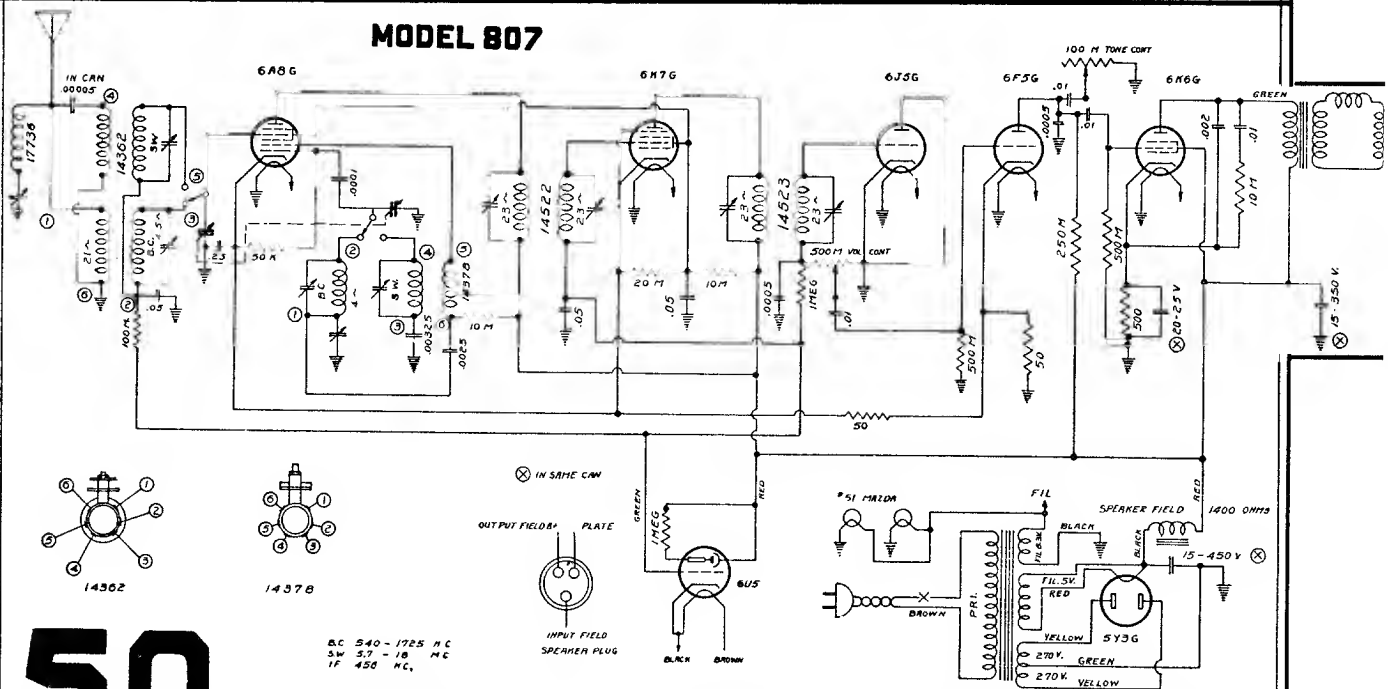

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

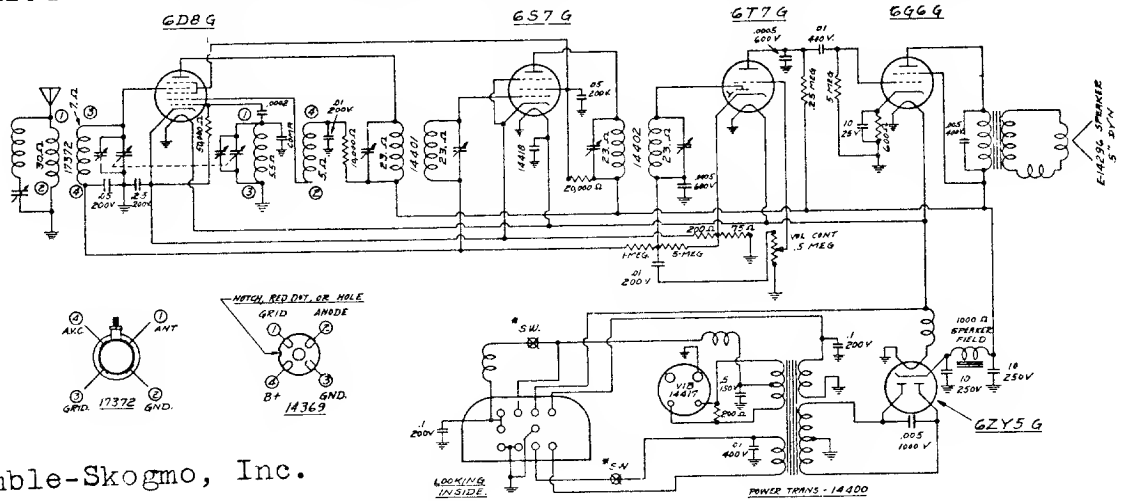


Gamble-Skogmo, Inc.

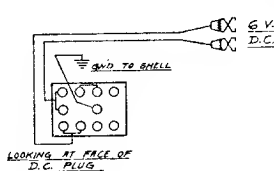

\* SW. ON VOL CONT.  
 I.F. FREQUENCY - 456 K.C.  
 B.C. FREQUENCY - 548-1725 K.C.


## MODEL 803

Gamble-Skogmo, Inc.

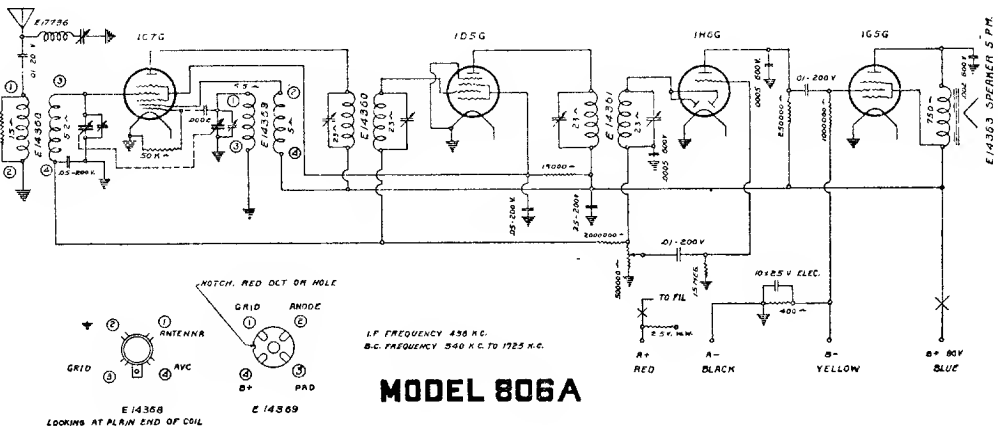

## MODEL 806A

I.F. FREQUENCY 456 K.C.  
 B.C. FREQUENCY 540 K.C. TO 1725 K.C.

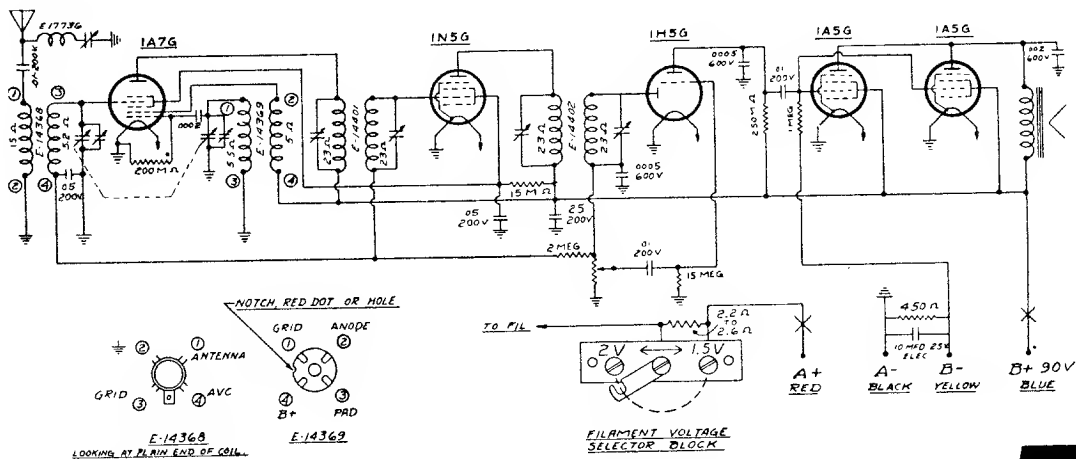


## MODEL 813

I.F. - 456 K.C.  
 B.C. FREQUENCY - 540 K.C. TO 1725 K.C.

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

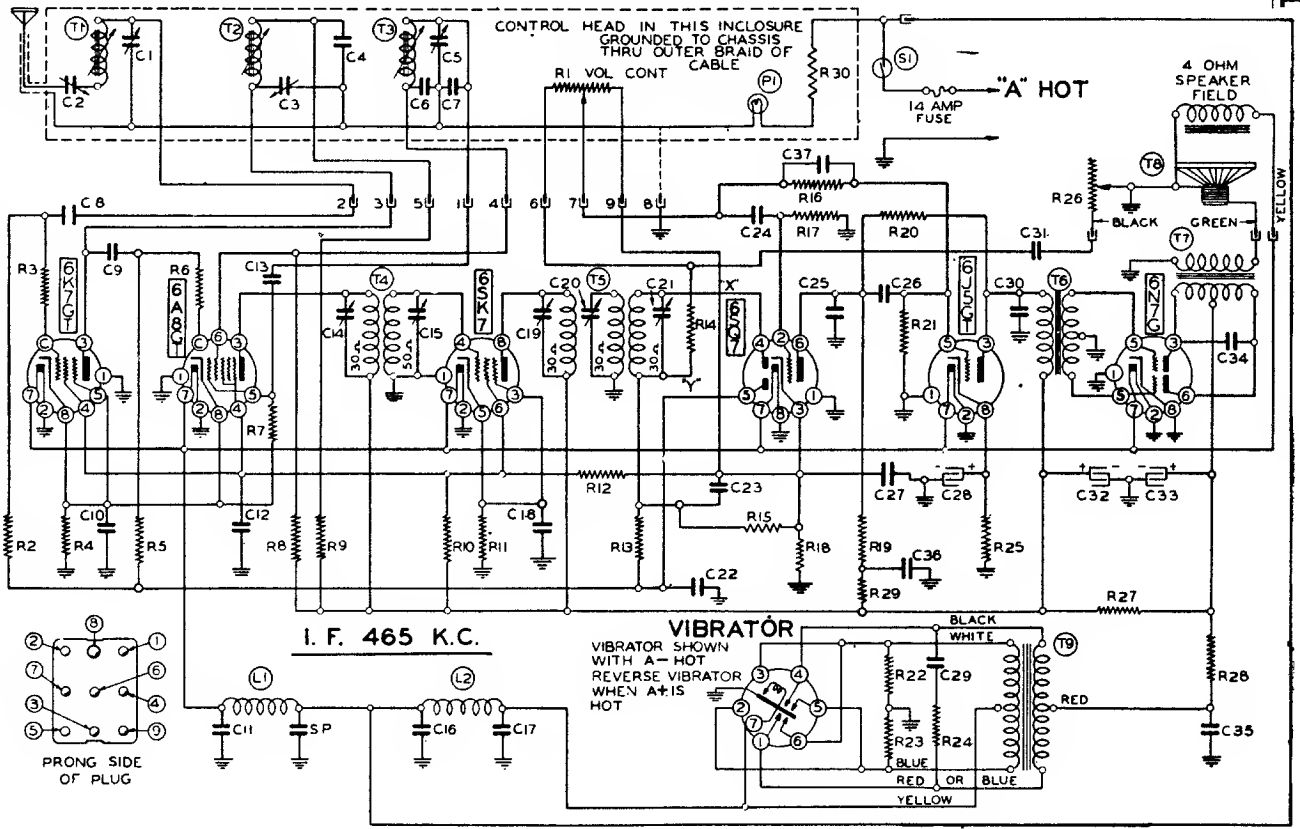

## MODEL 678

R1	101161	1.2 megohm volume	C11	1296	.002 Mica
R2	13019	1 megohm— $\frac{1}{2}$ w.	C12	11625	.25 x 400 v.
R3	130275	500 ohm— $\frac{1}{2}$ w.	C13	12912	.00025 Mica
R4	13079	400 ohm— $\frac{1}{2}$ w.	C14		Plate Trimmer on Input I.F.
R5	13019	1 megohm— $\frac{1}{2}$ w.	C15		Grid Trimmer on Input I.F.
R6	130275	500 ohm— $\frac{1}{2}$ w.	C16	10031	.5 x 120 v.
R7	13012	50M ohm— $\frac{1}{2}$ w.	C17	10031	.5 x 120 v.
R8	13012	50M ohm— $\frac{1}{2}$ w.	C18	1009	.05 x 200 v.
R9	13021	20M ohm— $\frac{1}{2}$ w.	C19		Plate Trimmer on Output I.F.
R10	130196	30M ohm—1 watt	C20		Tertiary Trimmer on Output I.F.
R11	130235	1500 ohm— $\frac{1}{2}$ w.	C21		Grid Trimmer on Output I.F.
R12	1307	40M ohm— $\frac{1}{2}$ w.	C22	11625	.05 x 200 v.
R13	13019	1 megohm— $\frac{1}{2}$ w.	C23	1295	.0001 Mica
R14	13020	100M ohm— $\frac{1}{2}$ w.	C24	10011	.01 x 400 v.
R15	130118	600M ohm— $\frac{1}{2}$ w.	C25	1295	.0001 Mica
R16	130257	5 megohm— $\frac{1}{2}$ w.	C26	10011	.01 x 400 v.
R17	13019	1 megohm— $\frac{1}{2}$ w.	C27	10026	.02 x 400 v.
R18	130101	600 ohm— $\frac{1}{2}$ w.	C28	11988	20 mfd.—25 w. v. lytic
R19	13011	250M ohm— $\frac{1}{2}$ w.	C29	100101	.0055 x 1600
R20	13038	2 megohm— $\frac{1}{2}$ w.	C30	129114	.0003 Mica
R21	1303	500M ohm— $\frac{1}{2}$ w.	C31	10047	.002 x 600 v.
R22	130269	100 ohm— $\frac{1}{2}$ w.	C32	11988	15 mfd.—450 w. v. lytic
R23	130269	100 ohm— $\frac{1}{2}$ w.	C33	11988	15 mfd.—450 w. v. lytic
R24	13071	4M ohm— $\frac{1}{2}$ w.	C34	100103	.004 x 800 v.
R25	13092	1M ohm— $\frac{1}{2}$ w.	C35	1001	.1 x 400 volt
R26	101162	1 megohm tone control	C36	10013	.05 x 400 v.
R27	130199	1500 ohm Resistor—1 w	C37	12967	.00004 Mica
R28	130231	75 ohm— $\frac{1}{2}$ w.			
R29	13020	100M ohm— $\frac{1}{2}$ w.			
R30	130299	10 ohm— $\frac{1}{2}$ w.			



### CONDENSERS

C2	12483	Antenna Shunt Trimmer
C3	12481	Antenna Series Trimmer
C4	12480	R. F. Shunt Trimmer
C5	100102	.15 x 400 v.
C6	12480	Oscillator Shunt Trimmer
C7	129137	.0005 Mica
C8	129136	.00017 Mica
C9	12997	.00005 Ceramicon—5%
C10	1292	.0005 Mica
	11625	.05 x 200 v.

### PARTS

T1	111118	P. B. Antenna Coil Assembly
T2	10949	P. B. R. F. Coil Assembly
T3	110109	P. B. Oscillator Coil
T4	108120B	Input I.F. Coil—465 kc.
T5	108115B	Output I.F. Coil—465 kc.
T6	10584	Audio Driver Transformer
T7	10583	Output Transformer
T8	114155	8" Dynamic Speaker
T9	104158	Power Transformer
L1	10566	"A" Choke
L2	10519	"A" Choke
P1	10797	6-8 v. Pilot Light T51
S1		Off-on Switch on volume control

### BOTTOM VIEW OF CHASSIS

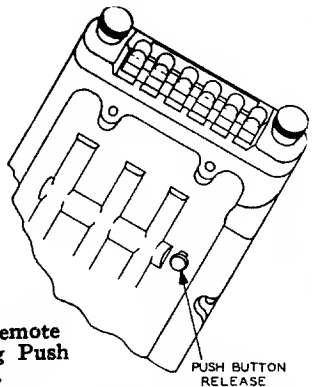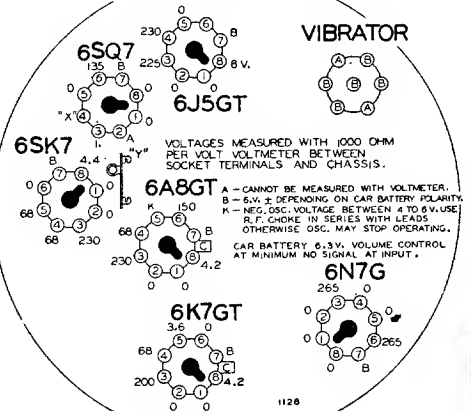

Bottom View of Remote Tuner Unit Showing Push Button Release Pin.

Gamble-Skogmo, Inc. **COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS**

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## ALIGNMENT

General Electric

### MODELS GD-41 AND GD-41-U

#### Electrical Power Output

Undistorted.....1.0 watt  
Maximum.....2.0 watts


#### Loud-speaker—Electrodynamic

Outside Cone Diameter.....5 inches  
Voice Coil Impedance.....3.5 ohms at 400 cycles  
Field Coil Resistance.....420 ohms (cold)

Connect the high side of the signal generator through a 250 mmf. condenser to the antenna lead. The low side of the signal generator output should be connected to the receiver chassis through a .05 mfd. condenser. Connect a suitable output meter across the voice coil leads; then proceed as follows:

1. With gang condenser plates completely closed, the dial pointer should coincide with the horizontal dial line.
2. Tune receiver to the 1500 kc. point on the dial; then align trimmers (C-3 and C-5) on the gang condenser at 1500 kc. for a maximum output meter reading.

Precaution—One side of the power supply is connected to the chassis—Do not connect chassis to any external ground.

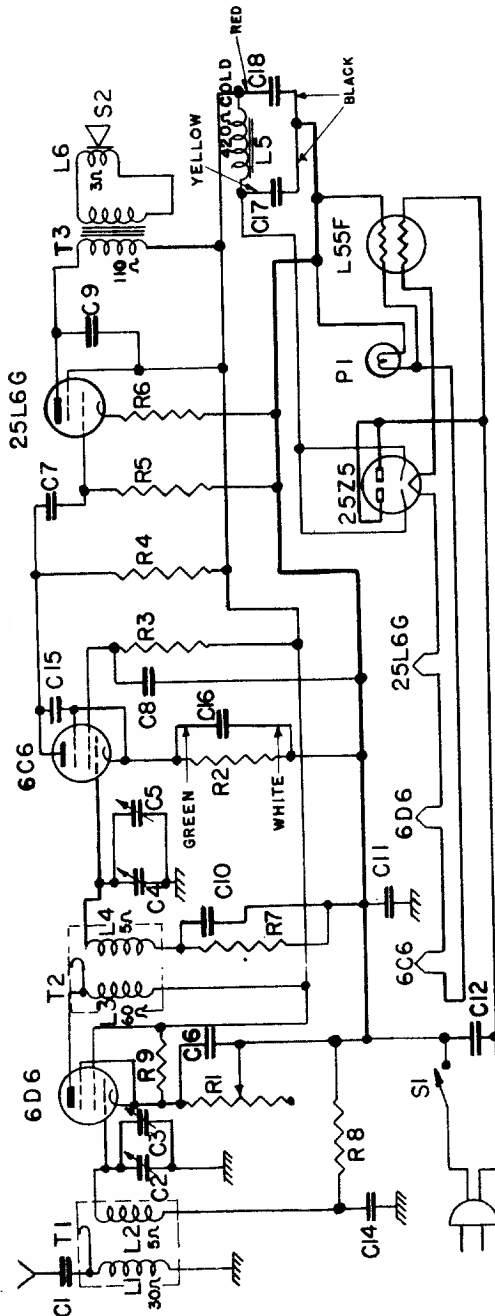

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Capacitor—.01 Mfd. (GD-41)	C-11	Capacitor—Paper .1 Mfd.	R-5	Resistor—1 Megohm
C-2	Capacitor—Paper .001 Mfd. (GD-41-U)	C-12	Capacitor—Paper .05 Mfd.	R-6	Resistor—150 Ohms
C-3	Capacitor—Variable	C-13	Capacitor—Paper .01 Mfd.	R-7	Resistor—1/4 Megohm
C-4	Capacitor—Trimmer on gang	C-14	Capacitor—Mica 100 Mmf.	R-8	Resistor—1/4 Megohm
C-5	Capacitor—Variable	C-15	Capacitor—Elect. 5 Mfd. 25 V.	T-1	Antenna Transformer
C-6	Capacitor—Trimmer on gang	C-16	Capacitor—Elect. 16 Mfd. 150 V.	T-2	R.F. Transformer
C-7	Capacitor—Paper .05 Mfd.	C-17	Resistor—25,000 Ohms Volume Control	T-3	Output Transformer (on speaker)
C-8	Capacitor—Paper .01 Mfd.	R-1	Resistor—35,000 Ohms	R-9	Resistor—50,000 Ohms
C-9	Capacitor—Paper .01 Mfd.	R-2	Resistor—3 Megohms	S-1	Power Switch (Comb. with R-1)
C-10	Capacitor—Paper .01 Mfd.	R-3	Resistor—1 Megohm	S-2	Loud-speaker—5-inch


Note—The schematic shown is for the Model GD-41-U. Model GD-41-A omits items C-10, C-11, C-14, R-7, R-8, R-9; also X-X bus is grounded to chassis, coil L-2 and L-4 return to chassis, C-15 to chassis ground instead of 6C6 cathode, low end of volume control is connected between C-1 and L-1.

Tube No.	Plate to -B Volts D.C.		Screen to -B Volts D.C.		Cathode to -B Volts D.C.		Cathode Current M.A. D-C		Heater Volts	
	AC	DC	AC	DC	AC	DC	AC	DC	AC	DC
6D6	113	90	113	90	9.0	7.4	0.7	0.6	6.35	6.06
6C6	20*	16.4*	45	37	3.1	2.5	0.1	0.08	6.35	6.06
25L6G	108	88	113	90	7.6	6.2	40.5	33.1	25.0	23.5
25Z5	.....	.....	133	108	133	108	43.0	35.0	26.0	24.0

Line voltage 115 AC or DC—No signal input—1000 ohms per volt meter.  
Dial pointer at 540 kc. Volume control at minimum.  
\* Measured on 250 volt scale.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## General Electric Model GD-60

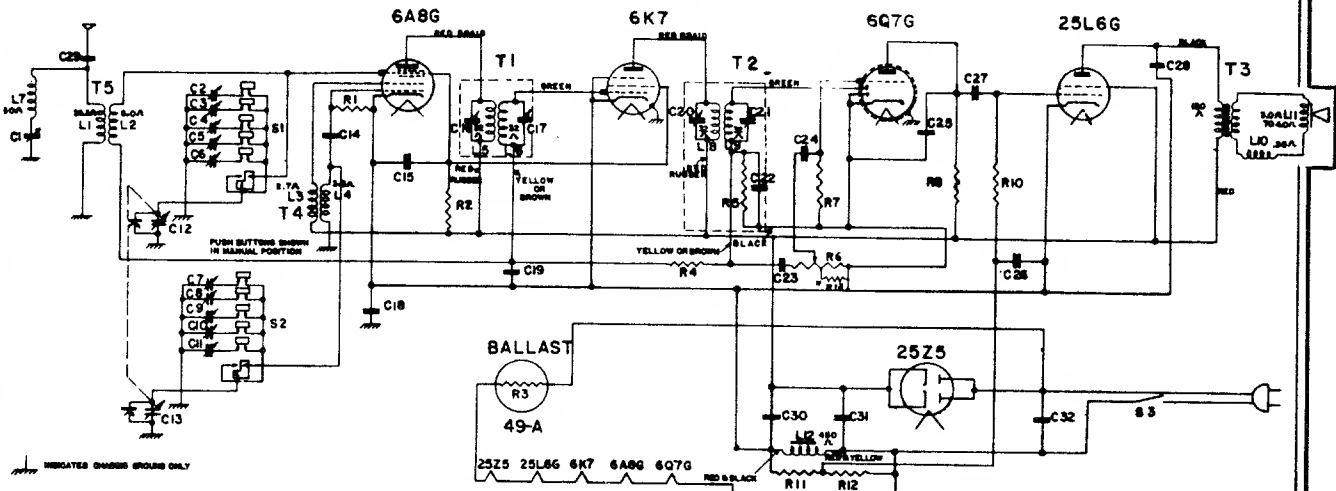

\* Used on early production receivers only. For replacement purposes, use specified volume control and omit R-13

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Wave Trap Trimmer, 45-145 Mmf.	C-20	Trimmer Capacitor, 50-135 Mmf.	R-7	Carbon Resistor, 15 Megohms
C-2	Selector Trimmer, 100-510 Mmf.	C-21	Trimmer Capacitor, 50-135 Mmf.	R-8	Carbon Resistor, 220,000 Ohms
C-3	Selector Trimmer, 75-410 Mmf.	C-22	Mica Capacitor, 470 Mmf.	R-10	Carbon Resistor, 470,000 Ohms
C-4	Selector Trimmer, 50-300 Mmf.	C-23	Paper Capacitor, .002 Mfd.	R-11	Carbon Resistor, 270,000 Ohms
C-5	Selector Trimmer, 50-300 Mmf.	C-24	Paper Capacitor, .002 Mfd.	R-12	Carbon Resistor, 68,000 Ohms
C-6	Selector Trimmer, 20-200 Mmf.	C-25	Mica Capacitor, 330 Mmf.	R-13	Carbon Resistor, 68,000 Ohms
C-7	Selector Trimmer, 50-300 Mmf.	C-26	Paper Capacitor, .15 Mfd.	S-1	Antenna Switch
C-8	Selector Trimmer, 50-300 Mmf.	C-27	Paper Capacitor, .005 Mfd.	S-2	Oscillator Switch
C-9	Selector Trimmer, 20-200 Mmf.	C-28	Paper Capacitor, .03 Mfd.	S-3	Power Switch combined with R-6
C-10	Selector Trimmer, 20-200 Mmf.	C-29	Paper Capacitor, .001 Mfd.	T-1	1st I.F. Transformer
C-11	Selector Trimmer, 10-100 Mmf.	C-30	Dry Electrolytic Cap., 12 Mfd.	T-2	2nd I.F. Transformer
C-12	Tuning Condenser Ant.	C-31	Dry Electrolytic Cap., 20 Mfd.	T-3	Output Transformer
C-13	Mica Capacitor, 47 Mmf.	C-32	Paper Capacitor, .02 Mfd.	T-4	Oscillator Transformer
C-14	Mica Capacitor, .25 Mfd.	R-1	Carbon Resistor, 47,000 Ohms	T-5	Antenna Transformer
C-15	Trimmer Capacitor, 50-135 Mmf.	R-2	Carbon Resistor, 10,000 Ohms	L-10	Hum Buck Coil
C-16	Trimmer Capacitor, 50-135 Mmf.	R-3	Ballast Tube 49-A, 170 Ohms	L-11	Voice Coil
C-17	Trimmer Capacitor, 50-135 Mmf.	R-4	Carbon Resistor, 2.2 Megohms	L-12	Field Coil—450 Ohms (cold)
C-18	Paper Capacitor, .25 Mfd.	R-5	Carbon Resistor, 470,000 Ohms		
C-19	Paper Capacitor, 0.5 Mfd.	R-6	Volume Control, 2 Megohms		

NOTE—In some receivers a 150,000 to 390,000 ohm resistor is connected across C-18.

### GENERAL INFORMATION

Model GD-60 is a compact, six-tube AC-DC superheterodyne receiver, employing six General Electric Pre-tested Tubes as described above, in a superheterodyne circuit. It incorporates a simplified trimmer tuned "Touch-Tuning" system, allowing a set up of five stations for automatic tuning. Other features of design include I.F. wave trap, automatic volume control and an improved dustproof speaker.

#### I.F. Alignment

Connect an output meter across the voice coil. Set the volume control for maximum.

Set test oscillator to 455 and apply signal to the control grid of the 6A8G tube through a .05 mfd. capacitor. Do not remove the grid lead from the 6A8G and keep the test oscillator output as low as possible to give a readable output. Adjust all four I.F. trimmers for maximum output.


#### Wave Trap Alignment

Leave the test oscillator set to 455 K.C. and connect one output lead to the receiver chassis and the other through a 250 mmf. capacitor in series with 200 ohms to the receiver antenna lead. Adjust (C-1) for minimum output.

#### R.F. Alignment

Use the same dummy antenna (250 mmf. and 200 ohms) with 1500 K.C. input, adjust the oscillator trimmer (C-13) and antenna trimmer (C-12) for a maximum output.

**Precaution**—One side of the power supply is connected to the chassis through a .25 mfd. capacitor. If signal generator is AC operated, connect a .05 mfd. capacitor in the ground side before connecting it to the receiver chassis.

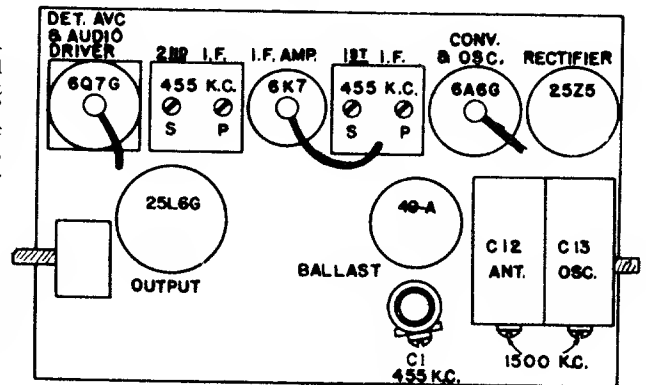

Tuning Frequency Range..... 540-1750 K.C.

Intermediate Frequency..... 455 K.C.


Electrical Power Output (120—line volts)

	AC	DC
Undistorted.....	1.2	1.0
Maximum.....	2.0	1.7

#### Loudspeaker—Electrodynamic

Outside Cone Diameter..... 5-inch  
Voice Coil Impedance..... 3.5 ohms at 400 cycles  
Field Coil Resistance..... 450 ohms (cold)

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

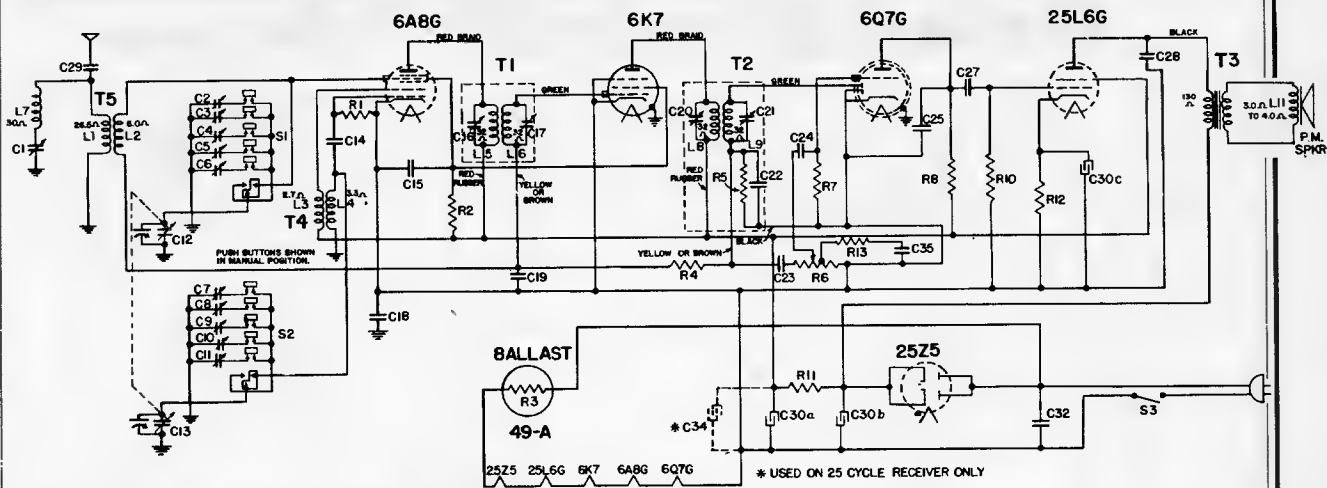

Set test oscillator to 455 and apply signal to the control grid of the 6A8G tube through a .05 mfd. capacitor. Do not remove the grid lead from the 6A8G. Keep the test oscillator output as low as possible to give a readable output. Adjust all four I.F. trimmers for maximum output.

### Wave Trap Alignment



Leave the test oscillator set to 455 K.C. and connect one output lead to the receiver chassis and the other through a 250 mmf. capacitor in series with 200 ohms to the receiver antenna lead. Adjust (C-1) for minimum output.

### R.F. Alignment

Use the same dummy antenna (250 mmf. and 200 ohms) with 1500 K.C. input, adjust the oscillator trimmer (C-13) and antenna trimmer (C-12) for a maximum output.

**Precaution**—One side of the power supply is connected to the chassis through a .25 mfd. capacitor. If signal generator is AC operated, connect a .05 mfd. capacitor in the ground side before connecting it to the receiver chassis.

## General Electric MODEL GD-63

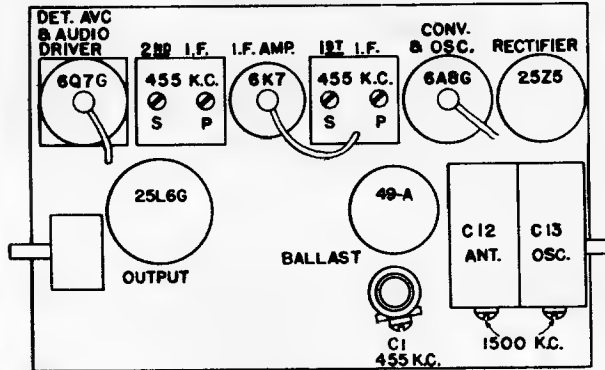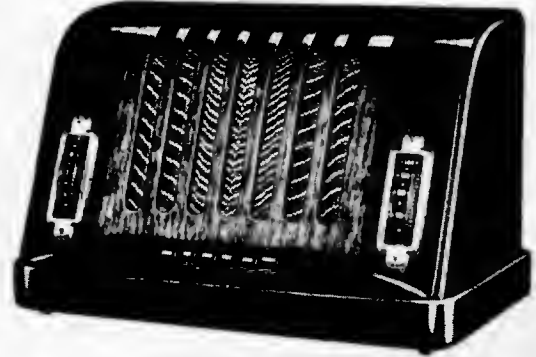

### VOLTAGE CHART

Tube No.	6A8G	6K7	6Q7G	25L6G	25Z5
Plate to -B volts	112	112	55*	130	..
Screen to -B volts	75	75	..	115	..
Cathode to -B volts	0	0	0	7.5	136
Cathode Current MA	6.6	1.4	0.5	40	50
Filament Volts	6.0	6.0	6.1	24.5	24.0

Line Voltage—120 AC. No signal input  
\* Measured on 250-volt scale.  
On DC, voltages are about 15 per cent lower.

Symbol	Description
C1	Wave trap trimmer
C2-C6	Antenna trimmer strip
C7-C11	Oscillator trimmer strip
C12, C13	Tuning condenser
C14	47 mmf., mica capacitor
C15	.25 mfd., paper capacitor
C18	.25 mfd., paper capacitor
C19	.05 mfd., paper capacitor
C22	470 mmf., mica capacitor
C23, 24	.002 mfd., paper capacitor
C25	330 mmf., mica capacitor
C27	.005 mfd., paper capacitor
C28	.01 mfd., paper capacitor
C29	.001 mfd., paper capacitor
C30a	20 mfd., dry electrolytic
C30b	40 mfd., dry electrolytic
C30c	20 mfd., dry electrolytic
C32	.02 mfd., molded capacitor
C34	15 mfd., dry electrolytic
C35	.005 mfd., paper capacitor
R1	47,000 ohm, carbon resistor
R2	10,000 ohm, carbon resistor
R3	Ballast resistance, 49A
R4	2.2 megohm, carbon resistor
R5	470,000 ohm, carbon resistor
R6	2.2 megohm, volume control
R7	15.0 megohm, carbon resistor
R8	220,000 ohm, carbon resistor
R10	1.0 megohm, carbon resistor
R11	2200 ohm, carbon resistor
R12	180 ohm, carbon resistor
R13	68,000 ohm, carbon resistor
T1	1st I.F. transformer
T2	2nd I.F. transformer
T3	Output transformer*
T4	Osc. transformer
T5	Antenna transformer



COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 55

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## GENERAL ELECTRIC

## MODEL GD-500

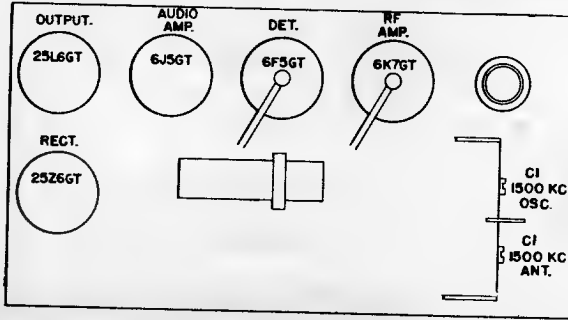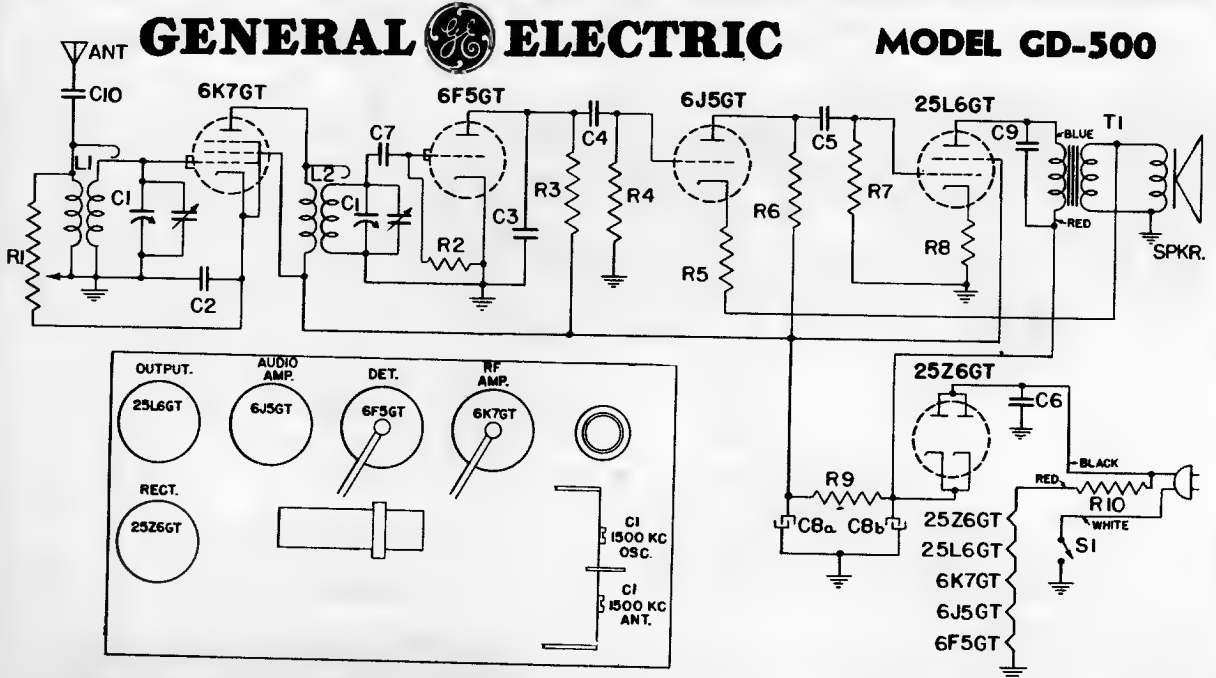

Symbol	Description	Symbol	Description	Symbol	Description
C-1	Tuning Condenser	C-9	.02 mfd., Paper Capacitor	R-7	470,000 ohm, Carbon Resistor
C-2	.05 mfd., Paper Capacitor	C-10	.002 mfd., Paper Capacitor	R-8	150 ohm, Carbon Resistor
C-3	.001 mfd., Paper Capacitor	R-1	30,000 ohm, Volume Control	R-9	4,700 ohm, Carbon Resistor
C-4, -5	.005 mfd., Paper Capacitor	R-2	15 megohm, Carbon Resistor	R-10	162 ohm, Power Cord Resistor
C-6, -7	.01 mfd., Paper Capacitor	R-3, -4	470,000 ohm, Carbon Resistor	L-1	Antenna Coil
C-8a	15 mfd., Dry Electrolytic	R-5	3,300 ohm, Carbon Resistor	L-2	RF Coil
C-8b	30 mfd., Dry Electrolytic	R-6	100,000 ohm, Carbon Resistor	T-1	Output Transformer

### VOLTAGE CHART

Tube No.	6K7GT	6J5GT	6F5GT	25L6GT	25Z6GT
Plate to -B Volts	88	30 *	35 *	132	120. AC
Screen to -B Volts	88	...	....	88	....
Cathode to -B Volts	0	1.3	0	5.5	140
Filament Volts	6.4	6.3	6.2	25.0	25.0

Voltage measured when volume control is set to maximum.  
Line Voltage—120 AC. No signal input.

\* Measured on 500-volt scale.


On DC. voltages should read approximately 10% lower.

### ALIGNMENT

Connect the high side of the signal generator through a 250 mmf. condenser to the antenna lead. The low side of the signal generator output should be connected to the receiver chassis through a .05 mfd. condenser. Connect a suitable output meter across the voice coil leads; then proceed as follows:

1. With gang condenser plates completely closed, the tuning mark should be over the last mark on the dial.
2. Tune receiver to the 1500 KC point on the dial; then align trimmers on the gang condenser at 1500 KC for a maximum output meter reading.

Precaution—One side of the power supply is connected to the chassis. Do not connect chassis to any external ground.

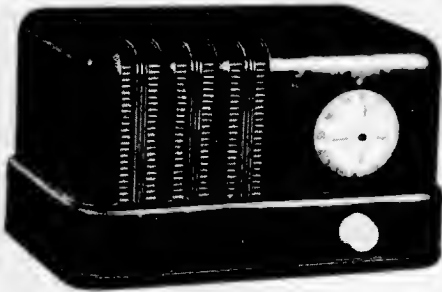

### Electrical Power Output


Undistorted.....1.4 watts  
Maximum.....2.0 watts

### Loudspeaker—Permanent Magnet

Outside Cone Diameter.....4½ inches  
Voice Coil Impedance (400 cycles).....3.5 ohms

# 56

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

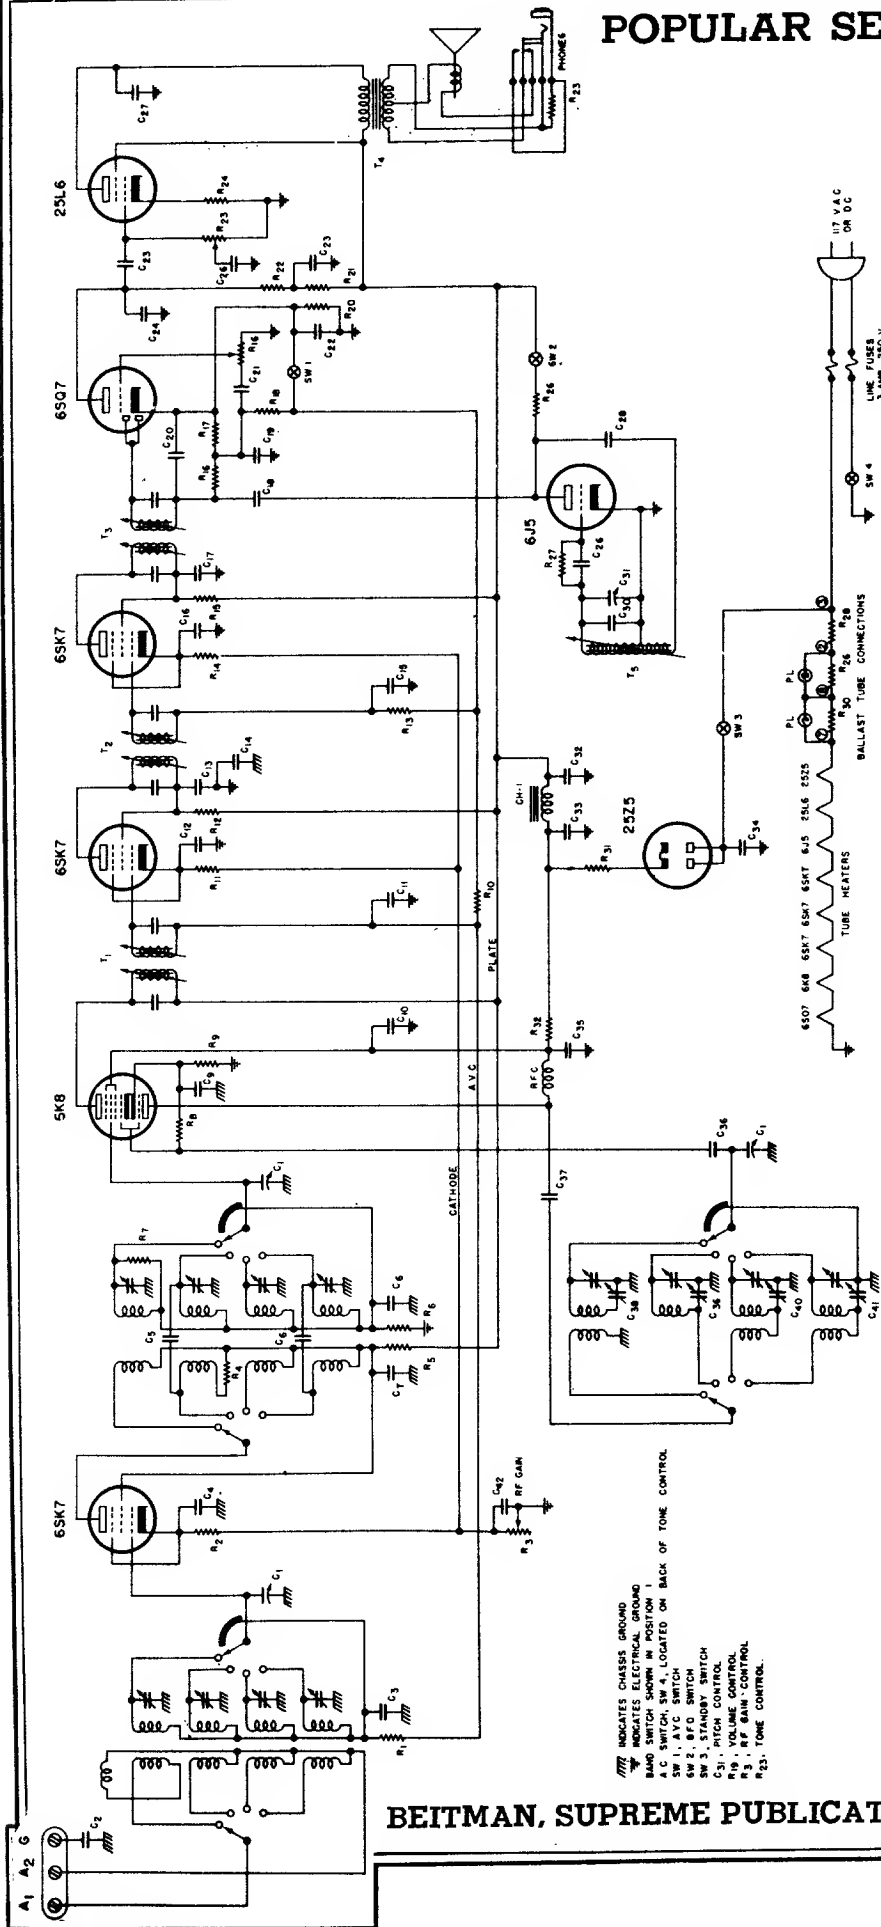

■■■ INDICATES CHASSIS GROUND  
 ▽ INDICATES ELECTRICAL POSITION  
 ■■■■ SWITCH SHOWN LOCATED ON BACK OF TONE CONTROL  
 SW 1 - A.V.C. SWITCH  
 SW 2 - BFO SWITCH  
 SW 3 - STANDBY SWITCH  
 C 31 - PITCH CONTROL  
 R 19 - VOLUME CONTROL  
 R 23 - RF GAIN CONTROL  
 R 23 - TONE CONTROL

**the hallicrafters co.**  
 SETTING OF CONTROLS PRIOR TO ALIGNMENT -  
 IF AND RF.

**MODEL S-22-R**

- Equipment needed for aligning:
- 1 - An all wave signal generator which will provide an accurately calibrated signal at the test frequencies indicated.
  - 2 - Output indicating meter connected to a headphone plug, and inserted in the headphone jack.
  - 3 - Non-metallic screw driver.
  - 4 - Dummy antenna of .002 mfd. condenser and 400 ohm resistor.



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

NO.	VALUE	VOLTAGE OR PURPOSE	NO.	VALUE	VOLTAGE OR PURPOSE	NO.	VALUE IN OHMS	
C <sub>1</sub>	Tuning Condenser		C <sub>26</sub>	.01 mfd	400 V.	R <sub>7</sub>	100,000	
C <sub>2</sub>	.01 mfd	400 V.	C <sub>27</sub>	.005 mfd	600 V.	R <sub>8</sub>	50,000	
C <sub>3</sub>	.05 mfd	400 V.	C <sub>28</sub>	.01 mfd	400 V.	R <sub>9</sub>	400	
C <sub>4</sub>	.05 mfd	400 V.	C <sub>29</sub>	250 mmfd		R <sub>10</sub>	100,000	
C <sub>5</sub>	5 mmf		C <sub>30</sub>	200 mmfd		R <sub>11</sub>	500	
C <sub>6</sub>	5 mmf		C <sub>31</sub>	5 mmf	BFO Pitch Con.	R <sub>12</sub>	1,000	
C <sub>7</sub>	.25 mfd	400 V.	C <sub>32</sub>	40 mfd	150 V.	R <sub>13</sub>	100,000	
C <sub>8</sub>	.05 mfd	400 V.	C <sub>33</sub>	40 mfd	150 V.	R <sub>14</sub>	400	
C <sub>9</sub>	.05 mfd	400 V.	C <sub>34</sub>	.05 mfd	400 V.	R <sub>15</sub>	1,000	
C <sub>10</sub>	.1 mfd	400 V.	C <sub>35</sub>	30 mfd	150 V.	R <sub>16</sub>	100,000	
C <sub>11</sub>	.02 mfd	400 V.	C <sub>36</sub>	100 mmfd		R <sub>17</sub>	250,000	
C <sub>12</sub>	.02 mfd	400 V.	C <sub>37</sub>	2000 mmfd		R <sub>18</sub>	1 Meg.	
C <sub>13</sub>	.01 mfd	400 V.	C <sub>38</sub>	32 mmfd	Band 1 Pad	R <sub>19</sub>	500,000	
C <sub>14</sub>	.25 mfd	400 V.	C <sub>39</sub>	110 mmfd	Band 2 Pad	R <sub>20</sub>	7,500	
C <sub>15</sub>	.02 mfd	400 V.	C <sub>40</sub>	480 mfd	Band 3 Pad	R <sub>21</sub>	100,000	
C <sub>16</sub>	.02 mfd	400 V.	C <sub>41</sub>	1300 mfd	Band 4 Pad	R <sub>22</sub>	250,000	
C <sub>17</sub>	.01 mfd	400 V.	C <sub>42</sub>	.1 mfd	200 V.	R <sub>23</sub>	500,000	
C <sub>18</sub>	10 mmf		<b>NO. VALUE IN OHMS</b>				R <sub>24</sub>	140
C <sub>19</sub>	100 mmf		R <sub>1</sub>	100,000		R <sub>25</sub>	100	
C <sub>20</sub>	100 mmf		R <sub>2</sub>	300		R <sub>26</sub>	5,000	
C <sub>21</sub>	.02 mfd	400 V.	R <sub>3</sub>	25,000		R <sub>27</sub>	250,000	
C <sub>22</sub>	10 mf	25 V.	R <sub>4</sub>	400		R <sub>28</sub>	Plug-in Ballast	
C <sub>23</sub>	.05 mfd	400 V.	R <sub>5</sub>	1,000		R <sub>29</sub>	Plug-in Ballast	
C <sub>24</sub>	250 mfd		R <sub>6</sub>	100,000		R <sub>30</sub>	Plug-in Ballast	
C <sub>25</sub>	.05 mfd	400 V.				R <sub>31</sub>	25	
						R <sub>32</sub>	4,000	

SKYRIDER MARNE - MODEL S-22 R

Connect hot Lead of Signal Generator to A<sub>1</sub> through dummy Antenna shown in Table. Leave Jumper connected between A<sub>2</sub> and G. Ground of Generator to Chassis.

BAND	REC. DIAL SETTING	SIG. GEN. FREQ.	DUMMY ANTENNA	HIGH FREQUENCY END		LOW FREQUENCY END
				ADJUST OSC WITH	ADJUST TRIMMERS WITH	ADJUST OSCILLATOR WITH
1	125 Kc	125 Kc	.002 mfd	-----	-----	P <sub>1</sub>
	350 Kc	350 Kc	.002 mfd	C <sub>C</sub>	C <sub>A</sub> -C <sub>B</sub>	-----
2	450 Kc	450 Kc	.002 mfd	-----	-----	P <sub>2</sub>
	1400 Kc	1400 Kc	.002 mfd	C <sub>F</sub>	C <sub>E</sub> -C <sub>D</sub>	-----
3	2 Mc	2 Mc	400 Ohm	-----	-----	P <sub>3</sub>
	4.5 Mc	4.5 Mc	400 Ohm	C <sub>J</sub>	C <sub>G</sub> -C <sub>H</sub>	-----
4	7 Mc	7 Mc	400 Ohm	-----	-----	P <sub>4</sub>
	15 Mc	400 Ohm	400 Ohm	C <sub>M</sub>	C <sub>L</sub> -C <sub>K</sub>	-----


# 58

**COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS**

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Howard Radio Company, 1731 Belmont Avenue, Chicago, Illinois

Models: 225, S-225, 250, S-250, 260, S-260, 275, 275-C, 280.

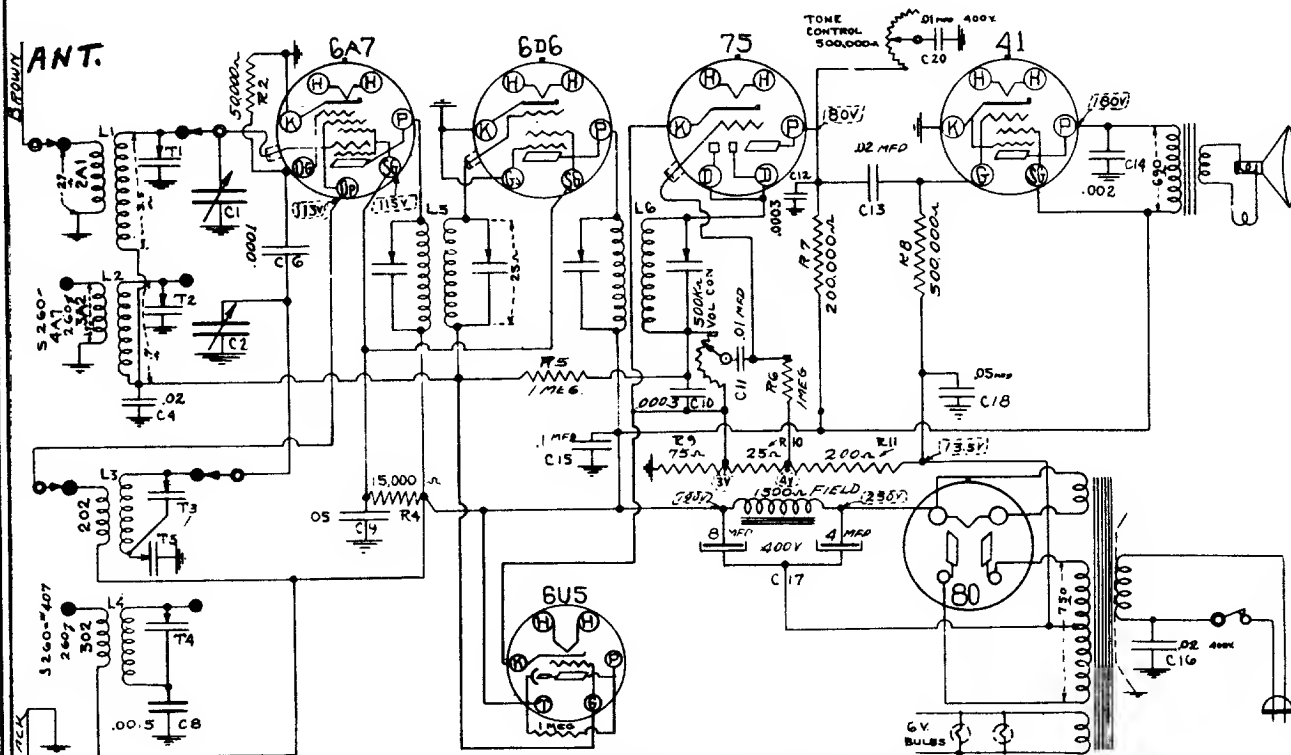

- TWO BANDS—  
 (1) - 540 TO 1700 KC BROADCAST.  
 (2) - 2 TO 6.5 MC. POLICE BAND MODEL 280  
 SW - 6 TO 17 MC. S. WAVE BAND MODEL 5260

VOLTAGES AS SHOWN [...] TAKEN FROM GROUND, LINE VOLTAGE 117V AC

The models 225 and 250 are electrically the same chassis; the only difference being the cabinets in which they are mounted. These models have two band circuits covering the Broadcast Band 550 to 1700 KC and the so-called Police Band from 2 to 6.5 megacycles, having separate Antenna and Oscillator coils for each band.

The models S225 and S250 cover the Broadcast Band 550 to 1700 KC and the short wave band 5.5 to 18 MC.

The models 260 and S260 have the same circuit as the 225, S225 respectively with the addition of the tuning eye tube to indicate resonance.

The models 275, 275C and 280 are the same electrically, covering 3 bands, 550 to 1700 KC, 1.7 to 5.5 MC, and 5.5 to 18 MC.


The I. F.'s are aligned by the usual system of feeding the intermediate frequency of 465 KC into the grid of the 6A7 tube.

The two trimmers in each of the I. F. cans should be very carefully peaked to resonance as they are very critical and will greatly affect the performance of the set. These are trimmers number T8, T9, T10, T11.

The Sensitivity of the I. F. stages will be 25 to 50 microvolts or better for a 50 milliwatt output.



Always use as low an output as possible from the test oscillator in making the various adjustments.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

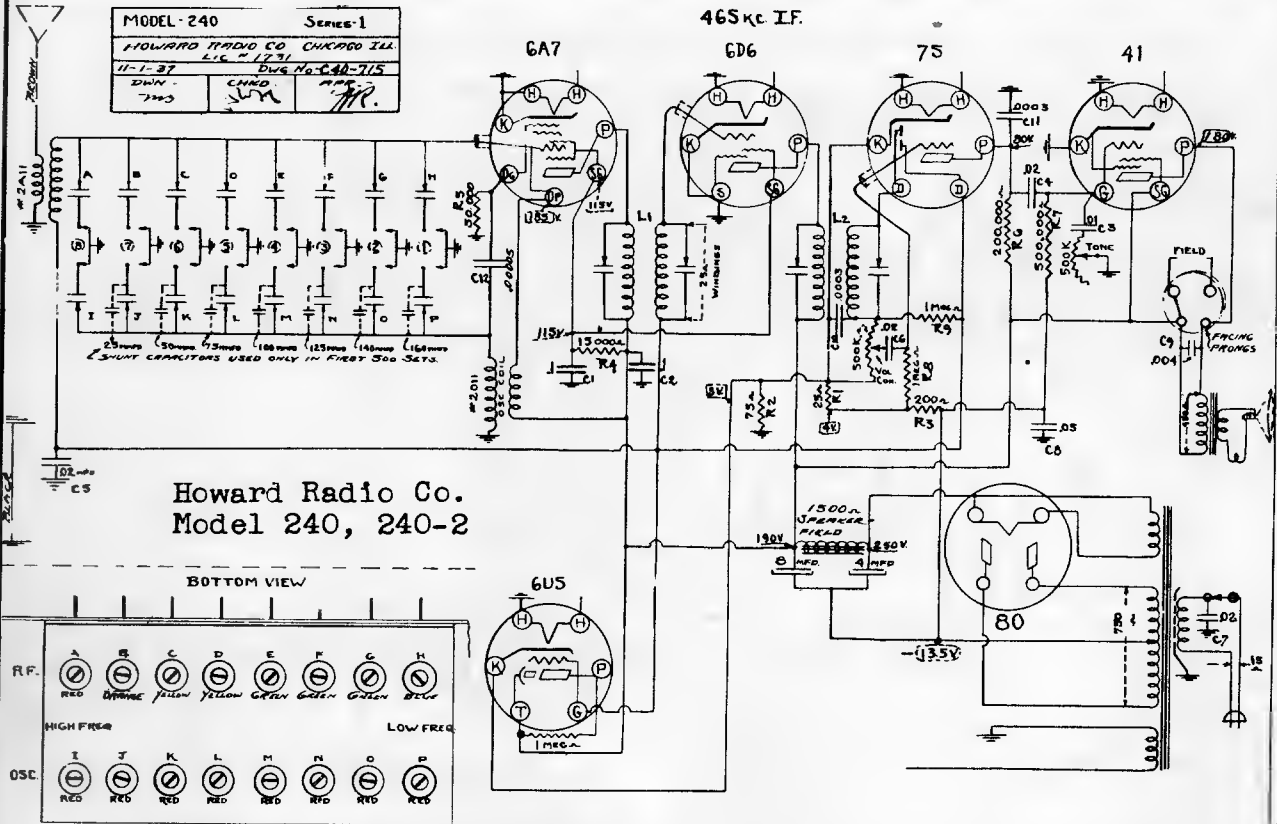

THE MODEL 240 series 1 and 2 is strictly a push-button tuner having no gang condenser. The eight push-button station selectors complete the ground circuit of the oscillator and R. F. tuned condensers previously set to whatever frequency desired. The eight circuits cover the complete range of the broadcast band from 540 to 1750 KC. The instructions for the set-up are shown.

The model 240-1 used the 80 tube for a rectifier and the model 240-2 uses the 1V tube.

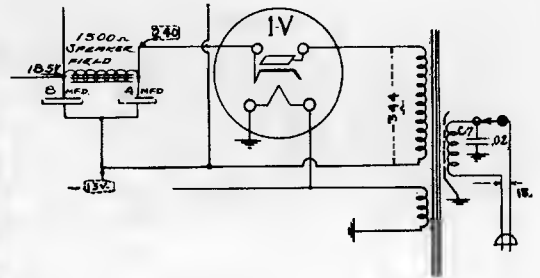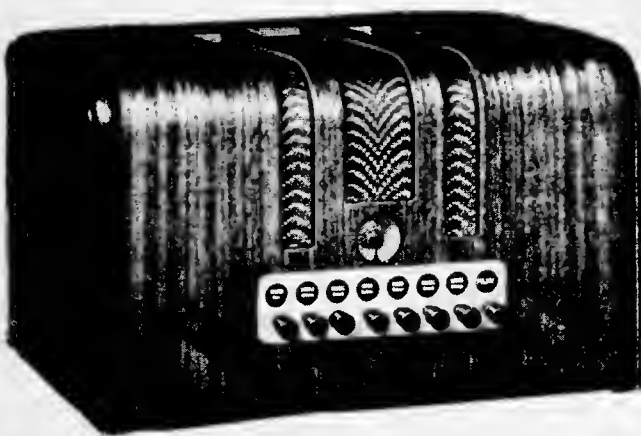

These sets can be easily aligned. The I.F. is set in the regular way. Then one station is tuned-in at a time and adjusted for maximum response. No other adjustments are needed.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Howard Radio Co.

Models: 400, 400-A, 425, 425-A.


Model 400 is a 12 tube, 3 band receiver with all coils shielded. See Fig. 4, for coil location and information on trimmers and padding condensers for each band. The 6F5 is a bass boost stage. The 6J5G is a phase inverter with push-pull 6V6G's in the output. The schematic of the model 425 illustrated is the same for the RF and IF stages. A single type 80 rectifier is used.

Model 425 is a 14 tube set having 6L6G's in the output.

Models 400-A and 425-A have the same electrical circuits as the 400 and 425. These models employ the Howard motor automatic tuning feature by use of the reversible motor controlled by the commutator disc near the back of the set.


### ADJUSTMENT OF HOWARD MOTOR AUTOMATIC

FIRST - Select and depress the push-button by number that will include the desired station according to frequency chart listing below:-

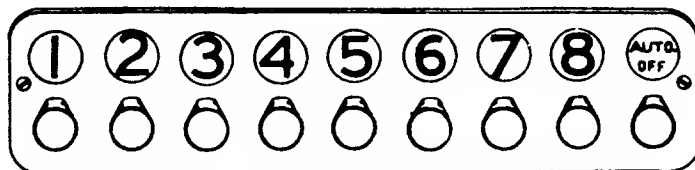

540 TO 580 KC	570 TO 620 KC	600 TO 670 KC	650 TO 720 KC	700 TO 820 KC	800 TO 990 KC.	880 TO 1720 KC.	1100 TO 1720 KC
------------------------	------------------------	------------------------	------------------------	------------------------	-------------------------	--------------------------	--------------------------


See next page-

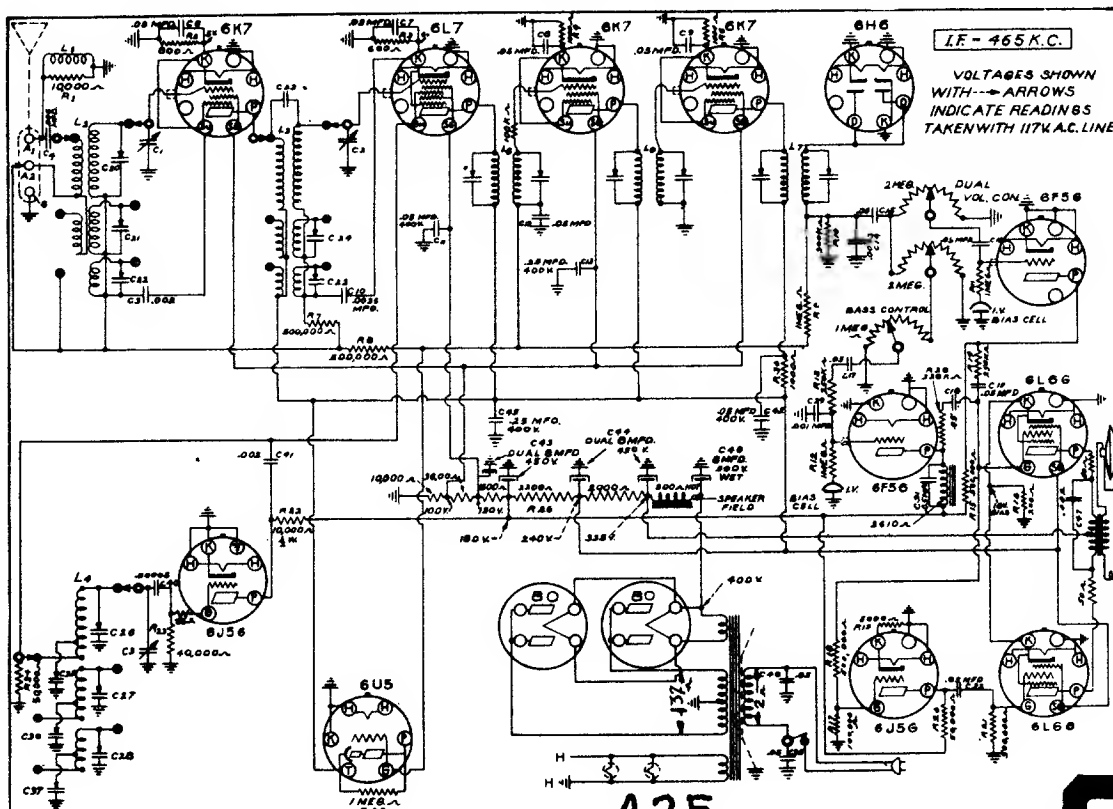

425

61

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

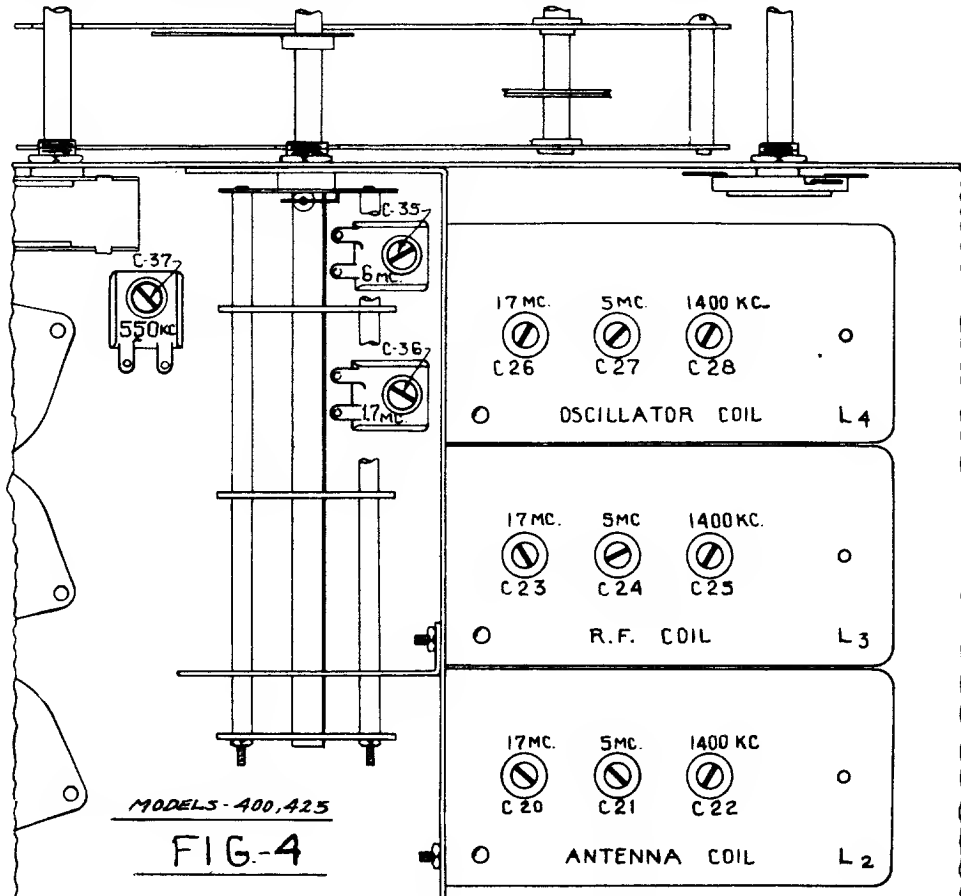



SECOND - Reach to back of chassis and turn muting switch to OFF position.

LOCATE THE SAME NUMBERED STATIONS CONTACTOR ON BACK OF TUNING CONDENSER THAT CORRESPONDS TO THE BUTTON DEPRESSED IN FIRST PARAGRAPH, AND SLIDE UNTIL THE DESIRED STATION IS TUNED IN.




With the muting switch in the OFF position the stations will be heard while moving the slide contactor. For silent tuning after all adjustments are made, turn switch to ON position.

THIRD - Remove station call letter tab from tab sheet and insert in place with finger tip in front of escutcheon plate over the number that was selected. Repeat above procedure for each of remaining buttons.

NOTE - When tuning the set by hand or if a remote cable is used the selector button AUTO-OFF must be depressed.

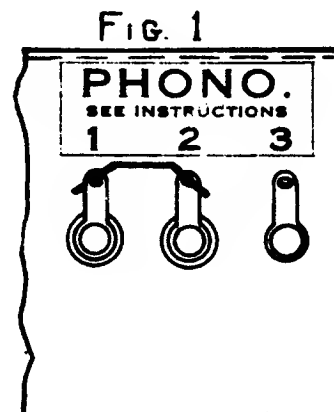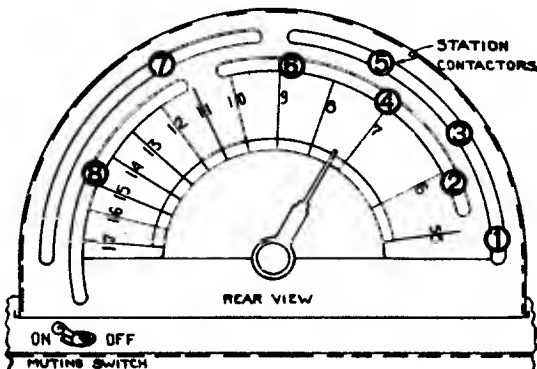

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

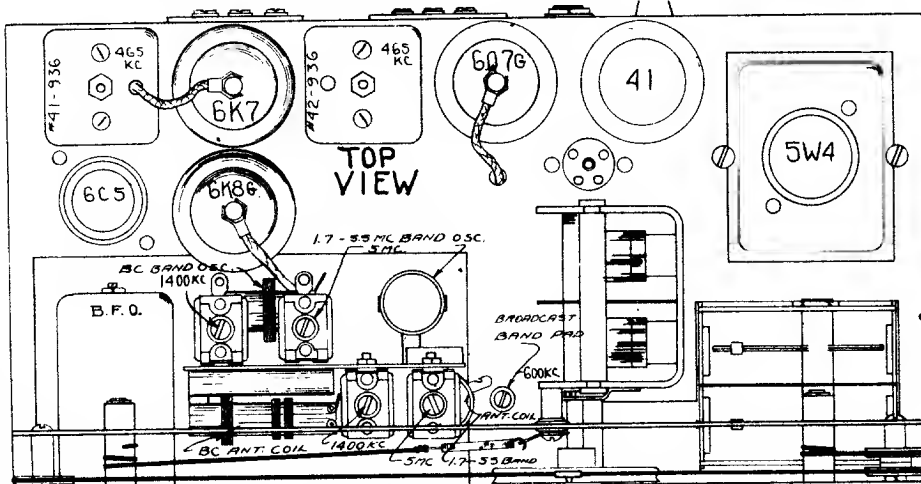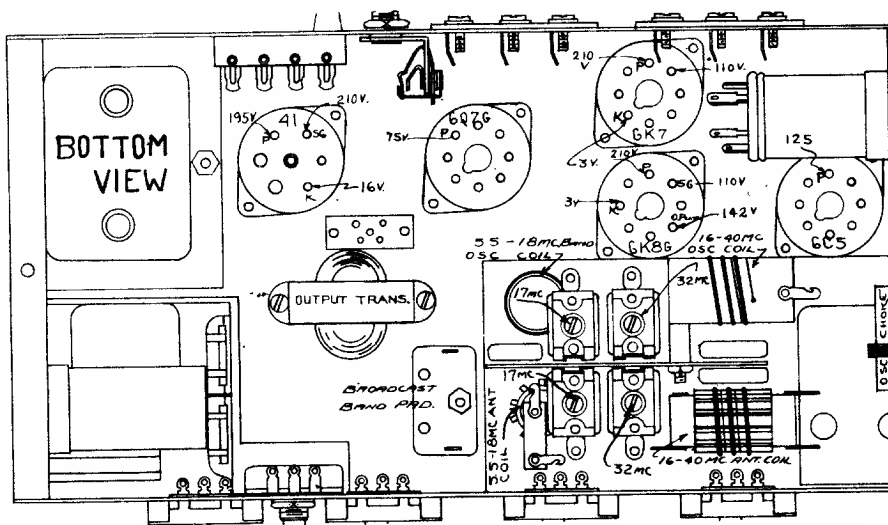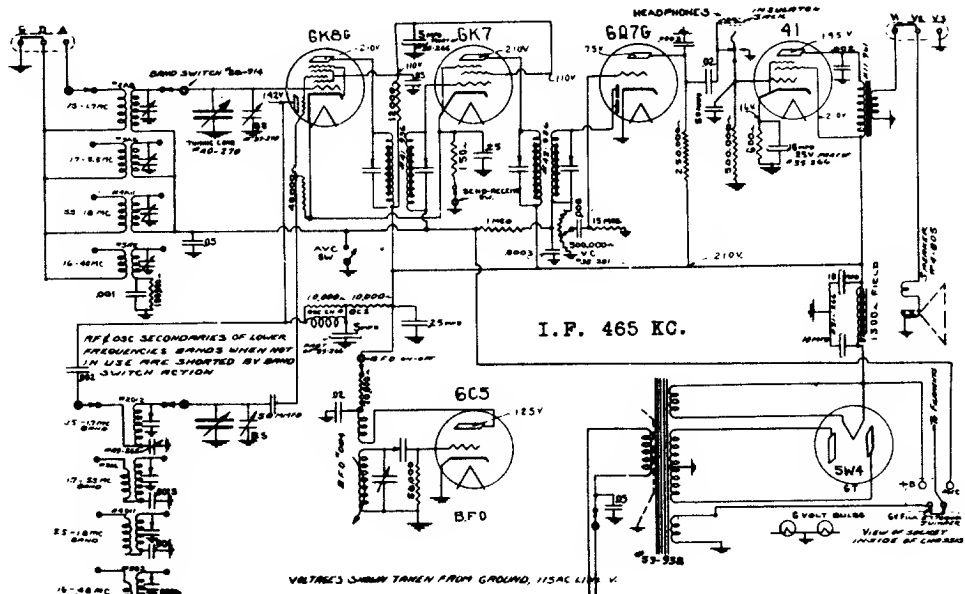

**HOWARD**

**430**

**NOTE 1:** When aligning the I.F. channel, a condenser of .05 MFD may be used in series with the generator lead.


**NOTE 2:** When aligning the broadcast band, a 250 MMFD condenser may be used in series with the signal generator.

**NOTE 3:** When aligning the short wave bands, a 400 ohm resistor may be used in series with the signal generator.

**NOTE 4:** After the chassis has been removed from the cabinet, be sure when it is again assembled that the speaker is in place in the socket on top of the chassis and that the speaker cable wires do not lay back near the RF circuit, thus causing howling.

**NOTE 5:** Check for an image signal about .9 mc. lower in frequency. For example:- If a peak has been made at 6 mc. an image should be heard at about 5.1 mc. Otherwise the original setting was not correct.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

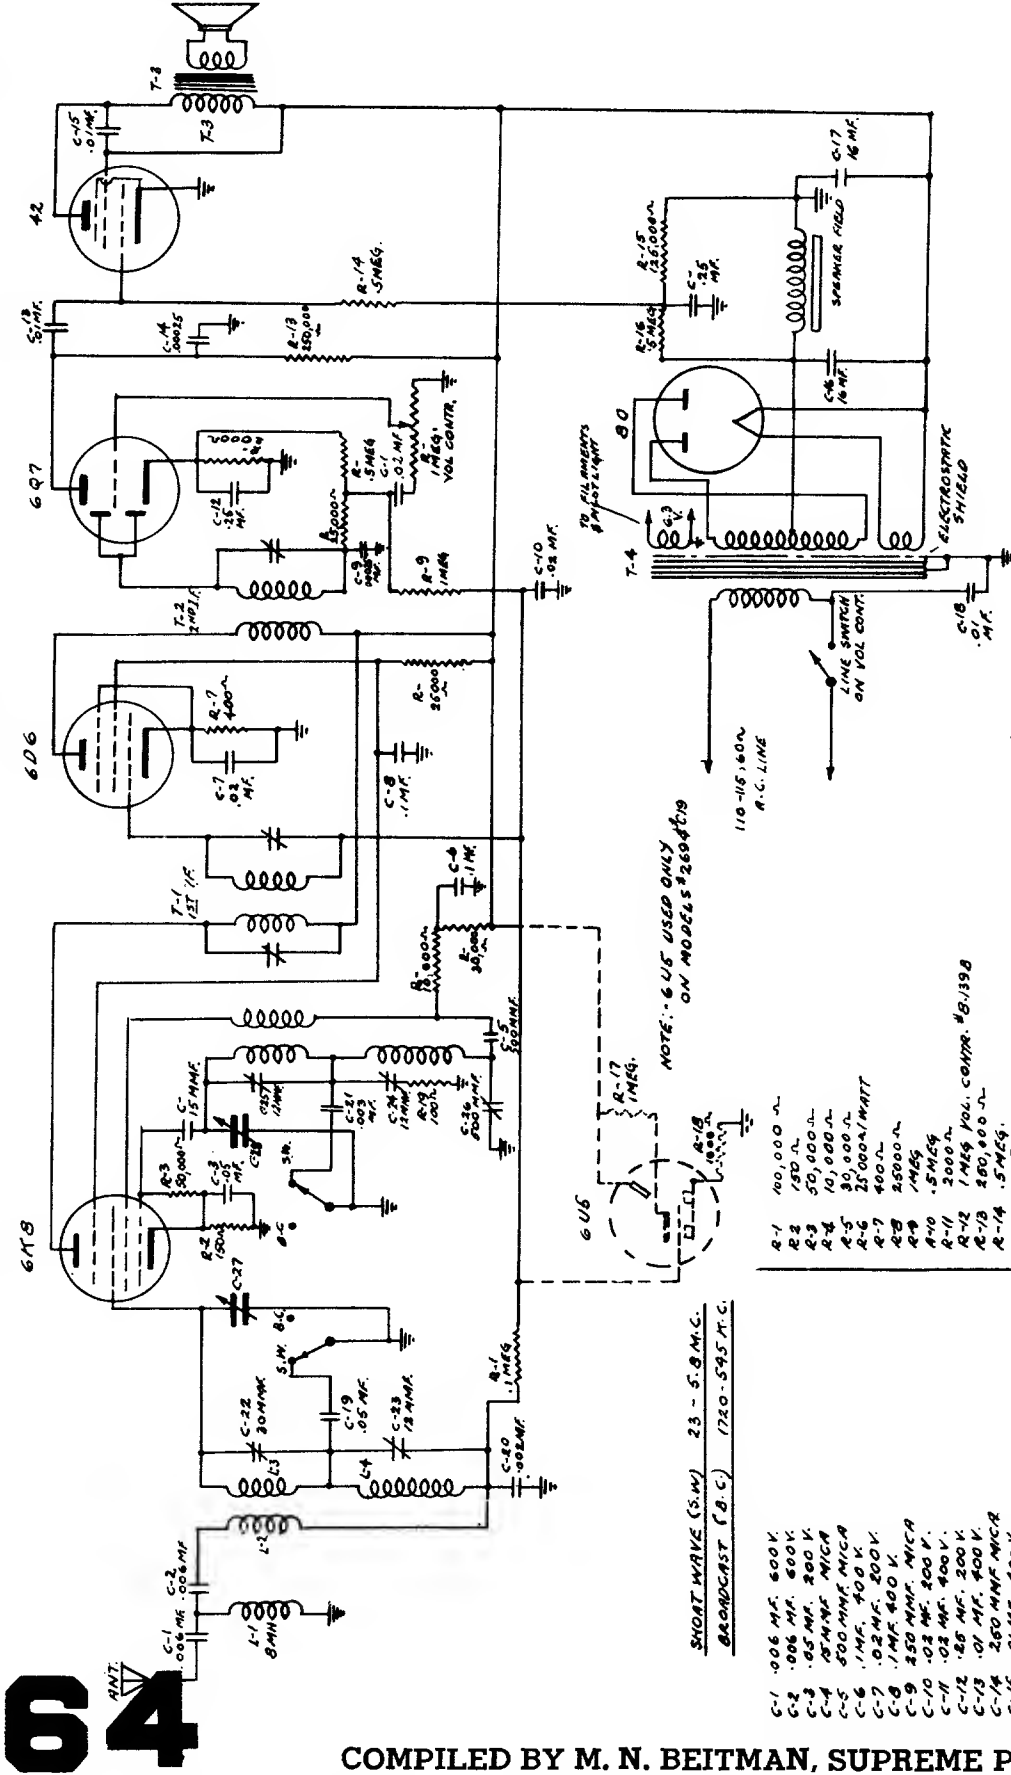

# 64


NOTE: 6U5 USED ONLY ON MODELS 269 & 719

IF 456 KC.

- C-1 .006 MF. 500 V.
- C-2 .006 MF. 500 V.
- C-3 .05 MF. 200 V.
- C-4 .05 MF. MICA
- C-5 500 MMF. MICA
- C-6 .1 MF. 400 V.
- C-7 .02 MF. 200 V.
- C-8 .1 MF. 400 V.
- C-9 250 MMF. MICA
- C-10 .02 MF. 200 V.
- C-11 .02 MF. 400 V.
- C-12 .88 MF. 200 V.
- C-13 .01 MF. 400 V.
- C-14 250 MMF. MICA
- C-15 .01 MF. 400 V.
- C-16 .16 MF. 450 MV. V.
- C-17 .16 MF. 450 MV. V.
- C-18 .01 MF. 400 V.
- C-19 .05 MF. 200 V.
- C-20 .002 MF. 15% MICA
- C-21 .003 MF. 15% MICA
- C-22 30 MMF. TAINMER
- C-23 .22 MF. TAINMER
- C-24 .22 MF. TAINMER
- C-25 18 MMF. TAINMER
- C-26 500 MMF. PARACA COND.
- C-27 2 GANG 450 MMF. VAR. COND. # 2-136
- C-28
- R-1 100,000 Ω
- R-2 150 Ω
- R-3 50,000 Ω
- R-4 10,000 Ω
- R-5 30,000 Ω
- R-6 25,000 Ω/WATT
- R-7 400 Ω
- R-8 25000 Ω
- R-9 1MΩ
- R-10 2000 Ω
- R-11 1MΩ
- R-12 1MΩ VOL. CONTR. #B/139B
- R-13 250,000 Ω
- R-14 5MΩ
- R-15 125,000 Ω
- R-16 5MΩ
- R-17 1MΩ. IN 6U5 SOCKET
- R-18 1000 Ω (OPTIONAL)
- R-19 100 Ω
- T-1 8 MM. CHOME
- T-2 1/2" I.F. INPUT #1-225-A
- T-3 I.F. OUTPUT #1-200
- T-4 OUTPUT TRANS. #1-122
- T-5 1/2" I.F. INPUT #1-122
- T-6 1/2" I.F. OUTPUT #1-122
- T-7 2 BAND ANT. COIL #1-217
- T-8 2 BAND OSC. COIL #1-218
- T-9 SPEAKER FIELD

Lafayette Radio Corp.  
Radio Wire Television, Inc.  
Models C-16, C-19, 259, 269

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

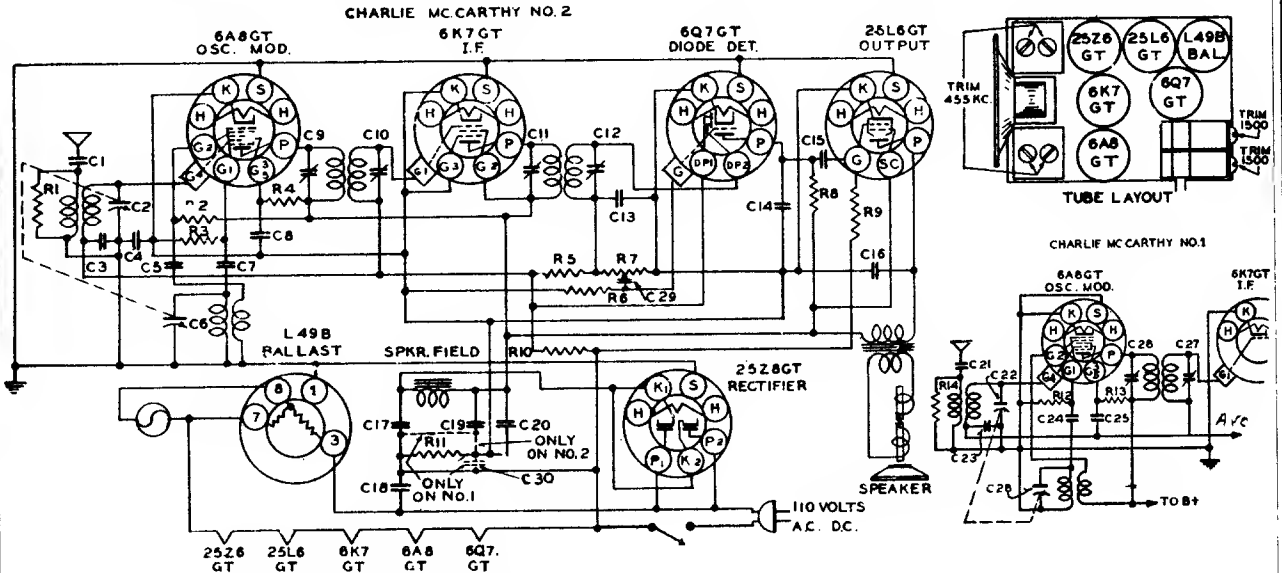


CHARLIE Mc CARTHY No. 2—PARTS LIST

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
C15, C29	C-15754	Tubular cond. .01 mfd. 400 V	C17	CE-39	Electr. cond. 40 mfd. 200 V
C3	C-15752	Tubular cond. .05 mfd. 200 V	C19	CE-40	Electr. cond. 16 mfd. 150 V
C1	C18	Tubular cond. .01 mfd. 400 V Paper mold case	C9, C10	Y-CT-18	Trimmer cond. 1st I. F.
C8, C20	C19	Tubular cond. .05 mfd. 400 V Paper mold case	C11, C12	Y-CT-18	Trimmer cond. 2nd I. F.
C4	C20	Tubular cond. .25 mfd. 200 V Paper mold case	C2, C6	Y-CV-18	2 gang variable cond.
C5	C21	Tubular cond. .005 mfd. 400 V Paper mold case	R11	R-67	Wire wound res. 100 ohms 1W 10%
C16	C22	Tubular cond. .02 mfd. 600 V Paper mold case	R3	R-54	Carbon resistor 50K 1/4W 20%
C18	C24	Tubular cond. .1 mfd. 300 V Paper mold case	R4	R-53	Carbon resistor 15K 1/4W 20%
C7	CM-15929	Mica cond. 50 mmf. 20%	R8	R-51	Carbon resistor 500K 1/4W 20%
C13	CM-15928	Mica cond. 250 mmf. 20%	R9	R-52	Carbon resistor 400K 1/4W 20%
C14	CM-15918	Mica cond. 100 mmf. 20%	R5	R-55	Carbon resistor 2 meg. 1/4W 20%
			R10	R-50	Carbon resistor 5 meg. 1/4W 20%
			R6	R-49	Carbon resistor 15 meg. 1/4W 20%
			R1	R-65	Carbon resistor 10K 1/4W 20%
			R2	R-68	Carbon res. 7500 ohms 1/4W 20%
			R7	Y-VC-15	Volume control .5 meg.
			C21		.01 mfd.
			C23		.05 mfd.
			C24		50 mmfd.
			C25		.05 mfd.
			R12		50K 1/4W.
			R13		15K 1/4W.



## Majestic Radio & Television Corp. Wireless Record Player 3-PW

REPLACEMENT PARTS LIST FOR MODEL 3-PW

Schematic Location	Part No.	Description
R4, R5	R-2	Carbon resistor 5K 1/4W 20%
R1	R-65	Carbon resistor 10K 1/4W 20%
R3	R-15542	Carbon resistor 1K 1/4W 20%
R6	R-15512	Carbon resistor 250K 1/4W 20%
R2	R-15515	Carbon resistor 100K 1/4W 20%
C5, C6	CE-47	Elect. cond. 8.16 mfd. 150V
C4	Y-CT-6	Adj. pecker cond.
C2	C-15757	Paper cond. .1 mfd. 400V
C2, C3	C-15761	Paper cond. .1 mfd. 200V
C1	CM-15929	Mica cond. 50 mmf. 20%

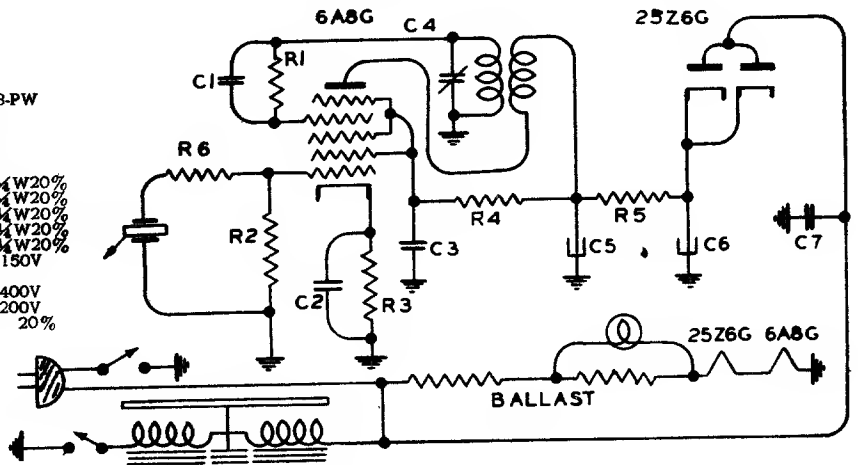


TUBE LOCATION CHART

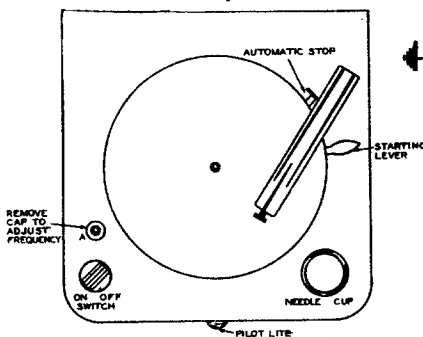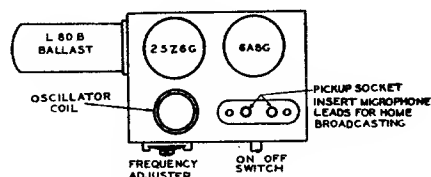



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


## SCHEMATIC DIAGRAM MODEL 62A

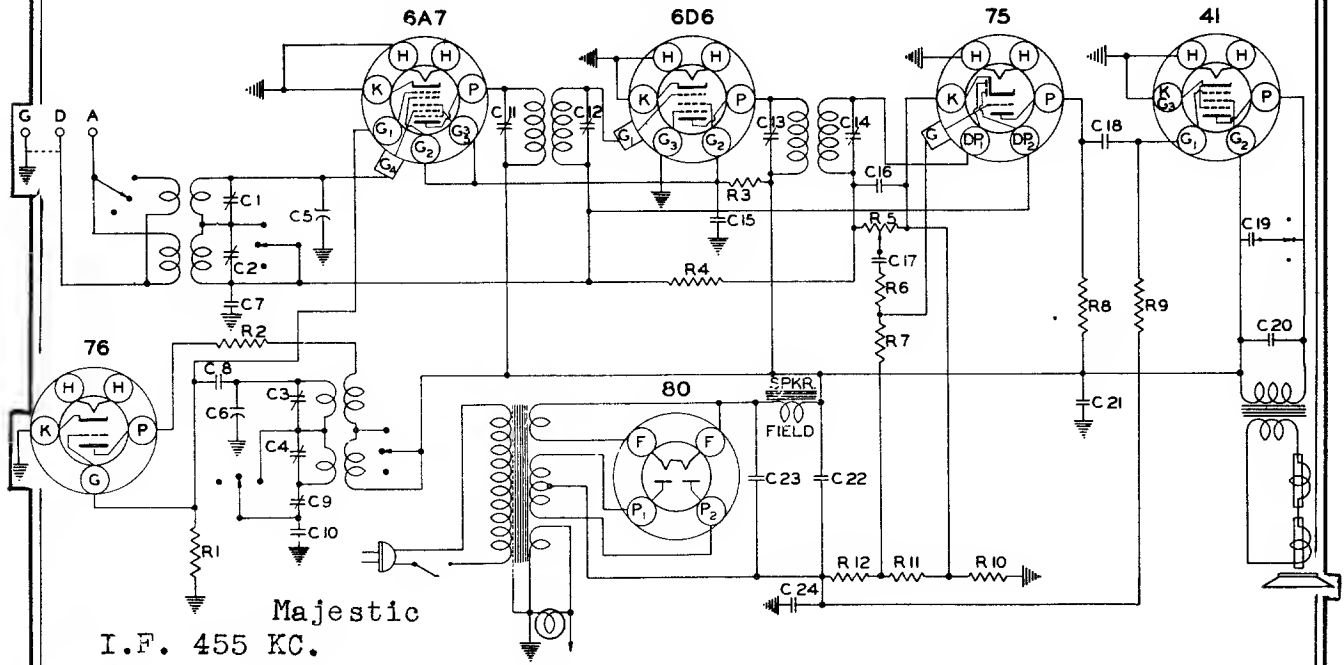


Schematic Location	Description
R1	50K 1/4 W 20%
R2	100K 1/4 W 20%
R3	7.5K 2W 1/4 W 20%
R4	2 Meg. 1/4 W 20%
R5	Volume control 1 meg.
R6, R8	250K 1/4 W 20%
R7	1 Meg.
R9	500K 1/4 W 20%

Schematic Location	Part No.	Description
R10	61 Ohms	E-C-6 Candohm
R11	33 Ohms	
R12	150 Ohms	
C11, C12	Y-CP-2	Trimmer cond.
C13, C14	Y-CV19	Variable gang condenser
C15, C21	C-15752	Tubular cond. .05 mfd. 200 V
C16	CM-15929	Mica cond. 50 mmf. 20%
C17, C18, C19	C-16472	Padder cond.
C20	CM-17	Mica cond. 4330

Schematic Location	Description
C11, C12	Trimmer cond.
C13, C14	Trimmer cond.
C15, C21	Tubular cond. .05 mfd 400V
C16	Mica cond. 250 mmf. 20%
C17, C18, C19	Tubular cond. .01 mfd. 400 V
C20	Tubular cond. .006 m.f. 400V
C22	8,300 V
C23	12,300 V
C24	20.25 V

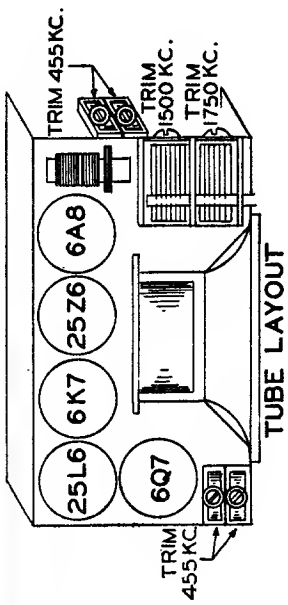

Majestic Radio Model 52

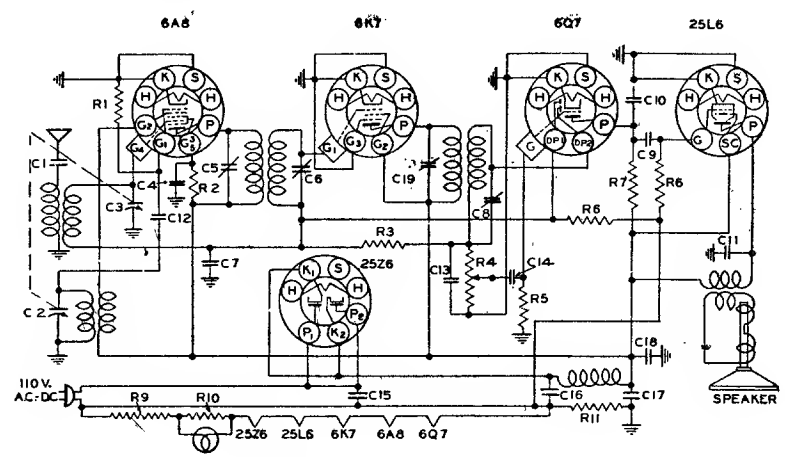


### REPLACEMENT PARTS LIST

Schematic Location	Part No.	Description	Schematic Location	Part No.	Description
C2, C3	Y-CV 14	Variable Gang Condenser	R1	R-54	Carbon resistor 50K 1/4 W 20%
C7, C18	C-15761	Tubular cond. .1 mfd. 200 V	R2	R-53	Carbon resistor 15K 1/4 W 20%
C4	C-15752	Tubular cond. .05 mfd. 200 V	R3	R-55	Carbon resistor 2meg 1/4 W 20%
C9, C1	C-15754	Tubular cond. .01 mfd. 400 V	R5	R-49	Carbon resistor 15meg 1/4 W 20%
C15	C-15757	Tubular cond. .1 mfd. 400 V	R6	R-50	Carbon resistor 5meg 1/4 W 20%
C11	C-15772	Tubular cond. .02 mfd. 400 V	R7	R-51	Carbon resistor 500K 1/4 W 20%
C14	C-15754	Tubular cond. .01 mfd. 400 V	R8	R-52	Carbon resistor 300K 1/4 W 20%
C16	CE-32	Tub. dry elec. cond. 40 mfd.	R11	R-56	Carbon res. 100 ohm 1/4 W 10%
C17	CE-35	Tub. dry elec. cond. 16 mfd.	R10	R-57	Wire wound flex. res. 40 ohms
C5, C6	Y-CT-16	Trimmer cond. 1st I. F.	R9	LC-8	141 ohms in line cord
C8, C19	Y-CT-17	Trimmer cond. 2nd I. F.	R4	Y-VC-15	.5 meg Volume control
C10, C13	CM-15928	Mica cond. 250 mmf. 20%			
C12	CM-15919	Mica cond. 50 mmf. 20%			

# 66

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Majestic Radio & Television Corporation

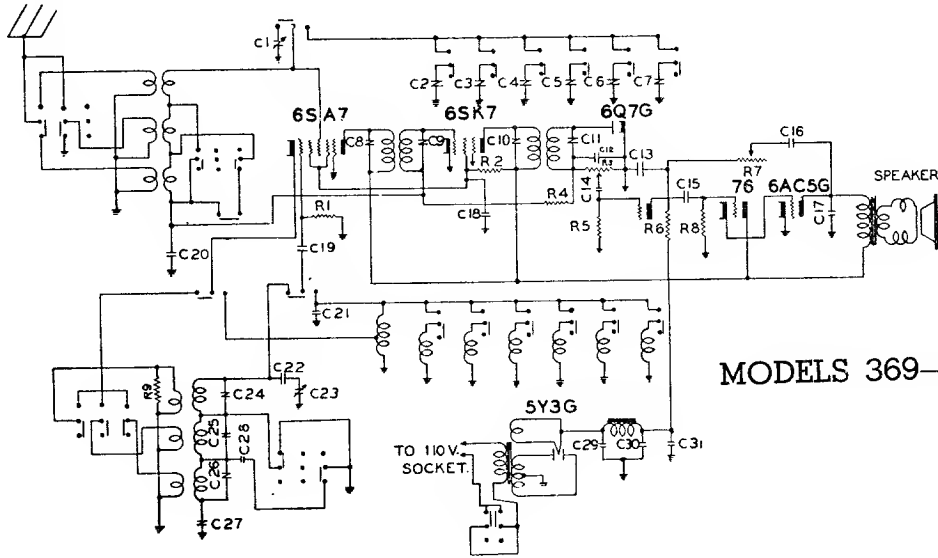

MODELS 369-3C69

Schematic Location  
R3  
R1  
R2  
R4  
R5  
R8  
R9

Description  
Volume and tone control  
Carbon res. 20K ohm  $\frac{1}{4}$ W 20%  
Carbon res. 10K ohm  $\frac{1}{4}$ W 20%  
Carbon res. 1 meg.  $\frac{1}{4}$ W 20%  
Carbon res. 15 meg.  $\frac{1}{4}$ W 20%  
Carbon res. 250K ohm  $\frac{1}{4}$ W 20%  
Carbon res. 400 ohm  $\frac{1}{4}$ W 20%


Schematic Location  
C27  
C25, C30  
C29  
C15  
C17  
C11  
C14  
C18

Part No.  
Y-CT-4  
CE-52  
CC-15757  
CC-15754  
CC-15759  
CC-15757  
CC-15774  
C-15756

Description  
Padding Condenser  
Electrolytic  
Tubular cond. .05 mfd. 200V  
Tubular cond. .01 mfd. 400 V  
Tubular cond. .006 mfd. 600V  
Tubular cond. .1 mfd. 400V  
Tubular cond. .002 mfd. 400V  
Tubular cond. .05 mfd. 400V

Schematic Location  
C12, C13, C19  
C16  
C22  
C28  
C21  
C2, C3, C4  
C5, C6, C7

Description  
Mica cond. 100 mmf. 30%  
Mica cond. 250 mmf. 30%  
Mica cond. 4330 mmf. 5%  
Mica cond. 2770 mmf. 5%  
Mica cond. 100 mmf. 5%  
Push-Button Switch

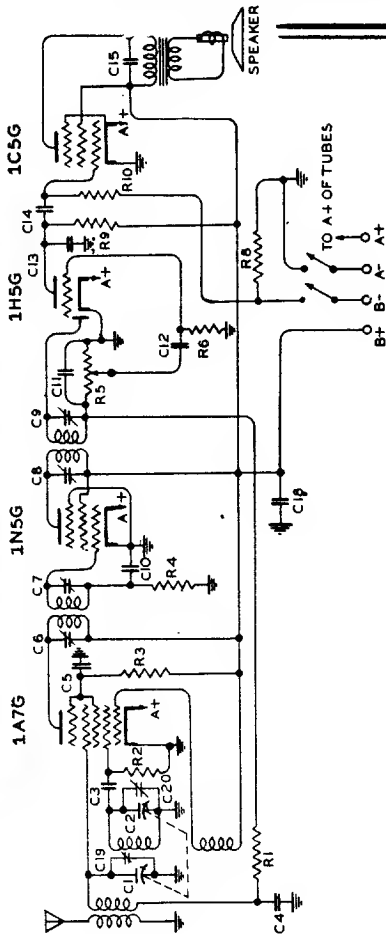


### REPLACEMENT PARTS LIST

Schematic Location	Part No.	Description	Description
C4, C5	C-15752	.05 mfd. 200V	500K $\frac{1}{4}$ W 20%
C10, C12, C14	C-15763	0.1 mfd. 200V	1 meg. $\frac{1}{4}$ W 20%
C15	C25	006 mfd. 400V	600 ohms $\frac{1}{4}$ W 20%
C3, C11, C13	CM-15918	400 mmf. Type 'O' Mica	200K $\frac{1}{4}$ W 20%
C1, C2	Y-GV-26	Variable Condenser	5 meg. $\frac{1}{4}$ W 10%
C6, C7, C8, C9	Y-CT-2	I. F. Trimmer capacitor	3.70K $\frac{1}{4}$ W 10%
C18	R-18500	8 n.d. 150V Electrolytic	2 meg $\frac{1}{4}$ W 20%
	CI-35		Volume Control
	R9		
	R10		
	R8		
	R2		
	R6		
	K3		
	K1, R4		
	R5		

## MAJESTIC RADIO Model 419-B


### TUBE LOCATION CHART

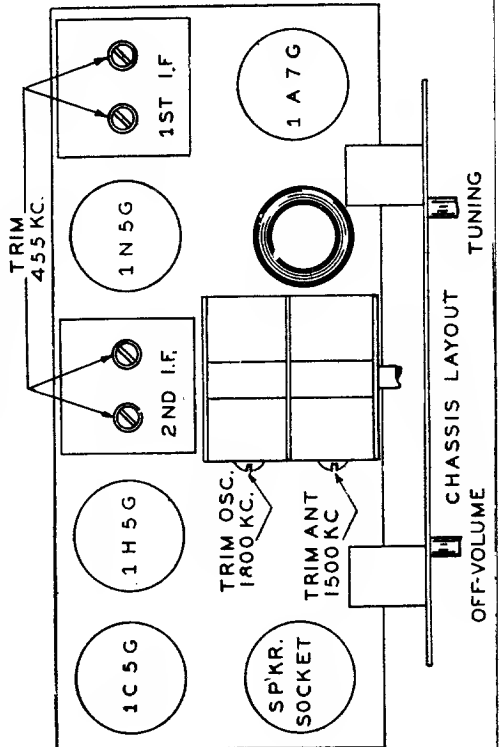

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

The Midwest Radio Corp.  
Model 8 AC - 1939





# 68

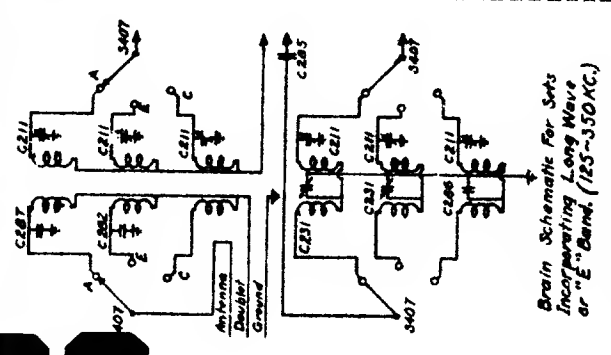

E34	Eye Clamp
E35	Eye Socket/Cable
K4	P. Button Key
K24	1 Inch Knob
R46	Pilot Light 6-8
R12	500 Ohm 1/2 W.
R15	1000
R17	25M
R18	500M
R19	1000M
R21	500M
R22	1Meg
R72	15M
S302	Speaker 6"
S319	Penulon Spring
S333	Painter Assembly
S407	Band Switch
S445	Tone Switch
T86	Power Transformer
T164	1st I.F.
T165	2nd I.F.
C262	500 Mfd. Nice
C251	Osc. Padler


C26	Power Cord
C21	3 Gang Trimmer
C226	I.F. Padler
C232	Osc. Padler
C240	Dual Dry-20-20
C260	100 mfd. mica
C265	2000
C266	3000
C267	200
C268	200
C290	50
C291	250
C301	101 mfd. 200V.
C302	.05
C303	.25
C311	.01
C314	.01
C349	2 Gang Variable
C363	Vol. Cont. & Snc.
C379	Tuning Shaft
C401	Cond. Belt
D5	Dial Disk
E8	Escutcheon
E16	Eye Escutcheon
E33	Eye Bracket

No Signal - Volume Control Turned Off.					
Line Voltage - 117 Volts, 60 Cycles.					
Meter Used - 20,000 Ohms per Volt.					
TUBE	PLATE SUPPLY	GRID SUPPLY	TYPE		
6A5 Converter	234	75	1B2	3	6.3
6K7 I.F. Amp.	237	75	0	0	6.3
6M6 Detector	0	0	0	0	6.3
6P5 7A.A. F.	21	0	0	0	6.3
6A5 Driver	242	0	0	0	6.3
6G5 Eye Tube	252	0	0	0	6.3
60 Rectifier	500	AC	262	DC	5.0

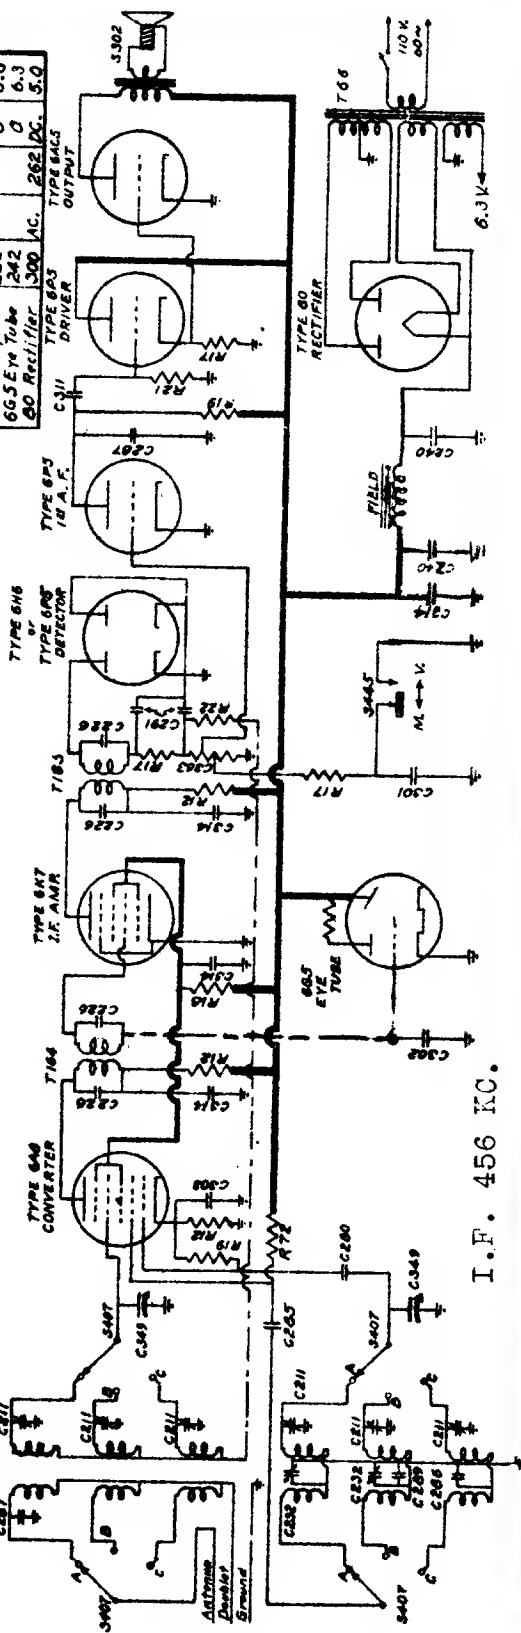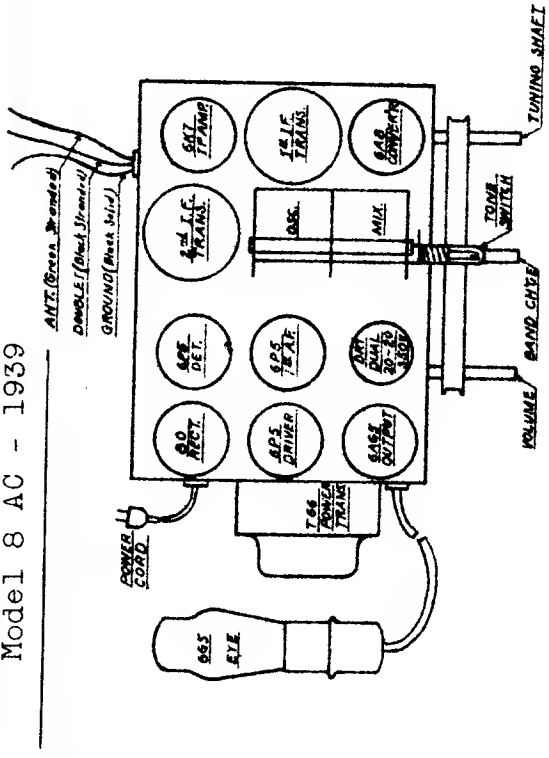


I. F. 456 KC.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

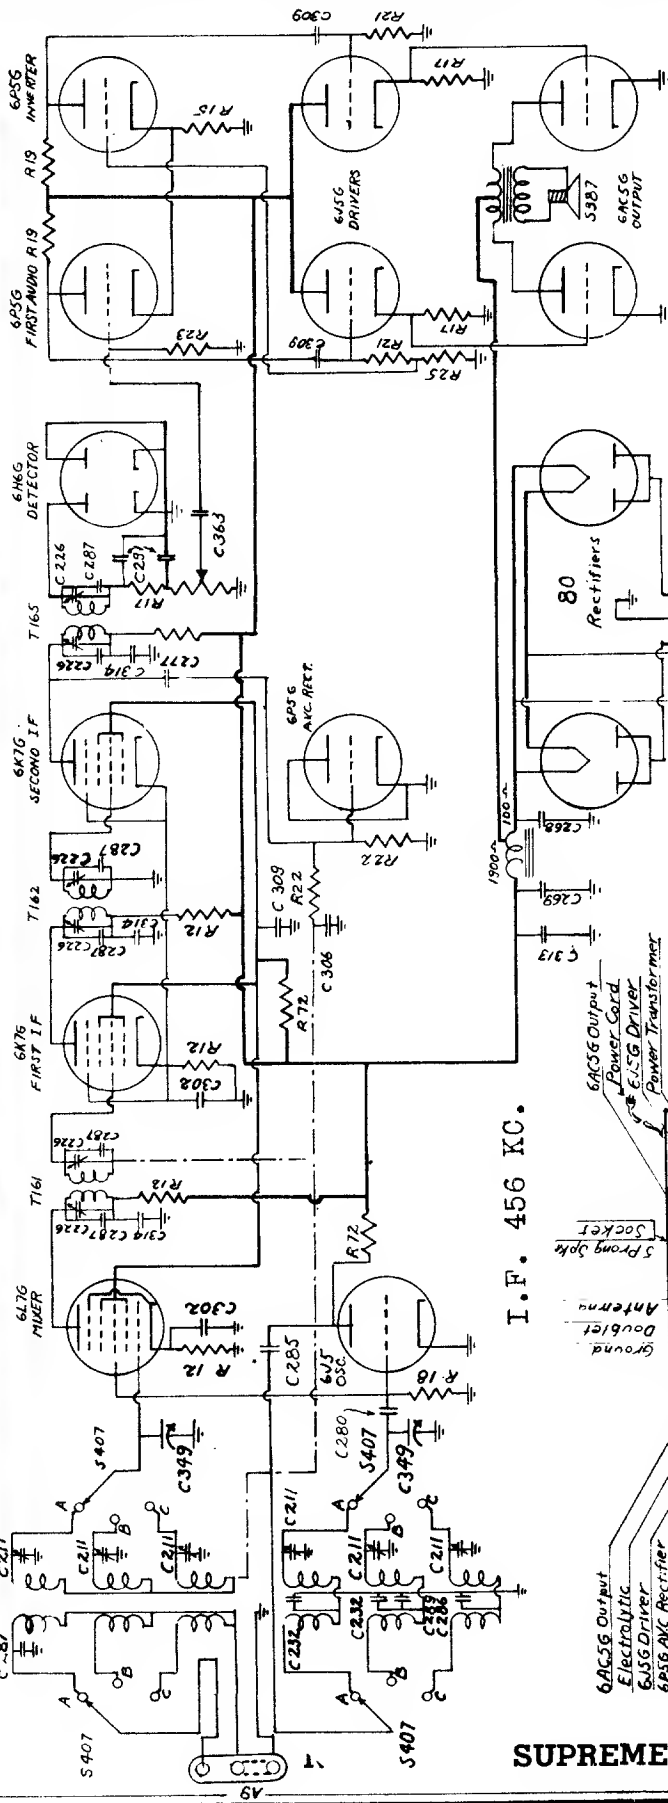

I.F. 456 KC.

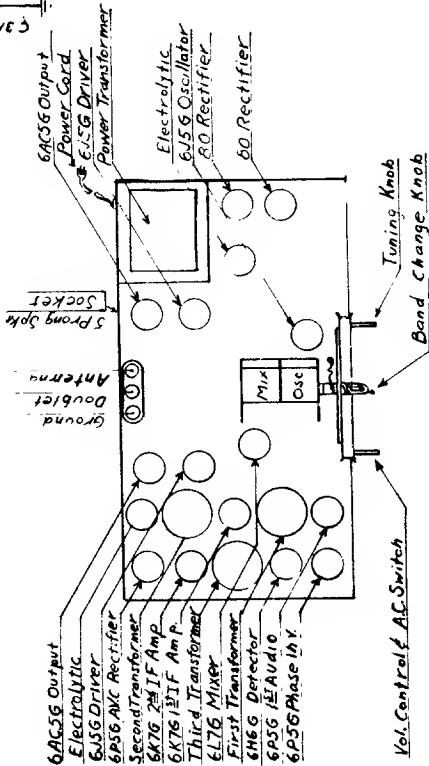

### OPERATING VOLTAGES

No Signal, Volume Control Turned Off


TUBE	PLATE	SCREEN	SUPP	CATH	HEATER
6L7 Mixer	245	85		2.4	6.0
6V5 Osc.	140			0	6.0
6K7 1 1/2 IF	245	85		2.4	6.0
6K7 2 1/2 IF	245	85		4.4	6.0
6P5 AVC Rect	0			4.4	6.0
6H6 2 1/2 DET	0			6.0	
6P5 1 1/2 AF	150			9.2	6.0
6P5 Drivers	245			1.0	6.0
6P5 Inverter	150			9.2	6.0
6AC5 Drivers	335			0	6.0
80 Rectifiers	340 (AC)			350	4.8

Line Voltage 117 Volts 60 Cycles  
Meter Used 2,000 Ohms per Volt

- A9 Antenna Strip
- C26 Cable Plug (M)
- C211 3.6 gang Trimmer
- C226 I.F. Pad
- C232 Osc Pad
- C268 24 MFD 350 V
- C269 40 MFD 350 V
- C291 2.5 Mica Dual
- C271 25 MFD Mica
- C284 3000
- C287 200
- C289 1200
- C302 .05 MFD 200 V
- C309 .02 MFD 400 V
- C313 .25
- C314 .05
- C349 2 Gang Variable
- C363 Control Volume MS
- C401 Fish Line Cord
- K24 Knob 1 inch
- P46 Pilot Light 6.8V
- R11 200 Ohm  $\pm$  Watt
- R12 5000
- R15 5000
- R17 25000
- R18 5000 Ohm  $\pm$  Watt
- R19 100M
- R21 500M
- R22 1 Meg Ohm
- R23 3
- R25 40M Ohm  $\pm$  M
- R27 15M 1 W
- S319 Spring Bell Ten
- S333 Pointer
- S401 Co. Switch
- T73 Power Trans.
- T162 2 1/2 IF
- T165 3 1/2 IF Trans.
- T165 3 1/2
- T285 4000 MFD
- T280 100

In long wave sets,  
the coverage of B  
Band is from 125 to  
350 KC.

Model 14-Z-9  
Midwest Radio Corp.  
909 Broadway  
Cincinnati, Ohio

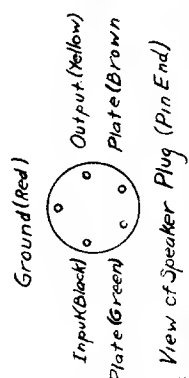

SUPREME PUBLICATIONS







# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

The Midwest Radio Corp. Models 12 & 17 1939 Trimmers and Padders

## MIXER PLATE

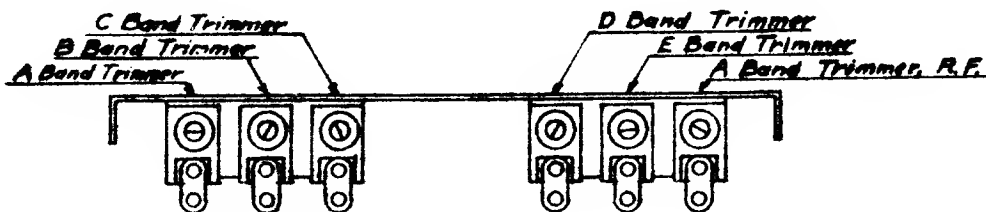

**C234 DUAL PADDER~**  
**TOP SCREW ~ B BAND**  
**BOTTOM SCREW~A BAND**

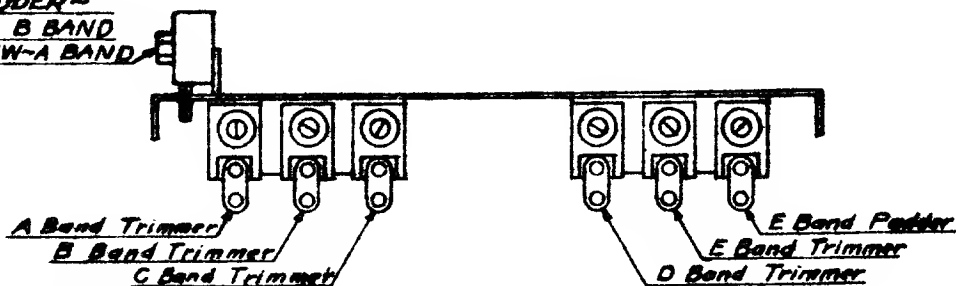

	PAD	TRIM
	at	at
A-Band	550	1500 KC.
B-Band	1.5	4.2 MC.
C-Band	4.2	12 MC.
D-Band	12	30 MC.
E-Band	125	350 KC.

## OSCILLATOR PLATE

Instructions for Aligning  
5 Band 1939 Midwest Sets.

FRONT of  
SET

Remove the oscillator tube. Peak I.F.'s at 456 KC. for maximum gain, while AFC is off. Receive a signal from generator, turn on AFC. If tuning is disturbed, realign secondary side of AFC transformer. Re-adjust trimmer across the primary of the AFC transformer until maximum AFC voltage is developed. May be measured with voltmeter from cathode of 6J7 AFC control tube to ground.

Band "A" 550 to 1500 KC. Padded at 550 KC. and trimmed at 1400 KC. R.F. and mixer trimmers should be adjusted at 1400 KC.

Band "B" 1.5 to 4.2 MC. This band should be padded at 1.7 MC., and trimmed at 4.0 MC.

Band "C" 4.2 to 12.0 MC. This band has a fixed padder and should be trimmed 11.0 MC.



Band "D" covers from 12 MC to 30 MC. This band has a fixed padder and should be trimmed at 29 MC. Adjust R.F. and mixer trimmers for maximum gain at 29 MC.

Band "E" covers from 125 to 350 KC. (long wave). This band should be padded at 135 KC. and trimmed at 340 KC.

A dummy antenna, consisting of a 200 ohm resistor and 10 mmfd. condenser in parallel, should be connected in series with output of signal generator.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


Mission Bell Radio Mfg Co., 831 Venice Blvd., Los Angeles, Calif.

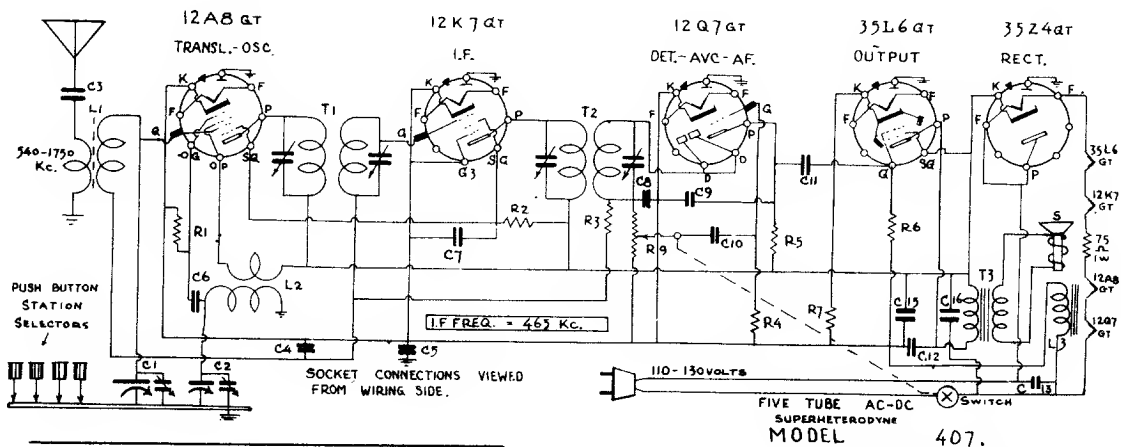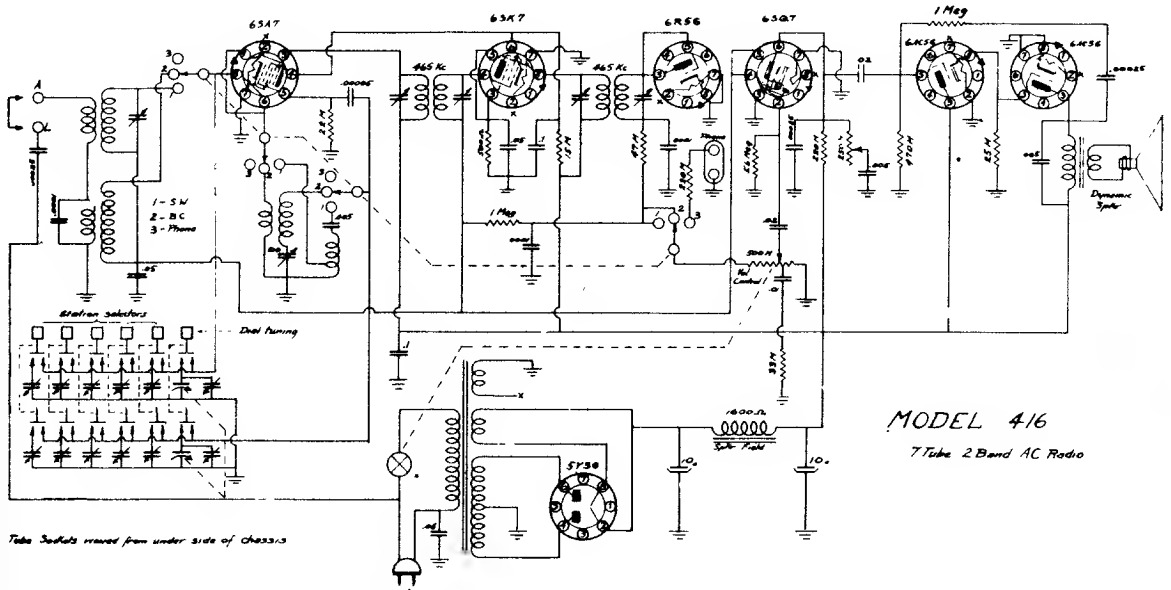

IDENTIFICATION NO. 113.407


**PARTS LIST**

SCHEMATIC LOCATION	PART NUMBER	DESCRIPTION	SWELLING PRICE RANGE	SCHEMATIC LOCATION	PART NUMBER	DESCRIPTION	SWELLING PRICE RANGE
T2	113394071	Coil-Input I.F.	1.00	C3	Cond-.005 MFD 500V	.15	
T2	113394072	Coil-Output I.F.	1.00	C5	" .25 " 200V	.20	
L1	113284073	Coil-Antenna	.75	C6	" .0001 " Misc	.15	
L2	113284074	Coil-Overfilter	.60	CE,C9	" .0005 " "	.15	
R9	113244079	Control Volume	.85	R1	Resistor 47K Ohm 1/2W	.10	
		50M Ohm with Switch		R2	" 2.2 Meg 1/2W	.10	
		Speaker 5" Dynamic	3.50	R3	" 2.2 Meg 1/2W	.10	
L3	11331407521	50M Ohm with Switch	1.50	R4	" 22K Ohm 1/2W	.10	
	11315407522	Field Coil	1.50	R5	" 22K Ohm 1/2W	.10	
	11335407523	Cone & Voice Coil	2.00	R7	" .50 " 1W	.10	
	1135407523	Grid-Cap	.25				
	1139407519	Grid-Cap	.25	1131840785	Socket-4 Prong	.10	
C1,C2	1131840782	Cond-Variable	2.00	1133840726	Push Button Selector Assembly	1.85	
C15	1132040753	Cond- Electrolytic 20 MFD. 250 Volt	1.50	1134540773	Dial Drive Assembly	.65	
C16	1132040754	Cond- Electrolytic 40 MFD. 150 Volt	.45	11339407152	Dial-Counterlead Knob	.30	
C17	1132040754	Cond- Electrolytic 40 MFD. 150 Volt	.45	1134440772	Eductor Knob (Push Button)	.35	
C13	Cond- .05 MFD 500V	.15	11339407123	Indicator Lens for Push Button	.15		
C12	" .01 " 500V	.15					
C10,C11	" .01 " 500V	.15					

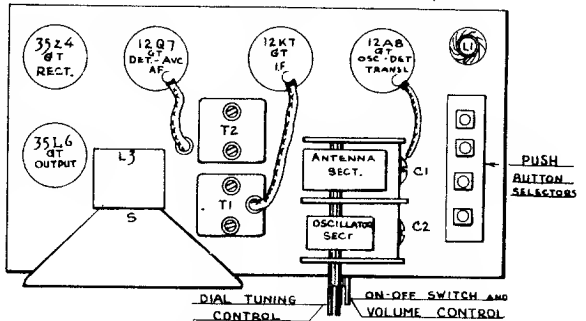


ARROWS INDICATE CONNECTIONS PRESENT IN BAND SWITCH WHEN IN POSITION SHOWN.

POSITION	STANDARD WAVE	B	SHORT WAVE	C	POSITION 3
BACK SECT. 1	11	11	11	11	11
FRONT SECT. 1	9	10	12	4	3
FRONT SECT. 2	4	5	6	7	8
BACK SECT. 1	4	5	6	7	8
BACK SECT. 2	10	11	12	2	1

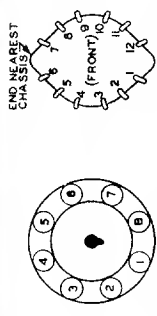

- TUBE ELEMENT LEGEND**
- SH - SHELL
  - H - HEATER
  - K - CATHODE
  - P - PLATE
  - G1 - CONTROL GRID
  - G2 - SCREEN GRID
  - G3 - SUPPRESSOR GRID
  - DP - DIODE PLATE
  - T - TARGET
  - HK - HEATER AND CATHODE

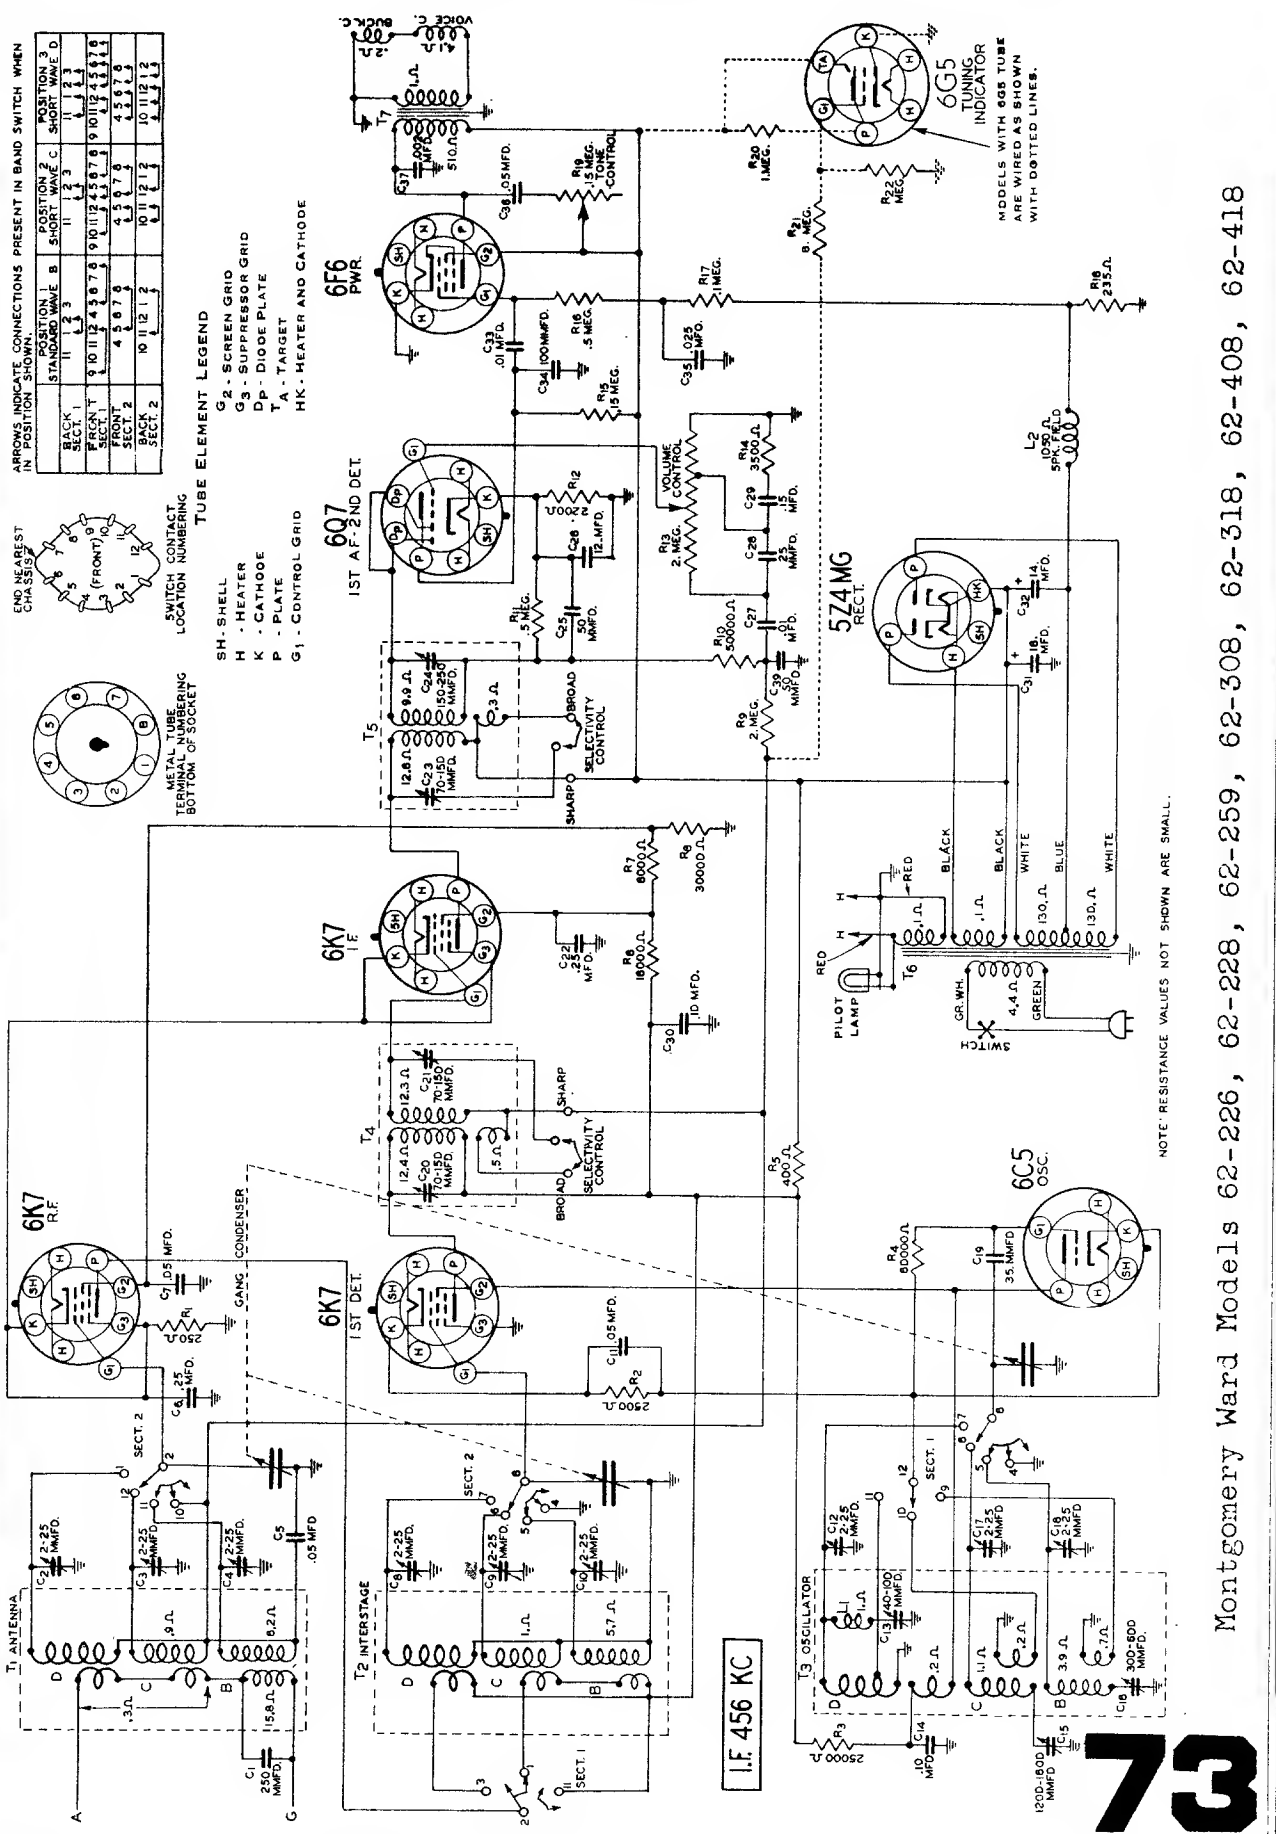


NOTE: RESISTANCE VALUES NOT SHOWN ARE SMALL.

Montgomery Ward Models 62-226, 62-228, 62-259, 62-308, 62-318, 62-408, 62-418





# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

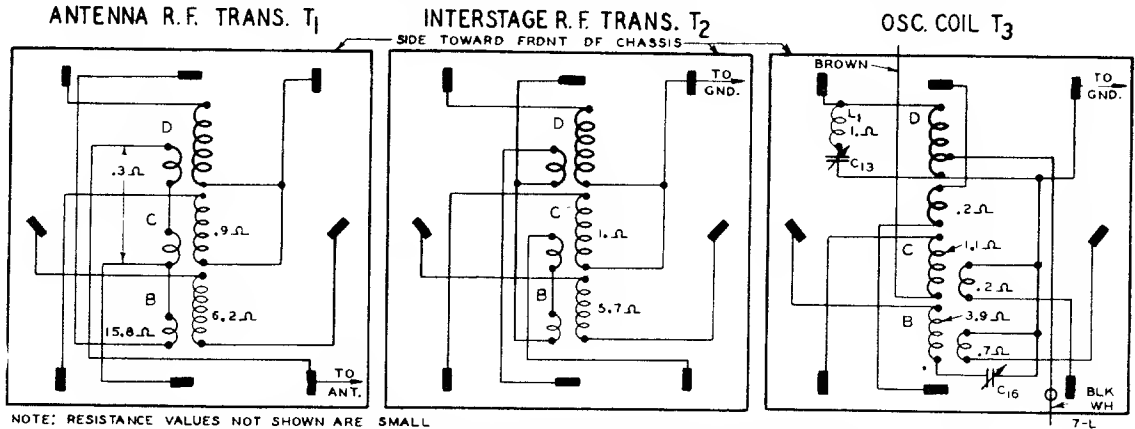

R. F. and Oscillator Coil Base Terminal Arrangement and D. C. Resistance of Windings

Line Voltage: 115  
Volume Control: Maximum

Antenna Shorted to Ground  
Position of Band Switch: Standard Wave

TUBE	FUNCTION	VOLTAGE BETWEEN SOCKET PRONGS AND GROUND (Unless otherwise indicated)							
		Prong No. 1	Prong No. 2	Prong No. 3	Prong No. 4	Prong No. 5	Prong No. 6	Prong No. 7	Prong No. 8
6K7	RF	0	6.1 <sup>(1)</sup>	260	100	4.0	....	6.1 <sup>(1)</sup>	4.0
6K7	1st Det.	0	6.1 <sup>(1)</sup>	260	118	0	....	6.1 <sup>(1)</sup>	9.0
6C5	Osc.	0	6.1 <sup>(1)</sup>	120	...	0	....	6.1 <sup>(1)</sup>	0
6K7	I F.	0	6.1 <sup>(1)</sup>	260	138	4.0	....	6.1 <sup>(1)</sup>	4.0
6Q7	1st A.F.—2nd Det.	0	6.1 <sup>(1)</sup>	105	0	0	....	6.1 <sup>(1)</sup>	1.4
6F6	Power Amp.	0	6.1 <sup>(1)</sup>	238	260	18	....	6.1 <sup>(1)</sup>	0
5Z4MG	Rect.	0	4.9 <sup>(2)</sup>	...	680 <sup>(3)</sup>	...	680 <sup>(3)</sup>	....	4.9 <sup>(2)</sup>
6E5	Tuning Indicator	Plate to Ground 30 <sup>(4)</sup>		Target to Ground 270		Cathode to Ground 0		Across Heater 6.1 A.C.	

(1) A.C. voltage as read across heater terminals 2 and 7.  
(2) A.C. voltage as read across heater terminals 2 and 8.


(3) A.C. voltage as read across terminals 4 and 6.  
(4) As read with 500,000 ohm meter.

The voltage readings are taken with a voltmeter having a resistance of 1000 ohms per volt.

The standard metal tube socket terminal numbering system (bottom of socket) is shown in Fig. 5



## MONTGOMERY WARD

62-226, 62-228, 62-259, 62-308,  
62-318, 62-408, 62-418

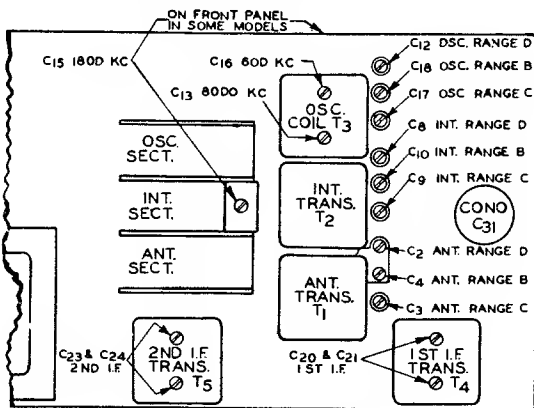


Location of Trimmers

Fig. 5—Metal tube terminal numbering (bottom of socket)

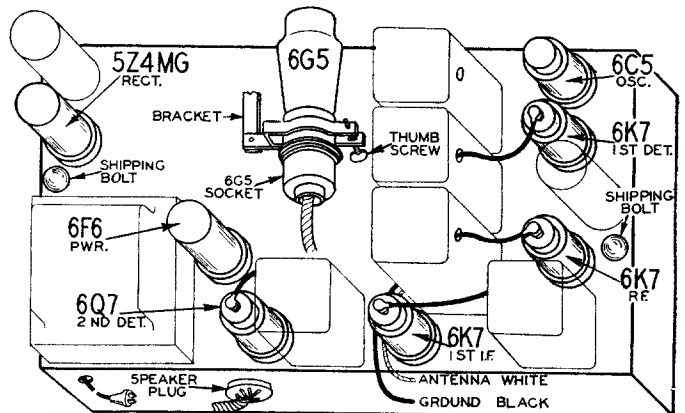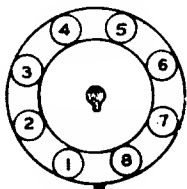

# WARDS AIRLINE RADIO

MODELS 62-350, 62-351 and 62-352

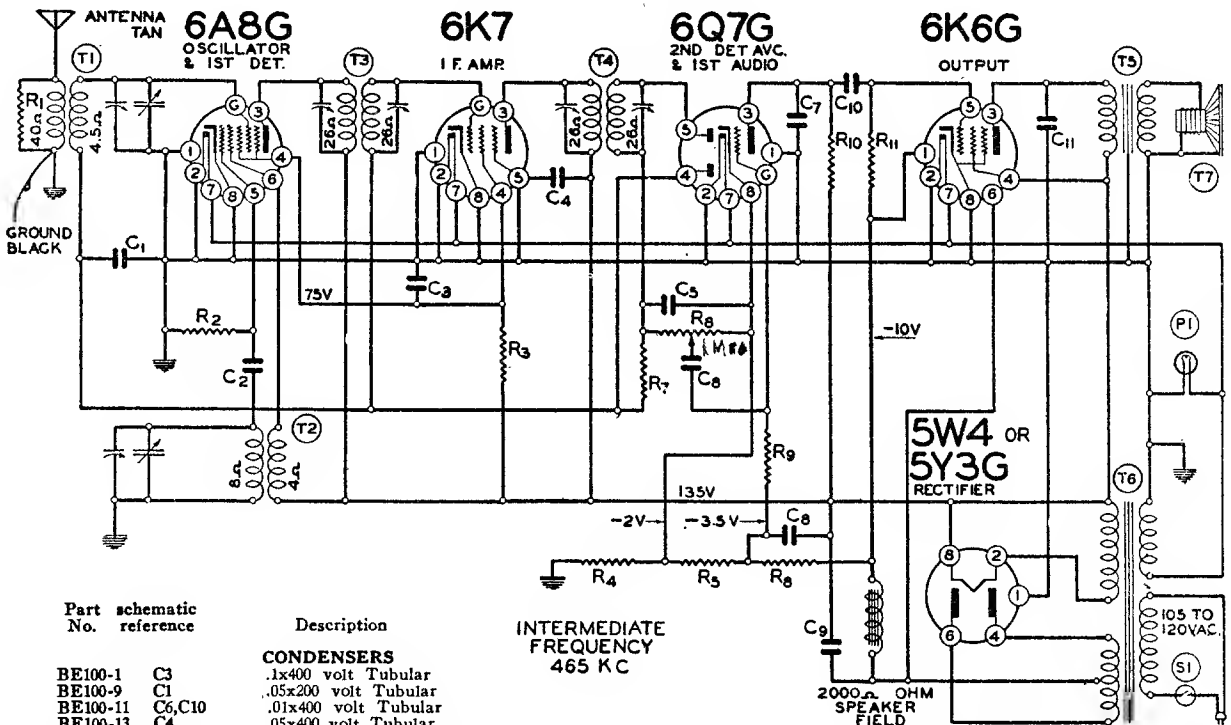

Part schematic No. reference

Description

**CONDENSERS**

- BE100-1 C3 .1x400 volt Tubular
- BE100-9 C1 .05x200 volt Tubular
- BE100-11 C6,C10 .01x400 volt Tubular
- BE100-13 C4 .05x400 volt Tubular
- BE100-19 C11 .006x600 volt Tubular
- BE119-47C C8,C9 Dual 5 Mfd x 250 v. v. Filter Condenser
- BE129-2 C7 .0005 Mica Type 20%
- BE129-5 C5 .0001 Mica Type 20%
- BE129-12 C2 .00025 Mica Type 20%

**RESISTORS**



- BE106-35 R4,R5,R6 65 Ohm, 45 Ohm, 220 Ohm Metal Clad Strip
- BE130-9 R10 200M Ohm-1/3 watt-20% Carbon
- BE130-12 R2 50M Ohm-1/3 watt-20% Carbon
- BE130-21 R1 20M Ohm-1/3 watt-20% Carbon
- BE130-118 R11 600M Ohm-1/3 watt-20% Carbon
- BE130-149 R3 15M Ohm-1/3 watt-20% Carbon
- BE130-170 R7,R9 3 Megohm-1/3 watt-20% Carbon

**COILS**


- BE108-82E T3 Input I.F. Coil Assembly Complete with can
- BE108-83E T4 Output I.F. Coil Assembly Complete with can
- BE110-73 T2 Oscillator Coil Assembly Complete
- BE111-92 T1 Antenna Coil Assembly Complete

INTERMEDIATE FREQUENCY 465 KC

- TRANSFORMERS**
- BE104-100E T6 Power Transformer 50/60 Cycle 105-120 volt
  - BE104-108E Power Transformer 25 cycle 105-120 volt
  - BE104-104E Universal Transformer 25 cycle primary
  - BE104-99E Universal Transformer 40 cycle primary
- SPEAKER**
- BE114-108A & B T7 Five inch Dynamic (2000 ohm field)
  - BE105-55B T5 Output Transformer for Speaker
- MISCELLANEOUS**
- BE101-106 R8,S1 Volume Control and Switch (1 megohm)
  - BE102-67 C Two Gang Variable Condenser

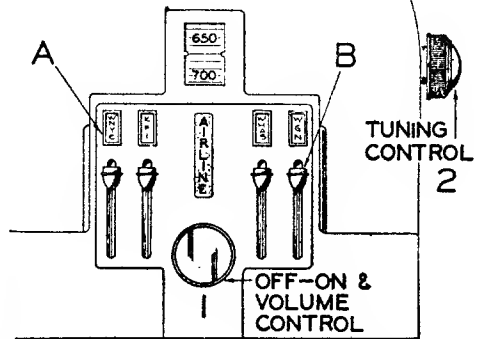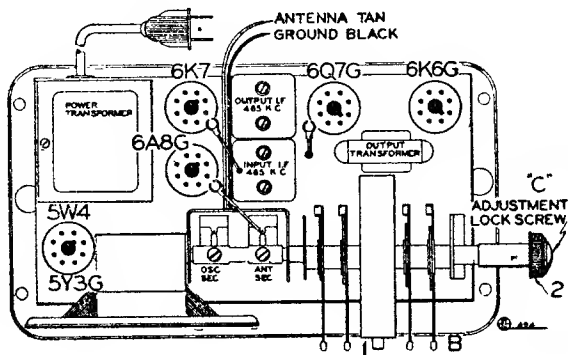



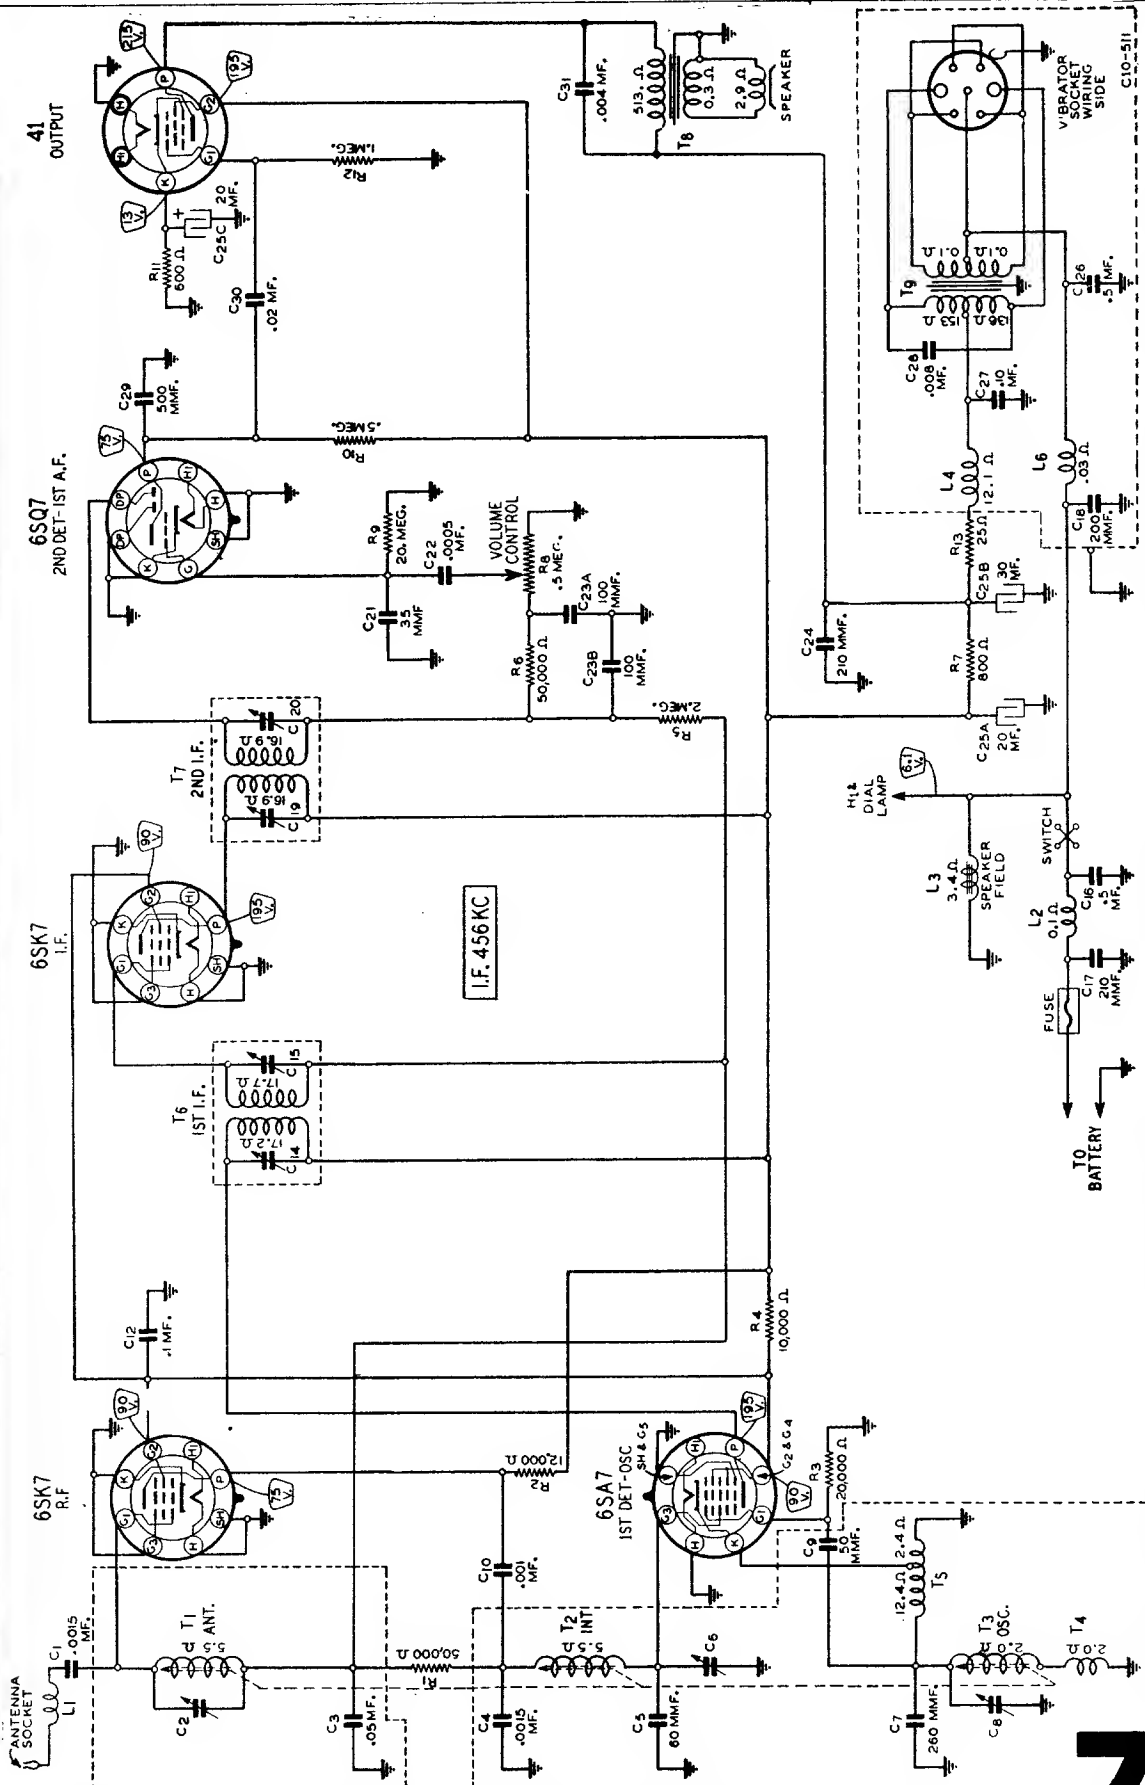

Montgomery Ward Model 62-554

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS







# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Montgomery Ward Model 93WG-800

## ALIGNMENT PROCEDURE

Volume Control—Maximum All Adjustments.

Connect Radio Chassis to Ground Post of Signal Generator with a Short Heavy Lead.

Allow Chassis and Signal Generator to "Heat Up" for several minutes.

The following equipment is required for aligning:




An All Wave Signal Generator which will provide an accurately calibrated signal at the test frequencies as listed.

Output Indicating Meter—Non-Metallic Screwdriver.

Dummy Antennas—.1 mf., 200 mmf., and 400 ohms.

SIGNAL GENERATOR		DUMMY ANTENNA	BAND SWITCH SETTING	CONDENSER SETTING	ADJUST TRIMMERS TO MAXIMUM
FREQUENCY SETTING	CONNECTION AT RADIO				
<b>I. F.</b>					
456 KC	Grid of 1st Det.	.1 mf.	B Range	Turn Rotor to Full Open	1st I.F. (C17) & (C18) 2nd I.F. (C19) & (C20)
<b>RANGE B</b>					
1730 KC	Antenna Lead	200 mmf.	B Range Ext. Ant.	Turn Rotor to Full Open	Oscillator Range B (C12)
1500 KC	Antenna Lead	200 mmf.	B Range Ext. Ant.	Turn Rotor to Max. Output	Ant. Range B (C3) Int. Range B (C7)
600 KC	Antenna Lead	200 mmf.	B Range Ext. Ant.	Turn Rotor to Max. Output	600 KC (C13) Rock Rotor—See Note A
<b>RANGE D</b>					
18,300 KC	Antenna Lead	400 Ohm	D Range	Turn Rotor to Full Open	Oscillator Range D (C10)
18,300 KC	Antenna Lead	400 Ohm	D Range	Keep Rotor at Full Open Position	Ant. Range D (C2) Int. Range D (C6) Rock Rotor—See Note A
<b>LOOP RANGE B</b>					
1500 KC See Note B	None See Note C		Loop	Turn Rotor to Max. Output	See Note C Loop Trimmer (C36)

**CAUTION**—When aligning the short wave band, be sure NOT to adjust at the image frequency. This can be checked as follows: Let us say the signal generator is set for 15,000 KC. The signal will then be heard at 15,000 on the dial of the radio. The image signal, which is much weaker, will be heard at 15,000 less 912 KC, or 14,088 KC on the dial. It may be necessary to increase the input signal to hear the image.

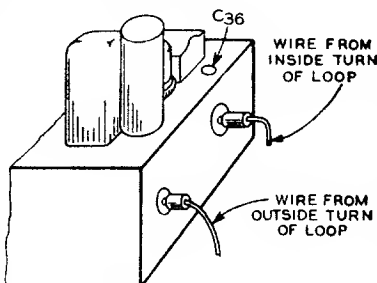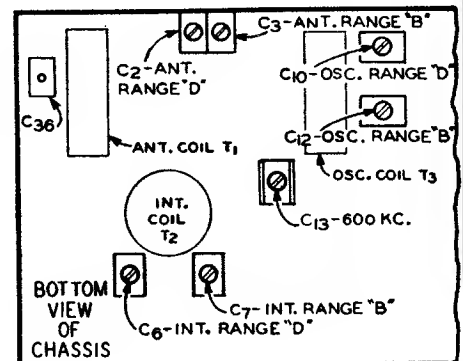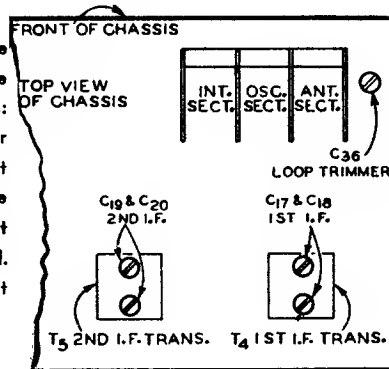

LOOP CONNECTIONS

Attenuate the signal from the signal generator to prevent the leveling-off action of the AVC.

After each range is completed, repeat the procedure as a final check.

**NOTE A**—Turn the rotor back and forth and adjust the trimmer until the peak of greatest intensity is obtained.

**NOTE B**—Reinstall set in cabinet. Connect a loop approximately one foot in diameter across the antenna and ground posts of the signal generator. Place signal generator so that this loop is between 3 and 10 feet from loop in cabinet.

**NOTE C (CONSOLE MODELS)**—Turn knob of loop until output is maximum.


**CALIBRATION**—Chassis should be in cabinet. If it is necessary to recalibrate the radio, loosen the set screw on the dial hub near the volume control drum. Tune in a signal of known frequency. Hold the tuning control drum stationary and at the same time turn the dial drum the necessary amount in the required direction. If the radio detunes as the dial drum is turned, loosen the set screw a slight additional amount and recalibrate. Retighten the set screw.

# 80


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


Montgomery Ward Model 93WG-800

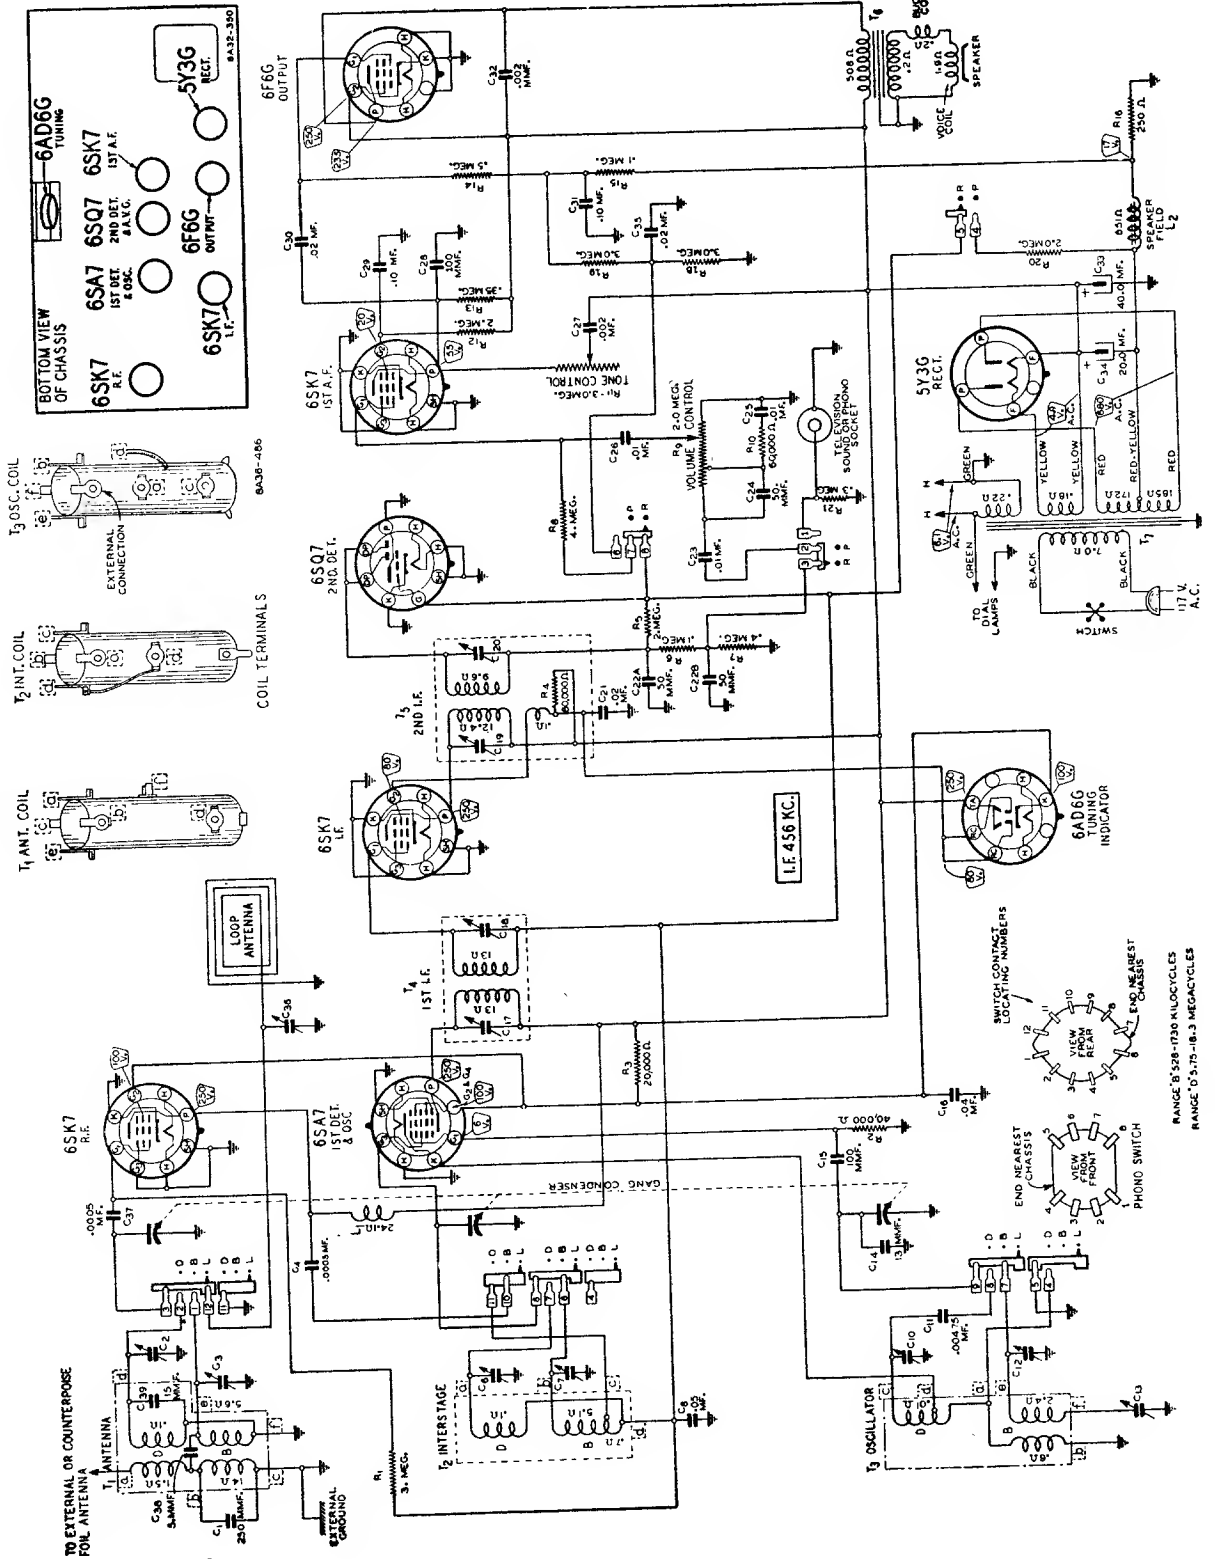



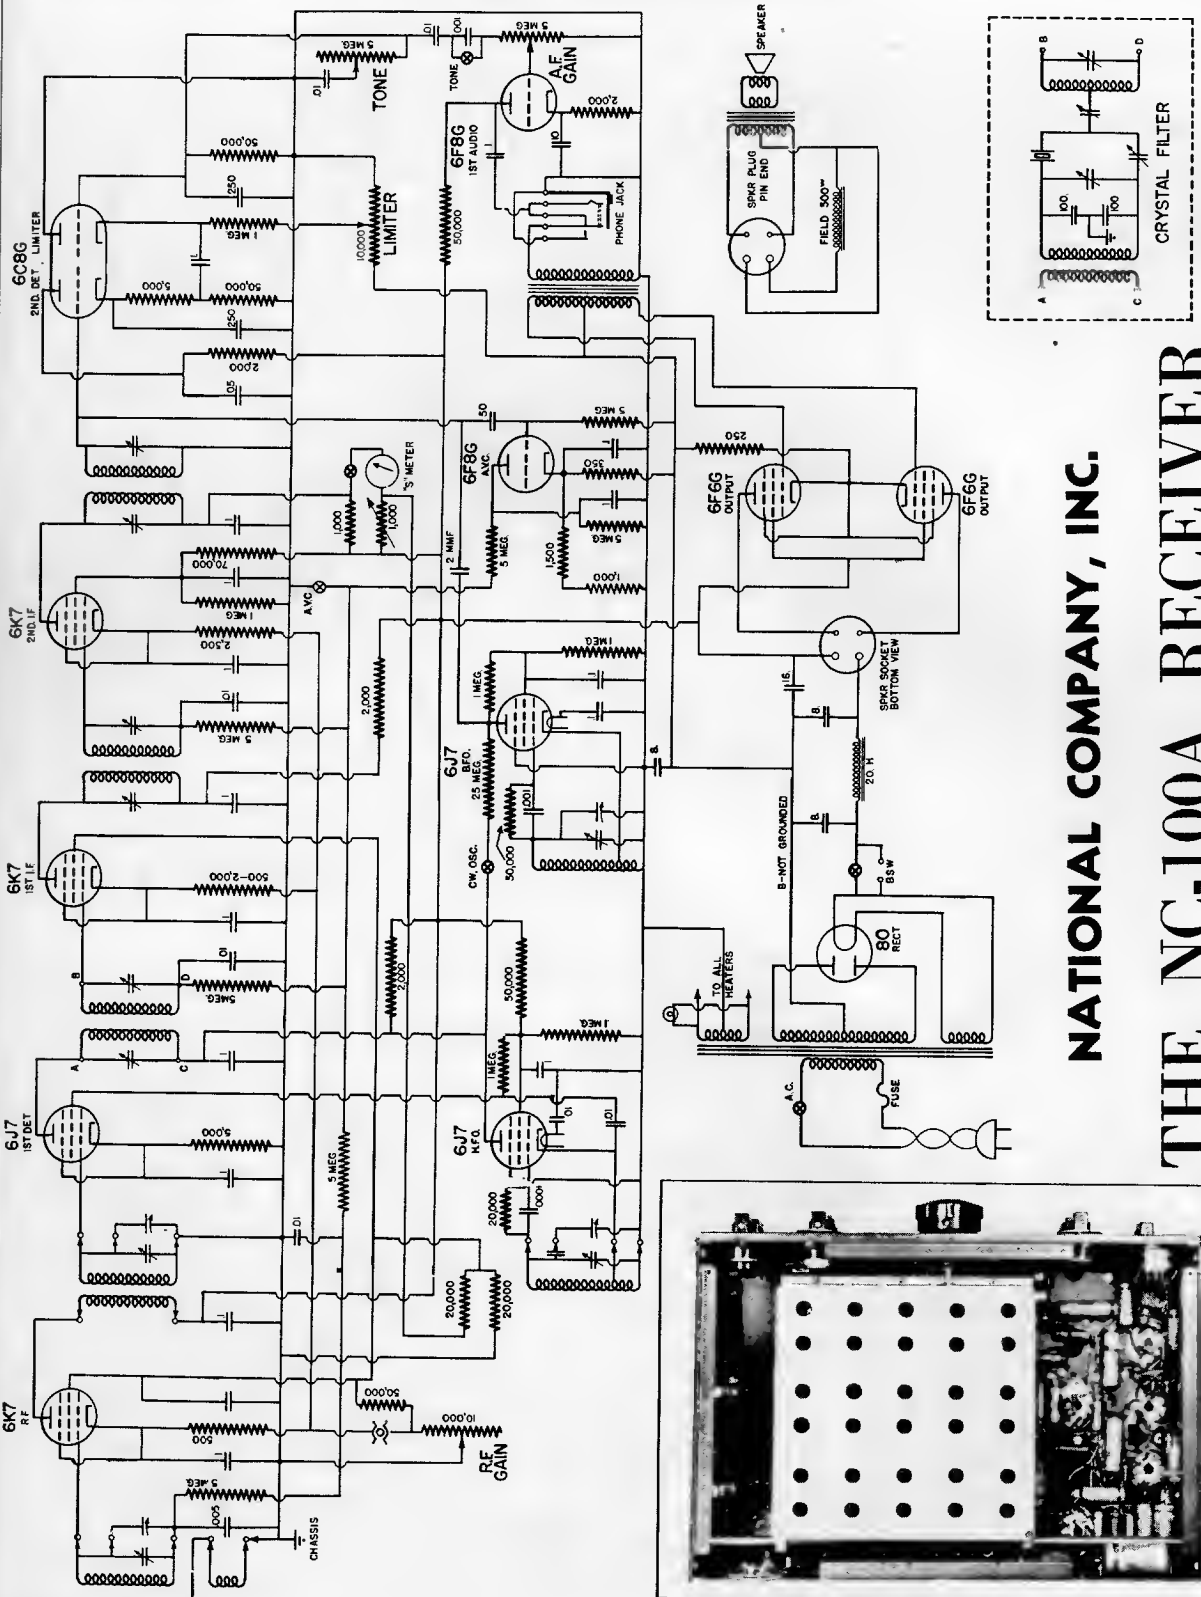

NATIONAL COMPANY, INC.  
 THE NC-100A RECEIVER


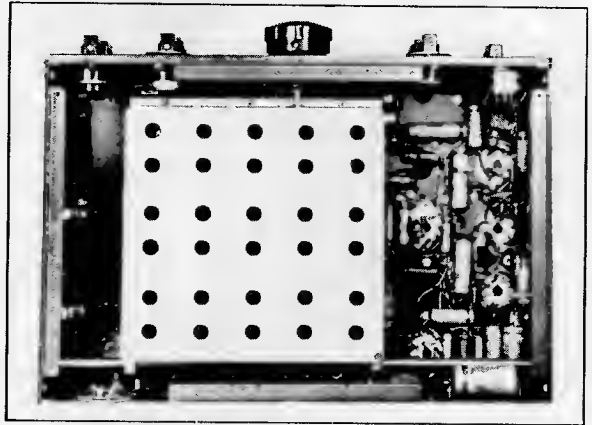


BOTTOM VIEW

The coil assembly is shown midway between the 1.3-2.8 mc. and 2.7-6.4 mc. ranges.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## ARVIN CAR RADIO CHASSIS RE45

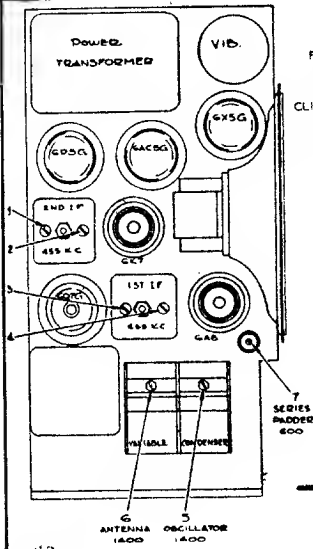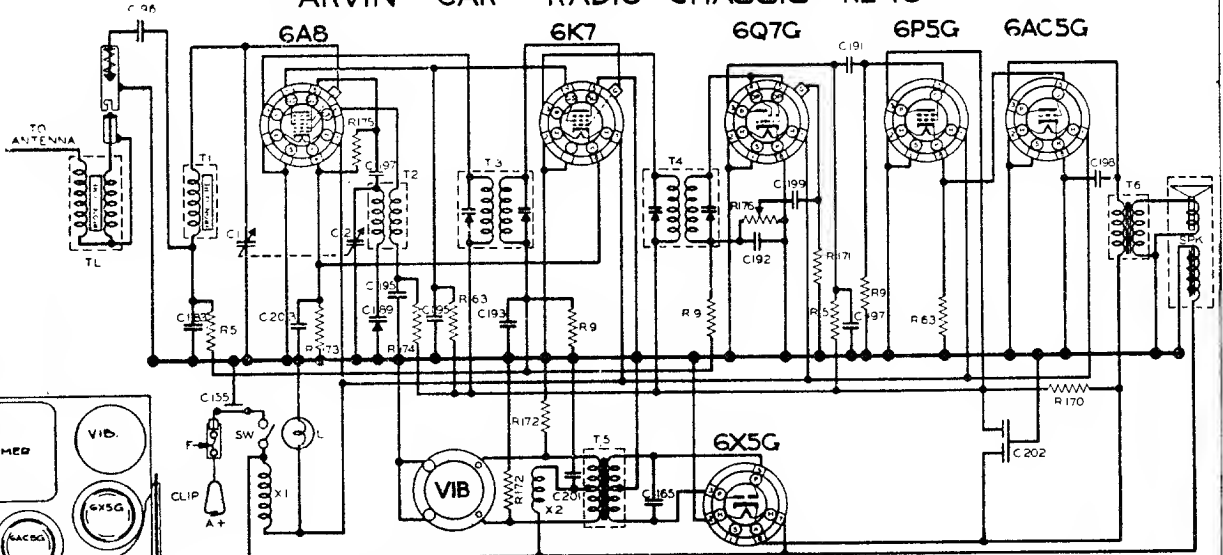


RESISTORS			CONDENSERS			CHOKES & TRANSFORMERS			MISCELLANEOUS UNITS		
Q	OHMS	PART NO.	C	CAPACITY	PART NO.	T-X	TYPE	PART NO.	SYMBOL	DESCRIPTION	PART NO.
1	500Ω	13 207C	1	TWO-LAYER	28-1421	1	ANTENNA COIL	00-1420	F	TUBE - 20 AMP	10-2278
2	100Ω	17-1420	2	VARIABLE	205 17-1421	2	OSCILLATION COIL	00-1420	L	DIAL LIGHT BULB - M3204 NO. 9	17-13004
3	25K	17-1420	3	0.002	205 17-1421	3	FIRST I.F. COIL	00-1421	S	SPEAKER ASSEMBLY	17-14213
4	80Ω	17-1421	4	0.005	1500 17-14230	4	SECOND I.F. COIL	00-1422	SW	POWER SWITCH	00-14222
5	100Ω	17-1422	5	0.03	270 17-1424	5	POWER TRANS.	00-14223	TL	TRANSFORMER LINE	00-14223
6	100Ω	17-1422	6	0.005	1500 17-14230	6	OUTPUT TRANS.	00-14224	VIB	VIBRATOR	17-14243
7	100Ω	17-1422	7	0.01	400 17-14212	7	CHOKES				
8	100Ω	17-1422	8	0.01	400 17-14212	8	SUPPRESSION CHOKES	27-14238			
9	100Ω	17-1422	9	0.01	400 17-14212	9	SUPPRESSION CHOKES	27-14238			
10	100Ω	17-1422	10	0.01	400 17-14212	10	SUPPRESSION CHOKES	27-14238			
11	100Ω	17-1422	11	0.01	400 17-14212	11	SUPPRESSION CHOKES	27-14238			
12	100Ω	17-1422	12	0.01	400 17-14212	12	SUPPRESSION CHOKES	27-14238			
13	100Ω	17-1422	13	0.01	400 17-14212	13	SUPPRESSION CHOKES	27-14238			
14	100Ω	17-1422	14	0.01	400 17-14212	14	SUPPRESSION CHOKES	27-14238			
15	100Ω	17-1422	15	0.01	400 17-14212	15	SUPPRESSION CHOKES	27-14238			
16	100Ω	17-1422	16	0.01	400 17-14212	16	SUPPRESSION CHOKES	27-14238			
17	100Ω	17-1422	17	0.01	400 17-14212	17	SUPPRESSION CHOKES	27-14238			
18	100Ω	17-1422	18	0.01	400 17-14212	18	SUPPRESSION CHOKES	27-14238			
19	100Ω	17-1422	19	0.01	400 17-14212	19	SUPPRESSION CHOKES	27-14238			
20	100Ω	17-1422	20	0.01	400 17-14212	20	SUPPRESSION CHOKES	27-14238			
21	100Ω	17-1422	21	0.01	400 17-14212	21	SUPPRESSION CHOKES	27-14238			
22	100Ω	17-1422	22	0.01	400 17-14212	22	SUPPRESSION CHOKES	27-14238			
23	100Ω	17-1422	23	0.01	400 17-14212	23	SUPPRESSION CHOKES	27-14238			

IF PEAK 455 KC  
FREQUENCY RANGE 1575 TO 540 K.C.  
NOBLITT-SPARKS INDUSTRIES, INC.,  
COLUMBUS, INDIANA

### Arvin Models 8-A and RE-45

## ARVIN CAR RADIO CHASSIS RE46

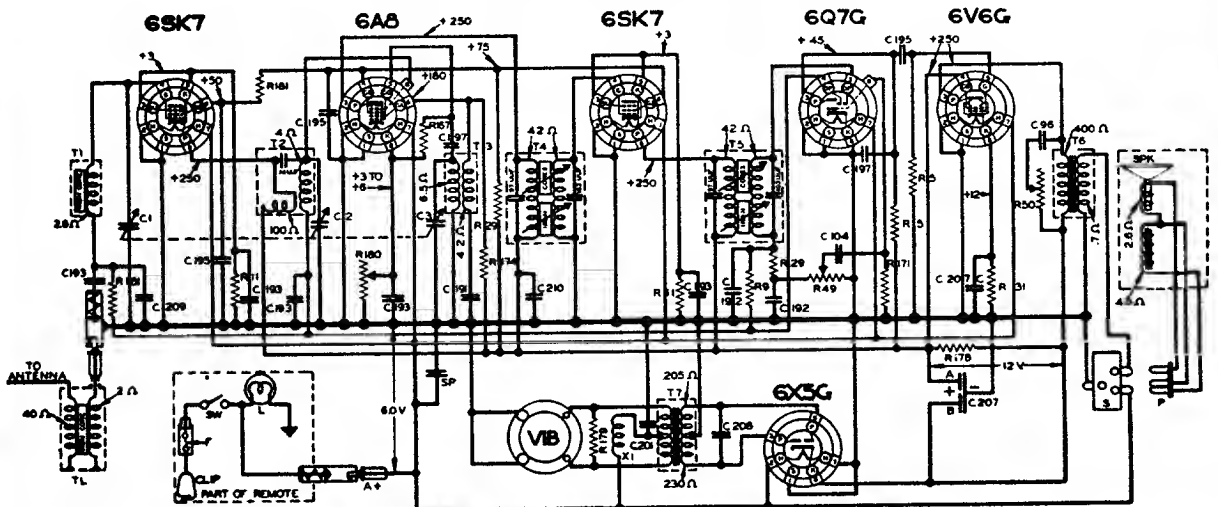

NOTE - ALL VOLTAGES GIVEN FOR 14" INPUT OF 6 VOLTS. ALLOW 10% ON ALL VOLTAGES & RESISTANCES OF WINDING.


RESISTORS			CONDENSERS			CHOKES & TRANSFORMERS			MISCELLANEOUS UNITS		
Q	OHMS	PART NO.	C	CAPACITY	PART NO.	T-X	TYPE	PART NO.	SYMBOL	DESCRIPTION	PART NO.
1	500Ω	13 207C	1	TWO-LAYER	28-1421	1	ANTENNA COIL	00-1420	F	TUBE - 20 AMP	10-2278
2	100Ω	17-1420	2	VARIABLE	205 17-1421	2	OSCILLATION COIL	00-1420	L	DIAL LIGHT BULB - M3204 NO. 9	17-13004
3	25K	17-1420	3	0.002	205 17-1421	3	FIRST I.F. COIL	00-1421	S	SPEAKER ASSEMBLY	17-14213
4	80Ω	17-1421	4	0.005	1500 17-14230	4	SECOND I.F. COIL	00-1422	SW	POWER SWITCH	00-14222
5	100Ω	17-1422	5	0.03	270 17-1424	5	POWER TRANS.	00-14223	TL	TRANSFORMER LINE	00-14223
6	100Ω	17-1422	6	0.005	1500 17-14230	6	OUTPUT TRANS.	00-14224	VIB	VIBRATOR	17-14243
7	100Ω	17-1422	7	0.01	400 17-14212	7	CHOKES				
8	100Ω	17-1422	8	0.01	400 17-14212	8	SUPPRESSION CHOKES	27-14238			
9	100Ω	17-1422	9	0.01	400 17-14212	9	SUPPRESSION CHOKES	27-14238			
10	100Ω	17-1422	10	0.01	400 17-14212	10	SUPPRESSION CHOKES	27-14238			
11	100Ω	17-1422	11	0.01	400 17-14212	11	SUPPRESSION CHOKES	27-14238			
12	100Ω	17-1422	12	0.01	400 17-14212	12	SUPPRESSION CHOKES	27-14238			
13	100Ω	17-1422	13	0.01	400 17-14212	13	SUPPRESSION CHOKES	27-14238			
14	100Ω	17-1422	14	0.01	400 17-14212	14	SUPPRESSION CHOKES	27-14238			
15	100Ω	17-1422	15	0.01	400 17-14212	15	SUPPRESSION CHOKES	27-14238			
16	100Ω	17-1422	16	0.01	400 17-14212	16	SUPPRESSION CHOKES	27-14238			
17	100Ω	17-1422	17	0.01	400 17-14212	17	SUPPRESSION CHOKES	27-14238			
18	100Ω	17-1422	18	0.01	400 17-14212	18	SUPPRESSION CHOKES	27-14238			
19	100Ω	17-1422	19	0.01	400 17-14212	19	SUPPRESSION CHOKES	27-14238			
20	100Ω	17-1422	20	0.01	400 17-14212	20	SUPPRESSION CHOKES	27-14238			
21	100Ω	17-1422	21	0.01	400 17-14212	21	SUPPRESSION CHOKES	27-14238			
22	100Ω	17-1422	22	0.01	400 17-14212	22	SUPPRESSION CHOKES	27-14238			
23	100Ω	17-1422	23	0.01	400 17-14212	23	SUPPRESSION CHOKES	27-14238			

INTERMEDIATE FREQUENCY 170 K.C.  
FREQUENCY RANGE 1570 TO 540 K.C.  
NOBLITT-SPARKS INDUSTRIES, INC.,  
COLUMBUS, INDIANA

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
W	PART NO.	CAPACITY	VOLT	T	TYPE	SYMBOL	DESCRIPTION
R 1	OHM			1	ANTENNA COIL	L	DIAL LIGHT BULB
9	1M			2	OSCILLATOR COIL	P1	SPEAKER PLUG
82	30	17500	450	3	FIRST I.F. COIL	P2	AC LINE CORD & PLUG ASSEMBLY
108	30K	200	250	4	SECOND I.F. COIL	S1	SPEAKER SOCKET
111	20K	800	300	5	OUTPUT TRANS.	SPK	SPEAKER (SEE MODEL)
113	250K	800	600	6	POWER TRANS.	SW1	AC LINE SWITCH
136	100	27	600			SW2	BAND SWITCH
151	5M	46	600				
152	100K	59	400				
153	30K	96	400				
154	1.5M	104	200				
156	35	33	800				


I. F. PEAK 455 K.C.  
 BROADCAST BALANCE AT 1500K.C.  
 BROADCAST PAD AT 600 K.C.  
 SHORTWAVE BALANCE AT 15M.C.  
 CHECK AT 7M.C.  
 NOBLITT-SPARKS INDUSTRIES, INC.  
 COLUMBUS, INDIANA

ARVIN RADIO CHASSIS RE 27

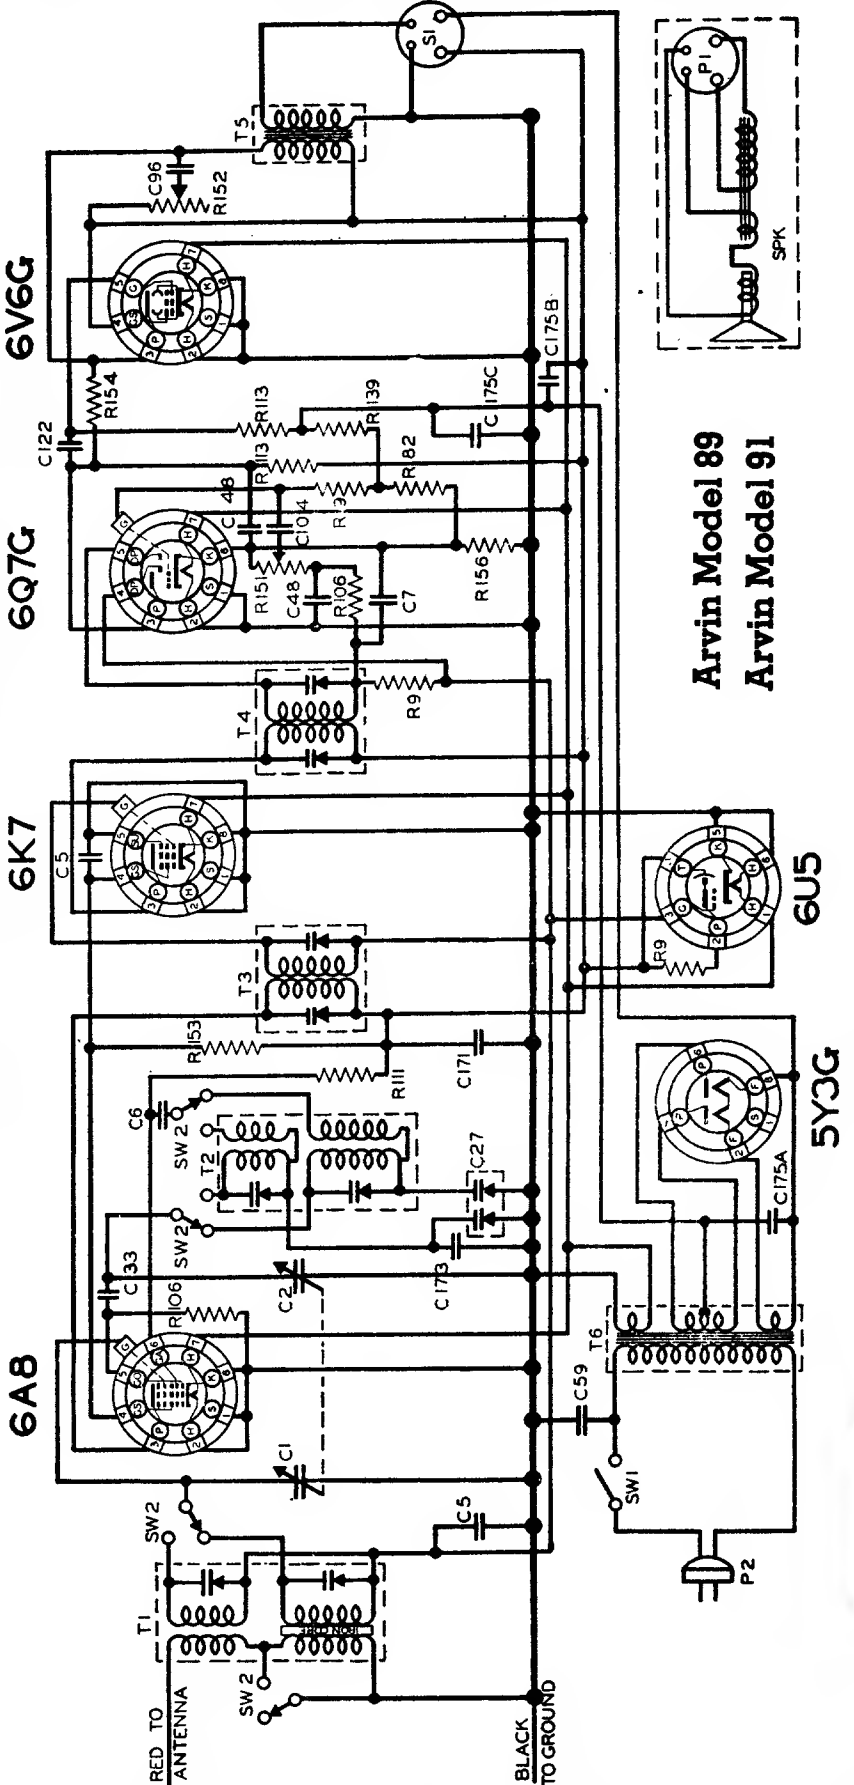

Arvin Model 89  
 Arvin Model 91

**ARVIN HOME RADIO CHASSIS RE 37.**  
 6K8      6K7      6Q7G      6K6G

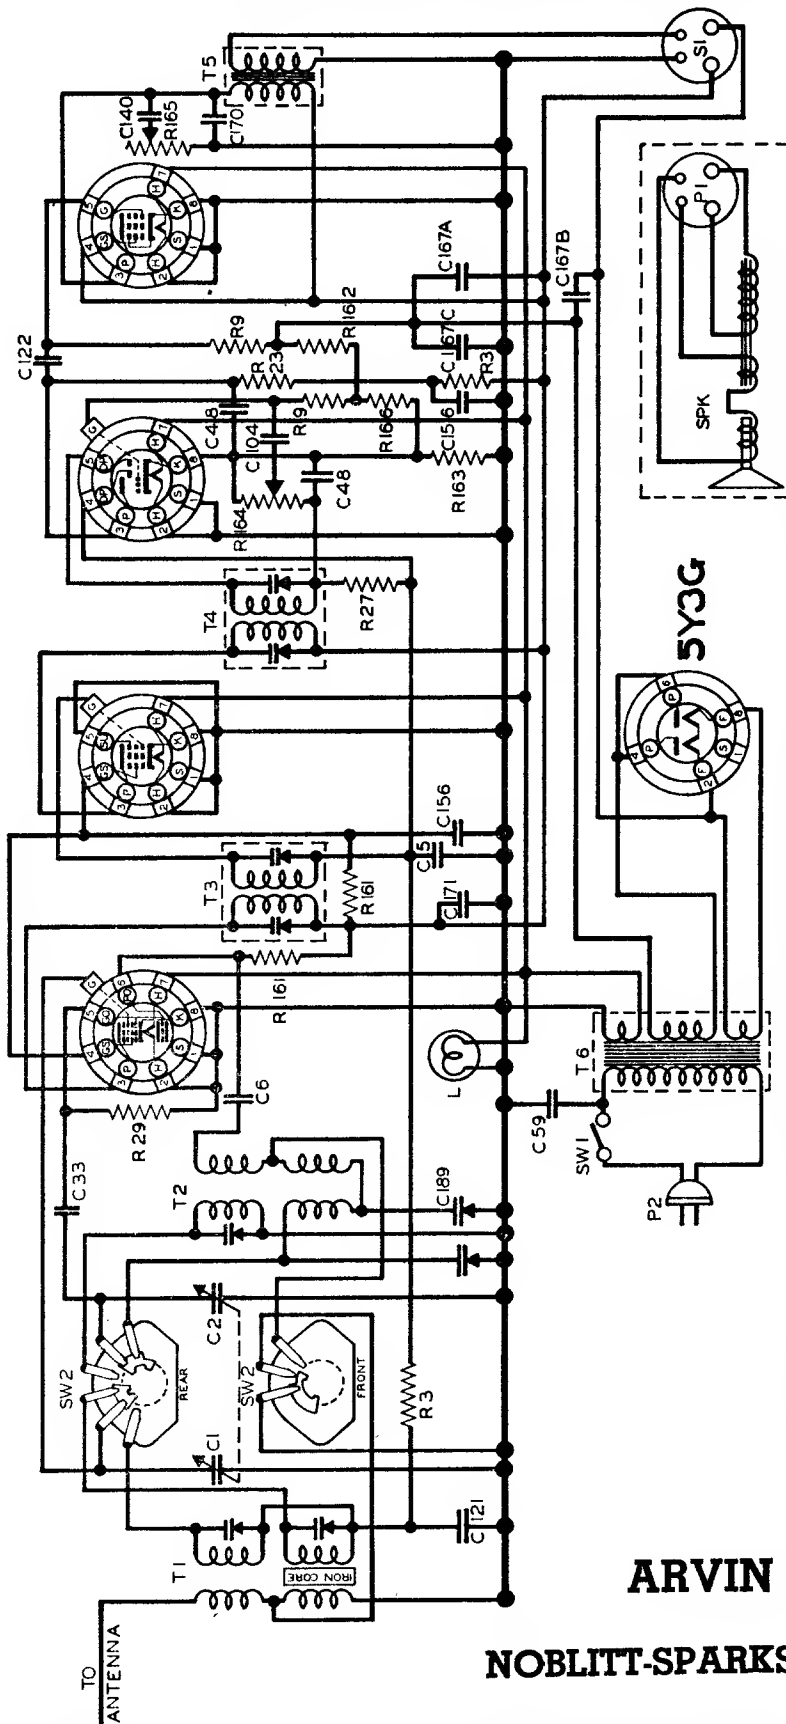

RESISTORS		CONDENSERS		TRANSFORMERS		MISCELLANEOUS UNITS	
R	OHMS	C	CAPACITY	T	TYPE	SYMBOL	DESCRIPTION
1	100K	1	TWO-GANG	1	ANTENNA COILS	L	DIAL LIGHT BULB - MAZDA 4.4
2	10K	2	VARIABLE	2	OSCILLATOR COILS	P1	SPEAKER PLUG (PART OF SPEAKER)
3	1M	3	0.05	3	FIRST I.F. COIL	P2	LINE CORD & PLUG ASSEMBLY
4	250K	4	0.02	4	SECOND I.F. COIL	S1	SPEAKER SOCKET
5	50K	5	0.0005	5	OUTPUT TRANS.	SW1	AC LINE SWITCH (PART OF MOLT-1809B)
6	10K	6	0.0025	6	POWER TRANS.	SW2	BAND SWITCH
7	15K	7	0.1				
8	20K	8	0.01				
9	30K	9	0.001				
10	40K	10	0.005				
11	50K	11	0.01				
12	60K	12	0.02				
13	70K	13	0.05				
14	80K	14	0.1				
15	90K	15	0.2				
16	100K	16	0.5				
17	200K	17	1.0				
18	300K	18	2.0				
19	400K	19	5.0				
20	500K	20	10.0				
21	600K	21	20.0				
22	700K	22	50.0				
23	800K	23	100.0				
24	900K	24	200.0				
25	1.0M	25	500.0				
26	1.5M	26	1.0MFD				
27	2.0M	27	10.0MFD				
28	3.0M	28	20.0MFD				
29	4.0M	29	50.0MFD				
30	5.0M	30	100.0MFD				
31	6.0M	31	500.0MFD				
32	7.0M	32	1000.0MFD				
33	8.0M	33					
34	9.0M	34					
35	10.0M	35					

I.F. PEAK 455 K.C.  
 BALANCE AT 1400K.C.  
 BROADCAST PAD AT 600K.C.  
 SHORT WAVE BALANCE AT 15M.C.  
 CHECK AT 7M.C.  
 NOBLITT-SPARKS INDUSTRIES, INC.,  
 COLUMBUS, INDIANA.

**ARVIN MODEL 78**


**NOBLITT-SPARKS INDUSTRIES, INC.**

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Arvin Model 92 Radio Chassis RE31

SWITCH SHOWN IN PUSH-BUTTON TUNING POSITION.  
SEQUENCE OF POSITIONS:  
1. PUSH-BUTTON - BROADCAST BAND, BROAD TUNING.  
2. MANUAL - BROADCAST BAND, SHARP TUNING.  
3. MANUAL - MID BAND, SHARP TUNING.  
4. MANUAL - SHORT WAVE BAND, SHARP TUNING.

**86**

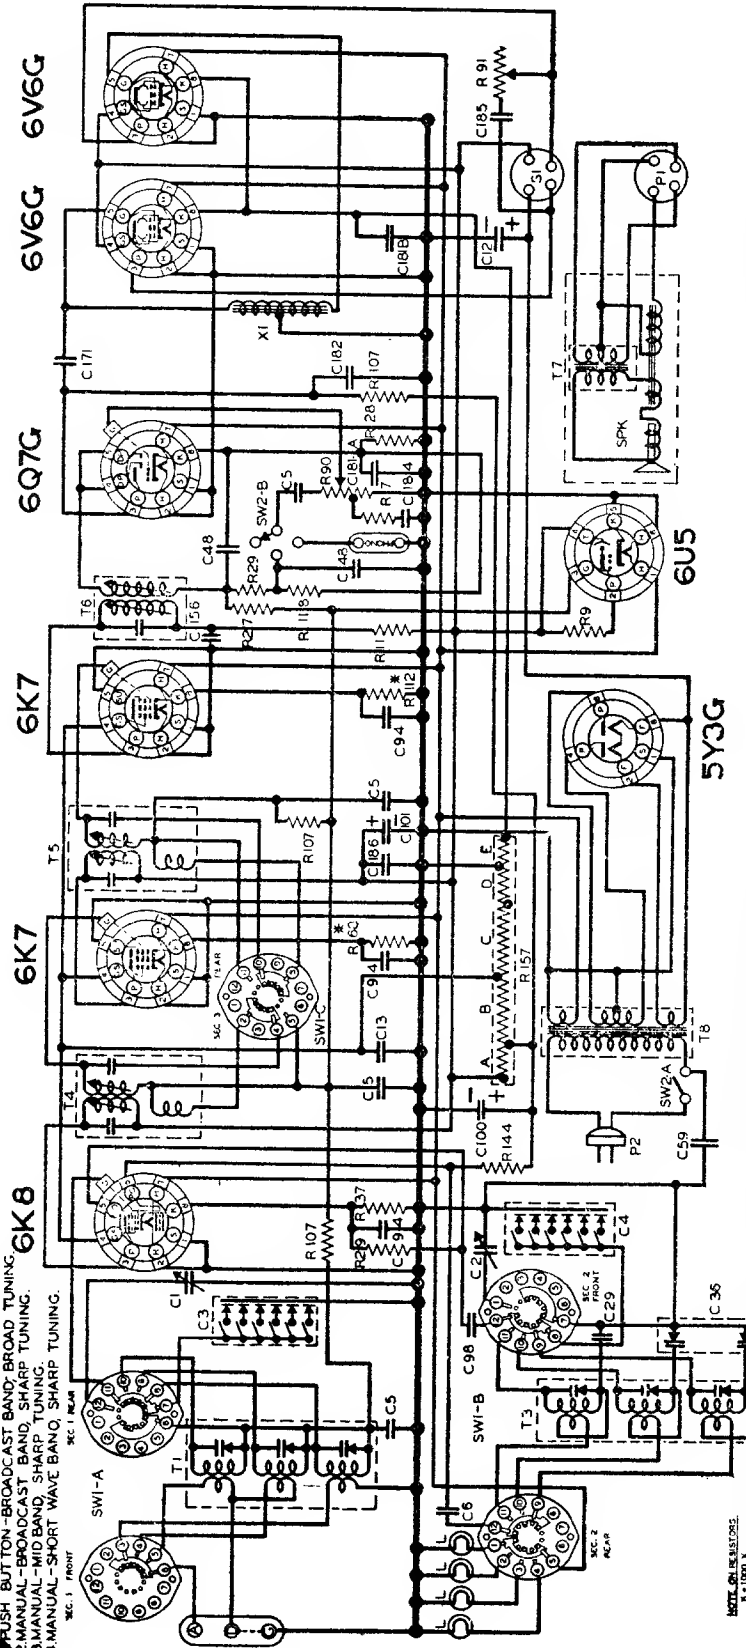

- PUSH BUTTON RANGES:  
READING FROM LEFT TO RIGHT.  
1. 540 TO 1000 K.C.  
2. 550 TO 1050 K.C.  
3. 565 TO 1050 K.C.  
4. 725 TO 1360 K.C.  
5. 750 TO 1440 K.C.  
6. 1000 TO 1600 K.C.
- IF PEAK 455 K.C.  
BALANCE 50 MC.  
BALANCE 40 MC.  
CHECK 20 MC.  
BALANCE 150 MC. CHECK 60 MC.
- 3 BANDS  
NOBLITT-SPARKS INDUSTRIES, Inc.  
Columbus, Indiana

SPARKS	DESCRIPTION	PART NO.
L	DIAL LIGHT B.A.L. - M.A.Z.D.A. 5	17-13974
P1	LINEAR PLUG	17-5706
P2	LINE CORD I. PLUG - 5/32 IN. BURY	17-13245
SPK	SPEAKER	17-10047
SW1	BAND SWITCH PUSH-BUTTON & MANUAL TUNING SWITCH	17-5912
SW2	A.C. & INDS. SWITCH	17-5014


TRANSFORMERS & CHOKES		
PART NO.	TYPE	DESCRIPTION
1	VARIABLE	VARIABLE
2	ANTENNA	ANTENNA COIL
3	ORCL	ORCL L 1200 C 25
4	FIRST I.F. COIL	FIRST I.F. COIL
5	SECOND I.F. COIL	SECOND I.F. COIL
6	THIRD I.F. COIL	THIRD I.F. COIL
7	OUTPUT TRANS.	OUTPUT TRANS.
8	POWER TRANS.	POWER TRANS.
9	CHOKES	CHOKES
10	INPUT COILS	INPUT COILS

CONDENSERS		
PART NO.	CAPACITY	VOLTAGE
1	.001	50
2	.0002	50
3	.0002	50
4	.0002	50
5	.0005	50
6	.001	50
7	.0002	50
8	.0002	50
9	.0002	50
10	.0002	50
11	.0002	50
12	.0002	50
13	.0002	50
14	.0002	50
15	.0002	50
16	.0002	50
17	.0002	50
18	.0002	50
19	.0002	50
20	.0002	50
21	.0002	50
22	.0002	50
23	.0002	50
24	.0002	50
25	.0002	50
26	.0002	50
27	.0002	50
28	.0002	50
29	.0002	50
30	.0002	50

RESISTORS		
PART NO.	VALUE	TOLERANCE
1	1500	±10%
2	1500	±10%
3	1500	±10%
4	1500	±10%
5	1500	±10%
6	1500	±10%
7	1500	±10%
8	1500	±10%
9	1500	±10%
10	1500	±10%
11	1500	±10%
12	1500	±10%
13	1500	±10%
14	1500	±10%
15	1500	±10%
16	1500	±10%
17	1500	±10%
18	1500	±10%
19	1500	±10%
20	1500	±10%
21	1500	±10%
22	1500	±10%
23	1500	±10%
24	1500	±10%
25	1500	±10%
26	1500	±10%
27	1500	±10%
28	1500	±10%
29	1500	±10%
30	1500	±10%


NOTE:  
R 157  
C 4-450 PHAS  
C 4-450  
C 4-450  
C 4-450

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

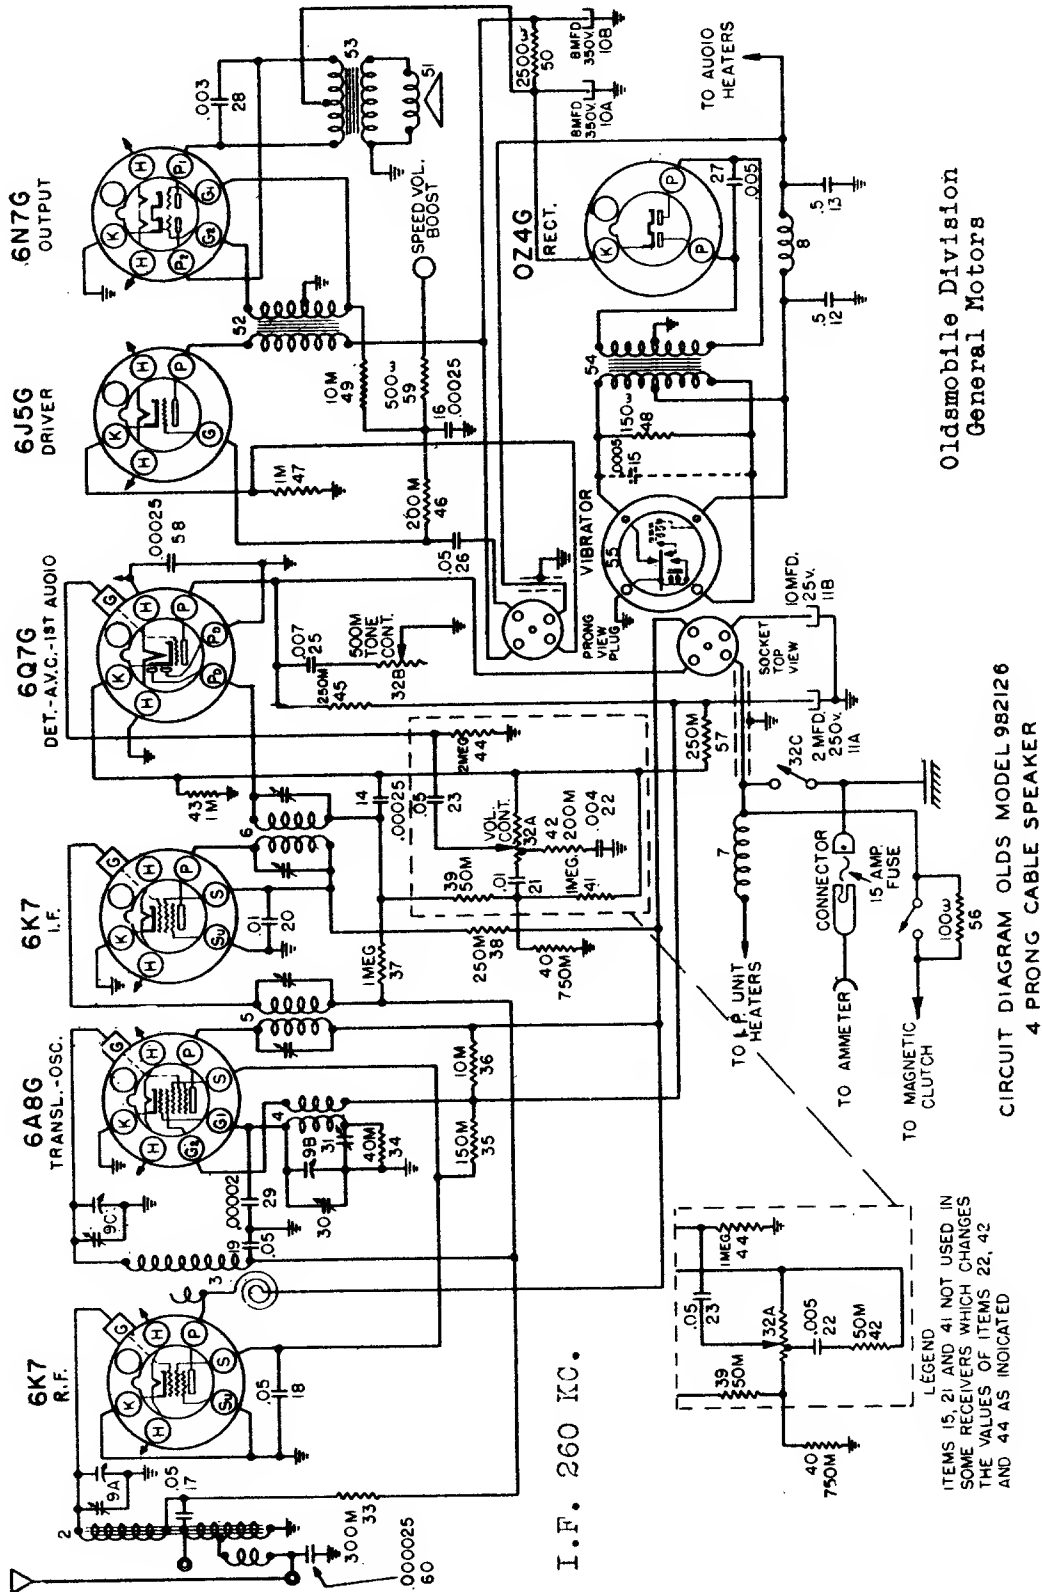

Oldsmobile Division  
General Motors

CIRCUIT DIAGRAM OLDS MODEL 982126  
4 PRONG CABLE SPEAKER

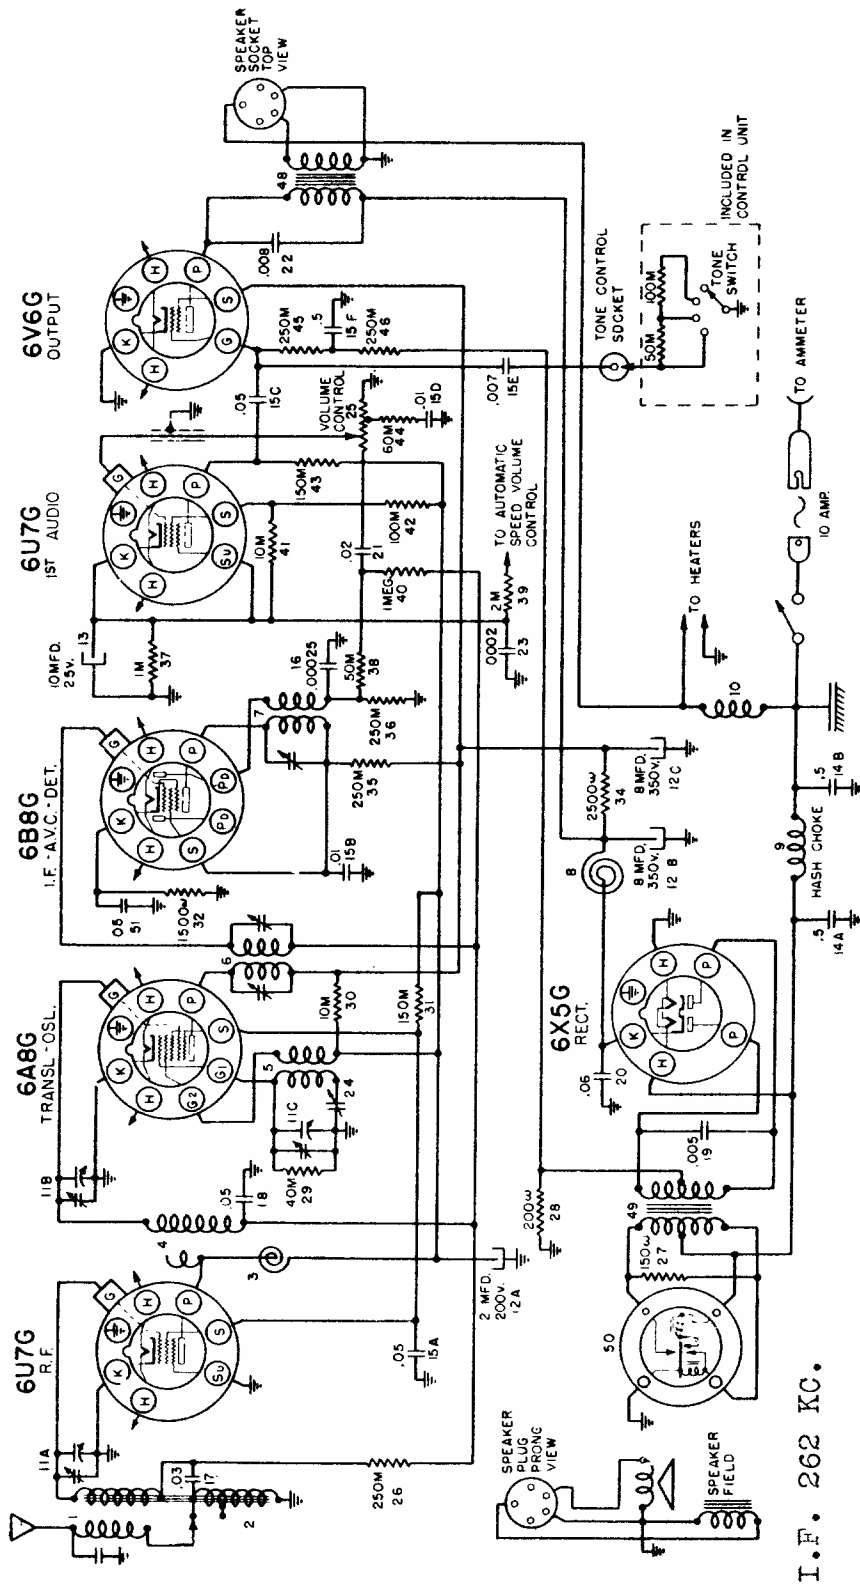

Oldsmobile Division, General Motors, Model 982153






# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Philco Radio & Television Corporation

Models 39-6, 39-7.

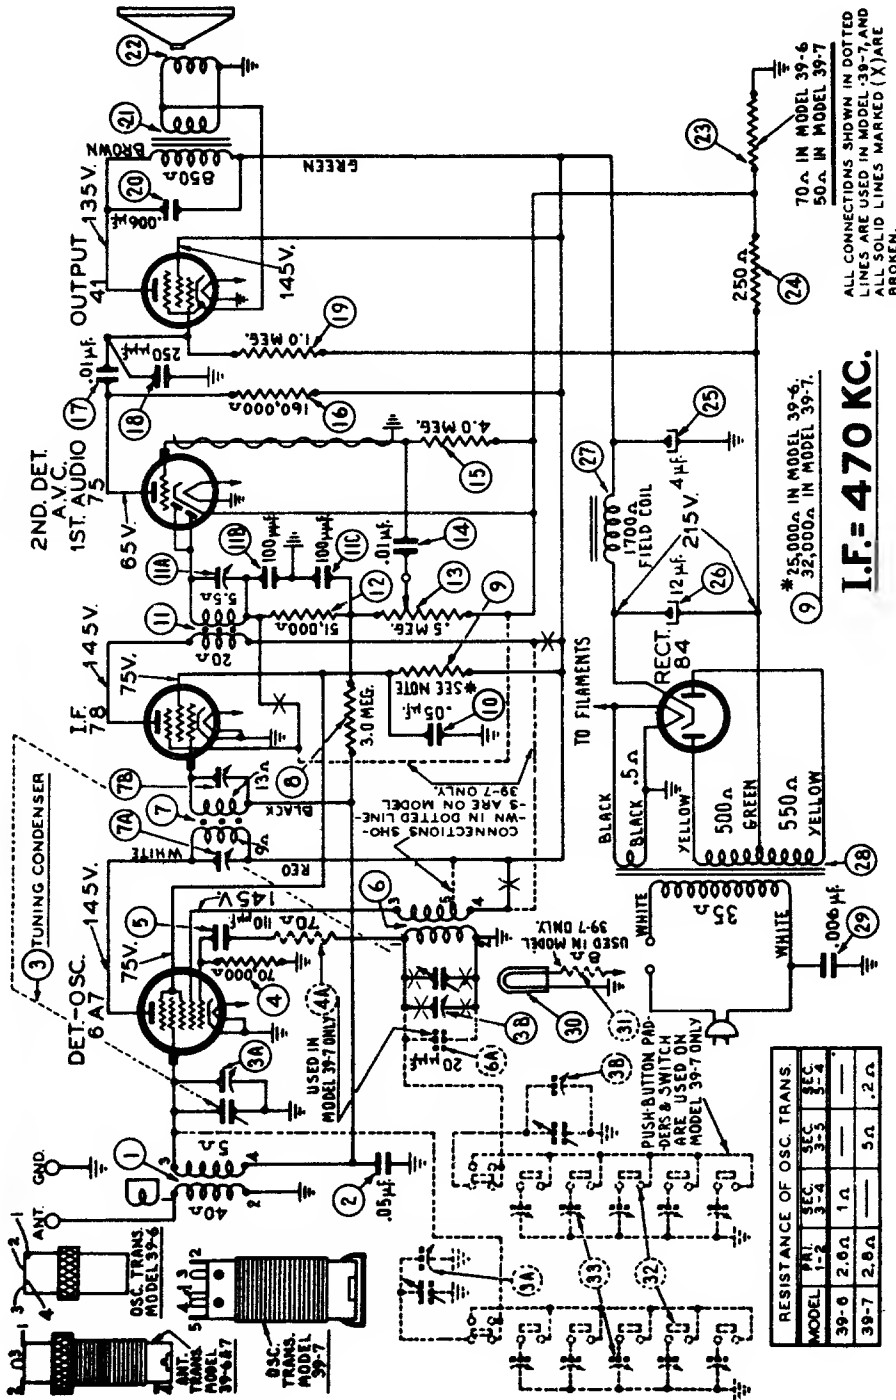

**NOTE A**—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

**NOTE B**—**DIAL CALIBRATION:** With the tuning condenser in "maximum capacity" position (plates fully meshed), set the dial pointer between the two horizontal lines at the low frequency end of the scale (550 K.C.).

Operation In Order	SIGNAL GENERATOR		RECEIVER			
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Control Setting	Adjust Compensators in Order	Special Instructions
1	6A7	.1 mf.	470 K.C.	Vol. Cont. Max.	11A, 7B, 7A	Adjust for max. output
2	Ant. Lead	100 mf.	1550 K.C.	Vol. Cont. Max.	3B, 3A	Adjust for max. output Note A, B

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Setting Push-Buttons on Models: -- 39-25 39-30 39-31 39-35 39-40 39-45

Circuits	Frequency Range
1 and 2	540 to 1030 kilocycles
3 and 4	670 to 1160 kilocycles
5 and 6	900 to 1470 kilocycles
7 and 8	1170 to 1600 kilocycles

(C) Turn the receiver Tuning Range Selector to position two ("Manual Tuning") and tune the receiver to the station to be set on the first button.

(D) Plug the output leads of the Station Setter into the "High" and "Gnd" jacks, and turn the output controls to maximum. Turn the modulation control to "Modulation Off." Connect the output lead of the Station Setter to the "ANT" and "GND" terminals of the receiver and tune to the frequency of the station being received. As the indicator is slowly tuned through the frequency of the station there will be two points at which a high pitched swish will be heard, one above and one below the frequency of the station. When the indicator is on the frequency of the station, minimum high pitched swish will be heard.

(E) Set the modulation control of the Station Setter for "Modulation On." The modulated signal of the Station Setter will then be heard through the receiver.

(F) Turn the receiver Tuning Range Selector to position one (Automatic Tuning) and push in the first button. Using the Part No. 45-2610 Insulated Screw Driver, turn the number 1 "OSC" screw until the modulated signal of the Station Setter is tuned in to maximum volume. Then adjust the number 1 "ANT" screw for maximum signal.


(G) Remove the output lead of the Philco Station Setter from the "ANT" terminal of the receiver and turn its indicator off the frequency of the station. The program of the desired station will then be heard on the receiver.

(H) With the volume of the receiver low, slowly turn the number 1 "OSC" back and forth until maximum output is received. Repeat the same procedure for the number 1 "ANT" screw.

After setting up the first station, the same procedure given under (C) to (H) is used for the other stations.

# PHILCO MODEL TR-4


- |    |                                       |    |                                    |
|----|---------------------------------------|----|------------------------------------|
| 1  | Antenna Transformer.....              | 17 | Resistor (4 meg., 1/3 watt).....   |
| 2  | Tubular Condenser (.0015 mf., 200V.)  | 18 | Resistor (250,000 ohms, 1/3 watt)  |
| 3  | Tuning Condenser.....                 | 19 | Tubular Condenser (.01 mf., 400V)  |
| 4  | Tubular Condenser (.05 mf., 400V.)    | 20 | Resistor (500,000 ohms, 1/3 watt)  |
| 5  | Tubular Condenser (.15 mf., 400V.)    | 21 | Resistor (130 ohms, 1/3 watt)..... |
| 6  | Resistor (50,000 ohms, 1/3 watt).     | 22 | Tubular Condenser (.02 mf., 400V)  |
| 7  | Mica Condenser (110 mmf.).....        | 23 | Output Transformer                 |
| 8  | Oscillator Transformer.....           |    | For Speaker 36-1469-1.....         |
| 9  | Tubular Condenser (.05 mf., 400V.)    |    | For Speaker 36-1469-9.....         |
| 10 | 1st I.F. Transformer.....             | 24 | Speaker.....                       |
| 11 | 2nd I.F. Transformer.....             | 25 | Tubular Condenser (.03 mf., 400V)  |
| 12 | Resistor (2 meg., 1/3 watt).....      | 26 | Electrolytic Condenser (20-20mf.)  |
| 13 | Mica Condenser (250 mmf.).....        | 27 | Field Coil -- Part of Speaker      |
| 14 | Resistor (20,000 ohms, 1/3 watt)..... | 28 | Pilot Lamp.....                    |
| 15 | Volume Control (500,000 ohms).....    | 29 | Line Resistor.....                 |
| 16 | Tubular Condenser (.01 mf., 200V.)    |    |                                    |

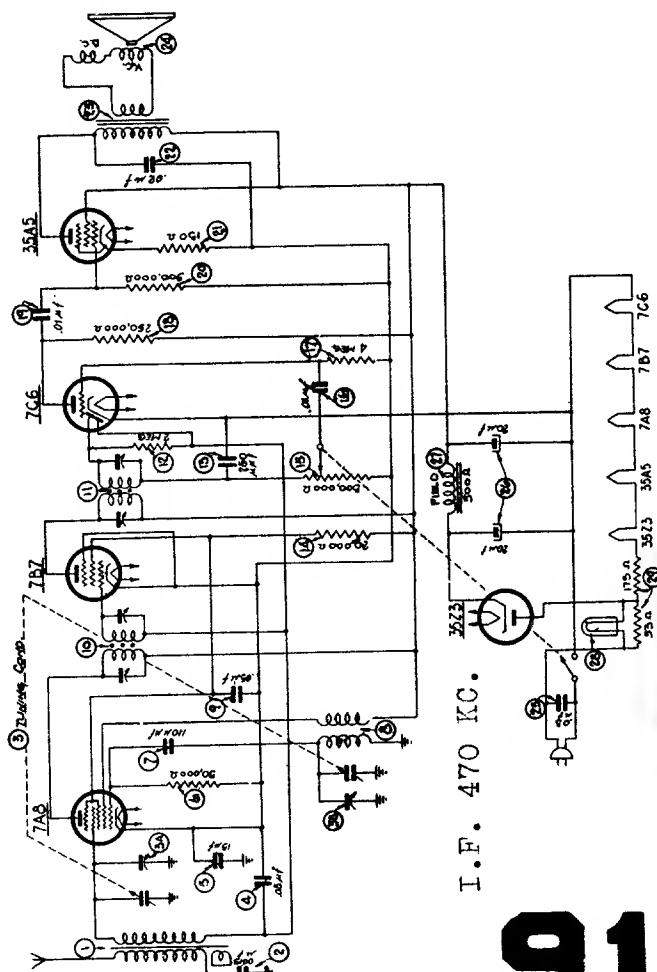


I.F. 470 KC.

**PHILCO**


*Model 39-17, Codes 121-122*

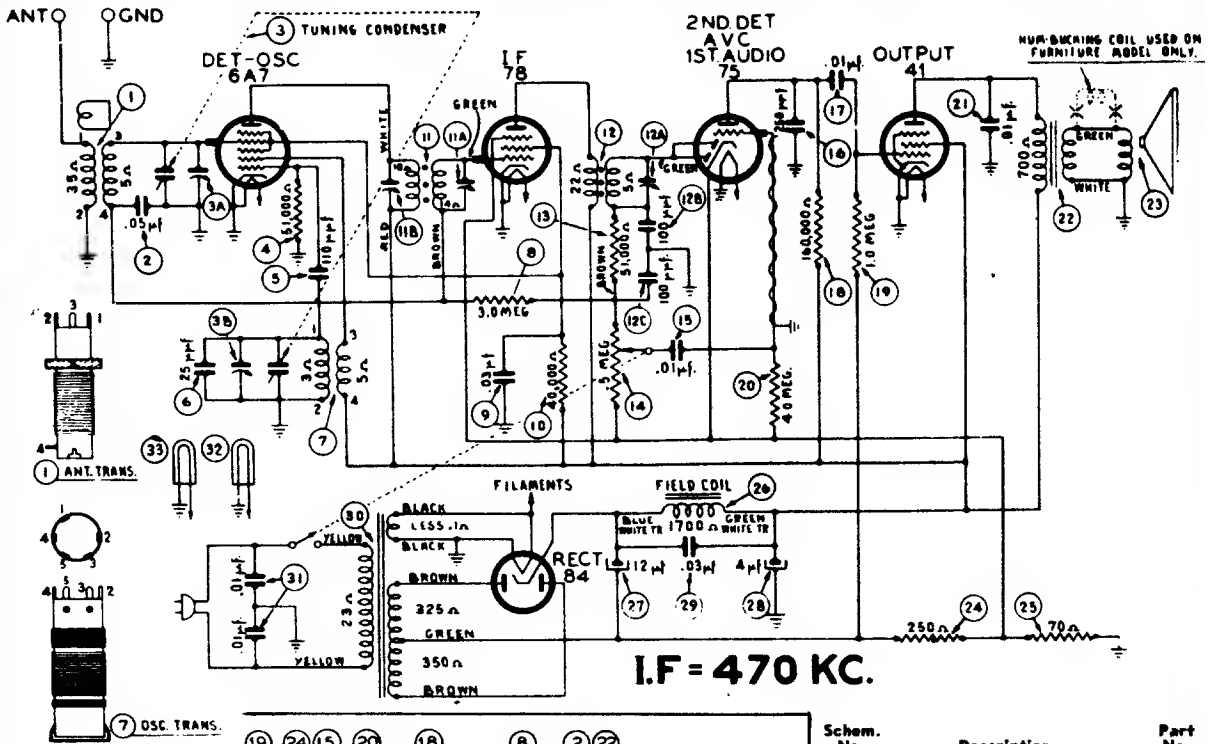

**I.F. = 470 KC.**

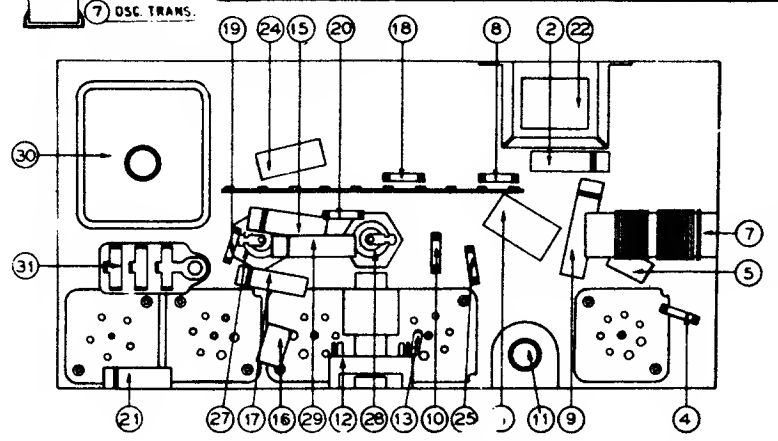


Schem. No.	Description	Part No.
1	Antenna Transformer	32-3039
2	Condenser (.05 mf. tubular)	30-4519
3	Tuning Condenser Assembly	31-2265
4	Resistor (51,000 ohms, 1/2 watt)	33-351339
5	Condenser (.110 mf. mica)	30-1031
6	Condenser (.25 mf., silver plated mica)	30-1112
7	Oscillator Transformer	32-3040
8	Resistor (3.0 megohm)	33-530339
9	Condenser (.03 mf. tubular)	30-4449
10	Resistor (40,000 ohms, 1/2 watt)	33-340339
11	1st I. F. Transformer Assembly	32-3075
12	2nd I. F. Transformer Assembly	32-2944
13	Resistor (51,000 ohms, 1/2 watt)	33-351339
14	Volume Control and On-Off Switch	33-5276
15	Condenser (.01 mf. tubular)	30-4479
16	Condenser (mica), 250 mf.	30-1032
17	Condenser (.01 mf. tubular)	30-4572
18	Resistor (16,000 ohms, 1/2 watt)	33-316339
19	Resistor (1.0 megohm, 1/2 watt)	33-510339
20	Resistor (4.0 megohm, 1/2 watt)	33-540339
21	Condenser (.01 mf. tubular)	30-4572
22	Output Transformer	32-7980
23	Cone and Voice Coil Assembly for Speaker (Part No. 36-1426-1) ... 36-4083 (Part No. 36-1426-3) ... 36-4085 Cone and Voice Coil Assembly for Speaker (Part No. 36-1440) ... 36-4086	
24	Resistor (250 ohms, wire wound)	33-125431
25	Resistor (70 ohms, 1/2 watt)	33-070339
26	†Field Coil for Speaker (Pt. No. 36-1426)	
	†Field Coil for Speaker (Pt. No. 36-1440)	
27	Condenser (12 mf. electrolytic)	30-2319
28	Condenser (4 mf. electrolytic)	30-2236
29	Condenser (.03 mf. tubular)	30-4449
30	Power Transformer (115 volts, 50-60 cycles)	32-7974
31	Condenser (.01 mf., .01 mf., bakelite)	3903DG

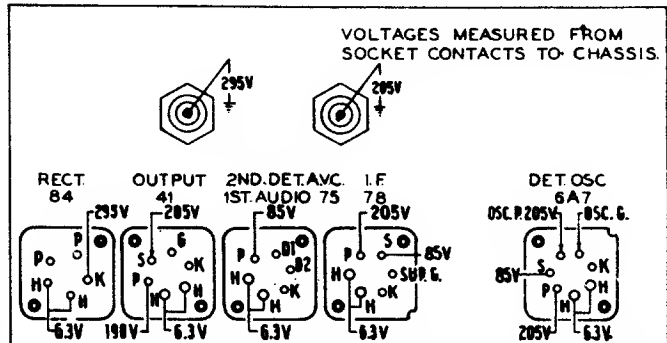



Volume minimum,  
no signal, line  
voltage 115 v.

**PHILCO**


*Model 39-18, Codes 121 & 122*

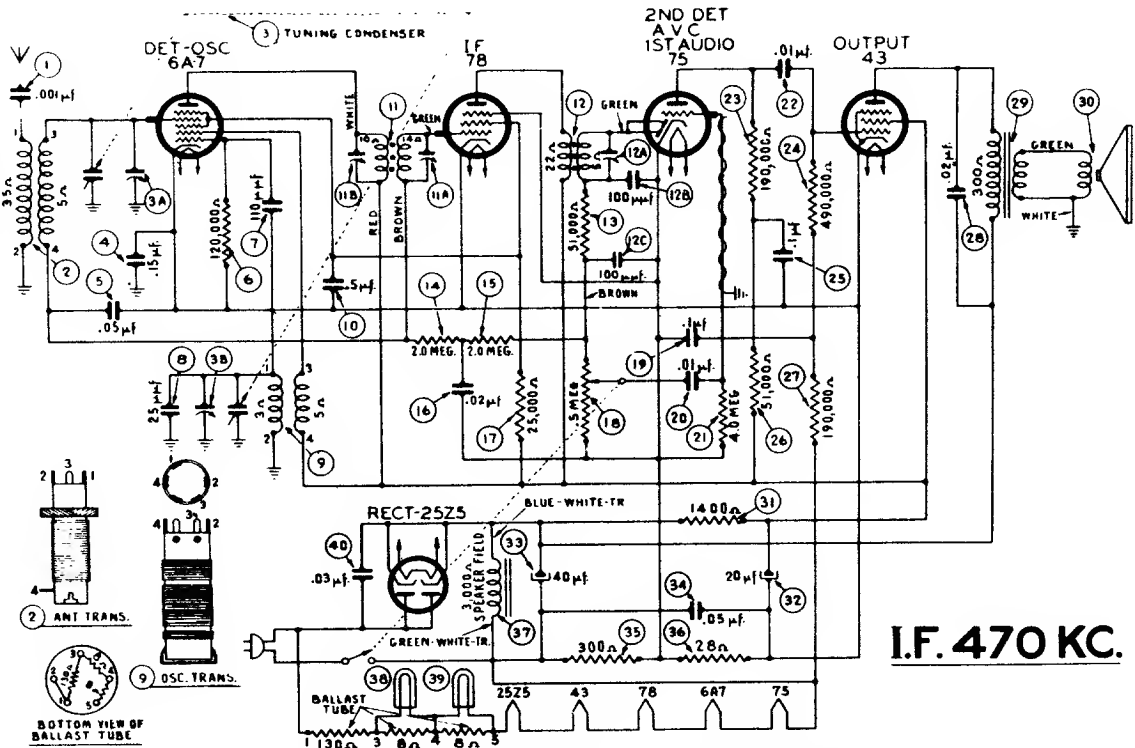

Schem. No.	Description	Part No.
1	Condenser (.001 mfd. tubular)	30-4453
2	Antenna Transformer	32-3039
3	Tuning Condenser Assembly	31-2265
4	Condenser (.15 mfd. tubular)	30-4505
5	Condenser (.05 mfd. tubular)	30-4519
6	Resistor (120,000 ohms, 1/2 watt)	33-412339
7	Condenser (.110 mmf. mica)	30-1031
8	Condenser (.25 mmf., silver plated mica)	30-1112
9	Oscillator Transformer	32-3040
10	Condenser (.5 mf., tubular)	30-4551
11	1st I. F. Transformer Assembly	32-3075
12	2nd I. F. Transformer Assembly	32-2944
13	Resistor (51,000 ohms, 1/2 watt)	33-351339
14	Resistor (2.0 megohms, 1/2 watt)	33-520339
15	Resistor (2.0 megohms, 1/2 watt)	33-520339
16	Condenser (.02 mf., tubular)	30-4516
17	Resistor (25,000 ohms, 1/2 watt)	33-325339
18	Volume Control and On-Off Switch	33-5276
19	Condenser (.1 mf., tubular)	30-4499
20	Condenser (.01 mf., tubular)	30-4572
21	Resistor (4.0 megohms, 1/2 watt)	33-540339
22	Condenser (.01 mf., tubular)	30-4572
23	Resistor (190,000 ohms, 1/2 watt)	33-419339
24	Resistor (490,000 ohms, 1/2 watt)	33-449339
25	Condenser (.1 mf., tubular)	30-4499
26	Resistor (51,000 ohms, 1/2 watt)	33-351339
27	Resistor (190,000 ohms, 1/2 watt)	33-419339
28	Condenser (.02 mf., tubular)	30-4215
31	Resistor (1400 ohms, 1/2 watt)	33-214339
32	Condenser (20 mf., electrolytic)	30-2245
33	Condenser (40 mf., electrolytic)	30-2332
34	Condenser (.05 mf., tubular)	30-4444
35	Resistor (300 ohms, wire wound)	33-130431
36	Resistor (28 ohms, 1/2 watt)	33-028339

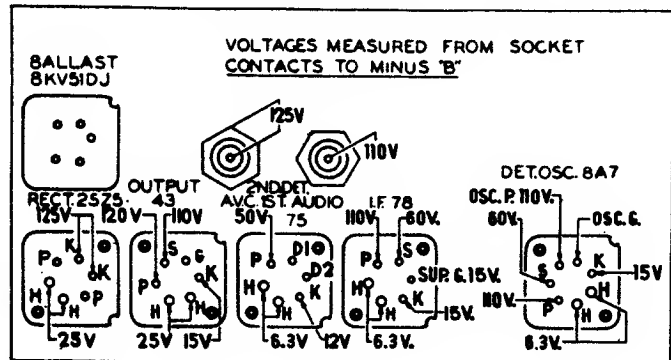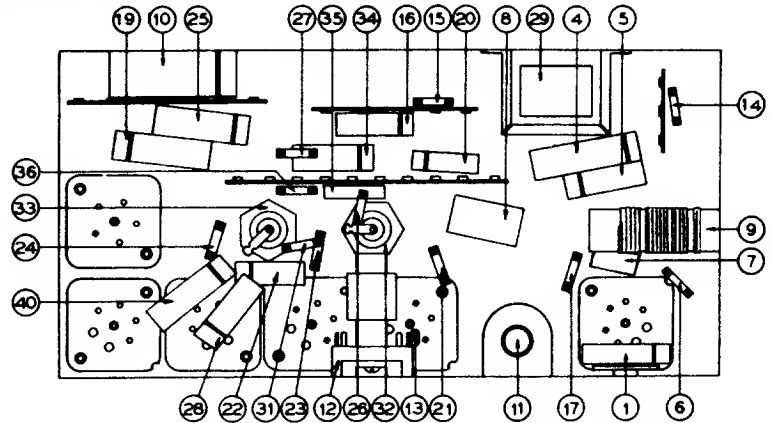

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

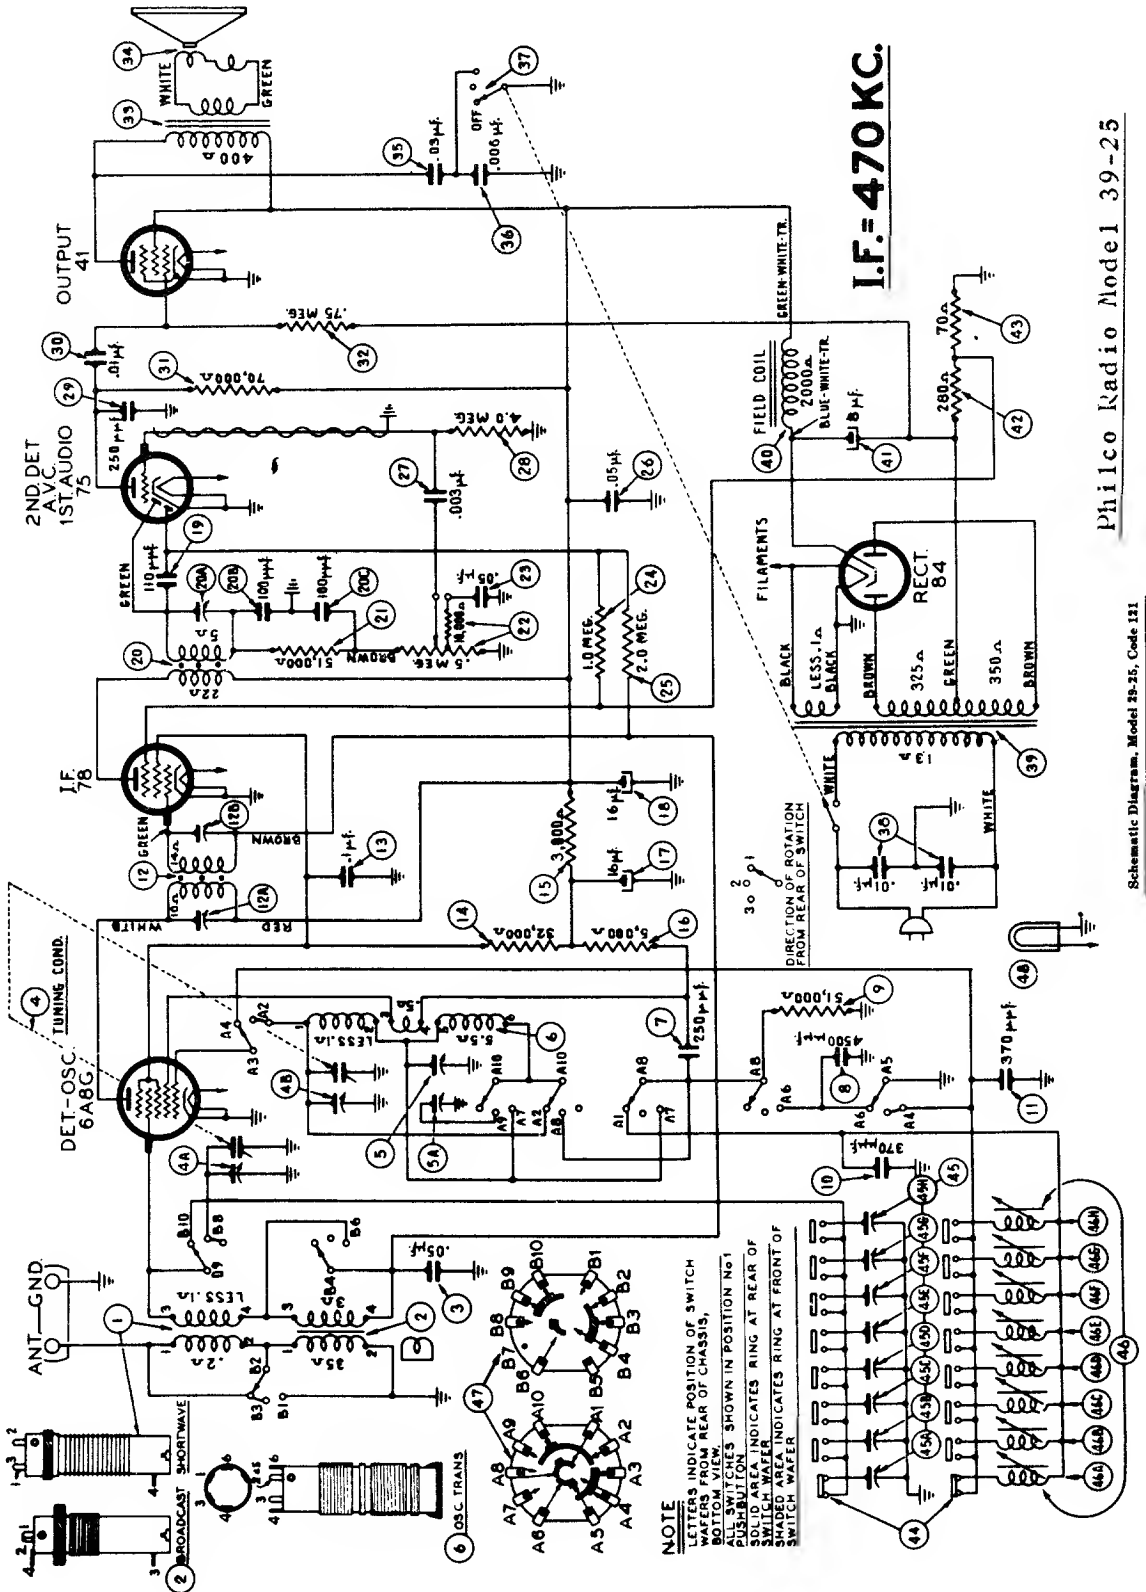

Philco Radio Model 39-25

Schematic Diagram, Model 25-25, Code 131

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Models 39-30, 31 and 39-35, Code 121

# PHILCO

### TYPE OF CIRCUIT:

Models 39-30 and 39-35 code 121 are similar with the exception of the type of Cabinets, Speakers and Power Transformers. These differences are shown on the Replacement Parts list and circuit diagram.

Models 39-31XF and 39-31XK are identical to Model 39-35, Code 121 with the exception of cabinets.

The Model 39-35, code 121 specifications, diagram and replacement parts listed below and on the following pages apply to Models 39-31XF and XK.

A.C. operated; superheterodyne circuit with two tuning ranges, covering standard broadcast (540 K.C. to 1720 K.C.) and short-wave (4.9 M.C. to 18.0 M.C.) frequencies; Automatic Volume Control; and pentode output.



### POWER SUPPLY:

Voltage, 115 volts. Frequency, 50-60 cycles.  
Power consumption 45 watts.

INTERMEDIATE FREQUENCY: 470 K.C.

### TUNING RANGES:

540 K.C. to 1720 K.C.; 4.9 M.C. to 18.0 M.C.

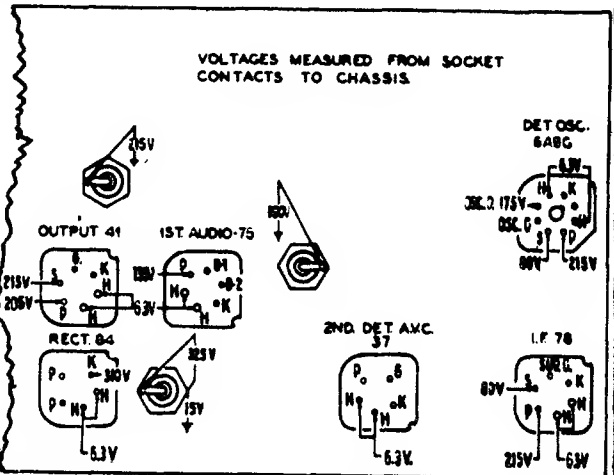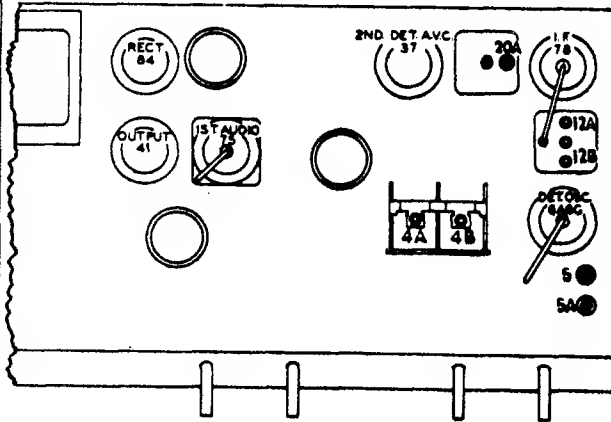

## Alignment of Compensators

### EQUIPMENT REQUIRED:

(1) Signal Generator: Philco Model 077 Signal Generator which has a fundamental frequency range from 115 to 30,000 K.C. is the correct instrument for this purpose.

(2) Output meter, Philco Model 027 Circuit Tester, incorporates a sensitive output meter and is recommended.

(3) Philco Fiber Handle Screw Driver, Part No. 27-7059, and Fiber Wrench, Part No. 3164.

### OUTPUT METER:

Two indicating devices for aligning of the receiver can be used; either an audio output meter or a vacuum tube voltmeter. The method of connecting the audio output meter is given in the next paragraph. The procedure for connecting the vacuum tube voltmeter as an aligning indicator will be found on Page 4. Where greater accuracy of the various tuned circuits is desired, the vacuum tube voltmeter is recommended as an aligning device.

The Philco 027 Output Meter is connected to the plate and cathode terminals of the type 41 tube. After connecting the Output Meter, adjust compensators in the order as given below.


Operations	Signal Generator			Receiver		
	Output Connections To Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order
1	6AB6 Grid	.1 mf.	470 K.C.	580 K.C.	Vol. Cont. Max.	(20A) (12B) (12A)
2	Ant. Ter.	100 mf.	18.0 M.C.	18.0 M.C.	Vol. Cont. Max.	(4B)
3	Ant. Ter.	100 mf.	1550 K.C.	1550 K.C.	Vol. Cont. Max.	(5) (4A)
4	Ant. Ter.	100 mf.	580 K.C.	580 K.C.	Vol. Cont. Max.	(5A)
5	Ant. Ter.	100 mf.	1550 K.C.	1550 K.C.	Vol. Cont. Max.	(5)

A--The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.

B--DIAL CALIBRATION: In order to adjust the re-

ceiver correctly the dial pointer must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows: With the tuning condenser closed, set the dial pointer on the extreme left index line at the low frequency end of the scale.

# MANUAL OF 1939 MOST POPULAR Philco Radio Models 39-30, 39-31, 39-35

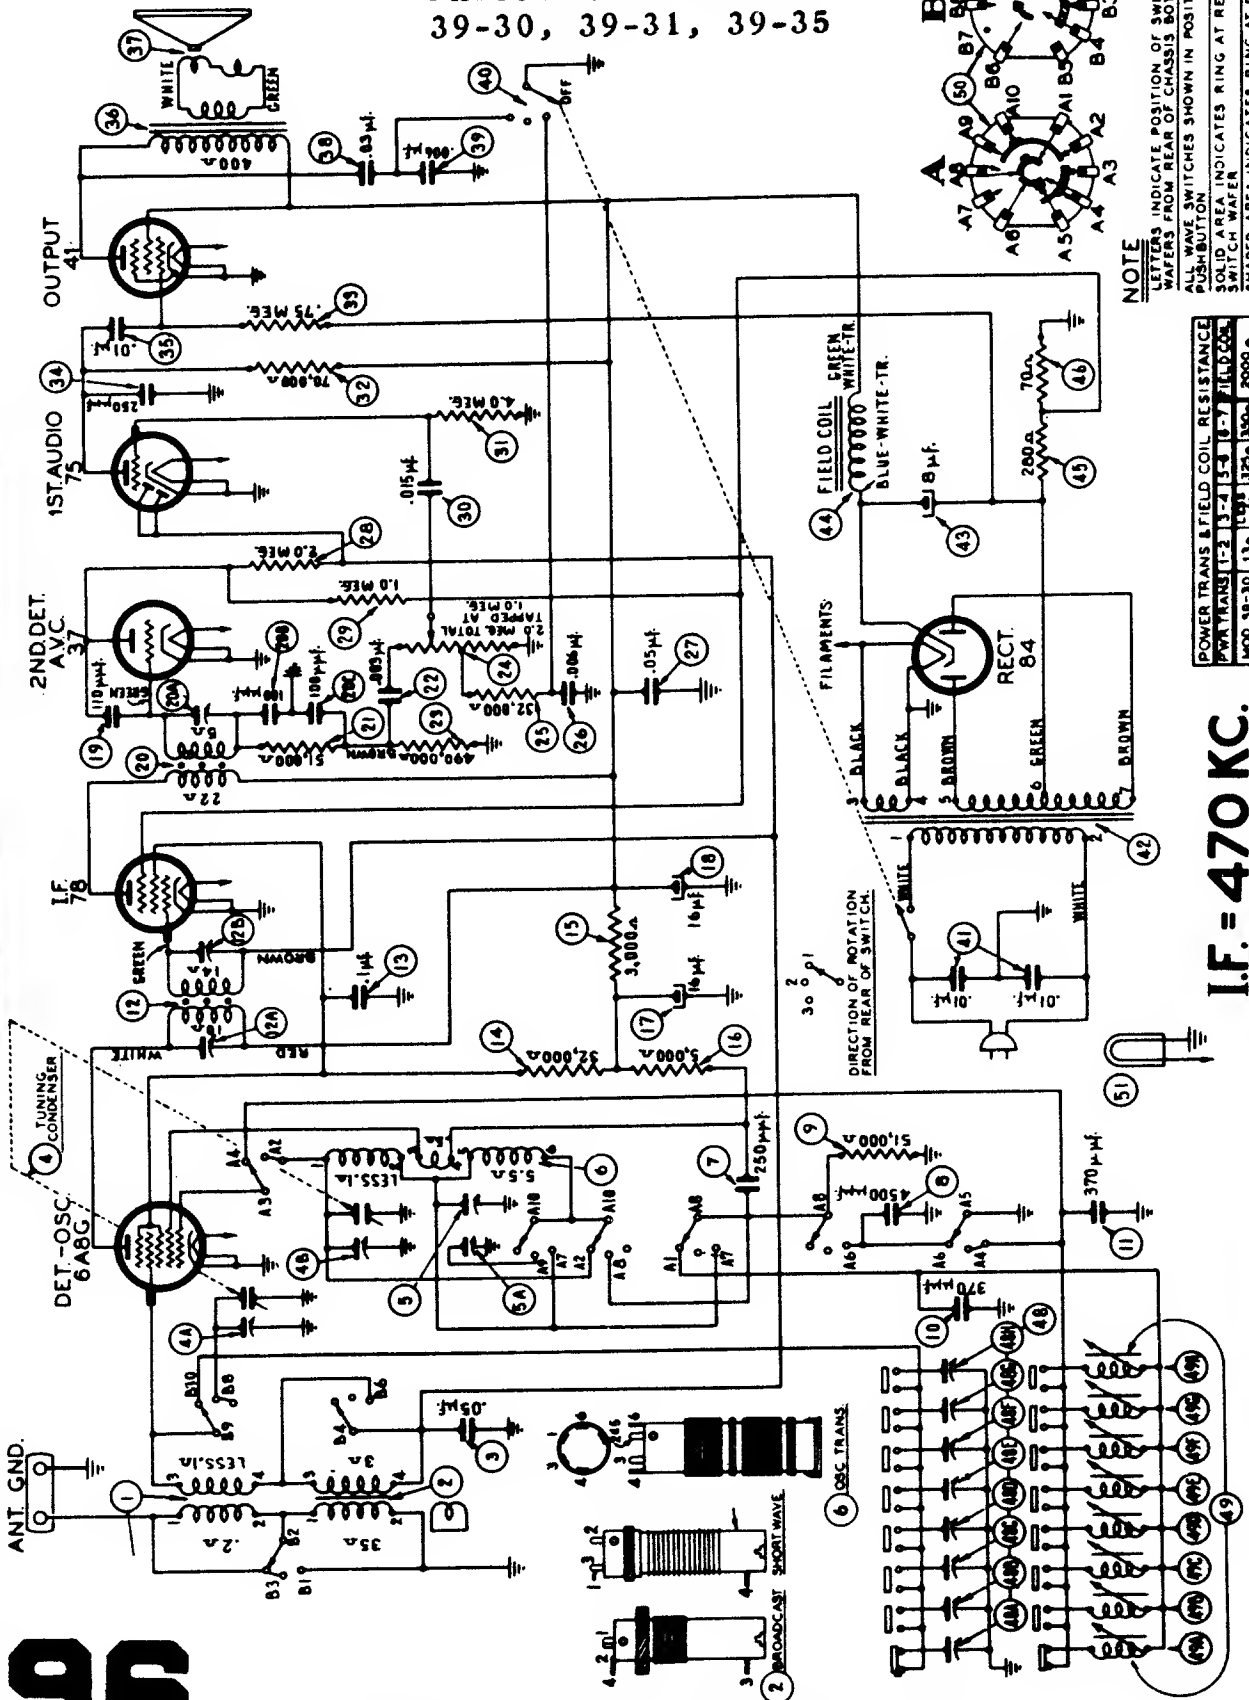


**NOTE**  
LETTERS INDICATE POSITION OF SWITCH  
WAFERS FROM REAR OF CHASSIS BOTTOM VIEW  
PUSH-BUTTON  
ALL WAVE SWITCHES SHOWN IN POSITION No. 1  
SOLID AREA INDICATES RING AT REAR OF  
SWITCH WAFER  
SHADED AREA INDICATES RING AT FRONT OF  
SWITCH WAFER

POWER TRANS.	FIELD COIL RESISTANCE
MOD 39-30	100 Ω
MOD 39-31	200 Ω
MOD 39-35	300 Ω
MOD 39-35	400 Ω
MOD 39-35	500 Ω
MOD 39-35	600 Ω

**I.F. = 470 KC.**





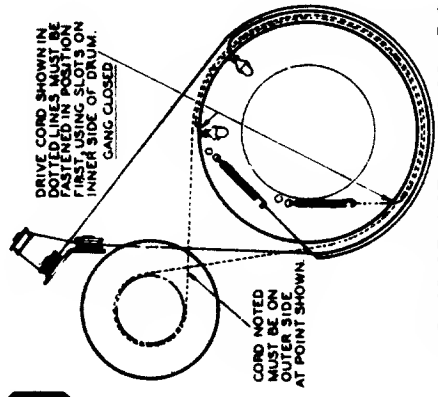

**METHOD OF INSTALLING DRIVE CORDS ON TUNING CONDENSER DRUM**


Opera- tions	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators to Max. Reading
1	6A7	.1 mf	470 KC.	580 KC.	Vol. Max. Range Switch Broadcast	26B, 26A, 23B, 23A
2	Ant. Ter.	150 mmf	1550 KC.	1550 KC.	"	15, 7B, 7A
3	Ant. Ter.	150 mmf	580 KC.	580 KC.	"	17
4	Ant. Ter.	150 mmf	1550 KC.	1550 KC.	"	15
5	Ant. Ter.	400 ohms	18.0 MC.	18.0 MC.	Range Switch S. W.	15A, 12, 5

**NOTE A**—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.


**NOTE B**—Dial Calibration. In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust

the dial, proceed as follows: With the tuning condenser closed (maximum capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable is shown on page 3.

**NOTE C**—Compensators (7A) and (7B) are located on top of the tuning condenser. Compensator (7A) is the first one from the tuning drum side.

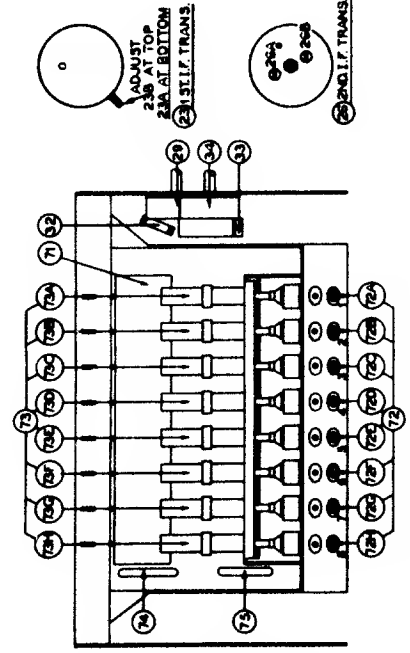






**ELECTRIC AUTOMATIC PUSH BUTTON UNIT**

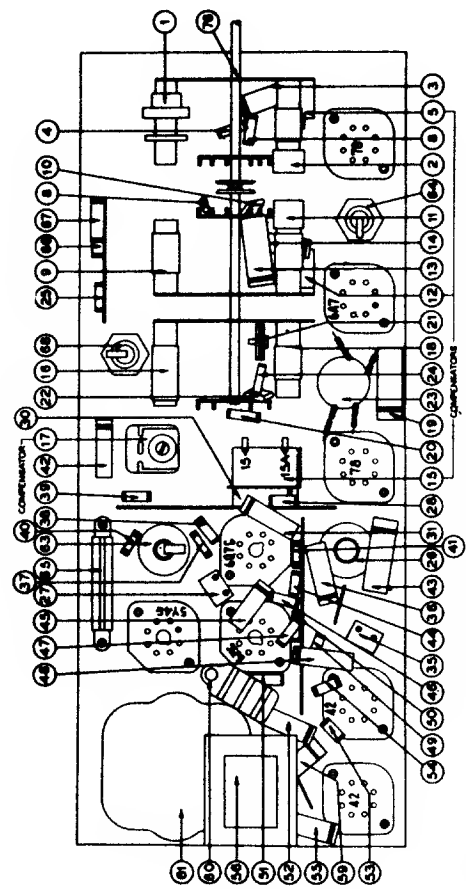

**PART LOCATIONS UNDERSIDE OF CHASSIS MODEL 39-40**

# MOST POPULAR SERVICE DIAGRAMS

## Model 39-45, Code 121

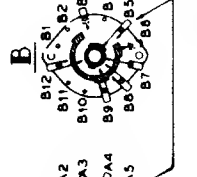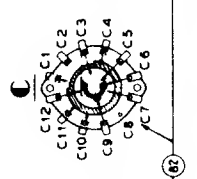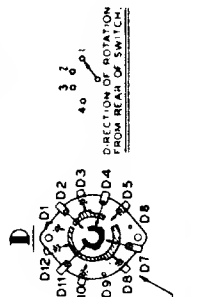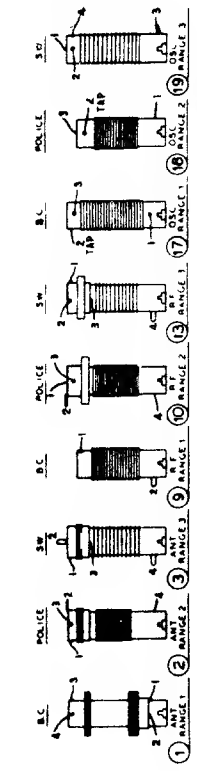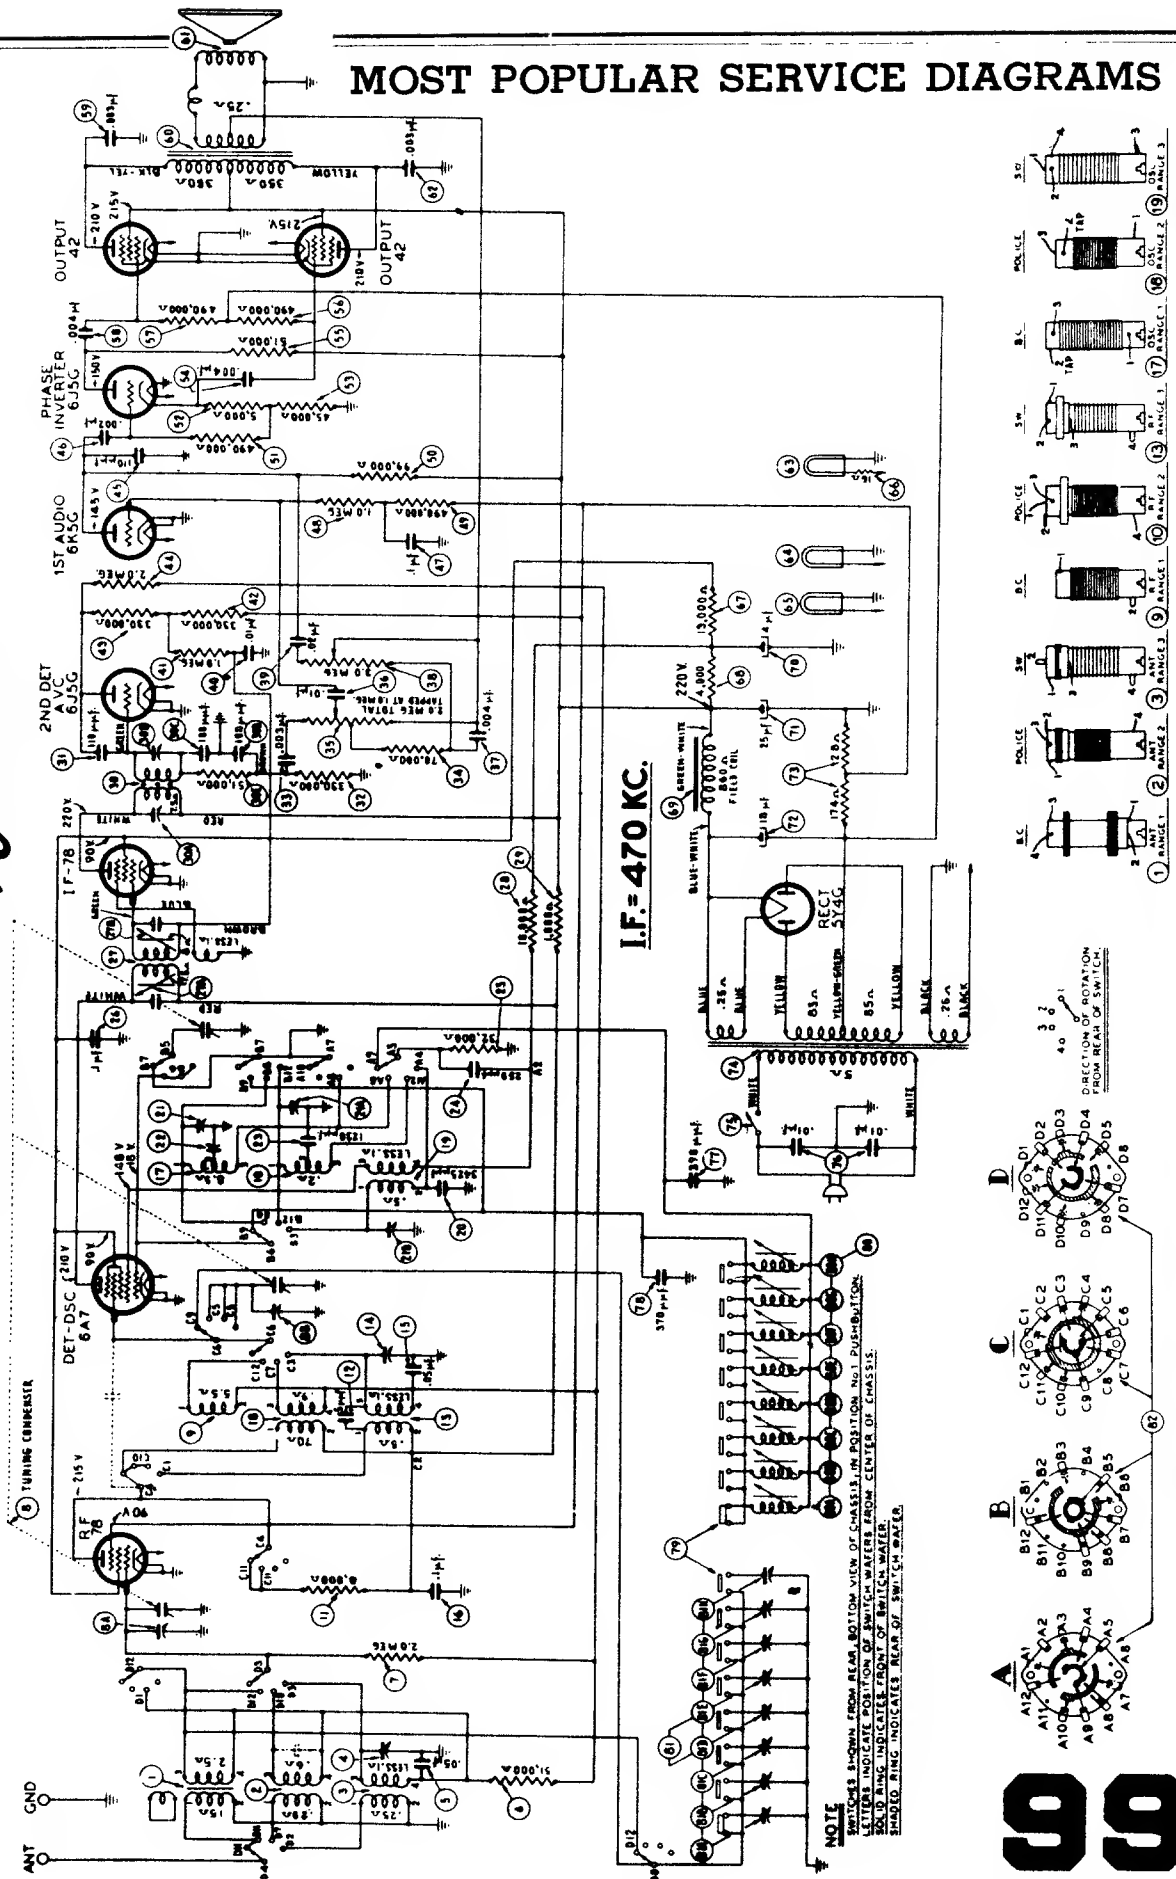

# PHILCO

## Model 39-45, Code 121


Operation	SIGNAL GENERATOR			RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators to Max. Reading	
1	6A7	.1 mf	470 KC.	470 KC.	Vol. Max. Range Switch Broadcast	30B, 30A, 27B, 27A	See Note B and C
2	Antenna	150 mmf	1550 KC.	1550 KC.	"	21, 8B, 8A	Roll Tuning Condenser
3	Antenna	150 mmf	580 KC.	580 KC.	"	22	
4	Antenna	150 mmf	1550 KC.	1550 KC.	"	21	
5	Antenna	400 ohms	5.0 MC.	5.0 MC.	Range Switch Police	21A	
6	Antenna	400 ohms	18.0 MC.	18.0 MC.	Range Switch S. W.	21B, 14, 4	

**NOTE A**—The "Dummy Antenna" consists of a condenser connected in series with the signal generator output lead (high side). Use the capacity as specified in each step of the above procedure.


**NOTE B**—Dial Calibration: In order to adjust the receiver correctly the dial must be aligned to track properly with the tuning condenser. To adjust the dial, proceed as follows: With the tuning condenser closed (maximum

capacity), set the dial pointer on the extreme left index line at the low frequency end of the broadcast scale. The arrangement of the drive cable is shown on page 3.

**NOTE C**—Compensators (8A) and (8B) are located on top of the tuning condenser. Compensator (8A) is the first one from the tuning drum side.

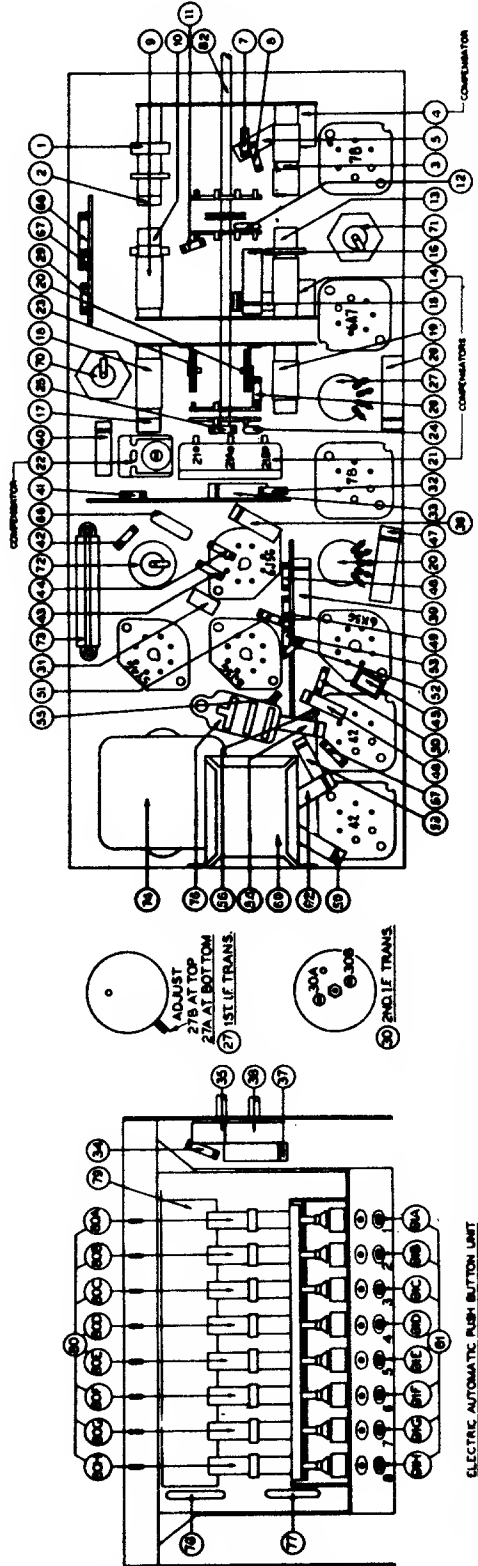

PART LOCATIONS UNDERSIDE OF CHASSIS MODEL 39-45

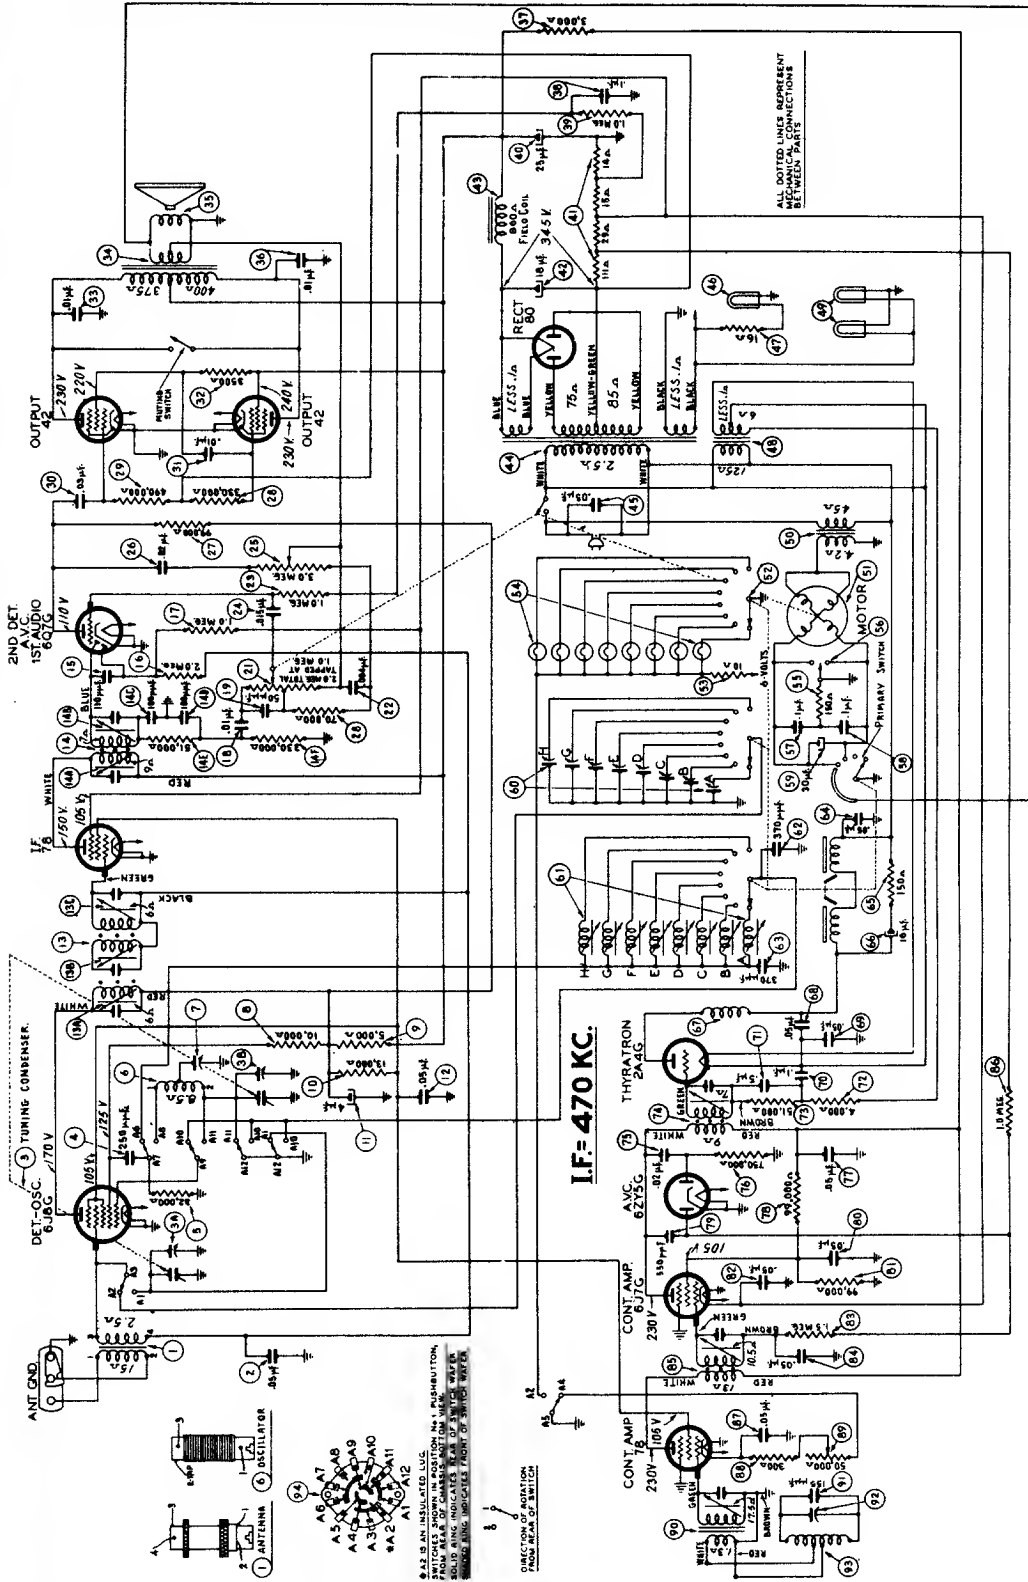

MODEL 39-55 SCHEMATIC DIAGRAM AND SOCKET VOLTAGES.

Philco Radio & Television Corp.

Voltages measured from Socket Contacts to Chassis; Line Voltage, 115 V.A.C.; Volume Control, Minimum; Range Selector (Broadcast).

## PHILCO Models 39-55, 39-116

### ADJUSTING MYSTERY CONTROL FREQUENCY AMPLIFIER

The Mystery Control receivers are shipped with five (5) different control frequencies which range from 350 to 400 K.C. These are identified by code numbers appearing on the serial number ticket and on the rear of the chassis. These code numbers and frequencies are as follows:

- Code 5—355 K.C.
- Code 6—367 K.C.
- Code 7—375 K.C.
- Code 8—383 K.C.
- Code 9—395 K.C.

The purpose of the different control frequencies is to prevent interaction between two Mystery Control receivers which are on the same floor or are exceptionally close together. When several Mystery Control receivers are to be located close together, it will be necessary to use different control frequencies to avoid interaction between the receivers. In order to prevent interaction between receivers, there should be a difference of 20 K.C. between their control frequencies.

If three receivers are to be operated at the same time and are closely situated, it will be advisable to adjust the control frequency of the first set to 355 K.C., the second set to 375 K.C. and the third to 395 K.C.

When realigning or changing the control frequency of the Mystery Control circuit, a Philco Model 077 Signal Generator with a coil of wire (about 4 or 5 turns—12" in diameter) attached to the output terminals is required. The leads between the coil of wire and Signal Generator should be long enough so that the coil of wire can be placed near the large secondary inductor in the bottom of the receiver cabinet.

With this apparatus, the Control Frequency is adjusted as follows:


1. With the temporary coil of wire in the center of (or near) the secondary inductor, the control frequency to which the Mystery Control Amplifier is tuned can be determined by tuning the Signal Generator between 350 and 400 K.C. When the Signal Generator is tuned to the control frequency, the Thyatron (2A4G) tube will glow (blue haze). If this frequency is to be used, leave the Signal Generator indicator at this point or turn the indicator to any other frequency desired between 350 and 400 K.C.
2. When the control frequency is selected, turn the sensitivity control (117) in Model 116 and (89) Model 55,

located on the left rear of the chassis—towards the position marked "extreme." Using the 2A4G Thyatron tube as a resonance indicator, adjust padders (103), (115), (119) in Model 116 and (74), (85), (90) in Model 55 for maximum signal. This will be indicated by the brilliance of the glow in the 2A4G Thyatron tube. As the padders are adjusted, gradually turn the sensitivity control to the "near" position or reduce the output from the Signal Generator. When the padders are correctly adjusted to maximum, the Thyatron will glow with the sensitivity control (117) at the "near" position and with a very weak signal from the Signal Generator.


3. Next, adjust the padding condenser (121) in Model 116 and (92) in Model 55 on the secondary inductor located in the bottom of the receiver. The padding condenser is located in one corner of the secondary inductor and is encased in a cardboard container. This padding condenser should be carefully adjusted for maximum glow in the 2A4G tube. Use the weakest signal possible from the Signal Generator that will cause the 2A4G to glow. Also, have the sensitivity control as close as possible to the "near" position. Extreme care should be used in adjusting the padder to the exact point of resonance, as the secondary inductor is a very sharply tuned circuit. After adjusting the circuit, remove the Signal Generator and loop from the receiver.

4. The Mystery Control unit is now adjusted as follows:
  - A. Dial any one of the stations indicated on the remote unit by pulling the selector to the "Stop" position. Then, as the dial is released at the "Stop," press the "Stop" down and hold it in this position.
  - B. Holding the "Stop" in this position, bring the Mystery Control unit close to the receiver. Using the padding wrench, tune the padding screw (126) located on the bottom of the unit until the 2A4G Thyatron in the receiver glows at full brilliance.

Now, turn the sensitivity control on the receiver towards the "near" position until a point is reached where the 2A4G tube almost stops glowing. Then, readjust the padder (126) of the unit again for maximum brilliance in the 2A4G tube. The Mystery Control unit should now be adjusted to the same frequency as the control frequency in the receiver.

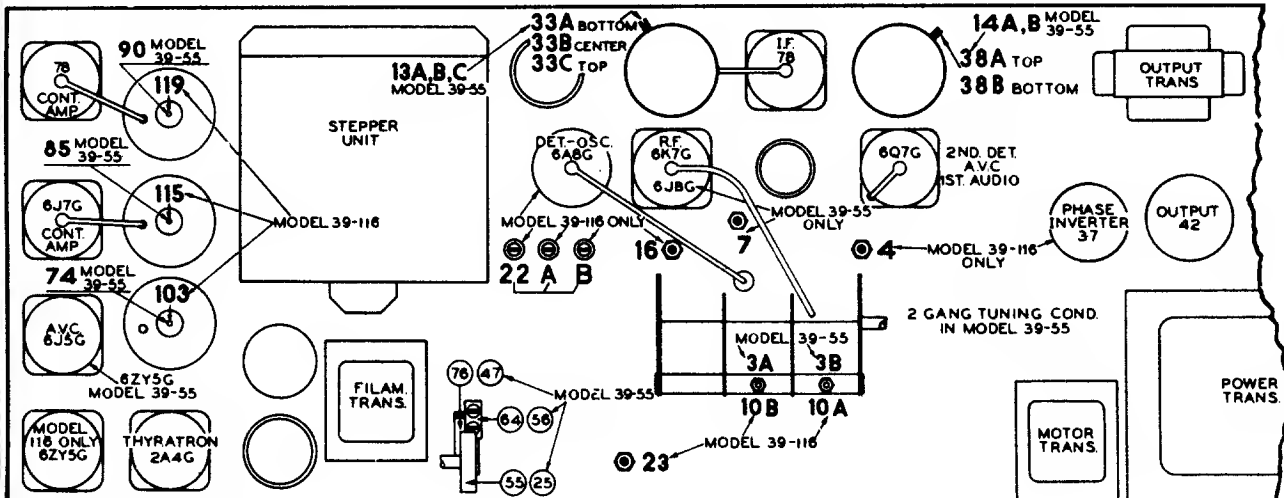

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

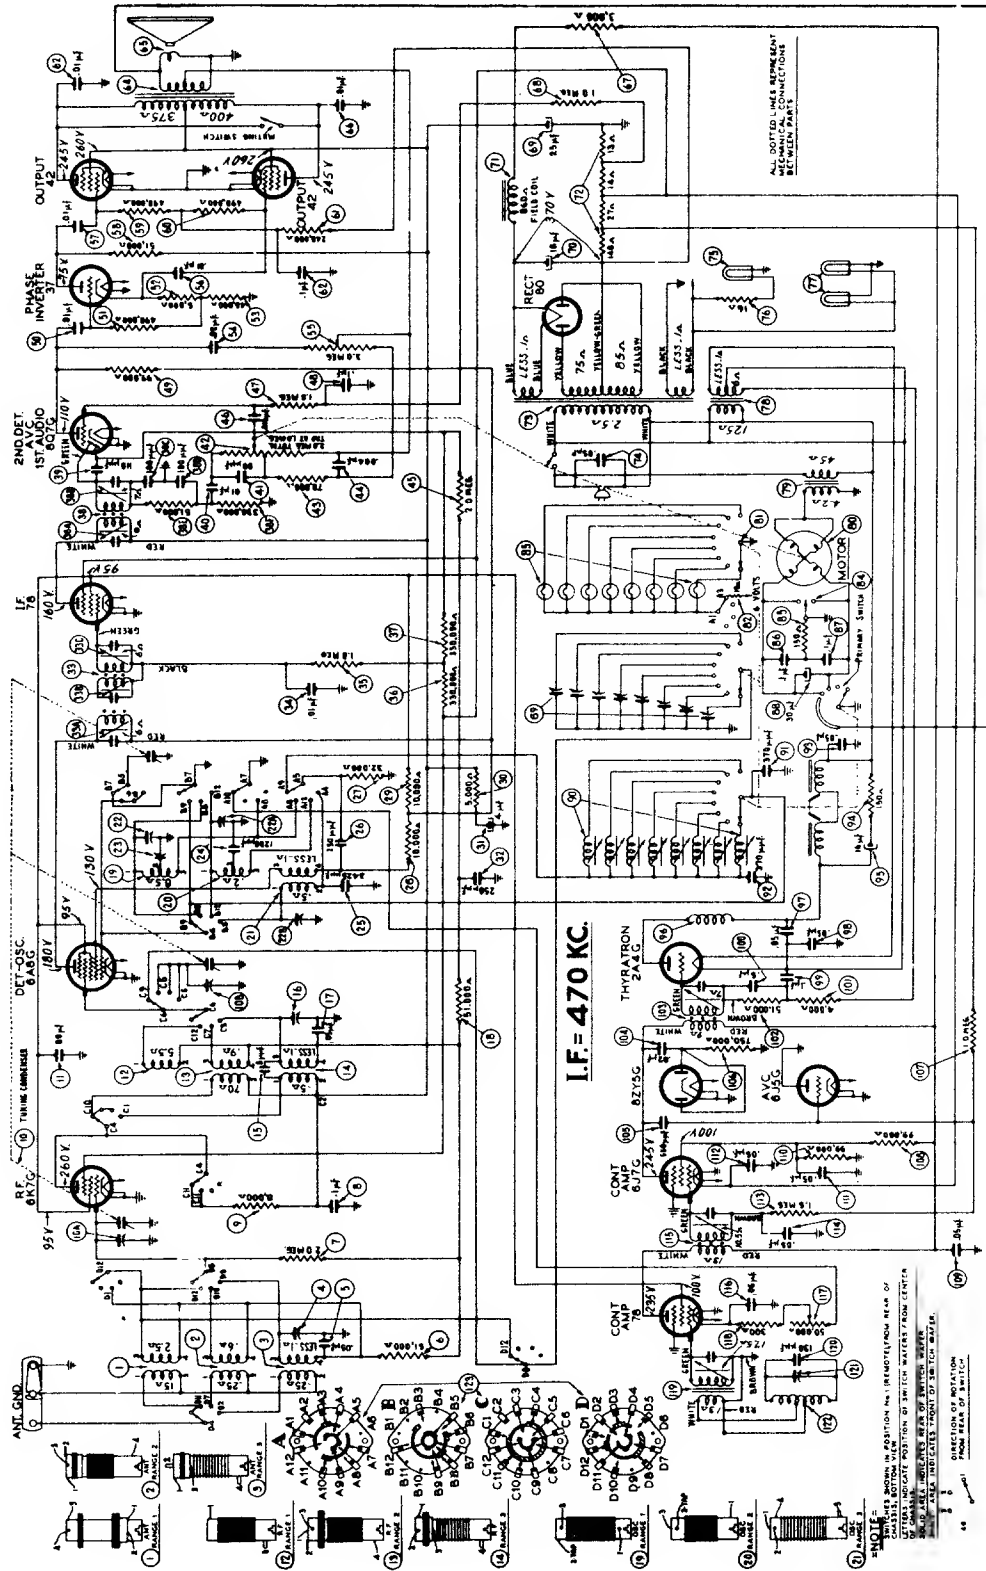

**PHILCO** . . . . . *Model 39-116*  
Socket Voltage Measured for Socket Contacts to Chassis. Line Voltage 115 V.A.C. Volume Minimum, Range Selector (Broadcast)


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

**RADIO RECEIVER CIRCUIT ADJUSTMENTS Model 39-116**


Opera tion	SIGNAL GENERATOR				RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators		
1	78 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdct.	38A, 38B	Turn Out 33B Full	
2	6A8 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdct.	33C, 33A, 33B, 38B	Note B	
3	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdct.	22, 10B, 10A		
4	Antenna and Ground	150 mmfd.	580 K.C.	580 K.C.	Vol. Max. Range Switch Brdct.	23	Rollgang	
5	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdct.	22		
6	Antenna and Ground	400 ohms	5.0 M.C.	5.0 M.C.	Vol. Max. Range Switch Police	22A		
7	Antenna and Ground	400 ohms	18.0 M.C.	18.0 M.C.	Vol. Max. Range Switch Short Wave	22B, 16, 4	Note C	

**RADIO RECEIVER CIRCUIT ADJUSTMENTS Model 39-55**

Opera tion	SIGNAL GENERATOR				RECEIVER			Special Instructions
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Setting	Adjust Compensators		
1	78 Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdct.	14A, 14B	Turn Out 13B Full	
2	6J8G Grid	.1 mfd.	470 K.C.	580 K.C.	Vol. Max. Range Switch Brdct.	13C, 13A, 13B, 14B	Note B	
3	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdct.	3B, 3A		
4	Antenna and Ground	150 mmfd.	580 K.C.	580 K.C.	Vol. Max. Range Switch Brdct.	7	Rollgang	
5	Antenna and Ground	150 mmfd.	1550 K.C.	1550 K.C.	Vol. Max. Range Switch Brdct.	3B, 3A	Note C	


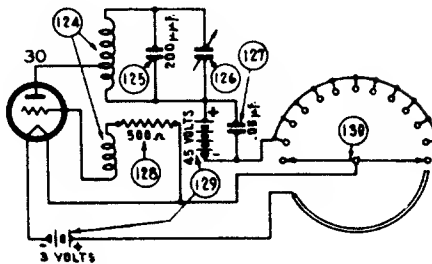


Mystery Control Unit Diagram

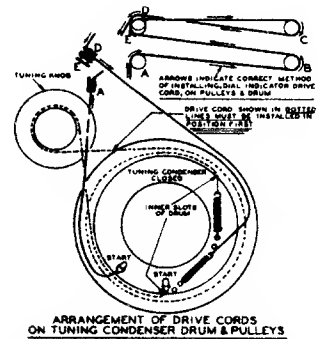

ARRANGEMENT OF DRIVE CORDS ON TUNING CONDENSER DRUM & PULLEYS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

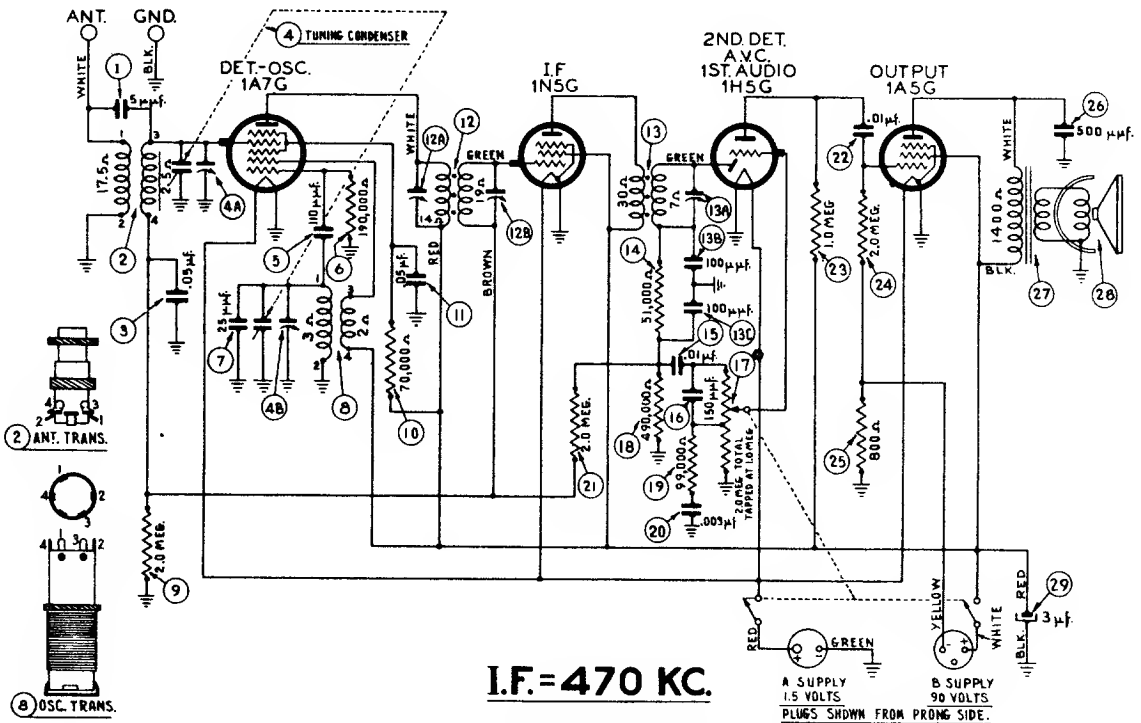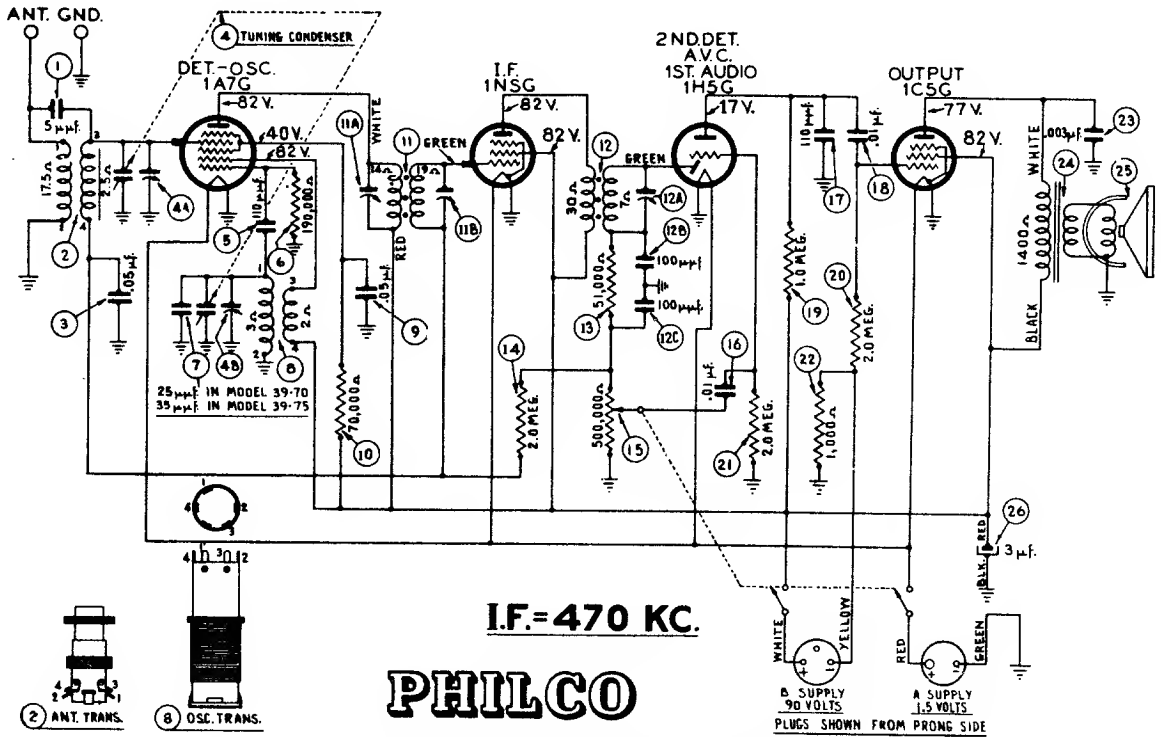



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PROCEDURE FOR MODELS 39-70 AND 39-75

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators
1	1A7G Grid	.1 mfd.	470 K. C.	580 K. C.	Vol. Max.	12A, 11B, 11A
2	Ant. (White)	225 mfd.	1550 K. C.	1550 K. C.	Vol. Max.	4B, 4A

## PROCEDURE FOR MODEL 39-80

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna Note A	Dial Setting	Dial Setting	Control Setting	Adjust Compensators
1	1A7G Grid	.1 mfd.	470 K. C.	580 K. C.	Vol. Max.	13A, 12B, 12A
2	Ant. (White)	225 mfd.	1550 K. C.	1550 K. C.	Vol. Max.	4B, 4A

**A**—The "Dummy Antenna" consists of a condenser or resistor connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.


**B**—DIAL CALIBRATION: In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser.

**Model 39-70 and 39-80**—To adjust the dial proceed as follows: Turn the tuning condenser to maximum capacity (plates fully meshed). With the tuning condenser in this position, set the pointer horizontally across the dial.

**Model 39-75**—With the tuning condenser in the maximum capacity position (plates fully meshed), loosen the coupling screws connecting the push-button unit to the condenser. The pointer is then set on the extreme left edge of the index line (low frequency end of the scale) with the tuning condenser fully closed. The gang is then opened until the pointer is at the right edge of the index line. The push-button shaft is then turned counter-clockwise to its "stop." With the tuning condenser and push-button shaft in these positions tighten the coupling set screws.

**C**—The locations of the compensators in Models 39-70, 39-75 and 39-80 are shown in Figs. (1), (2) and (3) respectively.

Fig. 3. Compensator and Part Locations  
Model 39-80, Code 121  
Underside of Chassis

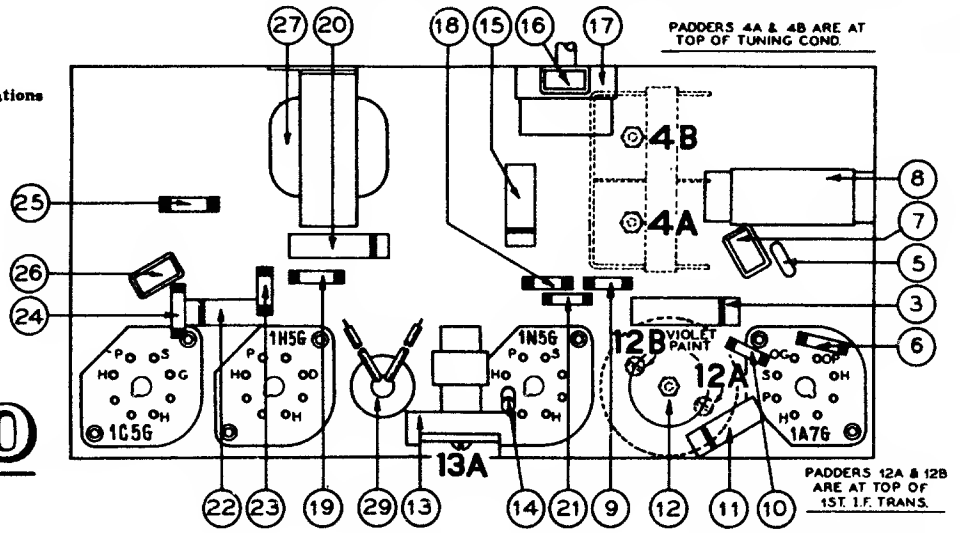

# PHILCO

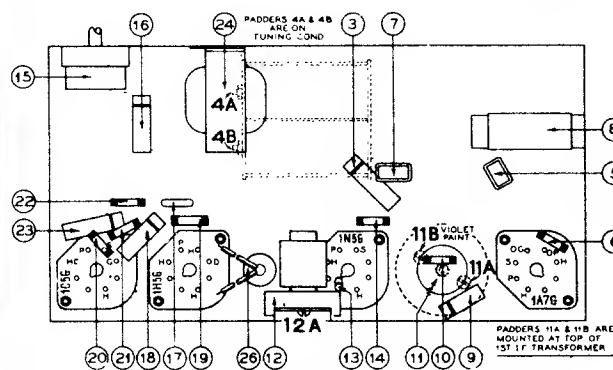


Fig. 1. Compensator and Part Locations  
Model 39-70, Code 121


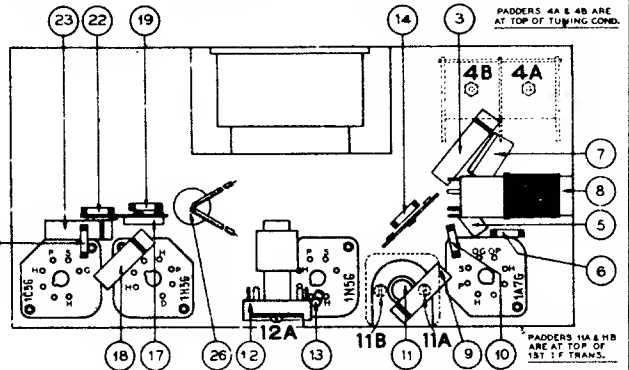


Fig. 2. Compensator and Part Locations  
Model 39-75, Code 121-122  
Underside of Chassis

# 106

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PHILCO Model 39-71, Codes 121, 122

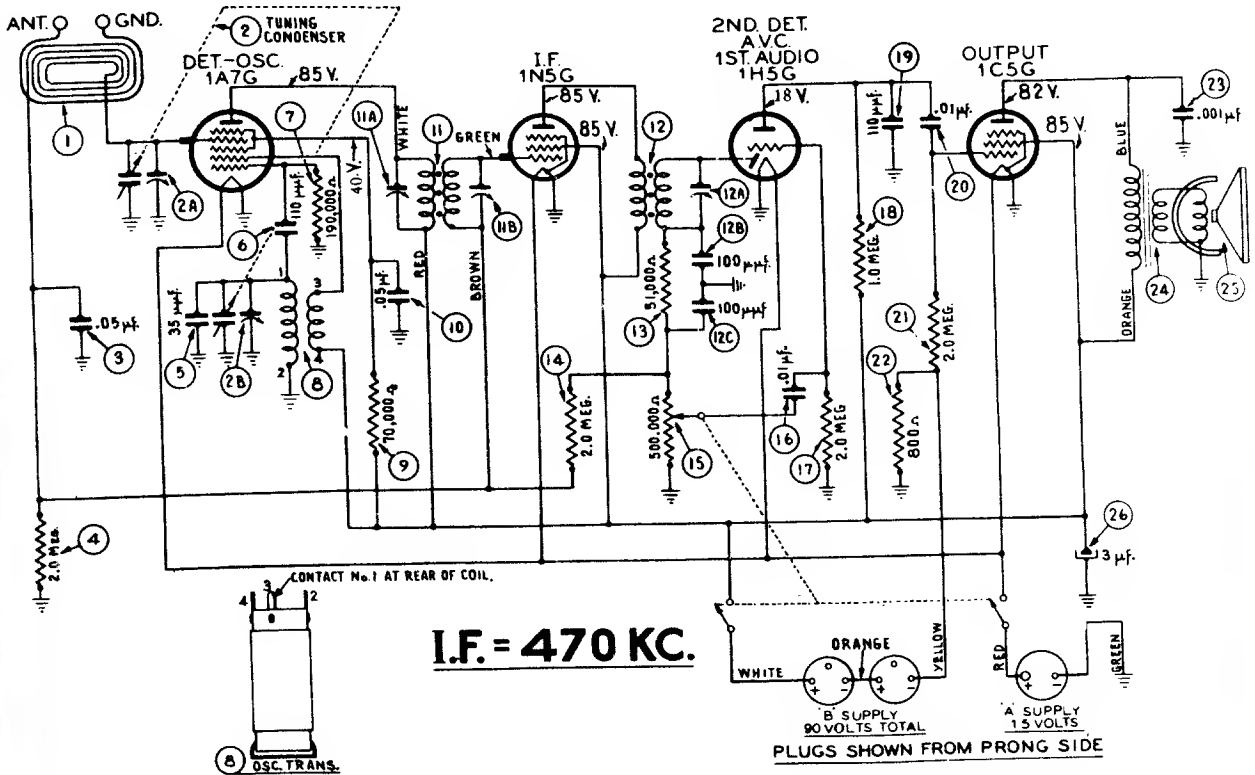

Operations in Order	SIGNAL GENERATOR			RECEIVER		
	Output Connections to Receiver	Dummy Antenna (Note A)	Dial Setting	Dial Setting	Control Settings	Adjust Compensators in Order
1	1A7G Grid	.1 mfd.	470 K. C.	580 K. C.	Vol. Cont. Max.	12A, 11B, 11A
2	Ant. & Grd. Terminals	400 ohms	1550 K. C.	1550 K. C.	Vol. Cont. Max.	2B, 2A

**A** — The "Dummy Antenna" consists of a condenser or resistor connected in series with the signal generator output lead (high side). Use the capacity or resistance as specified in each step of the above procedure.

**B** — **DIAL CALIBRATION:** In order to adjust the receiver correctly, the dial must be aligned to track properly with the tuning condenser. To adjust the dial proceed as follows: Turn the tuning condenser to maximum capacity (plates fully meshed). With tuning condenser in this position set the pointer to the small "black dot" at the low frequency end of the dial scale.

**C** — To adjust the I. F. compensators, remove the back from the cabinet, which is held in place by four screws. The chassis is then taken out by removing the four screws and two corks underneath the cabinet, and the Tuning and Volume knobs. The I. F. compensators are located on top of the I. F. transformers.


When adjusting the Antenna (2A) and Oscillator (2B) compensators, the chassis must be assembled in the cabinet with the batteries and loop in place. The Signal Generator output lead with the "Dummy Antenna" is then connected to the terminals marked "Ant" and "Grd" underneath the cabinet. The antenna and oscillator compensators are then adjusted through the holes in the bottom of the cabinet.

### Replacement Parts

Code No.	Description	Part No.	Code No.	Description	Part No.	Code No.	Description	Part No.
1	Loop Assy.	40-6421	14	Resistor (2 megohms)	33-520339	26	Electrolytic Cond. (3 mf.)	30-2359
2	Tuning Cond.	31-2322	15	Volume Control & Switch	33-5301		Bezel Window	27-5434
3	Tubular Cond. (.05 mf.)	30-4519	16	Tubular Cond. (.01 mf.)	30-4572		Dial	31-2321
4	Resistor (2 megohm)	33-520335	17	Resistor (2 megohm)	33-520339		Dial Pointer	28-5185
5	Mica Cond. (35 mmf.)—mounted on top of tuning condenser	30-1095	18	Resistor (1 megohm)	33-510339		Dial Drive Cord Assy.	31-2323
6	Mica Cond. (110 mmf.)	30-1031	19	Mica Cond. (110 mmf.)	30-1031		Dial Tuning Shaft & Brkt. Assy.	31-2324
7	Resistor (190,000 ohms)	33-419339	20	Tubular Cond. (.01 mf.)	30-4572		Escutcheon (knobs)	56-1252
8	Oscillator Trans.	32-3118	21	Resistor (2 megohm)	33-520339		Escutcheon (screws)	W-2129
9	Resistor (70,000 ohms)	33-370339	22	Resistor (800 ohms)	33-180339		Knob (Tuning, Volume)	27-4331
10	Tubular Cond. (.05 mf.)	30-4444	23	Tubular Cond. (.001 mf.)	30-4201		Loop Antenna	40-6421
11	1st I. F. Trans. Assy.	32-3103	24	Output Trans. for Speaker No. 36-1451-3	32-8036		Pulley (Tuning Condenser)	28-6662
12	2nd I. F. Trans. Assy.	32-3081	25	Voice Coil Assy. for Speaker No. 36-1451-3	36-4090			
13	Resistor (51,000 ohms)	33-351339						

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PHILCO AUTO RADIO Model 920

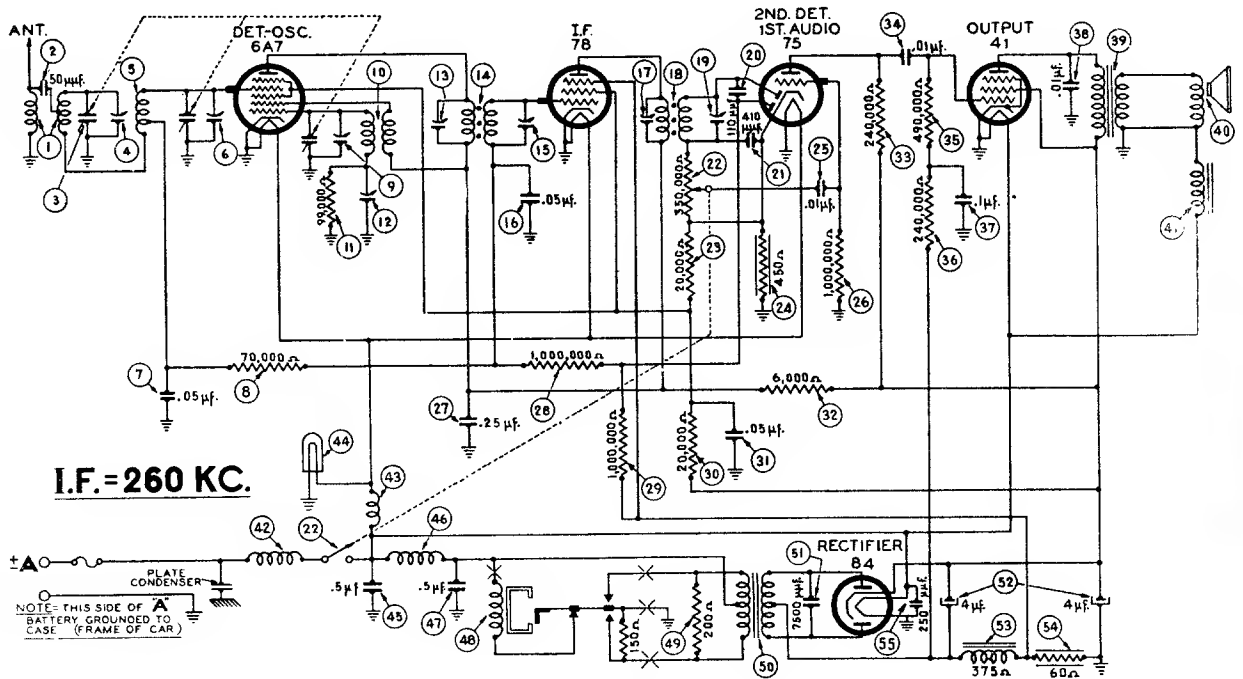


	SIGNAL GENERATOR		DUMMY CAPACITY	SPECIAL INSTRUCTIONS	ADJUST PADDER
	FREQUENCY	CONNECTION			
1	260 K. C.	To grid of 6A7 Tube	.1 Mfd. Condenser in Series with Generator Lead	No Antenna Connection	17 19 13 15 17
2	1550 K. C.	To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Turn Tuning Condenser Plates Out of Mesh as Far as They Will Go.	9 6 6
3	580 K. C.	To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Set Tuning Condenser at 580 K. C.	Note 2 12
4	1550 K. C.	To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Turn Tuning Condenser Plates Out of Mesh as Far as They Will Go.	9
5	1400 K. C.	To Antenna Receptacle on Radio	50 Mmfd. See Note 1	Set Tuning Condenser at 1400 K. C.	6 6 Note 3

Make all adjustments for maximum reading on the output meter.

- 1 — Connect the antenna lead, Part No. 41-3191, to the antenna receptacle in the radio. Connect a 50 Mmfd. Condenser in series between the signal generator and the antenna lead.
- 2 — Rock the tuning condenser while adjusting the low frequency padder. Tune the condenser to the signal and adjust the padder for maximum output. Rotate the tuning condenser back and forth slightly for maximum output. Then re-adjust the padder for maximum output. Repeat this procedure until no further improvement is noticed.
- 3 — When the antenna stage adjustment is made with the Radio installed in the car, the Radio antenna lead must be connected to the car antenna in the usual manner. Connect the signal generator output lead to a wire placed near the car antenna but not connected to it.

### I. F. TRANSFORMERS



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## PHILCO Model "L" RECORD CHANGER

### OPERATING INSTRUCTIONS

The Model "L" Record Changer plays seven 12" or eight 10" Records automatically. The last record remains on the turntable and repeats as long as the Record Changer is in operation.

Records may be repeated as often as desired by raising the record removing arm at A Fig. 1 to the upright position.

To reject a record and play the next record below it, pull the latch lever at L Fig. 1 forward.

To adjust the record removing arm to handle 10" records set the record removing arm change lever at D Fig. 1 opposite the number 10 stamped on the base plate. For 12" records set the lever opposite the number 12.

To adjust the pickup to play 10" records, push the pickup stop at K Fig. 1 back. (Away from the pickup needle). For 12" records pull the stop forward (toward the needle) as far as it will go.

Some units are equipped with two speed motors, and others with 78 RPM motors. When the two speed motor is used change from one speed to the other by simply moving lever at F Fig. 1 to position desired.

To start motor, throw switch at N Fig. 1 on the "on" position.

clamps the lever to the motor shaft. This shaft is provided with a screw-driver slot in the end. Next, using a screw driver, turn this shaft in a clockwise direction until you feel it strike the stop. The motor is now in the 33-1/3 RPM position. Now set the lever against the lug provided in the base plate and opposite the legend 33-1/3 and tighten the clamp screw. This places the lever in the correct position on the motor shaft. The final step is the adjustment of the eccentric bushing at G Fig. 1 which limits the throw of the lever. First loosen the screw which holds the eccentric bushing. Next, throw the speed changer lever to its farthest 78 RPM position, (using care that the lever does not slip on the motor shaft). Then turn the eccentric bushing around until it touches the side of the lever, and tighten it in place with the screw provided.

### TRIP MECHANISM

The trip mechanism is the trigger that sets the Record Changer in motion. This is done by allowing the latch bar at O Fig. 1 to drop in front of, and be actuated by the cam at P Fig. 1. This cam is driven by the motor and is in motion as long as the motor is running. If this mechanism does not operate smoothly, the precautions outlined in succeeding paragraphs should be observed.

First of all, make sure that the square pin in the latch lever at U Fig. 1 latches properly in the notch in the lift lever at I Fig. 1. When latched, the notch should be engaged approximately one-half of its depth. The depth of engagement is adjusted by means of the eccentric washer and locking screw at J Fig. 1. Now run the Record Changer through its cycle. If the square pin fails to engage the notch in the lift lever, first check the tension of the latch spring at H Fig. 1 to insure that the notch can engage the pin. Next check the tension of the reset spring at E Fig. 1. This reset spring should not be under tension when the latch bar drops back off of the cam to cause the square pin to over travel the notch in the lift lever.

**IMPORTANT**—Before attempting to change the tension of any spring, be sure that the parts involved work freely without any tendency to bind, as of course any binding condition would preclude proper operation.

The Record Changer is adjusted at the factory to trip on a spiral trip groove record when the phonograph needle is 1 1/4" from the edge of the hole in the center of the record.

### MOTOR LUBRICATION

The motor installed in the Record Changer is governor controlled, with all gearing enclosed, and leaves the factory lubricated for proper operation. For maximum satisfaction, lubricate the motor at regular intervals with SAE No. 10 oil. Please do not use any other grade of oil.

The governor disc engages with a ring of hard felt. This felt is impregnated with a lubricating solution sufficient for proper operation for approximately a year under normal conditions.

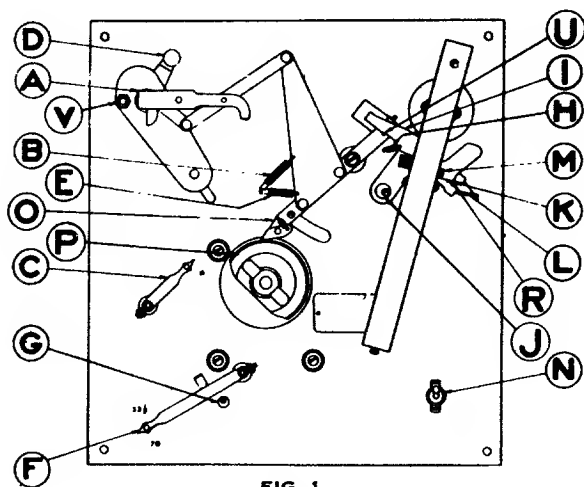


FIG. 1.

### MOTOR SPEED

The motor speed is adjusted by means of a lever at C Fig. 1 which is mounted under the turntable. The direction of swing to fast or slow is indicated by the legends F and S on the base plate.

### 33-1/3 RPM — 78 RPM SHIFT (Two-speed motors only)

Move the speed change lever at F Fig. 1 as far as it will go in the direction of swing indicated by the legends 33-1/3 and 78 on the base plate.

If adjustment of the speed change lever is required for any reason, proceed as follows: First loosen the screw which

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

When eccentric or oscillating trip groove records are used, tripping is effected by means of the hardened steel pin in the end of tone arm lift crank at S Fig. 2 engaging the serrated block on the trip lever at T Fig. 2. There must be a minimum of  $1/32$ "

play between the end of the pin and the block, when, with a short needle, ( $5/8$ " Minimum Length) the pickup is resting on one record on the turntable. If the pressure of the pin on the block is not sufficient to insure operation, then check the pressure spring which is located up under the pickup.

The oval head pivot screw at R Fig. 1 serves as a pivot for the lift lever at I Fig. 1. This screw should allow the lift lever to be raised by the latch bar to its maximum height without binding but also without any additional play.

If the Record Changer fails to trip, see if the phonograph needle is jumping out of a worn record trip groove. Next make certain that all parts of the mechanism work freely and smoothly. If it is found that the latch bar at O Fig. 1 is not dropping in far enough to engage the cam at P Fig. 1, then check the tension of the trip spring at B Fig. 1.

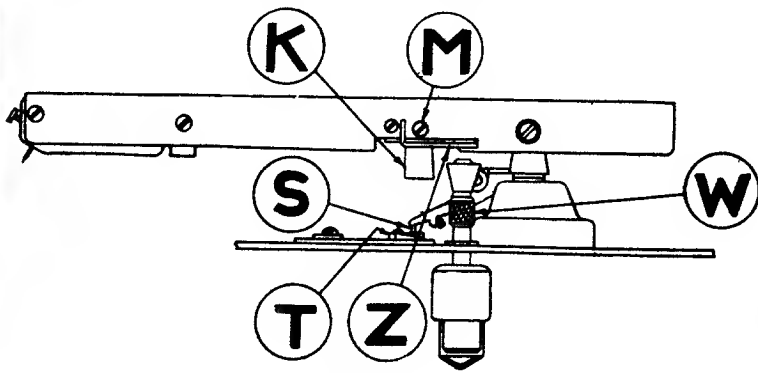


FIG. NO. 2

In case the Record Removing Mechanism fails to operate smoothly, proceed as follows: First make certain that all parts work freely with no binding in pivots or bearings, and that the record removing arm assembly rests on the stop screw at Q Fig. 3. Next stop the motor in such a position that the latch bar at O Fig. 1 can swing by and clear the cam at P Fig. 1. Place just one record on the turntable and measure from the top of this record down to the base plate. This distance should be one inch. Now by pulling the reject lever at L Fig. 1 first, it will be found possible to swing the record removing finger at Y Fig. 3 over to where it just touches the edge of the record. If the adjustment is correct, the record removing finger should just barely rise over the edge of the first record. If adjustment is required it can be made by means of the stop screw at Q Fig. 3. In the event the record removing arm raises the record from the turntable and drops it back in place without removing it, check the lift adjustment at V Fig. 1. This adjustment consists of an eccentric stud which is provided with a lock nut, and is made by loosening the lock nut and turning the eccentric stud. The lift adjustment should be set so that the hole in the center of the record just clears turntable spindle when the Record Changer is in operation.

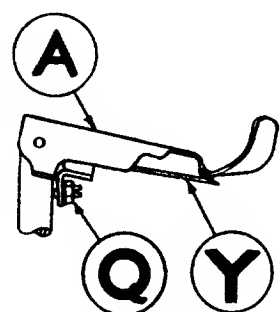


FIG. NO. 3

The pickup lowering mechanism has two functions. First, it lowers the phonograph needle gently to the surface of the record. Second, it feeds the needle toward the center of the record so that it will enter the playing groove.

If the pickup descends too fast or too slow, adjust the speed of descent by turning the knurled thumb nut on the dashpot sleeve at W Fig. 2.



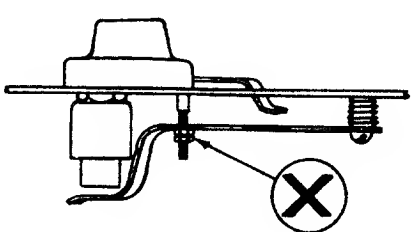


FIG. NO. 4

The unit is adjusted at the factory so that the needle will be set down approximately  $3/32$ " in from the edge of the record. An adjusting screw is provided on the side of the pickup at M Fig. 2. If the needle is being lowered onto the playing surface of the record, and the adjusting screw at M Fig. 2 fails to correct the condition proceed as follows: First stop the record changer, with the pickup in the maximum raised position and check the clearance between the underside of the pickup shelf at Z Fig. 2 and the tip of

the dashpot. This clearance should be very small as otherwise the pickup will tend to bounce as it is lowered. There must be sufficient clearance however to prevent the pickup shelf from rubbing on the tip of the dash pot, or the pickup will not swing out far enough to allow the adjustable stop at K Fig. 2 to come to rest against the dashpot. Check this clearance in both 10" and 12" record positions. If adjustment is required, the height of the dashpot may be regulated by loosening the nuts on the bottom of the lift lever stud at X Fig. 4 and changing their position on the stud. To raise the dashpot turn the nuts clockwise, to lower the dashpot turn the nuts counter-clockwise.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

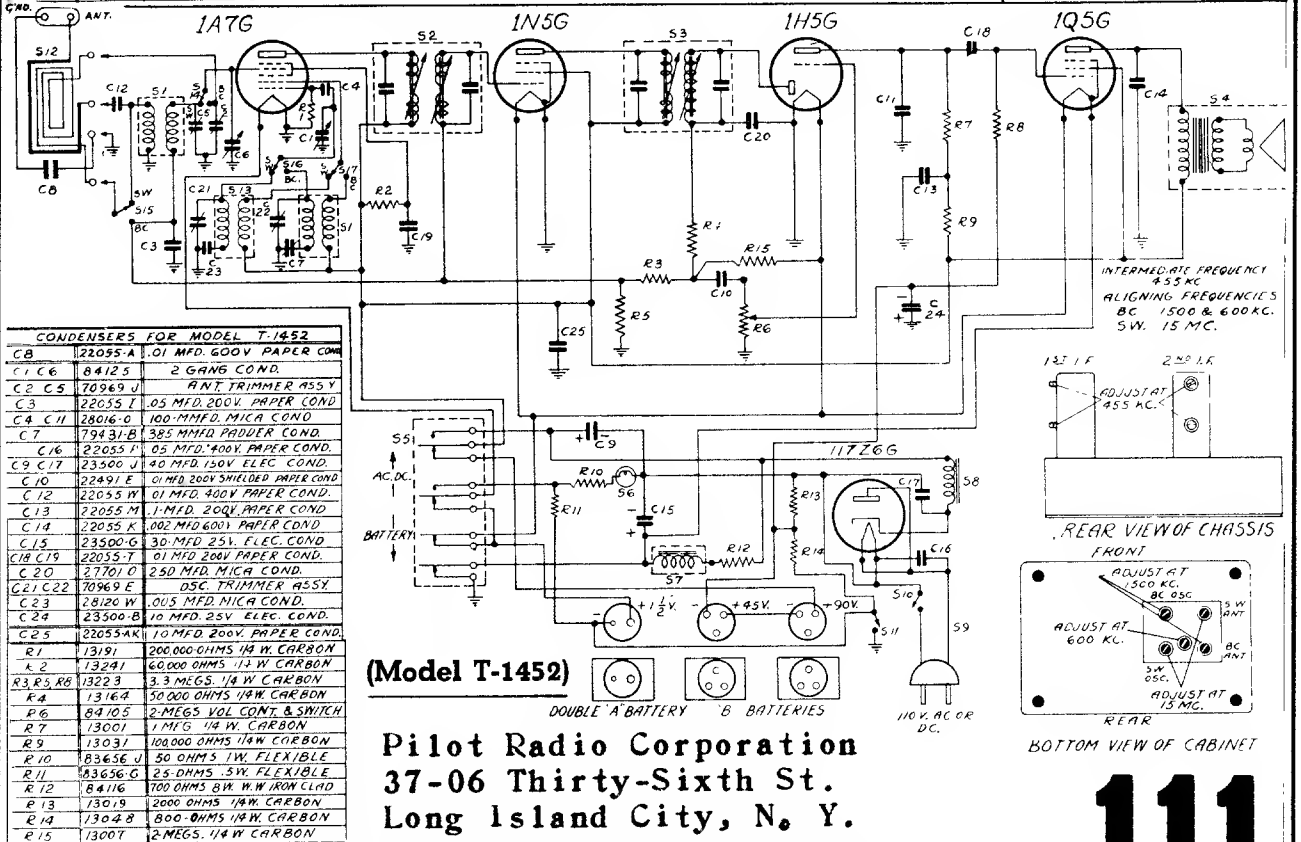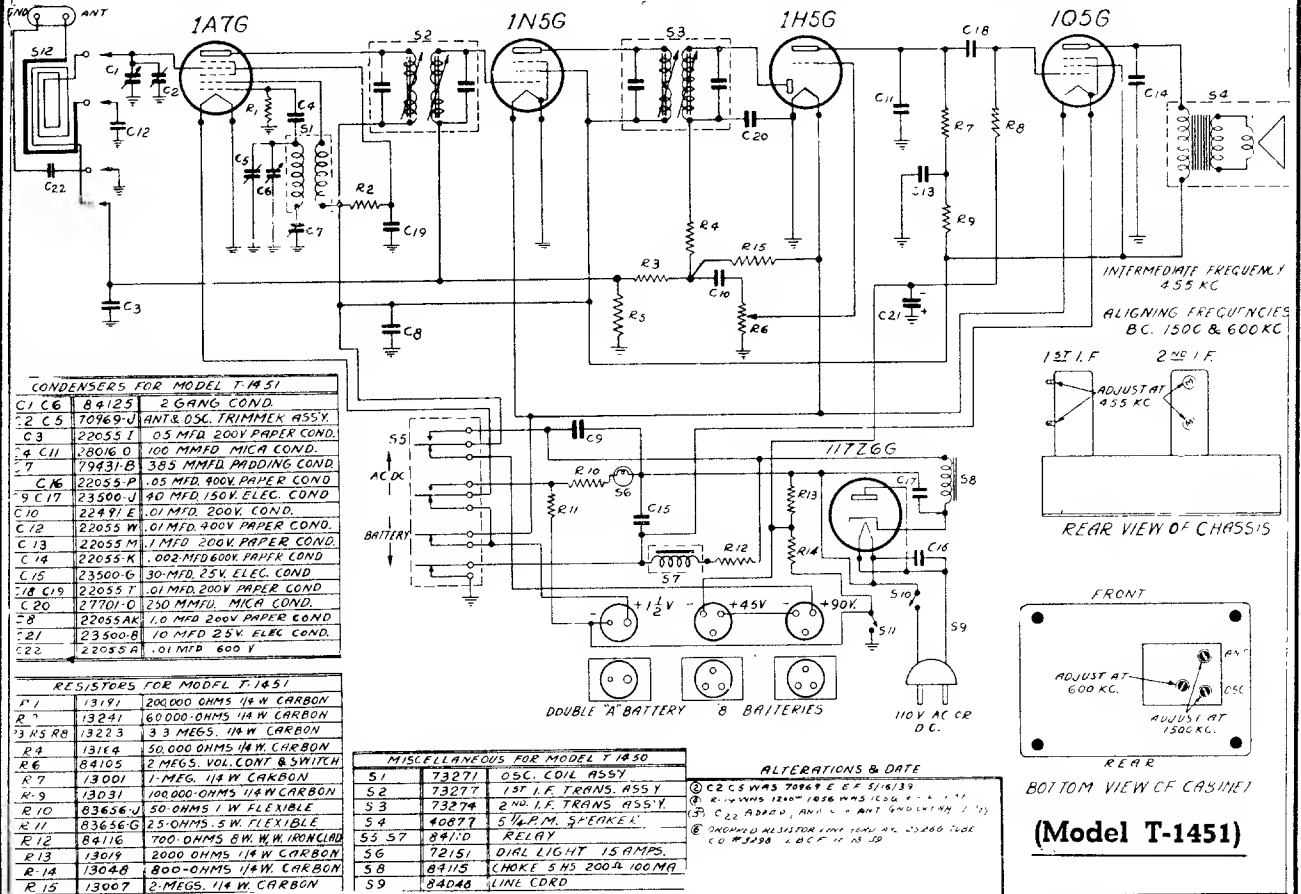


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# RCA Victor

# MODEL 6QU


### CATHODE CURRENTS

(1) 6SA7	12.42 MA.
(2) 6K7	8.30 "
(3) 6SQ7	0.28 "
(4) 6F6-G	32.00 "
TOTAL RECTIFIED "B" CURRENT = 58 MA.	

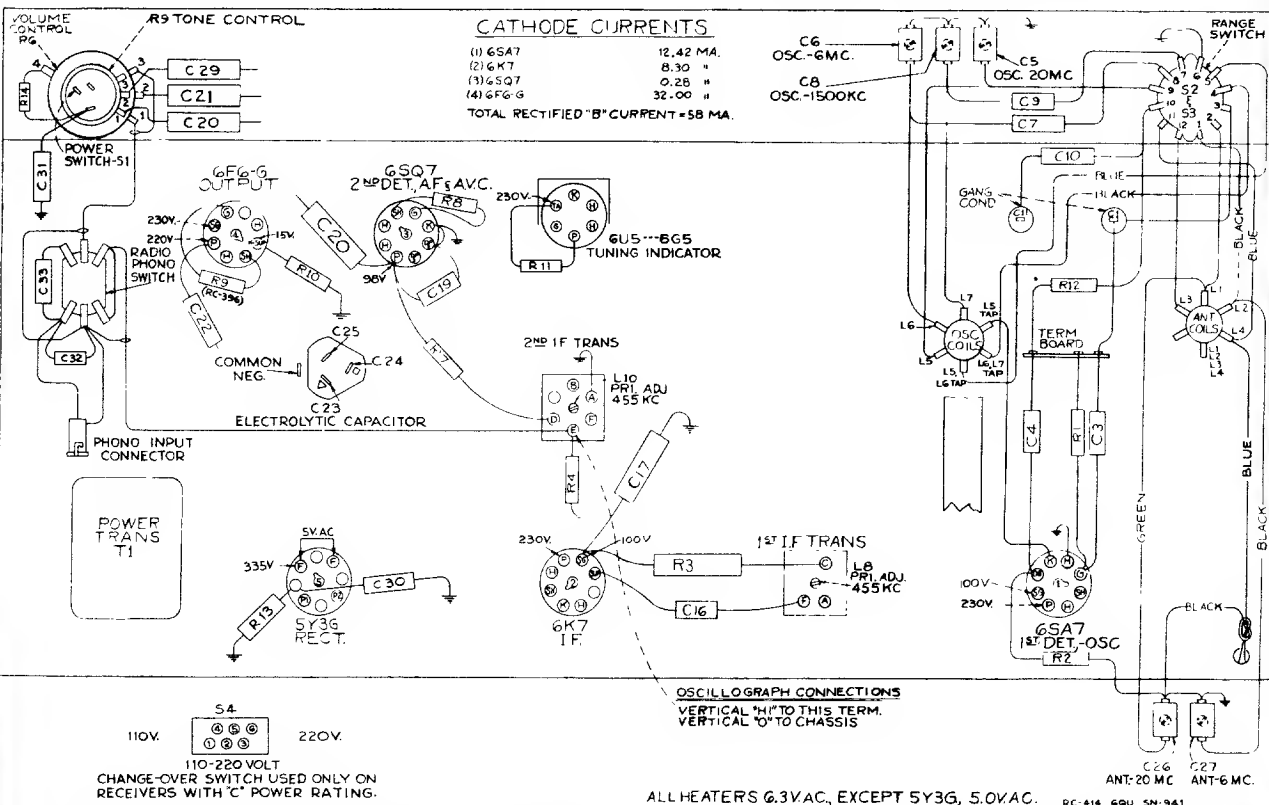


Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within  $\pm 20\%$  with 117-volt a-c supply.

\*NOTE: Values with star (\*) are operating voltages in circuits with high series resistance. The actual measured voltages will be lower, depending on the voltmeter loading.

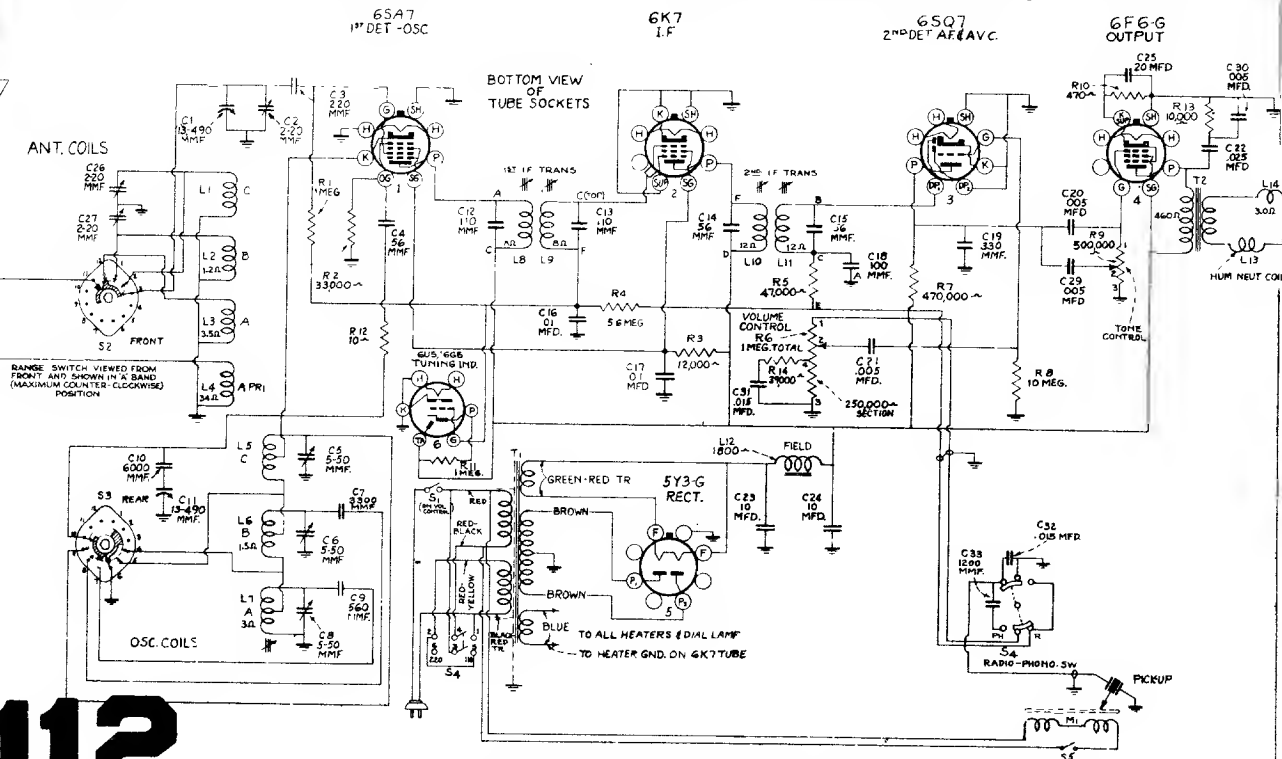

# RCA Victor MODEL 6Q4

## MODELS 7Q4 and 7QK4

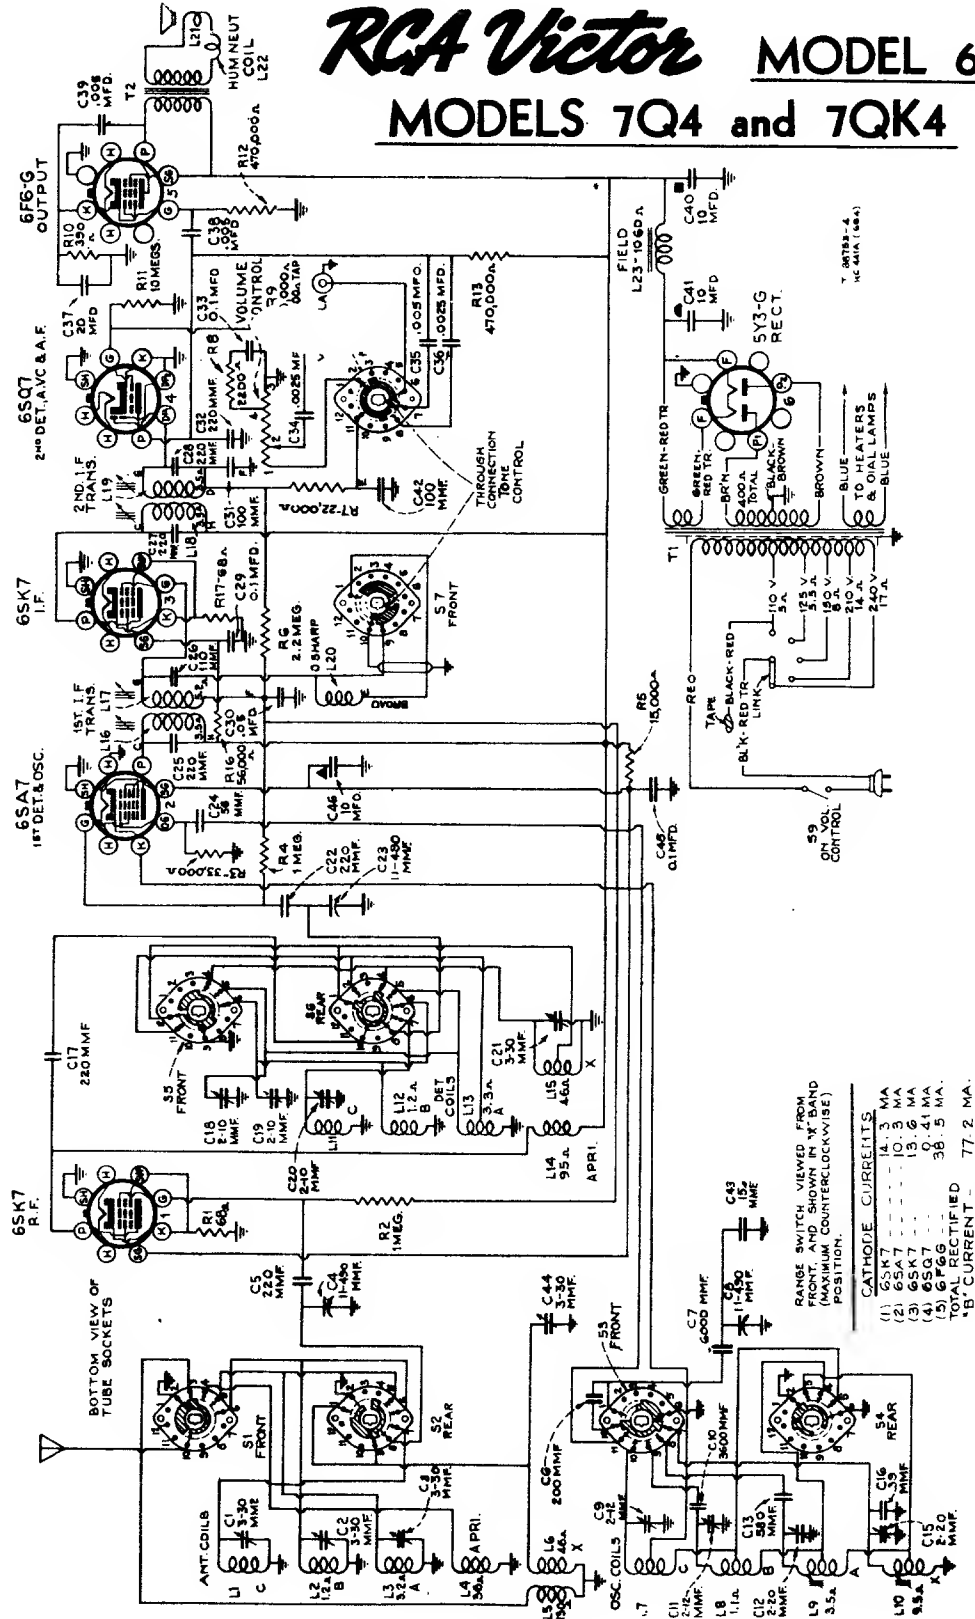

Models 7Q4 and 7QK4 are similar to Model 6Q4 except for the addition of a tuning indicator (RCA-6U5/6G5). The 7Q4 chassis uses an RCA-6F6 output tube, whereas the 7Q4 uses an RCA-6F6-G output tube.



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## RCA Victor

### Models 9TX-21, -22, and -23


Chassis No. RC-403 RC-403 RC-403A

### Five-Tube, Single-Band, AC-DC Superheterodyne Receivers

#### Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible. The antenna should be rolled up and kept at least one foot from chassis during alignment.

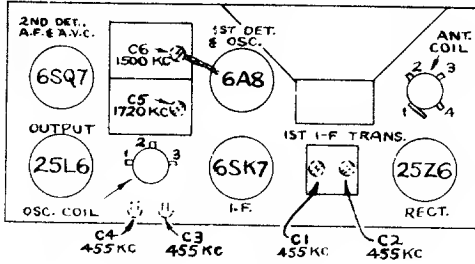

Trimmer Locations

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	6A8 1st-Det. grid cap, in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal.	C6 (antenna)

INTERMEDIATE FREQUENCY..... 455 kc

POWER OUTPUT (125 volt, 60 cycle supply)

Undistorted..... 1.5 watts  
Maximum..... 2.0 watts


LOUDSPEAKER (39105-1)

Type..... 4-inch Electrodynamic

**Power-Supply Polarity.**—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

**Resistor in Power Cord.**—The power cord contains a resistor which becomes warm during operation.

**Antenna.**—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

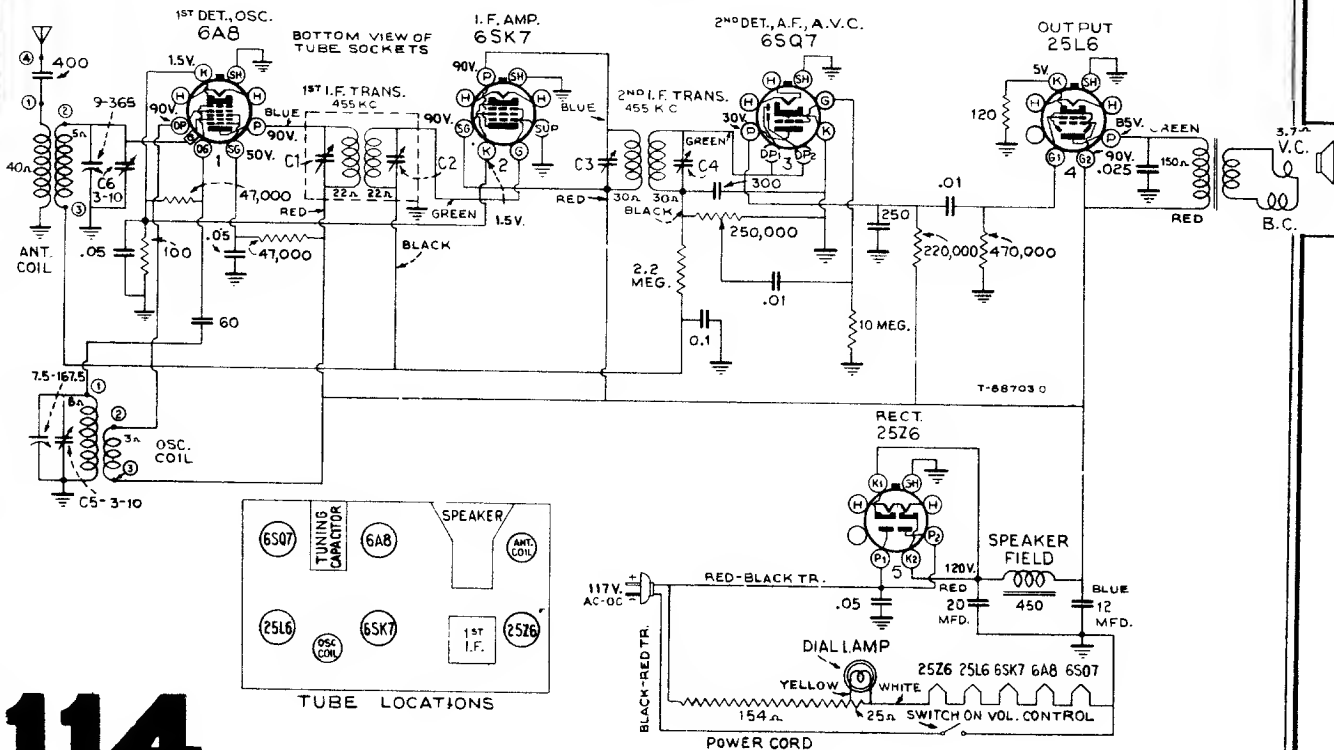

# 114

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


# RCA Victor

# MODEL 6Q8

Chassis No. RC-414B

Steps	Connect the high side of the test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Trans.)
2	6SA7 det. grid in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Trans.)
3	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.) C2 (ant.)
4	Ant. terminal in series with 200 mmf.	600 kc	600 kc (33°) "A" Band	L8 (osc.) Rock Gang
5	Repeat steps 3 and 4			
6	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.) C26 (ant.)
7	Ant. terminal in series with 200 mmf.	175 kc	175 kc (53.3°) "X" Band	L9 (osc.) Rock Gang
8	Repeat steps 6 and 7			
9	Ant. terminal in series with 300 ohms	15.2 mc	15.2 mc (147.3°) "C" Band	C5 (osc.)* C27 (ant.)
10	Ant. terminal in series with 200 mmf.	360 kc	360 kc (151.5°) "X" Band	C8 (osc.)
11	Ant. terminal in series with 200 mmf.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

\*Use minimum capacity peak if two can be obtained. Check to determine that C5 is adjusted to correct peak by tuning receiver to approximately 14.29 mc where a weaker signal should be received.

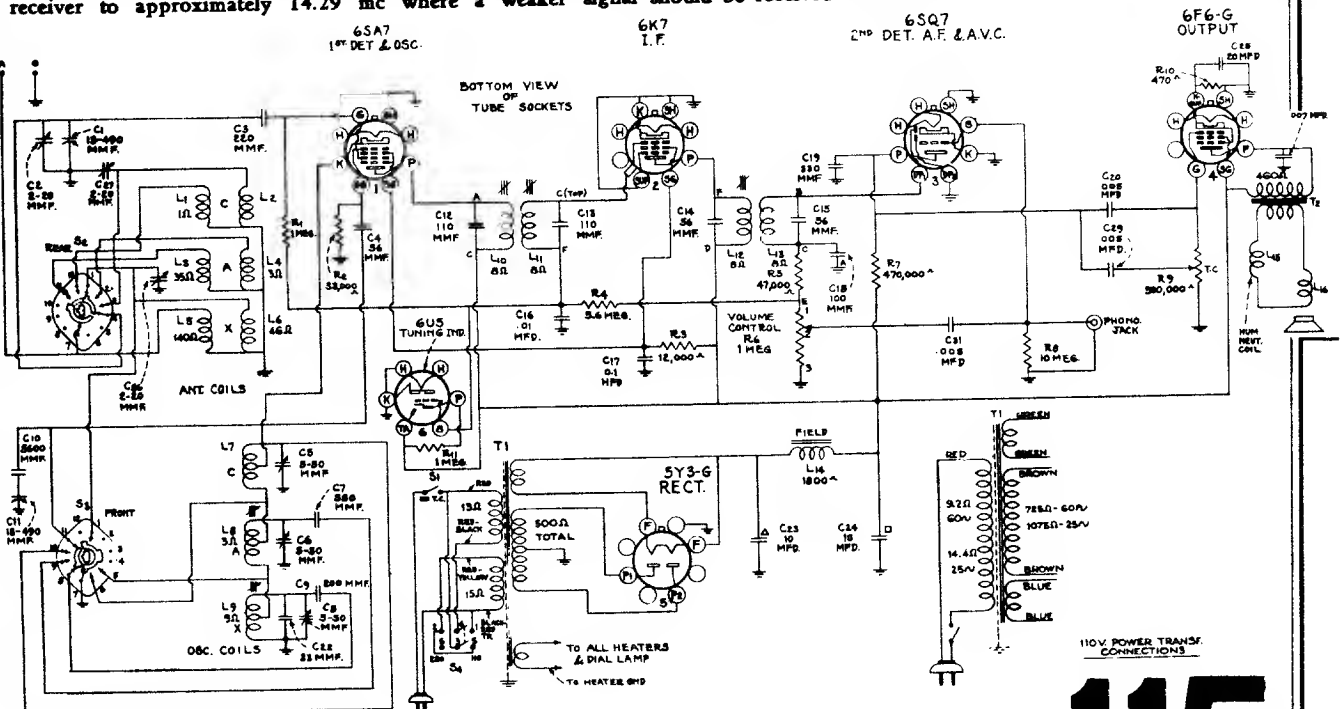



## RCA Victor

### MODELS 9TX-31, 9TX-32, 9TX-33

Chassis No. RC-405, RC-405A, RC-405B

### Five-Tube, Single-Band, AC-DC Superheterodyne Receivers

#### Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.	455 kc	Quiet point at 1,600 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal	C6 (antenna)


#### Precautionary Lead Dress

1. Dress 1st I-F plate and grid leads against chassis and away from each other. Dress plate lead from 12SK7 close to chassis.
2. Dress electrolytic capacitor against rear apron.

**Power-Supply Polarity.**—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.


**Antenna.**—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

**Victrola Attachment.**—A jack is provided on the rear of chassis for connecting a Victrola Attachment into the audio-amplifying circuit. The cable from the Victrola Attachment should be terminated in a Stock No. 31048 plug to fit the jack.

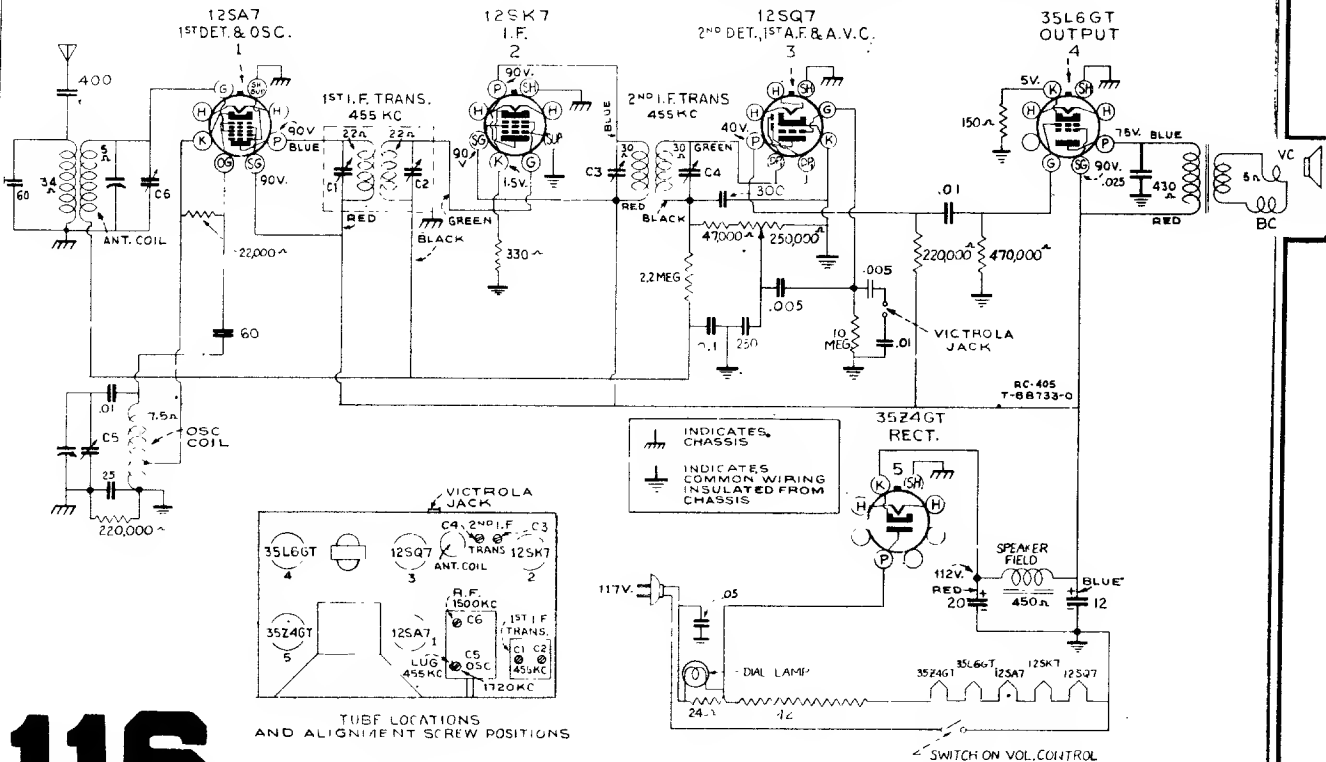



## RCA VICTROLA MODEL U-9 (Chassis No. RC-482B) Five-Tube, Single-Band, A-C, Superheterodyne

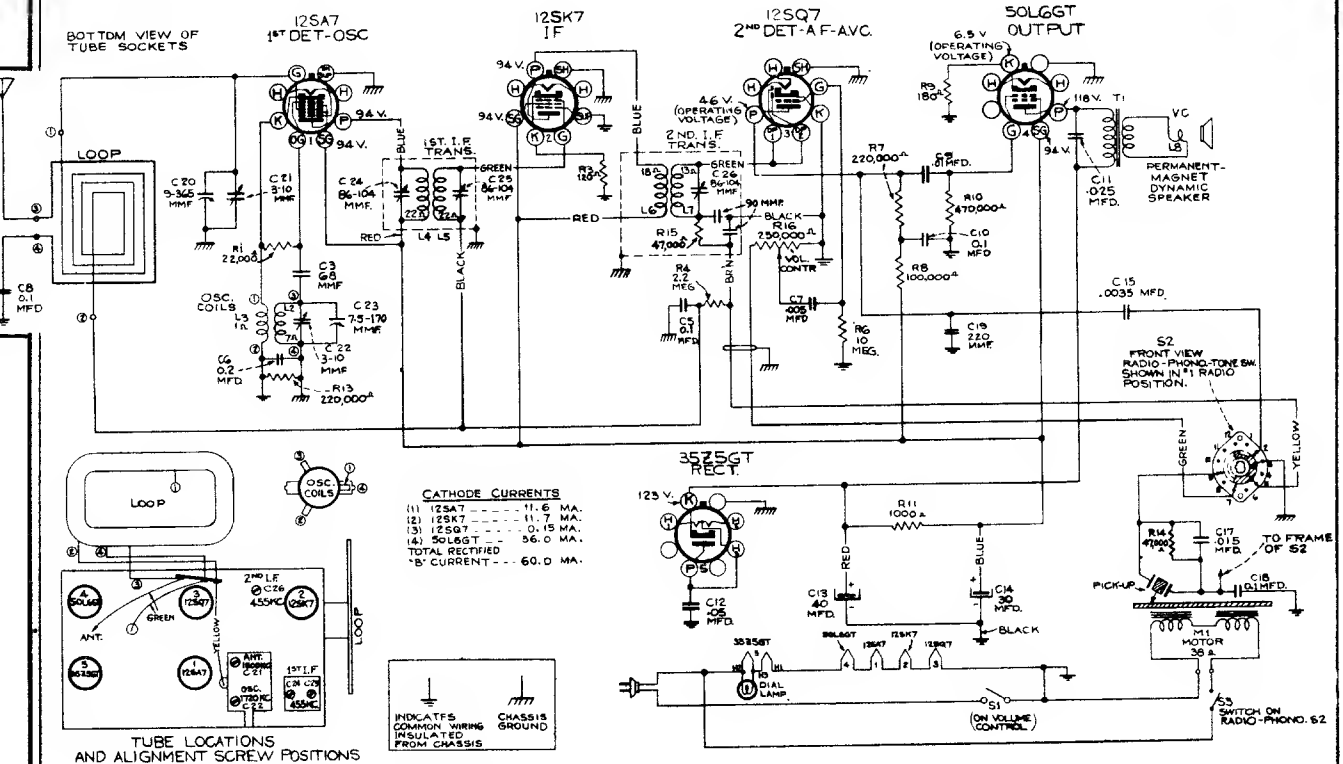

### Miscellaneous Service Data


#### PHONOGRAPH MECHANISM.—

The phonograph motor is self-starting and operates the turntable through friction drive between the motor spindle and the rubber tire on the underside of the turntable.

The rubber driving tire on the turntable should never be removed since it is ground in to be concentric with the spindle. If replacement is required, the entire turntable should be replaced.

The speed regulator raises and lowers the motor. This changes the driving ratio between the motor and the turntable due to the motor spindle being conical in shape. It is important to adjust this regulator for a turntable speed of 78 r.p.m. WHILE PLAYING A 10-INCH RECORD WITH THE NEEDLE APPROXIMATELY ONE INCH FROM THE OUTER EDGE OF THE RECORD.

**Lubrication.**—The motor should be lubricated as follows: Place a few drops of S.A.E. 20 (or equivalent) on the turntable spindle and saturate the oil retaining felt pads on the motor shaft with S.A.E. 10 oil. This oiling process should be repeated once or twice a year. **CAUTION.**—THE MOTOR DRIVE SPINDLE AND RUBBER DRIVING TIRE ON THE TURNTABLE MUST BE KEPT CLEAN AND ENTIRELY FREE FROM OIL AND GREASE AT ALL TIMES.

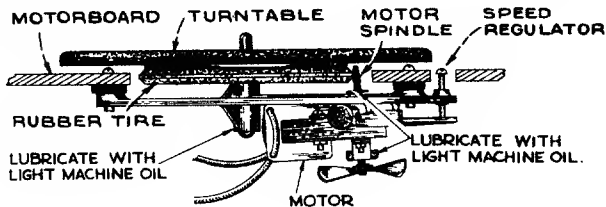

### Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test Oscillator.**—Connect the low side of the test oscillator to the receiver chassis through a 0.01 mfd capacitor, and keep the output as low as possible.



**Pre-Setting Dial.**—With gang condenser in full mesh, the pointer should coincide with the left hand mark stamped in the dial back-plate.

**Antenna.**—This set is equipped with a built-in loop antenna. If an outdoor antenna is used, it may be connected to the green antenna lead, stapled to the base of the cabinet. The antenna should not be longer than 100 feet including the lead-in. If it is longer, connect a 100 mmfd. capacitor in series with the lead-in.


Steps	Connect the high side of test oscillator to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for max. output—
1	Tuning Cond. stator (det.) in series with 0.01 mfd.	455 kc	Quiet Point at 1,600 kc end of dial	C24, C25, C26 (1st and 2nd I-F transformers)
2	Antenna lead (green) in series with 100 mmfd.	1,720 kc	Full Clockwise (out of mesh)	C22 (osc.)
3		1,500 kc	Resonance on 1,500 kc signal	C21 (ant.)

# RCA Victor

## MODEL U-12

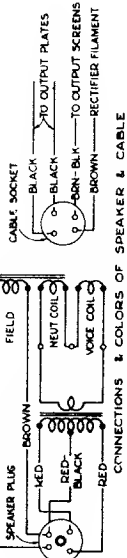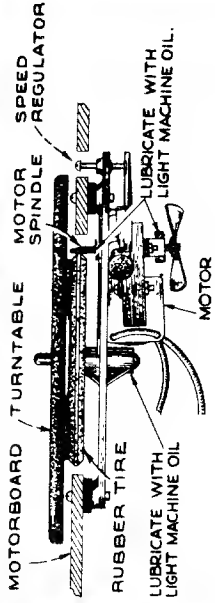

CONNECTIONS & COLORS OF SPEAKER & CABLE

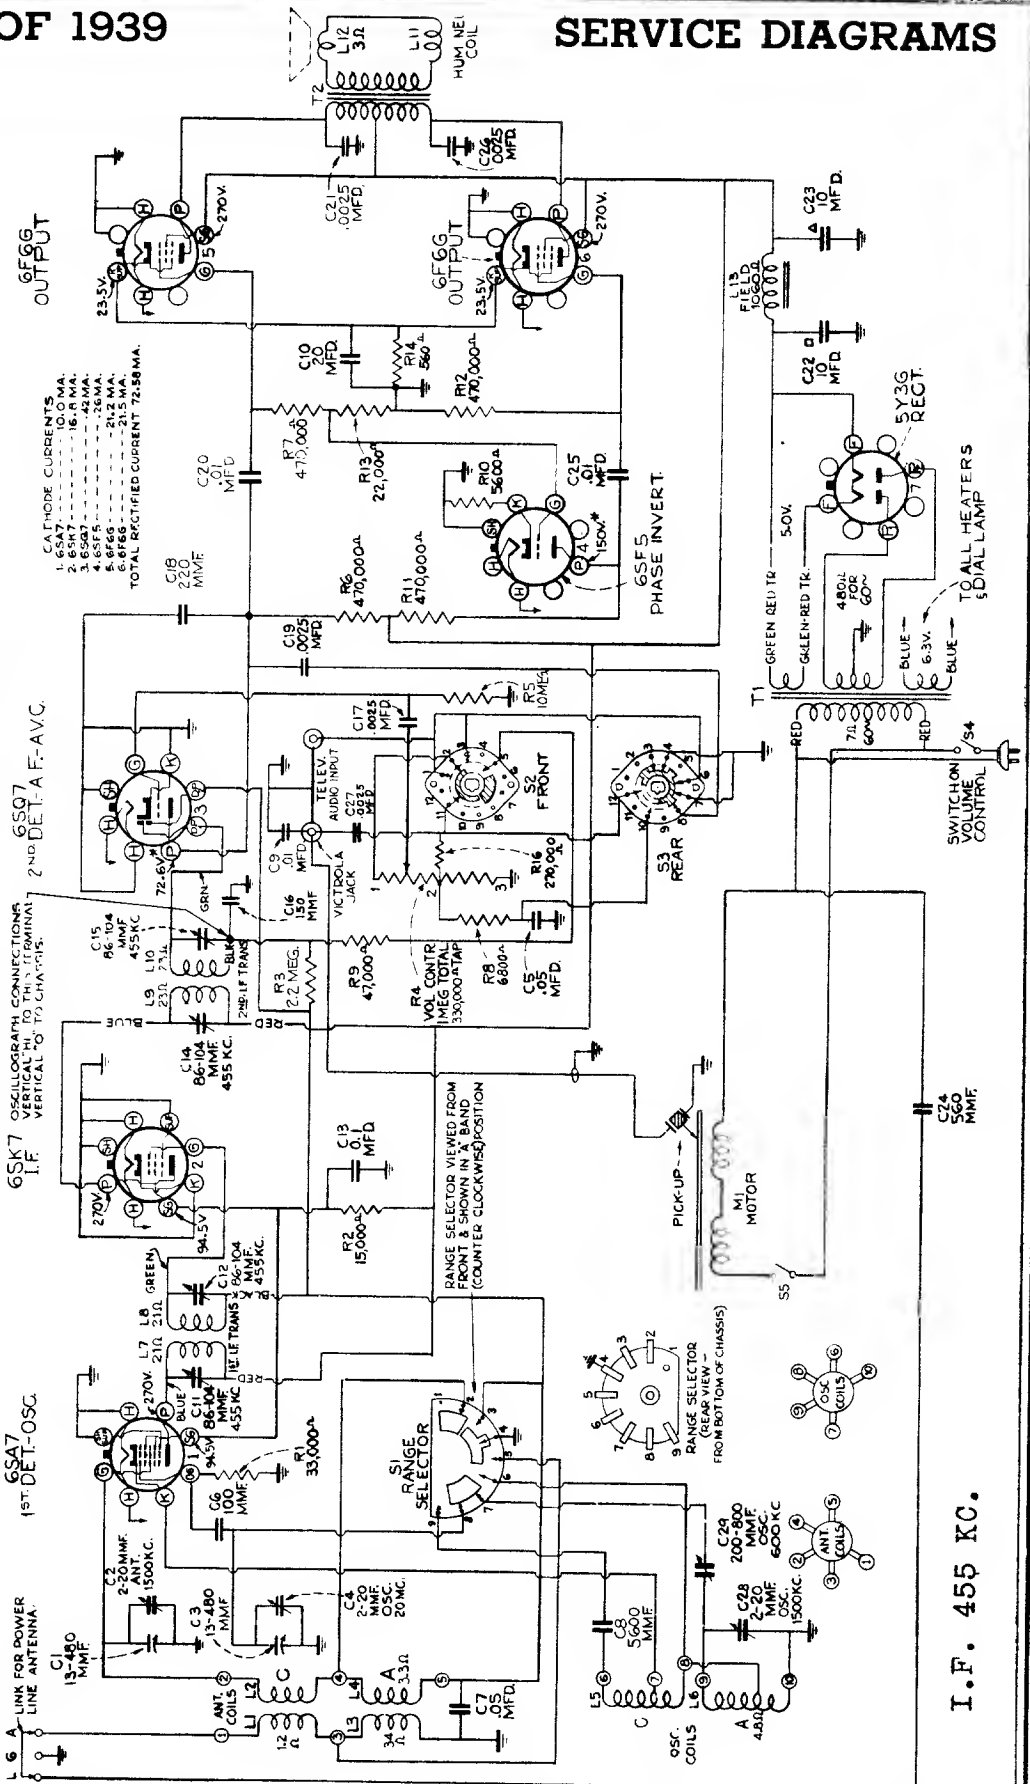


6A TUBE CURRENTS

1. 6SA7	10.0 MA.
2. 6SK7	16.0 MA.
3. 6F6G	42 MA.
4. 6F6G	26 MA.
5. 6F6G	21.5 MA.
6. 6F6G	21.5 MA.

TOTAL RECTIFIED CURRENT 72.58 MA.

I.F. 455 KC.

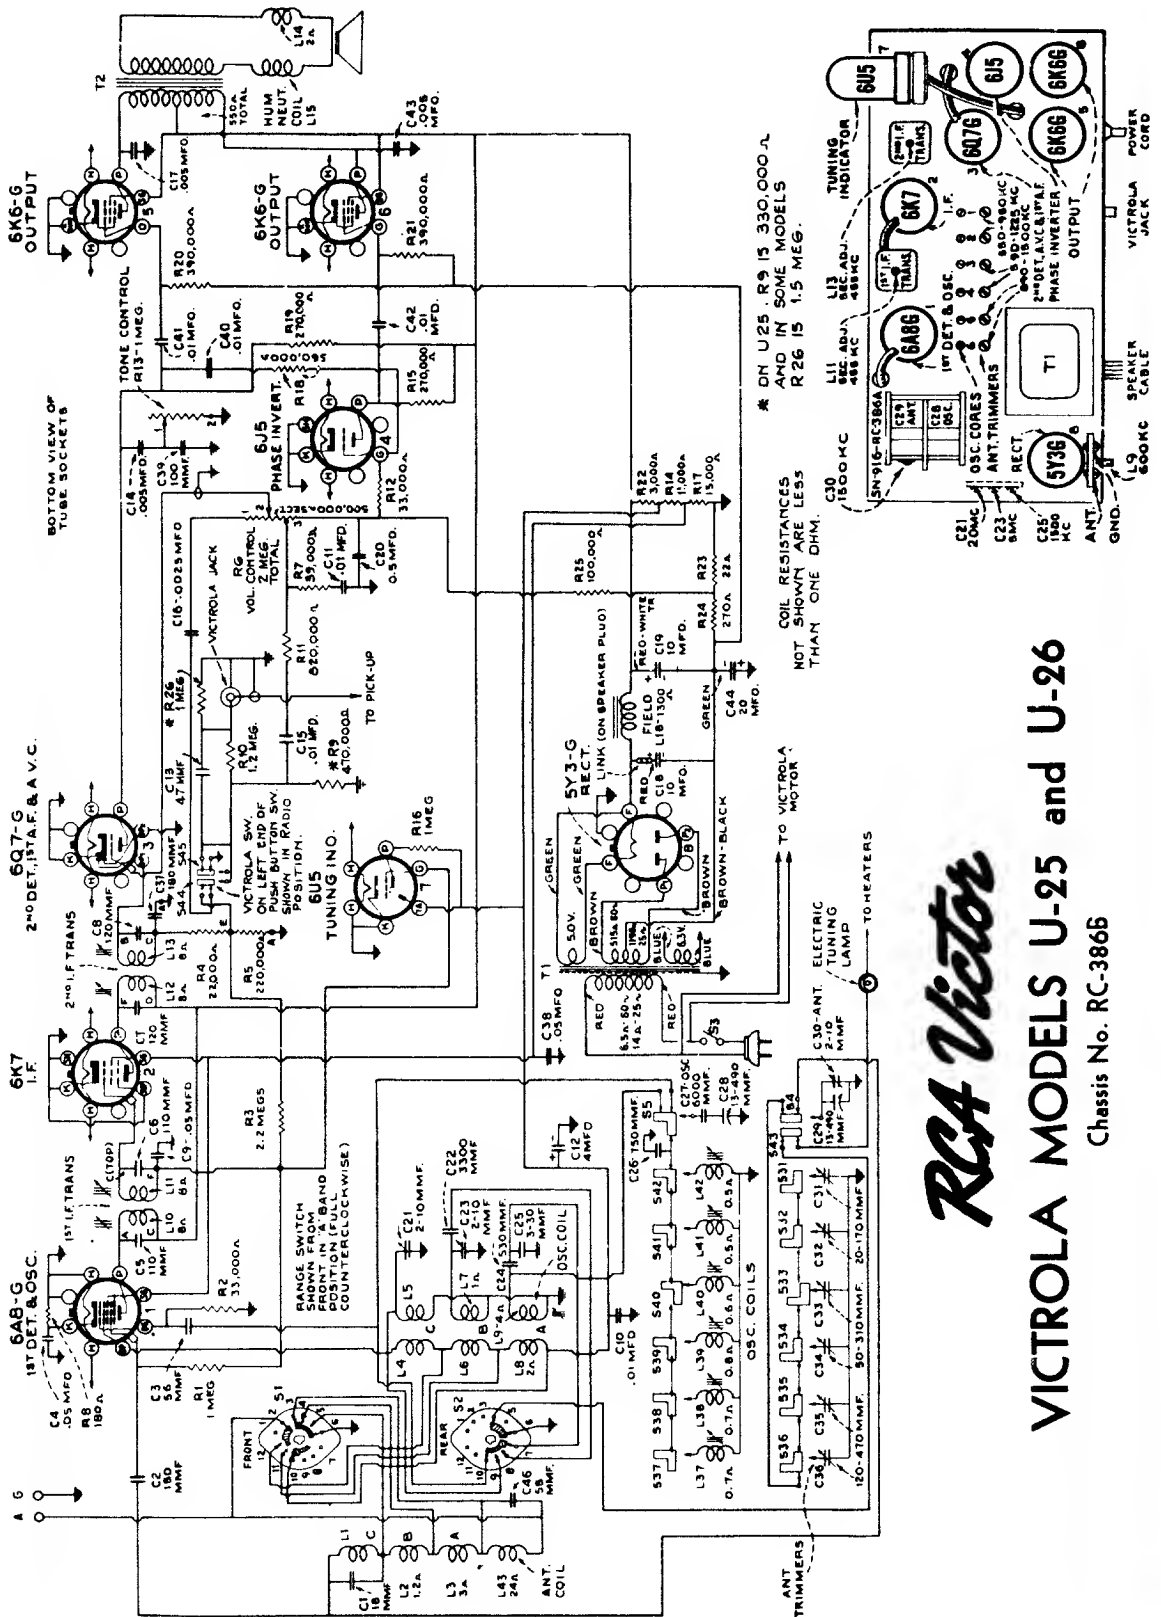

*RCA Victor*

VICTROLA MODELS U-25 and U-26

Chassis No. RC-3865

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Automatic Record Changer

### GENERAL INFORMATION

Before servicing the automatic record changer, inspect the assembly to see that all levers, parts, gears, springs, etc. are in good order and are correctly assembled.

A bind or jam in the mechanism can usually be relieved by rotating the turntable in the reverse direction.

The changer can be conveniently rotated through its change cycle by pushing the index lever to "Reject," and revolving the turntable by hand. Six turntable revolutions are required for one change cycle.

### ADJUSTMENTS

**A. Main Lever.**—This lever is basically important in that it interlinks the various individual mechanisms which control needle landing, tripping, record separation, etc. One adjustment is provided for the main lever. Rotate the turntable until the changer is out-of-cycle; and adjust rubber bumper bracket (A) so that the roller clears the nose of the cam plate by  $1/16$  inch.

**B. Friction Clutch.**—The motion of the tone arm toward the center of the record is transmitted to the trip pawl "22" by the trip lever "7" through a friction clutch "5." If the motion of the pickup is abruptly accelerated or becomes irregular due to swinging in the eccentric groove, the trip finger "7" moves the trip pawl "22" into engagement with the pawl on the main gear, and the change cycle is started. Proper adjustment of the friction clutch "5" occurs when movement of the tone arm causes positive movement of the trip pawl "22" without tendency of the clutch to slip. The friction should be just enough to prevent slippage, and is adjustable by means of screw "B." If adjustment is too tight, the needle will repeat grooves; if too loose, tripping will not occur at the end of the record.

**C. Pickup Lift Cable Screw.**—During the record change cycle, lever "16" is actuated by the main lever "15" so as to raise the tone arm clear of the record by means of the pickup lift cable. To adjust pickup for proper elevation, stop the changer "in-cycle" at the point where pickup is raised to the maximum height above turntable plate, and has not moved outward; at this point adjust locknuts "C" to obtain 1 inch spacing between needle point and turntable top surface.

**D. & E. Needle Landing on Record.**—The relation of coupling between the tone arm vertical shaft and lever "20" determines the landing position of the needle on a 10 inch record. Position of eccentric stud "E" governs the landing of the needle on a 12 inch record; this, however, is dependent on the proper 10 inch adjustment.

To adjust for needle landing, place 10 inch record on turntable; push index lever to reject position and return to the 10 inch position; see that pickup locating lever "17" is tilted fully toward turntable; rotate mechanism through cycle until needle is just ready to land on the record; then see that pin "V" on lever "14" is in contact with "Step T" on lever "17." The correct point of landing is  $4-11/16$  inches from the nearest side of the turntable spindle; loosen the two screws "D" and adjust horizontal position of tone arm to proper dimension, being careful not to disturb levers "14" and "17." Leave approximately  $1/32$  inch end play between hub of lever "20" and pickup base bearing, and tighten the blunt nose screw "D"; run mechanism through several cycles as a check, then tighten cone pointed screw "D".

After adjusting for needle landing on a 10 inch record, place 12 inch record on turntable; push index lever to reject and return to 12 inch position; rotate mechanism through cycle until needle is just ready to land on the record; the correct point of landing is  $5-11/16$  inches from nearest side of spindle. If the landing is incorrect, turn stud "E" until the eccentric end adjusts lever "14" to give correct needle landing. The eccentric end of the stud must always be toward the rear of the motor board, otherwise incorrect landing may occur with 10 inch records.

**F. & G. Record Separating Knife.**—The upper plate (knife) "25" on each of the record posts serves to separate the lower record from the stack and to support the remaining records during the change cycle. It is essential that the spacing between the knife and the rotating record shelf "27" be accurately maintained. The spacing for the 10 inch record is nominally  $.058$  inch, and for the 12 inch record is  $.075$  inch.

To adjust, rotate the knife to the point of minimum

vertical separation from the record shelf and turn screw and locknut "F" to give  $.055-.061$  inch separation. Screw "G" must not be depressed during this adjustment. After setting screw "F" adjust screw "G" so that when its tip is depressed flush with top of record shelf, the vertical spacing between the knife, in its lowest rotational position, and the shelf, is  $.072-.078$  inch.

**H. Record Support Shelf.**—The record shelf revolves during the change cycle to allow the lower record to drop onto the turntable. Both posts are rotated simultaneously by a gear and rack coupled to the main lever "15," and it is necessary that adjustments be such that the record is released from both shelves at the same instant. To adjust, place a 12 inch record on the turntable, rotate mechanism into cycle to the point where tone arm is at maximum distance outward from turntable; lift record upward until it is in contact with both separating knives, then loosen screws "H" and shift record shelves so that the curved inner edges of the shelves are uniformly spaced at least  $1/16$  inch from record edge. Tighten the blunt nose screw "H," run mechanism through cycle several times to check action, then tighten cone pointed screw "H".

*If record shelves or knives are bent, or not perfectly horizontal, improper operation and jamming of mechanism will occur.*

**J. Tone Arm Rest Support (not shown).**—When the changer is out-of-cycle, the front lower edge of the pickup head should be  $5/16$  inch above surface of motor board. This may be adjusted by bending the tone arm support bracket, which is associated with the tone arm mounting base, in the required direction.

**K. Trip Pawl Stop Pin.**—The position of the trip pawl stop pin "K" in relation to the main lever "15" governs the point at which the roller enters the cam. By bending the pin support either toward or away from trip pawl bearing stud, the roller can be made to enter the cam later or earlier, respectively. This adjustment should be made so that the roller definitely clears the cam outer guide as well as the nose of the cam plate.


**Lubrication.**—Petrolatum or petroleum jelly should be applied to cam, main gear, spindle pinion gear, and gears of record posts.

### MISCELLANEOUS SERVICE HINTS

Incorrect adjustment of a particular mechanism of the changer is generally exhibited in a specific mode of improper operation. The following relations between effects on operation and the usual mis-adjustments will enable ready adjustment in most cases.

1. For any irregularity of operation, the adjustment of the main lever "15" should be checked first as in "A".
2. Needle does not land properly on both 10 and 12 inch records—Make complete adjustments "D" and "E".
3. Needle does not land properly on 12 inch record but correct on 10 inch—Effect adjustment "E".
4. Failure to trip at end of record—Increase clutch "5" friction by means of screw "B". Also, see that levers "7" and "12" are free to move without touching each other.
5. Pickup strikes lower record of stack or drags across top record on turntable—Adjust lift cable per adjustment "C".
6. Needle does not track after landing—Friction clutch "5" adjustment "B" may be too tight; bind in tone arm vertical bearing; levers "7" and "12" fouled; or pickup output cable twisted.
7. Cycle commences before record is complete—Record is defective, or adjustment "B" of friction clutch "5" is too tight.
8. Wow in record reproduction—Record is defective; flexible coupling between motor and changer mechanism not correctly assembled; or instrument is not being operated at normal room temperature ( $65^{\circ}$  F).
9. Record knives strike edge of records—Records warped; record edges are rough; or knife adjustments "F" and "G" are incorrect.
10. Record not released properly—Adjust record shelf assemblies in respect to shaft by means of adjustment "H".
11. Needle lands in 10 inch position on 12 inch record or misses record when playing both types mixed—Increase tension of pickup locating lever spring "34".

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS VICTROLA MODELS U-25 and U-26

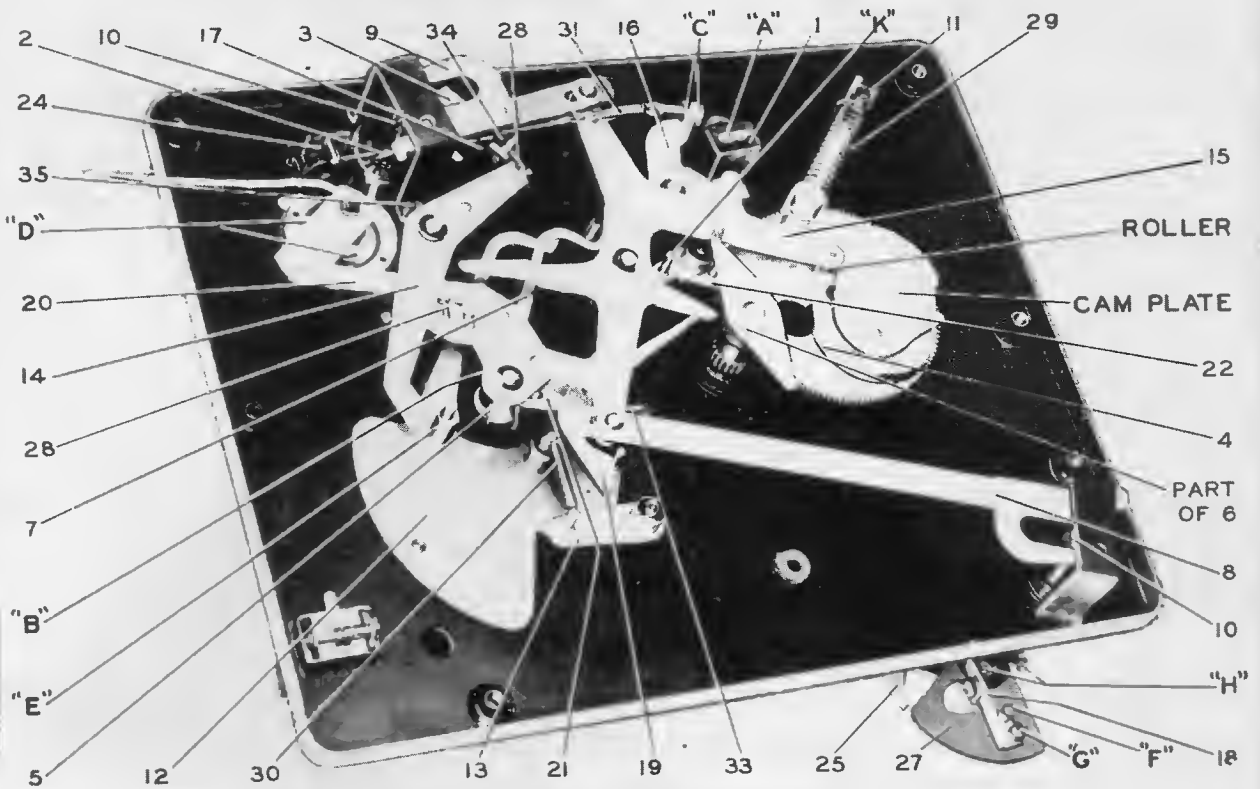

*Bottom View of Automatic Record Changer*

**NOTE:** Numbers refer to parts—letters refer to adjustments.

**SPEED ADJUSTMENT (SCREW) TO DECREASE SPEED TURN CLOCKWISE**

TURN SPEED ADJUSTER SO THE FELT WILL PROTRUDE  $\frac{1}{16}$ " WHEN ALL THE WAY IN. ADJUST GOVERNOR SO AS TO LEAVE  $\frac{1}{16}$ " BETWEEN FELT AND DISC, THEN SECURE BY MEANS OF GOVERNOR SCREW.

ADJUST SO THRT SHAFT IS FREE TO ROTATE WITHOUT END PLAY



REMOVE TO TAKE OFF GOVERNOR

**SPEED ADJUSTMENT LOCK NUT**



OIL  
KEEP FILLED WITH LIGHT OIL TO INSURE SMOOTH OPERATION

DO NOT CHANGE THIS ADJUSTMENT

RCA MFG CO INC  
M-31474-C

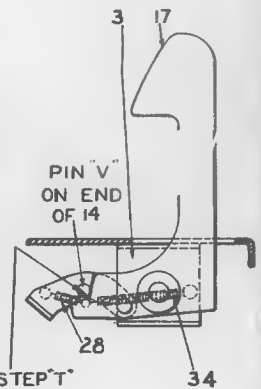
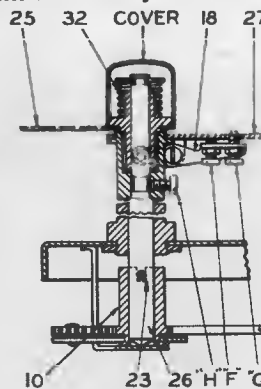


*Details of Record Shelf Posts, and Locating Lever Assemblies*

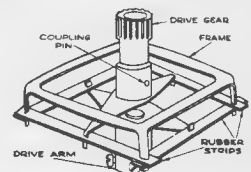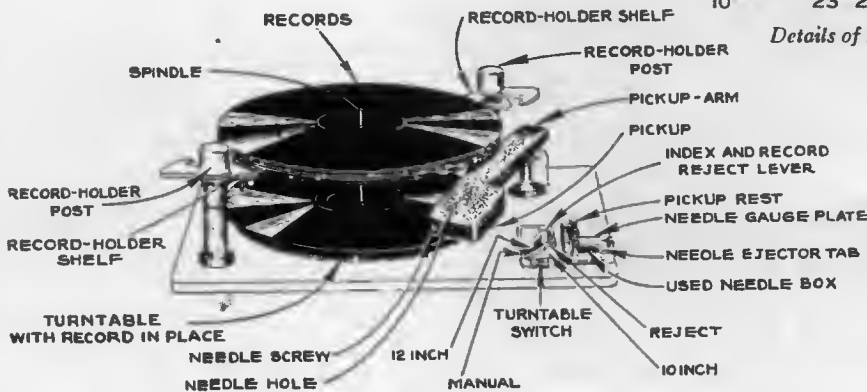



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

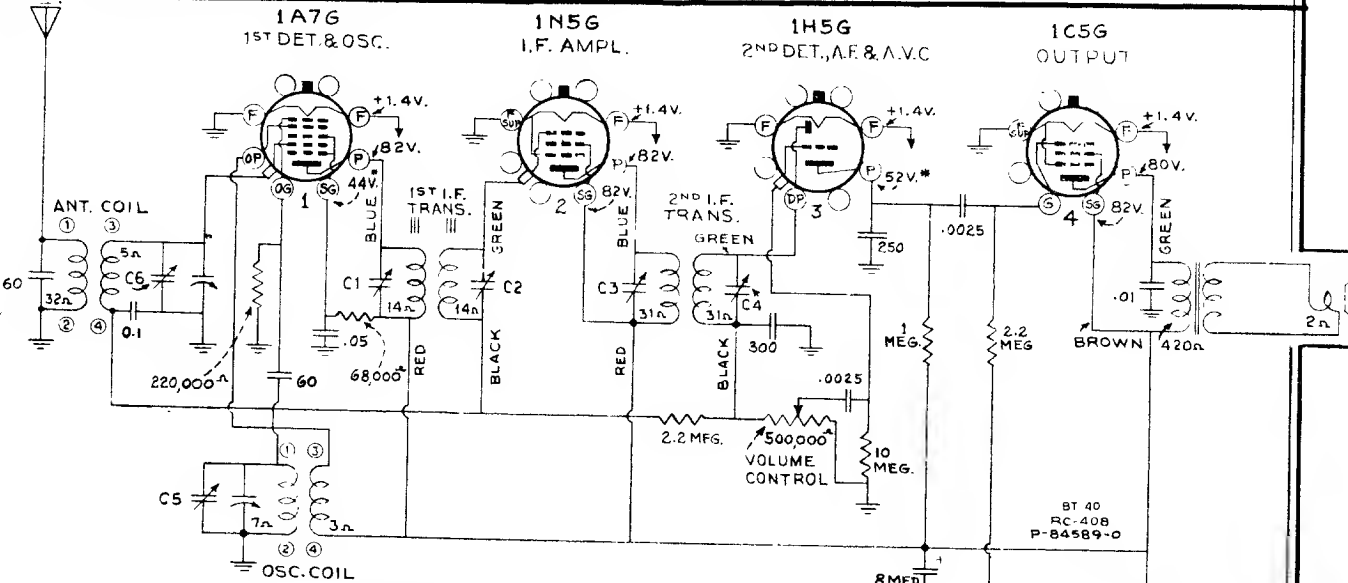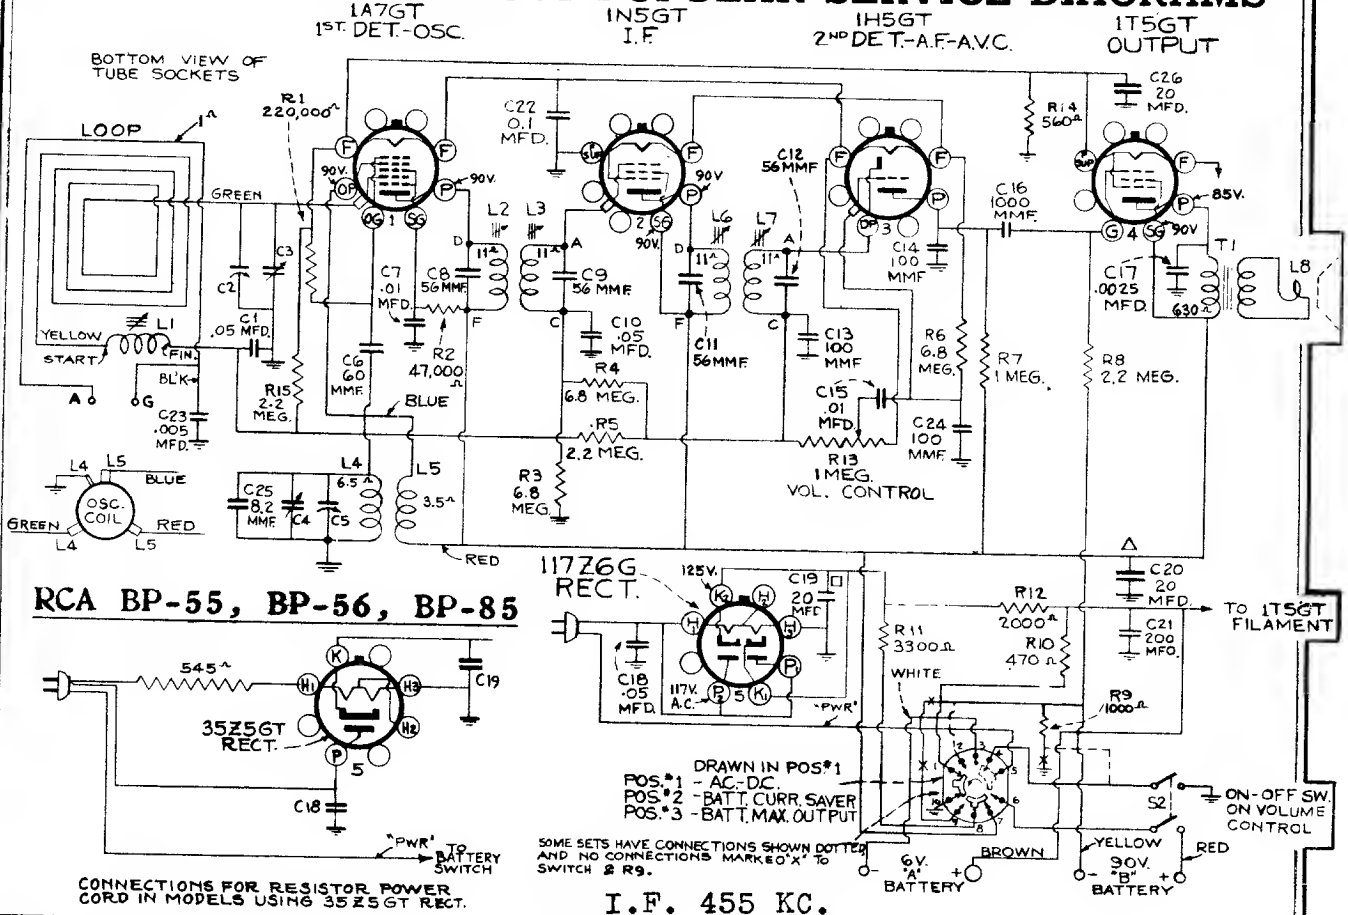

I.F. 455 KC.

**RCA Victor**


**MODEL BT-40**

Chassis No. RC-408


**122**

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

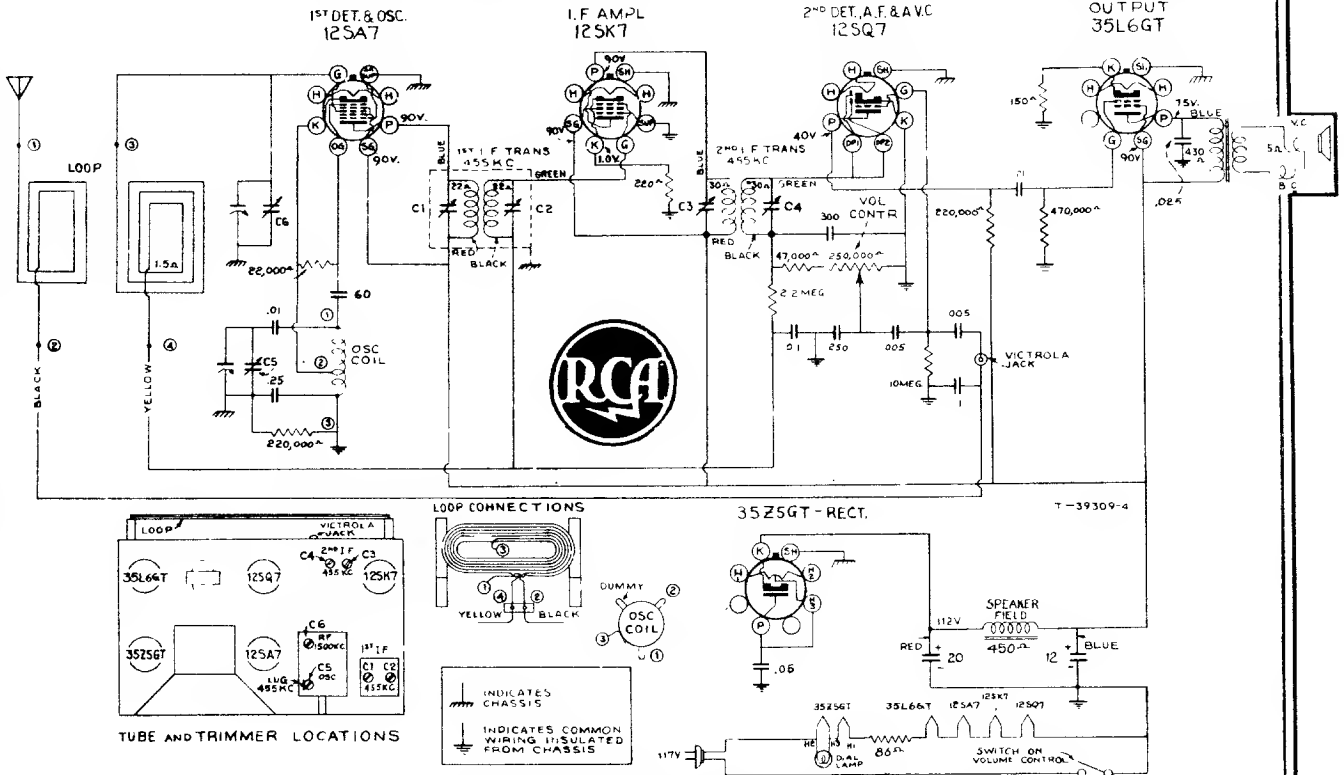

## Models 40X-30 and 40X-31 (Chassis No. RC405C & D)

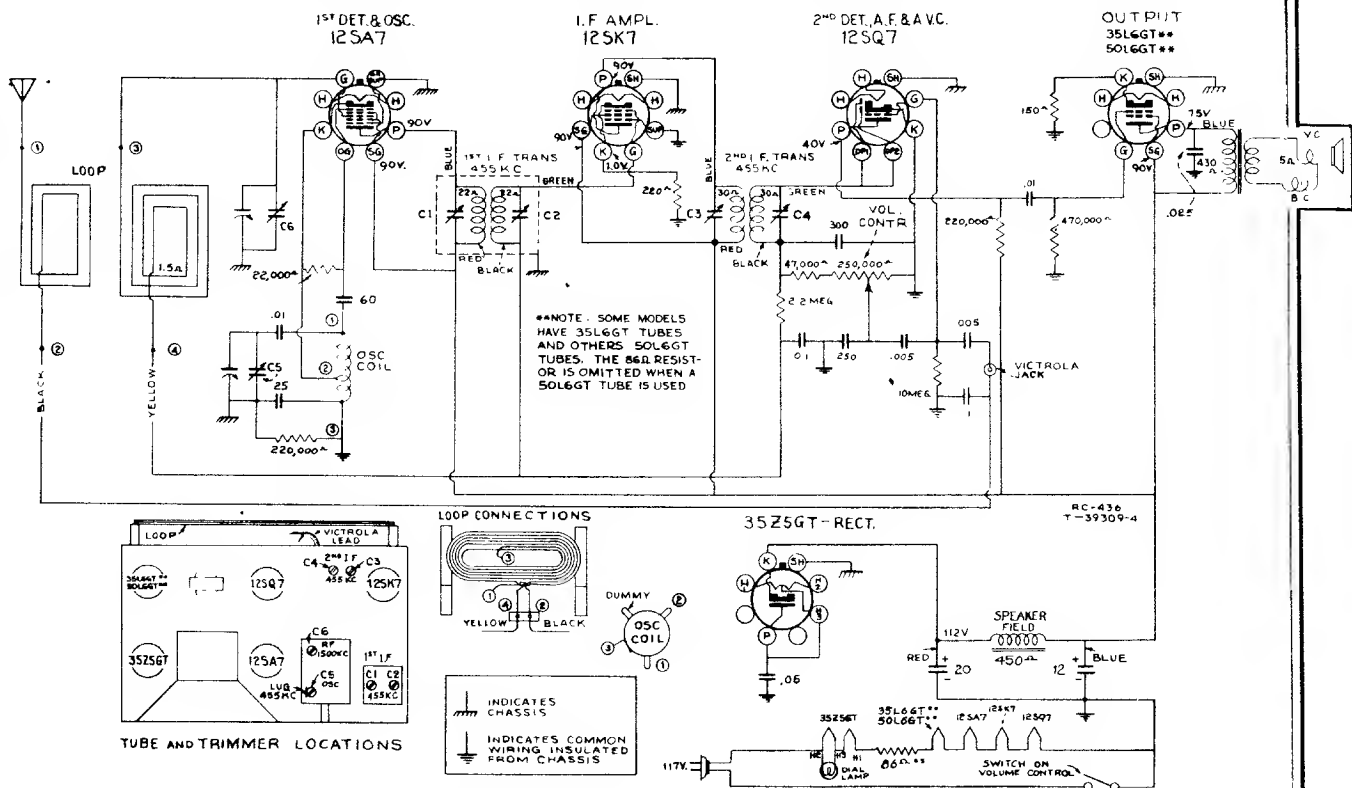


## Model 40X-50 Series (Chassis No. RC-436)


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# 123

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

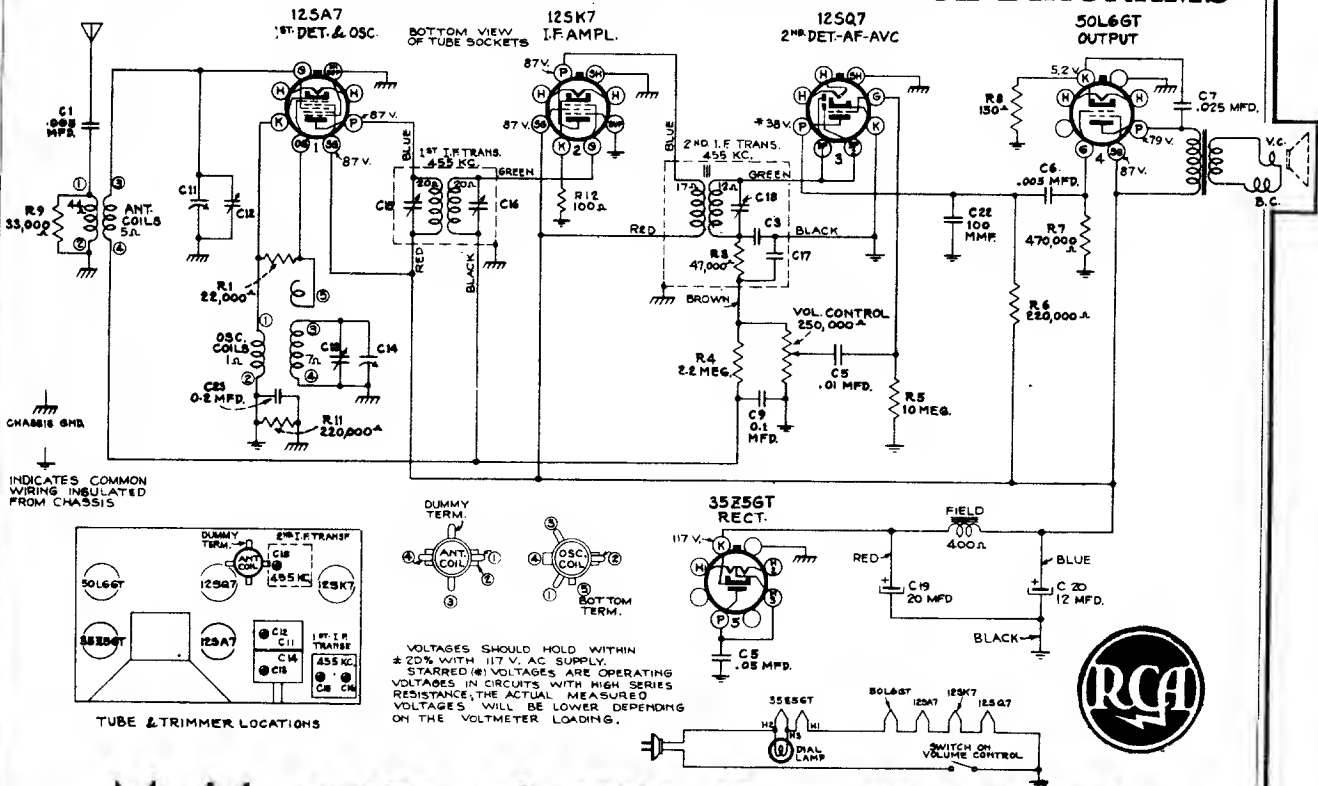


## Models 45X5 and 45X6 (Chassis No. RC-457-D)

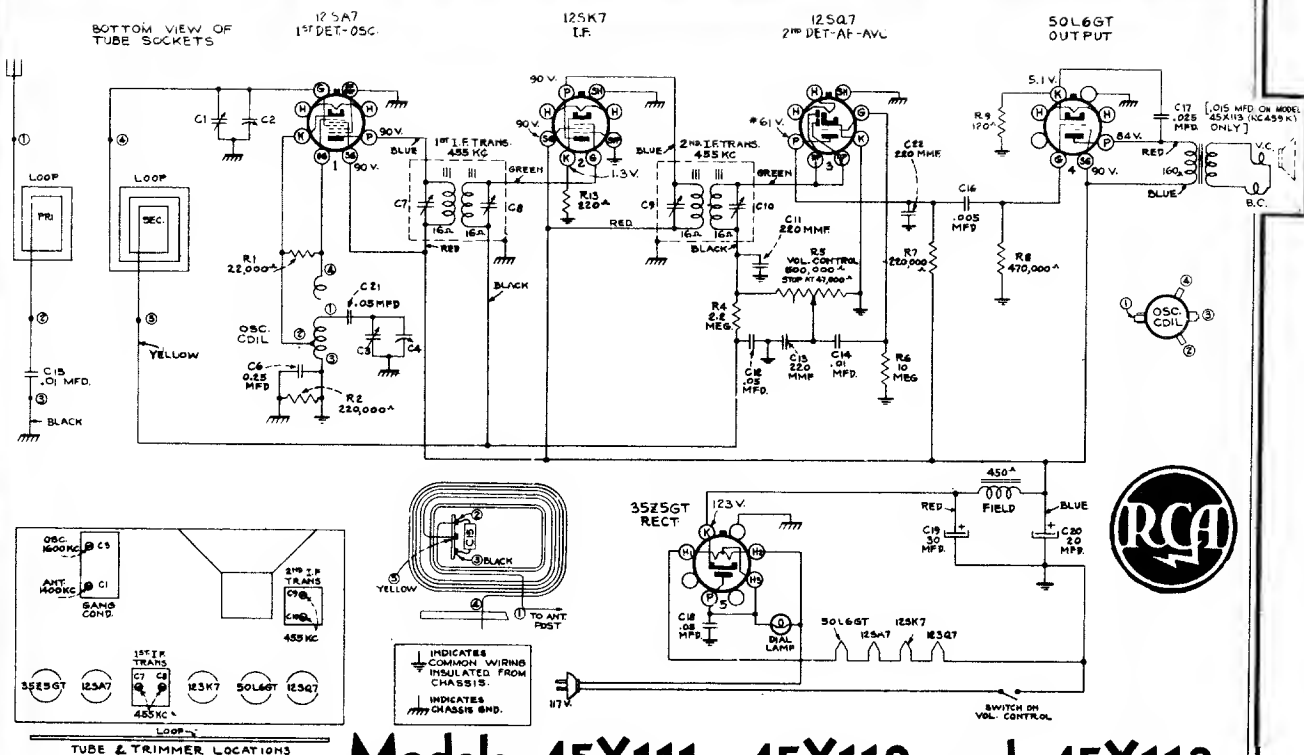


## Models 45X111, 45X112 and 45X113 Chassis Nos. 459J and 459K COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

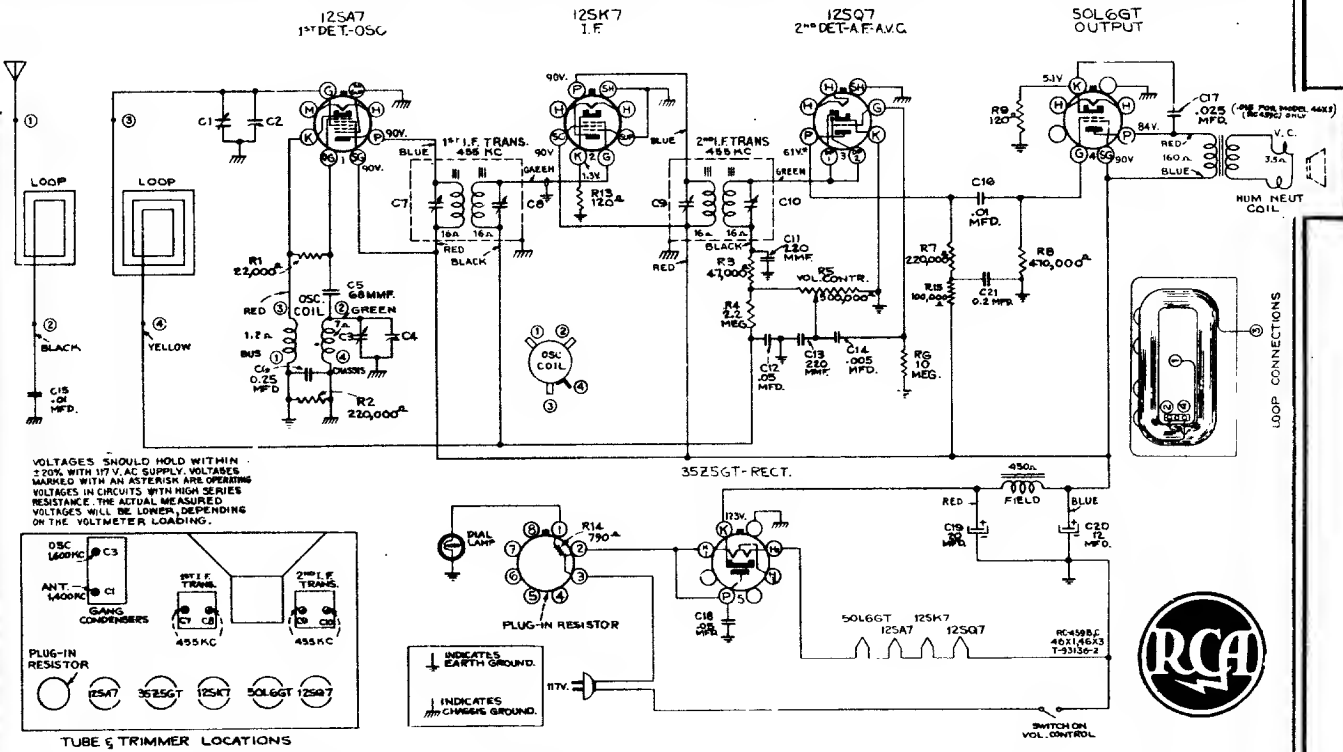



## Models 46X1, 46X2 and 46X3 Chassis Nos. 459B and 459C

## Models 46X11, 46X12, and 46X13 Chassis Nos. RC456 and RC456A

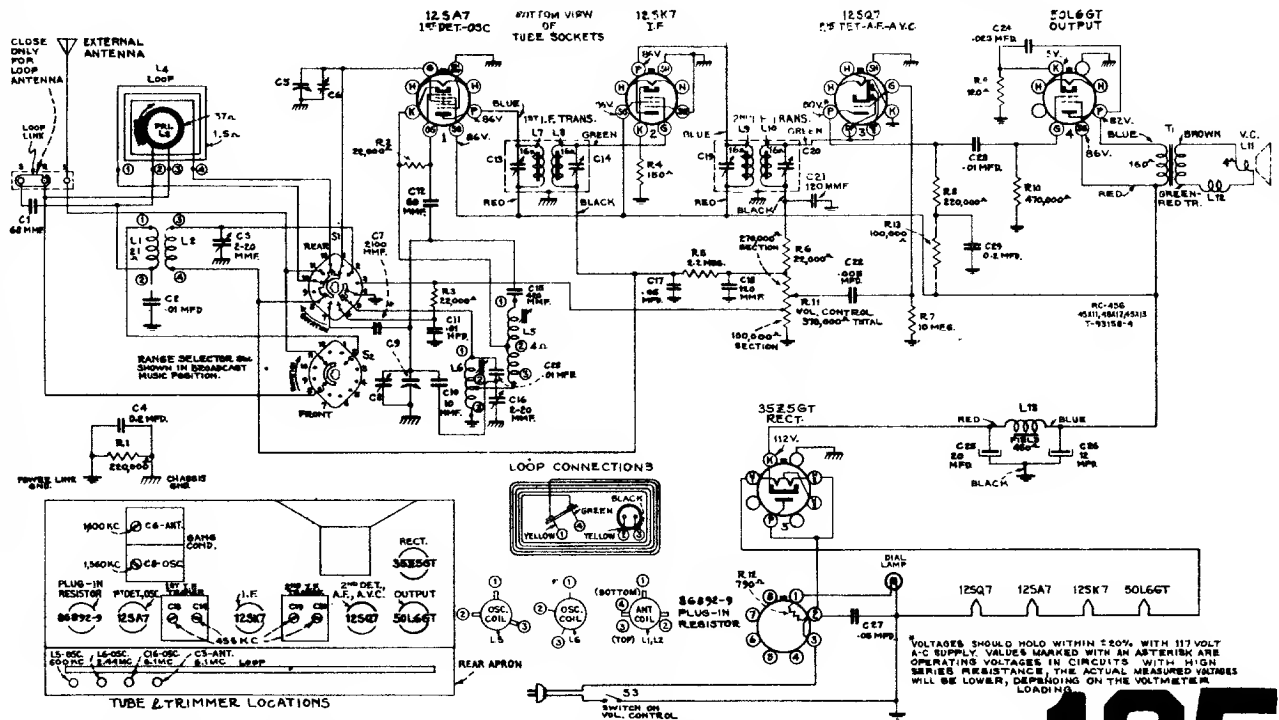

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## RCA Victor Models 46X21, 46X23, and 46X24

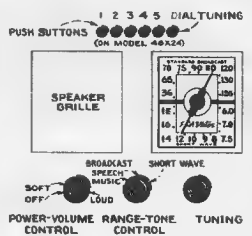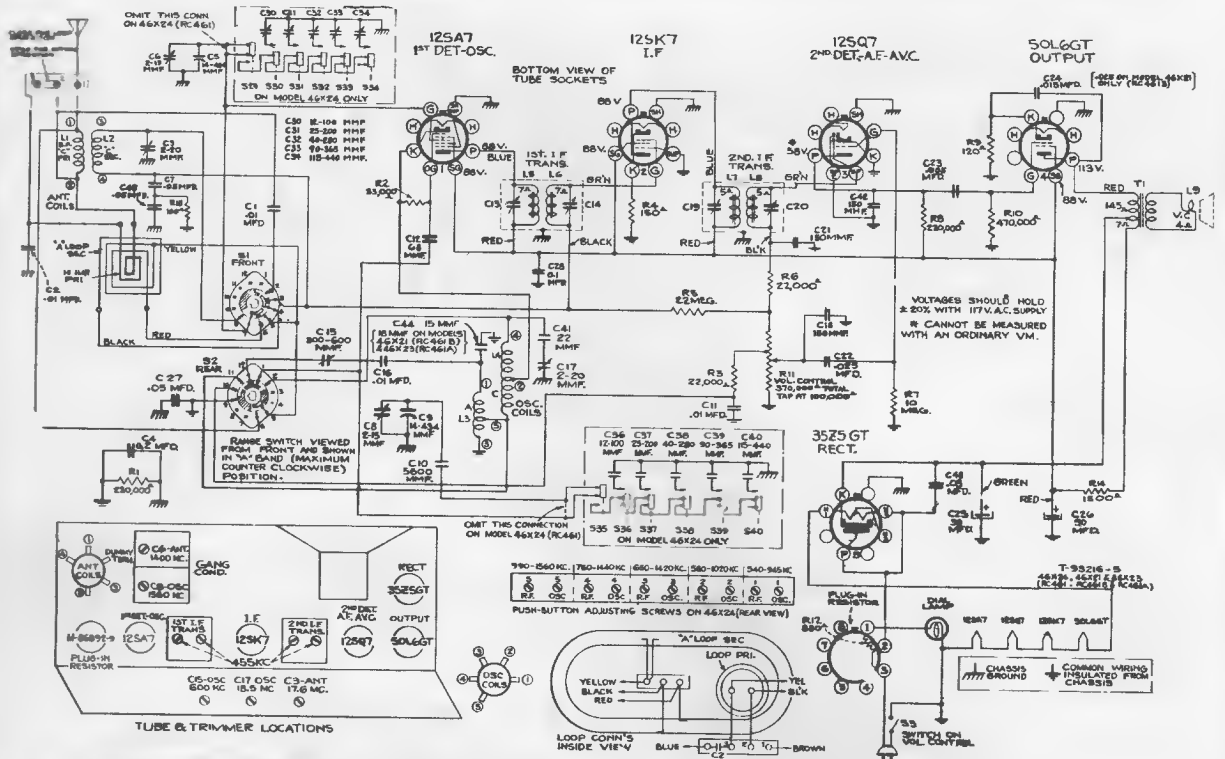

### Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis through a .01 mfd. capacitor, and keep the output as low as possible.

**Pre-Setting Pointer.**—With gang condenser in full mesh, the pointer should be adjusted to a horizontal position.

**Antenna.**—The set is equipped with a built-in loop antenna. If the loop antenna is used, the antenna terminal board link should be closed. This link should be open when an external antenna is used. Connect the external antenna to terminal 1.

### Adjustments for Electric Tuning:

The push buttons and corresponding frequency ranges are given in the schematic diagram. Allow the set to warm up for about 15 minutes and proceed as follows:

- List five desired stations in order of the push button ranges.
- Push in the dial tuning (right hand) button and manually tune in the first station on the list.
- Press button No. 1. Turn R-F screw half way in; next turn the oscillator screw entirely in and then gradually back out until the station is heard.
- Adjust the R-F trimmer for maximum output. (Clockwise adjustment of oscillator and R-F trimmers tunes the circuits to lower frequencies.)
- By turning the set to a position in which reception is weak a final more accurate adjustment may be made.
- Adjust for each of the remaining stations in a similar manner and place corresponding station tabs in recesses above buttons. A "Dial Tuning" tab should be above button No. 6.

### Precautionary Lead Dress:

- Dress all leads away from oscillator and antenna coils.
- Dress cathode resistor (R4) and B+ lead across 12SK7 socket between plate and grid terminals.
- (46X24 only) Dress leads to push button switch straight up and parallel so that they do not touch each other.
- Dress black lead from 1st I-F transformer over green lead.
- Keep plate-cathode bypass (C43) of rectifier tube away from volume control.


Step	Connect high side of test oscillator to—	Tune test oscillator to—	Turn radio dial to—	Adjust following for max. output—
1	Grid 12SK7 in series with 0.01 mfd.	455 kc	"A" Band Quiet Point at 1,550 kc end of dial	C19 and C20 (2nd I-F Trans.)
2	Grid 12SA7 in series with 0.01 mfd.			C13 and C14 (1st I-F Trans.)
3		600 kc	"A" Band 600 kc	C15 (osc.)
4	Antenna in series with 200 mmfd.	1,560 kc	"A" Band Full Clockwise	C8 (osc.)
5		1,400 kc	Resonance on "A" Band	C6 (ant.)
6	Repeat steps 3 (rock in), 4 and 5			
7		18.5 kc	"C" Band Full Clockwise	C17 (osc.)*
8	Antenna in series with 300 ohms	17.8 kc	"C" Band Resonance on 17.8 kc Signal	C3 (ant.)
9	Repeat steps 7 and 8			

\* Use minimum capacity peak if two can be obtained.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


## RCA Victor MODELS K-50 and T-55

Chassis Nos. RC-418A and RC-418

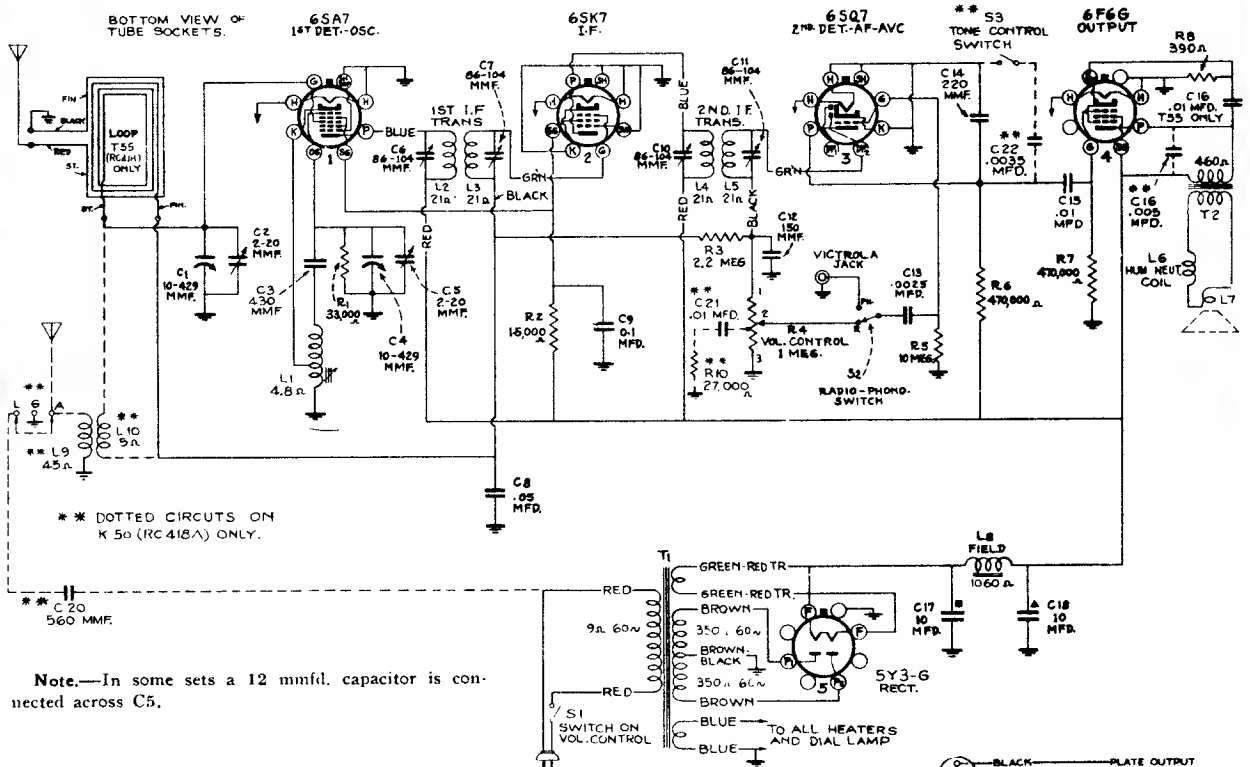

### Adjustments for Push-Button Tuning

1. Pull off the push-buttons and loosen the push-button rods with a small screwdriver.
2. Set the radio-phono switch to "radio" position and accurately tune in the station for which the first button is to be set.
3. Press in push-button rod No. 1 (left) with the screwdriver, as far as it will go without undue pressure, hold in, retune station with manual control if necessary for best reception, and then carefully tighten up the rod. Do not tighten more than 1/4 turn after the rod begins to grip or damage to the mechanism may result.
4. Replace the push-button on its shaft.
5. Proceed in a similar manner for the remainder of the push-buttons
6. Insert the station marker tabs in the recesses above the push-buttons.

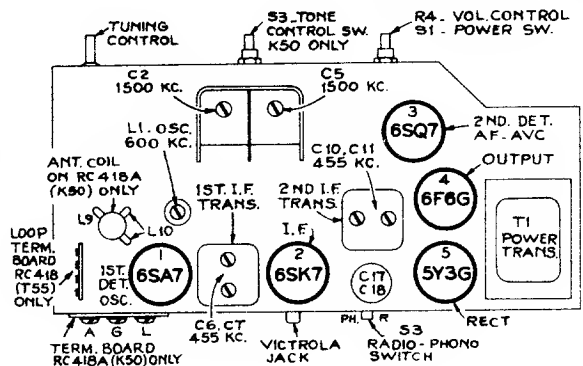


Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to	Adjust the following for maximum peak output
1	Antenna terminal	455 kc	Quiet Point between 1,720-1,500 kc	C10 and C11 (2nd I-F trans.)
2	Antenna terminal			C6 and C7 (1st I-F trans.)
3	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc calibration mark	C5 (osc.) C2 (ant.)
4		600 kc	600 kc calibration mark	L1 (osc.) (Rock in)
5	Repeat step 3			


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Position of Dial Pointer	Generator Frequency	Dummy Antenna	Generator Connection	Adjustment Symbol	Circuit Adjusted
No Signal 550-750 kc	455 kc	.001 mfd.	6K7 Grid	L-10	2nd I.F. Trans.
No Signal 550-750 kc	455 kc	.001 mfd.	6A8 Grid	L-8, L-9	1st I.F. Trans.
1,400 kc	1,400 kc	.0001 mfd. †	Ant. Lead	C-3	Ant.
600 kc	600 kc	.0001 mfd. †	Ant. Lead	L-2	Ant.
1,400 kc	1,400 kc	.0001 mfd. †	Ant. Lead	C-3*	Ant.

NOTE: No oscillator alignment adjustments are required in this receiver.

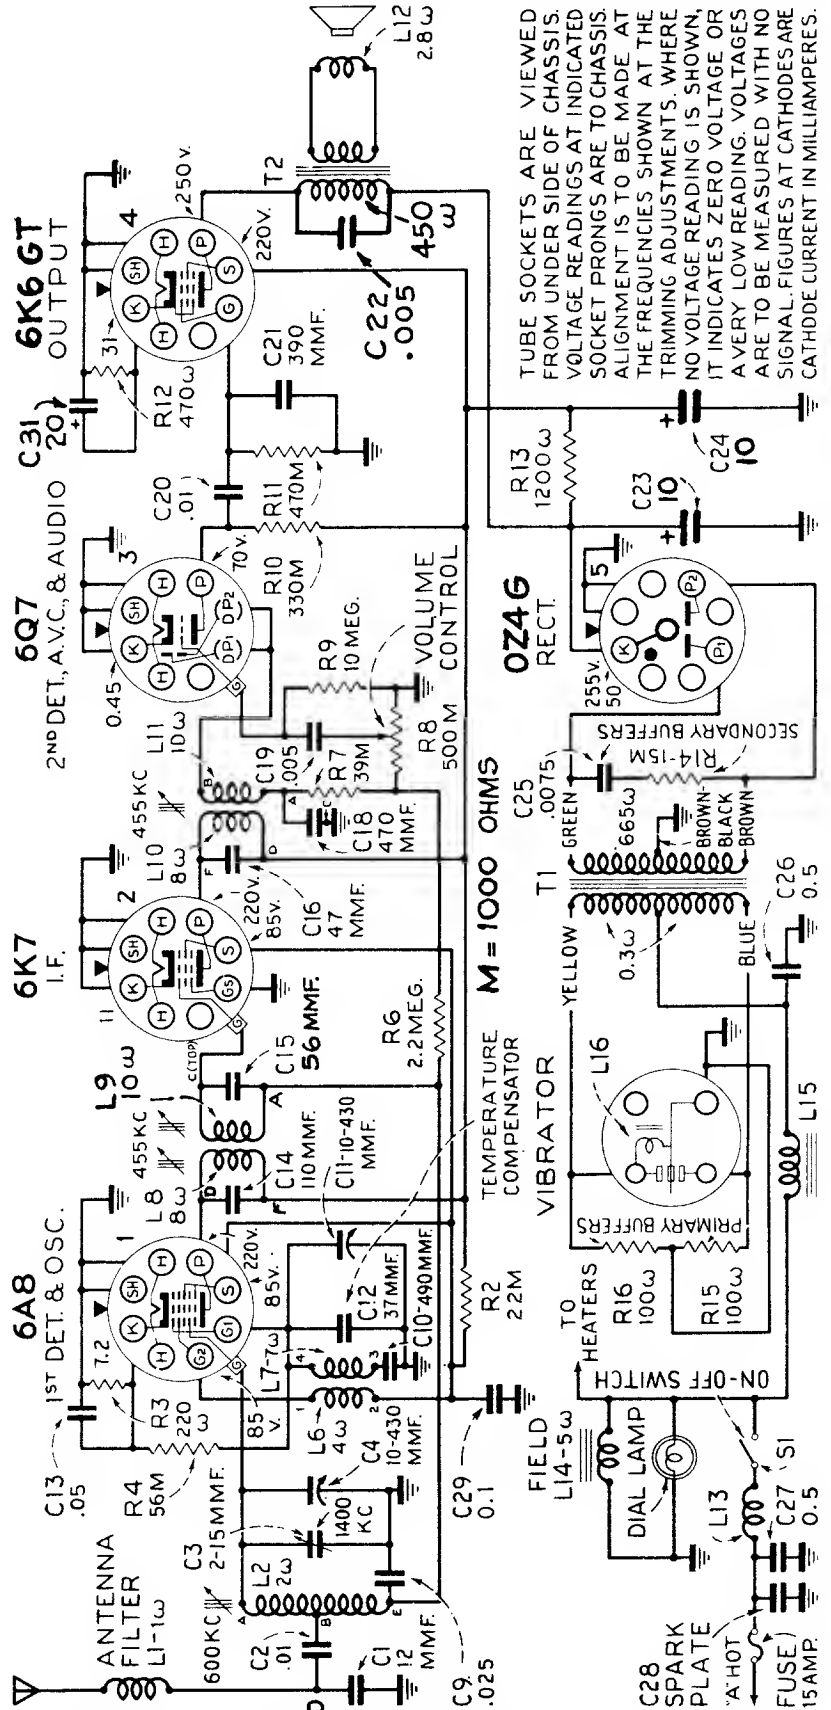


TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS AT INDICATED SOCKET PRONGS ARE TO CHASSIS. ALIGNMENT IS TO BE MADE AT THE FREQUENCIES SHOWN AT THE TRIMMING ADJUSTMENTS. WHERE NO VOLTAGE READING IS SHOWN, IT INDICATES ZERO VOLTAGE OR A VERY LOW READING. VOLTAGES ARE TO BE MEASURED WITH NO SIGNAL. FIGURES AT CATHODES ARE CATHODE CURRENT IN MILLIAMPERES.

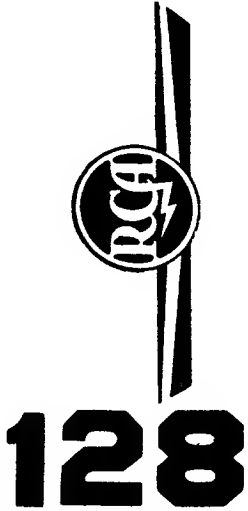

**MODEL M50**  
Chassis No. RC 357J

# MOST POPULAR SERVICE DIAGRAMS

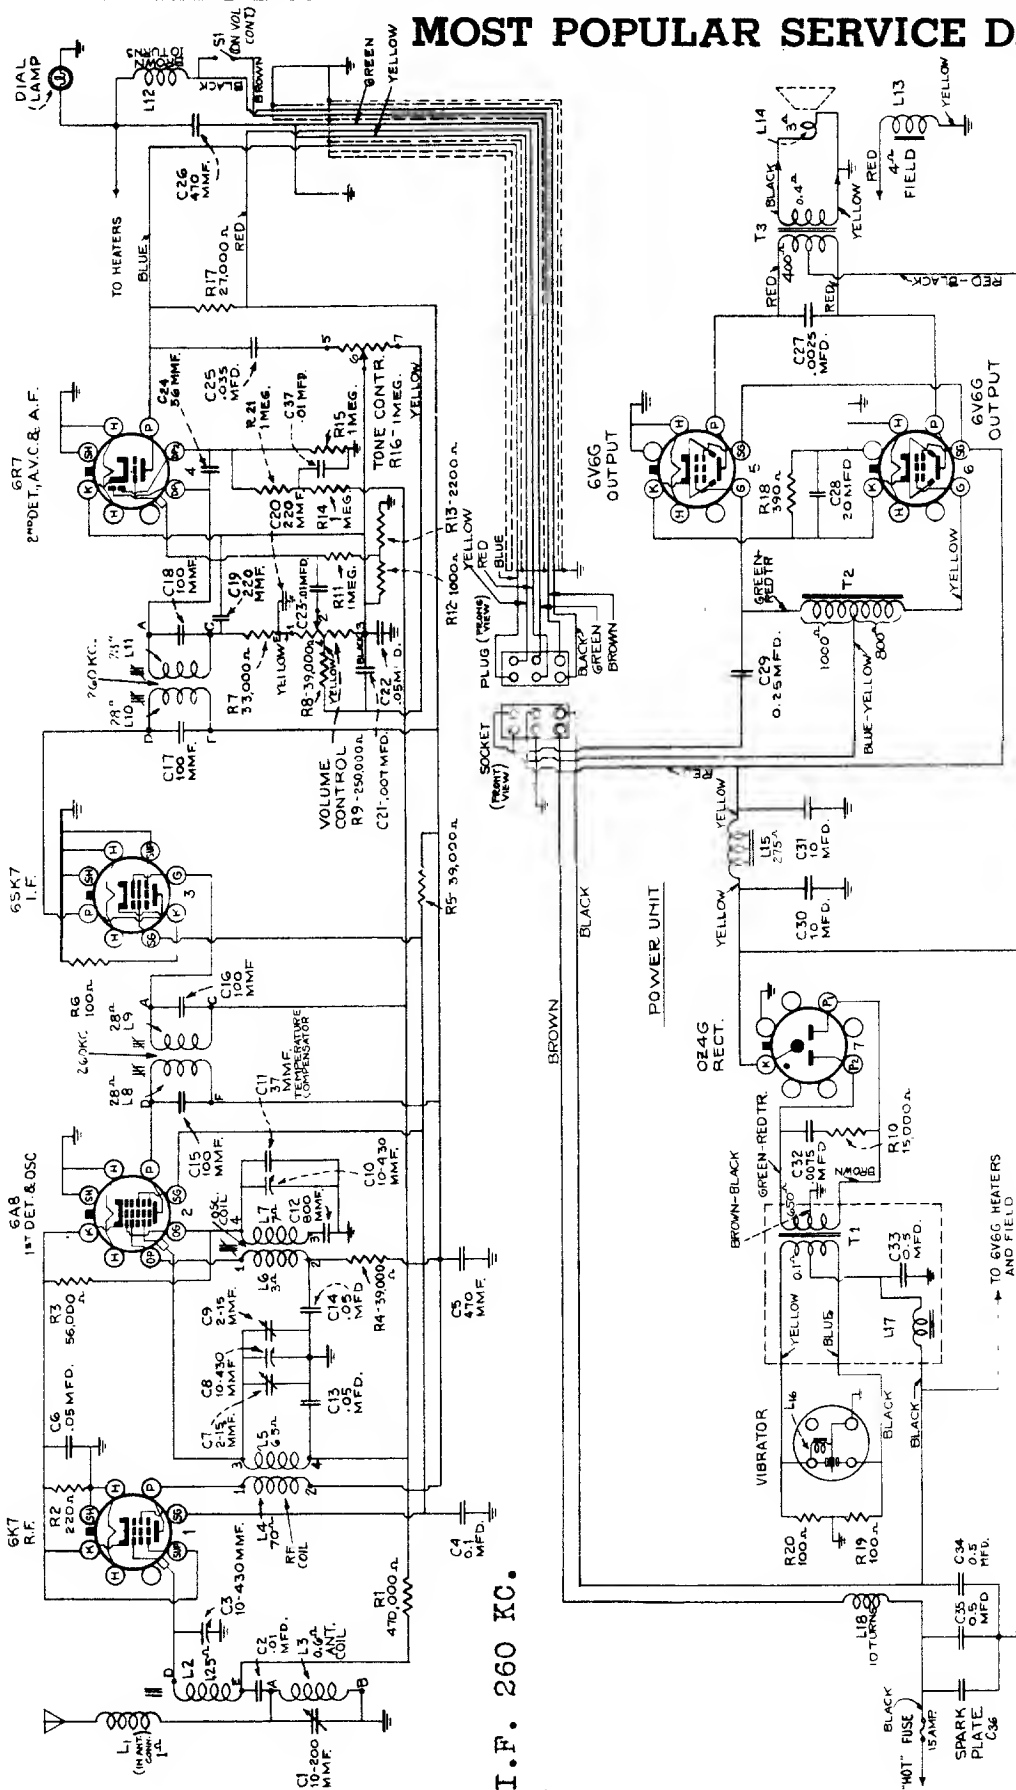

I. F. 260 KC.


**MODEL M-70**  
Chassis No. RC-394

*RCA Victor*

**129**



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

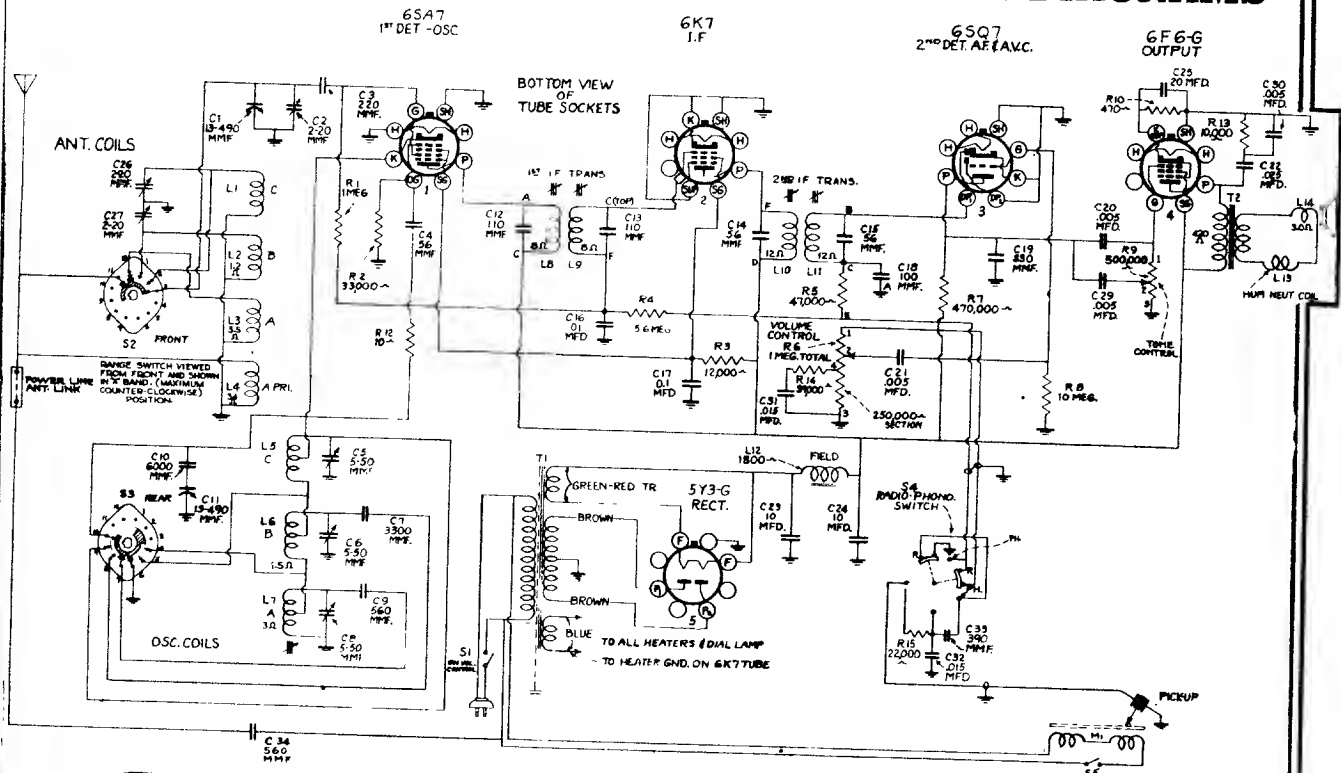

## RCA Victor MODEL U-50 CHASSIS No. RC-414C

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" Band quiet point between 550-750 kc	L10 and L11 (2nd I.F. trans.)
2	Tuning condenser stator (osc.) in series with .01 mfd. **	455 kc	1,500 kc (152.4°) "A" Band	L8 and L9 (1st I.F. trans.)
3	Antenna lead in series with 200 mmfd.	600 kc	600 kc (33°) "A" Band	L7†
4		1,500 kc	1,500 kc (152.4°) "A" Band	C2 (ant.) C8 (osc.)
5	Repeat steps 3 and 4			
6	Antenna lead in series with 400 ohms	20 mc	20 mc (155.4°) "C" Band	C5 (osc.) * C26 (ant.)
7		6 mc	6 mc (149°) "B" Band	C8 (osc.) * C27 (ant.)
8	Antenna lead in series with 200 mmfd.	1,500 kc	1,500 kc (152.4°) "A" Band	C8 (osc.)

Cathode-Ray Alignment is the preferable method. Connections for the oscillograph are shown in the chassis drawing.

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.


Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

Calibration Scale On Indicator-Drive-Cord Drum.—In most cases it will not be necessary to remove the chassis from the dial scale for alignment, allowing the dial scale to be used for calibration. However, if alignment is made with the receiver chassis removed, the calibration scale attached to the rear of the drum which is mounted on the front shaft of the gang condenser is read on this scale, which is used. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 135° mark on the drum scale must be vertical, and directly under the center of the gang-condenser shaft when the plates are fully meshed. The drum is held in place by one set-screw, which must be securely tightened when the drum is in the correct position.


Pointer for Calibration Scale.—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the 0° mark on the calibration scale when the plates are fully meshed.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

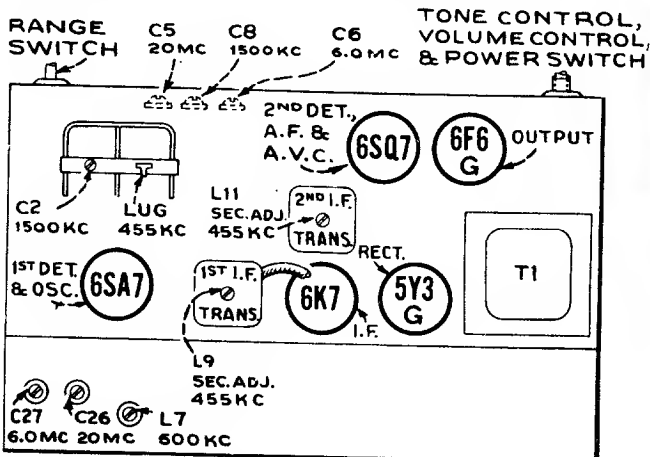

\* Use minimum capacity peak if two peaks can be obtained.  
† Rock gang condenser slightly while adjusting L7.  
\*\* Make test-oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.  
Note.—Oscillator tracks 455 kc above signal on all bands.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS MODEL T-80 Eight-Tube, Three-Band, AC, Superheterodyne

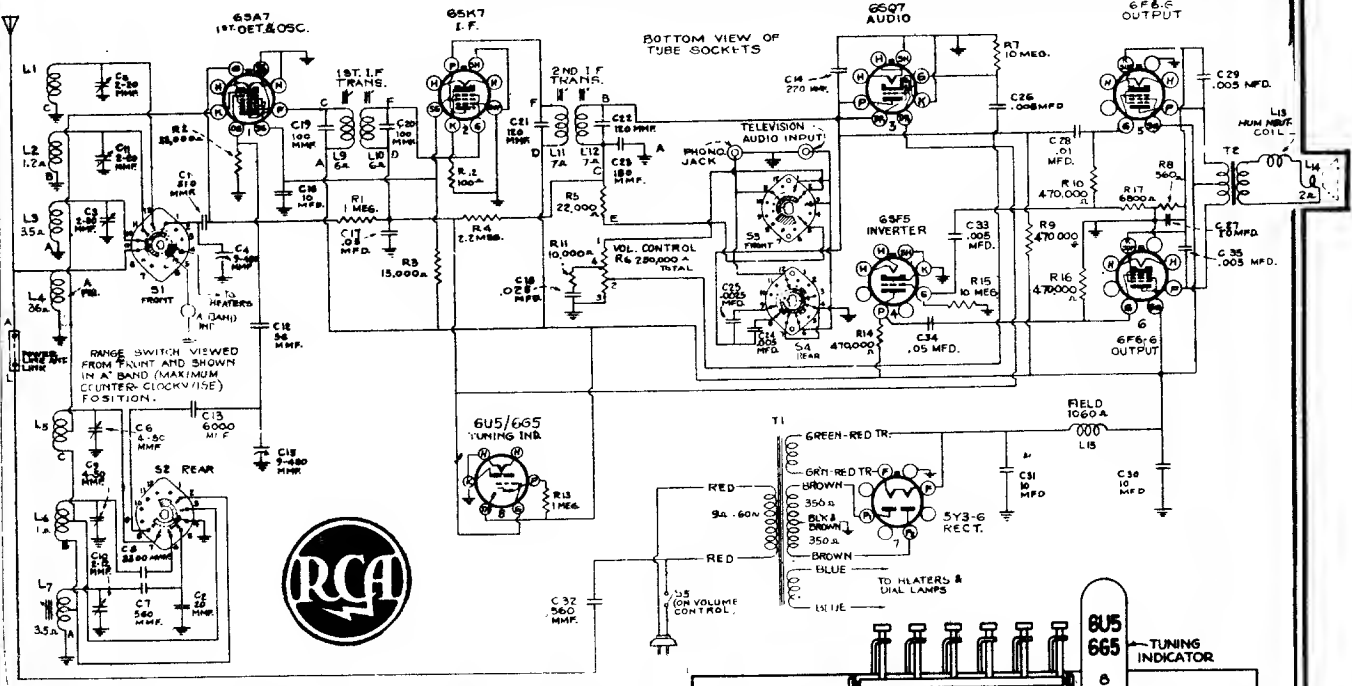


Steps	Connect the high side of the test-osc. to—	Tune test osc. to—	Turn radio dial to—	Adjust the following for maximum peak output
1	6SK7 grid in series with .01 mfd.	455 kc	"A" Band Quiet Point between 550-750 kc	L11 and L12 (2nd I-F Trans.)
2	6SA7 grid in series with .01 mfd.			L9 and L10 (1st I-F Trans.)
3	Ant. terminal in series with 300 ohms	20 mc	20 mc (40°)	C8 (osc.)* C6 (ant.)
4		6 mc	6 mc (52.5°)	C9 (osc.)** C11 (ant.)
5	Ant. terminal in series with 200 mmfd.	1,500 kc	1,500 kc (41.75°)	C10 (osc.) C3 (ant.)
6		600 kc	600 kc (200.25°)	L7 (osc.) Rock Gang
7	Repeat step 5.			

\* Use minimum capacity peak if two can be obtained. Check to determine that C8 has been adjusted to correct peak by tuning receiver to approximately 19.09 mc where a weaker signal should be received.

\*\* Use minimum capacity peak if two can be obtained. Check to determine that C9 has been adjusted to correct peak by tuning receiver to approximately 5.09 mc where a weaker signal should be received.

Note: Oscillator tracks above signal on all bands.

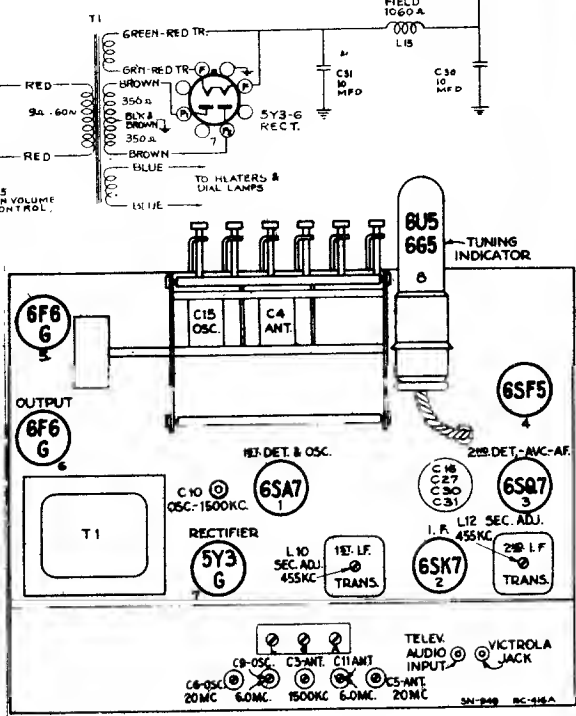

**Cathode-Ray Alignment** is the preferable method. Connections for the oscillograph are shown in the chassis drawing.


**Output Meter Alignment.**—If this method is used, connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

**Calibration Scale on Indicator-Drive-Cord-Drum.**—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment; therefore, a calibration scale is attached to the tuning drum. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.


As the first step in r-f alignment, check the position of the drum. The 240° mark on the drum scale must be vertical and directly above the center of the shaft of the tuning drum when the plates are fully meshed. The drum is held to the shaft by means of two set-screws, which must be tightened securely when the drum is in the correct position.

On the inner side of the tuning drum are two projections which serve as stops to prevent extreme rotation of the gang condenser. The tuning drum should be set so that the stop limiting clockwise movement of the drum takes effect just as the gang condenser plates are becoming fully meshed, thus preventing stress on the gang due to extreme rotation.

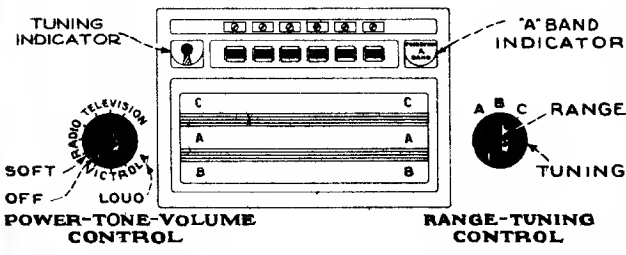


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

RANGE SWITCH SHOWN IN MAX. COUNTERCLOCKWISE "PUSH BUTTON" POSITION.

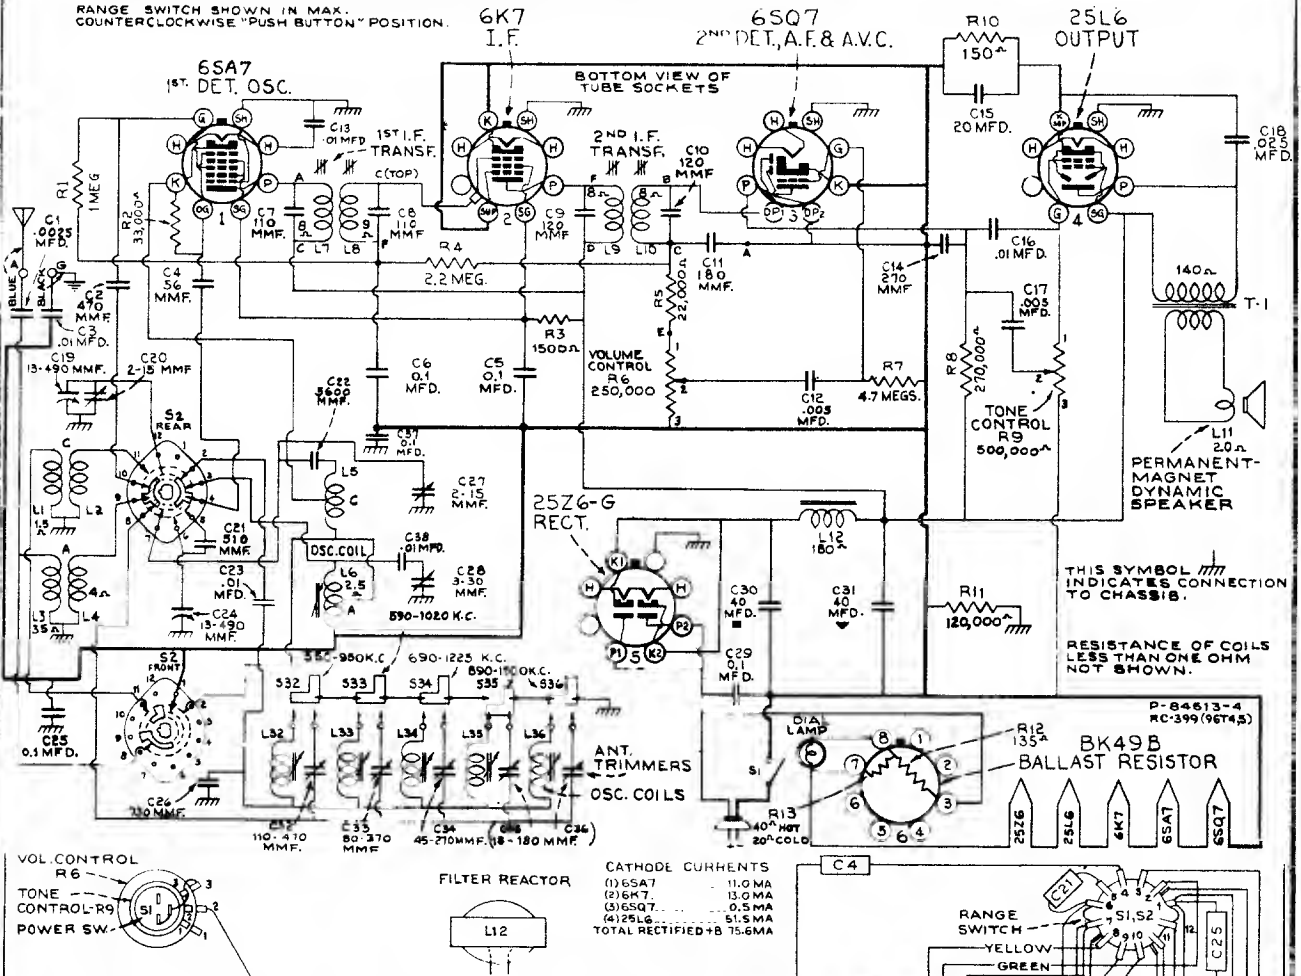

Measurements made to low-side of volume control unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within  $\pm 20\%$  with 117 volt a-c supply.

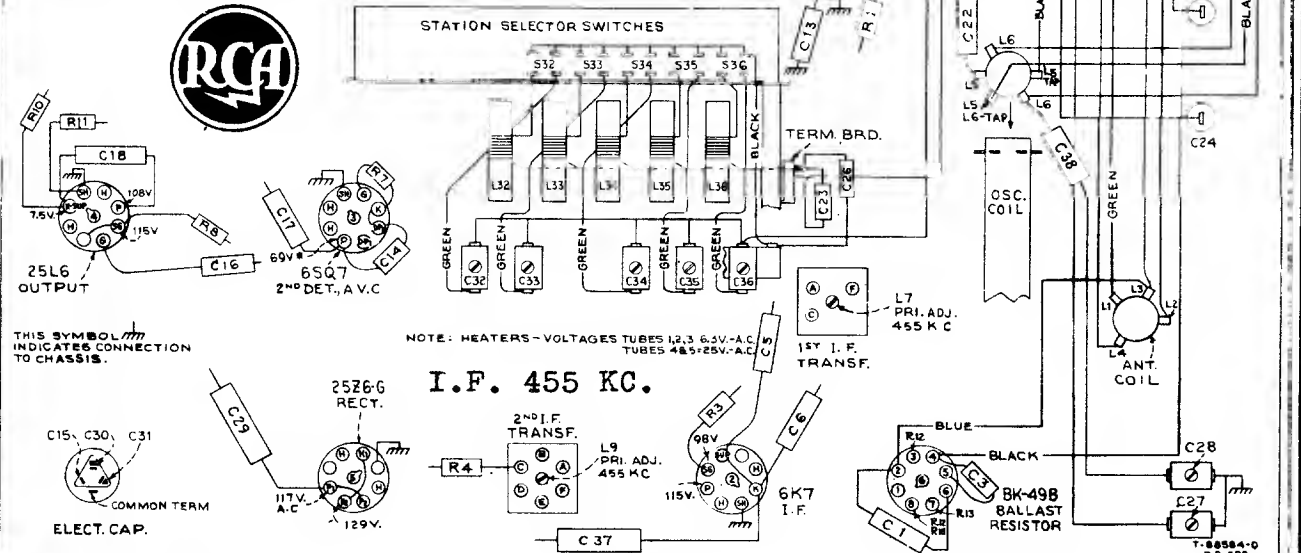

# 132

Models 96T4, 96T5 and 96T6  
 COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## RCA Victor


### MODELS 96X-1, -2, -3, -4 and -11, -12, -13, -14

Chassis No. RC-400

and

RC-400A

### Six-Tube, Two-Band, A-C—D-C, Superheterodyne Receivers

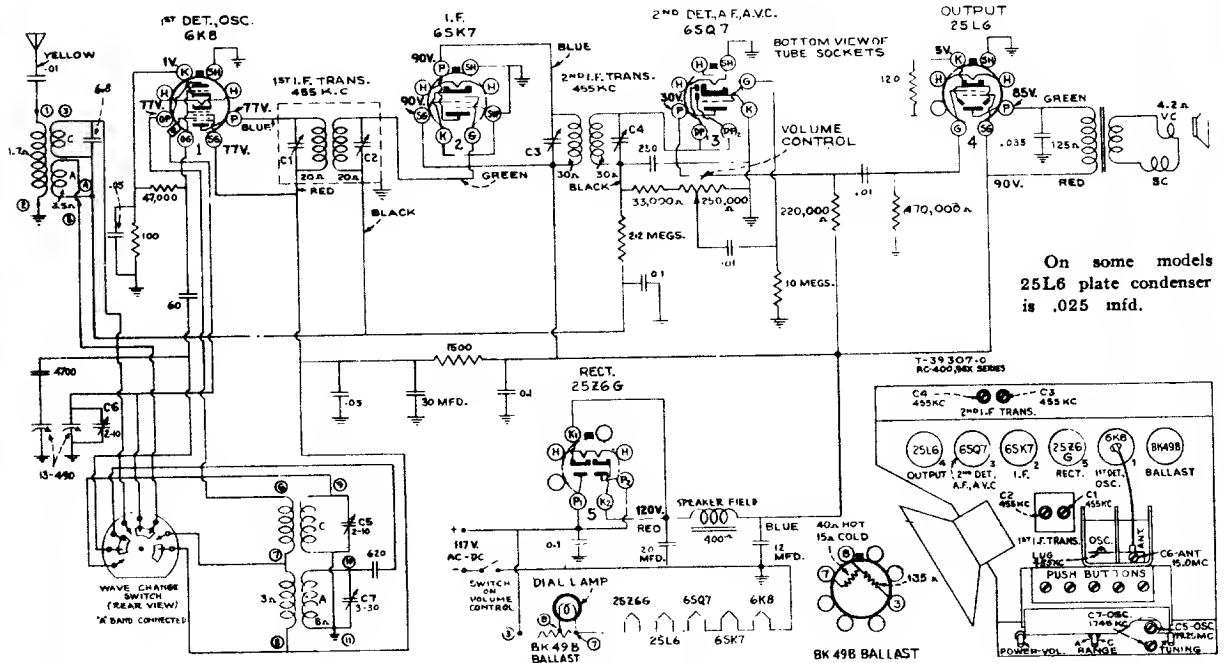


### Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible.

**Dial Setting.**—To set dial indicator drum, turn tuning condensers fully clockwise and then counter-clockwise.

**Push-button Adjustments.**—Remove bakelite button and loosen screw two turns with a screwdriver or coin. Tune in the desired station by means of the right-hand control knob. Press push lever down as far as it will go and tighten screw. Release lever and put on push-button.

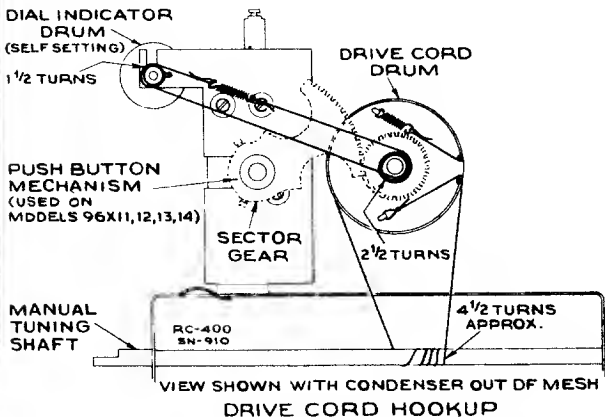

Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	Tuning condenser stator (osc.) in series with .01 mfd.†	455 kc	Quiet point between 550-750 kc	C1, C2, C3, C4 (1st and 2nd I-F transformer)
2	Antenna lead (yellow) in series with 400 ohms	19.25 mc	Full clockwise (out of mesh) "C" band	C5* (osc.)
3	Same as step 2	15.0 mc	15.0 mc Test oscillator signal	C6** (ant.) See Note No. 1
4	Antenna lead in series with 200 mmf condenser	1,745 kc	Full clockwise (out of mesh) "A" band	C7 (osc.)

\* Use minimum capacity peak if two peaks can be obtained.

\*\* Rock gang slightly and check to determine that C5 has been adjusted to the correct peak by tuning to approximately 14.09 mc, where a weaker signal should be received.


† Make test oscillator connection to lug on tuning condenser stator (oscillator section) in series with .01 mfd. condenser.

Note No. 1.—Accurately tune receiver to the 15.0 mc test oscillator signal. This signal will appear twice (14.09 and 15.0 mc) as dial is turned. Use the higher frequency setting of the tuning condensers (gang furthest out of mesh).

Note No. 2.—Oscillator tracks 455 kc above signal on all bands.

*RCA Victor*

MODEL 98T2

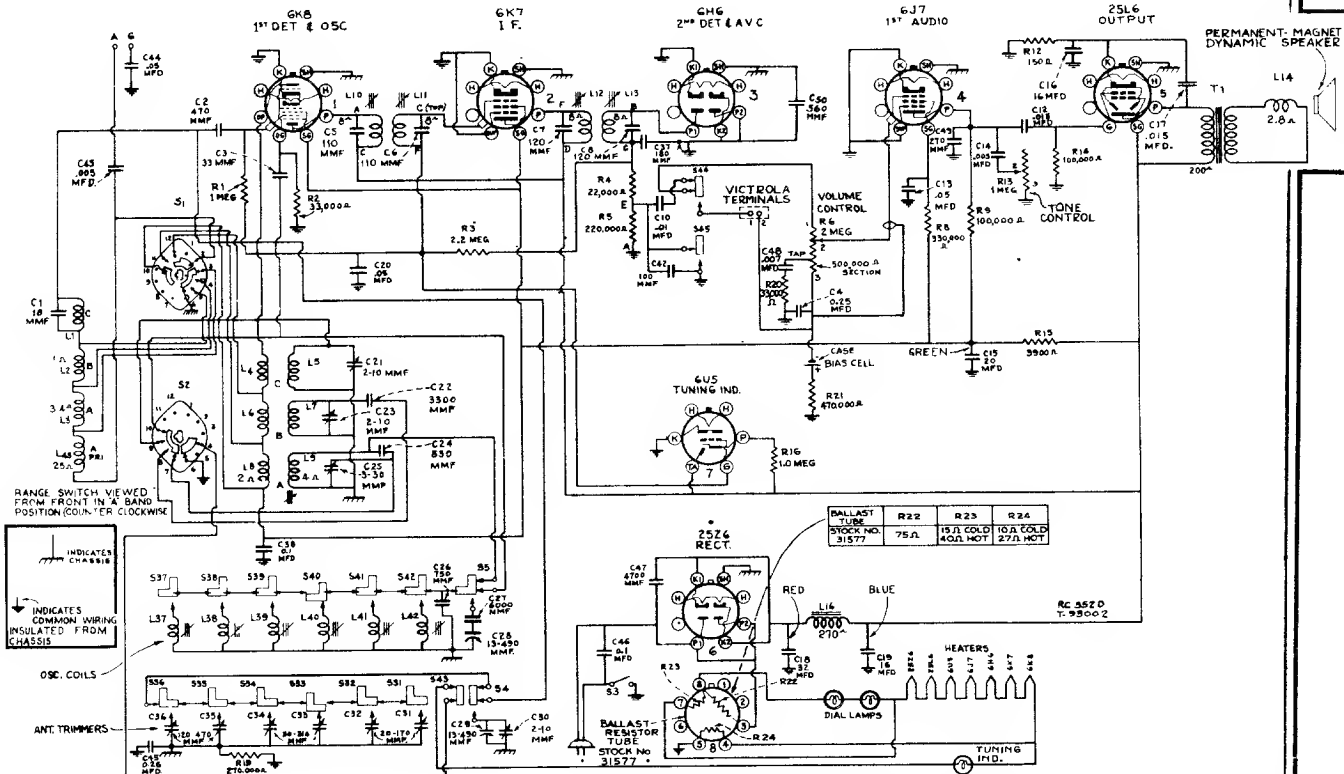

**Adjustments for Electric Tuning**

These models have eight push buttons. The left-hand button is a Victrola switch. The right-hand button connects the gang condenser for manual tuning. The other six buttons are for electric tuning of six different stations in the standard-broadcast range. The station buttons connect to separate magnetic-core oscillator coils and separate antenna trimmers which must be adjusted for the desired stations. Use an insulated screwdriver or alignment tool such as RCA Stock No. 31031. Allow at least five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the desired six stations, arranged in order from low to high frequencies.
2. Push in the dial-tuning button, and manually tune in the first station on the list.
3. Push in station button No. 1 (second from left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.


Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.

5. Adjust for each of the remaining five stations in the same manner.
6. Make a final careful adjustment of the oscillator and antenna trimmers.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radiodial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point between 550-750 kc	L12 and L13 (2nd I-F Transformer)
2	6K8 . det. grid cap, in series with .01 mfd.	455 kc		L10 and L11 (1st I-F Transformer)
3	Antenna Terminal, in series with 200 ohms.	600 kc	800 kc (150.5°) "A" band	L9
4		1,500 kc	1,500 kc (28°) "A" band	C25 (osc.) C30 (ant.)
5	Repeat steps 3 and 4.			
6	Antenna Terminal, in series with 400 ohms.	6 mc	6 mc (26.5°) "B" band	C23 (osc.)*
7		20 mc	20 mc (22°) "C" band	C21 (osc.)*
8	Follow "Adjustments for Electric Tuning."			

\*Use minimum capacity peak if two peaks can be obtained, and rock gang condenser slightly while adjusting C23 and C21.  
Note.—Oscillator tracks 455 kc above signal on all bands.

Dial-Indicator Adjustment.—After fastening the chassis in the cabinet, move the dial indicator on the drive cable to the left-hand end mark on dial, with gang condenser fully meshed.

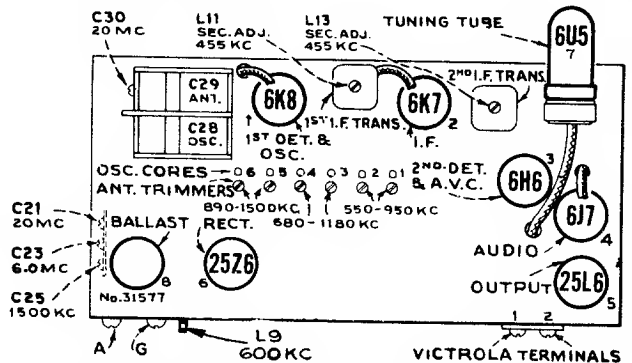


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


# RCA Victor

# MODELS 98T and 98K2

## Chassis No. RC-386A and RC-386A

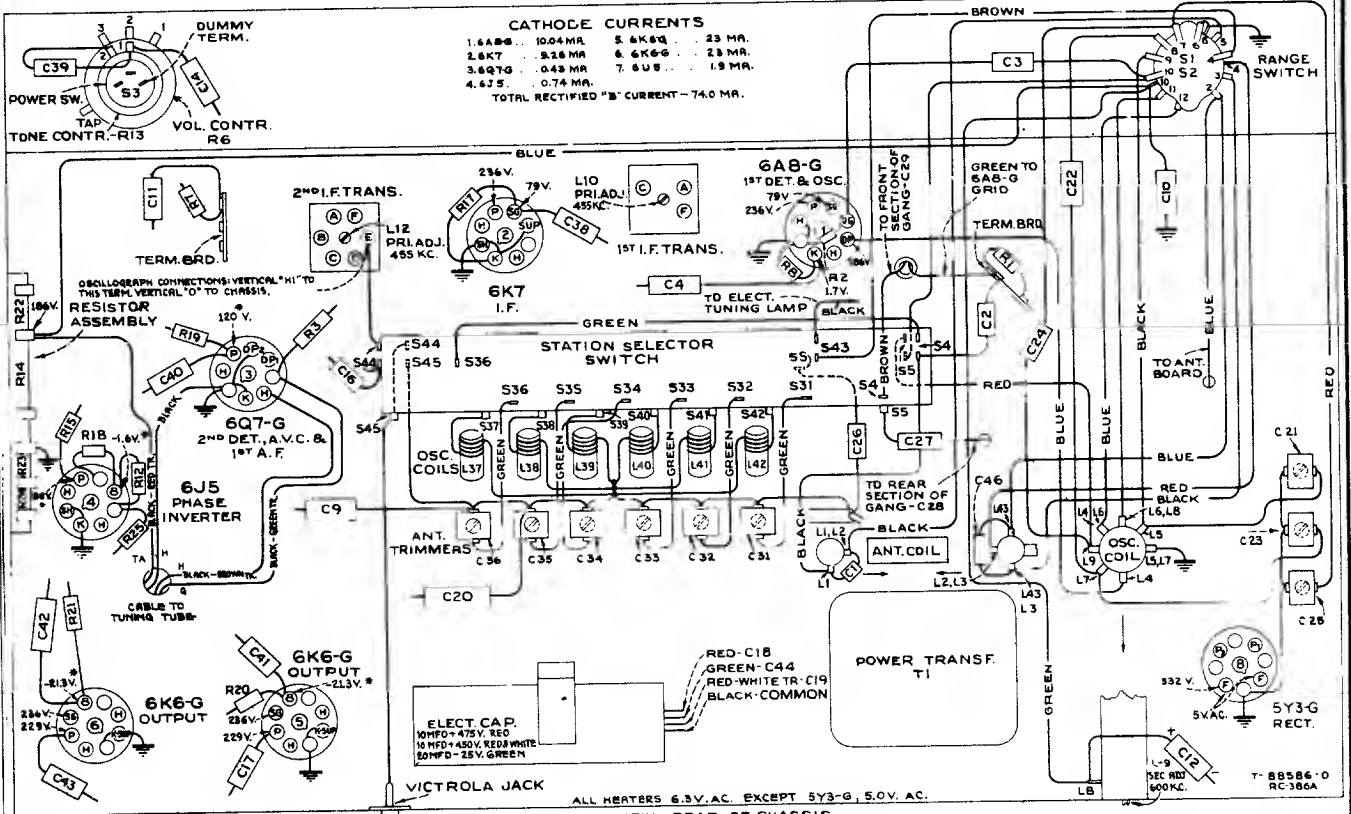



BOTTOM VIEW - REAR OF CHASSIS

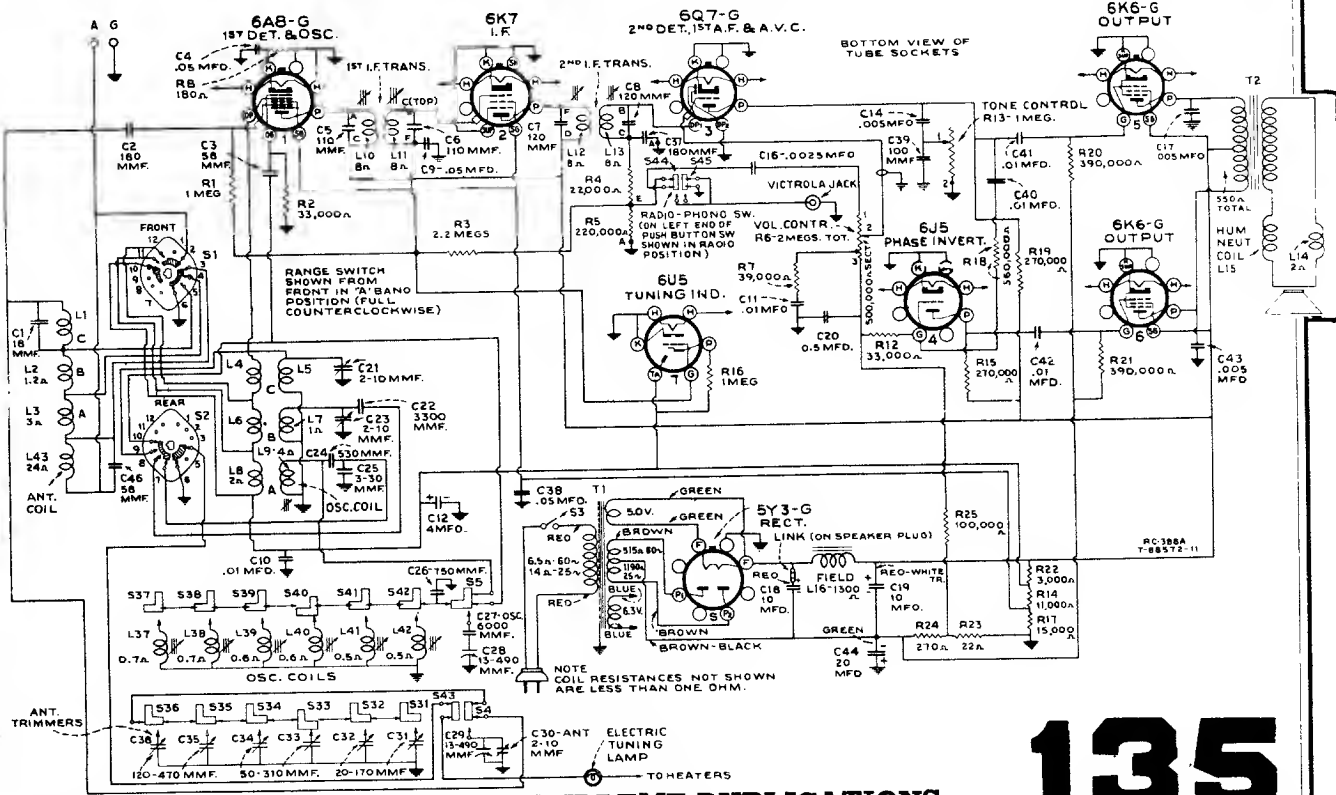

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS




## U-121, U-123 (Single-Band), and U-127E

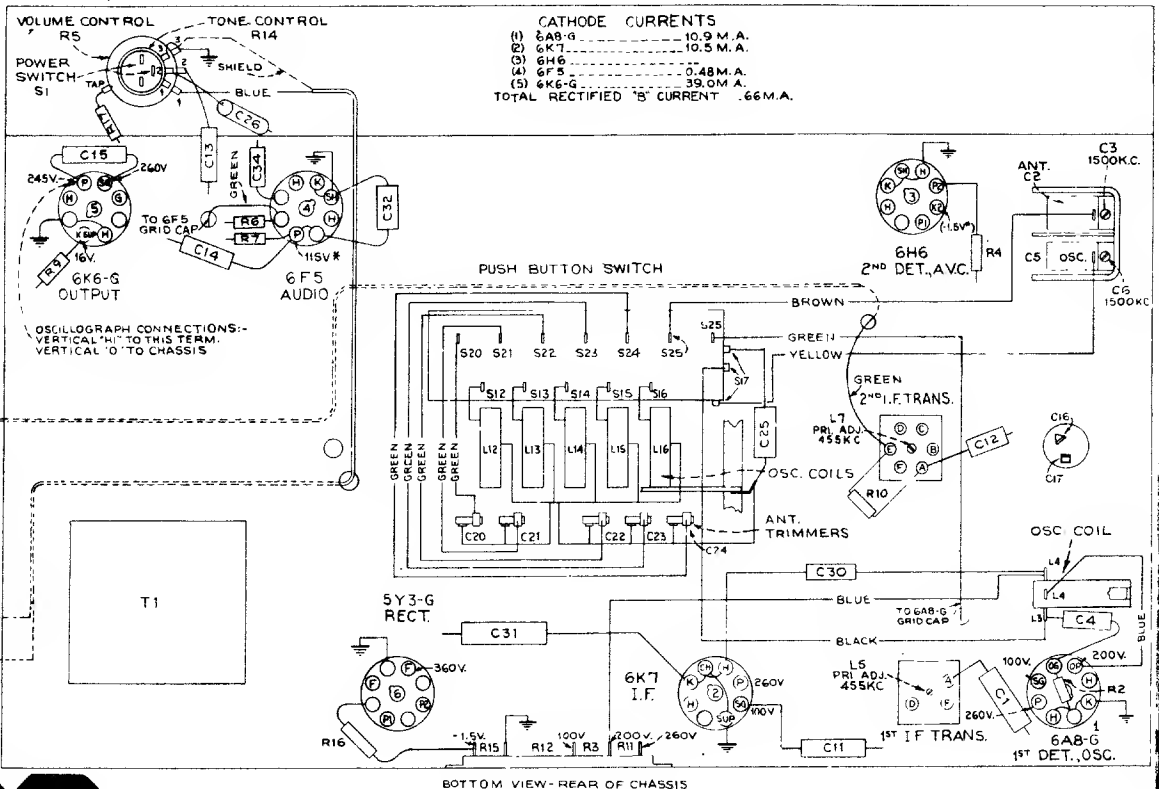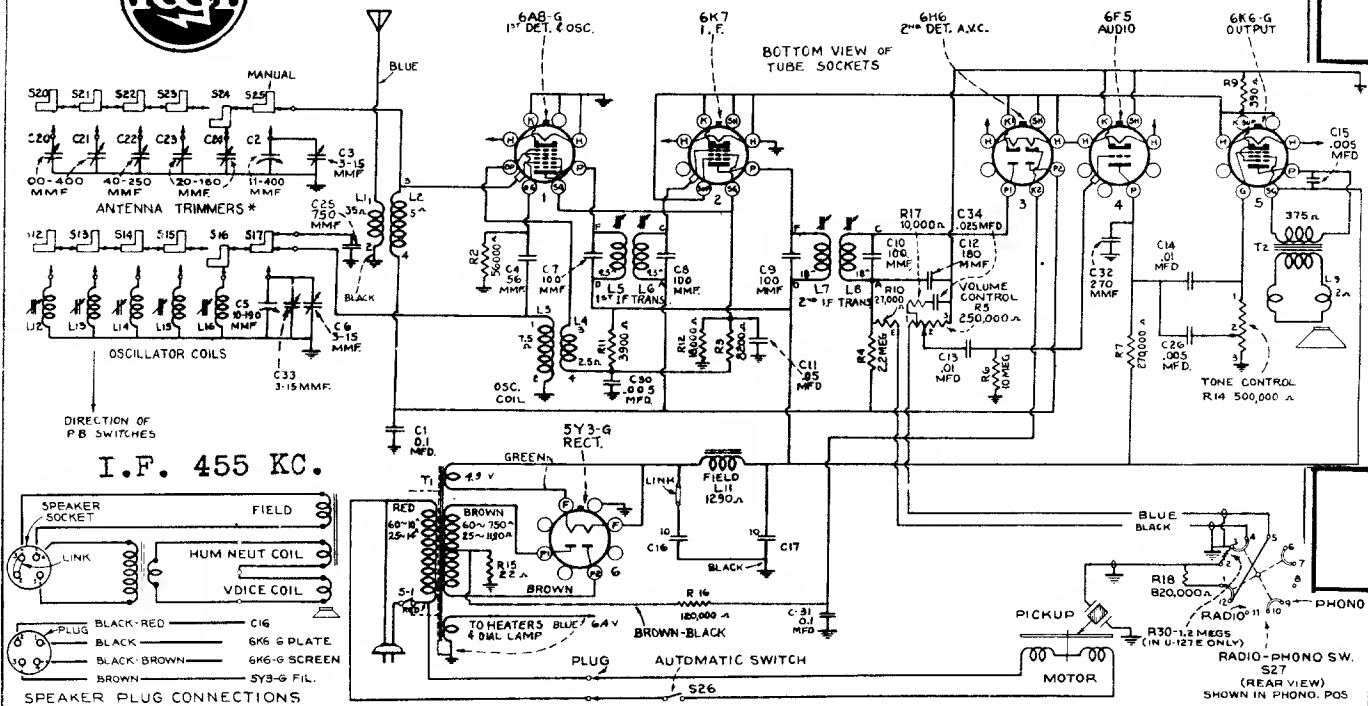


# 136

# WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.505 & 101.505X

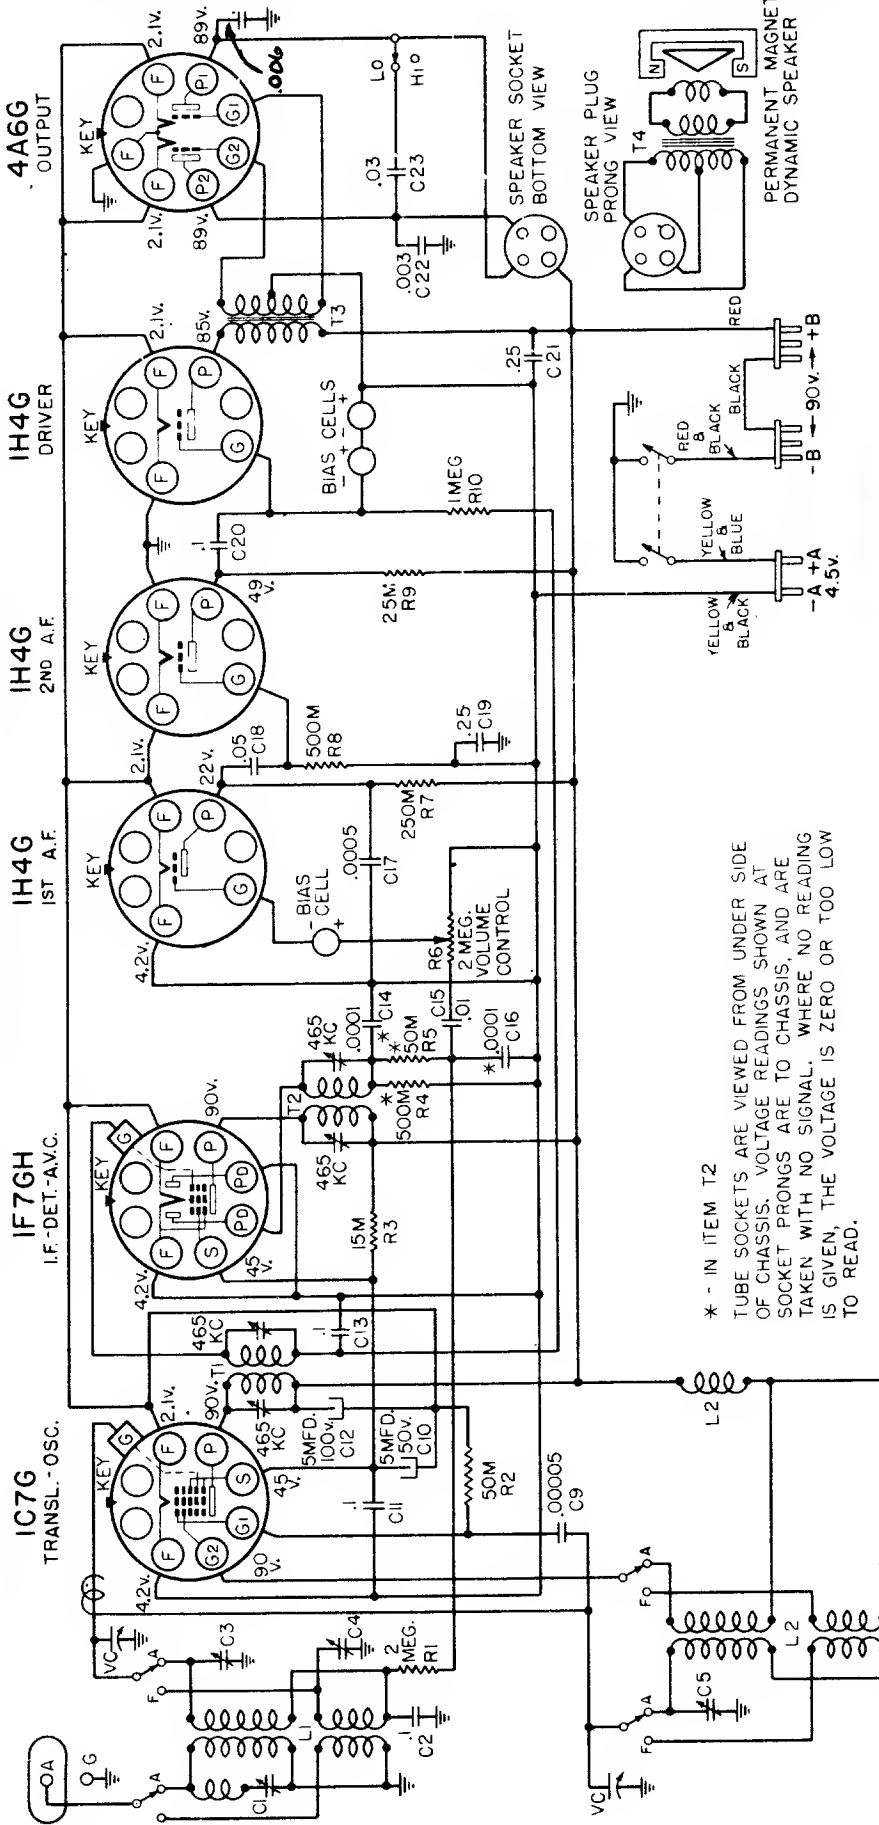

\* - IN ITEM T2  
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

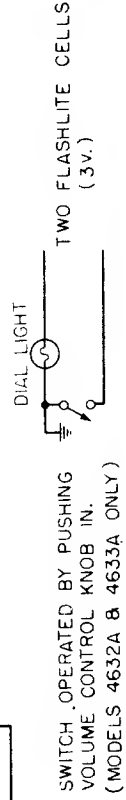


Sears, Roebuck and Co.  
 Chicago, Ill.

Models 4632A, 4633A, 6014, 6015, 6044, 6045, 6058, 6059,  
 6063, 6064, 6065, 6144, and 6164



WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.510

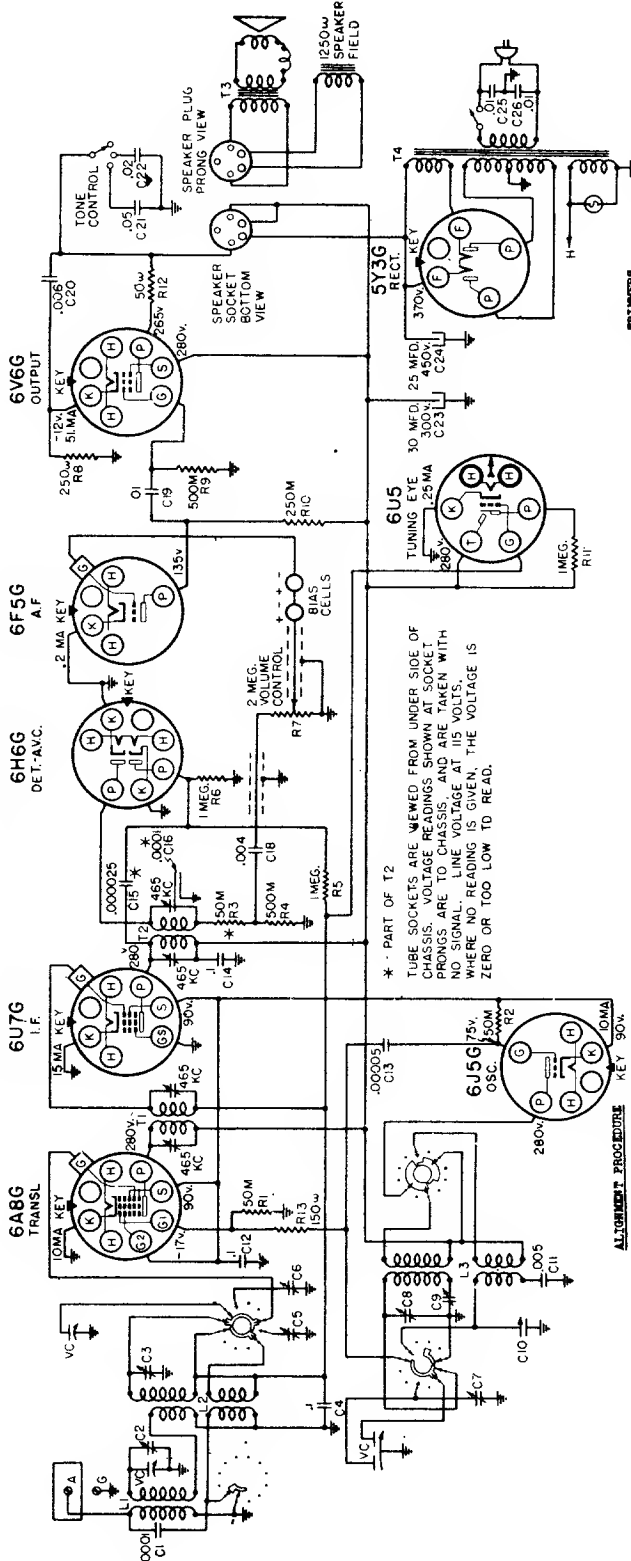

**ALIGNMENT PROCEDURE**

**PRELIMINARY:**

- Output meter connection . . . . . Across loud speaker voice coil
- Output meter reading to indicate 500 milliwatts . . . . . 0.85 volts
- Average sensitivity in microvolts for 500 milliwatts output . . . . . See chart below
- Generator ground lead connection . . . . . Receiver chassis
- Dummy antenna lead connection . . . . . See chart below
- Connection of generator output lead . . . . . See chart below
- Generator modulation . . . . . 30%, 400 cycles
- Position of Volume Control . . . . . Fully clockwise
- Position of Tone Control . . . . . Center of block to left of 550 kc calibration mark.

**IMPORTANT ALIGNMENT NOTES**

The alignment must be done in the order given.

Two peaks can be had, one with the trimmer screwed further out than the other. The correct adjustment is with the trimmer screwed further out.


WAVE BAND POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA CONNECTION	GENERATOR CONNECTION	TRIMMER FUNCTION	APPROXIMATE MICROVOLTS
"AM"	Closed	495 kc	.1 mfd.	6A8G Grid	IF Output	90
"CW"	15 cc (clock)	15 mc	400 ohms	Ant. Term.	Translator	50
"SPOR"	9.55 mc	9.55 mc	400 ohms	Ant. Term.	Oscillator	80
"AM"	Fully open	1730 kc	.0008 mfd.	Ant. Term.	Oscillator	90
"AM"	1400 kc	1400 kc	.0008 mfd.	Ant. Term.	Transl., Ant.	75
"AM"	900 kc (clock)	800 kc	.0008 mfd.	Ant. Term.	Padder	80

**\* - PART OF T2**

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS AND ARE TAKEN WITH SPEAKER PLUG IN PLACE AT 115 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.

Sears, Roebuck and Co., Chicago.  
 Models 6003, 6004, 6024, 6034, 6124, 6134

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.511

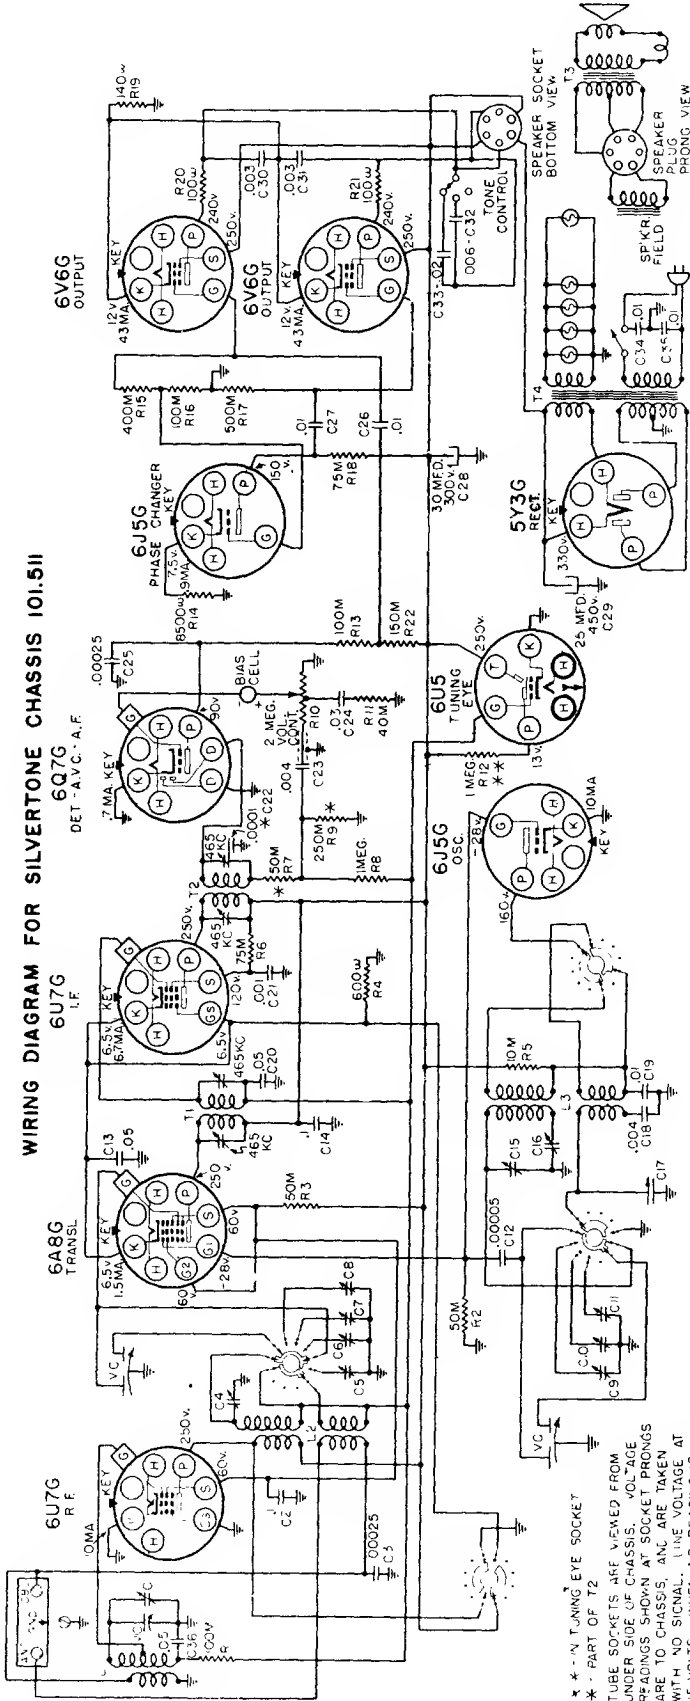

GENERAL INFORMATION & SERVICE HINTS

THE AVC CIRCUIT:

The diode current of one of the 6Q7G diode plates, flowing through the 250M ohm resistor, R9, creates a voltage drop across it. This voltage is applied to the control grids of the RF, translator, and IF tubes, to provide AVC.

ELIMINATING WHISTLE AT 930 KC:


A whistle, due to a beat between the second harmonic (930 kc) of the 465 kc IF, and a 930 kc signal may be experienced. In localities where the 930 kc station is one that is frequently listened to, it will be desirable to shift the whistle to some other point where it will not be objectionable. This can be done by shifting the IF frequency of the receiver.

Determine at what point between 900 kc and 960 kc the whistle will be least objectionable. Dividing this frequency by two will give the new IF frequency to which the receiver should be aligned. For example, if it is determined that a whistle at 915 kc would not be objectionable, the IF should be realigned at 915/2 or 457.5 kc. Try to select the new IF frequency as near as possible to 455 kc.

Sears, Roebuck & Co.  
Chicago.  
Models 6036, 6136.

\* - N TUNING EYE SOCKET  
\* - PART OF T2  
TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. LINE VOLTAGE AT 115 VOLTS. WHEN NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ. READINGS TAKEN WITH WAVE SWITCH IN BROADCAST POSITION.

WIRING DIAGRAM FOR SILVERTONE CHASSIS 101.526  
6F5G DET.  
6D6 2ND R.F.  
6D6 1ST R.F.

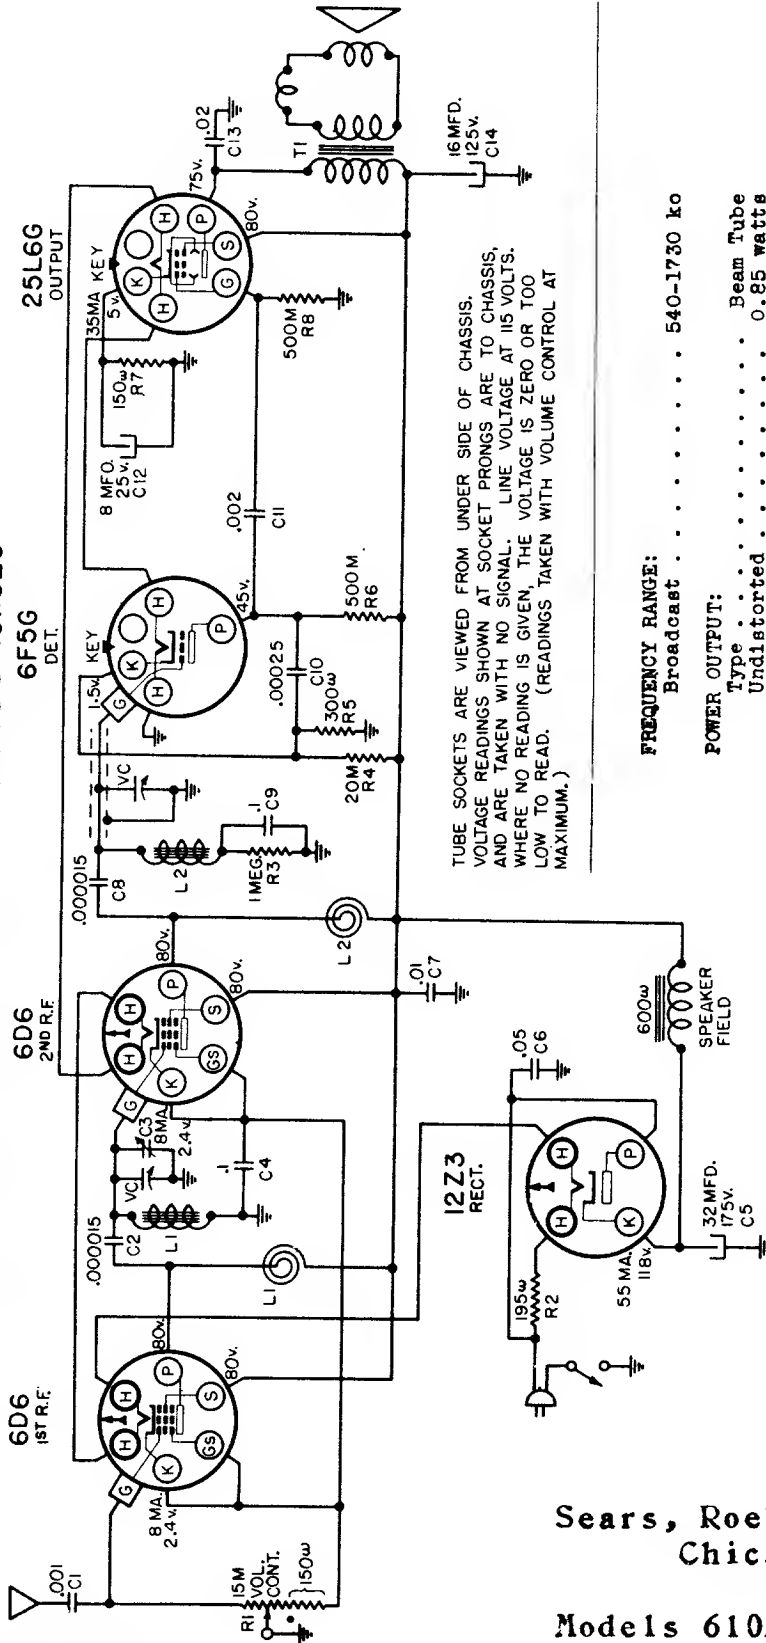

TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS. VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS, AND ARE TAKEN WITH NO SIGNAL. LINE VOLTAGE AT 115 VOLTS. WHERE NO READING IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ. (READINGS TAKEN WITH VOLUME CONTROL AT MAXIMUM.)

**FREQUENCY RANGE:**  
Broadcast . . . . . 540-1730 kc

**POWER OUTPUT:**  
Type . . . . . Beam Tube  
Undistorted . . . . . 0.85 watts  
Maximum . . . . . 1.5 watts

ALIGNMENT PROCEDURE


The receiver need not be taken out of the cabinet for alignment. Either a broadcast signal of about 1500 kc should be tuned in or else a signal generator, connected through a .0003 mfd. condenser to the set's antenna, should be used. Tune in the signal and adjust the trimmer (accessible through the hole in the bottom of the cabinet) for maximum loud speaker response. This can be done most accurately, if the volume control setting is reduced to give low volume level. (This set has no AVC.) The variable should be rocked a degree or two during the adjustment. An insulated screw driver should be used, since the chassis may be above ground potential as explained previously.

Sears, Roebuck and Co.  
Chicago.

Models 6102, 6103, 6105

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## WIRING DIAGRAM FOR SILVERTONE CHASSIS IO1.546

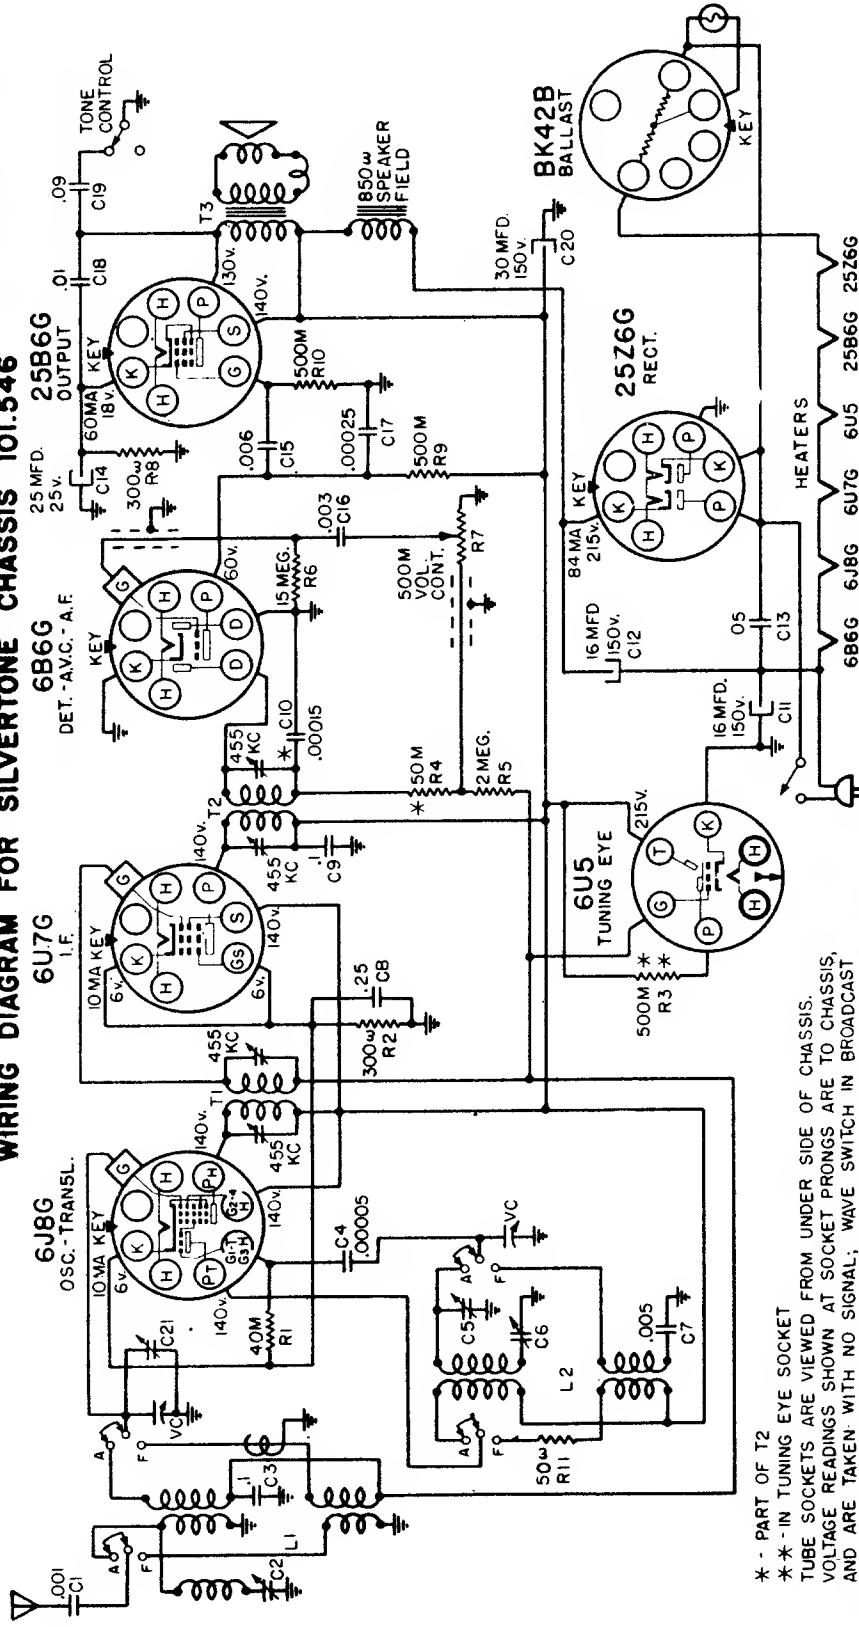

\* - PART OF T2  
 \*\* - IN TUNING EYE SOCKET  
 TUBE SOCKETS ARE VIEWED FROM UNDER SIDE OF CHASSIS.  
 VOLTAGE READINGS SHOWN AT SOCKET PRONGS ARE TO CHASSIS,  
 AND ARE TAKEN WITH NO SIGNAL; WAVE SWITCH IN BROADCAST  
 POSITION. LINE VOLTAGE AT 115 VOLTS. WHERE NO READING  
 IS GIVEN, THE VOLTAGE IS ZERO OR TOO LOW TO READ.


WAVE BAND SWITCH POSITION	POSITION OF VARIABLE	GENERATOR FREQUENCY	DUMMY ANTENNA	GENERATOR CONNECTION	TRIMMERS ADJUSTED (IN ORDER SHOWN)	TRIMMER FUNCTION
"AM"	Closed	455 kc	.1 mfd.	6J80 Grid	T2, T1	IF Output IF Input
"AM"	600 kc	455 kc*	.0002 mfd.	Ant. Lead	C3*	Wave Trap
"AM"	1400 kc	1400 kc	.0002 mfd.	Ant. Lead	C5, C31	Oscillator Translator
"AM"	600 kc (rock)	600 kc	.0002 mfd.	Ant. Lead	C6	Padder

**Sears, Roebuck & Co.**  
 Models 6200, 6120, 6126,  
 6127, 6119, 6250.



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Sparton Wireless Phonograph Models 219-P 219-PD

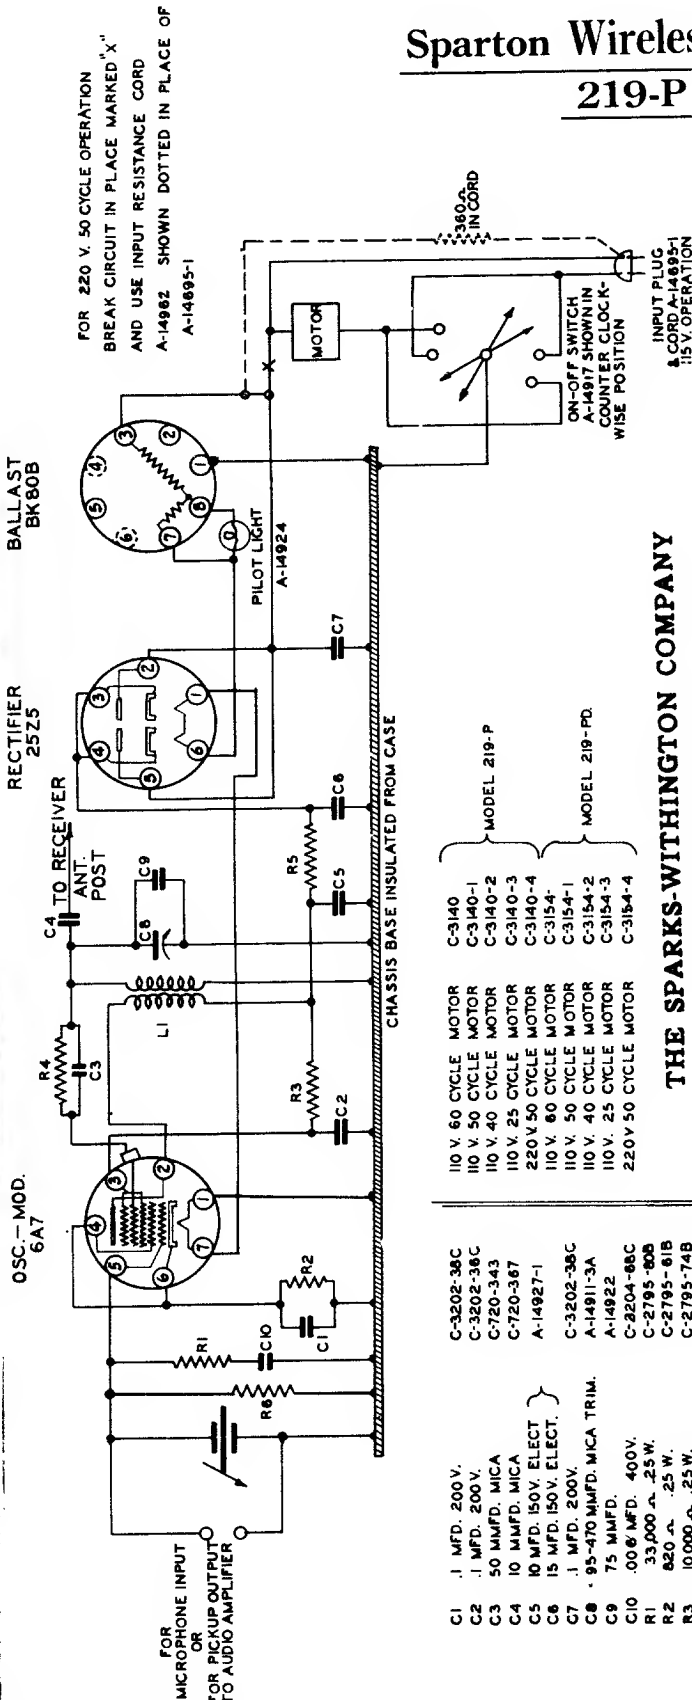

- |     |                         |            |          |                       |              |
|-----|-------------------------|------------|----------|-----------------------|--------------|
| C1  | .1 MFD. 200V.           | C-3202-36C | C-3140   | 110 V. 60 CYCLE MOTOR | MODEL 219-P  |
| C2  | .1 MFD. 200V.           | C-3202-36C | C-3140-1 | 110 V. 50 CYCLE MOTOR |              |
| C3  | 50 MMFD. MICA           | C-720-343  | C-3140-2 | 110 V. 40 CYCLE MOTOR |              |
| C4  | 10 MMFD. MICA           | C-720-367  | C-3140-3 | 110 V. 25 CYCLE MOTOR |              |
| C5  | 10 MFD. 150V. ELECT.    | A-14927-1  | C-3140-4 | 220V. 50 CYCLE MOTOR  |              |
| C6  | 15 MFD. 150V. ELECT.    |            | C-3154   | 110 V. 60 CYCLE MOTOR |              |
| C7  | .1 MFD. 200V.           | C-3202-36C | C-3154-1 | 110 V. 50 CYCLE MOTOR | MODEL 219-PD |
| C8  | 95-470 MMFD. MICA TRIM. | A-14911-3A | C-3154-2 | 110 V. 40 CYCLE MOTOR |              |
| C9  | 75 MMFD.                | A-14922    | C-3154-3 | 110 V. 25 CYCLE MOTOR |              |
| C10 | .006 MFD. 400V.         | C-3204-88C | C-3154-4 | 220V. 50 CYCLE MOTOR  |              |
| R1  | 33,000 Ω .25W.          | C-2795-80B |          |                       |              |
| R2  | 820 Ω .25W.             | C-2795-61B |          |                       |              |
| R3  | 10,000 Ω .25W.          | C-2795-74B |          |                       |              |
| R4  | 10,000 Ω .25W.          | C-2795-74B |          |                       |              |
| R5  | 4700 Ω .5W.             | C-2796-70C |          |                       |              |
| R6  | 160,000 Ω .25W.         | C-2795-89B |          |                       |              |
| L1  | OSCILLATOR COIL         | A-14926-1  |          |                       |              |

**THE SPARKS-WITHINGTON COMPANY**  
SERVICE DIVISION  
Jackson, Michigan, U. S. A.

Line Voltage: 115 volts		Antenna Not Connected.								
Control Switch in Center Position		Microphone Not Connected.								
Tube	Function	Voltage of Socket Prongs to Gnd. (See Prong Nos. on Schematic Diagram)								
6A7	Oscillator-Modulator	No. 1	No. 2	No. 3	No. 4	No. 5	No. 6	No. 7	No. 8	Grid Cap
25Z5	Rectifier	0	120	80	4.5	0	4.5	6.3*	-	0
BK-80B	Ballast	0	117*	150	150	117*	31.5*	-	-	-
										37*

Notes: Voltage readings are for schematic diagram on back of sheet. Allow 15% or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages.


\*AC volts.

NOTE: Original production models did not have resistor R6 and condenser C10 included in the circuit as shown above. In these first run production sets resistor R1 connected across the microphone tip jacks in the same position as shown for resistor R6. The above change can be made easily, when servicing any of the first run Models 219-P Wireless Phonographs.

POWER OUTPUT  
25L6GT

DETECTOR  
6J7GT


CONVERTER  
6ABGT

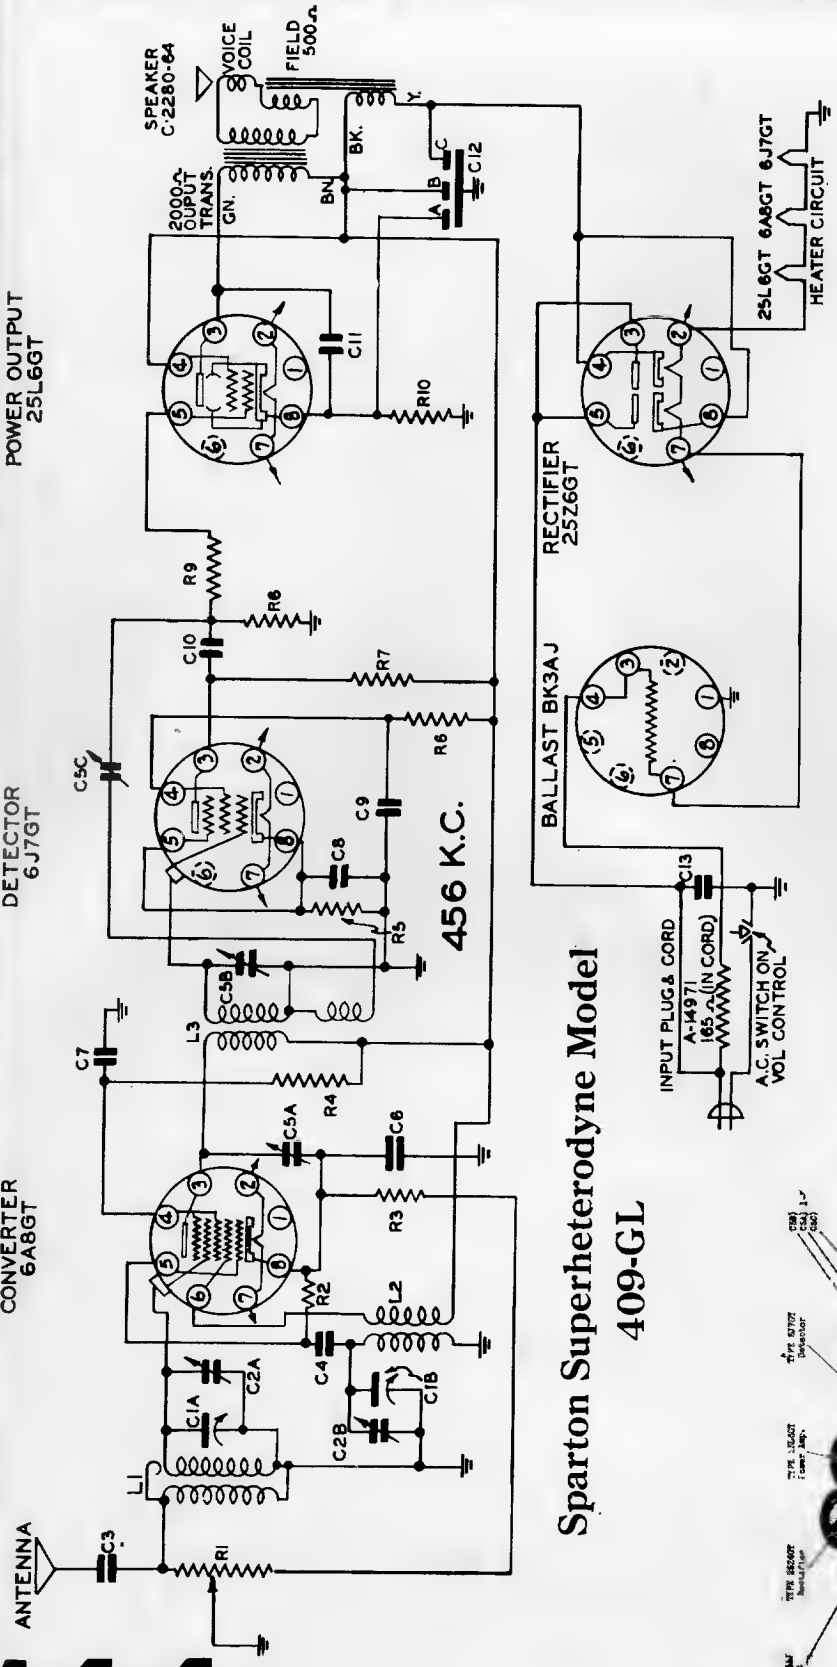

## Sparton Superheterodyne Model 409-GL


R1	VOL. CONTROL & SWITCH	A-12708-A1
R2	58000 Ω	C-2795-83B
R3	390 Ω	C-2795-57B
R4	39000 Ω	C-2795-B1B
R5	27000 Ω	C-2795-79B
R6	6.2 MEGOHM	C-2795-250B
R7	56000 Ω	C-2795-95B
R8	56000 Ω	C-2795-95B
R9	100000 Ω	C-2795-68B
R10	150 Ω	C-2796-52C
L1	B.C. ANT. COIL	A-14974
L2	B.C. OSC. COIL	A-14975
L3	I.F. TRANS	A-12989-5

C1A&B	VARIABLE CONDENSER	B-7288
C2A&B	ON VARIABLE CONDENSER	C-3204-2C
C3	.001 MFD. 400 V.	C-720-343
C4	50 MMF. MICA	A-14792
C5A&B	I.F. TRIMMER	C-3202-76C
C6	.01 MFD. 200V.	C-3202-28C
C7	.05 MFD. 200V.	A-14782-2
C8	10 MFD. 25 V.	C-3202-20C
C9	.01 MFD. 200V.	C-3202-20C
C10	.01 MFD. 200V.	C-3204-78C
C11	.02 MFD. 400V.	A-14972
C12A&B	20-25-25 MFD. ELECT.	C-3204-26C
C13	.05 MFD. 400 V.	

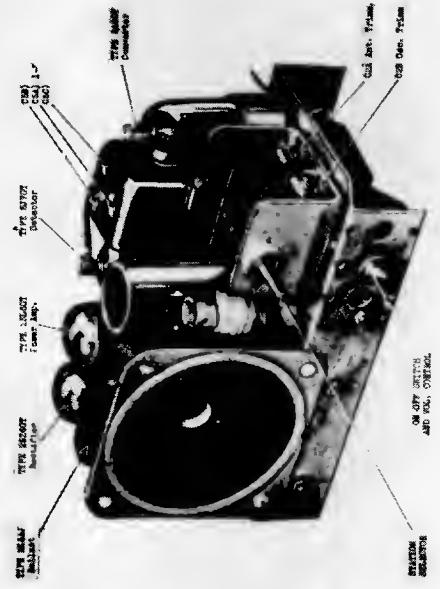

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## SCHEMATIC DIAGRAM SPARTON SUPERHETERODYNE MODELS 520 & 520-M INTERMEDIATE FREQUENCY 456 K.C. TOP VIEWS OF ALL SOCKET CONNECTIONS

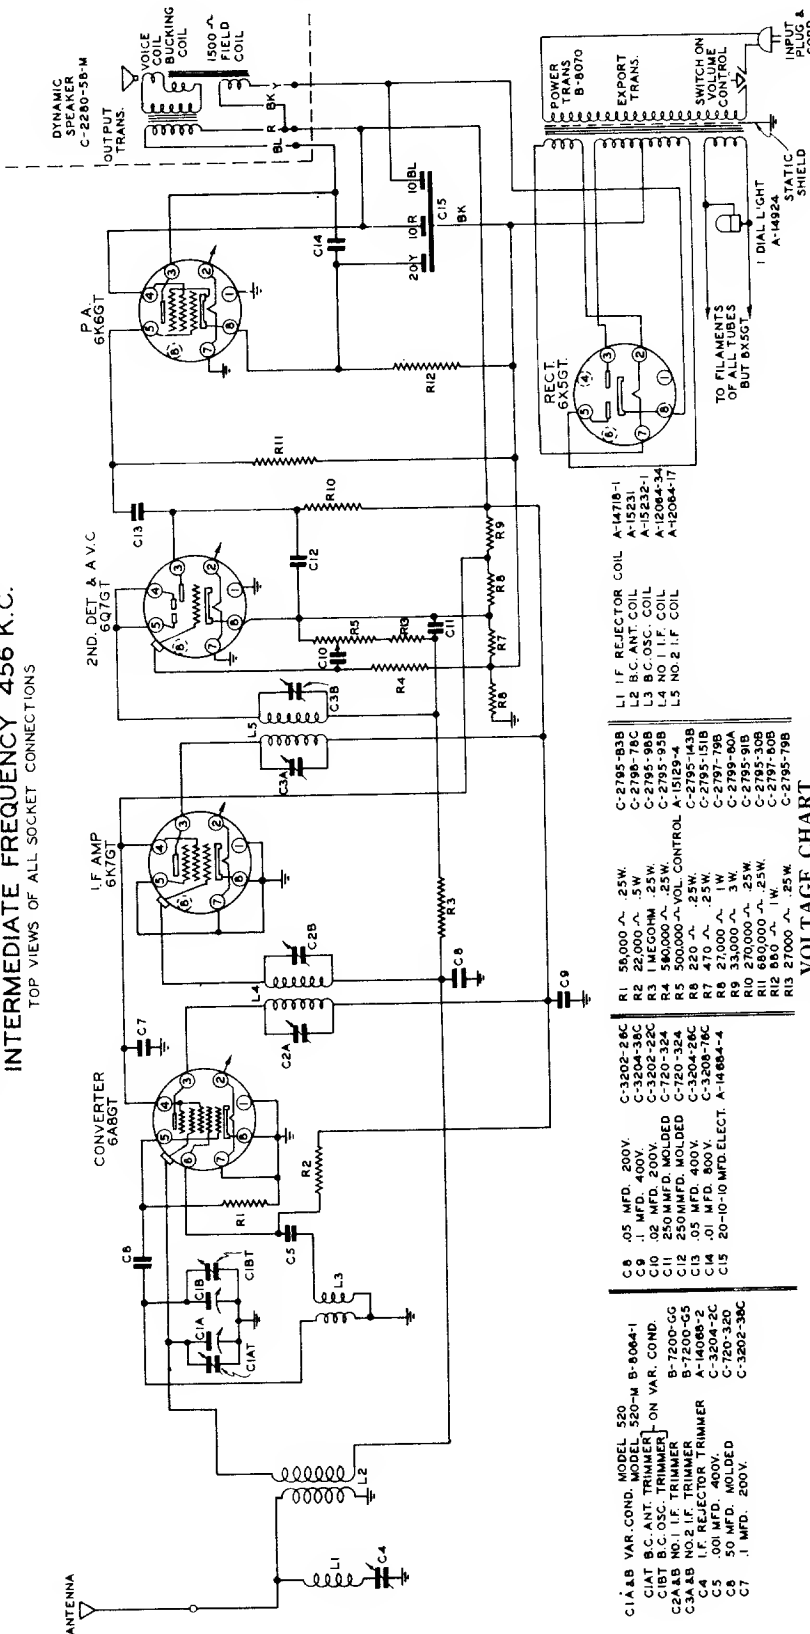

- C1 A & B VAR COND. MODEL 520 B-8064-1
- C1A I.F. TRIMMER ON VAR. COND.
- C2 A & B NO. 1 I.F. TRIMMER B-7200-GG
- C3 A & B NO. 2 I.F. TRIMMER B-7200-GG
- C4 I.F. REJECTOR TRIMMER A-1A085-2
- C5 .001 MFD. 400V. C-3204-2C
- C6 .05 MFD. 200V. C-3202-28C
- C7 .1 MFD. 200V. C-3204-36C
- C8 .05 MFD. 200V. C-3202-28C
- C9 .1 MFD. 400V. C-3204-36C
- C10 .02 MFD. 200V. C-3202-28C
- C11 250MMFD. MOLDED C-720-324
- C12 250MMFD. MOLDED C-720-324
- C13 .05 MFD. 400V. C-3204-26C
- C14 .05 MFD. 400V. C-3204-26C
- C15 20-10-10 MFD ELECT. A-14684-4
- C16 680,000 Ω .25W. R10
- C17 27,000 Ω .25W. R11
- C18 27,000 Ω .25W. R12
- C19 27,000 Ω .25W. R13
- C20 27,000 Ω .25W. R14
- C21 27,000 Ω .25W. R15
- C22 27,000 Ω .25W. R16
- C23 27,000 Ω .25W. R17
- C24 27,000 Ω .25W. R18
- C25 27,000 Ω .25W. R19
- C26 27,000 Ω .25W. R20
- C27 27,000 Ω .25W. R21
- C28 27,000 Ω .25W. R22
- C29 27,000 Ω .25W. R23
- C30 27,000 Ω .25W. R24
- C31 27,000 Ω .25W. R25
- C32 27,000 Ω .25W. R26
- C33 27,000 Ω .25W. R27
- C34 27,000 Ω .25W. R28
- C35 27,000 Ω .25W. R29
- C36 27,000 Ω .25W. R30
- C37 27,000 Ω .25W. R31
- C38 27,000 Ω .25W. R32
- C39 27,000 Ω .25W. R33
- C40 27,000 Ω .25W. R34
- C41 27,000 Ω .25W. R35
- C42 27,000 Ω .25W. R36
- C43 27,000 Ω .25W. R37
- C44 27,000 Ω .25W. R38
- C45 27,000 Ω .25W. R39
- C46 27,000 Ω .25W. R40
- C47 27,000 Ω .25W. R41
- C48 27,000 Ω .25W. R42
- C49 27,000 Ω .25W. R43
- C50 27,000 Ω .25W. R44
- C51 27,000 Ω .25W. R45
- C52 27,000 Ω .25W. R46
- C53 27,000 Ω .25W. R47
- C54 27,000 Ω .25W. R48
- C55 27,000 Ω .25W. R49
- C56 27,000 Ω .25W. R50
- C57 27,000 Ω .25W. R51
- C58 27,000 Ω .25W. R52
- C59 27,000 Ω .25W. R53
- C60 27,000 Ω .25W. R54
- C61 27,000 Ω .25W. R55
- C62 27,000 Ω .25W. R56
- C63 27,000 Ω .25W. R57
- C64 27,000 Ω .25W. R58
- C65 27,000 Ω .25W. R59
- C66 27,000 Ω .25W. R60
- C67 27,000 Ω .25W. R61
- C68 27,000 Ω .25W. R62
- C69 27,000 Ω .25W. R63
- C70 27,000 Ω .25W. R64
- C71 27,000 Ω .25W. R65
- C72 27,000 Ω .25W. R66
- C73 27,000 Ω .25W. R67
- C74 27,000 Ω .25W. R68
- C75 27,000 Ω .25W. R69
- C76 27,000 Ω .25W. R70
- C77 27,000 Ω .25W. R71
- C78 27,000 Ω .25W. R72
- C79 27,000 Ω .25W. R73
- C80 27,000 Ω .25W. R74
- C81 27,000 Ω .25W. R75
- C82 27,000 Ω .25W. R76
- C83 27,000 Ω .25W. R77
- C84 27,000 Ω .25W. R78
- C85 27,000 Ω .25W. R79
- C86 27,000 Ω .25W. R80
- C87 27,000 Ω .25W. R81
- C88 27,000 Ω .25W. R82
- C89 27,000 Ω .25W. R83
- C90 27,000 Ω .25W. R84
- C91 27,000 Ω .25W. R85
- C92 27,000 Ω .25W. R86
- C93 27,000 Ω .25W. R87
- C94 27,000 Ω .25W. R88
- C95 27,000 Ω .25W. R89
- C96 27,000 Ω .25W. R90
- C97 27,000 Ω .25W. R91
- C98 27,000 Ω .25W. R92
- C99 27,000 Ω .25W. R93
- C100 27,000 Ω .25W. R94
- C101 27,000 Ω .25W. R95
- C102 27,000 Ω .25W. R96
- C103 27,000 Ω .25W. R97
- C104 27,000 Ω .25W. R98
- C105 27,000 Ω .25W. R99
- C106 27,000 Ω .25W. R100

### VOLTAGE CHART

Tube	Position of Volume Control: Full with Antenna Disconnected							
	#1	#2	#3	#4	#5	#6	#7	#8
6A8GT	0	0	250	67	4	175	*6.3	0
6K7GT	0	0	250	67	0	1.5	*6.3	0
6G7GT	0	0	65	**	**	**	*6.2	0
6K6GT	0	0	225	250	0	2.5	*6.3	10
6X5GT	-	0	275*	0	0	275*	0	300


Notes: Voltage readings are for schematic diagram on back of sheet. Allow 15% + or - on all measurements. Always use meter scale which will give greatest deflection within scale limits. All DC measurements made with 1000 ohms per volt voltmeter. All AC voltages made with rectifier type voltmeter. Unless designated otherwise, voltages in table are + DC voltages.

\*AC volts.  
\*\*Cannot be measured with Weston Analyzer #665 Type 2.



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

**SCHEMATIC DIAGRAM  
SPARTAN SUPERHETERODYNE MODEL 1160  
INTERMEDIATE FREQUENCY 456 K.C.  
TOP VIEWS OF ALL SOCKET CONNECTIONS  
BASC. CONVERTER**

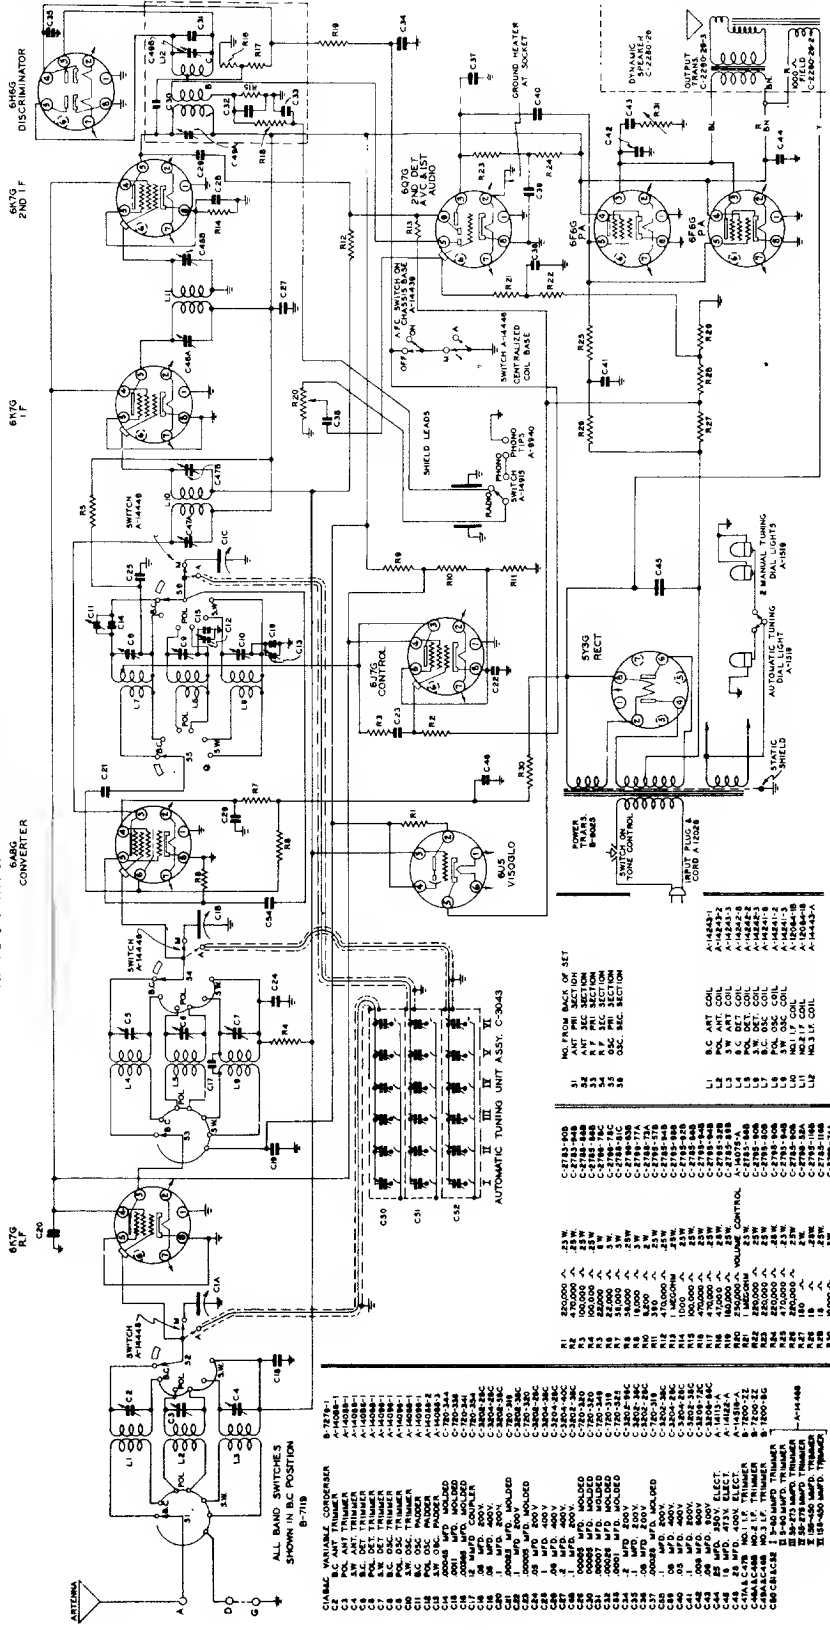

- WOLFROM MARK OF SET**
- |    |    |                     |
|----|----|---------------------|
| S1 | 24 | A.T. SEC. SECTION   |
| S2 | 24 | R.F. SEC. SECTION   |
| S3 | 24 | I.F. SEC. SECTION   |
| S4 | 24 | O.S.C. SEC. SECTION |
- 
- A-11642-1**  
A-11642-2  
A-11642-3  
A-11642-4  
A-11642-5  
A-11642-6  
A-11642-7  
A-11642-8  
A-11642-9  
A-11642-10


- |            |     |
|------------|-----|
| C-2743-008 | 25W |
| C-2743-009 | 25W |
| C-2743-010 | 25W |
| C-2743-011 | 25W |
| C-2743-012 | 25W |
| C-2743-013 | 25W |
| C-2743-014 | 25W |
| C-2743-015 | 25W |
| C-2743-016 | 25W |
| C-2743-017 | 25W |
| C-2743-018 | 25W |
| C-2743-019 | 25W |
| C-2743-020 | 25W |
| C-2743-021 | 25W |
| C-2743-022 | 25W |
| C-2743-023 | 25W |
| C-2743-024 | 25W |
| C-2743-025 | 25W |
| C-2743-026 | 25W |
| C-2743-027 | 25W |
| C-2743-028 | 25W |
| C-2743-029 | 25W |
| C-2743-030 | 25W |
| C-2743-031 | 25W |
| C-2743-032 | 25W |
| C-2743-033 | 25W |
| C-2743-034 | 25W |
| C-2743-035 | 25W |
| C-2743-036 | 25W |
| C-2743-037 | 25W |
| C-2743-038 | 25W |
| C-2743-039 | 25W |
| C-2743-040 | 25W |
| C-2743-041 | 25W |
| C-2743-042 | 25W |
| C-2743-043 | 25W |
| C-2743-044 | 25W |
| C-2743-045 | 25W |
| C-2743-046 | 25W |
| C-2743-047 | 25W |
| C-2743-048 | 25W |
| C-2743-049 | 25W |
| C-2743-050 | 25W |
| C-2743-051 | 25W |
| C-2743-052 | 25W |
| C-2743-053 | 25W |
| C-2743-054 | 25W |
| C-2743-055 | 25W |
| C-2743-056 | 25W |
| C-2743-057 | 25W |
| C-2743-058 | 25W |
| C-2743-059 | 25W |
| C-2743-060 | 25W |
| C-2743-061 | 25W |
| C-2743-062 | 25W |
| C-2743-063 | 25W |
| C-2743-064 | 25W |
| C-2743-065 | 25W |
| C-2743-066 | 25W |
| C-2743-067 | 25W |
| C-2743-068 | 25W |
| C-2743-069 | 25W |
| C-2743-070 | 25W |
| C-2743-071 | 25W |
| C-2743-072 | 25W |
| C-2743-073 | 25W |
| C-2743-074 | 25W |
| C-2743-075 | 25W |
| C-2743-076 | 25W |
| C-2743-077 | 25W |
| C-2743-078 | 25W |
| C-2743-079 | 25W |
| C-2743-080 | 25W |
| C-2743-081 | 25W |
| C-2743-082 | 25W |
| C-2743-083 | 25W |
| C-2743-084 | 25W |
| C-2743-085 | 25W |
| C-2743-086 | 25W |
| C-2743-087 | 25W |
| C-2743-088 | 25W |
| C-2743-089 | 25W |
| C-2743-090 | 25W |
| C-2743-091 | 25W |
| C-2743-092 | 25W |
| C-2743-093 | 25W |
| C-2743-094 | 25W |
| C-2743-095 | 25W |
| C-2743-096 | 25W |
| C-2743-097 | 25W |
| C-2743-098 | 25W |
| C-2743-099 | 25W |
| C-2743-100 | 25W |

- |     |     |                |
|-----|-----|----------------|
| L1  | 1.2 | B.C. ART. COIL |
| L2  | 1.5 | 3W ART. COIL   |
| L3  | 1.8 | 3W ART. COIL   |
| L4  | 1.5 | 3W ART. COIL   |
| L5  | 1.8 | 3W ART. COIL   |
| L6  | 1.5 | 3W ART. COIL   |
| L7  | 1.8 | 3W ART. COIL   |
| L8  | 1.5 | 3W ART. COIL   |
| L9  | 1.8 | 3W ART. COIL   |
| L10 | 1.5 | 3W ART. COIL   |
| L11 | 1.8 | 3W ART. COIL   |
| L12 | 1.5 | 3W ART. COIL   |
- 
- |     |                 |   |
|-----|-----------------|---|
| R1  | 50000           | Ω |
| R2  | 100000          | Ω |
| R3  | 250000          | Ω |
| R4  | 500000          | Ω |
| R5  | 1000000         | Ω |
| R6  | 2500000         | Ω |
| R7  | 5000000         | Ω |
| R8  | 10000000        | Ω |
| R9  | 25000000        | Ω |
| R10 | 50000000        | Ω |
| R11 | 100000000       | Ω |
| R12 | 250000000       | Ω |
| R13 | 500000000       | Ω |
| R14 | 1000000000      | Ω |
| R15 | 2500000000      | Ω |
| R16 | 5000000000      | Ω |
| R17 | 10000000000     | Ω |
| R18 | 25000000000     | Ω |
| R19 | 50000000000     | Ω |
| R20 | 100000000000    | Ω |
| R21 | 250000000000    | Ω |
| R22 | 500000000000    | Ω |
| R23 | 1000000000000   | Ω |
| R24 | 2500000000000   | Ω |
| R25 | 5000000000000   | Ω |
| R26 | 10000000000000  | Ω |
| R27 | 25000000000000  | Ω |
| R28 | 50000000000000  | Ω |
| R29 | 100000000000000 | Ω |
| R30 | 250000000000000 | Ω |

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


OPERATION	ALIGNMENT OF	GENERATOR CONNECTED TO	DUMMY ANTENNA	GENERATOR FREQUENCY	TUNING COND. SETTING	TRIMMER	REMARKS
1	I.F.	6A7 Grid	.1 mf.	262	Closed	2 trimmers	2nd I.F.
2	Broad. Osc.	Ant.	250 mmf.	1580	Open	2 trimmers	1st I.F.
3	Broad. & R.F.	Ant.	250 mmf.	1400	1400	Osc.	Adj. to max.
4						Ant.	Adj. to max.
5						R.F.	Adj. to max.

Check sensitivity at 1000 KC and 600 KC.  
Check operations 1 to 4 inclusive.

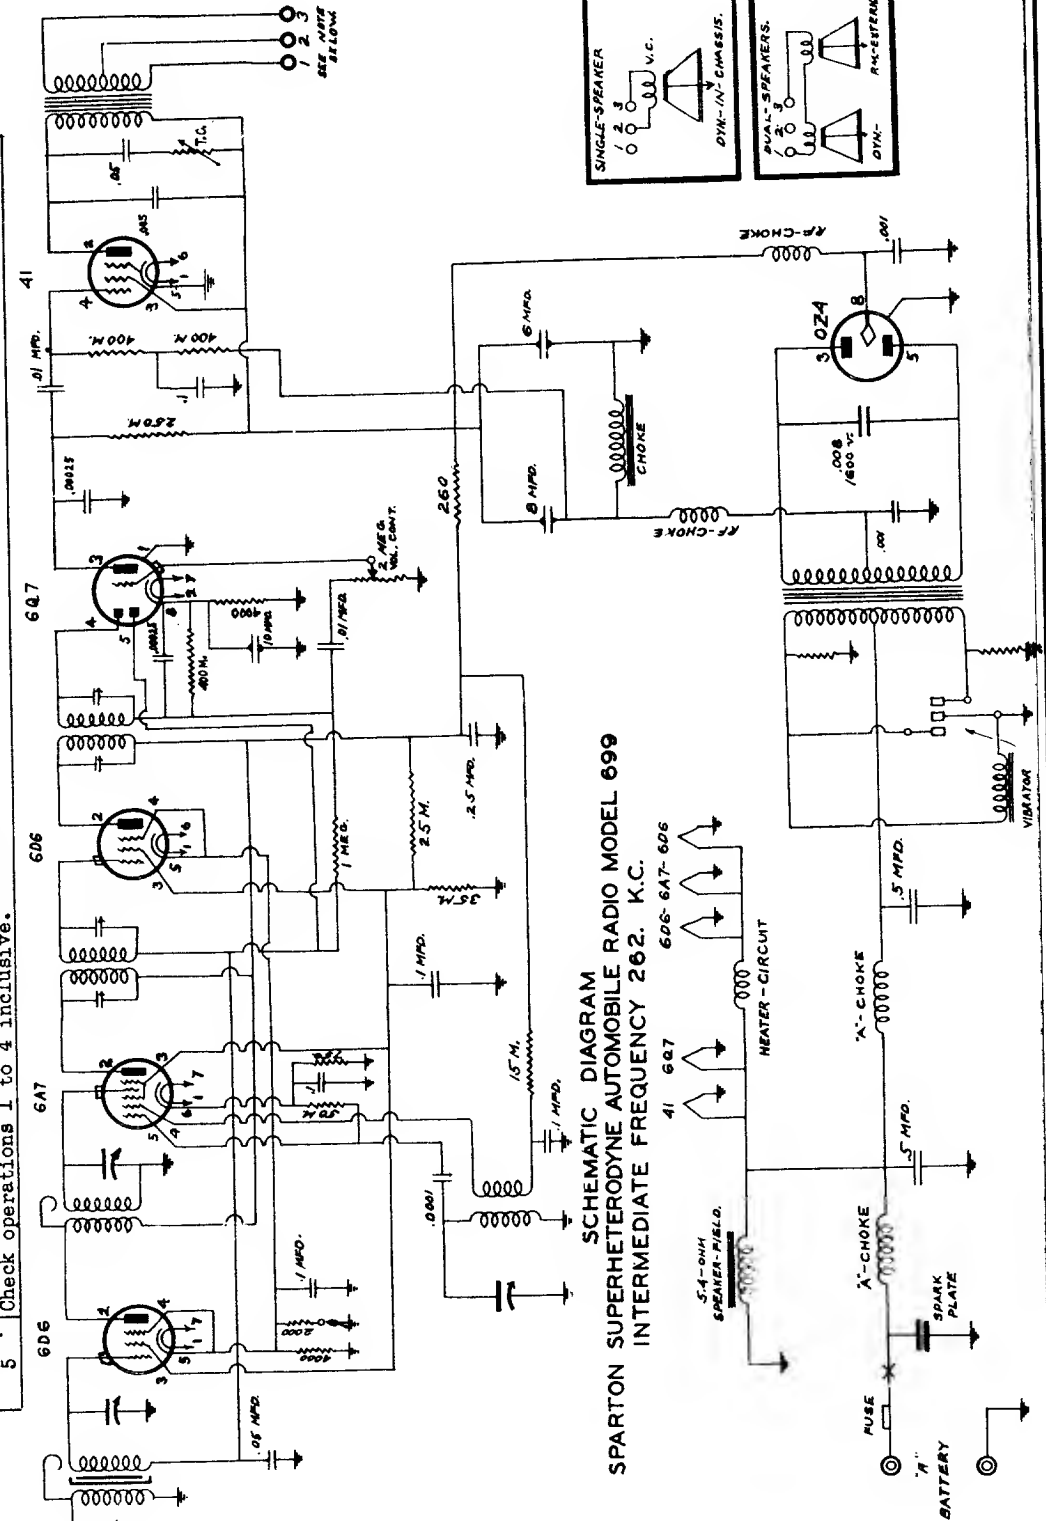



SCHEMATIC DIAGRAM  
SPARTON SUPERHETERODYNE AUTOMOBILE RADIO MODEL 699  
INTERMEDIATE FREQUENCY 262. K.C.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

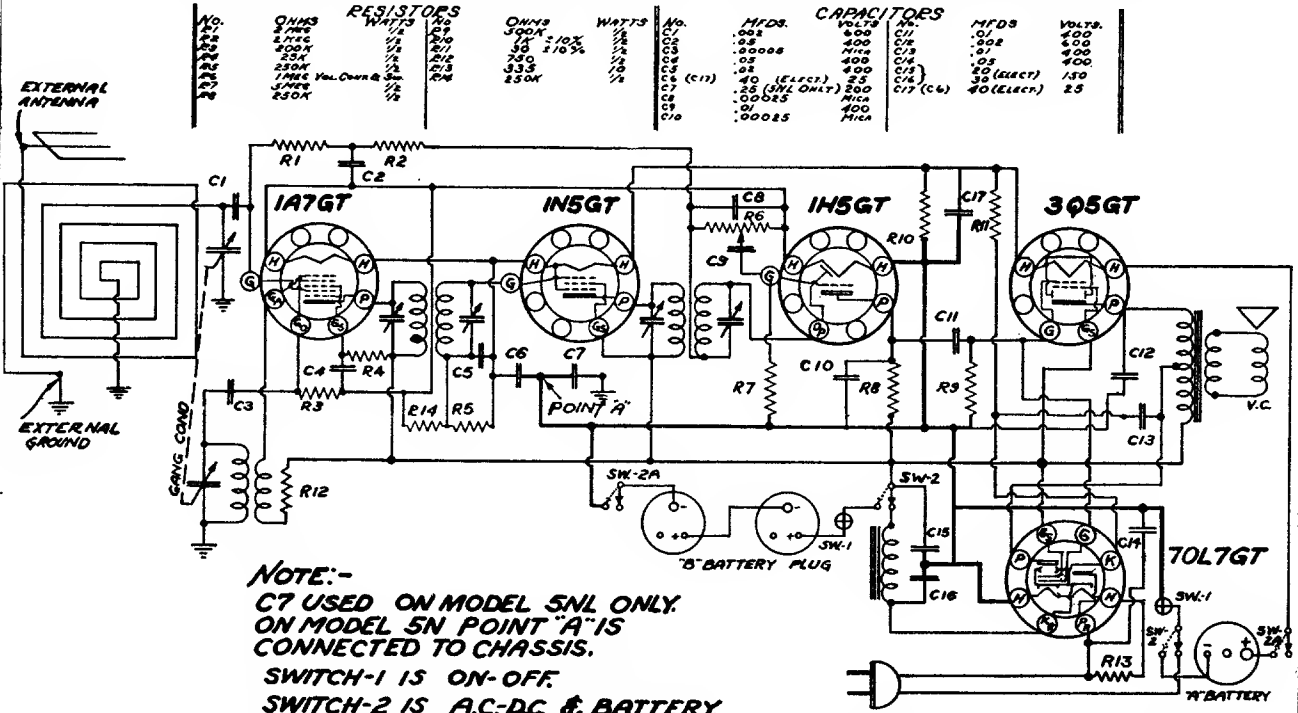

**NOTE:-**  
**C7 USED ON MODEL 5N1 ONLY.**  
**ON MODEL 5N POINT "A" IS**  
**CONNECTED TO CHASSIS.**  
**SWITCH-1 IS ON-OFF.**  
**SWITCH-2 IS A.C.-D.C. & BATTERY.**  
**SWITCH-2 SHOWN FOR A.C.-D.C.**  
**IF 455 K.C.**  
**ON MODEL 5N SWITCH, SWITCH 2A NOT USED.**

Spiegel, Inc. Model 5N  
 Cat. No. Z-7126

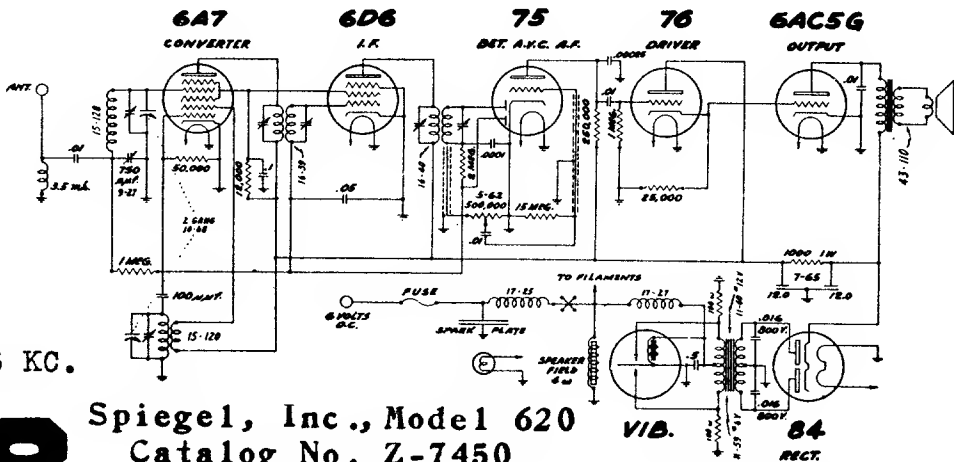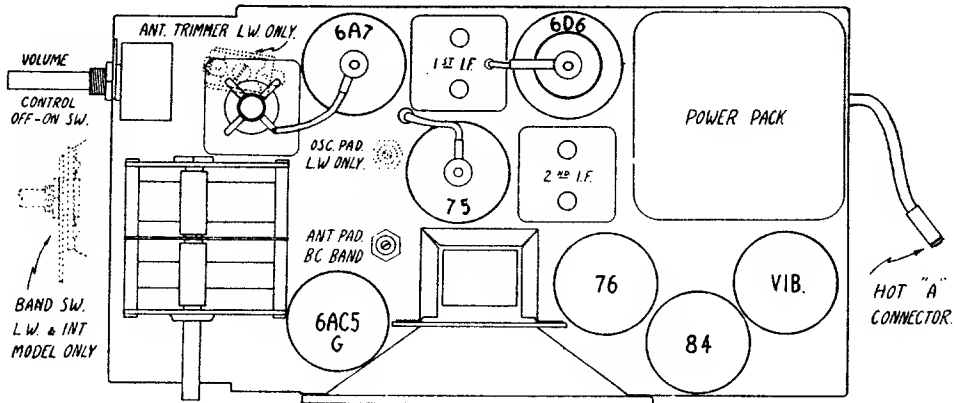


I.F. 456 KC.

Spiegel, Inc., Model 620  
 Catalog No. Z-7450


COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

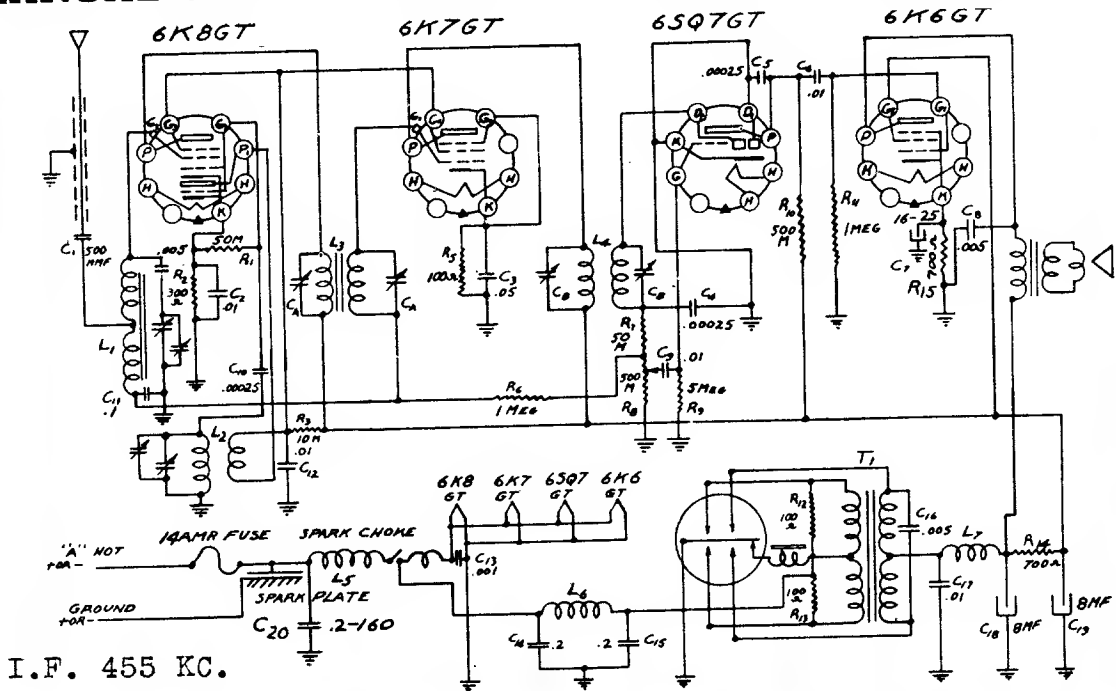

Spiegel, Inc., Chicago, Illinois

Model 297, Catalog Nos. Z-7456 and Z-7458

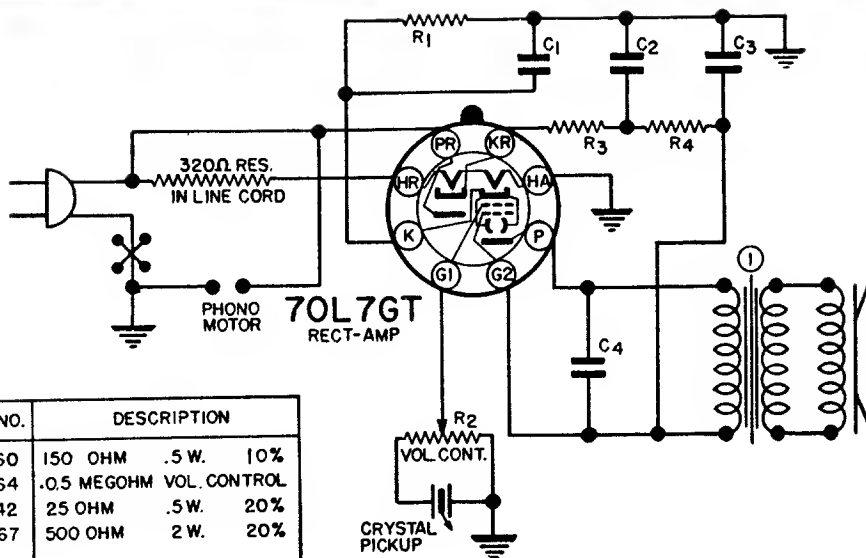

DIAG. NO.	PART NO.	DESCRIPTION
R <sub>1</sub>	N-1360	150 OHM .5 W. 10%
R <sub>2</sub>	N-1864	.05 MEGOHM VOL. CONTROL
R <sub>3</sub>	N-1742	25 OHM .5 W. 20%
R <sub>4</sub>	N-1867	500 OHM 2 W. 20%
C <sub>1</sub>	N-1866	20MFD. 25V. } ELECTRO.
C <sub>2</sub>		30 MFD. 150V. }
C <sub>3</sub>		30 MFD. 150V. }
C <sub>4</sub>	N-1344	.01 MFD. 400V.
1	N-1863	5 1/2" P.M. SPEAKER (TE-38)
1	N-1865	LINE RES. CORD
1	N-1910	5 1/2" P.M. SPKR. (TE-40B & 41)

Spiegel, Inc., Chicago, Illinois  
Phonograph Model "TE"

Catalog Numbers Z-7020 and Z-7021

# 149



STEWART-WARNER MODELS 91-81, 98-81 AND 910-81 CHASSIS

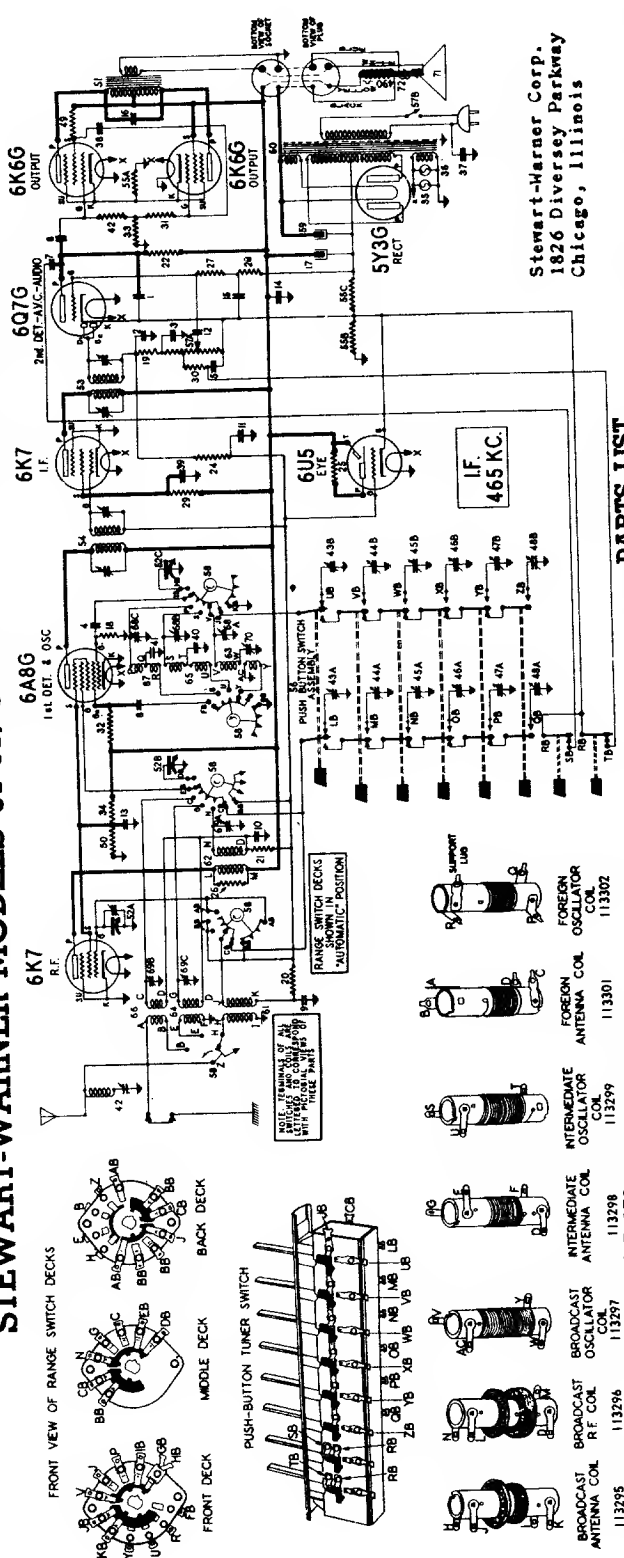





Table with columns: Part No., Description, Min. Price, Max. Price. Lists various components like resistors, capacitors, and tubes with their specifications and prices.

PARTS LIST

Table with columns: Diagram Number, Part Number, Description, Min. Price, Max. Price. Lists specific parts used in the chassis.

ELECTRICAL PARTS


Table with columns: Part Number, Description, Price. Lists electrical components like capacitors, resistors, and coils.

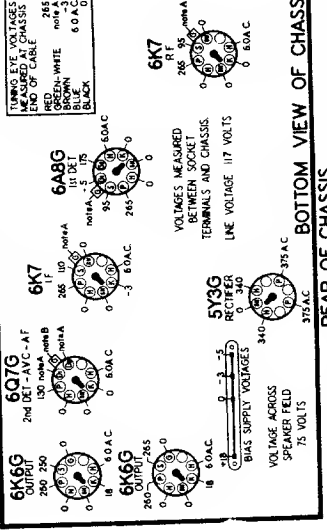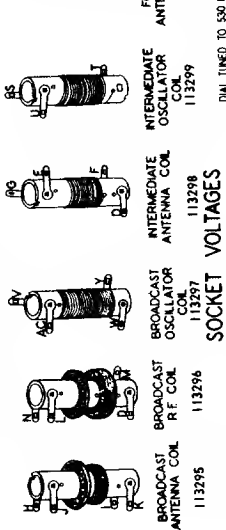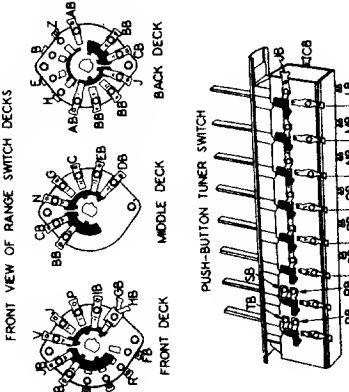


Use a high resistance voltmeter of at least 1000 ohms per volt. NOTE A: The base for the control grids of the 6A8-G, 6K7-R, 6K7-F, 6U5 and the diode plates of the 6Q7-G tubes is .5 volt measured across resistor... NOTE B: The base for the control grid of the 6Q7-G tube is .5 volt measured across resistors 25B and 37C.

STEWART-WARNER MODEL 91-648 RECEIVER

152

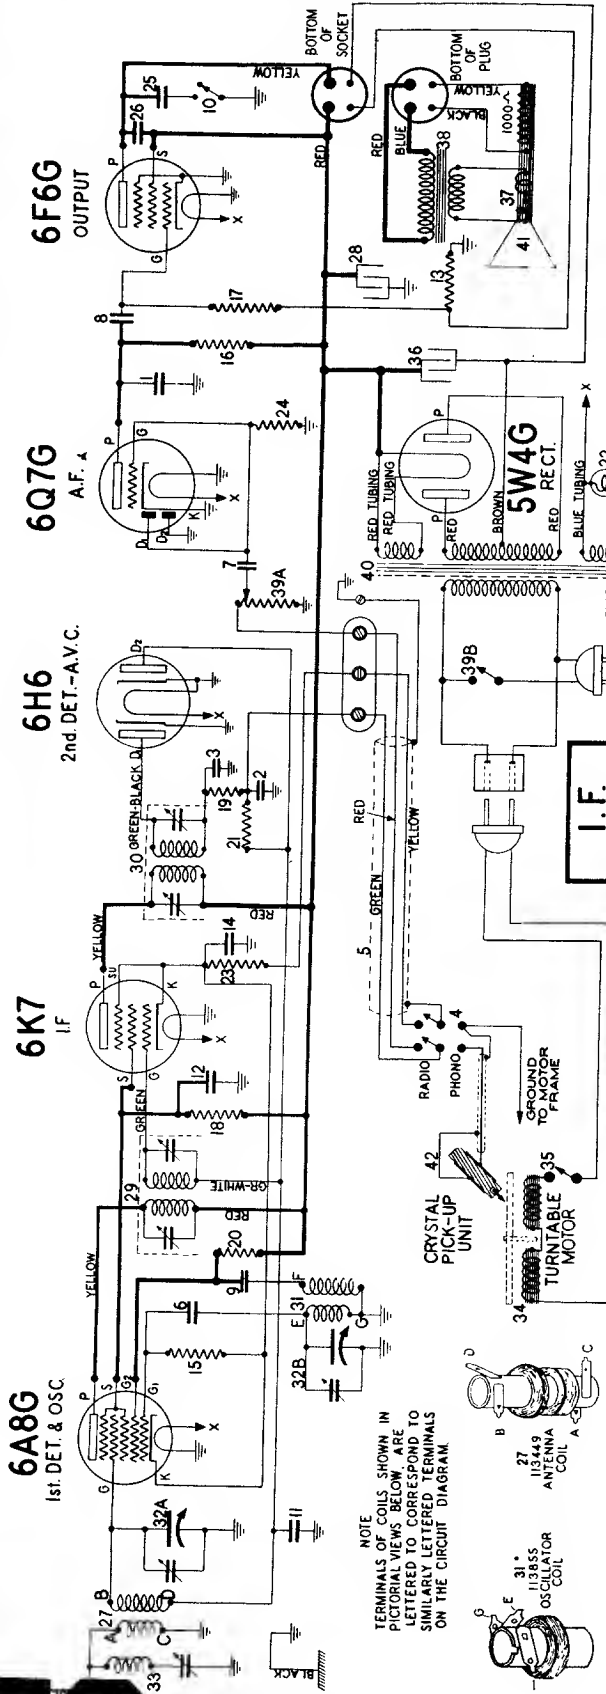

I.F. 465 KC.

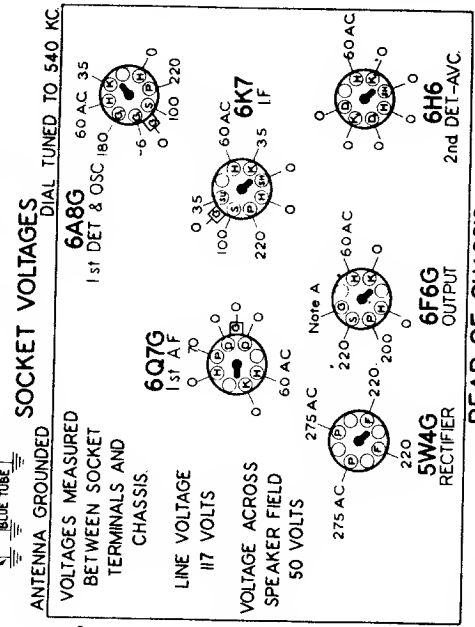

SOCKET VOLTAGES  
DIAL TUNED TO 540 KC  
VOLTAGES MEASURED BETWEEN SOCKET TERMINALS AND CHASSIS.

6A8G 1st DET & OSC 60 AC 35  
6Q7G 1st AF 0 70  
6H6 2nd DET.-A.V.C. 275 AC  
6F6G 60 AC  
5W4G 220 200 220 220 220 220  
RECTIFIER 60 AC  
2nd DET.-A.V.C.

LINE VOLTAGE 117 VOLTS  
VOLTAGE ACROSS SPEAKER FIELD 50 VOLTS

Diagram Number	Part Number	Description
1	83539	Condenser—mica 260 mmfd.
2-3	83783	Condenser—mica 110 mmf.
4	84566	Switch—"phono-radio"-D.P.D.T.
5	84572	Cable—Shielded for Phono. Pickup.
6	85061	Condenser—mica 51 mmfd.
7-8	88026	Condenser—paper .02 mfd. 400 Volt
9	88030	Condenser—paper .01 mfd. 400 Volt
10	88034	Switch for tone control.
11	88189	Condenser—paper .05 mfd. 200 Volt
12	88191	Condenser—paper .1 mfd. 300 Volt
13	88462	Resistor—W. W. 270 ohms 1 W. 10%
14	89532	Condenser—paper .25 mfd. 200 Volt
15	110552	Resistor—carbon 47,000 ohms 1/4 W.
16	110553	Resistor—carbon 220,000 ohms 1/4 W.
17	110559	Resistor—carbon 470,000 ohms 1/4 W.
18-19	110566	Resistor—carbon 33,000 ohms 1/4 W.
20	110569	Resistor—carbon 10,000 ohms 1/4 W.
21	110580	Resistor—carbon 3.3 meg. 1/4 watt
22	110629	Dial bulb—6.3 volt .25 amps.
23	112974	Resistor—carbon 220 ohms 1/4 W. (10%)
24	112975	Resistor—carbon 10 meg. 1/4 watt.
25	113034	Condenser—paper .04 mfd. 600 volt
26	113035	Condenser—paper .006 mfd. 600 V
27	113449	Antenna coil
28	113808	Condenser—electrolytic 8 mfd. 350 V.
29	113853	Transformer—1st I.F.
30	113854	Transformer—2nd I.F.
31	113855	Coil—oscillator
32A-32B	113869	Condenser—gang
33	113889	Coil—wave trap
34	114400	Phono. motor & turntable.
35	114437	Toggle Switch—phono. power off-on switch
36	114972	Condenser—elect. 16 mfd. 45 V.
37	U-115048	Speaker—dynamic 6"
38	U-116212	Output transformer for U-115048 speaker
39A-39B	116274	Volume control 500,000 ohms with switch
40	116283	Transformer—power 110 V 60 C.
41	U-116296	Cone & voice coil assembly for U-115048 speaker
42	116300	Phono. pickup head.


REAR OF CHASSIS  
Use a high resistance voltmeter of at least 1000 ohms per volt.  
NOTE A: The bias for the control grid of the 6F6G tube is —13.5 volts measured across resistor number 13.






# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## MODEL 97-56-S CHASSIS RECEIVER MODELS 97-561 to 97-569

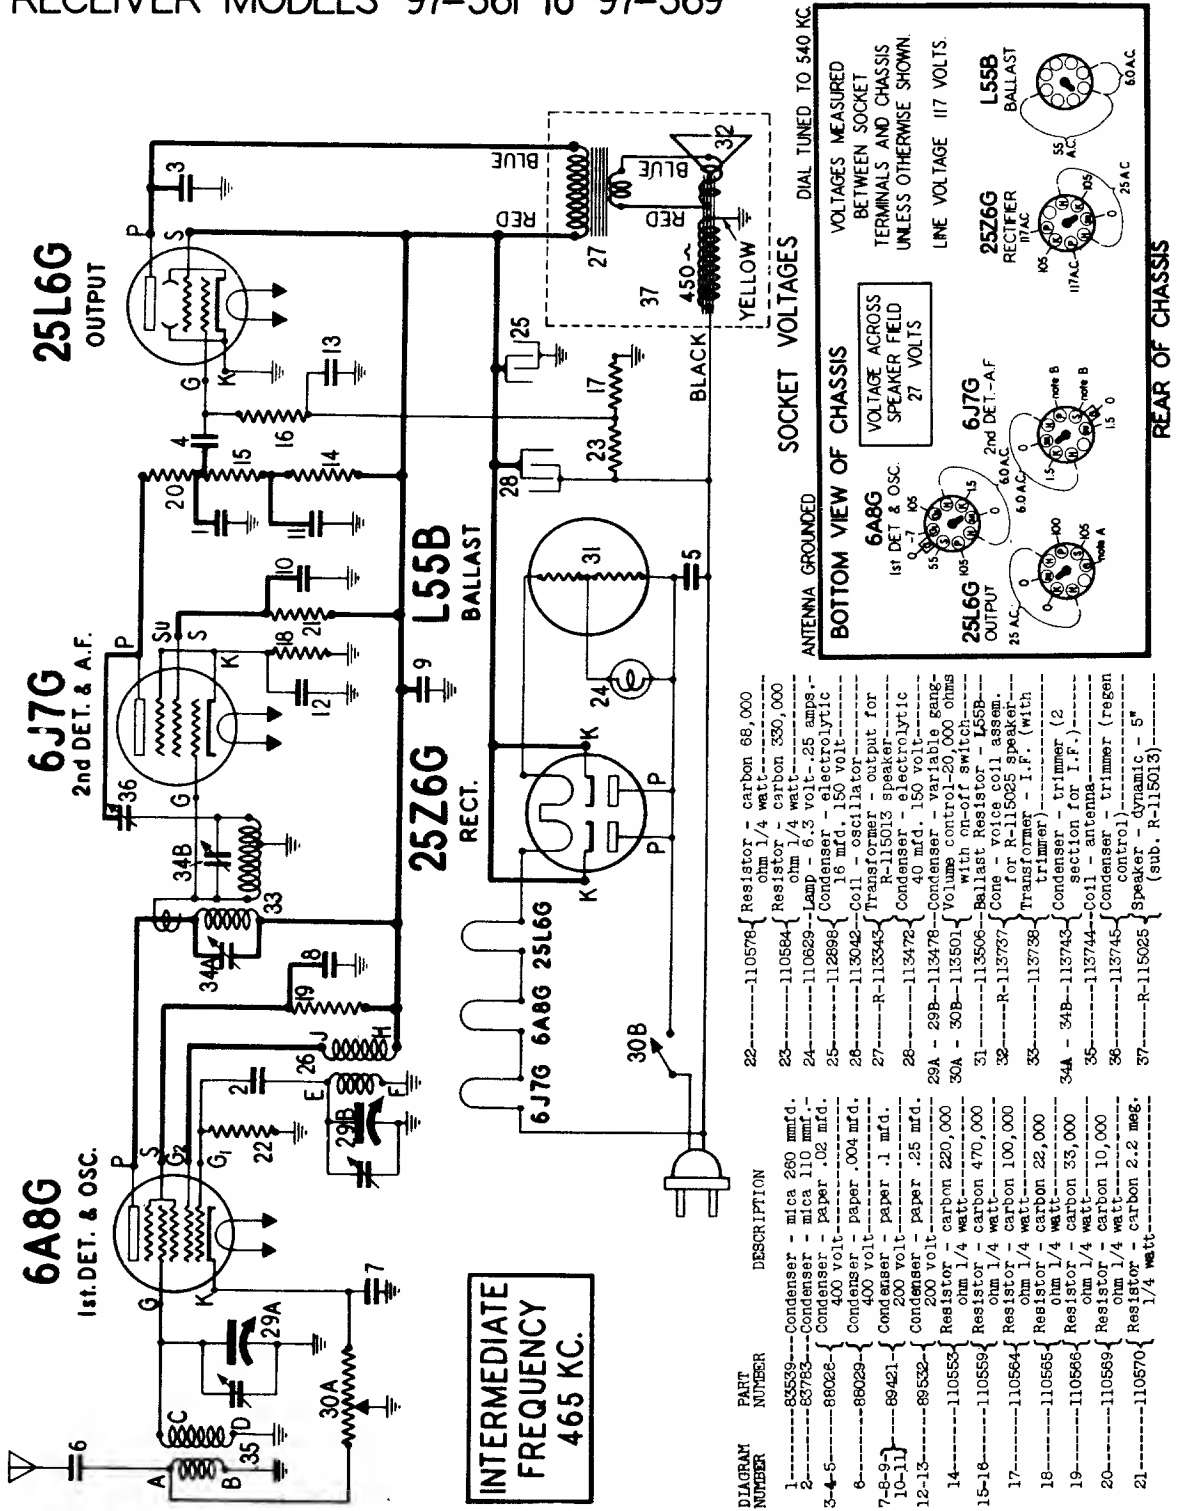


**Stromberg-Carlson No. 335 and 336 Radio Receivers**  
 STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY  
 ROCHESTER, NEW YORK

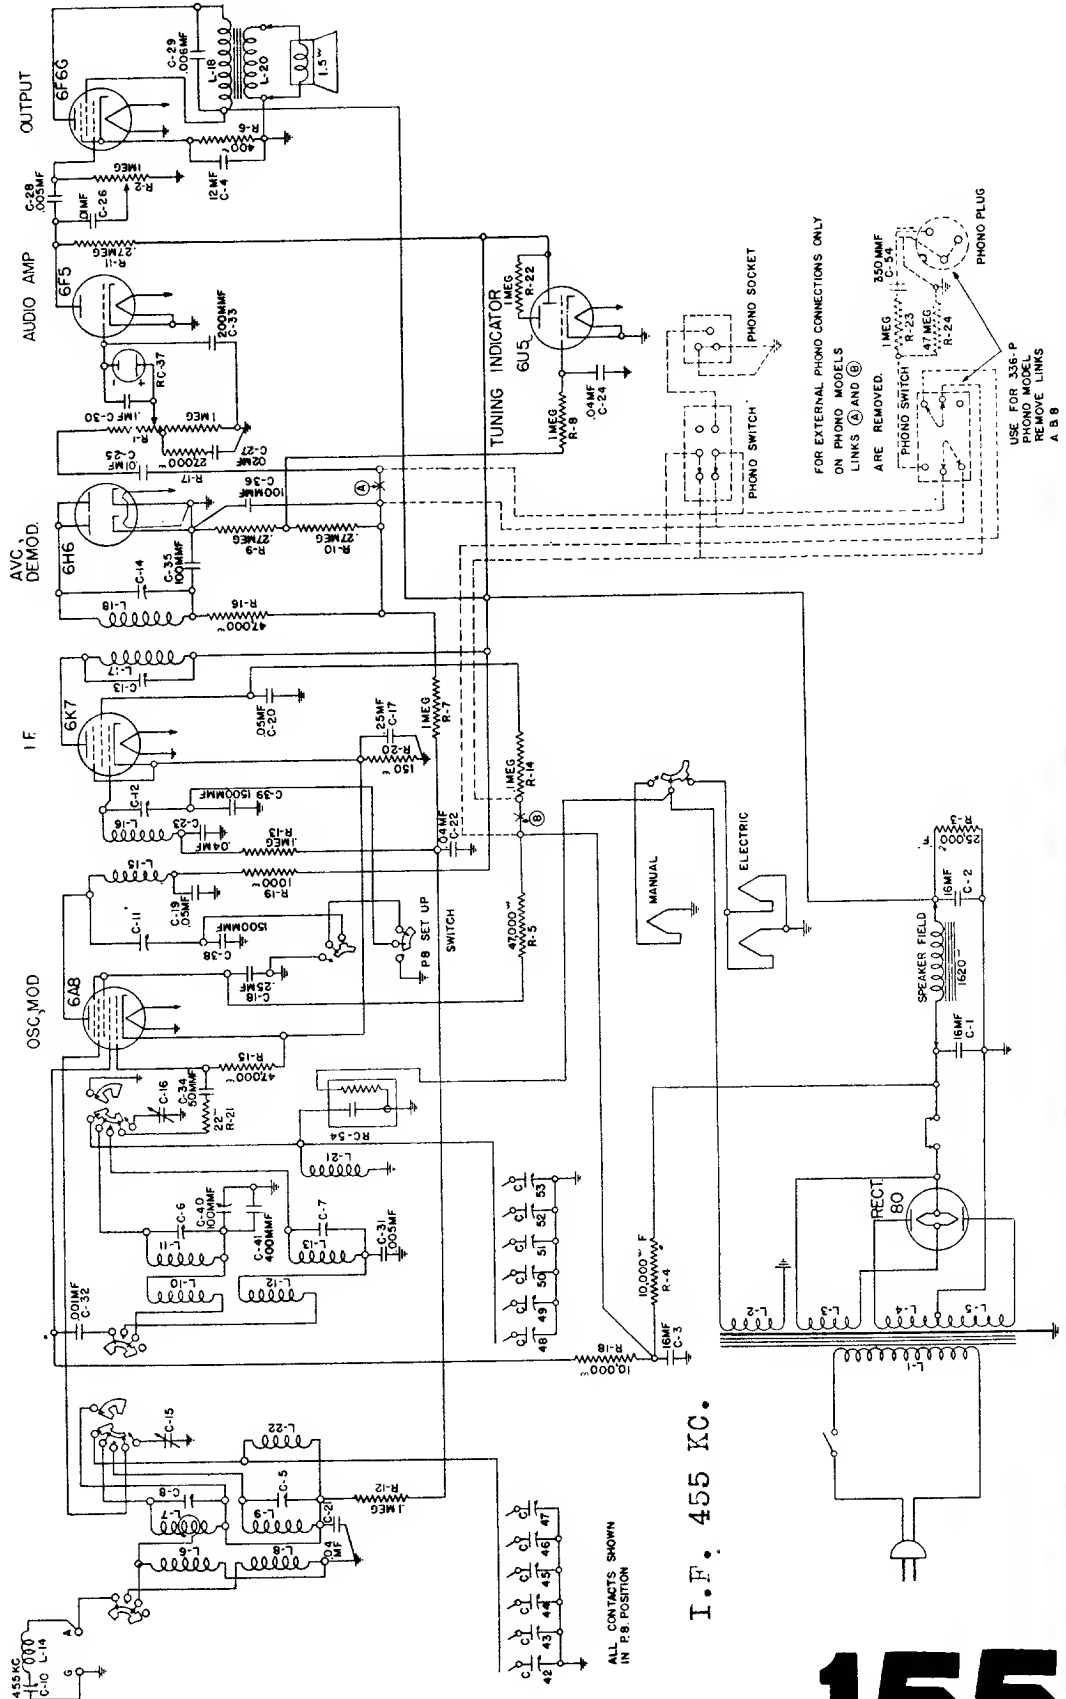

## Stromberg-Carlson Nos. 340 and 341 Radio Receivers


STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY  
ROCHESTER, NEW YORK

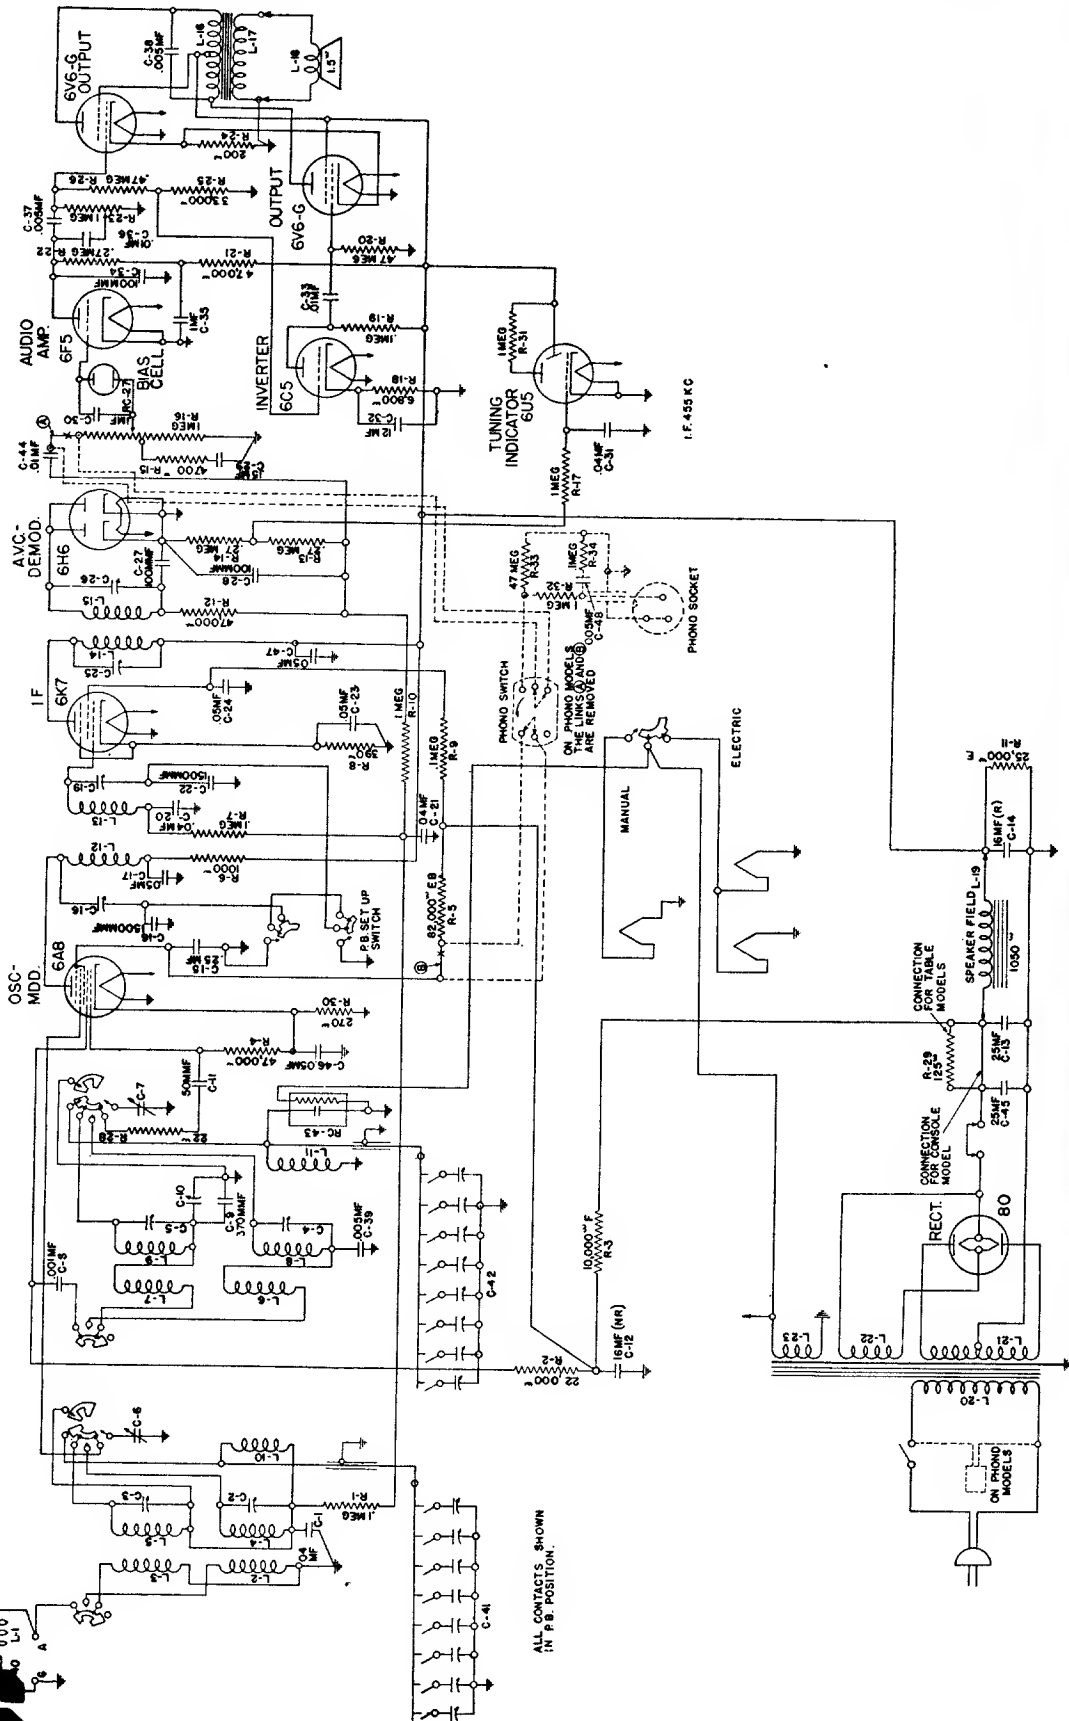

**Stromberg-Carlson No. 350 Radio Receivers**  
 STROMBERG-CARLSON TELEPHONE MANUFACTURING COMPANY  
 ROCHESTER, NEW YORK

**ELECTRICAL SPECIFICATIONS**


Type of Circuit..... Superheterodyne with A. F. C. Electric Tuning  
 Tuning Ranges..... A—530 to 1700 Kc.; B—1700 to 5600 Kc.; C—5600 to 18,000 Kc.

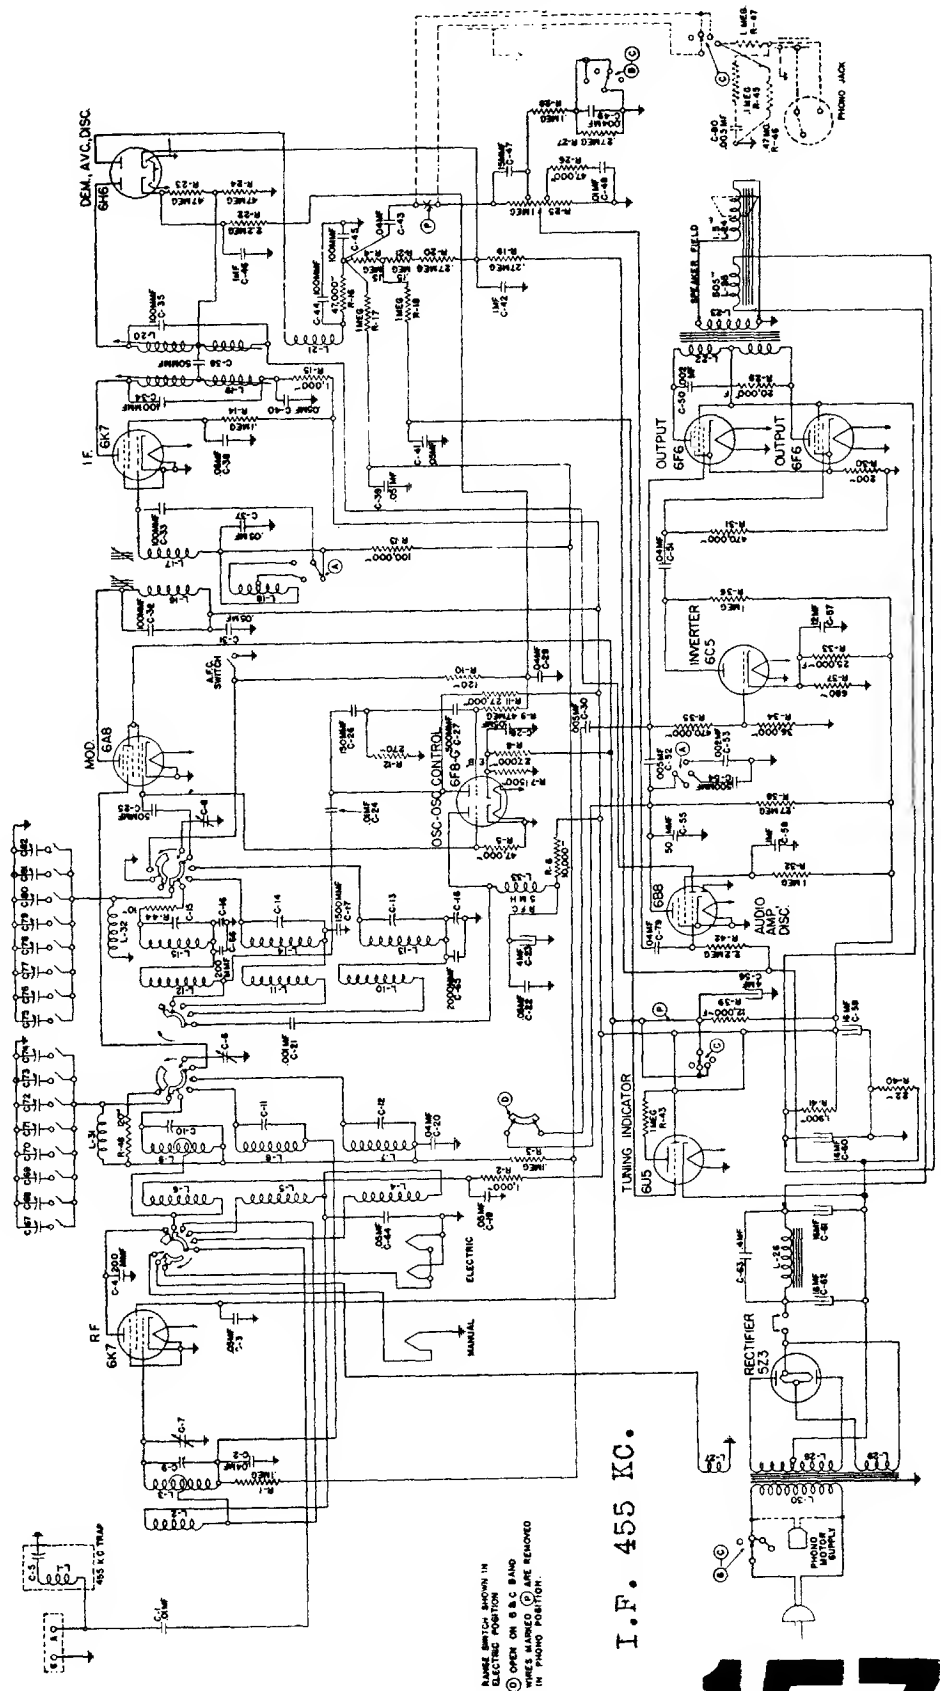

BASES MARKED (A) SHOWN IN ELECTRIC POSITION  
 (B) OPEN ON S. & C. BAND  
 WIRING MARKED (C) ARE REMOVED IN PHONO POSITION.

I. F. 455 KC.


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

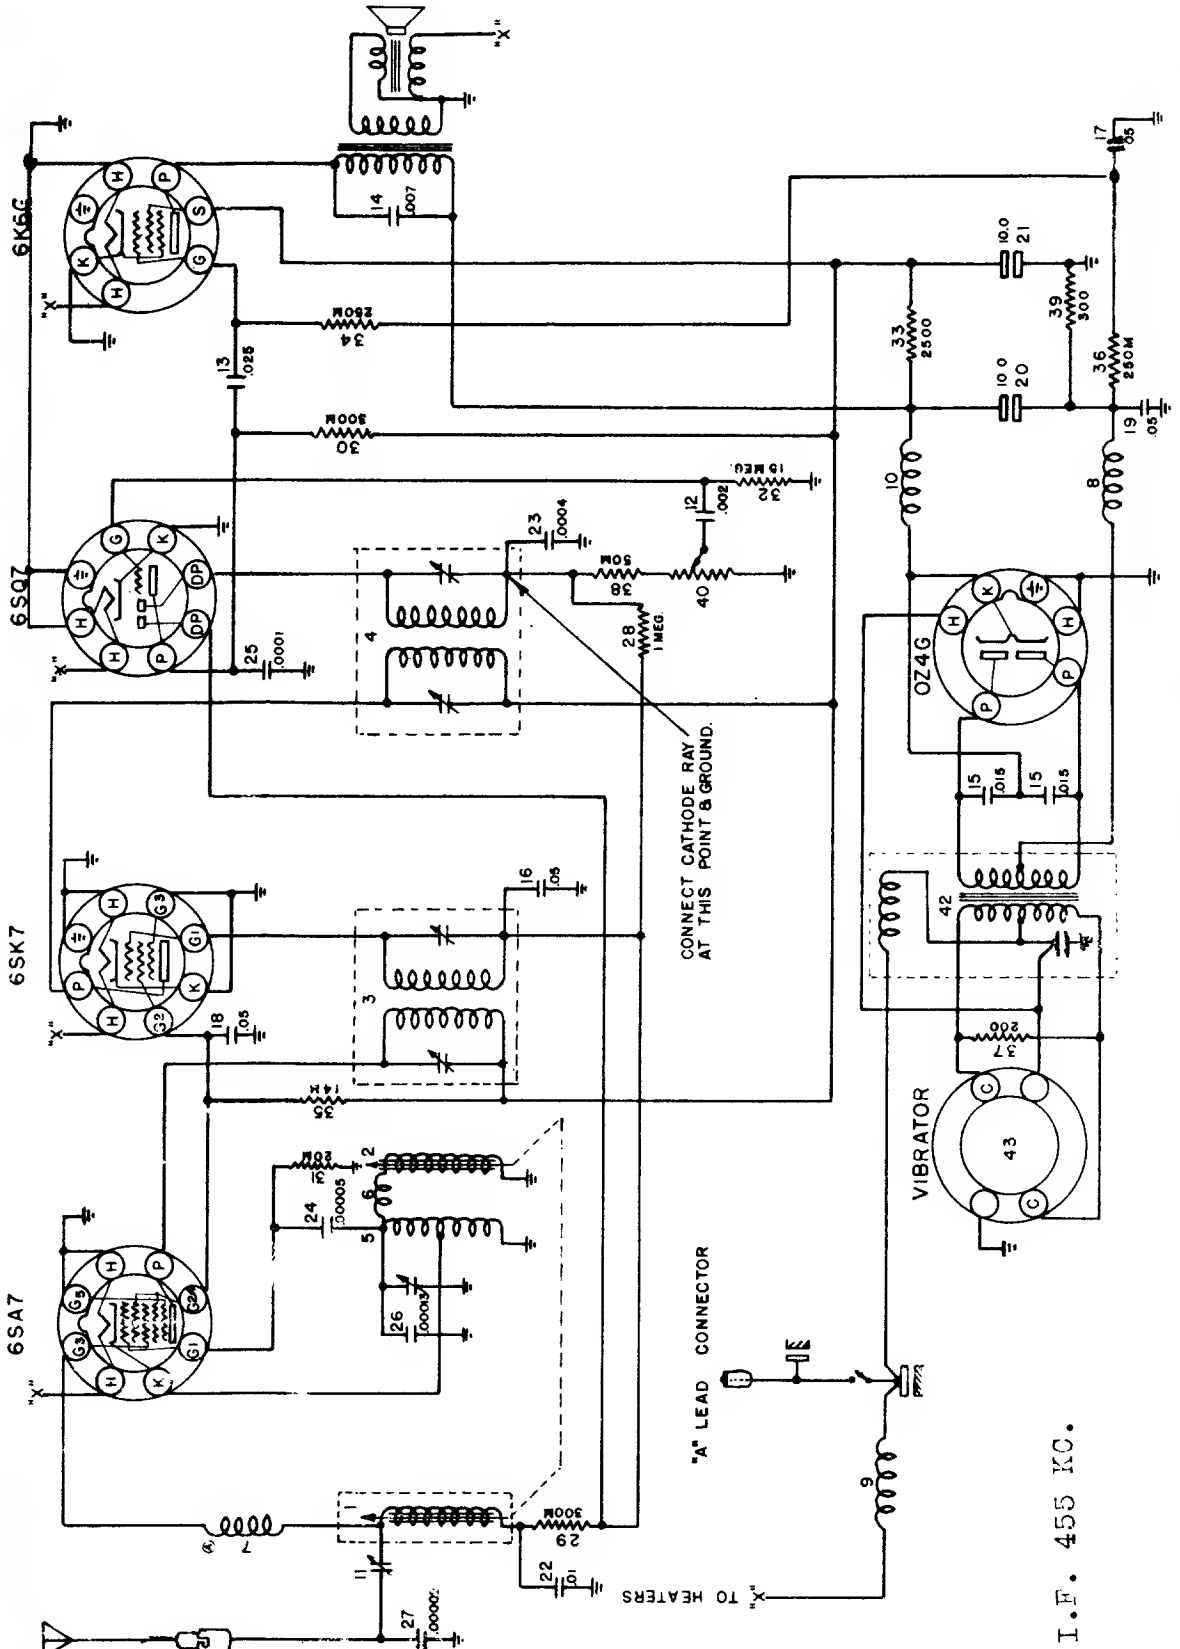

DELCO MODEL R-675

I.F. 455 KC.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

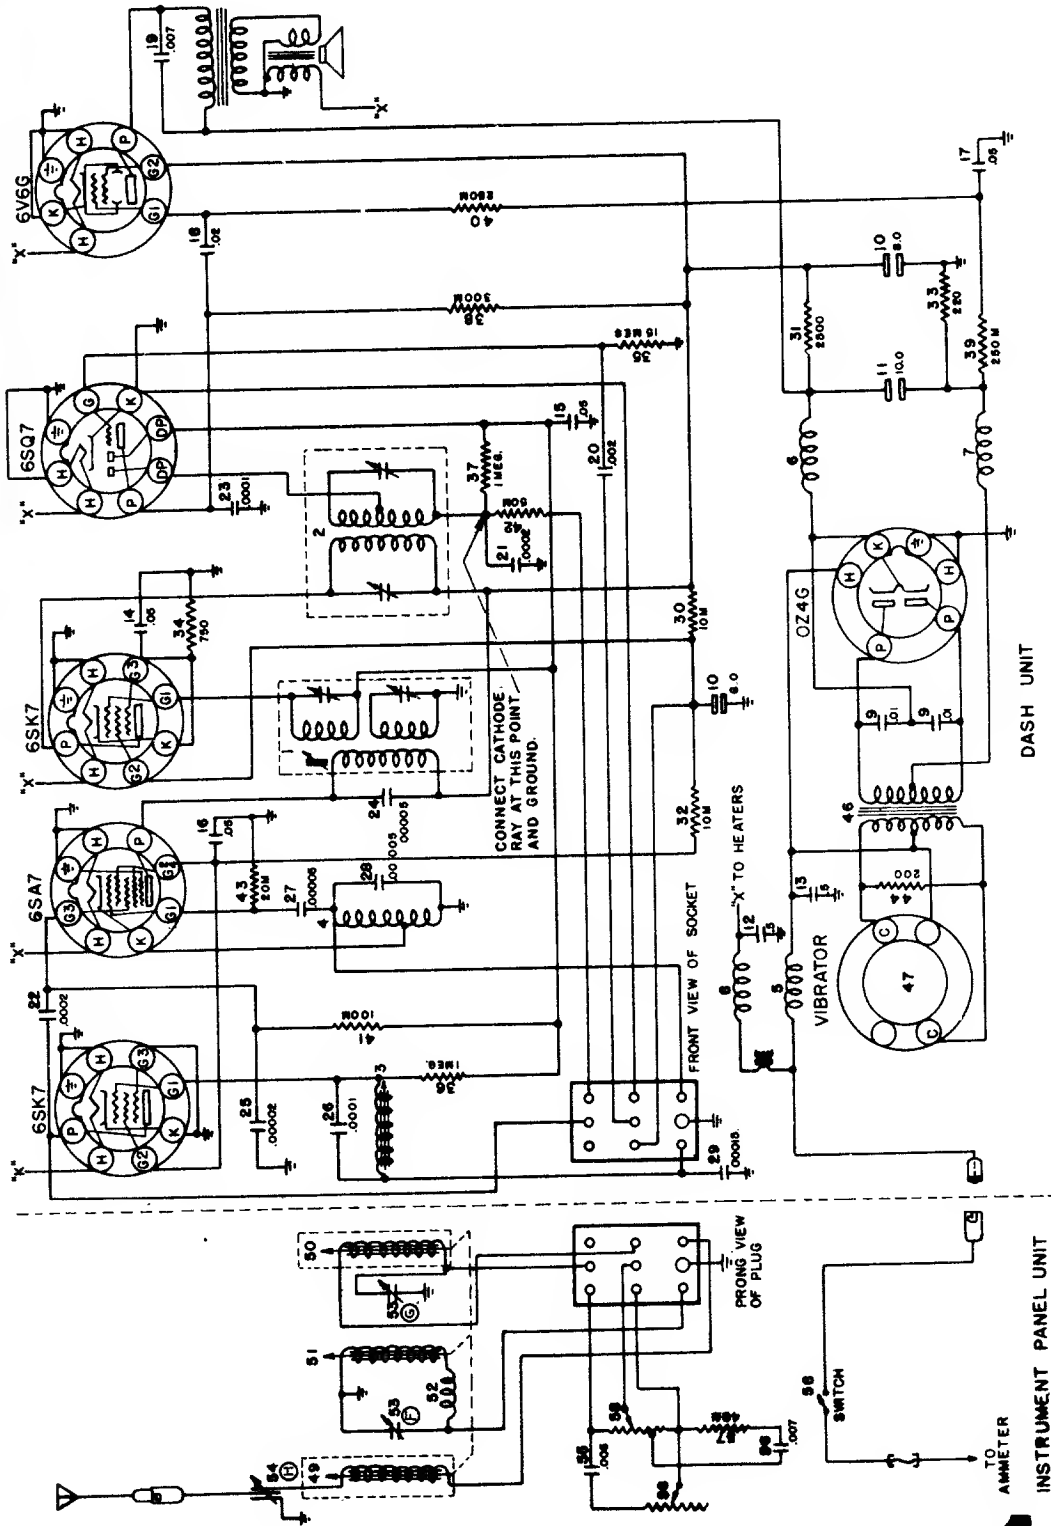

DELCO MODEL R-678 CIRCUIT DIAGRAM




I.F. 455 KC.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

SERVICE INSTRUCTIONS--DELCO MODEL R-678--Cont'd.




Tuning is accomplished by means of the conventional manual control or by means of five push-buttons which mechanically adjust the position of the iron cores in the tuning coils, tuning the radio to preselected frequencies

## UNITED MOTORS SERVICE INCORPORATED

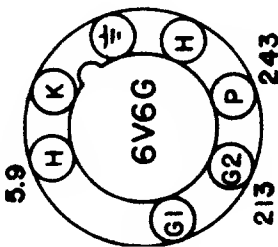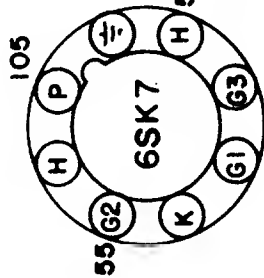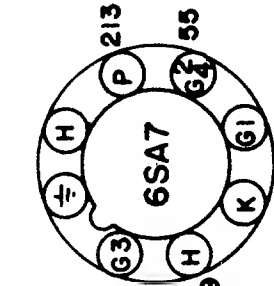


VOLTAGE READINGS TAKEN BETWEEN SOCKET TERMINALS AND GROUND WITH D.C. VOLTMETER HAVING RESISTANCE OF 1000 OHMS PER VOLT. ALL READINGS TAKEN WITH 5.9 FILAMENT VOLTAGE AT TUBES.

CURRENT DRAIN WITH SPEAKER & DIAL LIGHT 6.7 AMPS. "B" SUPPLY DRAIN 50 M.A.

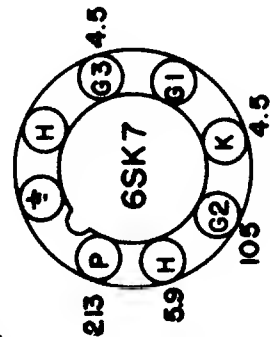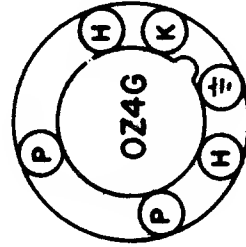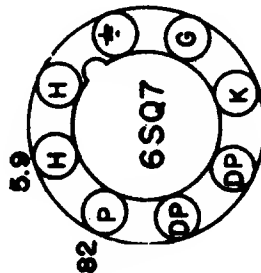


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

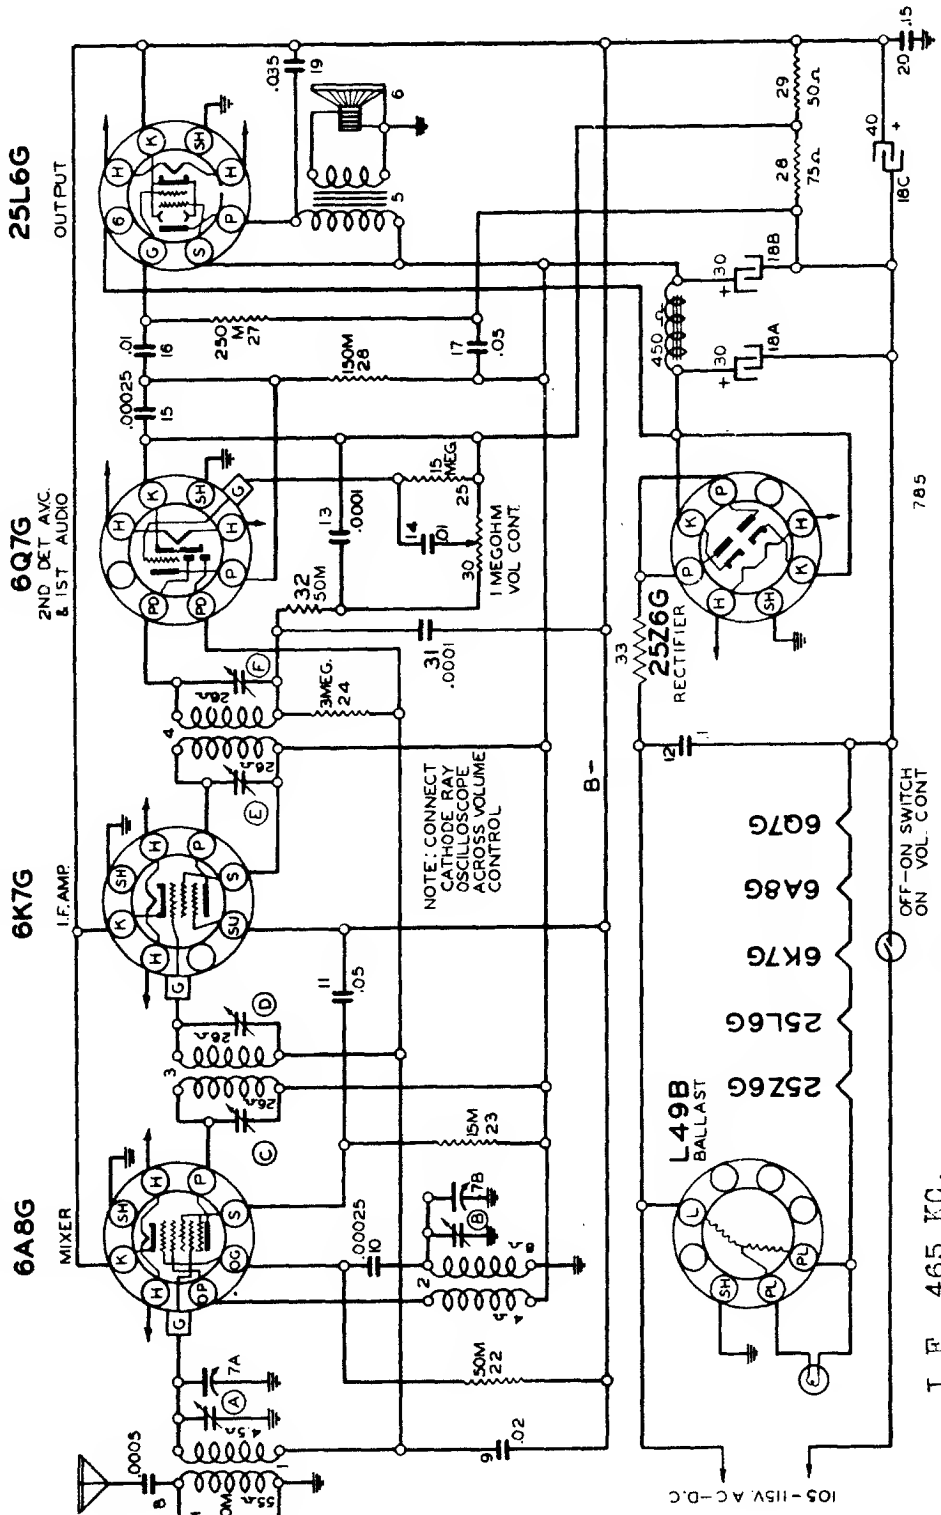

DELCO MODELS R-1134-35-39 CIRCUIT DIAGRAM

United Motors Service, Inc.  
 3044 West Grand Blvd.  
 Detroit, Mich.




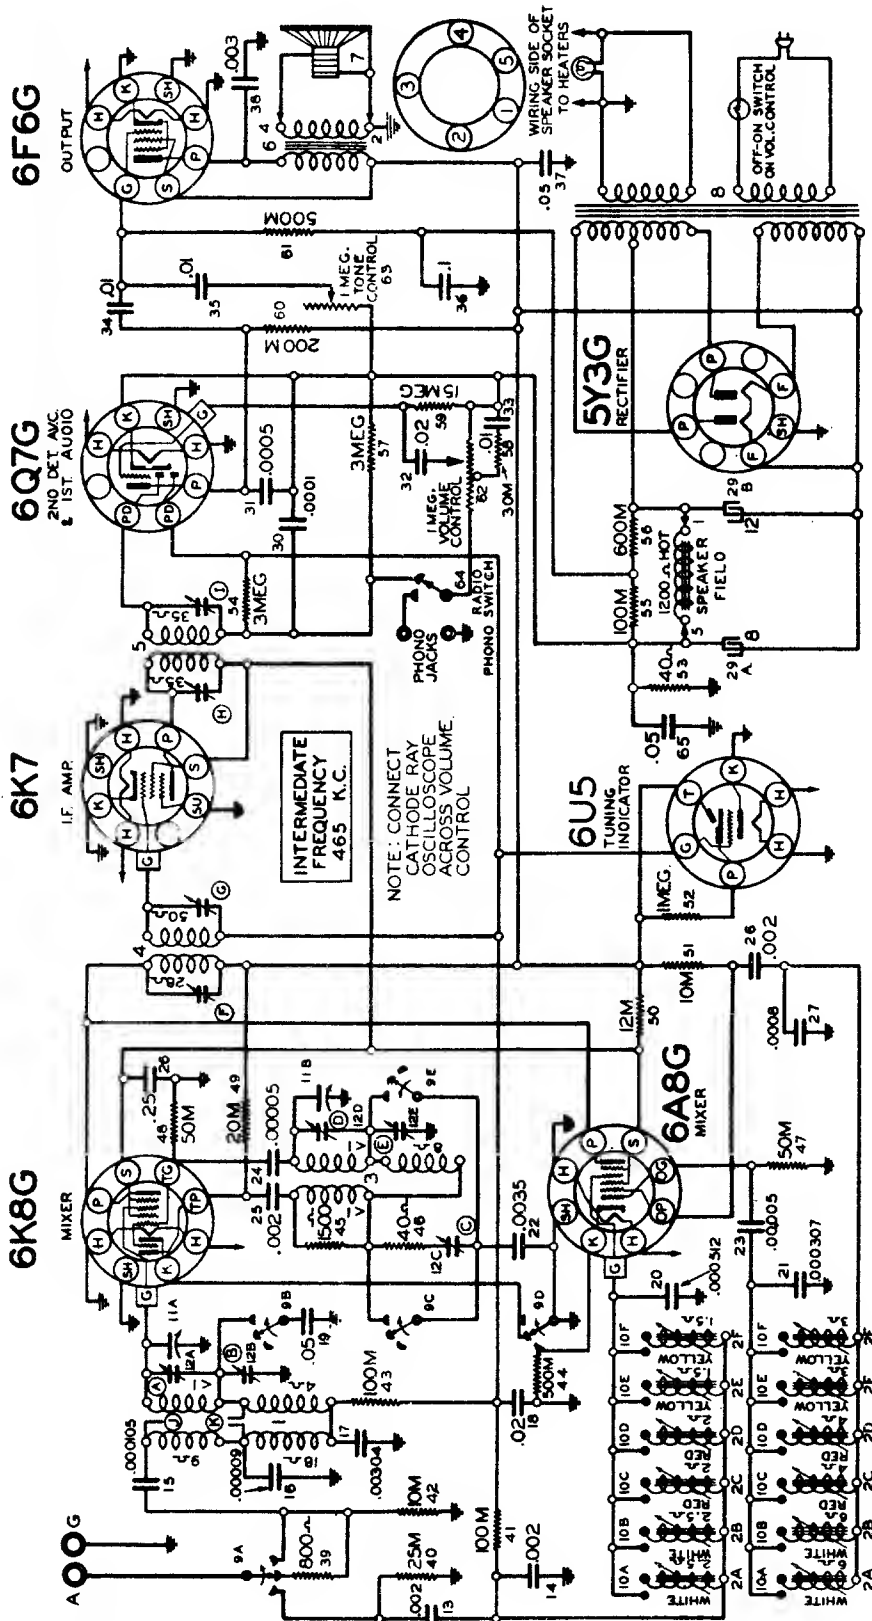

United Motors Service, Inc.  
 3044 West Grand Blvd.  
 Detroit, Michigan

DELCO MODEL R-1142 CIRCUIT DIAGRAM

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

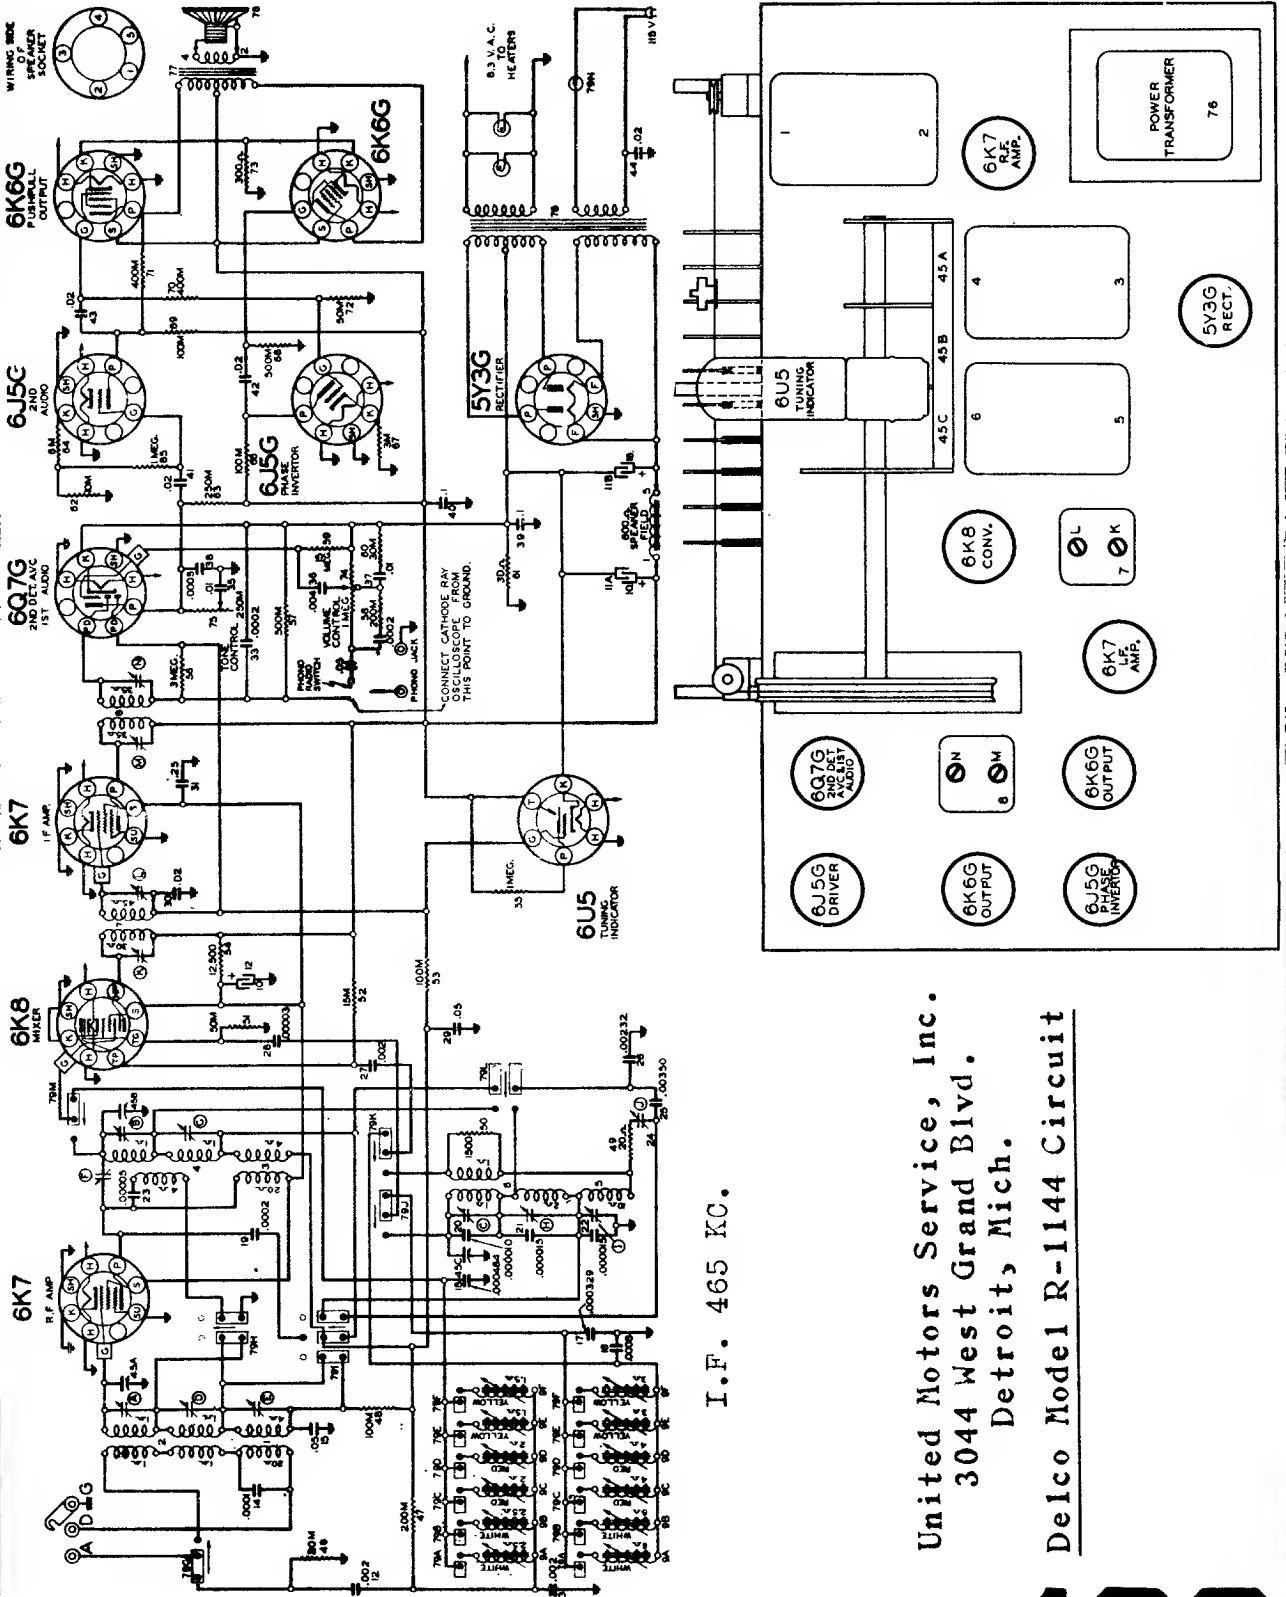


I.F. 465 KC.

United Motors Service, Inc.  
3044 West Grand Blvd.  
Detroit, Mich.

Delco Model R-1144 Circuit


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

**Series 5D2**  
**Wells-Gardner & Co.**  
**2701 N. Kildare Ave.**  
**Chicago, Illinois**




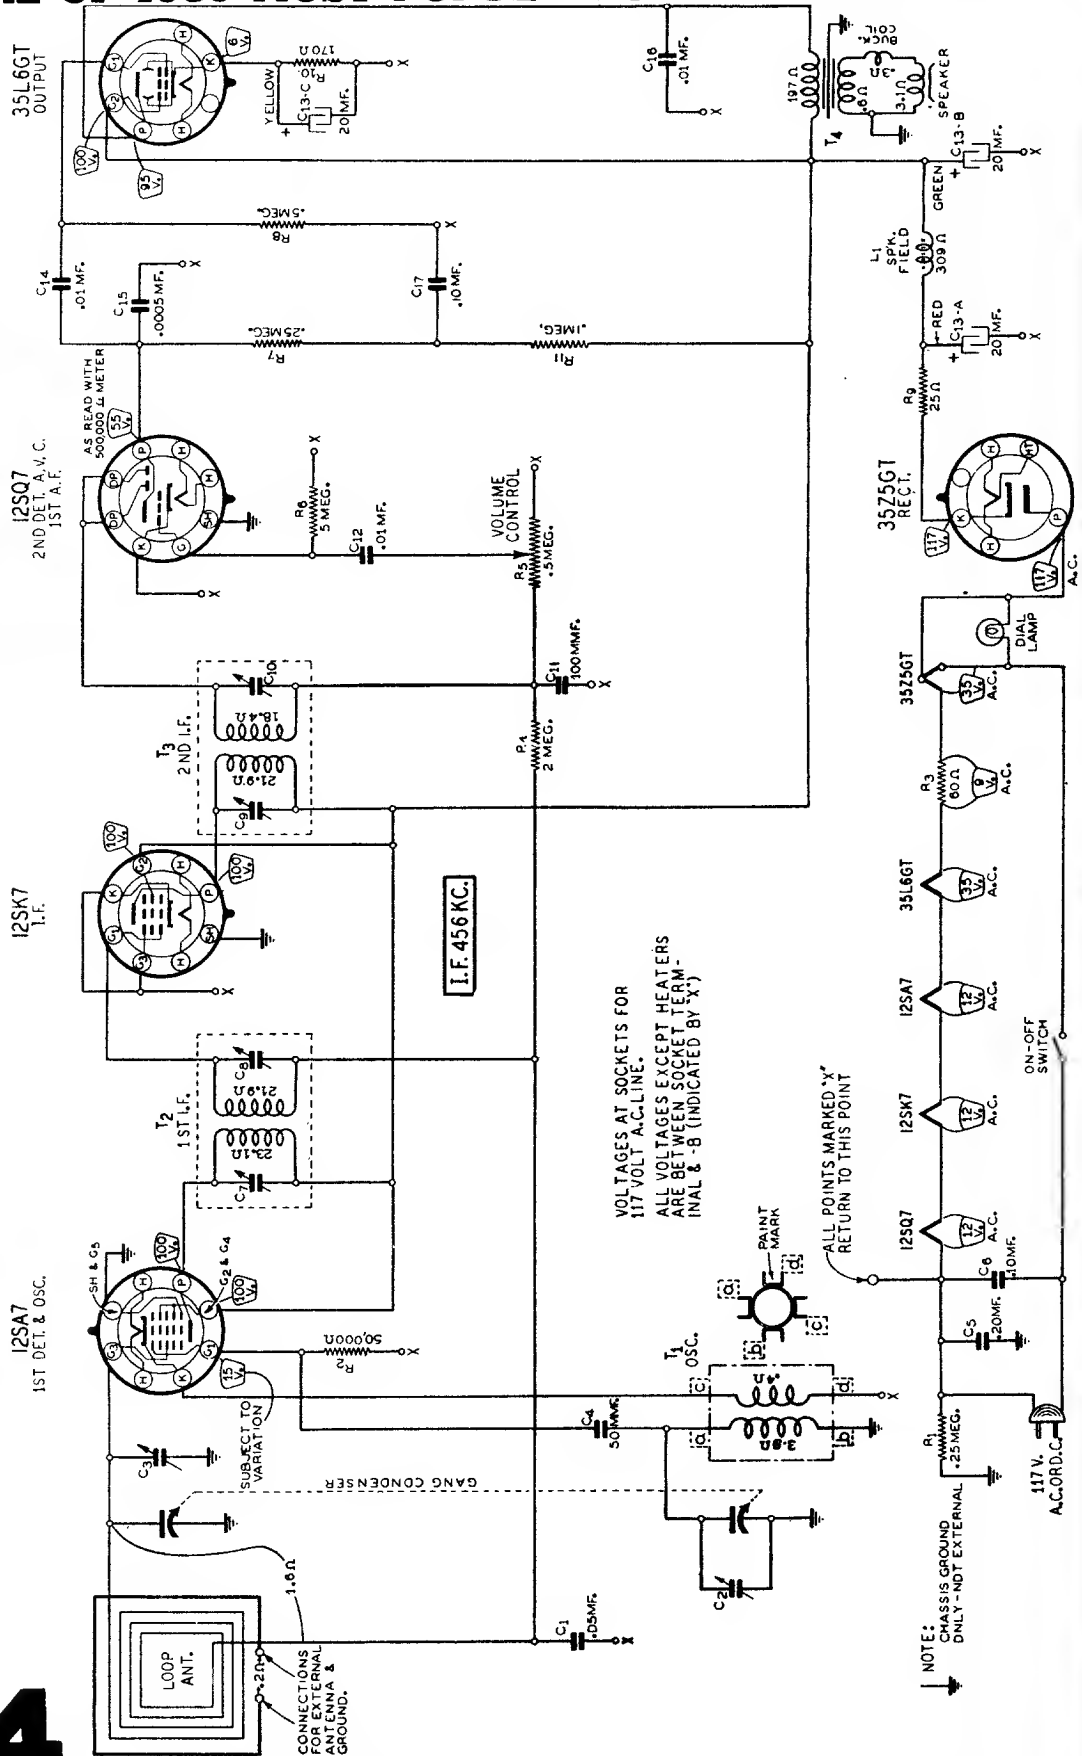


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Truetone Model D926

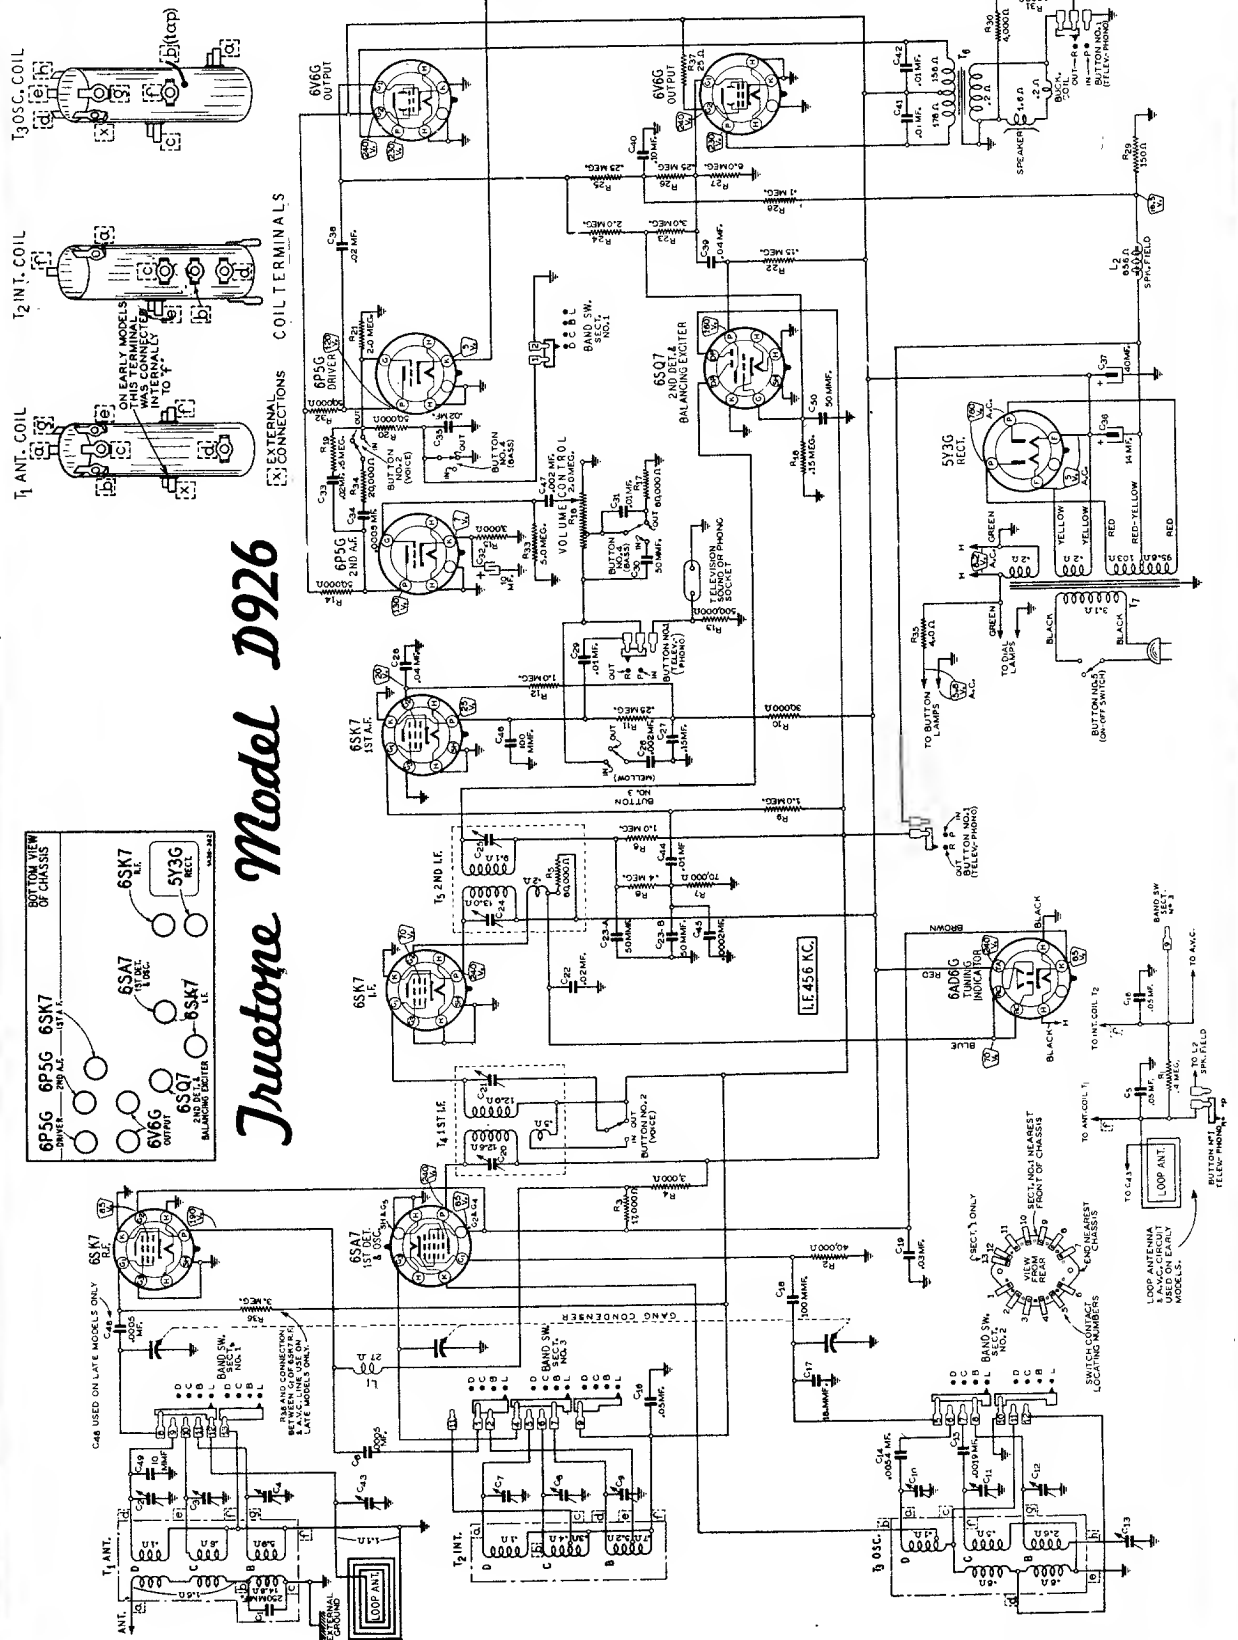



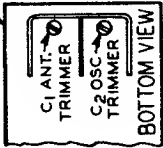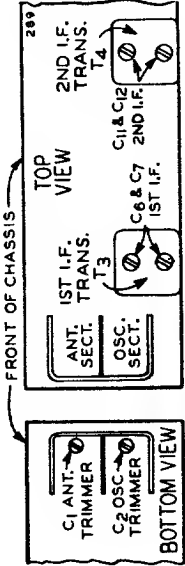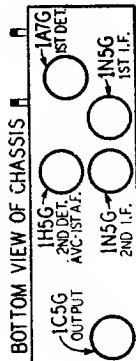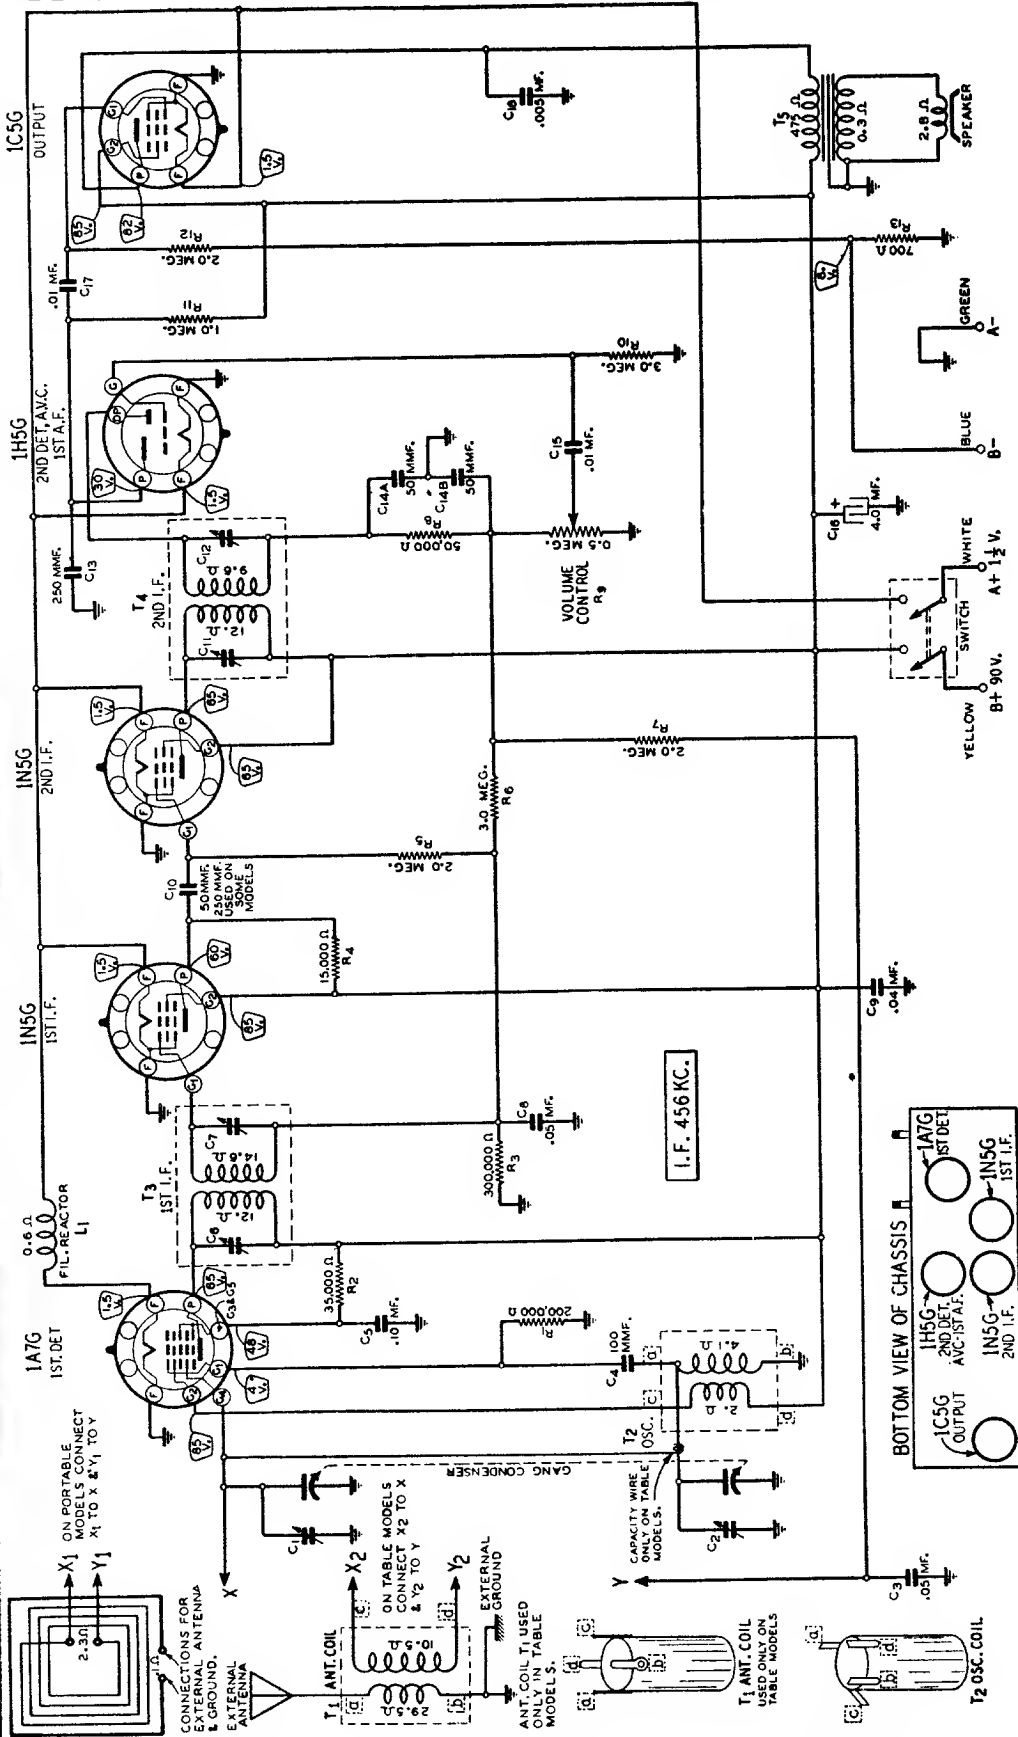

*Truetone Model D937*  
 Factory Model 5B3-2


# Westinghouse Radio Model WR-165

Five-Tube, Single-Band, AC-DC, Superheterodyne Receiver

## Alignment Procedure

**Output Meter Alignment.**—Connect the meter across the voice coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—Connect the low side of the test-oscillator to the receiver chassis, through a .01 mfd. capacitor, and keep the output as low as possible. The antenna should be rolled up and kept at least one foot from chassis during alignment.

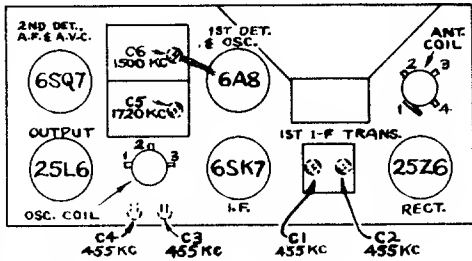

Trimmer Locations


Steps	Connect the high side of test-oscillator to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output—
1	6A8 1st-Det. grid cap, in series with .01 mfd.	455 kc	Quiet point at 1,800 kc end of dial	C1, C2, C3, C4 (1st and 2nd I-F transformers)
2	Antenna term. of ant. trans. in series with 100 mmfd.	1,720 kc	Full clockwise (out of mesh)	C5 (oscillator)
3		1,500 kc	Resonance on 1,500 kc signal.	C6 (antenna)

INTERMEDIATE FREQUENCY..... 455 kc  
 POWER OUTPUT (125 volt, 60 cycle supply)  
 Undistorted..... 1.5 watts  
 Maximum..... 2.0 watts  
 LOUDSPEAKER  
 Type..... 4-inch Electrodynamic


**Power-Supply Polarity.**—For operation on d-c, the power plug must be inserted in the outlet for correct polarity. If the set does not function, reverse the plug. On a-c, reversal of the plug may reduce hum.

**Resistor in Power Cord.**—The power cord contains a resistor which becomes warm during operation.

**Antenna.**—The set is equipped with length of antenna wire. Do not connect the antenna to ground. If an outdoor antenna is used, it should not be longer than 100 feet, including lead-in. If it is longer, connect a 100 to 200 mmf. capacitor in series with the lead-in.

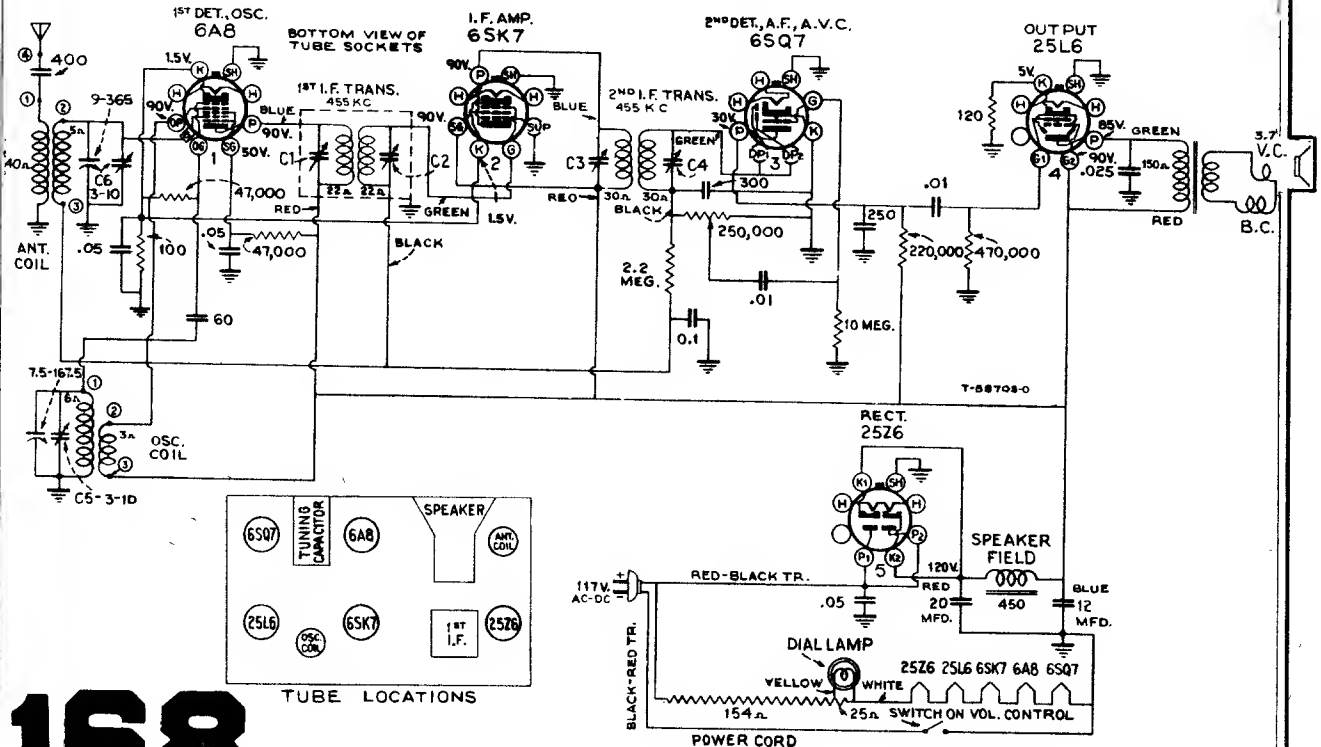


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

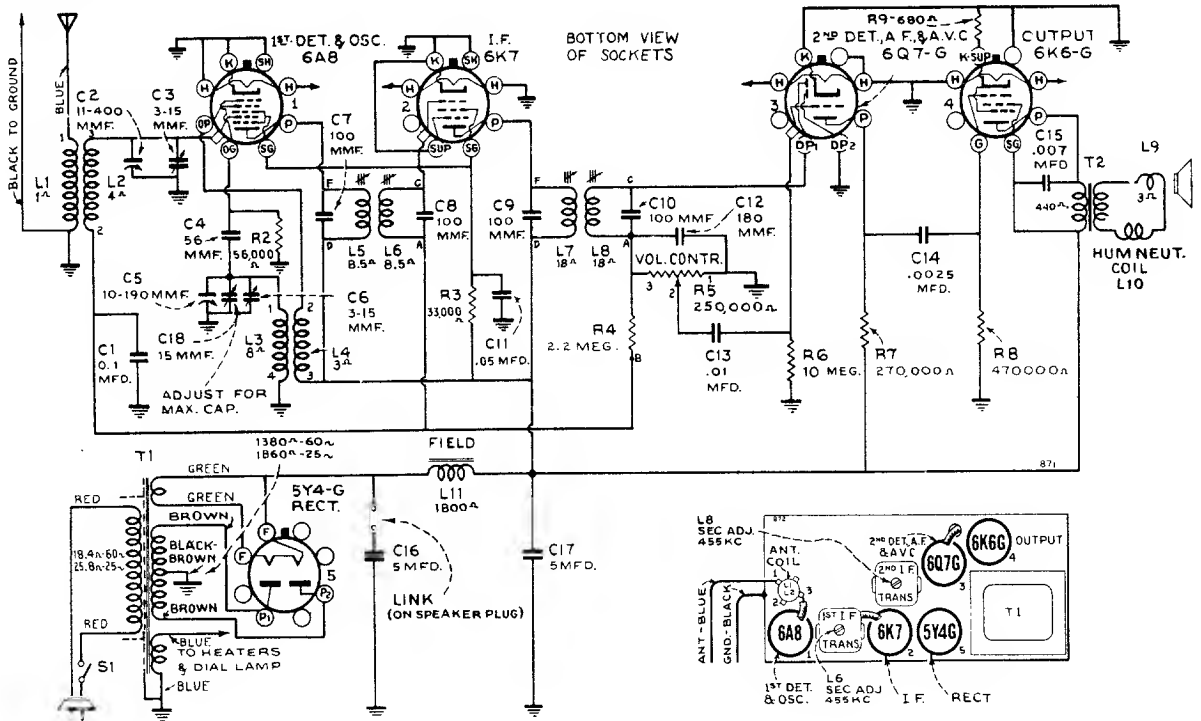

## Model WR-256

### Five-Tube, Single-Band, Superheterodyne Receiver

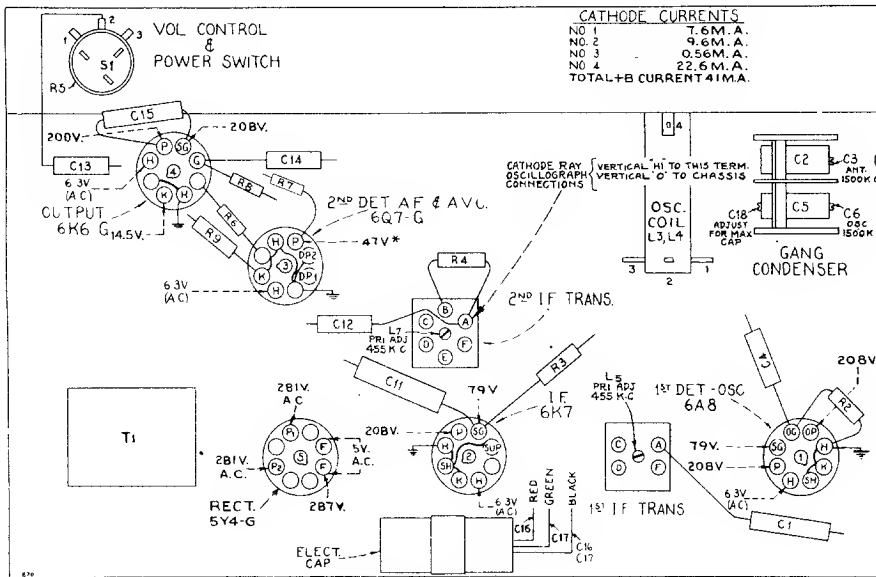


BOTTOM VIEW - REAR OF CHASSIS

#### Tube Socket Voltages and Location of Parts



\* Note: Values with star (\*) are operating voltages. Values not starred are actual measured voltages.

Measurements made to chassis unless otherwise indicated. Measurements made with set tuned to quiet point, volume control at minimum, using 1,000-ohm-per-volt meter, having ranges of 10, 50, 250, and 500 volts. (Use nearest range above the specified measured voltage.)

Values should hold within approximately  $\pm 20\%$  for 117-volt 60-cycle supply.

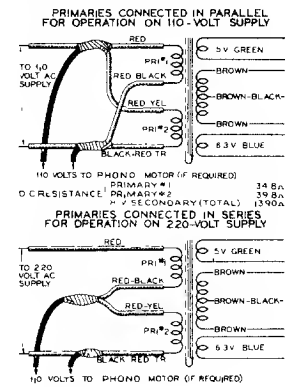


#### Connections for No. 30888 Transformer






# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

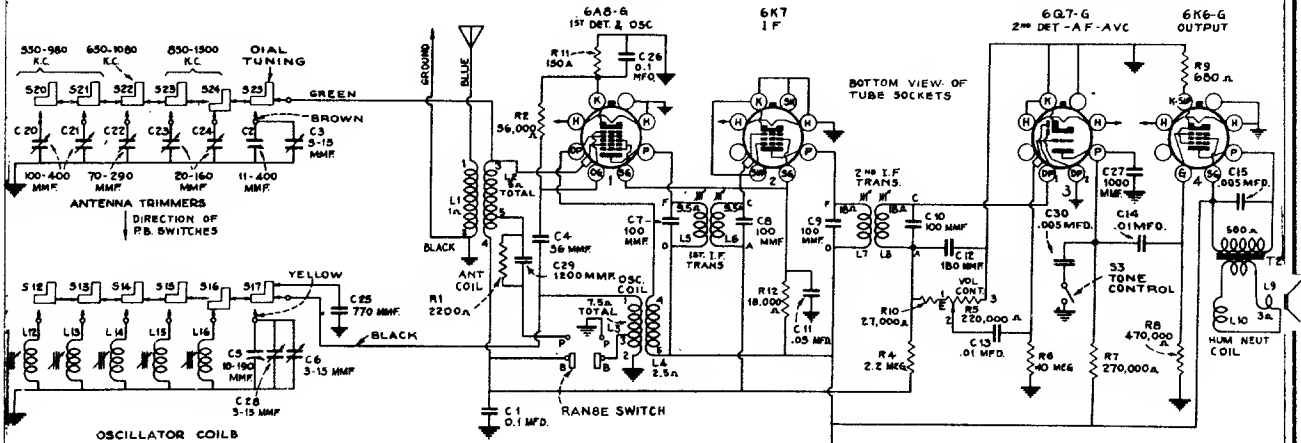


## WR-258 WR-260

Westinghouse  
Radio

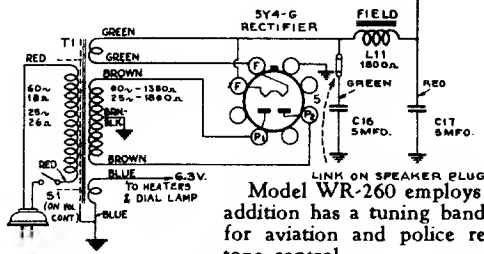


Model WR-260 employs all features of the WR-258 and in addition has a tuning band covering from 1,550 to 3,500 kc for aviation and police reception. It also has a two-point tone control.

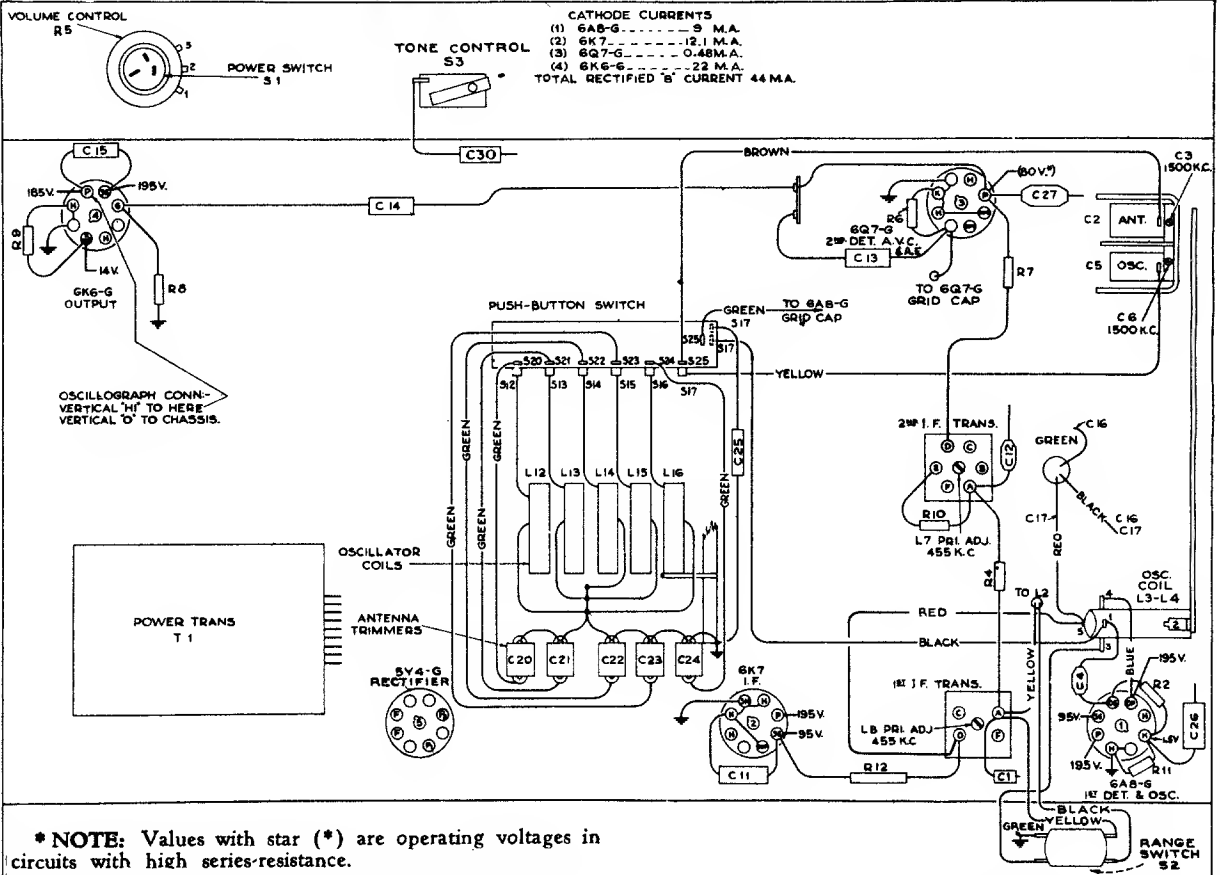

WR-260 Bottom View of Chassis Showing Socket Voltages, Parts Location, and R-F Wiring

Measurements made to chassis unless otherwise indicated, with set tuned to quiet point and volume control at minimum. Values should hold within approximately  $\pm 20\%$  with 117-volt a-c supply.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

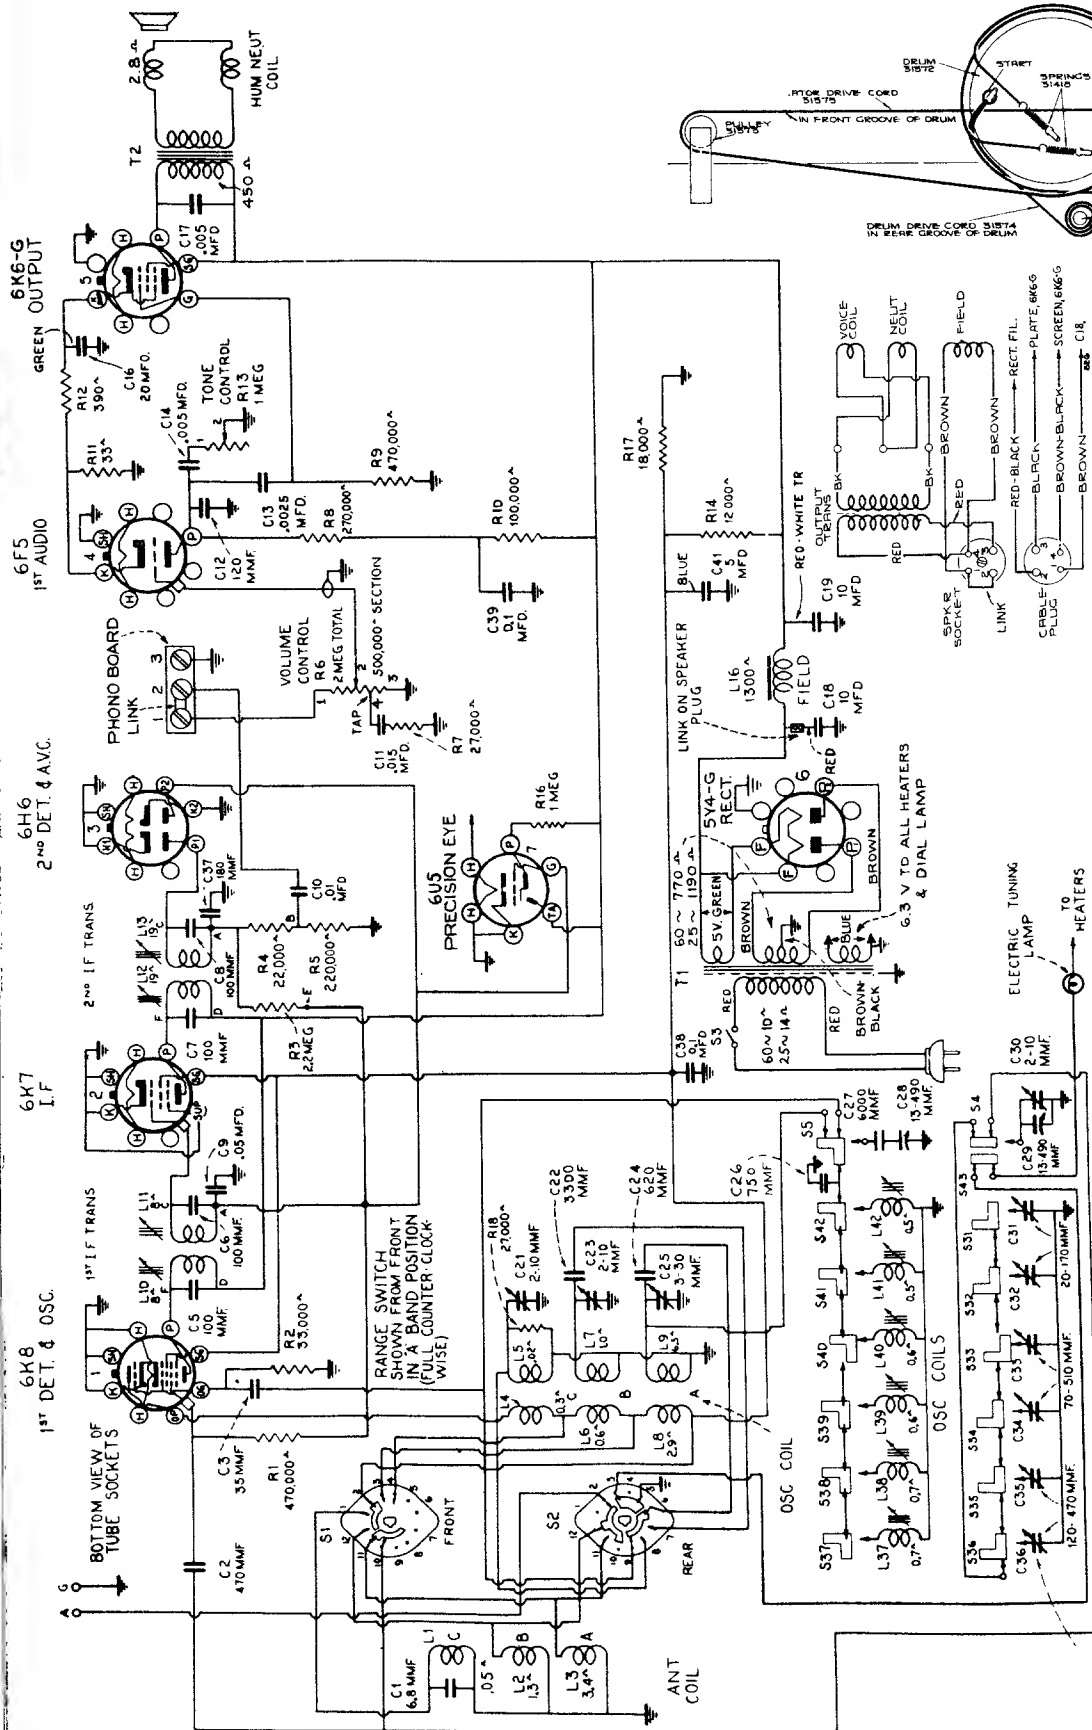

# Westinghouse Radio Model WR-264

Loudspeaker Wiring

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

**Cathode-Ray Alignment** is the preferable method. Connections for the oscillograph are shown in the chassis drawing.


**Output Meter Alignment.**—If this method is used, connect the meter across the voice-coil, and turn the receiver volume control to maximum.

**Test-Oscillator.**—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the output as low as possible to avoid a-v-c action.

**Calibration Scale on Indicator - Drive - Cord Drum.**—The tuning dial is fastened in the cabinet and cannot be used for reference during alignment, therefore, a calibration scale is attached to the rear of the drum which is mounted on the front shaft of the gang condenser. The setting of the gang condenser is read on this scale, which is calibrated in degrees. The correct setting of the gang in degrees, for each alignment frequency, is given in the alignment table.

As the first step in r-f alignment, check the position of the drum. The 180° mark on the drum scale must be vertical, and directly over the center of the gang-condenser shaft when the plates are fully meshed. The distance from the front of the chassis to the drum must not exceed 3/8-inch. The drum is held to the shaft by means of two set screws, which must be tightened securely when the drum is in the correct position.

**Pointer for Calibration Scale.**—Improvise a pointer for the calibration scale by fastening a piece of wire to the gang-condenser frame, and bend the wire so that it points to the "180°" mark on the calibration scale when the plates are fully meshed.

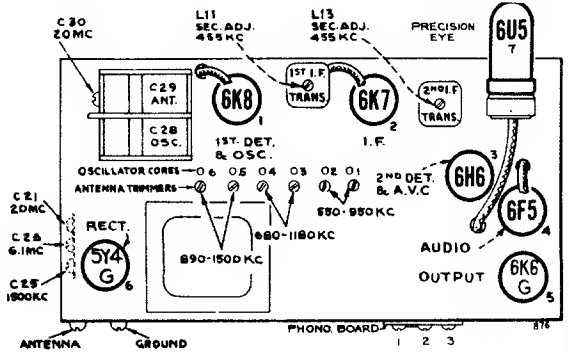

*Tube and Trimmer Locations*

**Dial-Indicator Adjustment.**—After fastening the chassis in the cabinet, attach the dial indicator to the drive cable with indicator at the 530 kc mark, and gang condenser fully meshed. The indicator has a spring clip for attachment to the cable.

After completion of alignment, seal the i-f core-adjusting screws with household cement.

The dial tuning (right hand) push button must be pushed in for steps 1 to 5 inclusive.

Steps	Connect the high side of test-osc. to—	Tune test-osc. to—	Turn radio dial to—	Adjust the following for max. peak output
1	6K7 I-F grid cap, in series with .01 mfd.	455 kc	"A" band, Quiet Point	L12 and L13 (2nd I-F Trans.)
2	6K8 det. grid cap, in series with .01 mfd.	455 kc	between 550-750 kc	L10 and L11 (1st I-F Trans.)
3	Antenna Terminal, in series with 400 ohms	20 mc	20 mc (28°) "C" band	C21 (osc.)* C30 (ant.)**
4	Antenna Terminal, in series with 400 ohms	6.1 mc	6.1 mc (31°) "B" band	C23 (osc.)†
5	Antenna Terminal, in series with 200 mmf.	1,500 kc	1,500 kc (28½°) "A" band	C25 (osc.)
6	Follow "Adjustments for Electric Tuning"			

\* Use minimum capacity peak if two peaks can be obtained.

\*\* Rock gang slightly and use maximum capacity peak if two peaks can be obtained with C30. Check to determine that C21 has been adjusted to the correct peak by tuning to approximately 28° (19.09 mc), where a weaker signal should be received.

† Use minimum capacity peak if two peaks can be obtained. Check to determine that C23 has been adjusted to the correct peak by turning to approximately 49° (5.19 mc), at which point a weaker signal should be received.

## ADJUSTMENTS FOR ELECTRIC TUNING

This receiver has seven push buttons. The right-hand button connects the gang condenser for manual tuning. The other six buttons are for electric tuning of six different stations in the standard-broadcast range. The station buttons connect to separate permeability tuned oscillator coils and separate antenna trimmers which must be adjusted for the


desired stations. Use an insulated screwdriver or alignment tool for making adjustments. Allow at least five minutes warm-up period before making adjustments.

The procedure is as follows:

1. Make a list of the desired six stations, arranged in order from low to high frequencies. See "Tube and Trimmer Locations" view for frequency coverage of each button.
2. Push in the dial-tuning button, and manually tune in the first station on the list.
3. Push in station button No. 1 (left) and adjust No. 1 oscillator core (L37) to receive this station. Screw the core all the way in, to lowest frequency, and then unscrew slowly until station is received.
4. Adjust No. 1 antenna trimmer (C36) for maximum output on this station.

**Clockwise adjustment of cores and trimmers tunes the circuits to lower frequencies.**

5. Adjust for each of the remaining five stations in the same manner.
6. Make a final careful adjustment of the oscillator cores and antenna trimmers. Use the Precision Eye to ensure sharp peaking.

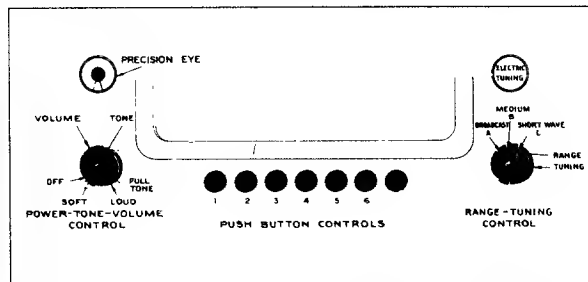


# 172

Westinghouse  
Model WR-264

COMPILED BY M. N. BEITMAN, SUPREME PUBLICATIONS

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

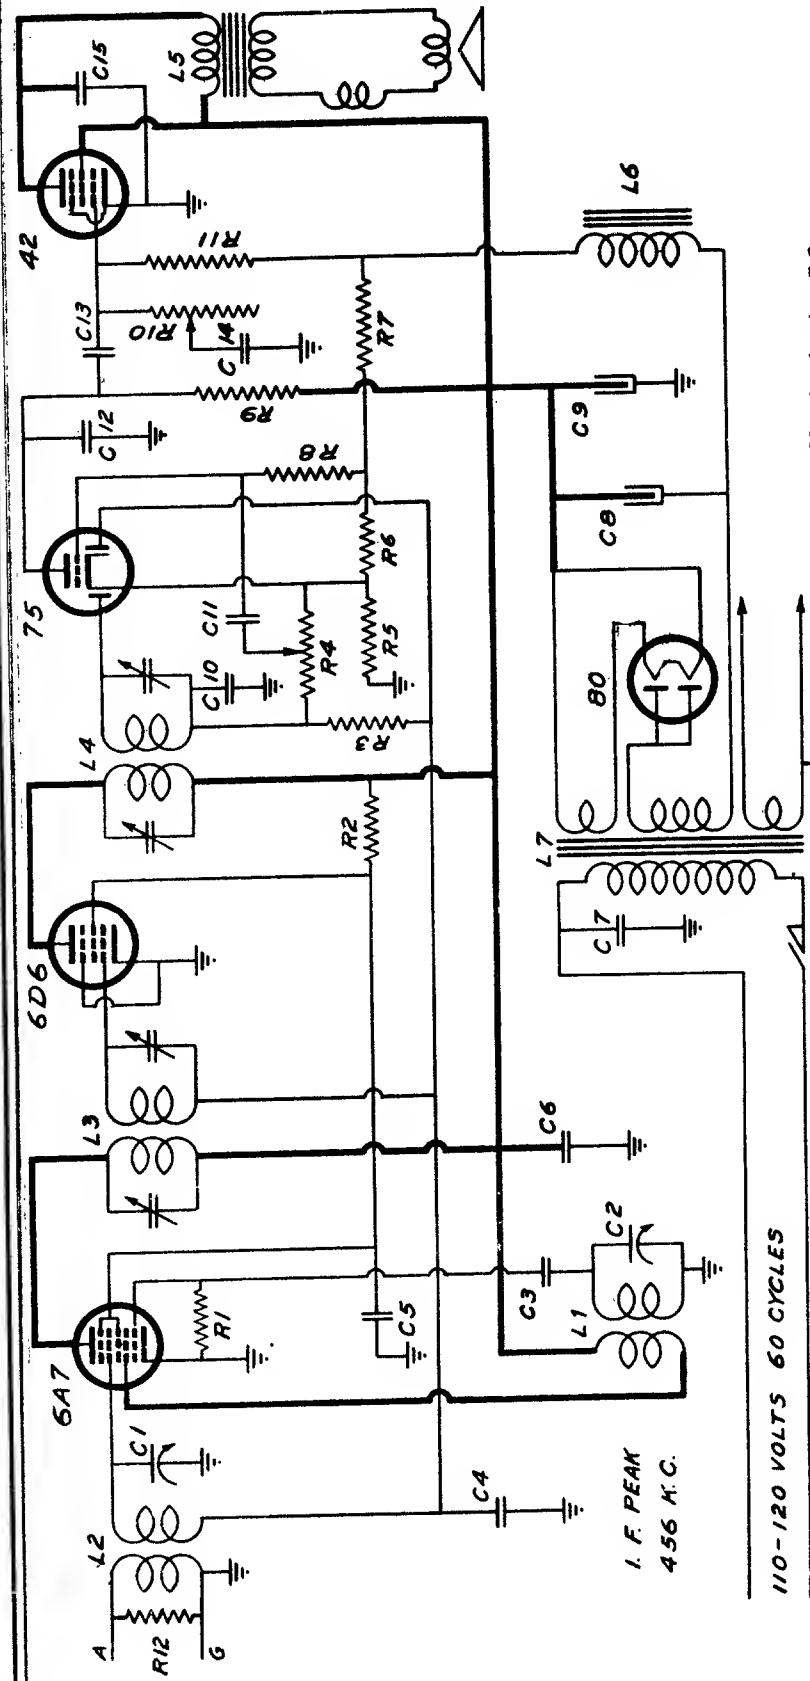


Model A-52

CODE OF SCHEMATIC DIAGRAM

Wilcox-Gay Corporation, Charlotte, Mich.

SOCKET LAYOUT

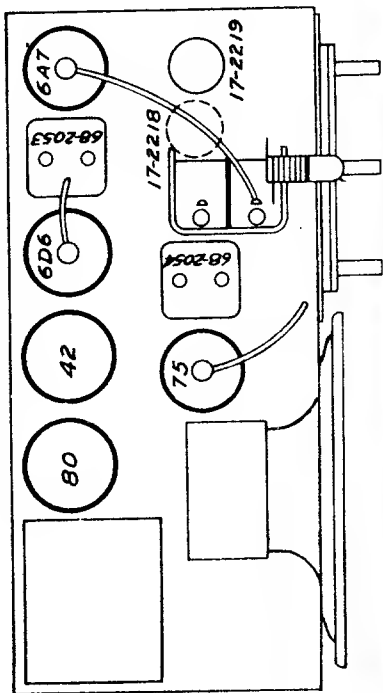

RESISTORS

- R1 63-898
- R2 53-941
- R3 53-926
- R4 19-2007
- R5 53-2019
- R6 53-925
- R7 53-924
- R8 19-2009
- R9 53-925
- R10 500,000 Ohm 1/4 Watt Resistor
- R11 100,000 Ohm 1/4 Watt Resistor
- R12 50,000 Ohm 1/4 Watt Resistor

COND. (Cont.)


- C7 75-2003 .01 Mfd. 400 V. Paper Cond.
- C8 18-2014 8 Mfd. 300 W.V. Electro. Cond.
- C9 18-2013 4 Mfd. 500 W.V. Electro. Cond.
- C10 75-2003 .0005 Mfd. Mica Condenser
- C11 75-2003 .01 Mfd. 400 V. Paper Cond.
- C12 75-2014 .001 Mfd. 400 V. Paper Cond.
- C13 75-2003 .01 Mfd. 400 V. Paper Cond.
- C14 75-2003 .01 Mfd. 400 V. Paper Cond.
- C15 75-2002 .004 Mfd. 600 V. Paper Cond.

CONDENSERS

- C1, C2 77-2014 Two Gang Variable Condenser
- C3 75-2005 50 Mfd. Mica Condenser
- C4 75-2005 .1 Mfd. 200 V. Paper Condenser
- C5 75-2005 .1 Mfd. 200 V. Paper Condenser
- C6 75-2005 .1 Mfd. 200 V. Paper Condenser

INDUCTANCES

- L1 17-2218 Oscillator Coil Assembly
- L2 17-2219 Preset/selector Coil Assembly
- L3 63-2053 First I.F. Trans. Assembly
- L4 63-2054 Second I.F. Trans. Assembly
- L5 64-2057 42 Tube Speaker, Output Trans. for 42 Tube
- L6 64-2057 1500 Ohm Speaker Field
- L7 80-2009 Power Transformer

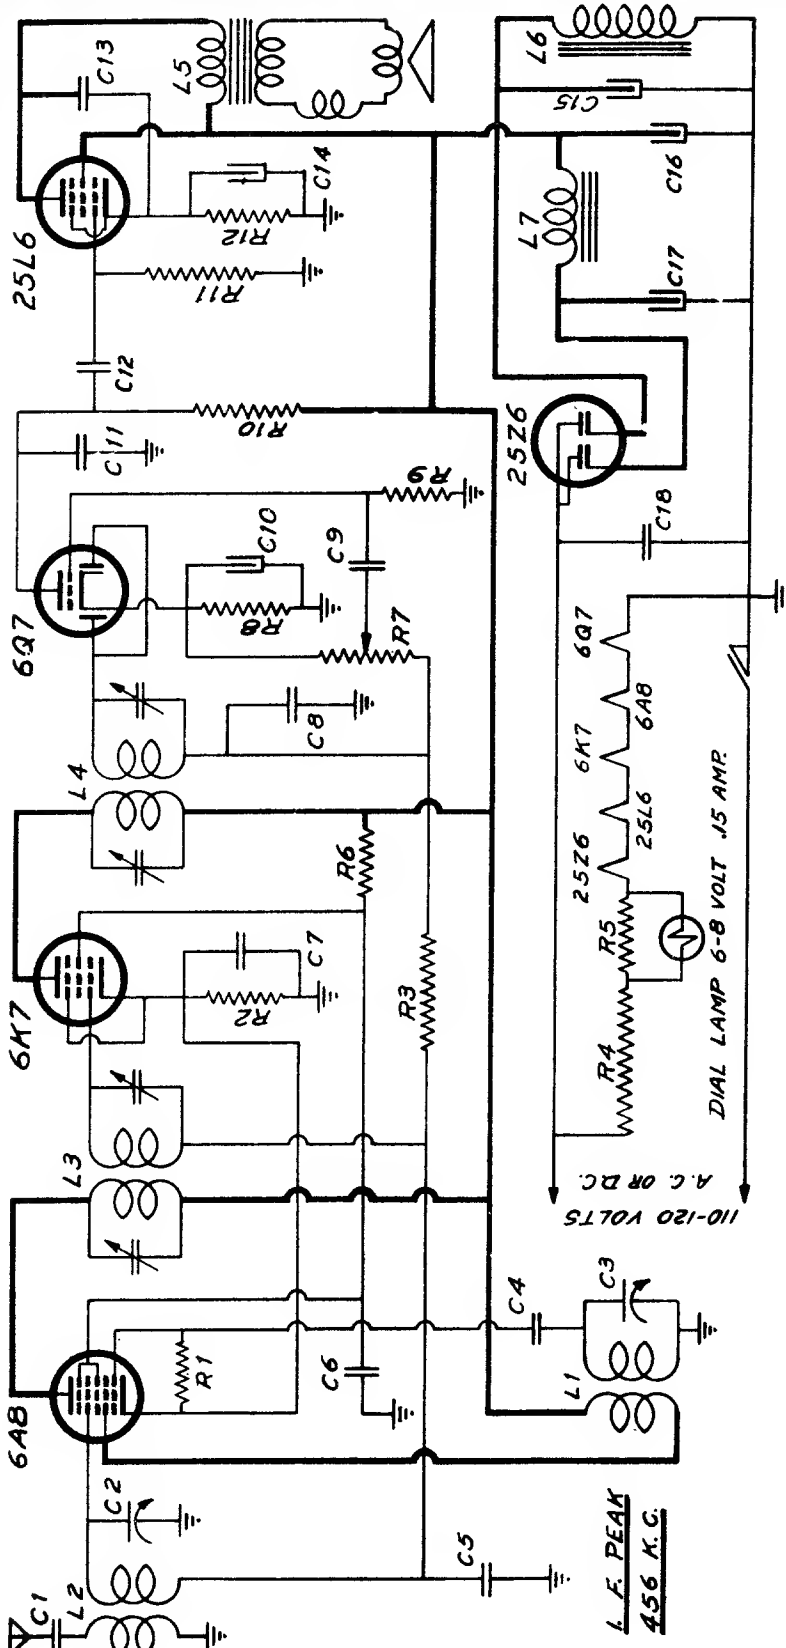

Wilcox-Gay Corporation, Charlotte, Mich.


Model 1 A-53  
COND. (Cont.)

- |    |         |             |                       |      |         |   |
|----|---------|-------------|-----------------------|------|---------|---|
| 31 | 53-298  | 50,000 Ohm  | 1/4 Watt Resistor     | 11   | 17-2282 | Oscillator Coil Assembly                |
| 32 | 53-1062 | 250 Ohm     | 1/2 Watt Resistor     | 12   | 17-2280 | Preselector Coil Assembly               |
| 33 | 53-926  | 1 Meg Ohm   | 1/4 Watt Resistor     | 13   | 60-2055 | First I.F. Trans. Assembly              |
| 34 | 20-2011 | 154 Ohm     | 1/4 Watt Resistor     | 14   | 60-2052 | Second I.F. Trans. Assembly             |
| 35 | 53-2016 | 26 Ohm      | 2.34 Watt Resistor    | 15   | 64-2043 | 5" Speaker, Output Trans. for 25L6 Tube |
| 36 | 53-1042 | 25,000 Ohm  | 1/4 Watt Resistor     | 16   | 64-2043 | 3000 Ohm Resistor on L5                 |
| 37 | 18-2012 | 500,000 Ohm | Volume Cont. & Switch | 17   | 14-2202 | 1 1/2 Henry Filter Choke                |
| 38 | 53-913  | 5,000 Ohm   | 1/4 Watt Resistor     | C15  | 18-2011 | 8 Mfd 160 W.V. Dry Elect. Cond.         |
| 39 | 53-925  | 500,000 Ohm | 1/4 Watt Resistor     | C16  | 18-2011 | 8 Mfd 160 W.V. Dry Elect. Cond.         |
| 40 | 53-924  | 250,000 Ohm | 1/4 Watt Resistor     | C17  | 13-2010 | 16 Mfd 160 W.V. Dry Elect. Cond.        |
| 41 | 53-925  | 500,000 Ohm | 1/4 Watt Resistor     | C18  | 75-2005 | .1 Mfd 200 V. Paper Condenser           |
| 42 | 53-2014 | 200 Ohm     | 1/4 Watt Resistor     | L1   |         |   |
|    |         |             |                       | L2   |         |   |
|    |         |             |                       | L3   |         |   |
|    |         |             |                       | L4   |         |   |
|    |         |             |                       | L5   |         |   |
|    |         |             |                       | L6   |         |   |
|    |         |             |                       | L7   |         |   |
|    |         |             |                       | L8   |         |   |
|    |         |             |                       | L9   |         |   |
|    |         |             |                       | L10  |         |   |
|    |         |             |                       | L11  |         |   |
|    |         |             |                       | L12  |         |   |
|    |         |             |                       | L13  |         |   |
|    |         |             |                       | L14  |         |   |
|    |         |             |                       | L15  |         |   |
|    |         |             |                       | L16  |         |   |
|    |         |             |                       | L17  |         |   |
|    |         |             |                       | L18  |         |   |
|    |         |             |                       | L19  |         |   |
|    |         |             |                       | L20  |         |   |
|    |         |             |                       | L21  |         |   |
|    |         |             |                       | L22  |         |   |
|    |         |             |                       | L23  |         |   |
|    |         |             |                       | L24  |         |   |
|    |         |             |                       | L25  |         |   |
|    |         |             |                       | L26  |         |   |
|    |         |             |                       | L27  |         |   |
|    |         |             |                       | L28  |         |   |
|    |         |             |                       | L29  |         |   |
|    |         |             |                       | L30  |         |   |
|    |         |             |                       | L31  |         |   |
|    |         |             |                       | L32  |         |   |
|    |         |             |                       | L33  |         |   |
|    |         |             |                       | L34  |         |   |
|    |         |             |                       | L35  |         |   |
|    |         |             |                       | L36  |         |   |
|    |         |             |                       | L37  |         |   |
|    |         |             |                       | L38  |         |   |
|    |         |             |                       | L39  |         |   |
|    |         |             |                       | L40  |         |   |
|    |         |             |                       | L41  |         |   |
|    |         |             |                       | L42  |         |   |
|    |         |             |                       | L43  |         |   |
|    |         |             |                       | L44  |         |   |
|    |         |             |                       | L45  |         |   |
|    |         |             |                       | L46  |         |   |
|    |         |             |                       | L47  |         |   |
|    |         |             |                       | L48  |         |   |
|    |         |             |                       | L49  |         |   |
|    |         |             |                       | L50  |         |   |
|    |         |             |                       | L51  |         |   |
|    |         |             |                       | L52  |         |   |
|    |         |             |                       | L53  |         |   |
|    |         |             |                       | L54  |         |   |
|    |         |             |                       | L55  |         |   |
|    |         |             |                       | L56  |         |   |
|    |         |             |                       | L57  |         |   |
|    |         |             |                       | L58  |         |   |
|    |         |             |                       | L59  |         |   |
|    |         |             |                       | L60  |         |   |
|    |         |             |                       | L61  |         |   |
|    |         |             |                       | L62  |         |   |
|    |         |             |                       | L63  |         |   |
|    |         |             |                       | L64  |         |   |
|    |         |             |                       | L65  |         |   |
|    |         |             |                       | L66  |         |   |
|    |         |             |                       | L67  |         |   |
|    |         |             |                       | L68  |         |   |
|    |         |             |                       | L69  |         |   |
|    |         |             |                       | L70  |         |   |
|    |         |             |                       | L71  |         |   |
|    |         |             |                       | L72  |         |   |
|    |         |             |                       | L73  |         |   |
|    |         |             |                       | L74  |         |   |
|    |         |             |                       | L75  |         |   |
|    |         |             |                       | L76  |         |   |
|    |         |             |                       | L77  |         |   |
|    |         |             |                       | L78  |         |   |
|    |         |             |                       | L79  |         |   |
|    |         |             |                       | L80  |         |   |
|    |         |             |                       | L81  |         |   |
|    |         |             |                       | L82  |         |   |
|    |         |             |                       | L83  |         |   |
|    |         |             |                       | L84  |         |   |
|    |         |             |                       | L85  |         |   |
|    |         |             |                       | L86  |         |   |
|    |         |             |                       | L87  |         |   |
|    |         |             |                       | L88  |         |   |
|    |         |             |                       | L89  |         |   |
|    |         |             |                       | L90  |         |   |
|    |         |             |                       | L91  |         |   |
|    |         |             |                       | L92  |         |   |
|    |         |             |                       | L93  |         |   |
|    |         |             |                       | L94  |         |   |
|    |         |             |                       | L95  |         |   |
|    |         |             |                       | L96  |         |   |
|    |         |             |                       | L97  |         |   |
|    |         |             |                       | L98  |         |   |
|    |         |             |                       | L99  |         |   |
|    |         |             |                       | L100 |         |   |

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Models 4K310, 4K331, 4K355


CHASSIS No. 5412

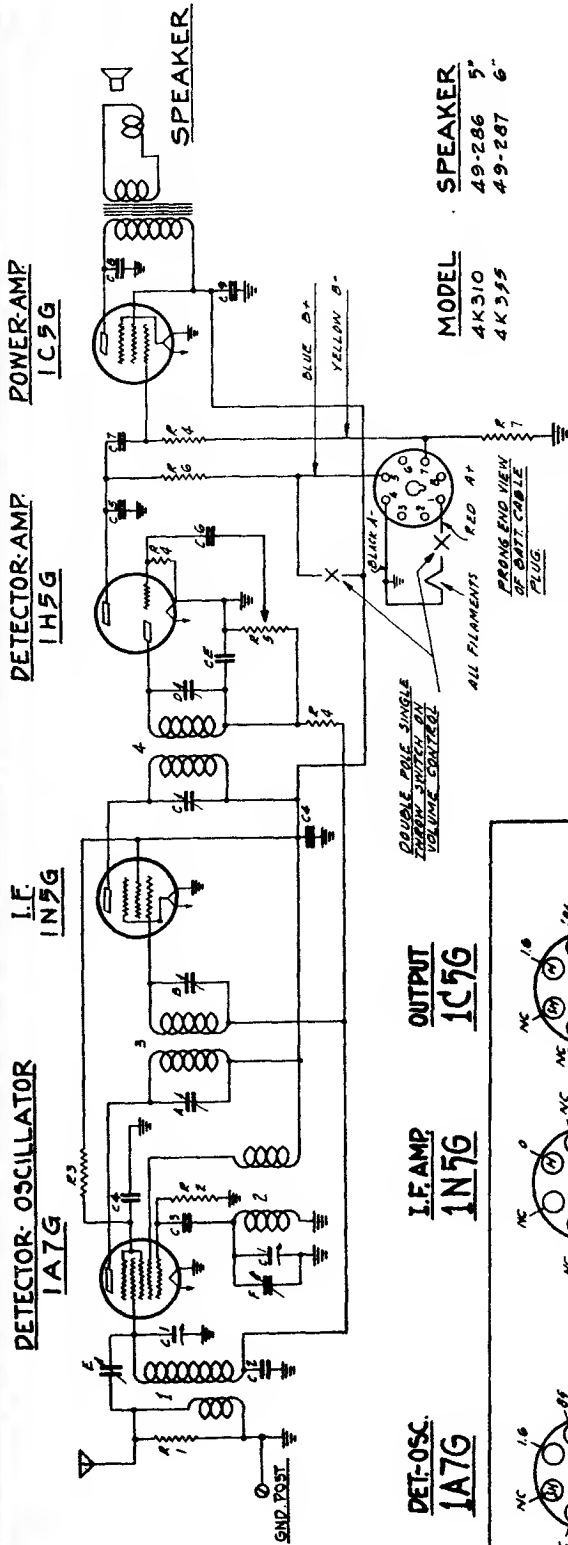

**MODEL**  
4K310  
4K331  
4K355

**SPEAKER**  
49-286 5"  
49-287 6"


CHASSIS PART NO.	DESCRIPTION
1	5-6704 ANTENNA COIL ASSEMBLY
2	5-6381 OSCILLATOR COIL ASSEMBLY
3	95-573 1ST. I.F. TRANSFORMER
4	95-570 2ND. I.F. TRANSFORMER
5	SPEAKER TRANS. (ON SPEAKER)
A	1ST. I.F. TRANS. PRIMARY
B	1ST. I.F. TRANS. SECONDARY
C	2ND. I.F. TRANS. PRIMARY
D	2ND. I.F. TRANS. SECONDARY
E	ANTENNA TUNING
F	BROADCAST CMC (ON GRIND)

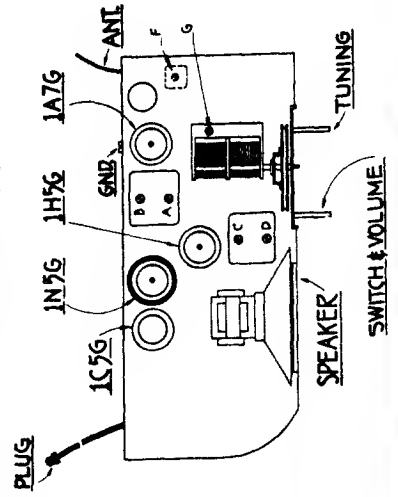

DOUBLE POLE SINGLE THROW SWITCH ON VOLUME CONTROL

ALL FILAMENTS RED A+  
FRONT END VIEW OF BATTERY PLUG

**DET.-OSC.** 1A7G  
**I.F. AMP** 1N5G  
**OUTPUT** 1C5G

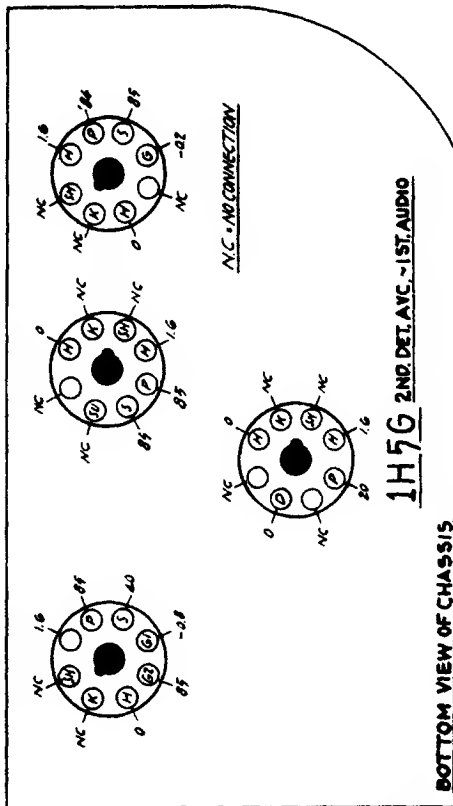


FRONT OF CHASSIS

All voltages measured from point indicated to chassis using a 1000 ohm per volt meter.

Antenna disconnected — volume control at minimum and condenser plates in full mesh.

I.F. FREQUENCY 455 K.G.  
4 TUBE BATTERY SUPERHETERODYNE  
CHASSIS NO. 5412

ZENITH RADIO CORPORATION  
CHICAGO ILLINOIS

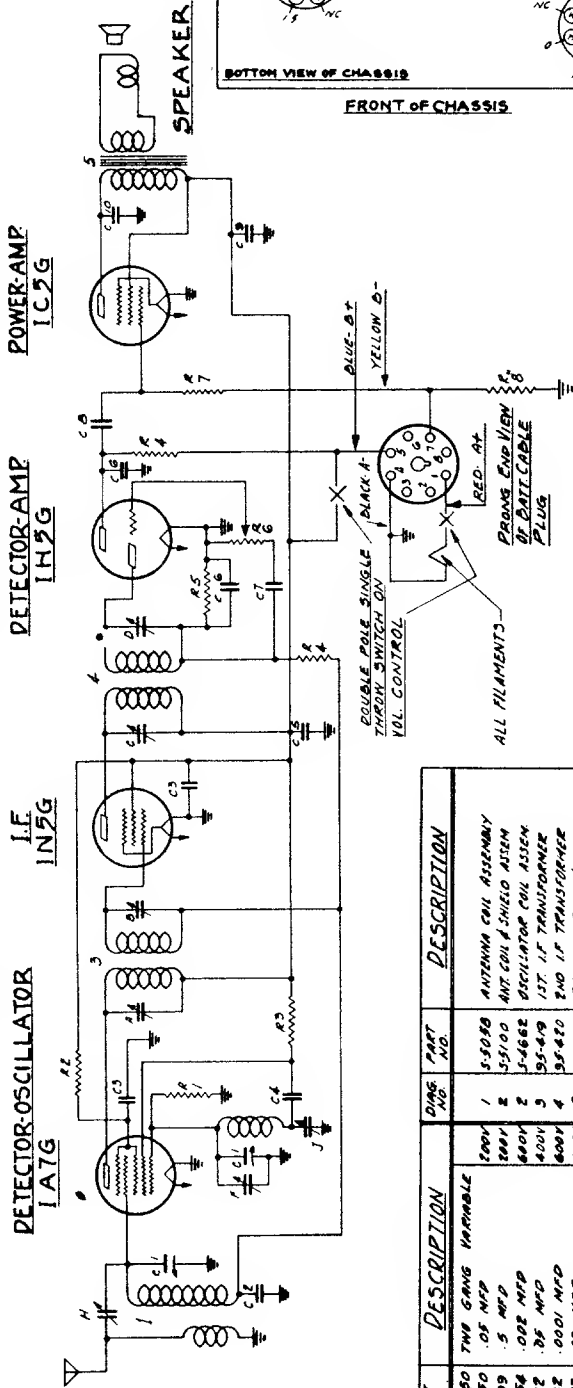


DET.-OSC  
1A7G

POWER-AMP  
1C5G

DETECTOR-AMP  
1H7G

I.F.  
1N7G

DETECTOR-OSCILLATOR  
1A7G

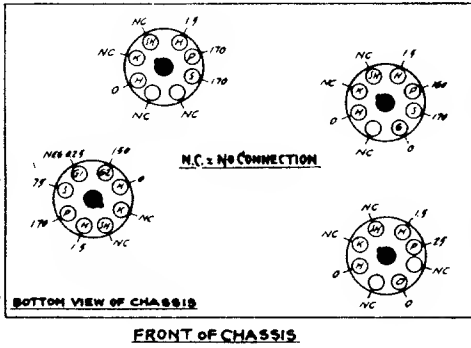

OUTPUT  
1C5G

2ND DET. A.K.  
1ST. A.U.D.  
1H7G


Model 1 4K329  
I.F. FREQUENCY 456 KC.  
4-TUBE BATTERY SUPERHETERODYNE  
CHASSIS NO. 5413  
ZENITH RADIO CORPORATION  
CHICAGO, ILL.

DWG. NO.	PART NO.	DESCRIPTION	DWG. NO.	PART NO.	DESCRIPTION
C-1	22-650	TUNING GANG VARIABLE	1	5-5030	ANTENNA COIL ASSEMBLY
C-2	22-250	.005 MFD	2	5-5100	ANT. COIL & SHIELD ASSEM.
C-3	22-199	.02 MFD	3	5-4682	OSCILLATOR COIL ASSEM.
C-4	22-354	.002 MFD	4	55-479	1ST. I.F. TRANSFORMER
C-5	22-212	.05 MFD	5	55-420	2ND I.F. TRANSFORMER
C-6	22-162	.0001 MFD	6	55-420	SPEAKER TRANS. (IN SPEAKER)
C-7	22-327	.02 MFD	7		1ST. I.F. TRANS. P.P.I.
C-8	22-185	.02 MFD	8		1ST. I.F. TRANS. SEC.
C-9	22-604	8 MFD ELECTROLYTIC	9		END I.F. TRANS. SEC.
C-10	22-692	.002 MFD	10		END I.F. TRANS. SEC.
R-1	63-325	150 M OHM	A	22-305	BROADCAST OSCILLATOR
R-2	63-594	68 M OHM	B		ANTENNA WINDING
R-3	63-630	560 OHM	C	22-519	OSCILLATOR PADDER
R-4	63-271	1 MEG OHM	D		
R-5	63-660	300 M OHM	E		
R-6	63-566	1 MEG OHM VOL. CONTROL	F		
R-7	63-600	22 MEG OHM	G		
R-8	63-338	1000 OHM	H		
R-9			J		

ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to—	Dummy Antenna	Set Test Osc. Jo	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	1/2 Mfd.	456	Br'dc't	600	ABCD	I. F. Algm't.
2	Rec. Ant. Lead	200 Mmfd.	1500	"	1500	F	Set Osc. to Scale Algm't of Ant.
3	"	200 Mmfd.	1500	"	1500	G	Algm't of Ant.
4	"	200 Mmfd.	600	"	600	J	Rock gang & adj. for max. output
5	"	200 Mmfd.	1500	"	1500	FG	for max. output

Rpt. 3 & 4

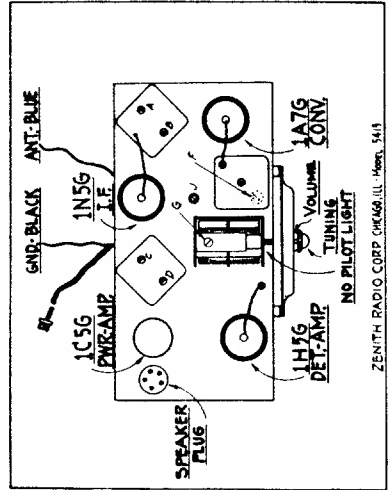


Location of tubes and trimmers


ZENITH RADIO CORP. CHICAGO, ILL. Model 5413

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

Model 6D315. Chassis No. 5657

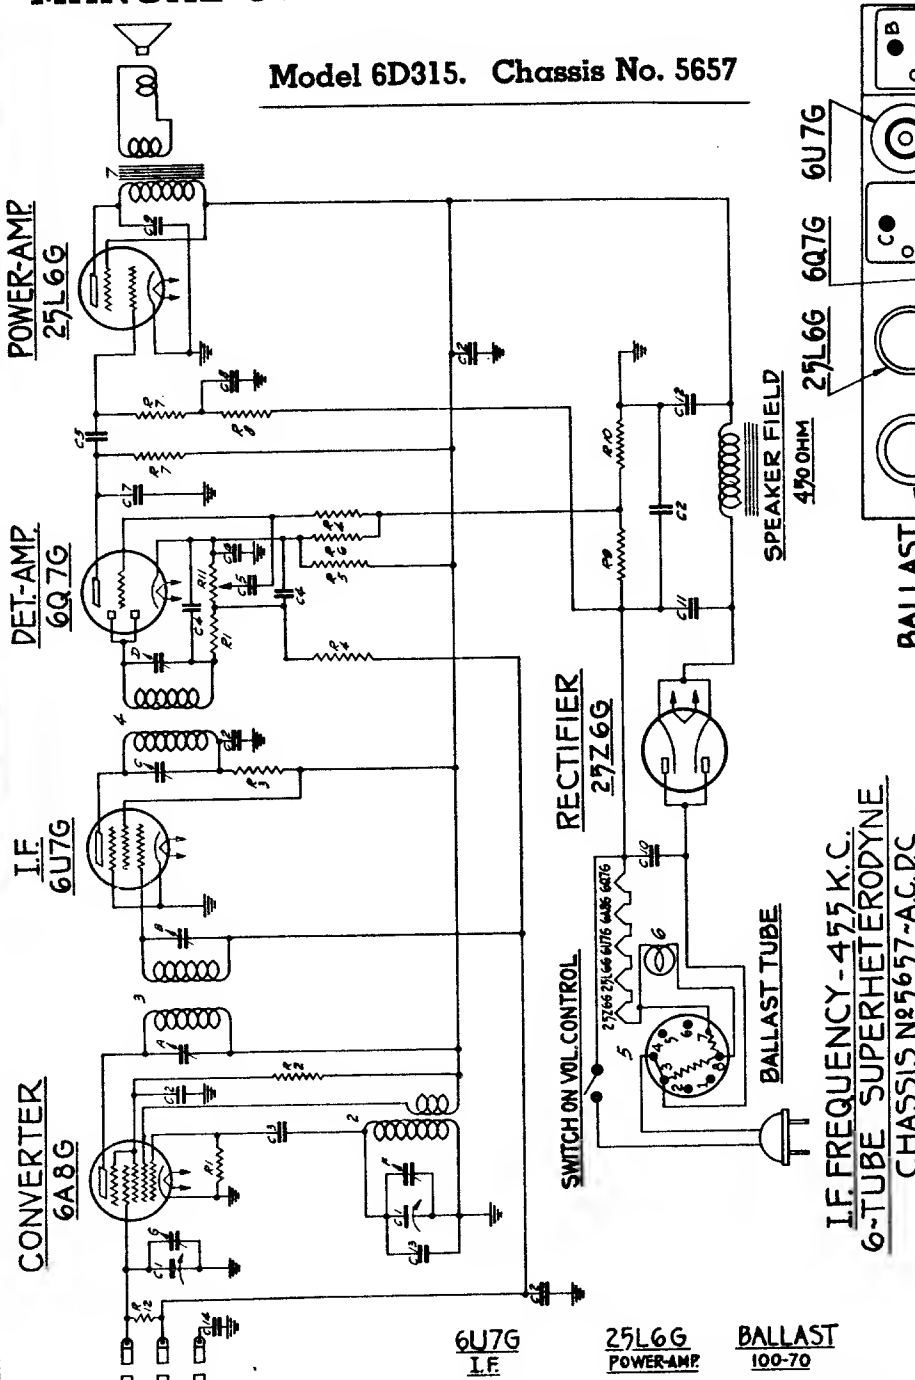


I.F. FREQUENCY - 455 K.C.  
6-TUBE SUPERHETERODYNE  
CHASSIS NO. 5657-A.C.D.C.

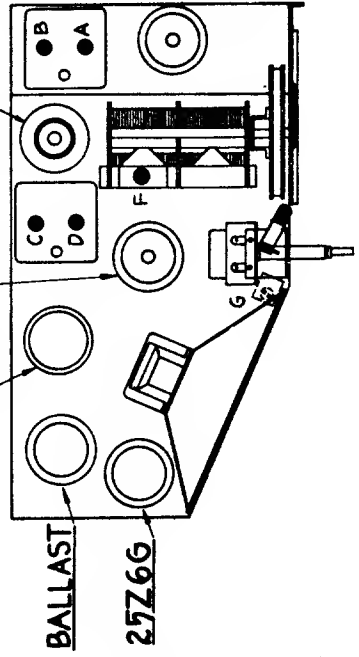

Location of tubes and trimmers

Model 6D315

CHASSIS No. 5657

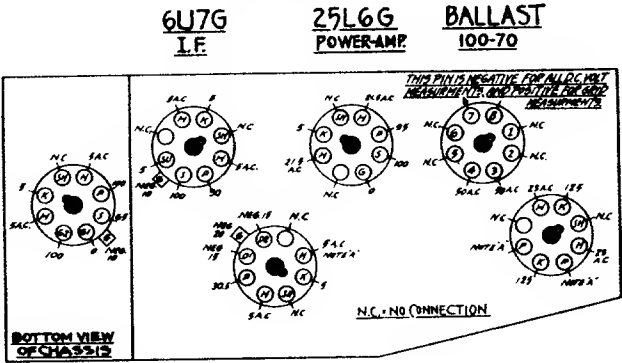


FRONT OF CHASSIS

6Q7G  
DET.-AMP.

ZENITH RADIO CORPORATION


COMP. NO.	PART NO.	DESCRIPTION	QTY.	PART NO.	DESCRIPTION
P-1	89-993	470 OHM	1	100-70	BALLAST TUBE
P-2	89-943	10 OHM	1	100-16	RECTIFIER TRANS. 250-50 K.
P-3	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-4	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-5	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-6	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-7	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-8	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-9	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-10	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-11	89-971	10 OHM	1	100-16	SPEAKER TRANS.
P-12	89-971	10 OHM	1	100-16	SPEAKER TRANS.
1	5-570	LOOP ANT. ASSEMBLY	1		
2	1-576	OAC COIL ASSEMBLY	1		
3	89-971	10 OHM	1		
4	89-971	10 OHM	1		



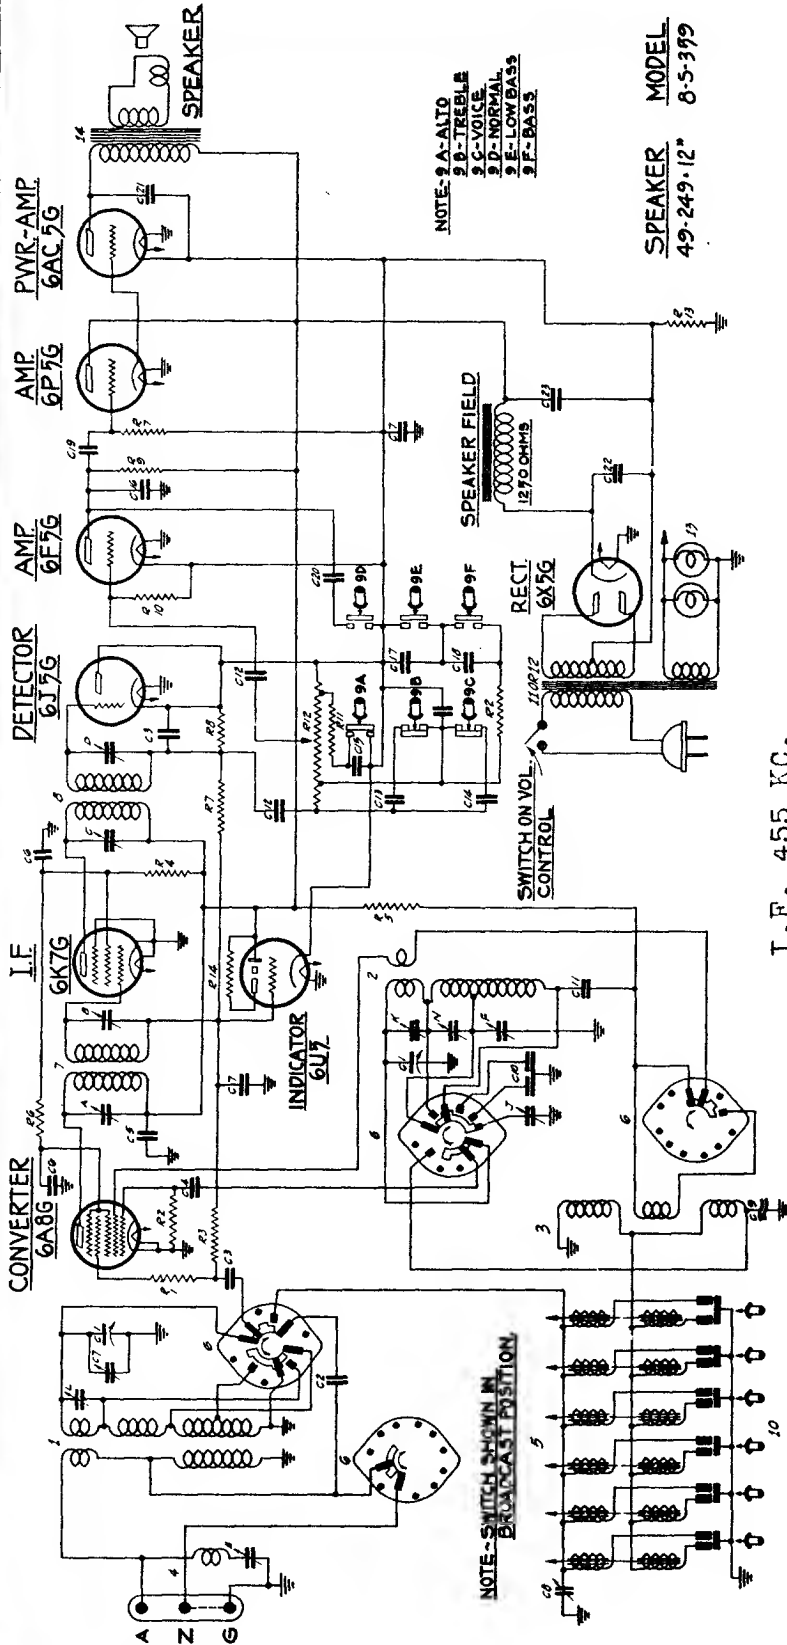

**NOTE:** 2 A-AUTO  
 2 B-TREBLE  
 2 C-VOICE  
 2 D-NORMAL  
 2 E-LOW BASS  
 2 F-HIGH BASS

**SPEAKER MODEL**  
 49-249-12 8-5-399

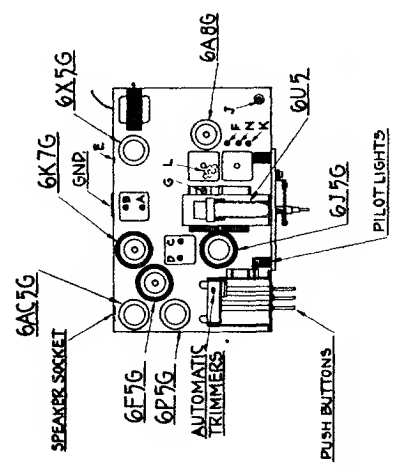

Location of tubes and trimmers


I.F. 455 KC.

DIAL NO.	PART NO.	DESCRIPTION	DIAL NO.	PART NO.	DESCRIPTION
C-1	22-117	170 OHM VARIABLE	1	1-A824	ANT. COIL ASSEMBLY
C-2	22-184	300 OHM	2	1-B284	ANT. COIL ASSEMBLY
C-3	22-170	1.5 MHD	3	1-C284	CONVERTER SHIELD ASSEMBLY
C-4	22-212	.05 MHD	4	1-D184	VOICE TAP
C-5	22-400	1.0 MHD	5	1-E184	VOICE TAP
C-6	22-700	COMPRESSION COIL	6	1-F184	VOICE TAP
C-7	22-550	1.0 MHD	7	1-G184	VOICE TAP
C-8	22-557	1.0 MHD	8	1-H184	VOICE TAP
C-9	22-558	1.0 MHD	9	1-I184	VOICE TAP
C-10	22-559	1.0 MHD	10	1-J184	VOICE TAP
C-11	22-560	1.0 MHD	11	1-K184	VOICE TAP
C-12	22-561	1.0 MHD	12	1-L184	VOICE TAP
C-13	22-562	1.0 MHD	13	1-M184	VOICE TAP
C-14	22-563	1.0 MHD	14	1-N184	VOICE TAP
C-15	22-564	1.0 MHD	15	1-O184	VOICE TAP
C-16	22-565	1.0 MHD	16	1-P184	VOICE TAP
C-17	22-566	1.0 MHD	17	1-Q184	VOICE TAP
C-18	22-567	1.0 MHD	18	1-R184	VOICE TAP
C-19	22-568	1.0 MHD	19	1-S184	VOICE TAP
C-20	22-569	1.0 MHD	20	1-T184	VOICE TAP
C-21	22-570	1.0 MHD	21	1-U184	VOICE TAP
C-22	22-571	1.0 MHD	22	1-V184	VOICE TAP
C-23	22-572	1.0 MHD	23	1-W184	VOICE TAP
C-24	22-573	1.0 MHD	24	1-X184	VOICE TAP
C-25	22-574	1.0 MHD	25	1-Y184	VOICE TAP
C-26	22-575	1.0 MHD	26	1-Z184	VOICE TAP

Model 8S359. Chassis No. 5807

**PHONOGRAPH OSCILLATOR**


**MODEL-S 6622**

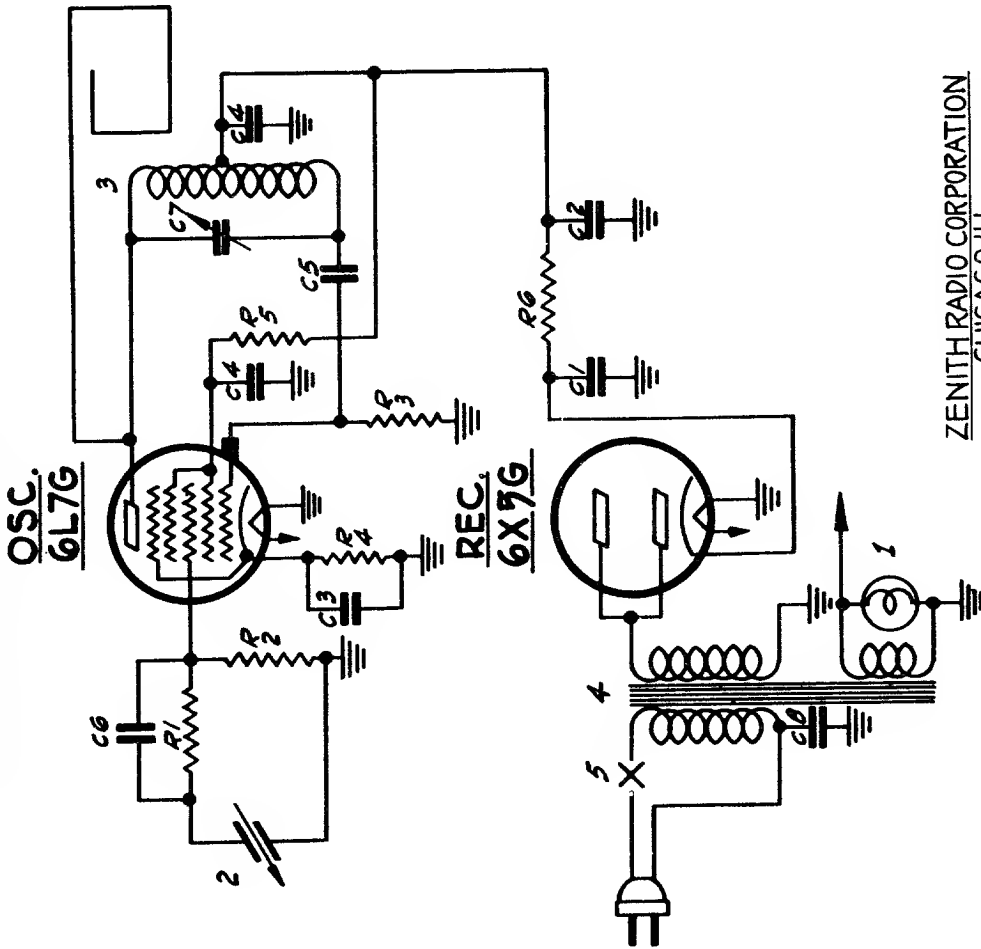

ZENITH RADIO CORPORATION  
CHICAGO, ILL.

DIAG. NO.	PART NO.	DESCRIPTION	
C-1	22-768	16 MFD. ELECTROLYTIC	200V
C-2	22-768	40 MFD.	150V
C-3	22-250	.05 MFD.	200V
C-4	22-196	.01 MFD.	600V
C-5	22-182	.00025 MFD.	600V
C-6	22-147	.0005 MFD.	600V
C-7	22-463	TRIMMER	1000V
C-8	22-525	.005 MFD.	1000V
R-1	63-658	390 M OHM	1/4 W
R-2	63-654	180 M OHM	1/4 W
R-3	63-593	47 M OHM	1/4 W
R-4	63-589	1000 OHM	1/4 W
R-5	63-587	4700 OHM	1/4 W
R-6	63-964	4700 OHM	1/2 W
1	100-36	PILOT LIGHT-6.3V. 25A.	
2	142-14	PICK-UP ARM - COMPLETE	
3	142-16	CRYSTAL UNIT ONLY	
4	5-6625	OSC. COIL ASSEM.	
5	95-567	POWER TRANS.	
	85-170	SWITCH	

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

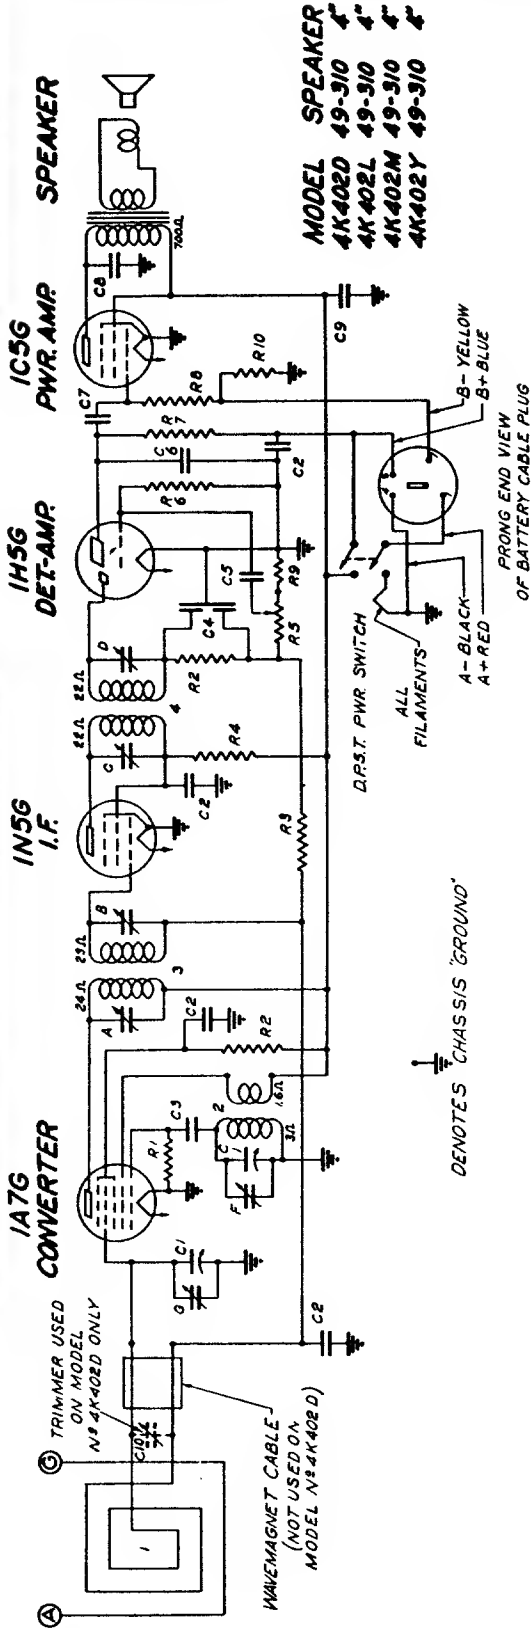


MODEL SPEAKER  
 4K402D 49-310 4"  
 4K402L 49-310 4"  
 4K402M 49-310 4"  
 4K402Y 49-310 4"

1½ V. BATTERY PORTABLE  
 I.F. FREQUENCY 455 KC.  
 4 TUBE SUPERHETERODYNE  
 CHASSIS N<sup>o</sup> 5419  
 ZENITH RADIO CORPORATION  
 CHICAGO, ILL.

Model 4K402  
 CHASSIS No. 5419

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-885	TWO-GANG VARIABLE	1	W	WAVEMAGNET ASSEMBLY
C2	22-829	.05 MFD.	2	W	OSCILLATOR COIL ASSEM.
C3		100 MMFD.	3	W	57030 1ST I.F. TRANS. ASSEM.
C4		DUAL 100 MMFD.	4	W	95-606 2ND I.F. TRANS.
C5	22-226	01 MFD.			
C6	22-162	0001 MFD.	A	W	1ST I.F. TRANS. PRI.
C7	22-243	01 MFD.	B	W	2ND I.F. TRANS. PRI.
C8	22-448	.004 MFD.	C	W	2ND I.F. TRANS. SEC.
C9	22-469	B.M.F.D. ELECTROLYTIC	D	W	BROADCAST OSC. (ON GANG)
C10	22-882	TRIMMER COND.	F	W	ANTENNA BROADCAST (ON GANG)
R1	63-652	120 M OHM			
R2	63-593	47 M OHM			
R3	63-689	3.9 MEG OHM			
R4	63-583	1000 OHM			
R5	63-1034	VOLUME CONTROL			
R6	63-604	10 MEG OHM			
R7	63-271	1 MEG OHM			
R8	63-600	2.2 MEG OHM			
R9	63-587	4700 OHM			
R10	63-238	1000 OHM			

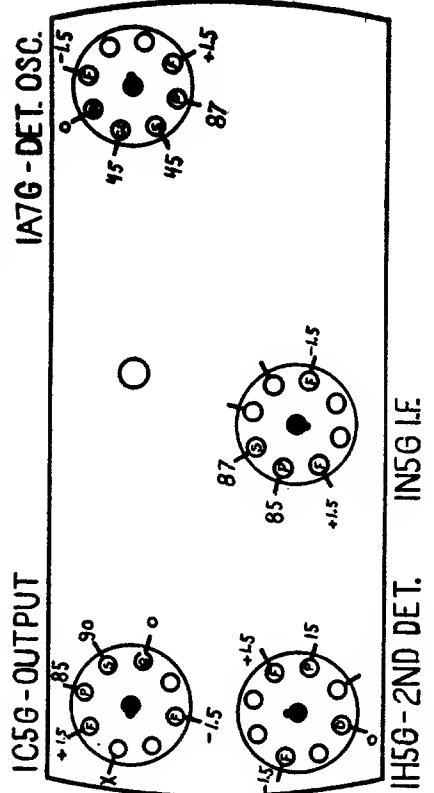


**NOTE**

All measurements with 1000 ohms per volt meter — loop antenna not connected — volume at minimum — All readings made with fresh Zenith (part No. Z-59) battery pack with speaker in circuit.

All voltages measured from contact X on IC56 tube socket to point indicated.


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

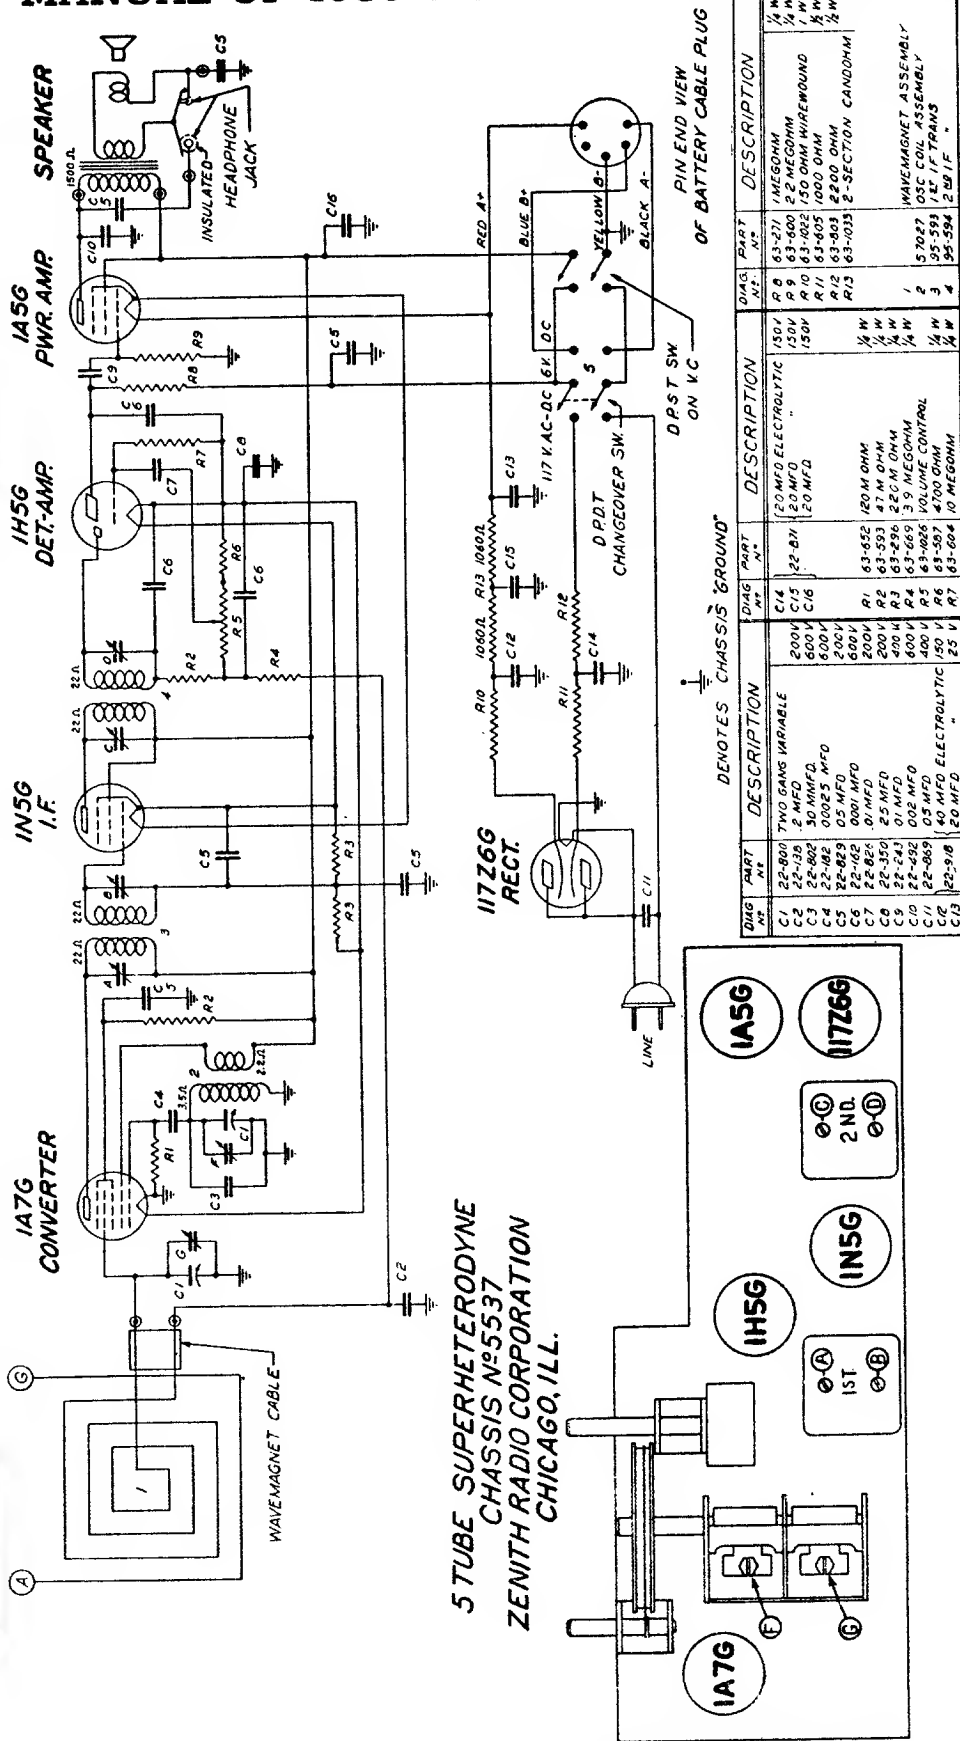

**Model 5G401**  
CHASSIS No. 5537

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 mmfd.	455	—	600	<b>A B C D</b>	I. F. Alignment
2	Single Turn Loop Coupled Loosely to Wave Magnet	—	1400	—	1400	<b>F</b>	Set Osc. to Scale
3	—	—	1400	—	1400	<b>G</b>	Alignment of Antenna

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

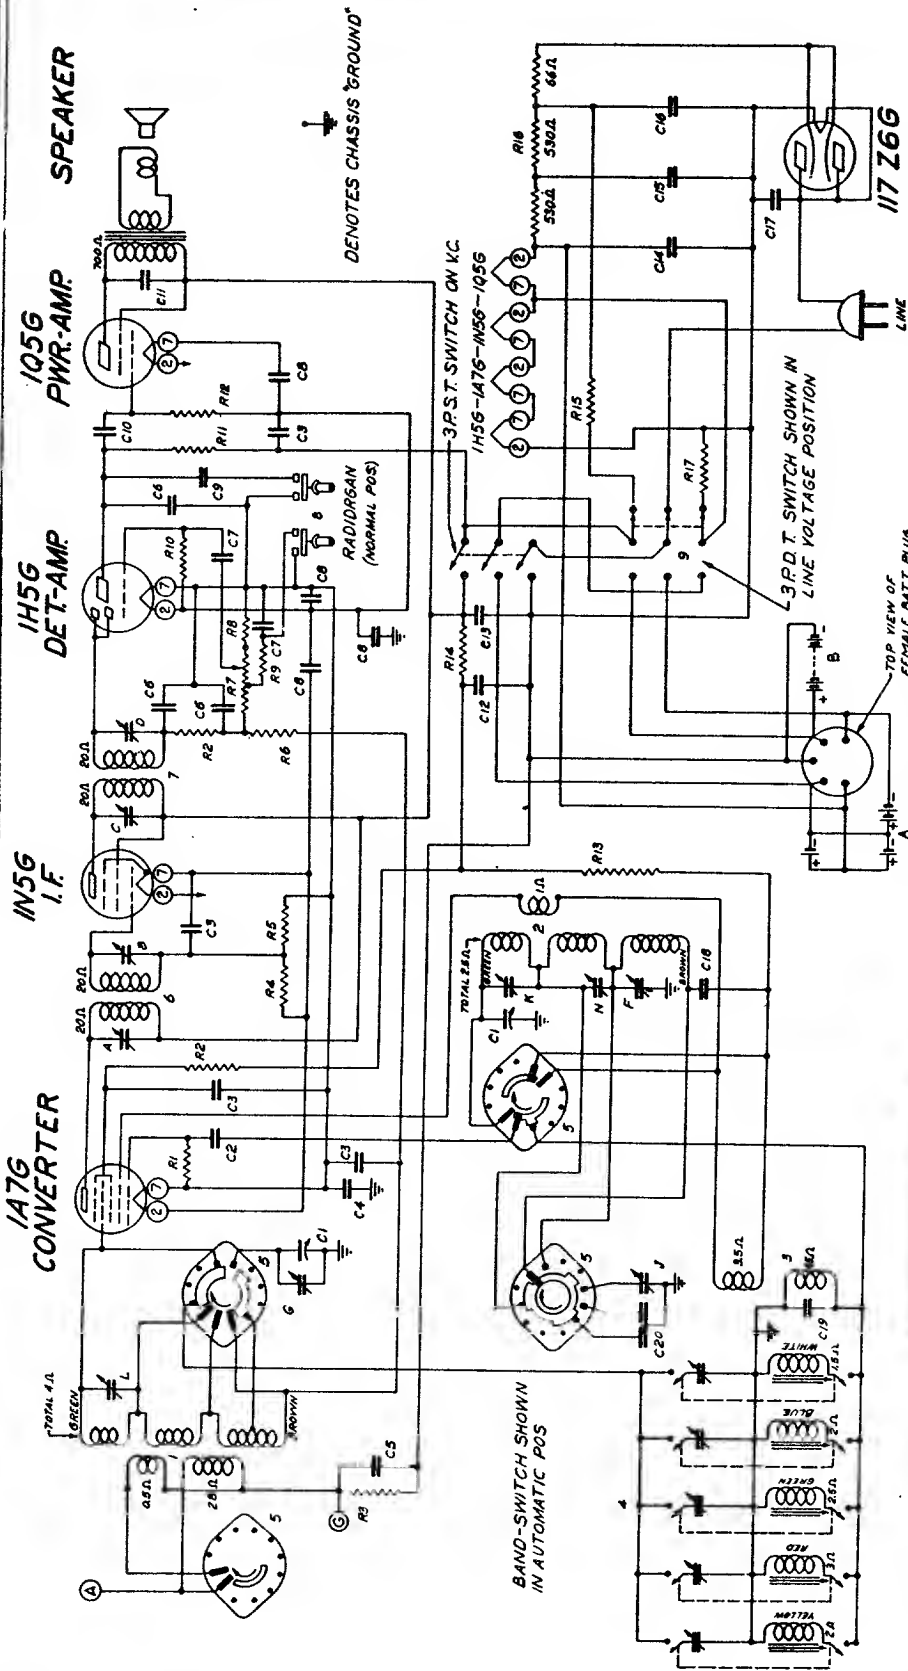


**MODEL SPEAKER**  
**5G441 49-316 8"**  
**5G442 49-317 10"**  
**5G461 49-318 10"**

**I.F. FREQUENCY 455 KC**  
**5 TUBE SUPERHETERODYNE**  
**110V. A.C. - BATT. PACK - UNIVERSAL**  
**CHASSIS N° 5539 - 3 BAND**  
**ZENITH RADIO CORPORATION**  
**CHICAGO, ILL.**

DATE	PART NO.	DESCRIPTION	DATE	PART NO.	DESCRIPTION
C1	22-978	THO-GANG VARIABLE	C19	22-865	COMPENSATING COND
C2	22-979	50 MMFD	C20	22-700	OSC PADDER
C3	22-980	.05 MFD	R1	63-686	180 M OHM
C4	22-330	25 MFD	R2	63-597	100 M OHM
C5	22-182	100 MMFD	R3	63-597	470 M OHM
C6	22-826	.01 MFD	R4	63-649	55 M OHM
C7	22-827	.01 MFD	R5	63-284	220 M OHM
C8	22-827	.01 MFD	R6	63-668	39 MEG OHM
C9	22-843	.01 MFD	R7	63-108	VOLUME CONTROL
C10	22-448	.004	R8	63-587	4700 OHM
C11	22-800	20 MFD ELECTROLYTIC	R9	63-591	22 M OHM
C12	22-800	20 MFD	R10	63-604	10 MEG OHM
C13	22-875	.60 MFD	R11	63-520	2 MEG OHM
C14	22-885	.05 MFD	R12	63-540	2 MEG OHM
C15	22-339	.02 MFD	R13	63-540	2200 OHM
C16					

**MODELS 5G441, 5G442, 5G461 (Chassis No. 5539)**

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

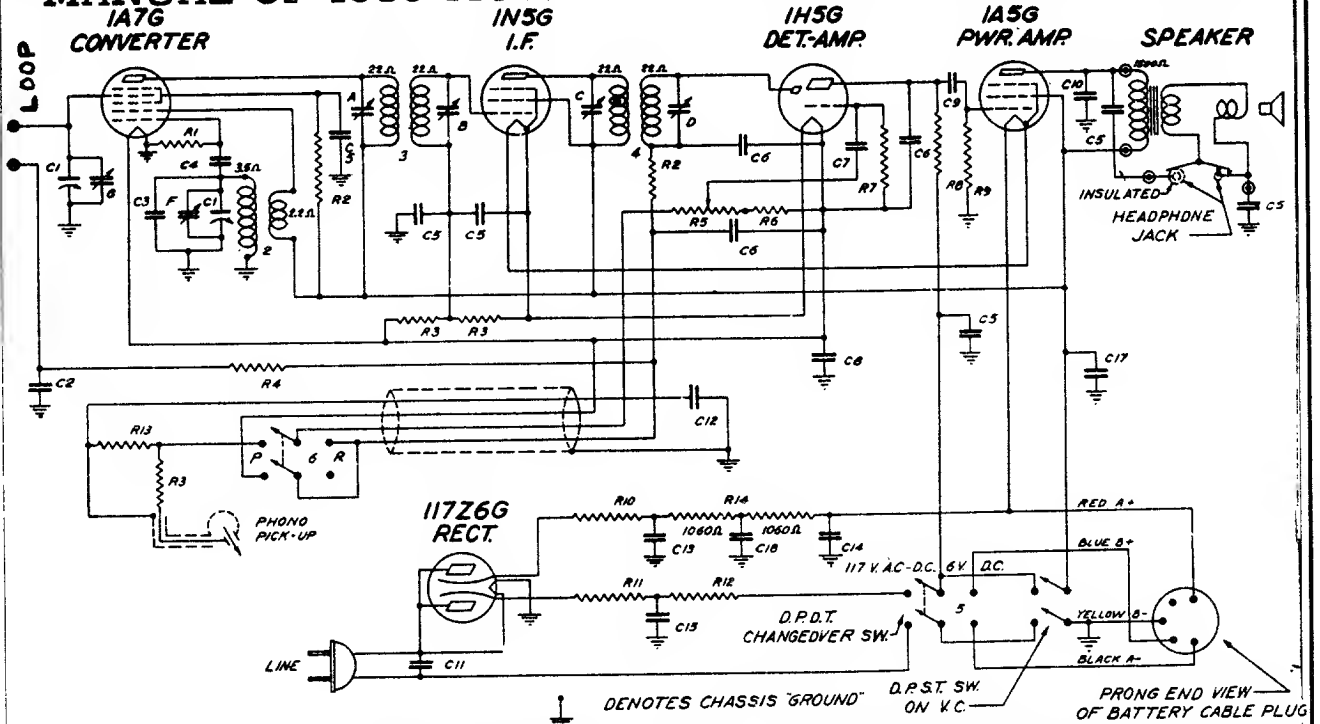


DENOTES CHASSIS "GROUND" ON K.C.  
 PRONG END VIEW OF BATTERY CABLE PLUG

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-800	TWO-GANG VARIABLE	C15	22-871	20 MFD ELECTROLYTIC	R9	63-600	2.2 MEGOHM	6	85-197	PHONO SWITCH
C2	22-130	2 MFD.	C16		20 "	R10	63-1022	150 OHM WIREWOUND			
C3	22-902	30 MMFD.	C17		20 "	R11	63-605	1000 OHM			
C4	22-182	0.0025 MFD.				R12	63-603	2200 OHM			
C5	22-829	0.5 MFD.				R13	63-591	22 M OHM			
C6	22-168	.0001 MFD.				R14	63-1033	2-SECTION CANDOHM			
C7	22-826	.01 MFD.	R1	63-652	120 M OHM						
C8	22-350	.25 MFD.	R2	63-593	47 M OHM						
C9	22-243	.01 MFD.	R3	63-296	220 M OHM						
C10	22-492	.002 MFD.	R4	63-649	3.9 MEGOHM						
C11	22-869	.05 MFD.	R5	63-1026	VOLUME CONTROL						
C12	22-827	.1 MFD.	R6	63-587	4700 OHM						
C13	22-948	40 MFD ELECTROLYTIC	R7	63-604	10 MEGOHM						
C14	22-948	20 MFD.	R8	63-271	1 MEGOHM						

## ALIGNMENT PROCEDURE



Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mfd.	455	—	600	A-B-C-D	I. F. Alignment
2	Single Turn Loop coupled loosely to Wave Magnet		1400	—	1400	F	Set Osc. to Scale
3	"		1400	—	1400	G	Alignment of Antenna

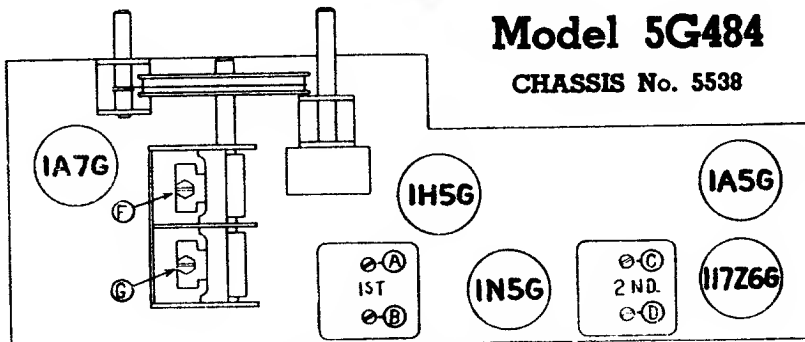

110 VOLT A.C. BATTERY PACK  
 PORTABLE PHONO  
 I.F. FREQUENCY 455 KC.  
 5 TUBE SUPERHETERODYNE  
 CHASSIS No. 5538  
 ZENITH RADIO CORPORATION  
 CHICAGO, ILL.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

I.F. FREQUENCY 455 KC.  
6 TUBE SUPERHETERODYNE  
CHASSIS N<sup>o</sup> 5659-5663 AC DC  
ZENITH RADIO CORPORATION  
CHICAGO, ILL.

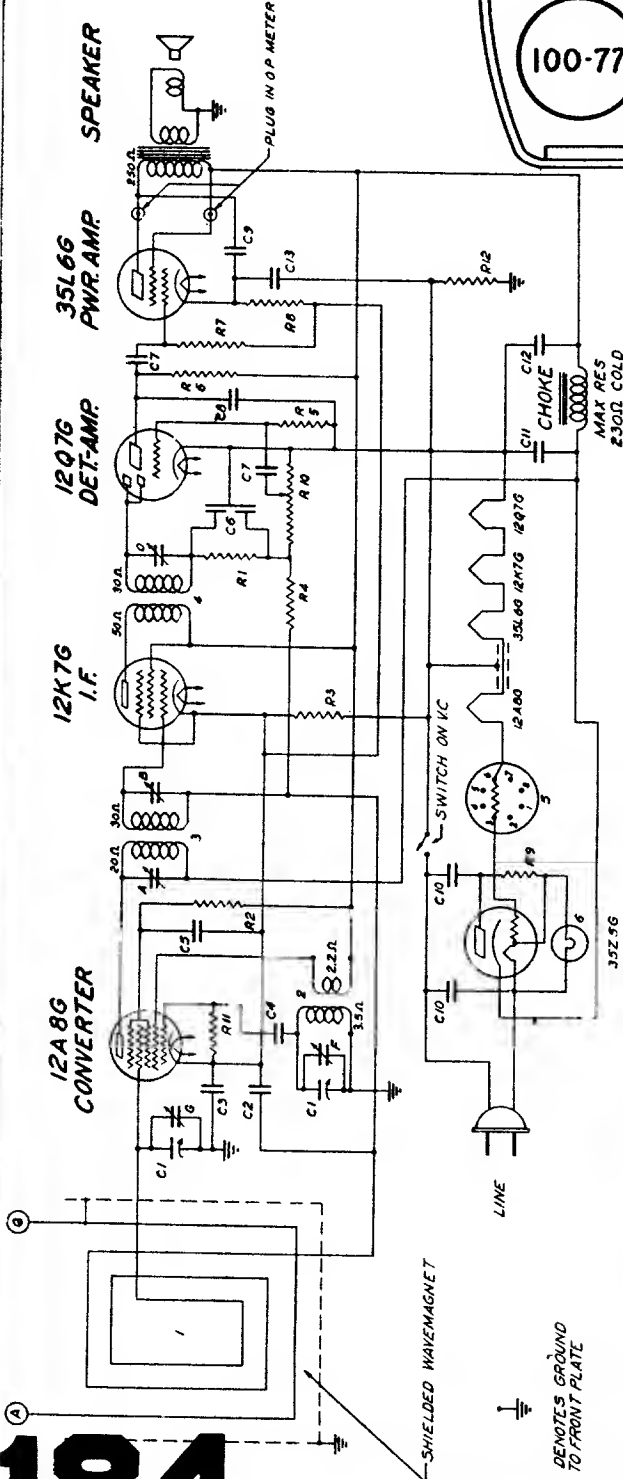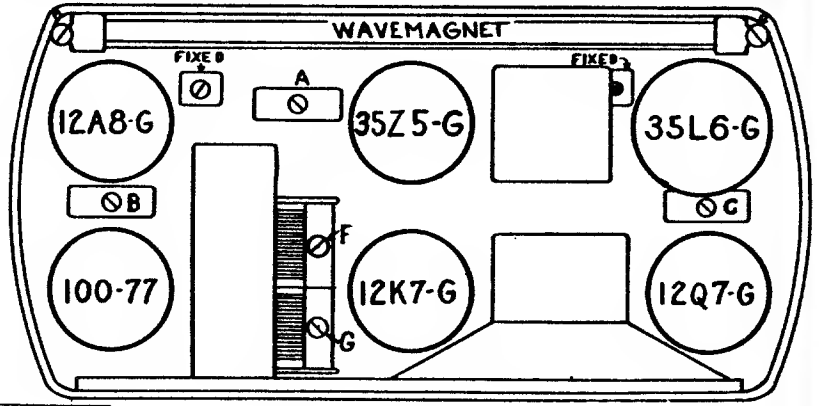


DIAG. NO.	PART NO.	DESCRIPTION	DWG. NO.	PART NO.	DESCRIPTION
C1	22-985	2-UGANG VARIABLE	R1	61-593	27 M OHM
C2	22-250	05 MFD	R2	61-571	25 M OHM
C3	22-130	1 MFD	R3	61-572	25 M OHM
C4	22-81	100 MFD	R4	61-600	22 MEG OHM
C5	22-81	100 MFD	R5	61-602	47 MEG OHM
C6	22-81	DUAL 100 MFD	R6	61-297	220 M OHM
C7	22-937	10 MFD	R7	61-337	270 M OHM
C8	22-831	0005 MFD	R8	61-606	150 OHM WIREWOUND
C9	22-831	03 MFD	R9	61-1071	27 OHM CONTROL
C10	22-831	40 MFD	R10	61-715	270 M OHM
C11	22-831	16 MFD	R12	61-717	220 M OHM
C12	22-831	20 MFD			WAVEMAGNET ASSEM.
C13	22-844	100 MFD			"
C14	22-844	100 MFD			WAVEMAGNET ASSEM.
					"
					1ST I.F. TRANS
					1ST I.F. TRANS SEC.
					2ND I.F. TRANS
					END I.F. TRANS
					100-67 PILOT LIGHT 5.3 V. 15A
					MS 5/7 TONE CONTROL SWITCH
					1ST I.F. TRANS PRI
					1ST I.F. TRANS SEC.
					END I.F. TRANS SEC.
					BROADCAST OSC. (ON GANG)
					ANT. (.....)

MODEL 60410 SPEAKER 49-323 4"  
60411 49-323 4"  
60425 49-323 4"

MODELS 6D410, 6D411, 6D425 (Chassis No. 5659)

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mfd.	455	B'dcast	600	A B C	I. F. Alignm't
2	Single Turn Loop Loosely Coupled to Wave Magnet	—	1500	"	1500	F	Set Osc. to Scale
3		—	1500	"	"	G	Alignment of Ant.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

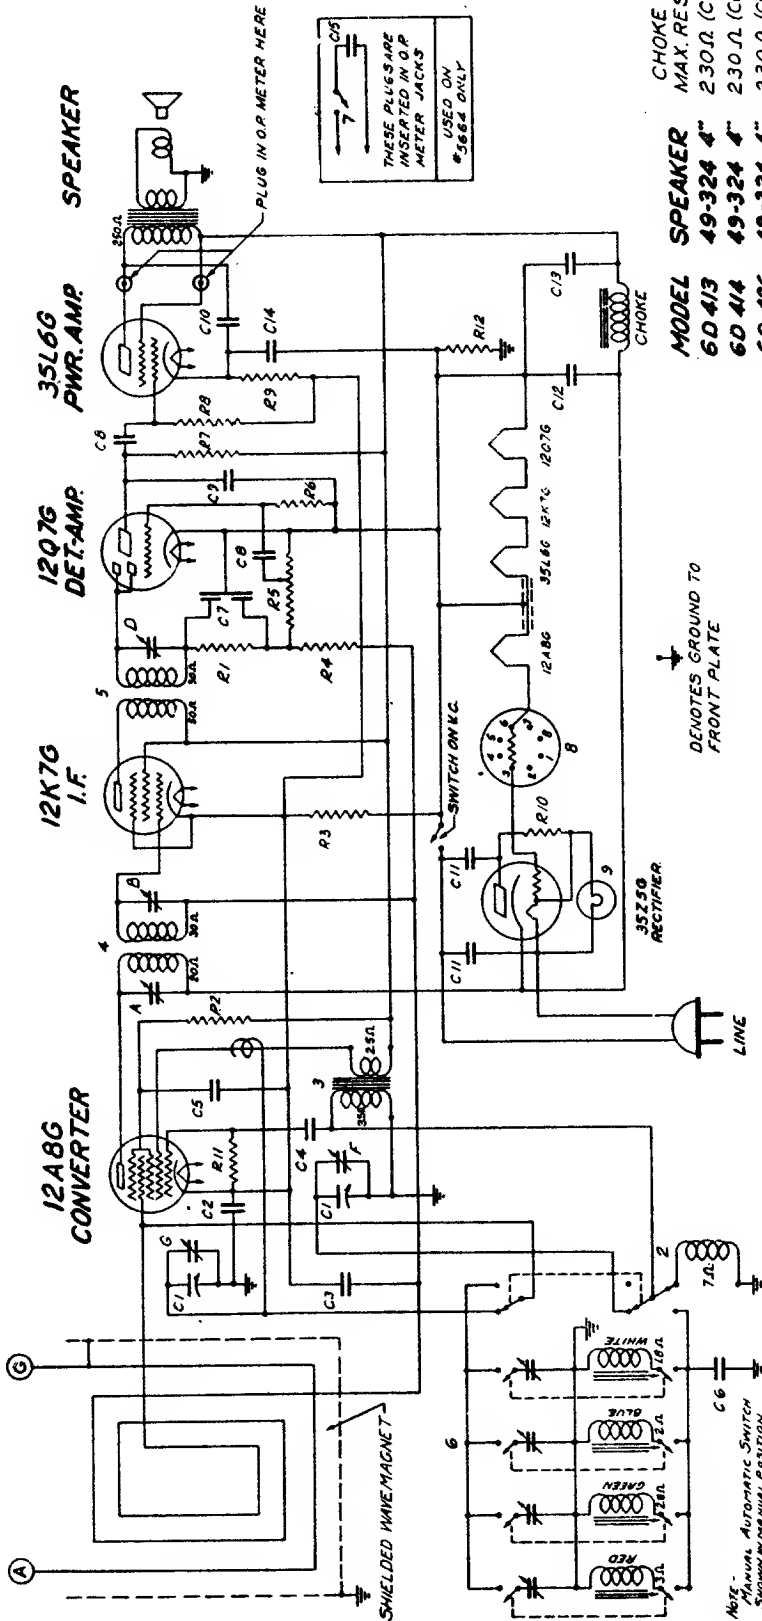

MODEL	SPEAKER	CHOKE
		MAX. RES.
6D 413	49-324 4"	230 Ω. (COLD)
6D 414	49-324 4"	230 Ω. (COLD)
6D 426	49-324 4"	230 Ω. (COLD)
6D 427	49-324 4"	230 Ω. (COLD)
6D 446	49-336 5"	325 Ω. (HOT)
6D 455	49-324 4"	230 Ω. (COLD)

I.F. FREQUENCY 455 KC.  
 6 TUBE SUPERHETERODYNE  
 CHASSIS #5660 & #5664 AC-DC.  
 ZENITH RADIO CORPORATION  
 CHICAGO, ILL.

↓  
 DENOTES GROUND TO  
 FRONT PLATE

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C 1	22-888	TWO GANG VARIABLE	5	5 6903	12 1/2 TRANS ASSEMBLY
C 2	22-939	1 MFD.	5	5 6997	AUTOMATIC TUNING UNIT ASSEM.
C 3	22-250	65 MFD.	7	MS 517	PHONE CONTROL SWITCH
C 4	22-811	100 MFD.	8	100-77	BALLAST TUBE
C 5	22-861	62 MFD.	9	100-67	PILOT LIGHT BULB
C 6	22-868	COMPENSATING CONDENSER			
C 7	22-837	DUAL 100 MMFD.			
C 8	22-837	01 MFD.			
C 9	22-833	2003 MFD.			
C 10	22-836	63 MFD.			
C 11	22-839	53 MFD. ELECTROLYTIC			
C 12	22-839	40 MFD.			
C 13	22-839	16			
C 14	22-844	75			
C 15	22-844	25			
R 1	63-531	47 M OHM.			
R 2	63-531	22 M OHM.			
R 3	63-572	15 OHM.			
R 4	63-600	2 MEG OHM.			
R 5	63-028	VOLUME CONTROL			
R 6	63-602	4.7 MEG OHM.			
R 7	63-236	280 M OHM.			
R 8	63-537	470 M OHM.			
R 9	63-684	150 M OHM. WIRE WOUND			
R 10	63-1071	27 OHM. WIRE WOUND			
R 11	63-713	4 M OHM.			
R 12	63-717	220 OHM.			
S 1	56920	WAVE MAGNET ASSEMBLY			
S 2	56921	OSCILLATOR COIL ASSEMBLY			
S 3	56922	OSC. COUPLER COIL ASSEMBLY			
S 4	56923	12 1/2 TRANS ASSEMBLY			
T 1	W W	7A			
T 2	W W	12 1/2			
T 3	W W	12 1/2			
T 4	W W	12 1/2			
T 5	W W	12 1/2			
T 6	W W	12 1/2			
T 7	W W	12 1/2			
T 8	W W	12 1/2			
T 9	W W	12 1/2			
T 10	W W	12 1/2			
T 11	W W	12 1/2			
T 12	W W	12 1/2			
T 13	W W	12 1/2			
T 14	W W	12 1/2			
T 15	W W	12 1/2			
T 16	W W	12 1/2			
T 17	W W	12 1/2			
T 18	W W	12 1/2			
T 19	W W	12 1/2			
T 20	W W	12 1/2			

MODELS 6D413, 6D414, 6D426, 6D427, 6D446, 6D455 (Chassis No. 5660)



# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Models 6D413, 6D414, 6D426, 6D427, 6D446, 6D455

CHASSIS No. 5660


Zenith Radio Corporation

### NOTE

Voltages measured from No. 7 pin on ballast tube to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.


All filament voltages measured across each respective tube, using an A.C. volt-meter.

Line voltage — 110v.

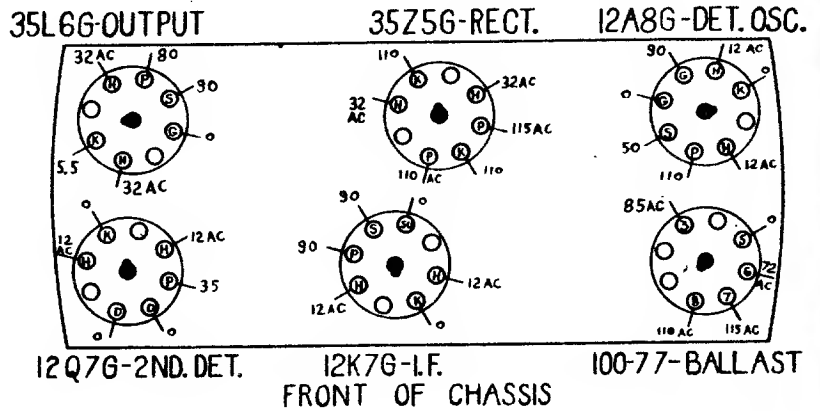

### LEGEND

- NC—No Connection
- SH—Shield
- H—Heater
- P—Plate
- S—Screen
- G—Grid
- SU—Suppressor
- D—Diode
- F—Filament
- K—Cathode

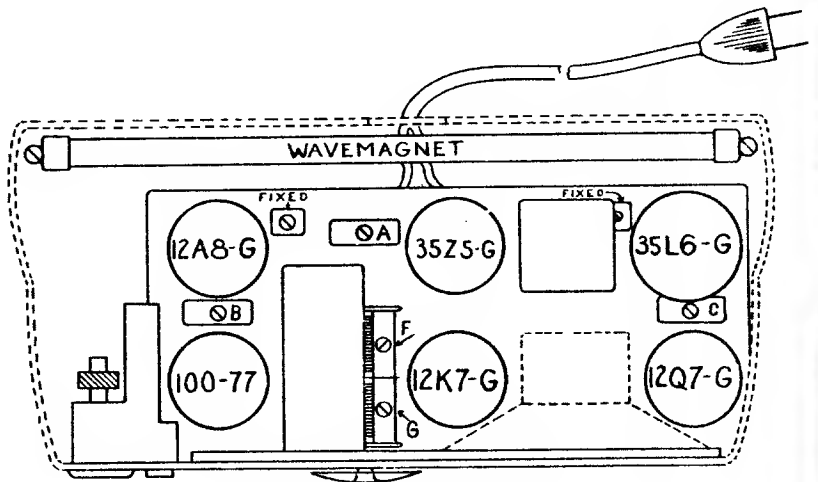

Location of tubes and trimmers


## ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	.5 Mfd.	455	B'dcast	600	A B C	I. F. Alignm't.
2	Single Turn Loop Loosely Coupled to Wave Magnet	—	1500	"	1500	F	Set Osc. to Scale
3	Wave Magnet	—	1500	"	"	G	Alignment of Ant.

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

## Models 6P416, 6P417, 6P428

CHASSIS No. 5661

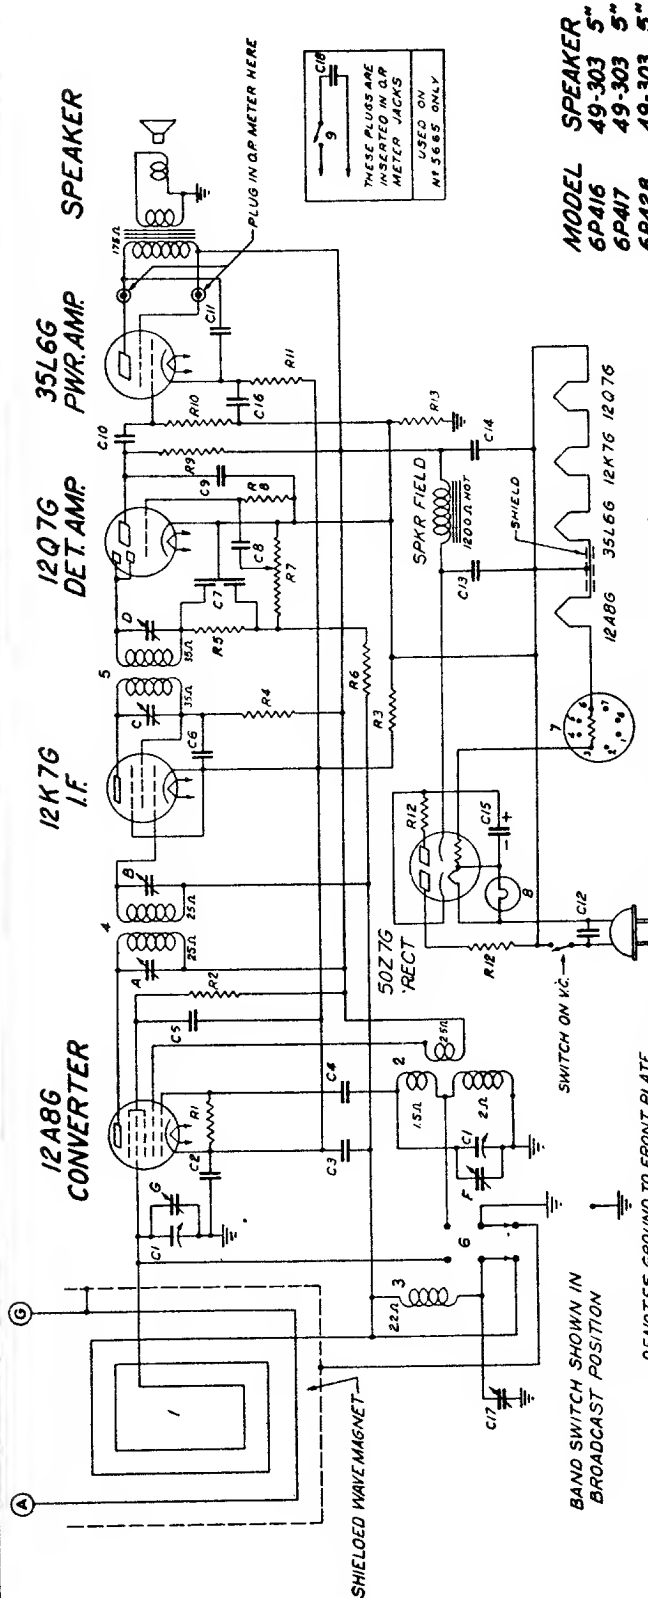

PLUG IN O.P. METER HERE


THESE PLUGS ARE INSERTED IN O.P. METER JACKS USED ON M5665 ONLY

MODEL SPEAKER  
 6P416 49-303 5"  
 6P417 49-303 5"  
 6P428 49-303 5"

I.F. FREQUENCY 455KC  
 6 TUBE SUPERHETERODYNE  
 VOLTAGE DOUBLER A.C.  
 CHASSIS N°5661/5665  
 ZENITH RADIO CORPORATION

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-845	TWO GANG VARIABLE	R5	63-593	47 M OHM
C2	22-190	.1 MFD	R6	63-722	22 MEG OHM
C3	22-250	.05 MFD	R7	63-028	VOLUME CONTROL
C4	22-212	100 MMFD	R8	63-976	15 MEG OHM
C5	22-212	100 MMFD	R9	63-296	220 M OHM
C6	22-212	.05 MFD	R10	63-597	470 M OHM
C7	22-212	.05 MFD	R11	63-686	100 OHM
C8	22-212	.05 MFD	R12	63-723	220 OHM
C9	22-212	.005 MFD	R13	93-711	220 OHM
C10	22-212	.005 MFD	R14	56913	OSCILLATOR ASSEMBLY
C11	22-212	.01 MFD	R15	56913	OSCILLATOR COIL ASSEM.
C12	22-212	.05 MFD	R16	56914	SHUNT ANT
C13	22-212	.05 MFD	R17	56915	12 I.F. TRANS.
C14	22-212	.05 MFD	R18	56915	12 I.F. TRANS.
C15	22-212	.05 MFD	R19	56915	12 I.F. TRANS.
C16	22-212	.05 MFD	R20	56915	12 I.F. TRANS.
C17	22-212	.05 MFD	R21	56915	12 I.F. TRANS.
R1	63-712	3.5 M OHM	R22	63-572	5.5 OHM
R2	63-572	5.5 OHM	R23	63-572	5.5 OHM
R3	63-572	5.5 OHM	R24	63-572	5.5 OHM
R4	63-572	5.5 OHM	R25	63-572	5.5 OHM
R5	63-593	47 M OHM	R26	63-593	47 M OHM
R6	63-722	22 MEG OHM	R27	63-722	22 MEG OHM
R7	63-028	VOLUME CONTROL	R28	63-028	VOLUME CONTROL
R8	63-976	15 MEG OHM	R29	63-976	15 MEG OHM
R9	63-296	220 M OHM	R30	63-296	220 M OHM
R10	63-597	470 M OHM	R31	63-597	470 M OHM
R11	63-686	100 OHM	R32	63-686	100 OHM
R12	63-723	220 OHM	R33	63-723	220 OHM
R13	93-711	220 OHM	R34	93-711	220 OHM
R14	56913	OSCILLATOR ASSEMBLY	R35	56913	OSCILLATOR ASSEMBLY
R15	56913	OSCILLATOR COIL ASSEM.	R36	56913	OSCILLATOR COIL ASSEM.
R16	56914	SHUNT ANT	R37	56914	SHUNT ANT
R17	56915	12 I.F. TRANS.	R38	56915	12 I.F. TRANS.
R18	56915	12 I.F. TRANS.	R39	56915	12 I.F. TRANS.
R19	56915	12 I.F. TRANS.	R40	56915	12 I.F. TRANS.
R20	56915	12 I.F. TRANS.	R41	56915	12 I.F. TRANS.
R21	56915	12 I.F. TRANS.	R42	56915	12 I.F. TRANS.
R22	63-572	5.5 OHM	R43	63-572	5.5 OHM
R23	63-572	5.5 OHM	R44	63-572	5.5 OHM
R24	63-572	5.5 OHM	R45	63-572	5.5 OHM
R25	63-572	5.5 OHM	R46	63-572	5.5 OHM
R26	63-593	47 M OHM	R47	63-593	47 M OHM
R27	63-722	22 MEG OHM	R48	63-722	22 MEG OHM
R28	63-028	VOLUME CONTROL	R49	63-028	VOLUME CONTROL
R29	63-976	15 MEG OHM	R50	63-976	15 MEG OHM
R30	63-296	220 M OHM	R51	63-296	220 M OHM
R31	63-597	470 M OHM	R52	63-597	470 M OHM
R32	63-686	100 OHM	R53	63-686	100 OHM
R33	93-711	220 OHM	R54	93-711	220 OHM
R34	56913	OSCILLATOR ASSEMBLY	R55	56913	OSCILLATOR ASSEMBLY
R35	56913	OSCILLATOR COIL ASSEM.	R56	56913	OSCILLATOR COIL ASSEM.
R36	56914	SHUNT ANT	R57	56914	SHUNT ANT
R37	56915	12 I.F. TRANS.	R58	56915	12 I.F. TRANS.
R38	56915	12 I.F. TRANS.	R59	56915	12 I.F. TRANS.
R39	56915	12 I.F. TRANS.	R60	56915	12 I.F. TRANS.
R40	56915	12 I.F. TRANS.	R61	56915	12 I.F. TRANS.
R41	56915	12 I.F. TRANS.	R62	56915	12 I.F. TRANS.
R42	56915	12 I.F. TRANS.	R63	56915	12 I.F. TRANS.
R43	63-572	5.5 OHM	R64	63-572	5.5 OHM
R44	63-572	5.5 OHM	R65	63-572	5.5 OHM
R45	63-572	5.5 OHM	R66	63-572	5.5 OHM
R46	63-572	5.5 OHM	R67	63-572	5.5 OHM
R47	63-593	47 M OHM	R68	63-593	47 M OHM
R48	63-722	22 MEG OHM	R69	63-722	22 MEG OHM
R49	63-028	VOLUME CONTROL	R70	63-028	VOLUME CONTROL
R50	63-976	15 MEG OHM	R71	63-976	15 MEG OHM
R51	63-296	220 M OHM	R72	63-296	220 M OHM
R52	63-597	470 M OHM	R73	63-597	470 M OHM
R53	63-686	100 OHM	R74	63-686	100 OHM
R54	93-711	220 OHM	R75	93-711	220 OHM
R55	56913	OSCILLATOR ASSEMBLY	R76	56913	OSCILLATOR ASSEMBLY
R56	56913	OSCILLATOR COIL ASSEM.	R77	56913	OSCILLATOR COIL ASSEM.
R57	56914	SHUNT ANT	R78	56914	SHUNT ANT
R58	56915	12 I.F. TRANS.	R79	56915	12 I.F. TRANS.
R59	56915	12 I.F. TRANS.	R80	56915	12 I.F. TRANS.
R60	56915	12 I.F. TRANS.	R81	56915	12 I.F. TRANS.
R61	56915	12 I.F. TRANS.	R82	56915	12 I.F. TRANS.
R62	56915	12 I.F. TRANS.	R83	56915	12 I.F. TRANS.
R63	56915	12 I.F. TRANS.	R84	56915	12 I.F. TRANS.
R64	63-572	5.5 OHM	R85	63-572	5.5 OHM
R65	63-572	5.5 OHM	R86	63-572	5.5 OHM
R66	63-572	5.5 OHM	R87	63-572	5.5 OHM
R67	63-572	5.5 OHM	R88	63-572	5.5 OHM
R68	63-593	47 M OHM	R89	63-593	47 M OHM
R69	63-722	22 MEG OHM	R90	63-722	22 MEG OHM
R70	63-028	VOLUME CONTROL	R91	63-028	VOLUME CONTROL
R71	63-976	15 MEG OHM	R92	63-976	15 MEG OHM
R72	63-296	220 M OHM	R93	63-296	220 M OHM
R73	63-597	470 M OHM	R94	63-597	470 M OHM
R74	63-686	100 OHM	R95	63-686	100 OHM
R75	93-711	220 OHM	R96	93-711	220 OHM
R76	56913	OSCILLATOR ASSEMBLY	R97	56913	OSCILLATOR ASSEMBLY
R77	56913	OSCILLATOR COIL ASSEM.	R98	56913	OSCILLATOR COIL ASSEM.
R78	56914	SHUNT ANT	R99	56914	SHUNT ANT
R79	56915	12 I.F. TRANS.	R100	56915	12 I.F. TRANS.

- NOTE**  
 Voltages measured from No. 7 pin on ballast tube to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.
- All filament voltages measured across each respective tube, using a 0-50 A.C. volt meter.
- A. This lug is C.T. of fil. and is one side of pilot light supply line. Lug No. 7 is return for pilot light.
  - B. This lug (No. 8) has a 50 v. A. C. potential with respect to lug No. 2 and also a 117 v. A.C. potential with respect to line switch.

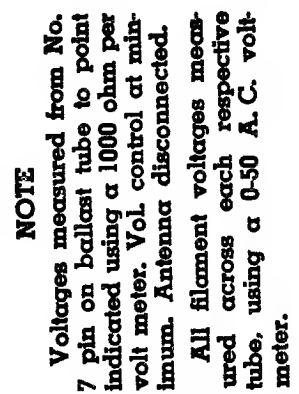


# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

I.F. FREQUENCY 455KC  
 6 TUBE SUPERHETERODYNE  
 VOLTAGE DOUBLER A.C.  
 CHASSIS No. 5662 & 5666  
 ZENITH RADIO CORPORATION  
 CHICAGO, ILL.

35L6G-OUTPUT



50Z7G-RECT.

12A8G-DET.OSC.

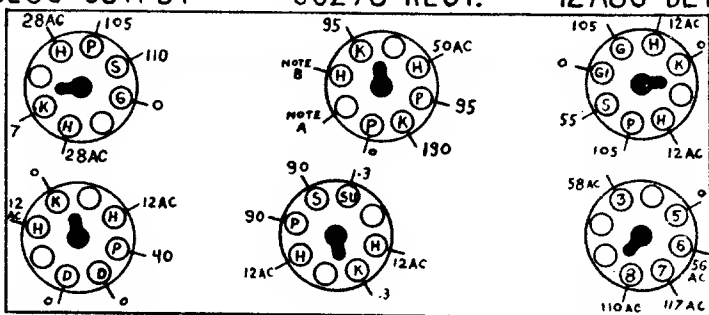

12Q7G-2ND DET. 12K7G-I.F.  
 FRONT OF CHASSIS

100-79 BALLAST

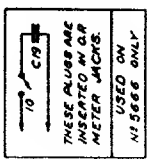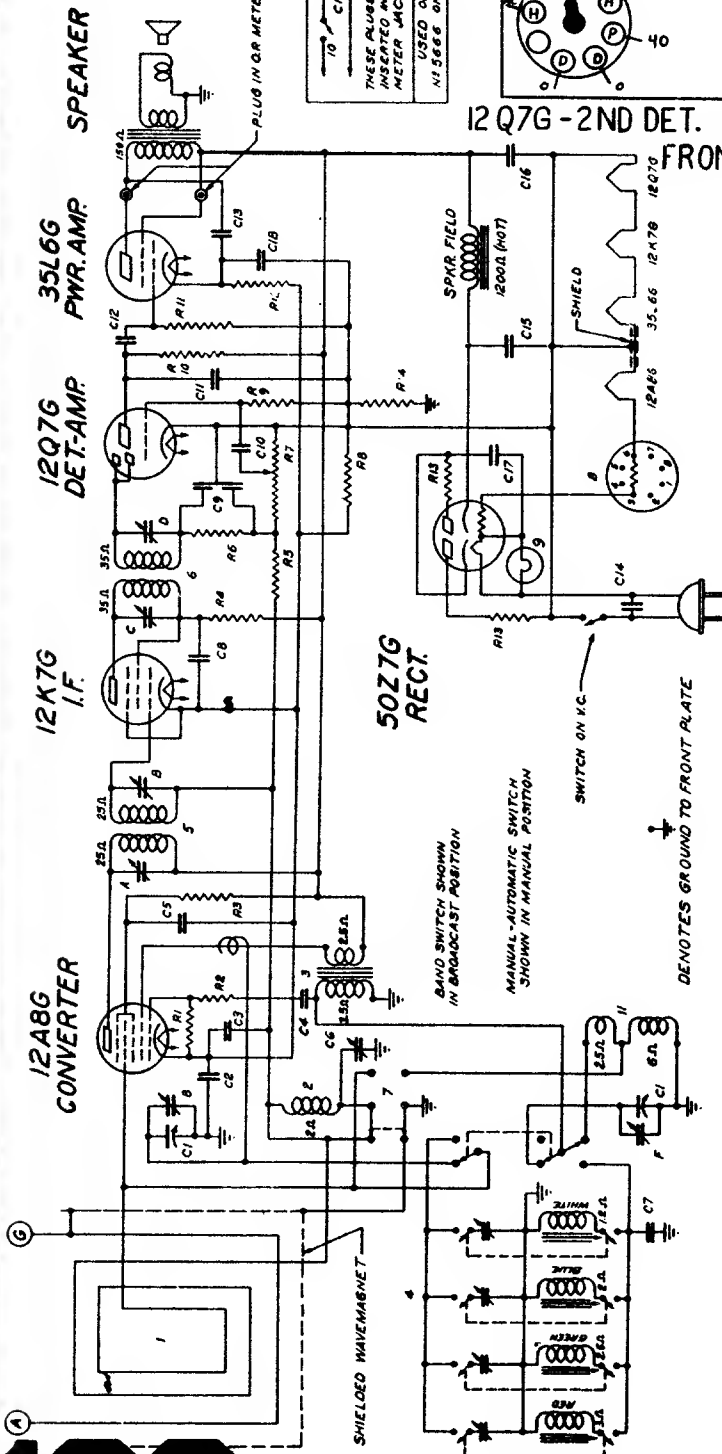


PART NO.	DESCRIPTION	QWAS	PART NO.	DESCRIPTION	QWAS	PART NO.	DESCRIPTION
C1	22-849	200K	R9	150V ELECTROLYTIC	150V	63-876	15 MEG OHM
C2	22-190	200K	R10	250K	R10	63-896	250 M OHM
C3	22-850	500K	R11	200K	R11	63-897	200 M OHM
C4	22-851	100 MFD	R12	25V	R12	63-886	470 M OHM
C5	22-852	100 MFD	R13	25V	R13	63-888	150 OHM WIREWOUND
C6	22-853	200 MFD	R14	25V	R14	63-893	82 OHM WIREWOUND
C7	22-854	200 MFD	A	80MFD ELECTROLYTIC	80MFD	63-717	220 M OHM
C8	22-855	200 MFD	B	20MFD ELECTROLYTIC	20MFD	7004	WIREMAGNET ASSEMBLY
C9	22-856	200 MFD	C	10MFD ELECTROLYTIC	10MFD	5704	WIREMAGNET ASSEMBLY
C10	22-857	200 MFD	D	5MFD ELECTROLYTIC	5MFD	5704	OSCILLATOR COIL ASSEMBLY
C11	22-858	200 MFD	E	2.2MFD ELECTROLYTIC	2.2MFD	5702	OSCILLATOR COIL ASSEMBLY
C12	22-859	200 MFD	F	1MFD ELECTROLYTIC	1MFD	5702	OSCILLATOR COIL ASSEMBLY
C13	22-860	200 MFD	G	10MFD ELECTROLYTIC	10MFD	5695	OSCILLATOR COIL ASSEMBLY
C14	22-861	200 MFD	H	2.2MFD ELECTROLYTIC	2.2MFD	5695	OSCILLATOR COIL ASSEMBLY
R1	50Z7G	50Z7G	1	12K7G	12K7G	5695	OSCILLATOR COIL ASSEMBLY
R2	12A8G	12A8G	2	12Q7G	12Q7G	12K7G	OSCILLATOR COIL ASSEMBLY
R3	35L6G	35L6G	3	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
R4	100-79	100-79	4	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
R5	100-79	100-79	5	12Q7G	12Q7G	12K7G	OSCILLATOR COIL ASSEMBLY
R6	100-79	100-79	6	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
R7	100-79	100-79	7	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
R8	100-79	100-79	8	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
R9	100-79	100-79	9	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
R10	100-79	100-79	10	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
R11	100-79	100-79	11	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
R12	100-79	100-79	12	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
R13	100-79	100-79	13	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
R14	100-79	100-79	14	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
A	100-79	100-79	A	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
B	100-79	100-79	B	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
C	100-79	100-79	C	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
D	100-79	100-79	D	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
E	100-79	100-79	E	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
F	100-79	100-79	F	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY
G	100-79	100-79	G	12K7G	12K7G	12K7G	OSCILLATOR COIL ASSEMBLY
H	100-79	100-79	H	50Z7G	50Z7G	12K7G	OSCILLATOR COIL ASSEMBLY

Models 6P418, 6P419, 6P456 6P429, 6P430, 6P447, 6P448, 6P457

CHASSIS No. 5662

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

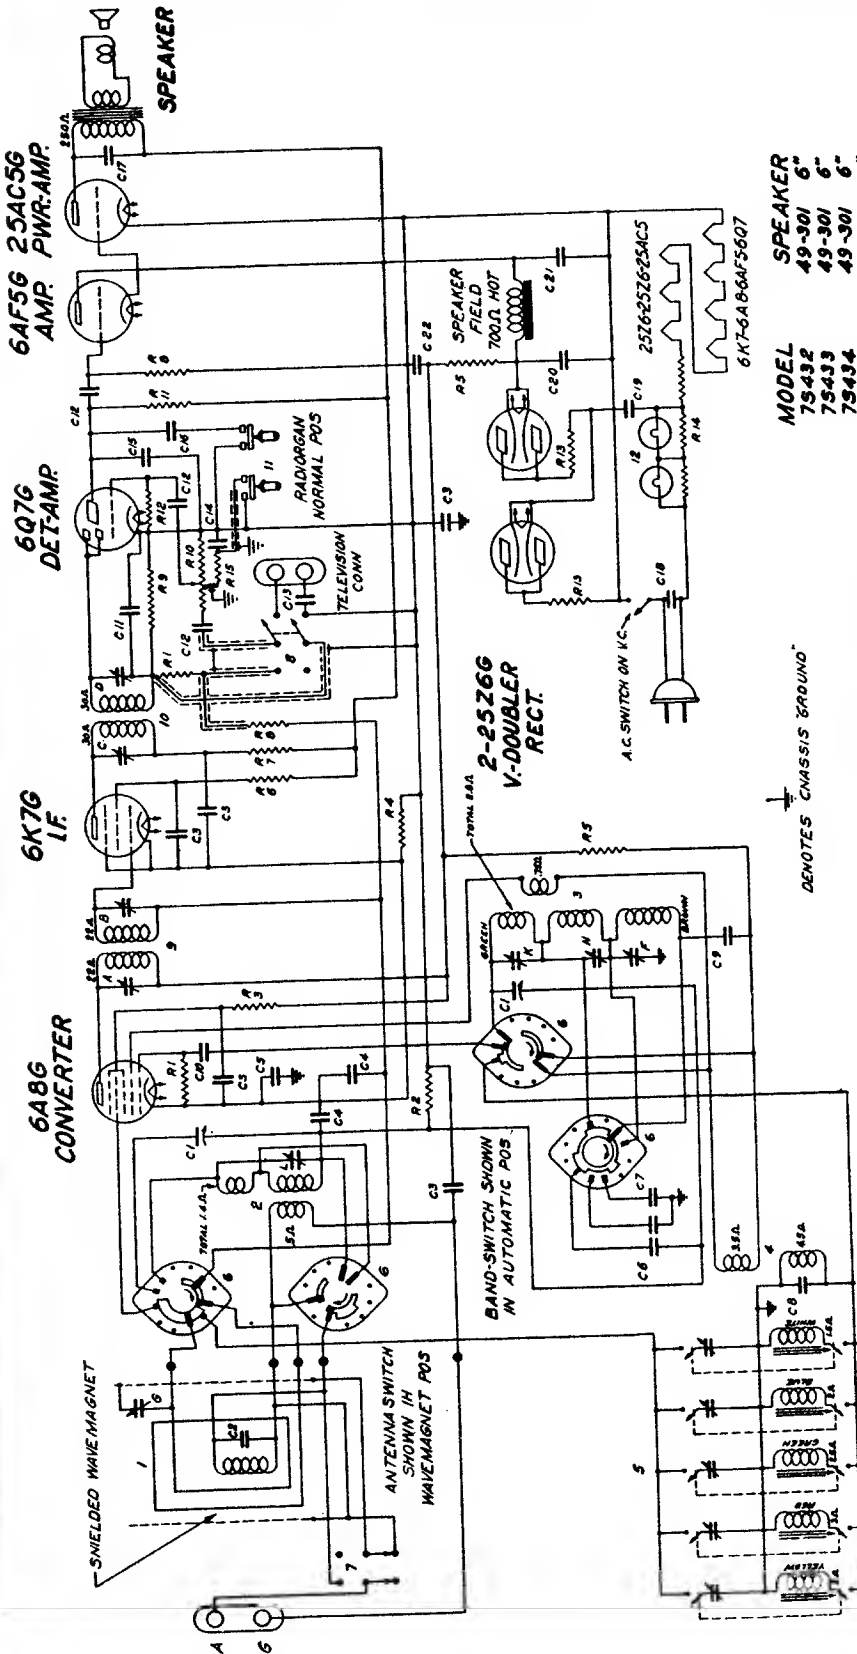

MODEL	SPEAKER
49-301	6"
75432	6"
75433	6"
75434	6"
75449	6"
75450	8"
75459	10"
75459	8"
75460	10"
75461	12"
75462	10"

I.F. FREQUENCY 455 KC.  
 7 TUBE SUPERHETERODYNE.  
 CHASSIS NO. 5719 VOLTAGE DOUBLER AC.  
 ZENITH RADIO CORPORATION  
 CHICAGO, ILL.

DISC PART NO.	DISC PART NO.	DESCRIPTION	DISC PART NO.	DESCRIPTION
C-1	22-849	TWO-TURN W/P	R-12	15 MEG OHMS
C-2	22-850	50 MFD	R-13	15 MEG OHMS
C-3	22-851	50 MFD	R-14	15 MEG OHMS
C-4	22-852	50 MFD	R-15	15 MEG OHMS
C-5	22-853	50 MFD		
C-6	22-854	50 MFD		
C-7	22-855	50 MFD		
C-8	22-856	50 MFD		
C-9	22-857	50 MFD		
C-10	22-858	50 MFD		
C-11	22-859	50 MFD		
C-12	22-860	50 MFD		
C-13	22-861	50 MFD		
C-14	22-862	50 MFD		
C-15	22-863	50 MFD		
C-16	22-864	50 MFD		
C-17	22-865	50 MFD		
C-18	22-866	50 MFD		
C-19	22-867	50 MFD		
C-20	22-868	50 MFD		
C-21	22-869	50 MFD		
C-22	22-870	50 MFD		
C-23	22-871	50 MFD		
C-24	22-872	50 MFD		
C-25	22-873	50 MFD		
C-26	22-874	50 MFD		
C-27	22-875	50 MFD		
C-28	22-876	50 MFD		
C-29	22-877	50 MFD		
C-30	22-878	50 MFD		
C-31	22-879	50 MFD		
C-32	22-880	50 MFD		
C-33	22-881	50 MFD		
C-34	22-882	50 MFD		
C-35	22-883	50 MFD		
C-36	22-884	50 MFD		
C-37	22-885	50 MFD		
C-38	22-886	50 MFD		
C-39	22-887	50 MFD		
C-40	22-888	50 MFD		
C-41	22-889	50 MFD		
C-42	22-890	50 MFD		
C-43	22-891	50 MFD		
C-44	22-892	50 MFD		
C-45	22-893	50 MFD		
C-46	22-894	50 MFD		
C-47	22-895	50 MFD		
C-48	22-896	50 MFD		
C-49	22-897	50 MFD		
C-50	22-898	50 MFD		
C-51	22-899	50 MFD		
C-52	22-900	50 MFD		
C-53	22-901	50 MFD		
C-54	22-902	50 MFD		
C-55	22-903	50 MFD		
C-56	22-904	50 MFD		
C-57	22-905	50 MFD		
C-58	22-906	50 MFD		
C-59	22-907	50 MFD		
C-60	22-908	50 MFD		
C-61	22-909	50 MFD		
C-62	22-910	50 MFD		
C-63	22-911	50 MFD		
C-64	22-912	50 MFD		
C-65	22-913	50 MFD		
C-66	22-914	50 MFD		
C-67	22-915	50 MFD		
C-68	22-916	50 MFD		
C-69	22-917	50 MFD		
C-70	22-918	50 MFD		
C-71	22-919	50 MFD		
C-72	22-920	50 MFD		
C-73	22-921	50 MFD		
C-74	22-922	50 MFD		
C-75	22-923	50 MFD		
C-76	22-924	50 MFD		
C-77	22-925	50 MFD		
C-78	22-926	50 MFD		
C-79	22-927	50 MFD		
C-80	22-928	50 MFD		
C-81	22-929	50 MFD		
C-82	22-930	50 MFD		
C-83	22-931	50 MFD		
C-84	22-932	50 MFD		
C-85	22-933	50 MFD		
C-86	22-934	50 MFD		
C-87	22-935	50 MFD		
C-88	22-936	50 MFD		
C-89	22-937	50 MFD		
C-90	22-938	50 MFD		
C-91	22-939	50 MFD		
C-92	22-940	50 MFD		
C-93	22-941	50 MFD		
C-94	22-942	50 MFD		
C-95	22-943	50 MFD		
C-96	22-944	50 MFD		
C-97	22-945	50 MFD		
C-98	22-946	50 MFD		
C-99	22-947	50 MFD		
C-100	22-948	50 MFD		
C-101	22-949	50 MFD		
C-102	22-950	50 MFD		
C-103	22-951	50 MFD		
C-104	22-952	50 MFD		
C-105	22-953	50 MFD		
C-106	22-954	50 MFD		
C-107	22-955	50 MFD		
C-108	22-956	50 MFD		
C-109	22-957	50 MFD		
C-110	22-958	50 MFD		
C-111	22-959	50 MFD		
C-112	22-960	50 MFD		
C-113	22-961	50 MFD		
C-114	22-962	50 MFD		
C-115	22-963	50 MFD		
C-116	22-964	50 MFD		
C-117	22-965	50 MFD		
C-118	22-966	50 MFD		
C-119	22-967	50 MFD		
C-120	22-968	50 MFD		
C-121	22-969	50 MFD		
C-122	22-970	50 MFD		
C-123	22-971	50 MFD		
C-124	22-972	50 MFD		
C-125	22-973	50 MFD		
C-126	22-974	50 MFD		
C-127	22-975	50 MFD		
C-128	22-976	50 MFD		
C-129	22-977	50 MFD		
C-130	22-978	50 MFD		
C-131	22-979	50 MFD		
C-132	22-980	50 MFD		
C-133	22-981	50 MFD		
C-134	22-982	50 MFD		
C-135	22-983	50 MFD		
C-136	22-984	50 MFD		
C-137	22-985	50 MFD		
C-138	22-986	50 MFD		
C-139	22-987	50 MFD		
C-140	22-988	50 MFD		
C-141	22-989	50 MFD		
C-142	22-990	50 MFD		
C-143	22-991	50 MFD		
C-144	22-992	50 MFD		
C-145	22-993	50 MFD		
C-146	22-994	50 MFD		
C-147	22-995	50 MFD		
C-148	22-996	50 MFD		
C-149	22-997	50 MFD		
C-150	22-998	50 MFD		
C-151	22-999	50 MFD		
C-152	22-1000	50 MFD		

MODELS 75432, 75433, 75434, 75449, 75450, 75458, 75459, 75460, 75461, 75462 (Chassis No. 5719)

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS


## Models 7S432, 7S433, 7S434, 7S449, 7S450, 7S458, 7S459 7S460, 7S461, 7S462

(Chassis No. 5719)


### NOTE

Voltages measured from line switch to point indicated using a 1000 ohm per volt meter. Vol. control at minimum. Antenna disconnected.

All filament voltages measured across each respective tube, using an A.C. volt-meter.

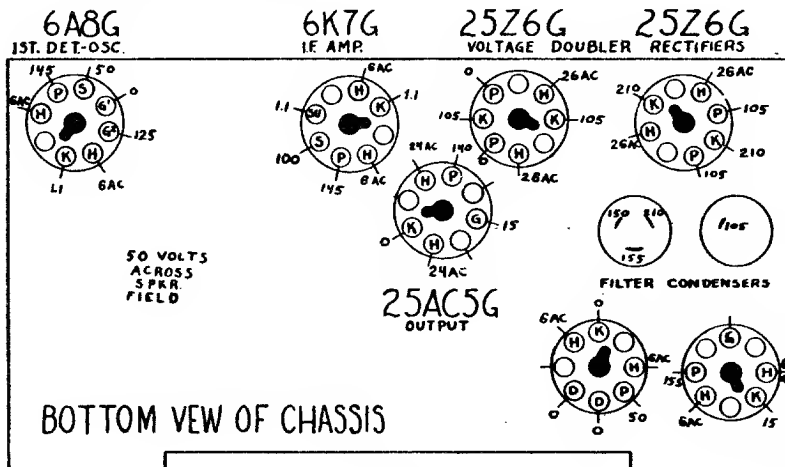

- ### LEGEND
- NC—No Connection
  - SH—Shield
  - H—Heater
  - P—Plate
  - S—Screen
  - G—Grid
  - SU—Suppressor
  - D—Diode
  - F—Filament
  - K—Cathode

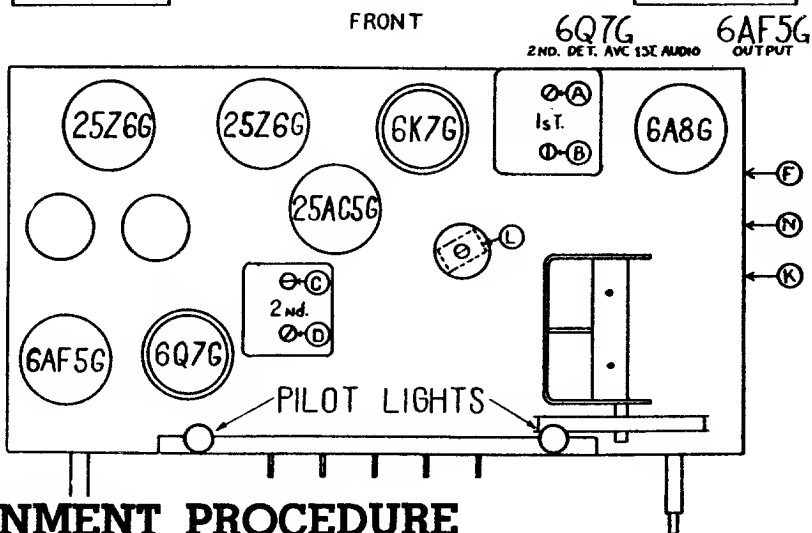


## ALIGNMENT PROCEDURE

Operation	Connect Test Oscillator to	Dummy Antenna	Set Test Oscillator to	Band	Set Dial At	Adjust Trimmers	Purpose
1	1st Det. Grid	5 mfd.	455	B'dcast	600	A B C D	I. F.
2	Single *x Turn Coil	—	1500	"	1500	F	Set Osc. to Scale
3	" "	—	1500	"	1500	On Wave Magnet	Alignment of Wave Magnet
4	Rec. Ant. Post **	400 ohms	18000	S.W.#2	18000	K	Set Osc. to Scale
5	"	"	16000	"	16000	L	Rock gang & adj. for max. output
6	"	"	4.500	S.W. #1	4.500	N	"

\* Loosely coupled to Wave Magnet  
 x Switch in Wave Magnet Position  
 \*\* Switch in Antenna Position

# MANUAL OF 1939 MOST POPULAR SERVICE DIAGRAMS

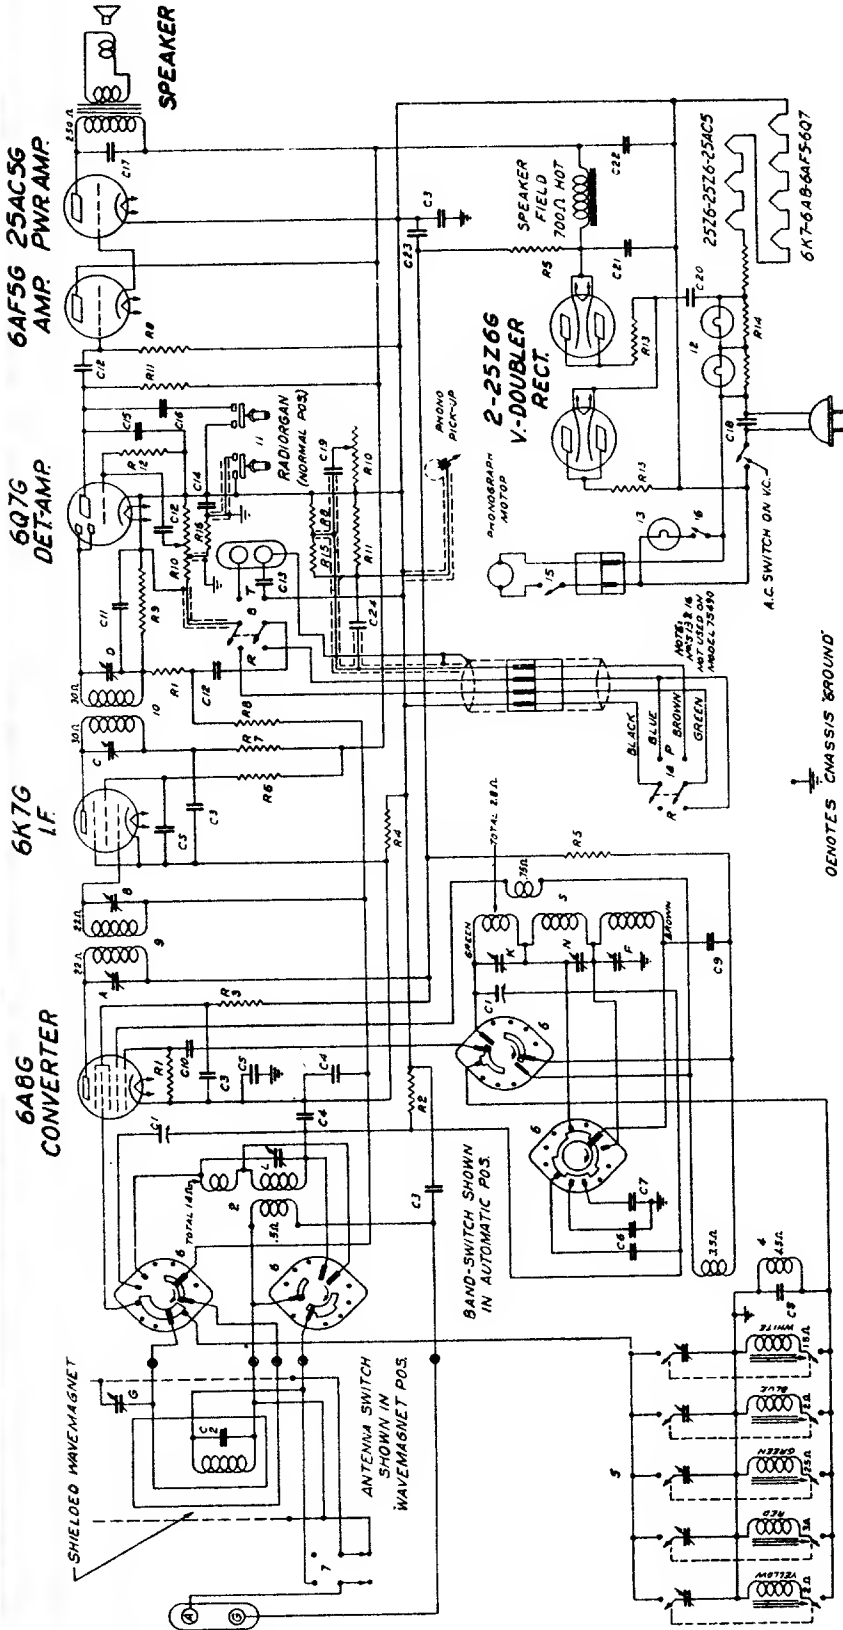

**MODEL SPEAKER**  
**7S487 49-312 10"**  
**7S488 49-309 12"**  
**7S490 49-314 8"**


**I.F. FREQUENCY 455 KC**  
**7 TUBE SUPERHETERODYNE**  
**CHASSIS N°5721 3 BAND**  
**VOLTAGE DOUBLER A.C.**  
**ZENITH RADIO CORPORATION**  
**CHICAGO, ILL.**

DIAG. NO.	PART NO.	DESCRIPTION	DIAG. NO.	PART NO.	DESCRIPTION
C1	22-860	TWO GANG VARIABLE	1	5 6336	WAVEMAGNET ASSEMBLY
C2	22-182	0.0025 MFD	2	5 6337	ANTENNA COIL ASSEMBLY
C3	22-862	0.5 MFD	3	5 6937	OSCILLATOR COIL ASSEMBLY
C4	22-869	0.5 MFD	4	5704	AUTO TUNING UNIT ASSEMBLY
C5	22-864	0.01 MFD	5	85-105	BAND SELECTOR SWITCH
C6	22-866	0.01 MFD	6	85-171	WAVEMAGNET SWITCH
C7	22-864	0.01 MFD	7	59-600	12 I.F. TRANS.
C8	22-864	0.01 MFD	8	59-600	12 I.F. TRANS.
C9	22-864	0.01 MFD	9	59-600	12 I.F. TRANS.
C10	22-864	0.01 MFD	10	59-600	12 I.F. TRANS.
C11	22-864	0.01 MFD	11	59-600	12 I.F. TRANS.
C12	22-864	0.01 MFD	12	59-600	12 I.F. TRANS.
C13	22-864	0.01 MFD	13	59-600	12 I.F. TRANS.
C14	22-864	0.01 MFD	14	59-600	12 I.F. TRANS.
C15	22-864	0.01 MFD	15	59-600	12 I.F. TRANS.
C16	22-864	0.01 MFD	16	59-600	12 I.F. TRANS.
C17	22-864	0.01 MFD	17	59-600	12 I.F. TRANS.
C18	22-864	0.01 MFD	18	59-600	12 I.F. TRANS.
C19	22-864	0.01 MFD	19	59-600	12 I.F. TRANS.
C20	22-864	0.01 MFD	20	59-600	12 I.F. TRANS.
R1	63-393	47M OHM	1	5 6336	WAVEMAGNET ASSEMBLY
R2	63-385	150M OHM	2	5 6337	ANTENNA COIL ASSEMBLY
R3	63-409	60M OHM	3	5 6937	OSCILLATOR COIL ASSEMBLY
R4	63-400	60M OHM	4	5704	AUTO TUNING UNIT ASSEMBLY
R5	63-400	60M OHM	5	85-105	BAND SELECTOR SWITCH
R6	63-400	60M OHM	6	85-171	WAVEMAGNET SWITCH
R7	63-400	60M OHM	7	59-600	12 I.F. TRANS.
R8	63-400	60M OHM	8	59-600	12 I.F. TRANS.
R9	63-400	60M OHM	9	59-600	12 I.F. TRANS.
R10	63-400	60M OHM	10	59-600	12 I.F. TRANS.
R11	63-400	60M OHM	11	59-600	12 I.F. TRANS.
R12	63-400	60M OHM	12	59-600	12 I.F. TRANS.
R13	63-400	60M OHM	13	59-600	12 I.F. TRANS.
R14	63-400	60M OHM	14	59-600	12 I.F. TRANS.
R15	63-400	60M OHM	15	59-600	12 I.F. TRANS.
R16	63-400	60M OHM	16	59-600	12 I.F. TRANS.
R17	63-400	60M OHM	17	59-600	12 I.F. TRANS.
R18	63-400	60M OHM	18	59-600	12 I.F. TRANS.
R19	63-400	60M OHM	19	59-600	12 I.F. TRANS.
R20	63-400	60M OHM	20	59-600	12 I.F. TRANS.
R21	63-400	60M OHM	21	59-600	12 I.F. TRANS.
R22	63-400	60M OHM	22	59-600	12 I.F. TRANS.
R23	63-400	60M OHM	23	59-600	12 I.F. TRANS.
R24	63-400	60M OHM	24	59-600	12 I.F. TRANS.
R25	63-400	60M OHM	25	59-600	12 I.F. TRANS.
R26	63-400	60M OHM	26	59-600	12 I.F. TRANS.
R27	63-400	60M OHM	27	59-600	12 I.F. TRANS.
R28	63-400	60M OHM	28	59-600	12 I.F. TRANS.
R29	63-400	60M OHM	29	59-600	12 I.F. TRANS.
R30	63-400	60M OHM	30	59-600	12 I.F. TRANS.
R31	63-400	60M OHM	31	59-600	12 I.F. TRANS.
R32	63-400	60M OHM	32	59-600	12 I.F. TRANS.
R33	63-400	60M OHM	33	59-600	12 I.F. TRANS.
R34	63-400	60M OHM	34	59-600	12 I.F. TRANS.
R35	63-400	60M OHM	35	59-600	12 I.F. TRANS.
R36	63-400	60M OHM	36	59-600	12 I.F. TRANS.
R37	63-400	60M OHM	37	59-600	12 I.F. TRANS.
R38	63-400	60M OHM	38	59-600	12 I.F. TRANS.
R39	63-400	60M OHM	39	59-600	12 I.F. TRANS.
R40	63-400	60M OHM	40	59-600	12 I.F. TRANS.
R41	63-400	60M OHM	41	59-600	12 I.F. TRANS.
R42	63-400	60M OHM	42	59-600	12 I.F. TRANS.
R43	63-400	60M OHM	43	59-600	12 I.F. TRANS.
R44	63-400	60M OHM	44	59-600	12 I.F. TRANS.
R45	63-400	60M OHM	45	59-600	12 I.F. TRANS.
R46	63-400	60M OHM	46	59-600	12 I.F. TRANS.
R47	63-400	60M OHM	47	59-600	12 I.F. TRANS.
R48	63-400	60M OHM	48	59-600	12 I.F. TRANS.
R49	63-400	60M OHM	49	59-600	12 I.F. TRANS.
R50	63-400	60M OHM	50	59-600	12 I.F. TRANS.
R51	63-400	60M OHM	51	59-600	12 I.F. TRANS.
R52	63-400	60M OHM	52	59-600	12 I.F. TRANS.
R53	63-400	60M OHM	53	59-600	12 I.F. TRANS.
R54	63-400	60M OHM	54	59-600	12 I.F. TRANS.
R55	63-400	60M OHM	55	59-600	12 I.F. TRANS.
R56	63-400	60M OHM	56	59-600	12 I.F. TRANS.
R57	63-400	60M OHM	57	59-600	12 I.F. TRANS.
R58	63-400	60M OHM	58	59-600	12 I.F. TRANS.
R59	63-400	60M OHM	59	59-600	12 I.F. TRANS.
R60	63-400	60M OHM	60	59-600	12 I.F. TRANS.
R61	63-400	60M OHM	61	59-600	12 I.F. TRANS.
R62	63-400	60M OHM	62	59-600	12 I.F. TRANS.
R63	63-400	60M OHM	63	59-600	12 I.F. TRANS.
R64	63-400	60M OHM	64	59-600	12 I.F. TRANS.
R65	63-400	60M OHM	65	59-600	12 I.F. TRANS.
R66	63-400	60M OHM	66	59-600	12 I.F. TRANS.
R67	63-400	60M OHM	67	59-600	12 I.F. TRANS.
R68	63-400	60M OHM	68	59-600	12 I.F. TRANS.
R69	63-400	60M OHM	69	59-600	12 I.F. TRANS.
R70	63-400	60M OHM	70	59-600	12 I.F. TRANS.
R71	63-400	60M OHM	71	59-600	12 I.F. TRANS.
R72	63-400	60M OHM	72	59-600	12 I.F. TRANS.
R73	63-400	60M OHM	73	59-600	12 I.F. TRANS.
R74	63-400	60M OHM	74	59-600	12 I.F. TRANS.
R75	63-400	60M OHM	75	59-600	12 I.F. TRANS.
R76	63-400	60M OHM	76	59-600	12 I.F. TRANS.
R77	63-400	60M OHM	77	59-600	12 I.F. TRANS.
R78	63-400	60M OHM	78	59-600	12 I.F. TRANS.
R79	63-400	60M OHM	79	59-600	12 I.F. TRANS.
R80	63-400	60M OHM	80	59-600	12 I.F. TRANS.
R81	63-400	60M OHM	81	59-600	12 I.F. TRANS.
R82	63-400	60M OHM	82	59-600	12 I.F. TRANS.
R83	63-400	60M OHM	83	59-600	12 I.F. TRANS.
R84	63-400	60M OHM	84	59-600	12 I.F. TRANS.
R85	63-400	60M OHM	85	59-600	12 I.F. TRANS.
R86	63-400	60M OHM	86	59-600	12 I.F. TRANS.
R87	63-400	60M OHM	87	59-600	12 I.F. TRANS.
R88	63-400	60M OHM	88	59-600	12 I.F. TRANS.
R89	63-400	60M OHM	89	59-600	12 I.F. TRANS.
R90	63-400	60M OHM	90	59-600	12 I.F. TRANS.
R91	63-400	60M OHM	91	59-600	12 I.F. TRANS.
R92	63-400	60M OHM	92	59-600	12 I.F. TRANS.
R93	63-400	60M OHM	93	59-600	12 I.F. TRANS.
R94	63-400	60M OHM	94	59-600	12 I.F. TRANS.
R95	63-400	60M OHM	95	59-600	12 I.F. TRANS.
R96	63-400	60M OHM	96	59-600	12 I.F. TRANS.
R97	63-400	60M OHM	97	59-600	12 I.F. TRANS.
R98	63-400	60M OHM	98	59-600	12 I.F. TRANS.
R99	63-400	60M OHM	99	59-600	12 I.F. TRANS.
R100	63-400	60M OHM	100	59-600	12 I.F. TRANS.

**MODELS 7S487, 7S488, 7S490 (Chassis No. 5721)**

12SA7GT OSC.

FREQUENCY  
ADJUSTMENT

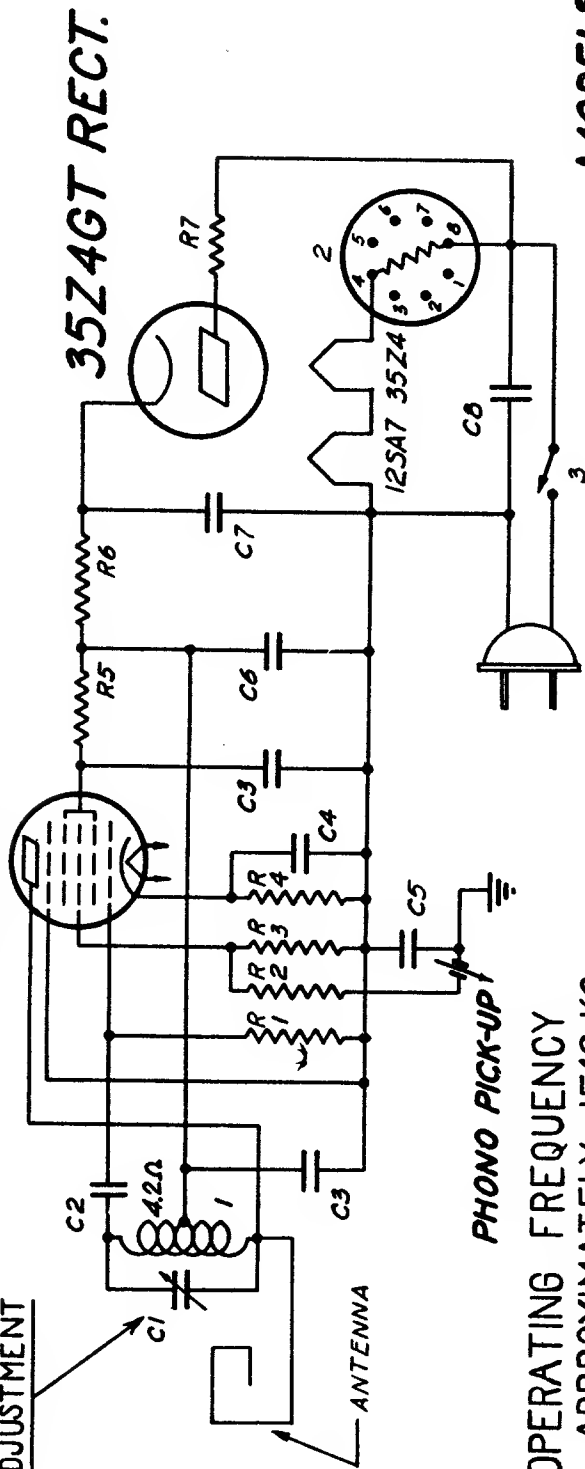

PHONO PICK-UP  
OPERATING FREQUENCY  
APPROXIMATELY 1540 KC.

MODELS  
S-7000  
S-7001  
S-7002  
S-7003

PHONOGRAPH OSCILLATOR  
ZENITH RADIO CORPORATION  
CHICAGO, ILL.

DIAG. N°	PART N°	DESCRIPTION	DIAG. N°	PART N°	DESCRIPTION
C1	22-690	TUNING CONDENSER	R2	63-658	390M OHM
C2	22-182	.00025 MFD.	R3	63-260	100M OHM
C3	22-243	.01 MFD.	R4	63-583	1000 OHM
C4	22-829	.05 MFD.	R5	63-964	4700 OHM
C5	22-827	.1 MFD.	R6	63-803	2200 OHM
C6	22-876	8MFD. ELECTROLYTIC	R7	63-575	47 OHM
C7	22-670	40 MFD.			
C8	22-670	.1 MFD.			
R1	63-591	22 M OHM	1	S6854	OSC. COIL ASSEM
			2	100-76	BALLAST TUBE
			3	85-170	AC SWITCH

WIRELESS RECORD PLAYER Models S7000, S7001, S7002, S7003