

Most - Often - Needed

1965

Volume R-25


RADIO
DIAGRAMS
and Servicing Information



Compiled by
M. N. BEITMAN

SUPREME PUBLICATIONS


Supreme Publications for Faster Radio-Television Repairs

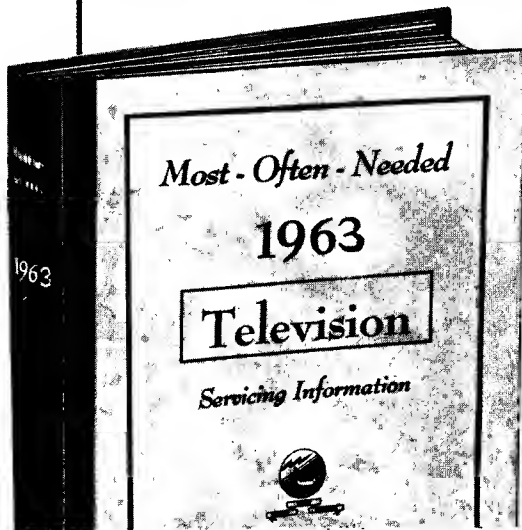

The repair of any TV set is simple with **Supreme Television** service manuals. Every set is covered in a practical manner to simplify trouble-shooting and repair. With this help find toughest faults in a jiffy. Most \$3 TV volumes cover a whole year.

RADIO Manuals

Your best source for all needed RADIO diagrams and service data. Covers everything from most recent 1964 radios to pre-war old-timers; home radios, stereo, combinations, transistor portables, FM. Every manual has large schematics, all needed alignment facts, printed boards, voltages, trimmers, dial stringing, and hints. Volumes are big, 8½x11 inches, about 190 pages. See coupon at right for list of SUPREME popular radio service manuals ▶

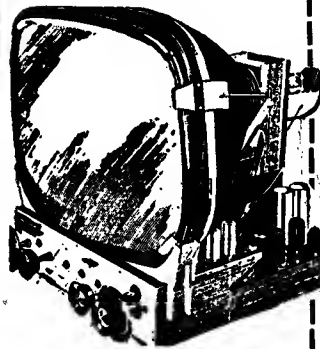

COVERS ALL POPULAR SETS

Here is your service data for faster, easier TV repairs. Lowest priced. Best by comparison. *Supreme TV* manuals have all needed service material on every popular TV set. Helpful, practical, factory-prepared data that will really make TV servicing easy for you. Benefit and save with these amazing values in service manuals. Only \$3 per large volume. Used by 184,000 wise servicemen for faster repairs. Join them; begin to make TV repairs easily.

—NO-RISK ORDER COUPON—

TELEVISION SERVICE MANUALS

Supreme TV manuals are best for faster, easier TV repairs. Lowest priced. Factory data on practically all sets. Complete circuits, all needed alignment facts, wiring board views, waveforms, voltages, production changes, and double-page schematics. Only \$3 per large annual manual. Check volumes wanted.

- New 1964 Television Manual, \$3. 1963 TV, \$3.
- Additional 1962 TV, \$3. Early 1963 TV, \$3.
- 1961 TV Manual, \$3. 1960 TV Manual, \$3.
- Additional 1959 TV, \$3. Early 1959 TV, \$3.
- 1958 TV Manual, \$3. Additional 1957 TV, \$3.
- Early 1957 Television, \$3. 1959 TV Manual, \$3.
- Additional 1955 TV, \$3. Early 1955 TV, \$3.
- 1954 TV, \$3. 1953 TV, \$3. 1952 TV, \$3.
- 1951 TV, \$3. Master Index to all Manuals, 25¢

RADIO DIAGRAM MANUALS

Here are low-priced radio manuals that simplify repairing. Cover everything from most recent 1964 radios to pre-war old-timers; home radios, stereo, combinations, transistor portables, FM, and auto sets. Large schematics, all needed alignment facts, printed boards, voltages, dial stringing, hints. Volumes are big, 8½ x 11", about 190 pages, each.

\$2⁵⁰

- 1964 Manual,
- 1953, 1952, 1961, 1960, 1959, 1955,
- 1957, 1958, 1955, 1954, 1953, 1952,
- 1951, 1950, 1949, 1946, 1947, 1949,
- 1942, 1941, 1940, 1925-35, EACH, \$2.50
- Auto Radio 1964-65 Diagram Manual, \$2.50

SUPREME PUBLICATIONS

1760 Balsam Road, Highland Park, IL.

Rush today **TV** and **Radio** manuals checked in no-risk order form of this ad. Send postpaid, I am enclosing full price. You guarantee my complete satisfaction or my money back.


Name: _____

Address: _____

City: _____ State: _____

ADMIRAL

Chassis 4A4, used in Models Y3503, Y3508, Y3509

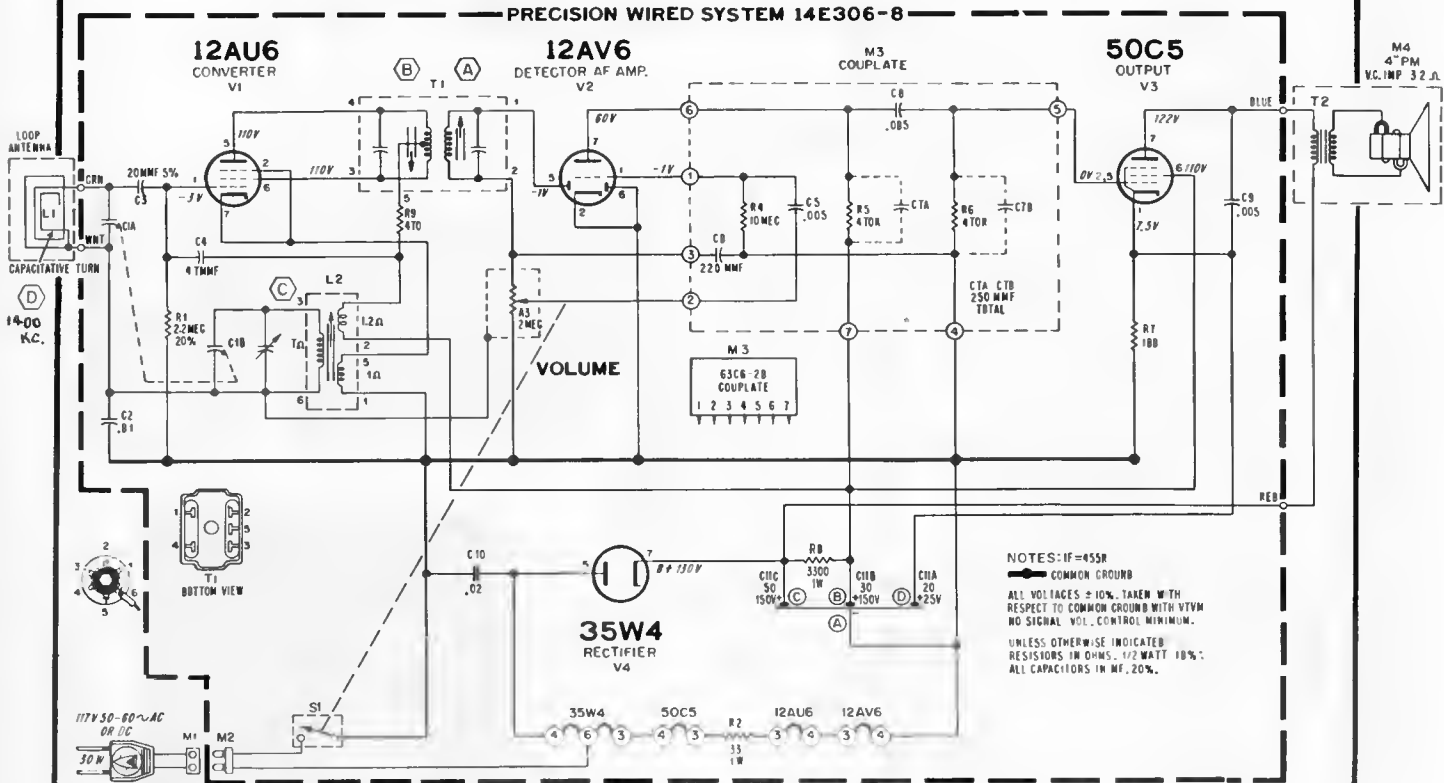


ALIGNMENT PROCEDURE

Set volume control full on.

Connect output meter across output secondary. Disconnect speaker and use a 3.2 ohm load.


Use lowest setting of signal generator capable of producing adequate indication on lowest scale of meter.

By using alignment tool 98A30-7, you can align the IF transformer slugs from the top of the chassis.


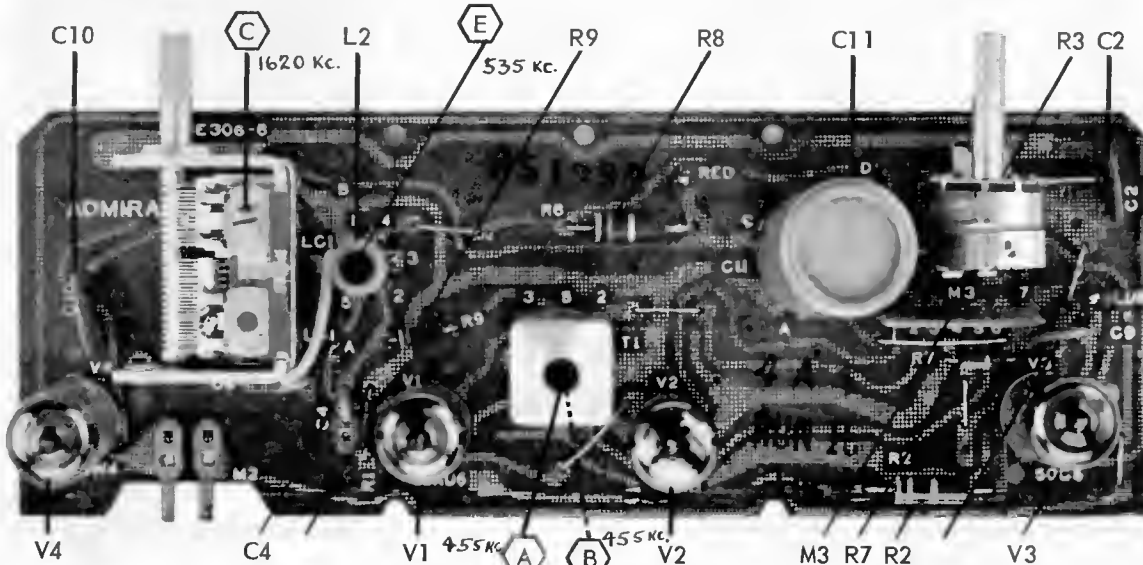


TOP VIEW OF CHASSIS 4A4 SHOWING COMPONENTS AND ALIGNMENT POINTS

Admiral

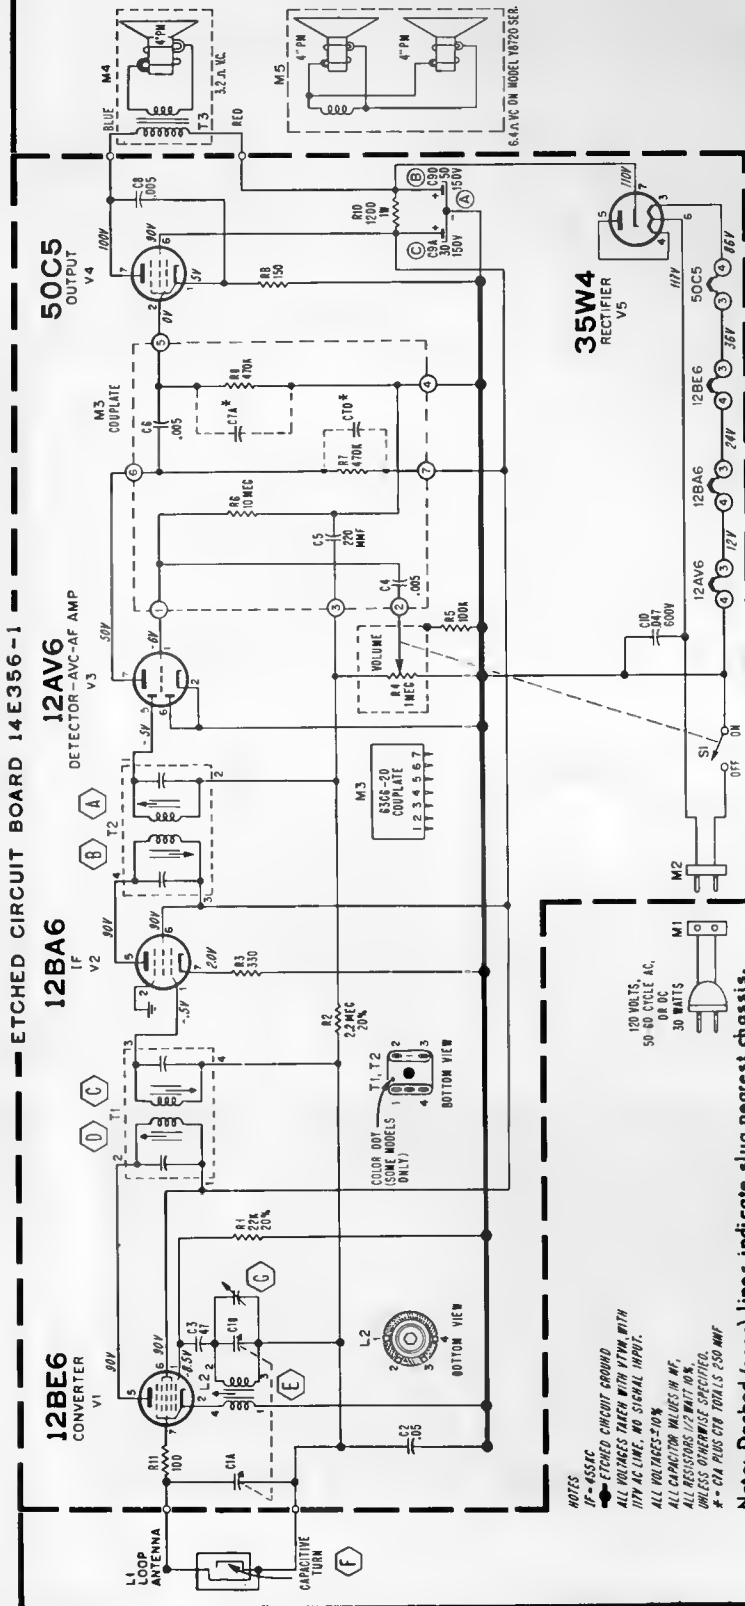

MODEL CHART		
MODEL	COLOR	CHASSIS
Y3703	White	5E6
Y3708	Green	
Y3709	Blue	
Y3710	Gray	5E6
Y3714	Pink	
Y3717	Beige	
Y3720	Gray	5E6
Y3727	Beige	
Y3729	Blue	




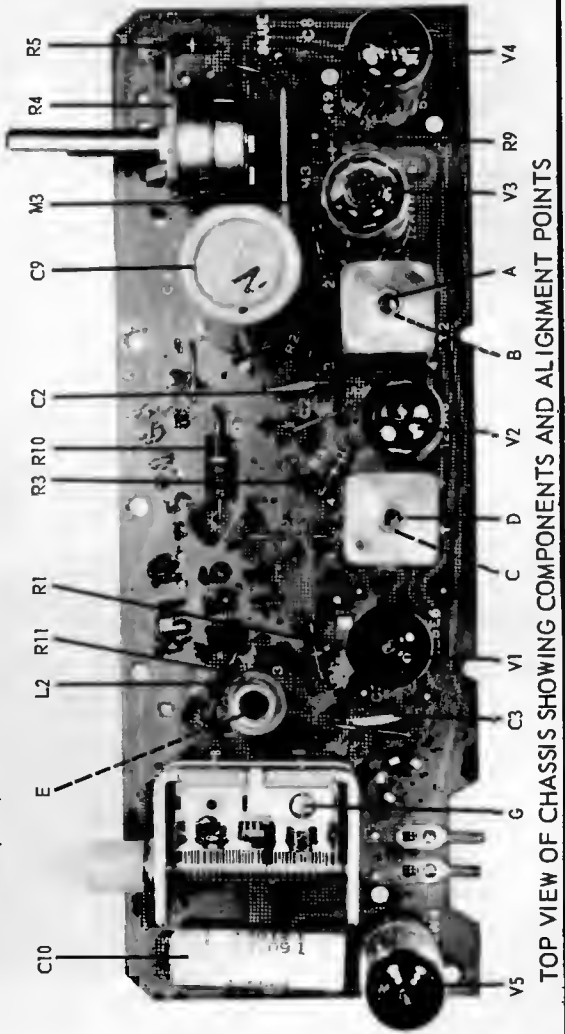
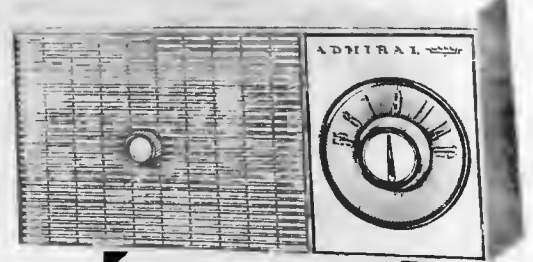


Admiral

Chassis 5D6D, Models Y3321A, Y3323A,
 Chassis 5K6, Models Y3513, Y3517, Y3519,
 Chassis 5L6, Models Y3523, Y3528, Y3529,

The following clock models are similar to above:


Chassis 5D6E, Models Y3543, Y3554, Y3557, Y3559,
 Chassis 5D6F, Models Y3381A, Y3383A,
 Chassis 5M6, Models Y3564, Y3568, Y3569, Y3573, Y3577, Y3579.

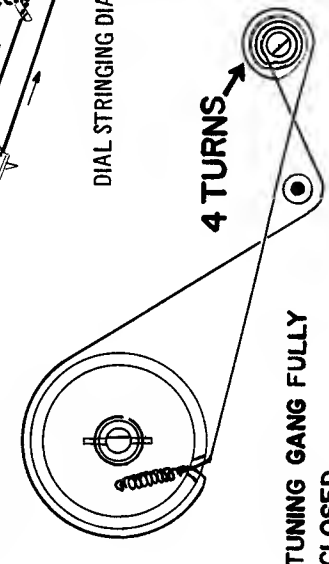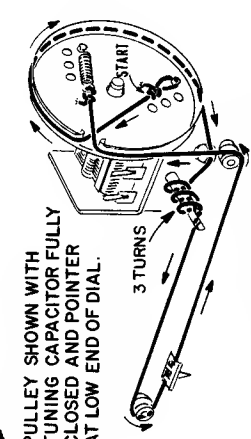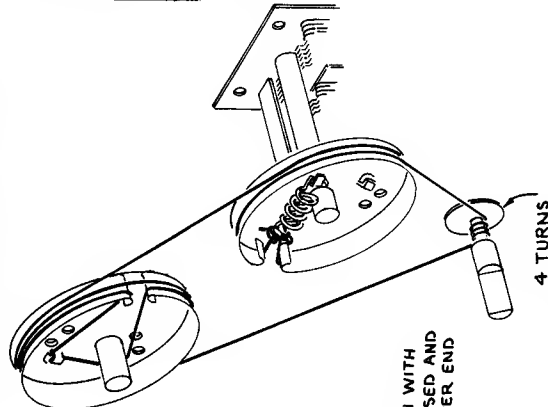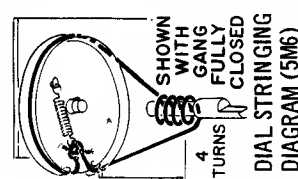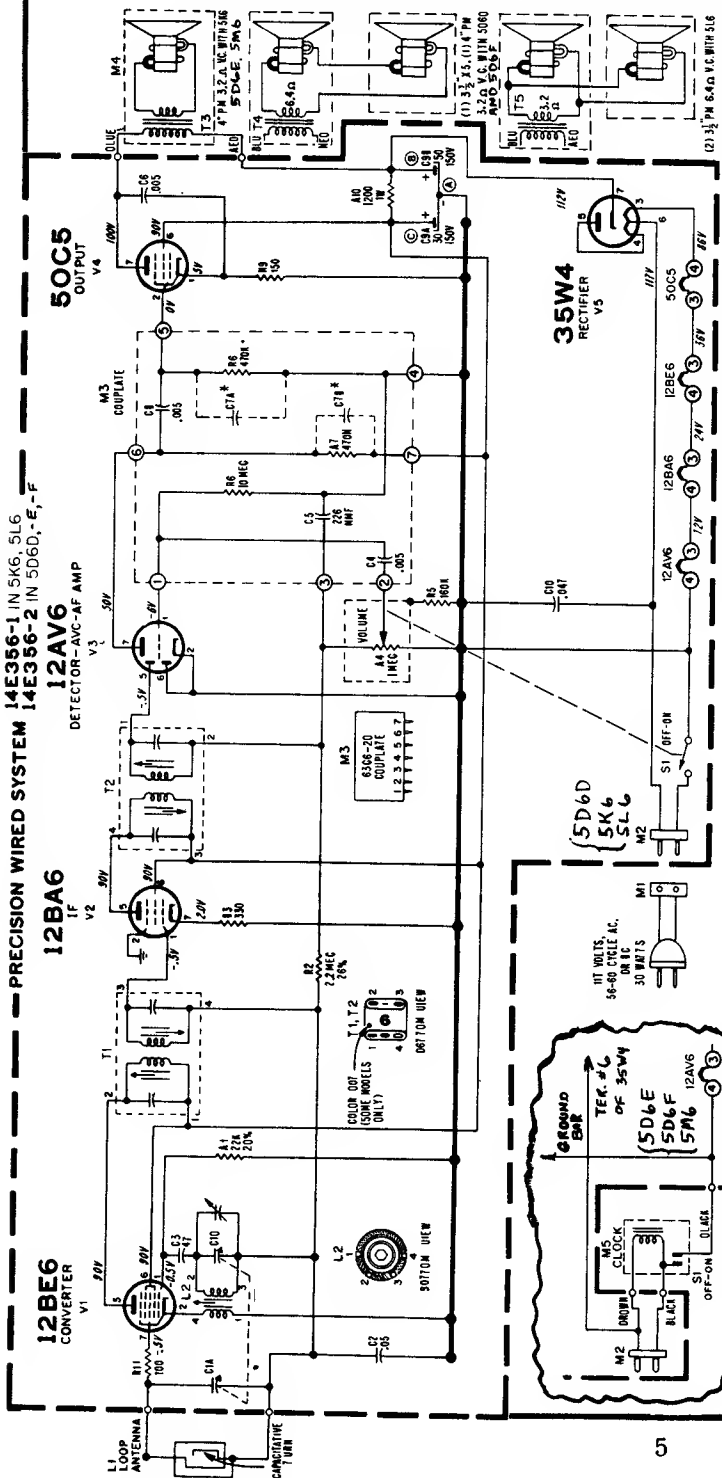

NOTES:
 17" - 454C
 COMMON GROUND
 ALL VOLTAGES TAKEN WITH VTVM WITH 100K AC LINE, NO SIGNAL INPUT.
 ALL VOLTAGES 300V
 ALL CAPACITOR VALUES IN MF.
 ALL RESISTOR VALUES IN OHM, UNLESS OTHERWISE SPECIFIED.
 * - CTR PLUS CTR TURNS 250 MHF


Admiral

Chassis 6W3, 6W3A, used in Models Y3408, Y3411, Y3412

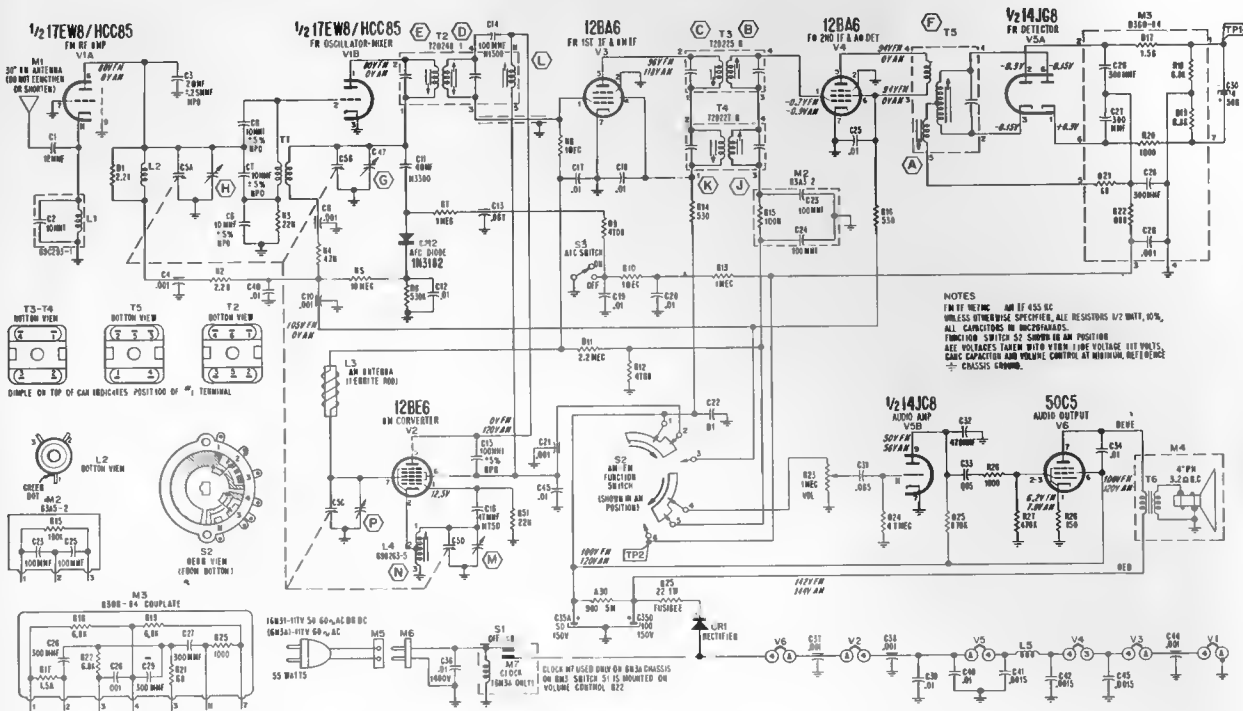

CHASSIS REMOVAL

1. Loosen two screws in back of cabinet until they are free from the cabinet front.
2. Remove two screws from bottom securing cabinet front to cabinet back.
3. With screwdriver, carefully pry cabinet front assembly away from the cabinet back by inserting screwdriver tip in the two notches in bottom of cabinet front assembly. This will break the AC interlock connection and allow the chassis with cabinet front to be pulled straight out from cabinet back.

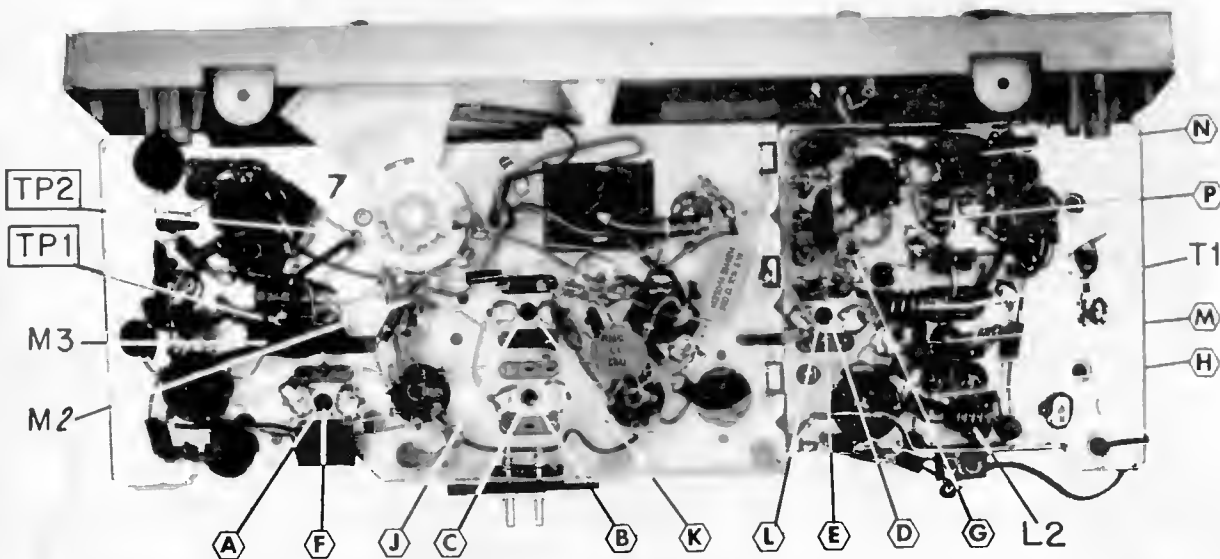


BOTTOM VIEW WITH SHIELD REMOVED


A C E and K are bottom slugs. B F J and L are top slugs.
G H M and P are adjustable from the top of the chassis only.

ADMIRAL


MODEL	COLOR	CHASSIS
Y2411GP Y2413GP	Black White	8K2-1N
Y2421GP Y2423GP	Black White	8K2-2N
Y2441	Black	8K2-3N

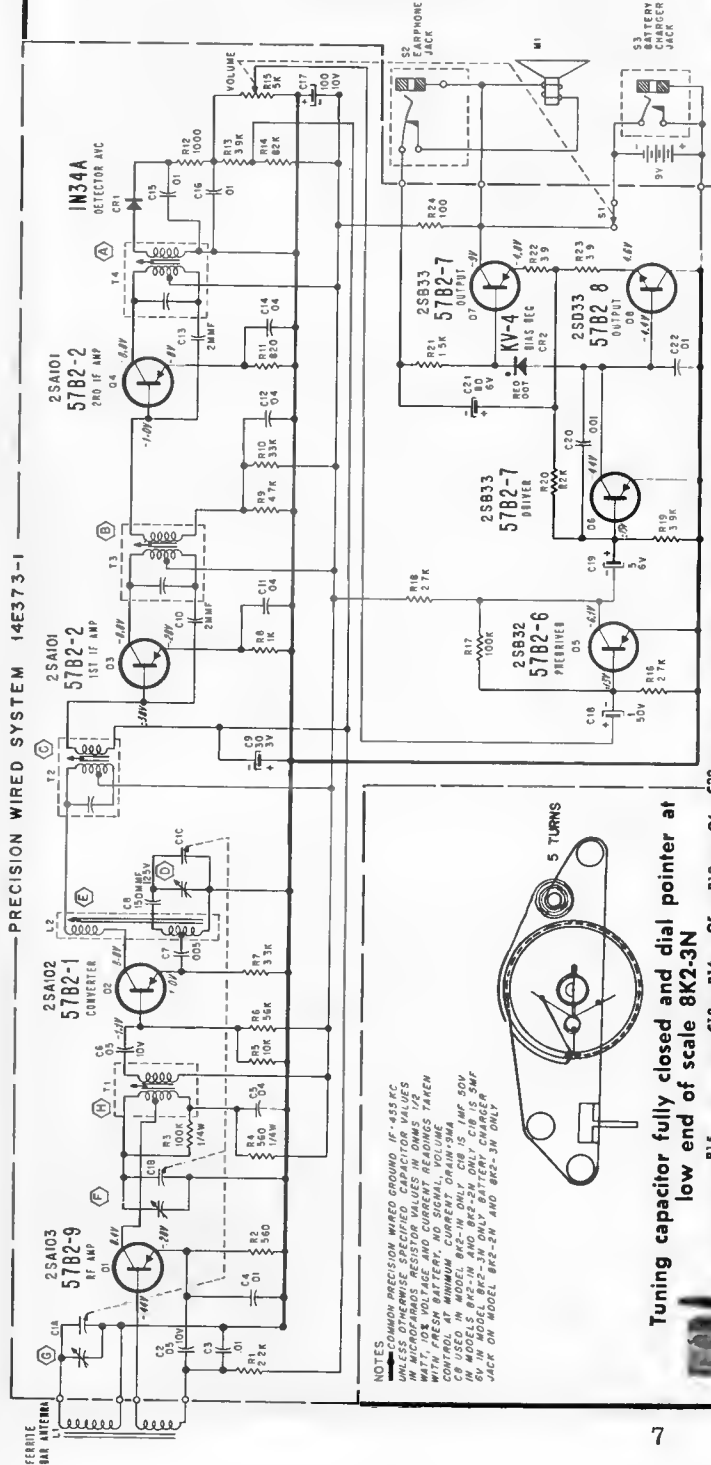

Tuning capacitor fully closed and dial pointer at low end of scale 8K2-3N

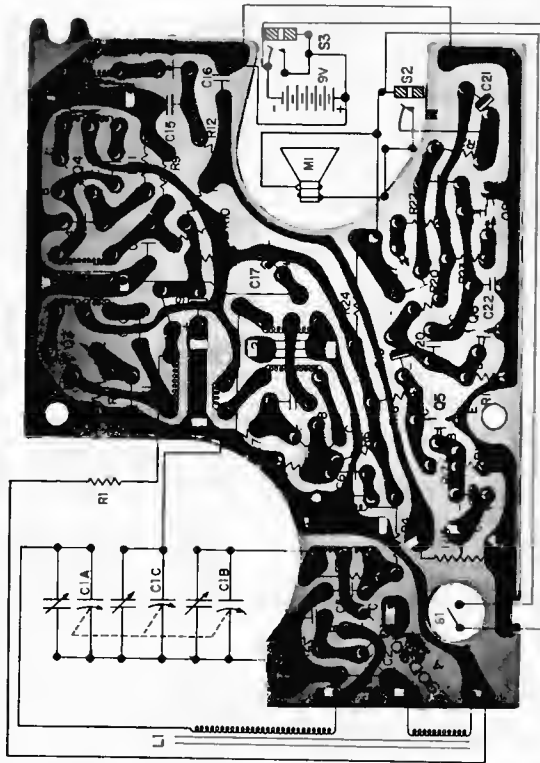


Connections to bottom of etched circuit board.

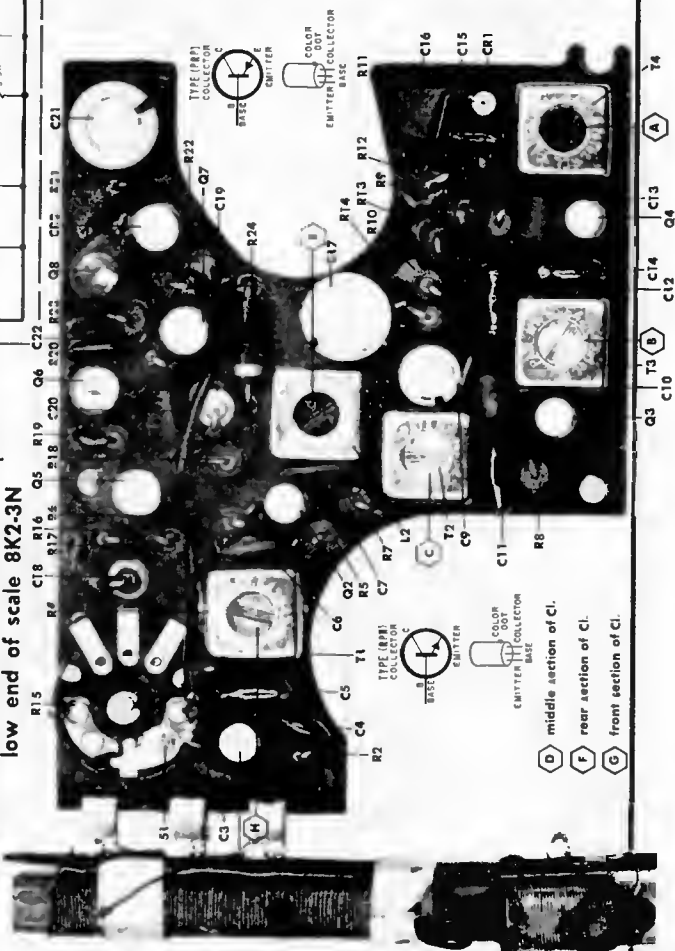


Admiral

8N2 CHASSIS



MODEL CHART			
MODEL	COLOR	CHASSIS	RECORD CHANGER
Y8157	Beige & White	8N2	RC7M5G-66AW
Y8177	Brown		RC7M5F-67AW
Y8181	Black		RC7M5F-67AW
Y8201	Walnut		RC7M5F-67AW
Y8202	Mahogany		RC7M5F-67AW

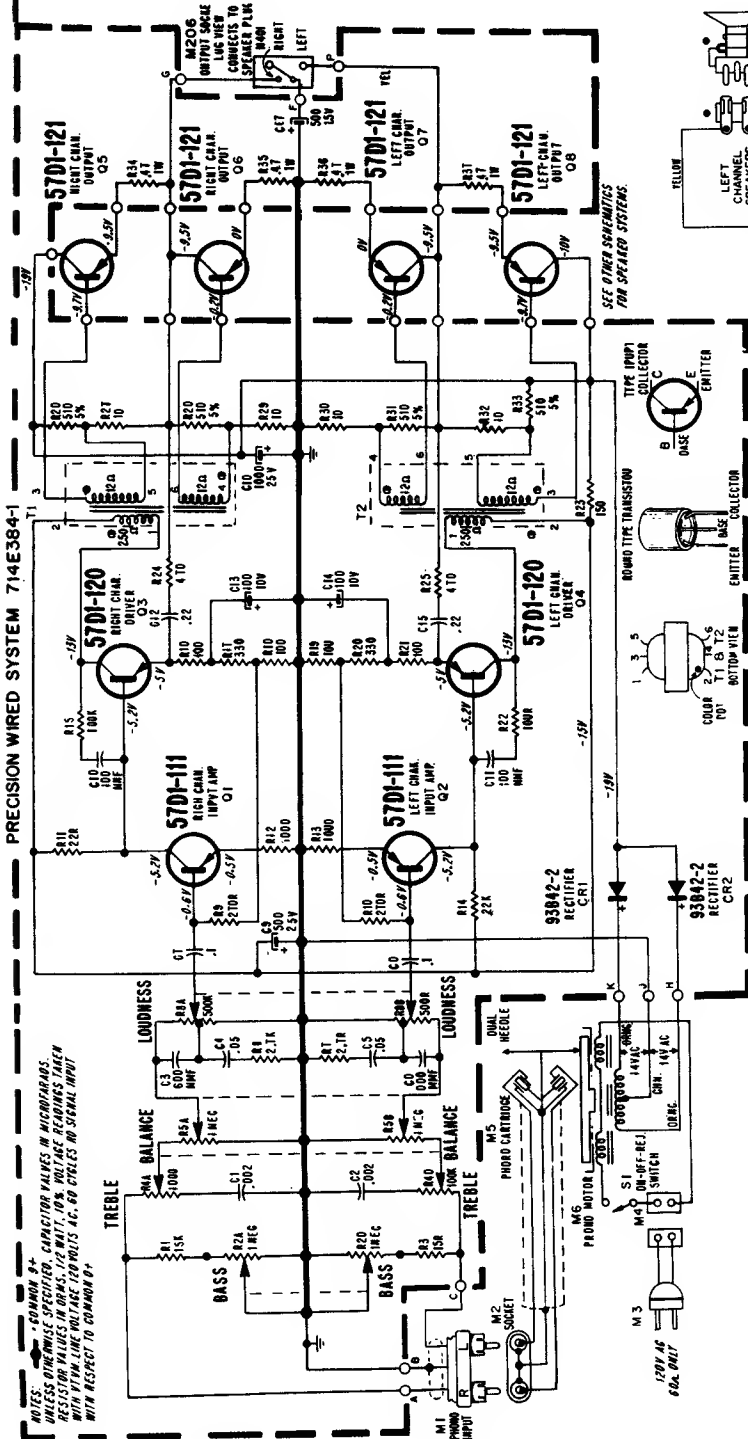


8N2 CHASSIS SCHEMATIC

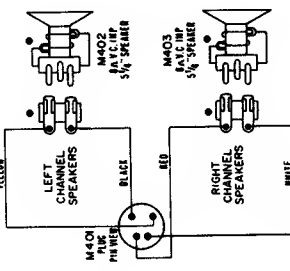

Y8157 SPEAKER WIRING

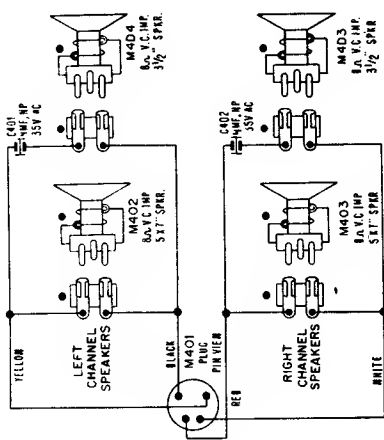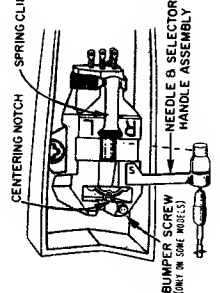

Y8177 SPEAKER WIRING


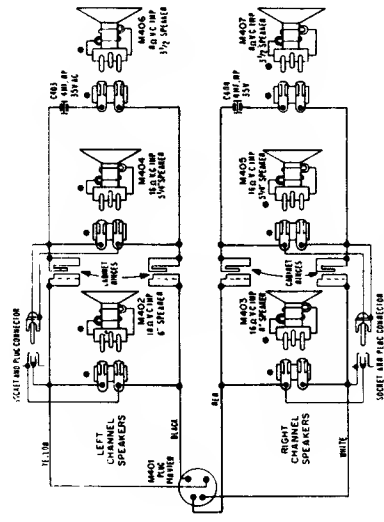


Y8181 SPEAKER WIRING


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO

Admiral


Chassis 2K1, 2K1A, 2K1B,
Models Y5009, Y5017, Y5027

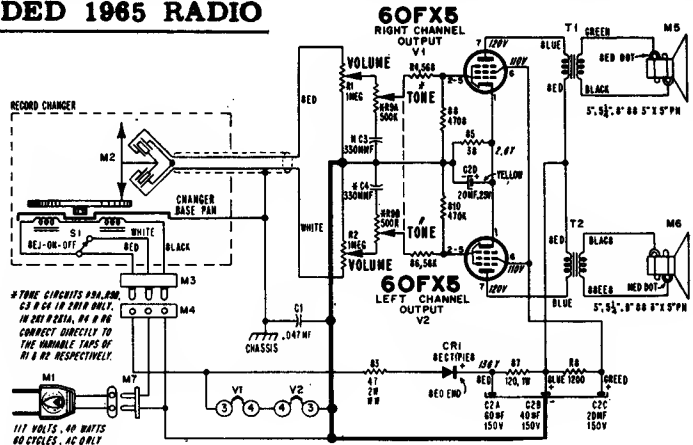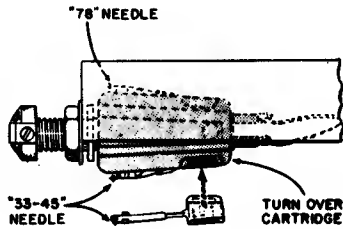

ADMIRAL Chassis 3J2A, Models Y6001, Y6002, Y6021, Y6022

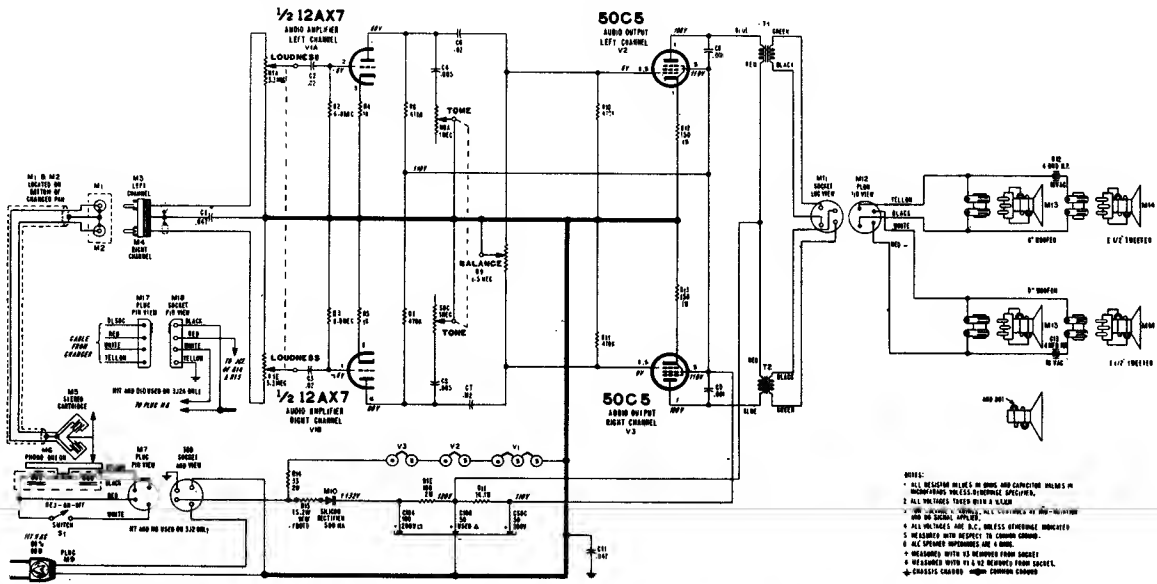

ADMIRAL Chassis 3L2A, -B, Models Y5037, Y5097

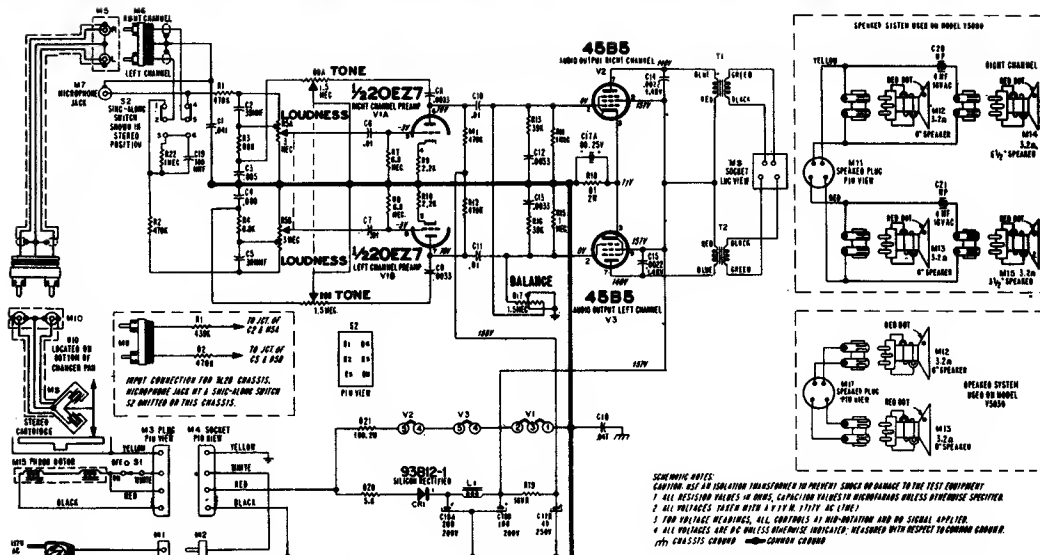

Admiral

Tuner 12A2 used in models listed at right. Diagram across pages 10 and 11. Material on related units is on page 12.


MODEL IDENTIFICATION CHART

MODEL	FINISH	CHASSIS
Y8601	Walnut	12A2,4C4 & 8D3
Y8615	Maple	RC7K4K-73AN
Y8629	Cherry	

Y701A IDENTIFICATION CHART

MODEL	TYPE	CHASSIS
TM731	Tuner	12A2
PA741	Preamplifier	4C4
PS751	Power Unit	8D3
SS1501	Speakers	2 Enclosures
RP771	Record Changer	RC7K4K-73AN
Y701A	Complete Unit	All Above.

12A2 TUNER SCHEMATIC

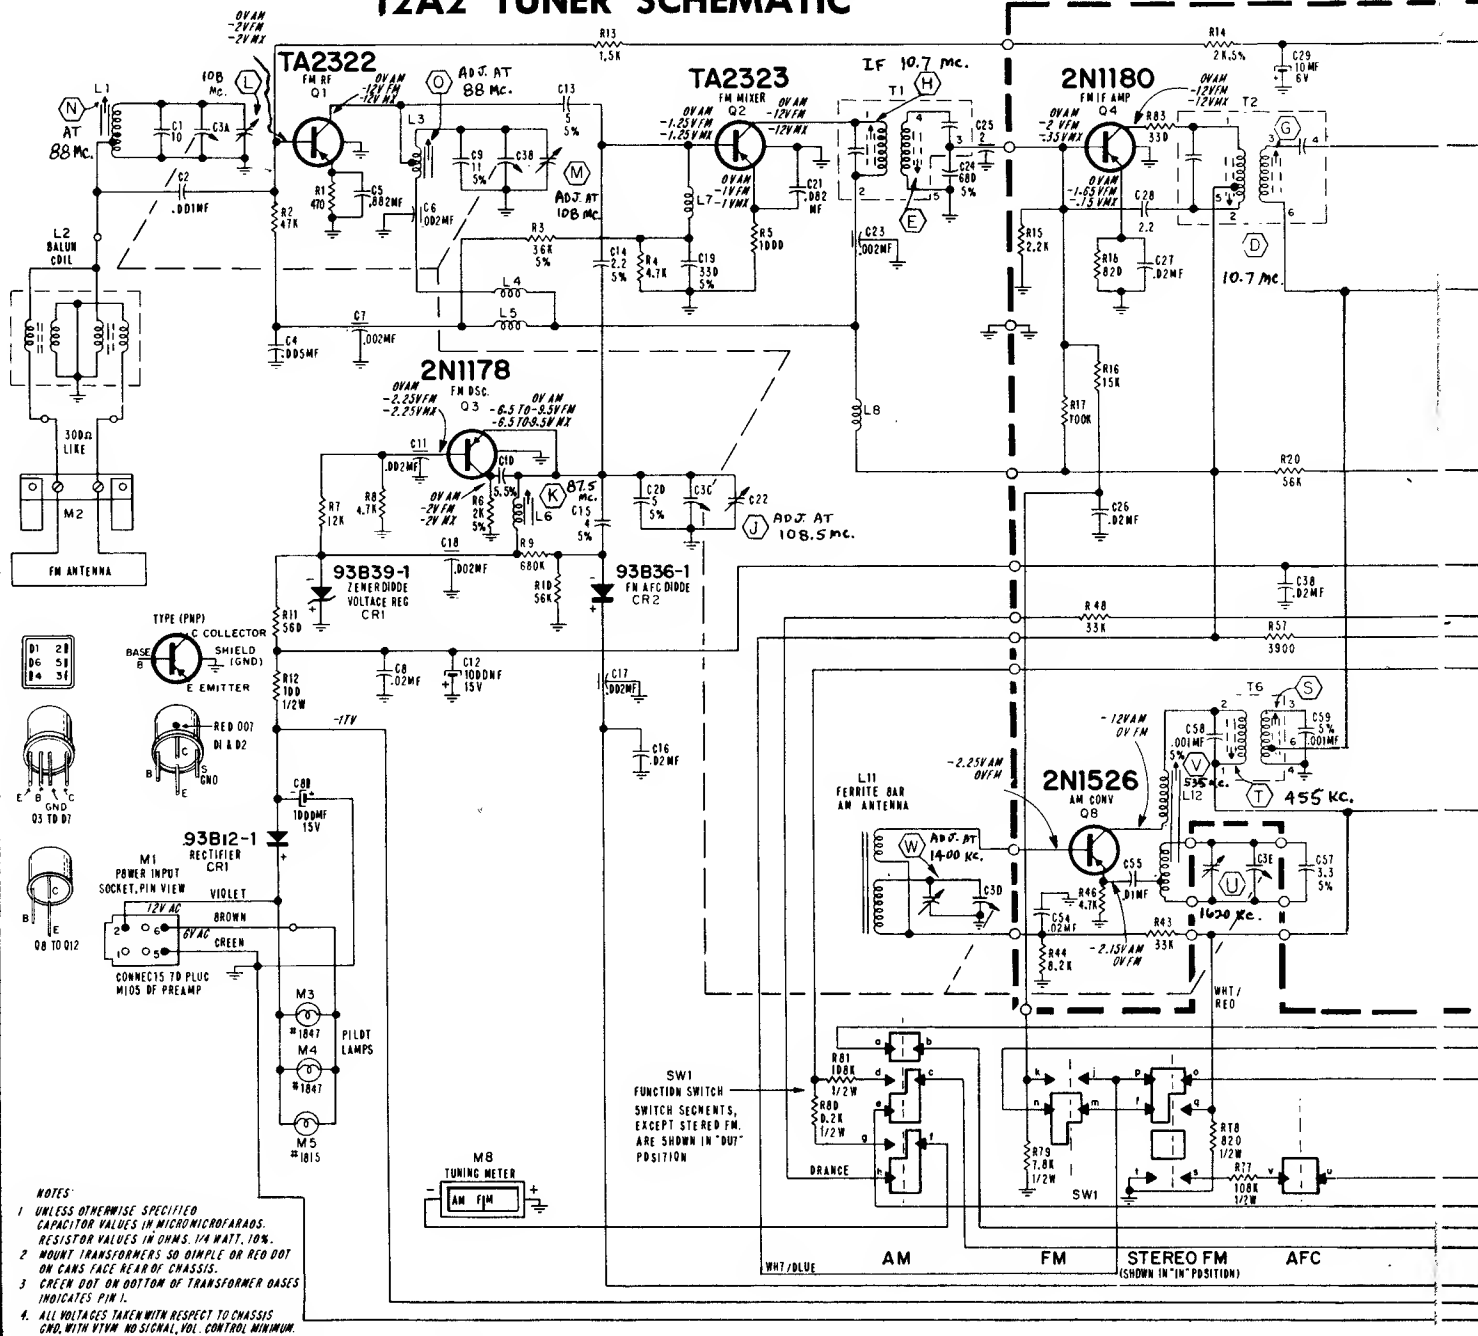


VOLUME R-25, RADIO

Admiral


TUNER 12A2

(Continued from page 10)

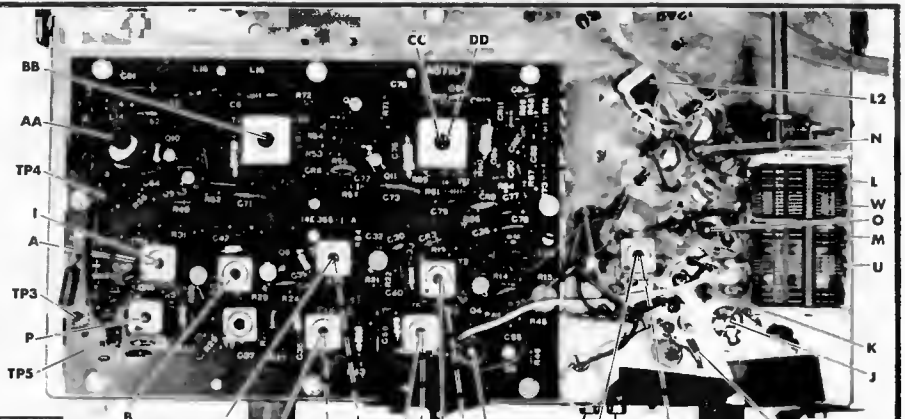

TOP VIEW OF 12A2 TUNER CHASSIS. ADJUSTMENTS INDICATED BY DASHED LINES ARE UNDER CHASSIS


PRECISION WIRED SYSTEM 714E365-1

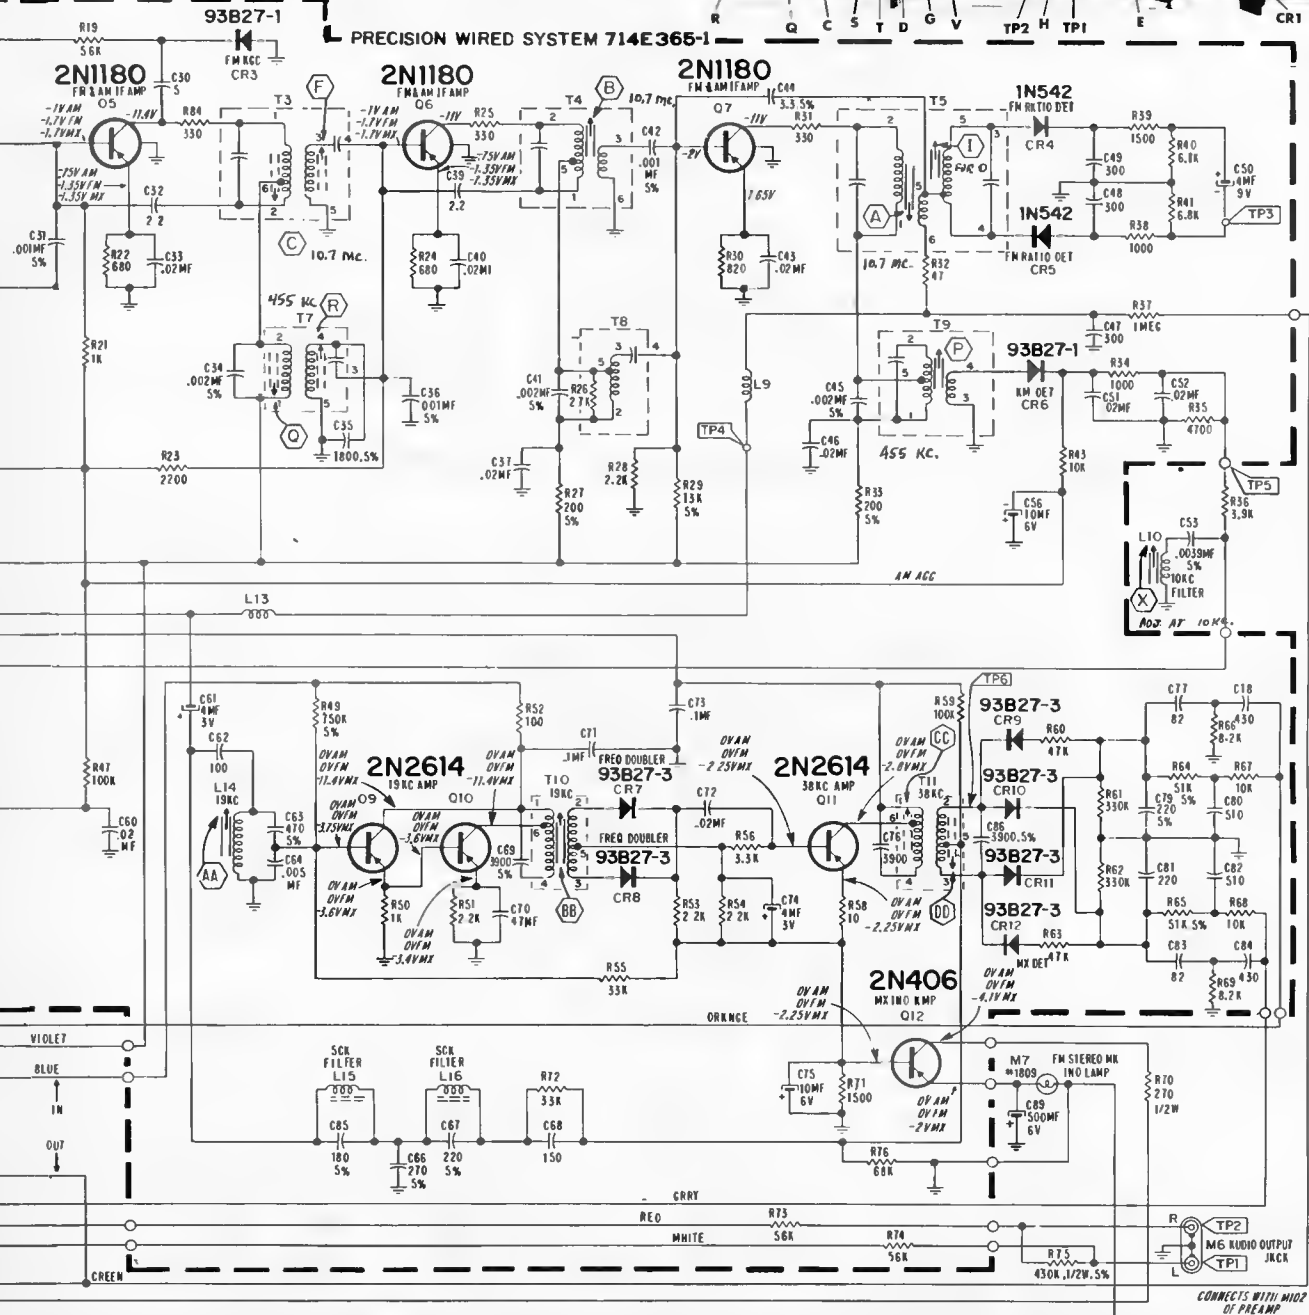


CONNECTS WITH MID OF PREAMP

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

ADMIRAL 4C4 Preamplifier and 8D3 Power Unit (For models see page 10)

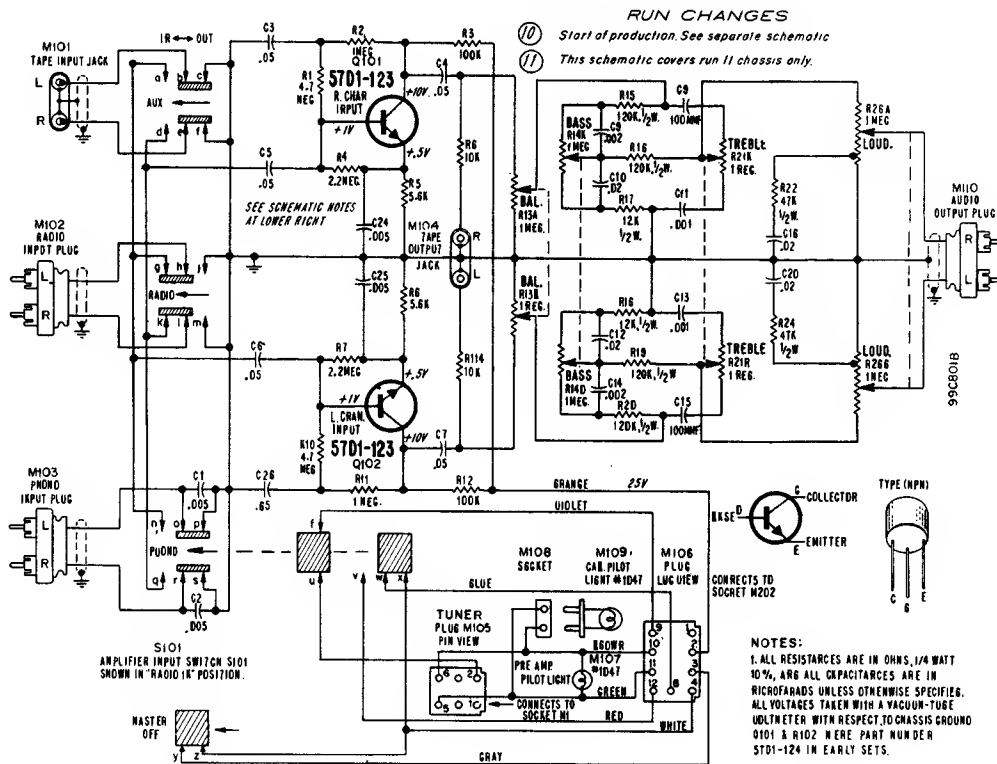


4C4 RUN 11 PREAMPLIFIER SCHEMATIC

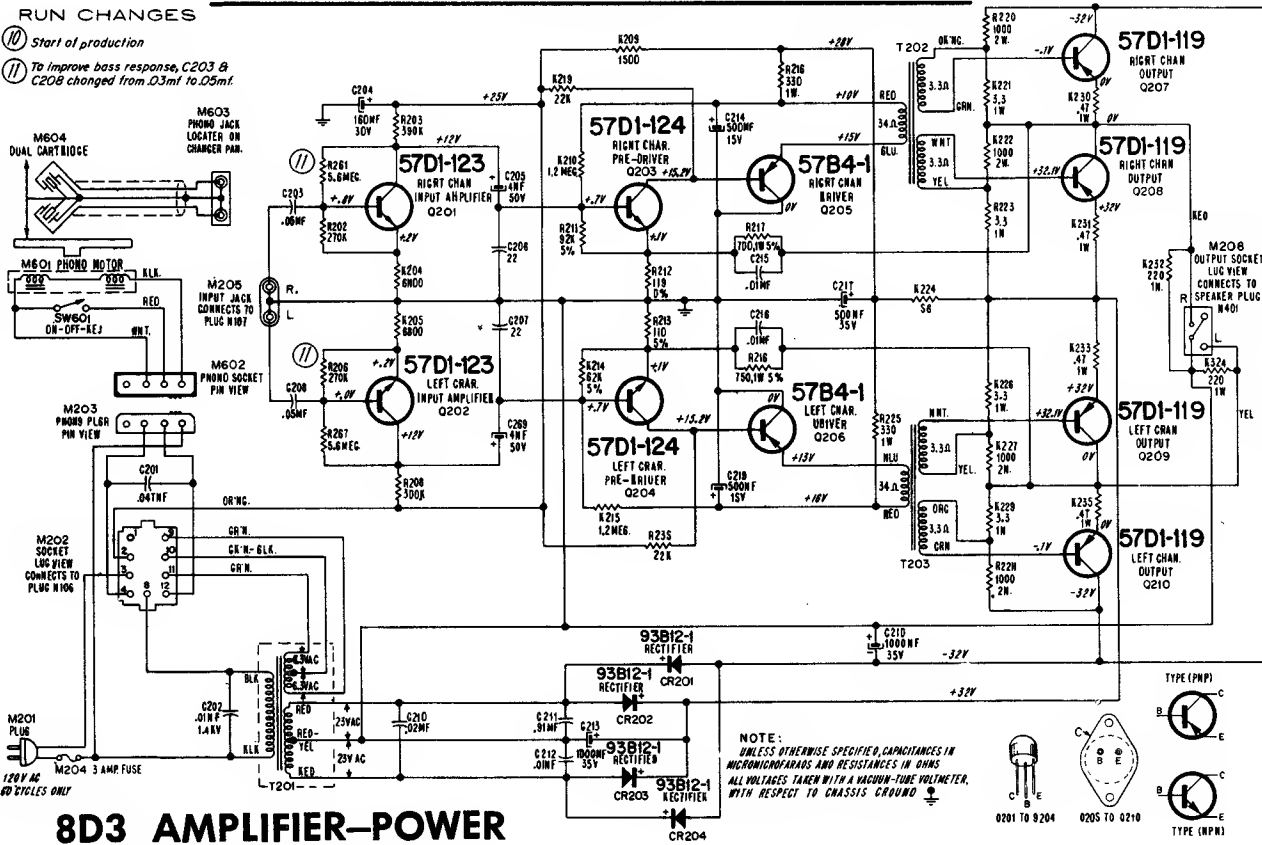


8D3 AMPLIFIER-POWER

Arvin

MODELS 13R07, 13R08
CODE 1.86401

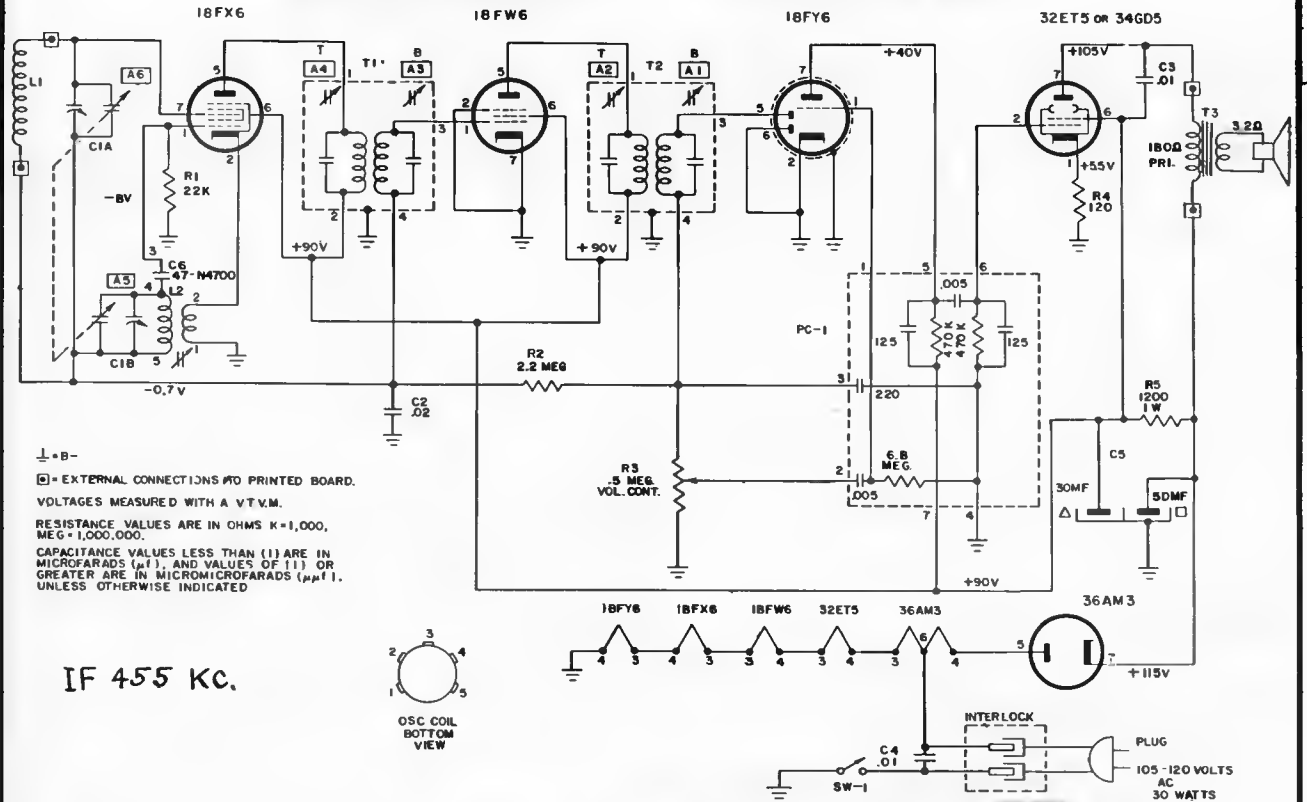


98688-4

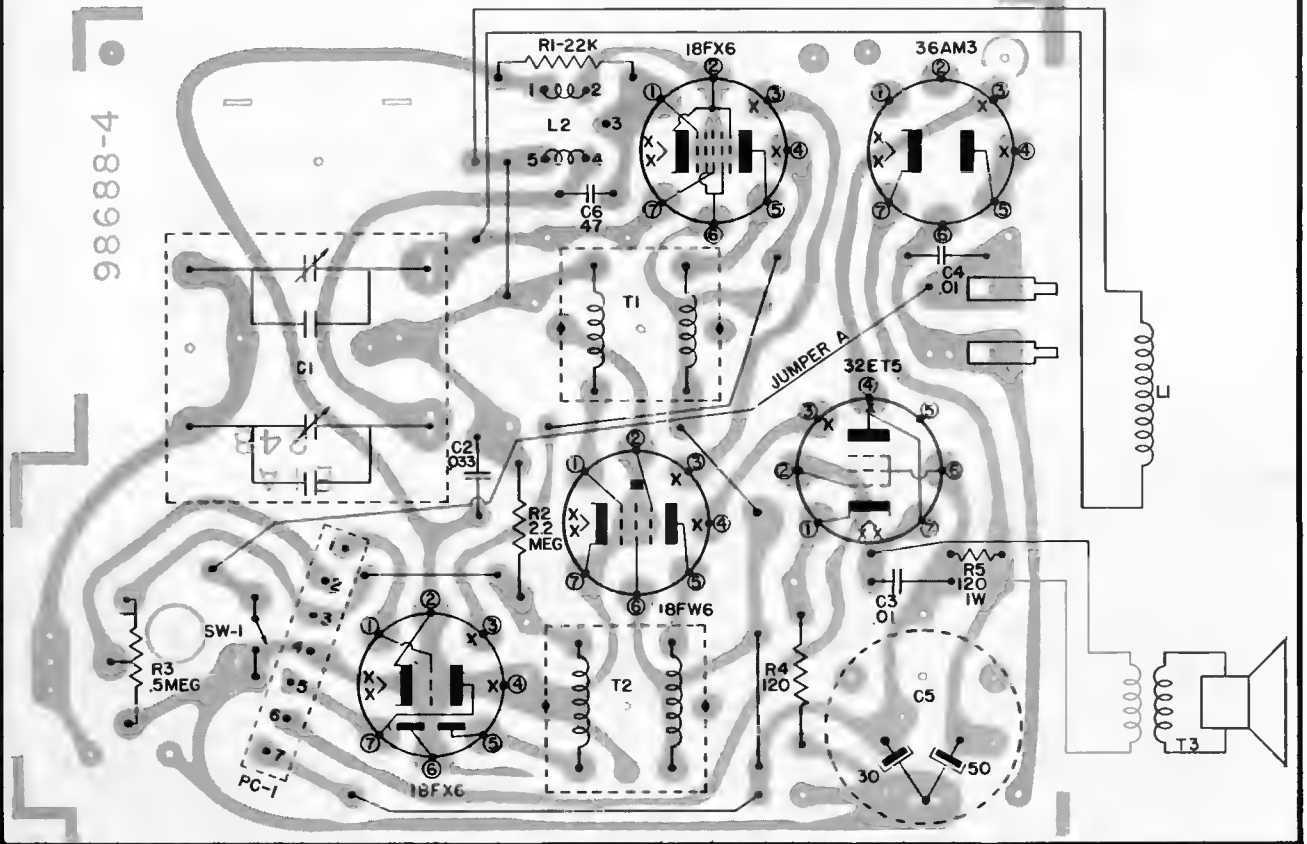

Arvin

CODE 1.81001
MODEL 14R18

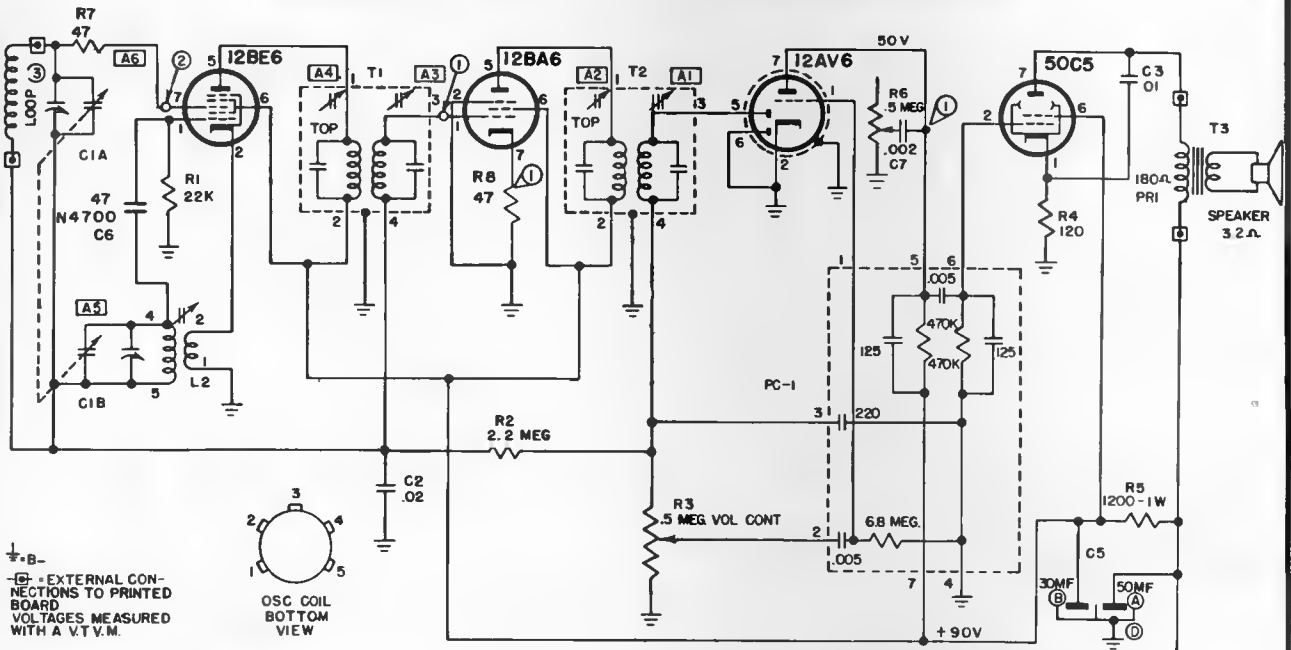


RESISTANCE VALUES ARE IN OHMS K=1,000, MEG=1,000,000. CAPACITANCE VALUES LESS THAN 10 ARE IN MICROFARADS (μF), AND VALUES OF 10 OR GREATER ARE IN MICROMICROFARADS (μMFD), UNLESS OTHERWISE INDICATED.

APPROXIMATE SENSITIVITIES

CIRCUIT POINT	DUMMY TO GENERATOR	INPUT FOR 0.5 WATT OUTPUT (0.4 VOLTS ACROSS VC)	INPUT FOR 5 WATT OUTPUT (1.0 VOLTS ACROSS VC)
1	.05 μf AT 455 KC	2000 UV	5000 UV
2	.05 μf AT 455 KC	60	150
3	STANDARD LOOP AT 1000 KC	200UV/M	500 UV/M



ALIGNMENT PROCEDURE

Position of Variable	Frequency of Generator	Dummy Antenna	Generator Output Connection	Trimmers Adjusted in Order Shown for Maximum Output	Function of Trimmer
Open	455 Kc	.05 μf	Pin 7 12BE6	A1, A2, A3, A4	I. F. Oscillator Antenna
Open	1640 Kc		Test Loop	A5	
1400	1400 Kc		Test Loop	A6	
1000	1000 Kc		Test Loop	Fan C1A Plates	
600	600 Kc		Test Loop	Fan C1A Plates	

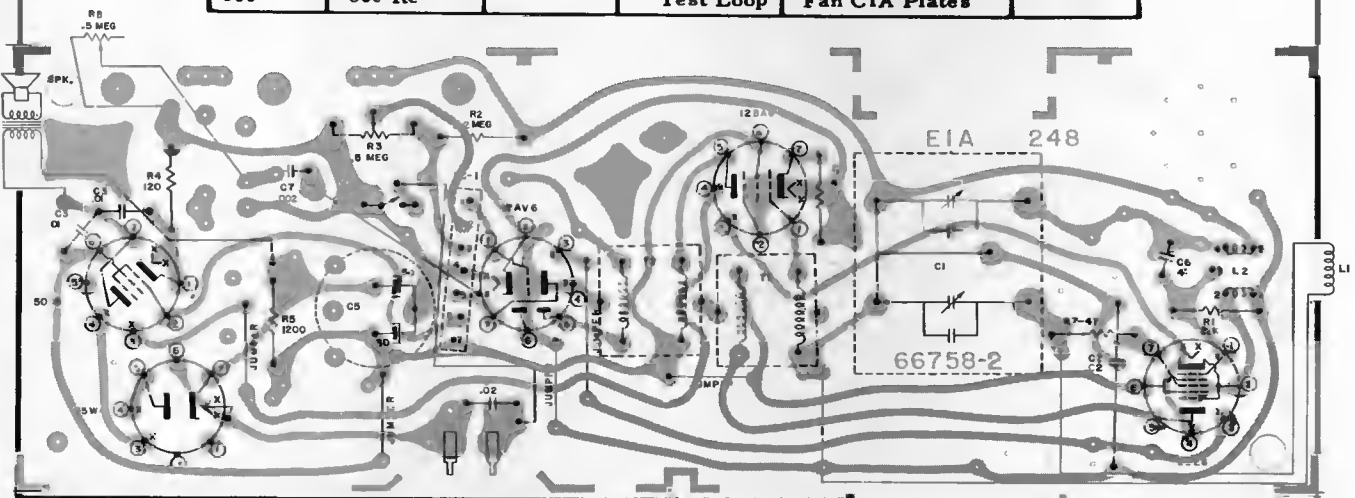

Arvin®

CODE 1. 81501
MODEL 14R68

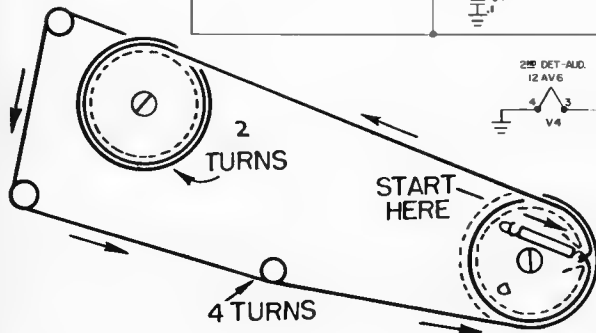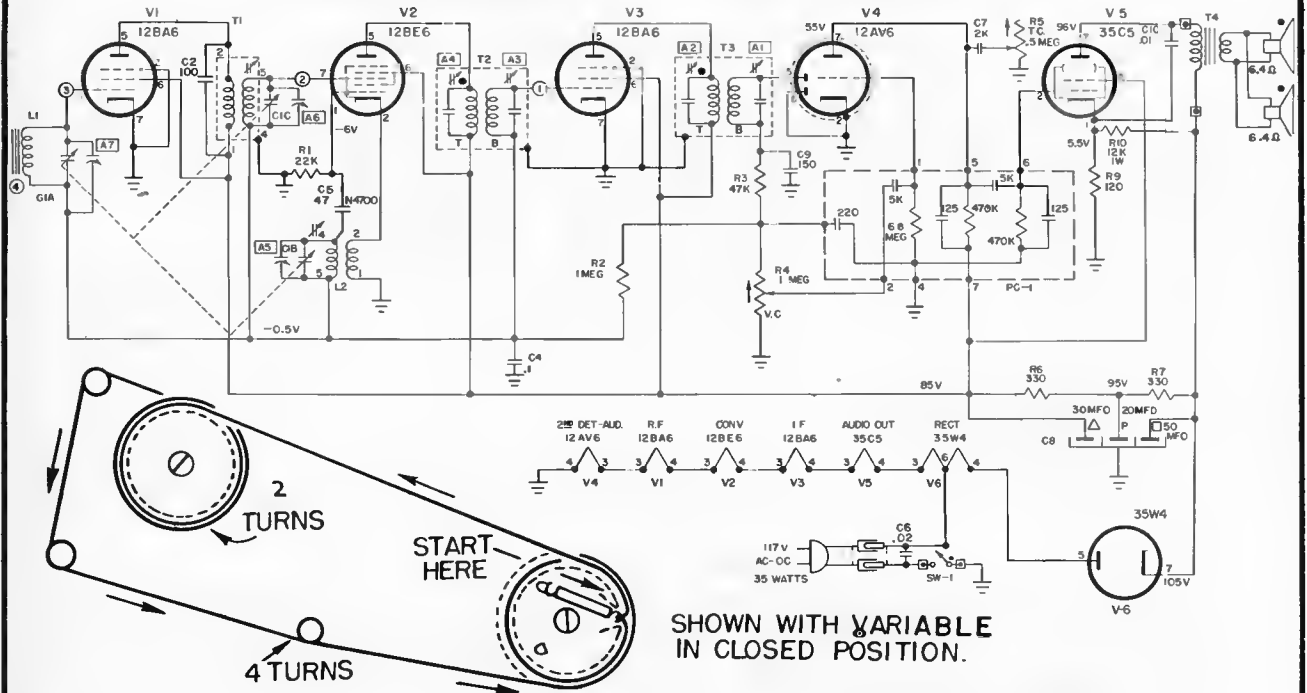

SHOWN WITH VARIABLE IN CLOSED POSITION.

⊕ -B-
⊕ - EXTERNAL CONNECTIONS TO PRINTED BOARD.
VOLTAGES MEASURED TO B- WITH A VTVM ±20% NO SIGNAL
RESISTANCE VALUES ARE IN OHMS K=1,000, MEG=1,000,000
CAPACITANCE VALUES LESS THAN (1) ARE IN MICROFARADS (μF),
AND VALUES OF (1) OR GREATER ARE IN MICROMICROFARADS
(μμF), UNLESS OTHERWISE INDICATED




APPROXIMATE SENSITIVITIES

CIRCUIT POINT	DUMMY TO GENERATOR	INPUT FOR 5 WATT OUTPUT (1.4 VOLTS ACROSS VC)	INPUT FOR 5 WATT OUTPUT (1.26 VOLTS ACROSS VC)
1	.05μf AT 455 KC	3200 UV	8000 UV
2	.05μf AT 455 KC	160 UV	400 UV
3	.05μf AT 1000 KC	50 UV	90 UV
4	STANDARD LOOP AT 1000 KC	75 UV / M	125 UV / M

ALIGNMENT PROCEDURE


Position of Variable	Frequency of Generator	Dummy Antenna	Generator Output Connection	Trimmers Adjusted in Order Shown for Maximum Output	Function of Trimmer
Open	455 Kc	.05 μfd	Pin 7 12BE6	A1, A2, A3, A4	I. F. Oscillator Antenna
Open	1640 Kc		Test Loop	A5	
1400	1400 Kc		Test Loop	A6	
1000	1000 Kc		Test Loop	Fan CIA Plates	
600	600 Kc		Test Loop	Fan CIA Plates	

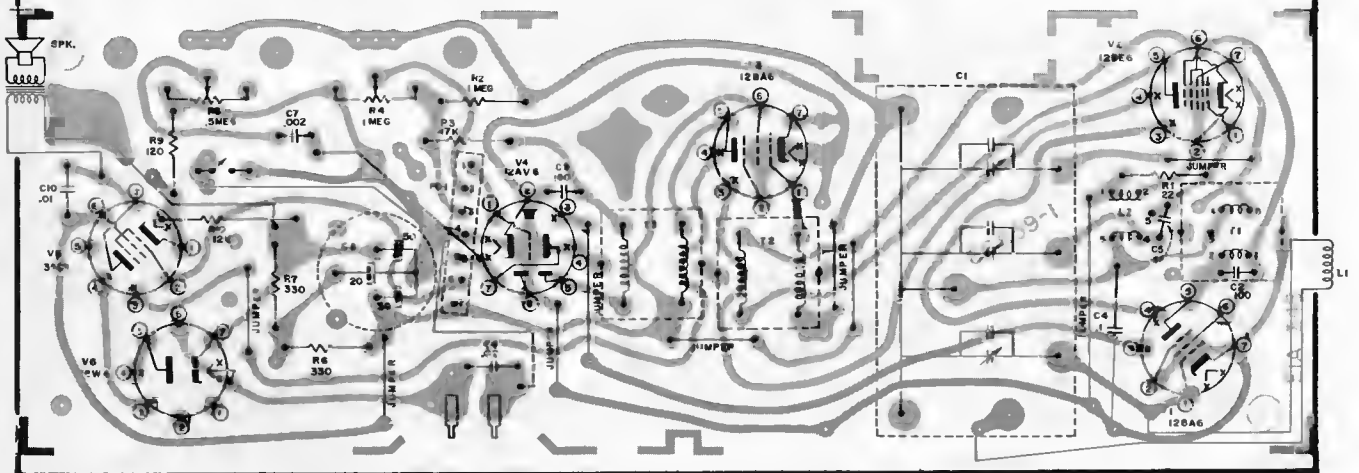


Arvin

CODE 1. 82001
MODEL 15R75

TR-1 95101 CONVERTER TR-2 95103 FIRST I.F. TR-3 95102 SECOND I.F. D-1 1N295 DETECTOR TR-4 95201 AUDIO DRIVER TR-5-6 595216 AUDIO OUTPUT D-2 RECTIFIER

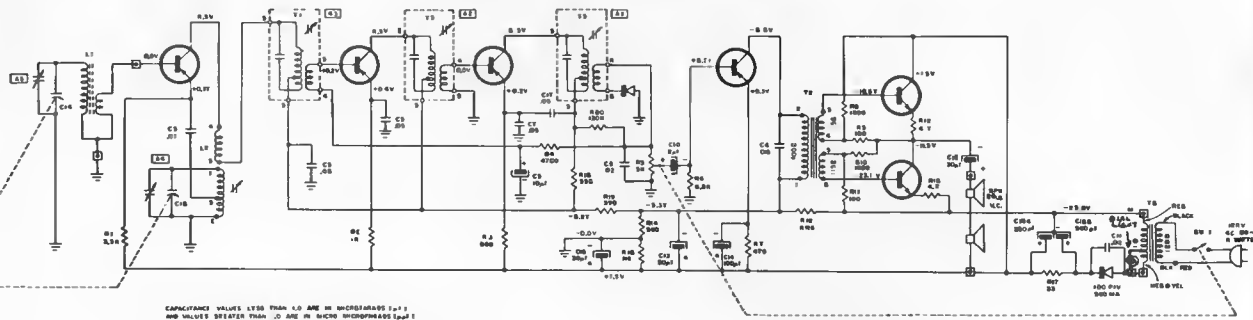

CAPACITANCE VALUES LESS THAN 1.0 ARE IN MICROFARADS (μF) AND VALUES GREATER THAN 1.0 ARE IN MILES MICROFARADS (μF) UNLESS OTHERWISE NOTED
VOLTAGE MEASURED TO COMMON GROUND (AT ARE MEASURED WITH SOURCE FUSE HOLDBY) UNDER NO SIGNAL CONDITIONS AND VOLUME CONTROL AT MINIMUM VOLUME POSITION
RESISTANCE VALUES ARE IN OHMS ± 1.000
⊕ DOWNWARD CURVED SYMBOL
⊞ INTERNAL CONNECTION TO PRINTED CIRCUIT
⊙ NORMAL DC CURRENT ⊙ TR NO SIGNAL 600Ω TO 100Ω




ALIGNMENT DATA

Position of Variable	Frequency of Generator	Dummy Antenna	Generator Output Connection	Trimmer Adj. in order shown for Max. Output	Functions of Trimmer
Open	455 Kc	.05 mf.	C1A	A1 (Top of T3) A2 (Top of T2) A3 (Top of T1)	I. F. I. F. I. F.
Open	1640 Kc		*Test Loop	A4	Oscillator
1400 Kc	1400 Kc		*Test Loop	A5	Antenna
600 Kc	600 Kc		*Test Loop	Check Point	

*Three (3) turns of wire 6" in diameter placed about one foot from the receiver antenna.


The alignment procedure should be repeated in the original order for greatest accuracy. Always keep the output from the signal generator at its lowest possible value to make the AVC action of the receiver ineffective.

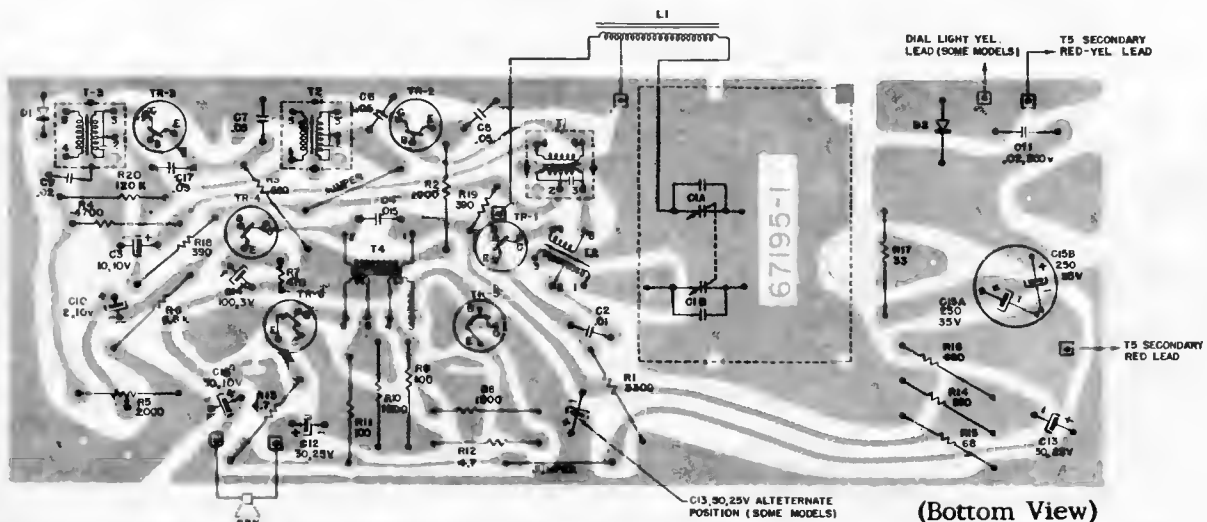


(Bottom View)



CODE 1. 81601
MODEL 64R38

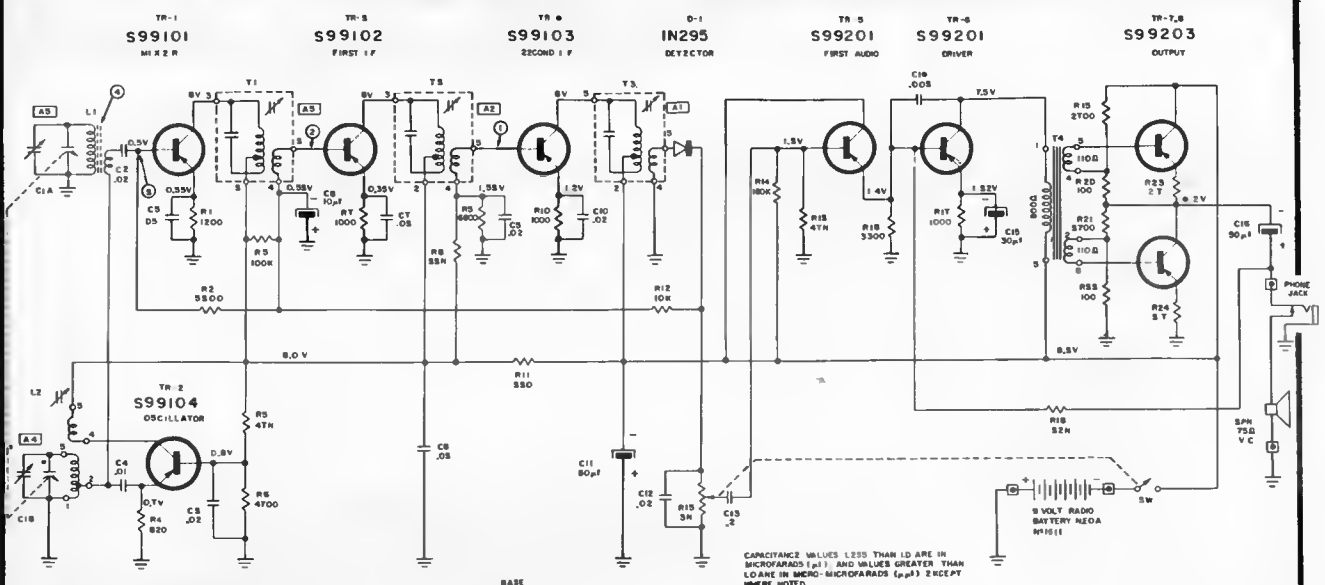

SIGNAL TEST POINTS	TEST FREQUENCY	SERIES CAPACITOR TO GENERATOR	INPUT FOR 5 W W OUTPUT 1.5 V ACROSS TS D I
①	455 Kc	.05 μ f	300 μ V
②	455 Kc	.05 μ f	25 μ V
③	455 Kc	.05 μ f	5 μ V
④	1000 Kc	STANDARD LOOP	200 μ V/W



CAPACITANCE VALUES LESS THAN 10 ARE IN MICROFARADS (μ f) AND VALUES GREATER THAN 10 ARE IN MICRO-MICROFARADS (μ p) EXCEPT WHERE NOTED.


VOLTAGE READINGS TO COMMON GROUND ARE MEASURED WITH VACUUM TUBE VOLTMETER UNDER NO SIGNAL CONDITIONS WITH TUNING CAPACITOR CLOSED AND VOLUME CONTROL AT MAXIMUM CLOCKWISE ROTATION.

RESISTANCE VALUES ARE IN OHMS, R=1000.

Δ = COMMON GROUND SYMBOL



\square = INTERNAL CONNECTION TO PRINTED CIRCUIT

TOTAL BATTERY CURRENT DRAIN UNDER NO SIGNAL CONDITIONS, 8 TO 14 MA

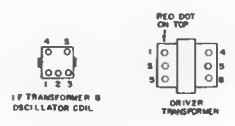


ALIGNMENT PROCEDURE

Position of Variable	Generator Frequency	Dummy Antenna	Generator Connections	Trimmers Adj. in order shown for Max. Output	Function of Trimmer
Open	455 Kc	.05 μ f	C1A	A1 (Top of T3) A2 (Top of T2) A3 (Top of T1) A4 A5	I. F. I. F. I. F. Oscillator Antenna
Open	1640 Kc		*Test Loop		
1400 Kc	1400 Kc		*Test Loop		
600 Kc	600 Kc		*Test Loop	Check Point	

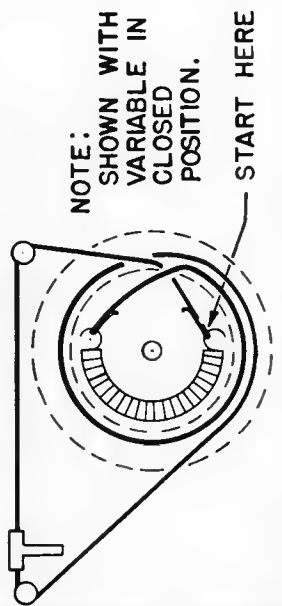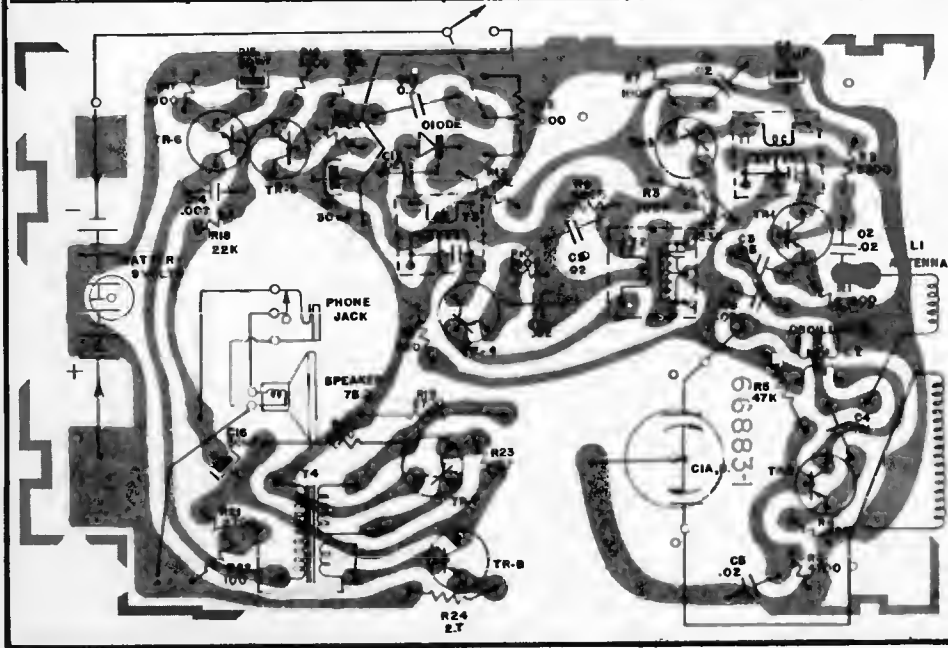

Arvin

CODE 1. 84701
MODEL 64R29

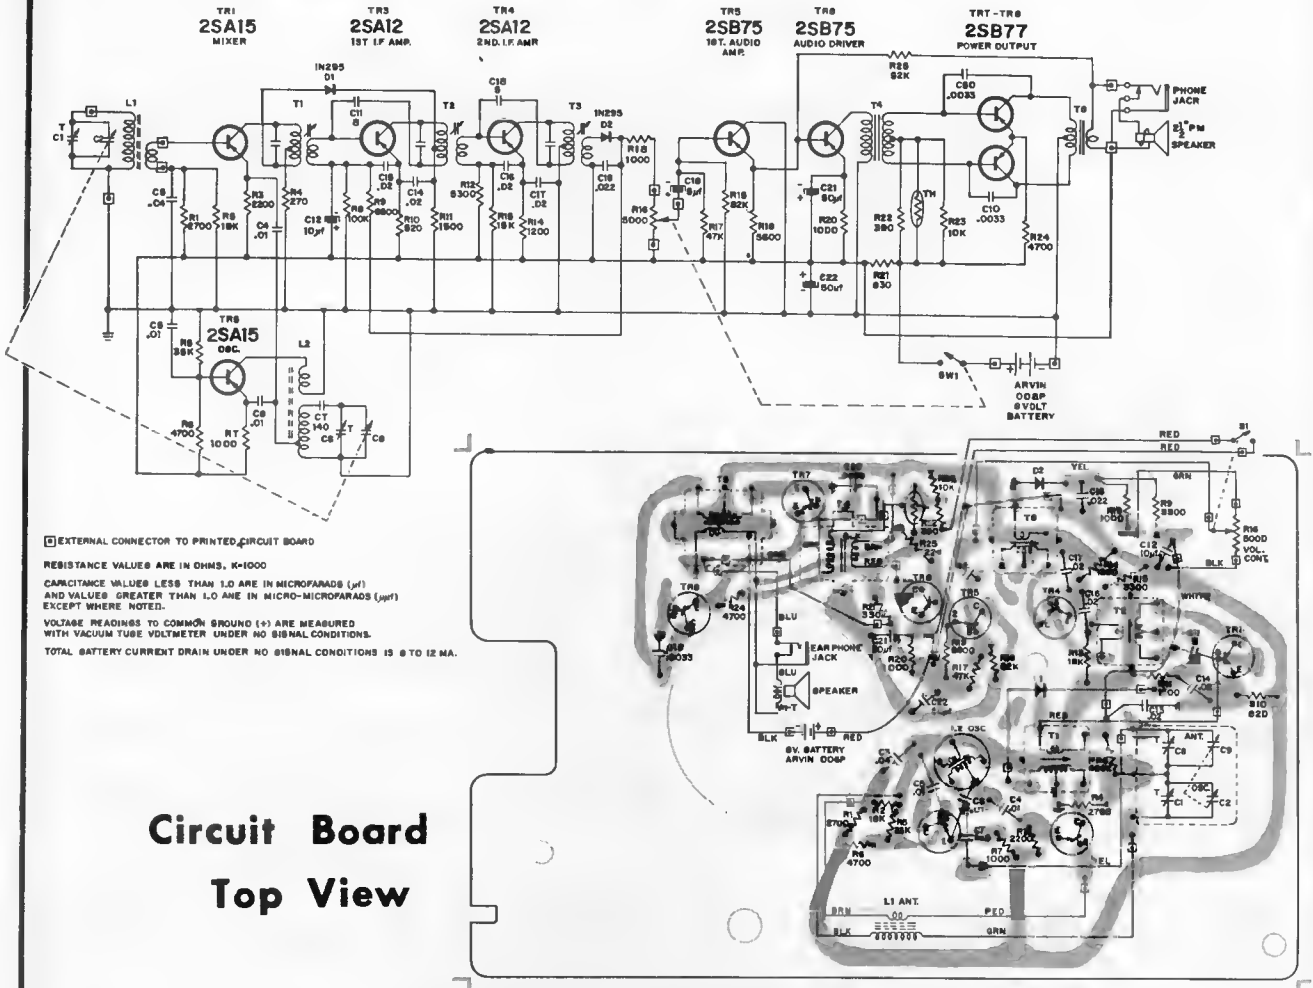

**Circuit Board
Top View**

Alignment Procedure



- A new 9V. Battery or equivalent power supply must be used. The no signal voltage must not be less than 8 volts.
- Turn volume control to maximum. Connect output of a signal generator (modulated with 400c/±30%) to a loop antenna (4 inch in diameter, looped 2 or 3 rounds). Connect the loop antenna to the ferrite-core antenna. Connect the ground terminal of the signal generator to the receiver chassis.
- Connect a vacuum-tube voltmeter (with an AC 3V or less scale) to the earphone jack (positive side connected to negative side with an 0 resistor).
- Make adjustments per the following table to gain maximum readings on voltmeter. During alignment, adjust output level of signal generator so that voltmeter reading will not exceed 0.5V at maximum.

Step	Generator Frequency	Position of Variable	Adjust -- for max. output
1	455 Kc	Quiet point	3rd I.F. Trans. T3
2		at high freq. end	2nd I.F. Trans. T2
3		1st I.F. Trans. T1	
4	Repeat steps 1, 2 and 3		
5	520 Kc	Quiet point	osc. coil L2
6	1,650 Kc	at low freq. end	osc. trimmer C8
7		at high freq. end	
8	Repeat steps 5 and 6		
8	600 Kc	600 Kc signal	ant. L1 position
9	1,400 Kc	1,400 Kc signal	ant. trimmer C1
10	Repeat steps 8 and 9		

BULOVA


MODEL #S-912

SCHEMATIC DIAGRAM OF CHASSIS MODEL S-912

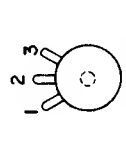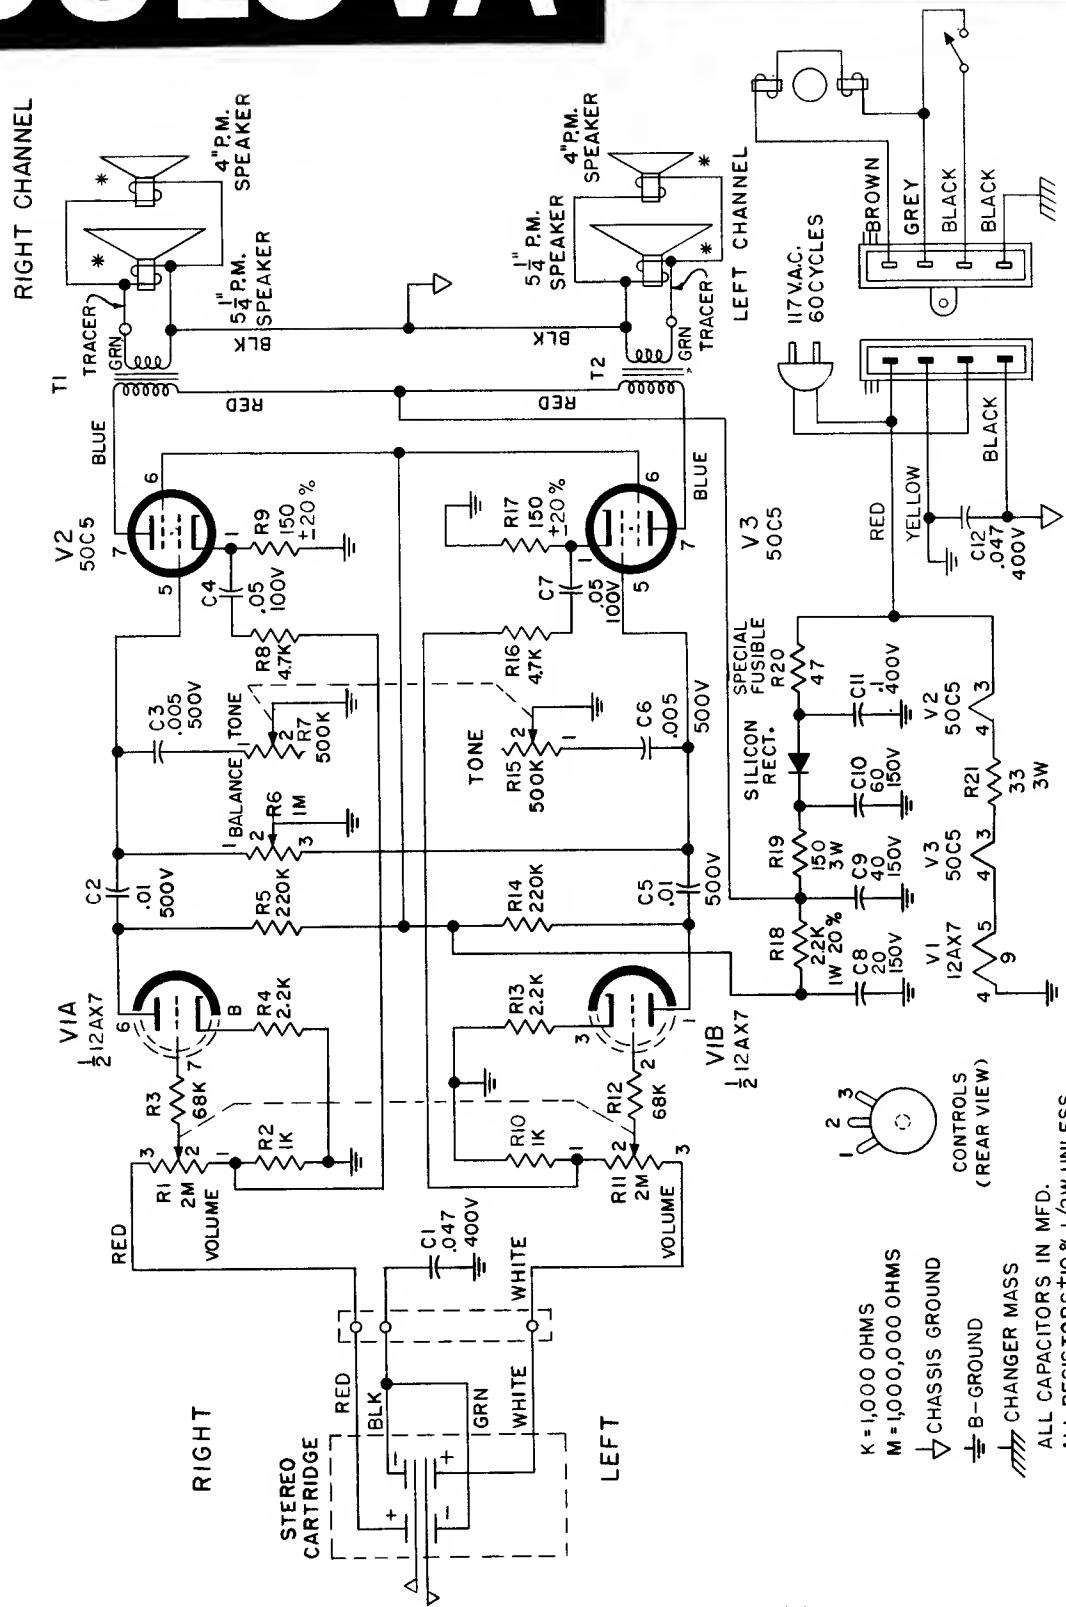

K = 1,000 OHMS
 M = 1,000,000 OHMS
 ▽ CHASSIS GROUND
 ⊕ B-GROUND
 ▨ CHANGER MASS
 ALL CAPACITORS IN MFD.
 ALL RESISTORS ±10% 1/2W UNLESS OTHERWISE NOTED



Q5
2N408

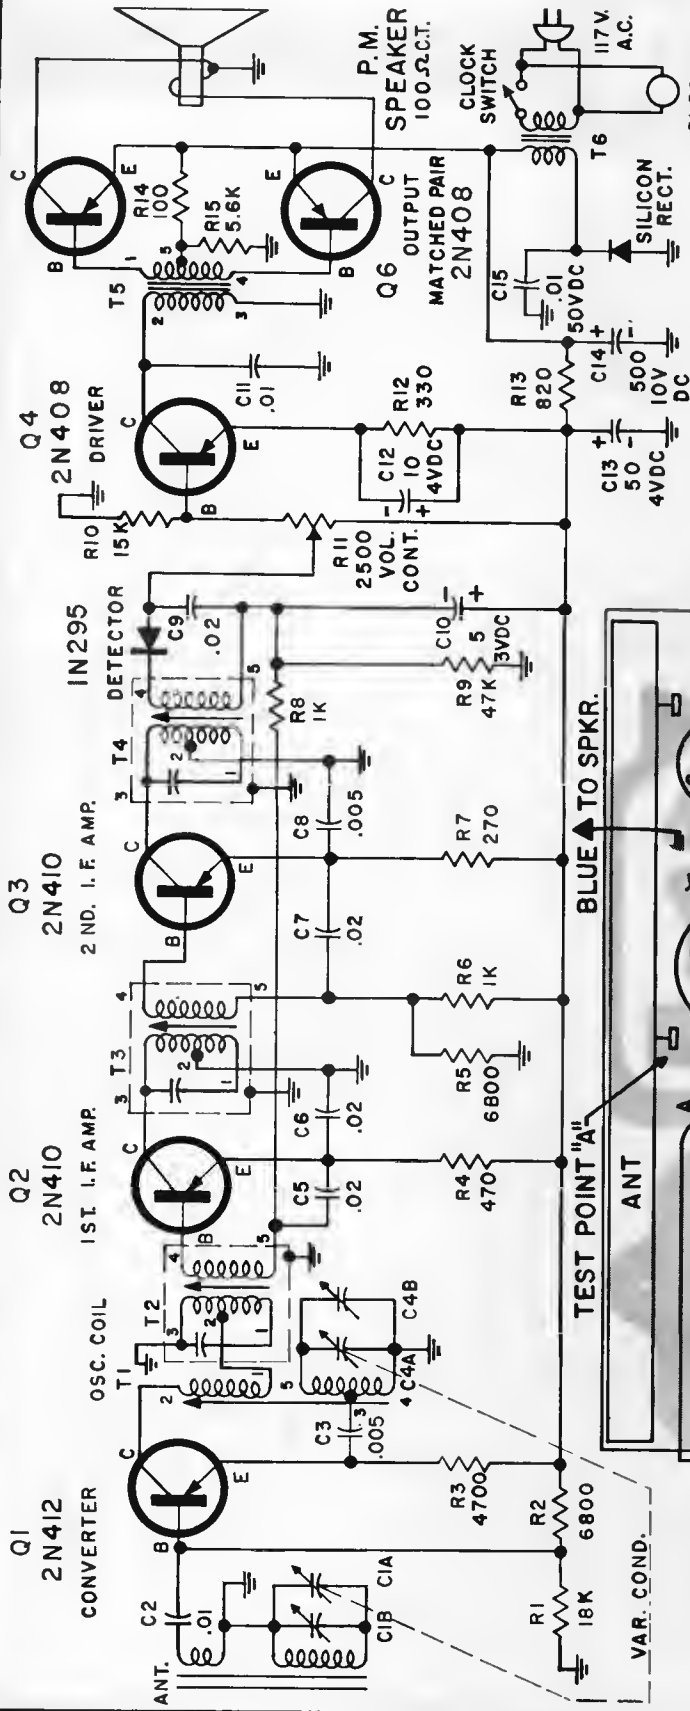

ALL RESISTORS 1/4 WATT ±10%.
 K=1,000 OHMS.
 ALL CAPACITORS IN MFD. UNLESS OTHERWISE NOTED.
 DC WORKING VOLTAGE IS 25V.
 ⊕ = CHASSIS GROUND.

BULOVA Viceroy

ALL TRANSISTOR CLOCK RADIO
 MODEL 430 SERIES

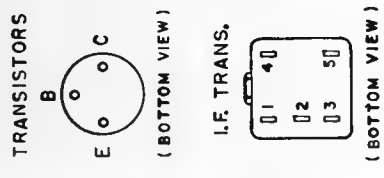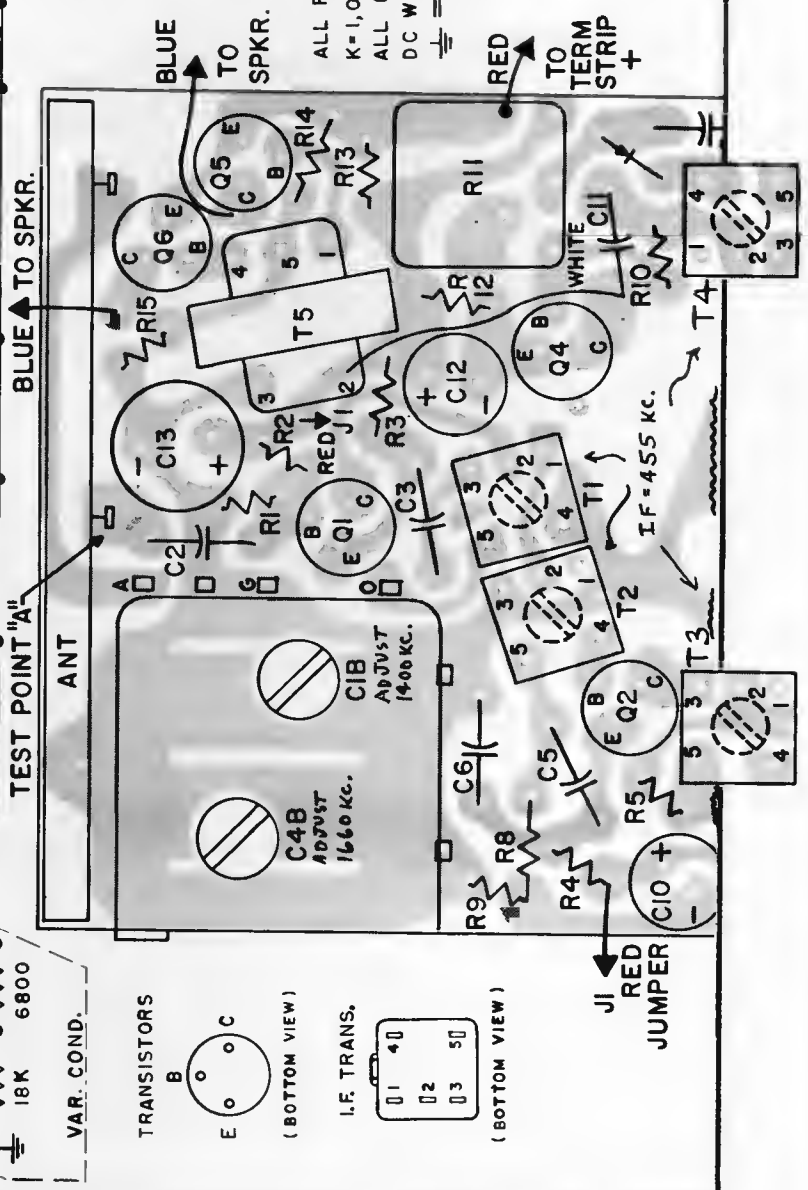


DELMONICO


MODEL 120

MODEL 150

RADIO Tuning Range : FM 88-108MC AM 535-1605KC
 Intermediate Frequency : FM 10.7MC AM 455KC
 Antenna : FM Built-in folded dipole antenna
 AM Built-in ferrite bar Antenna

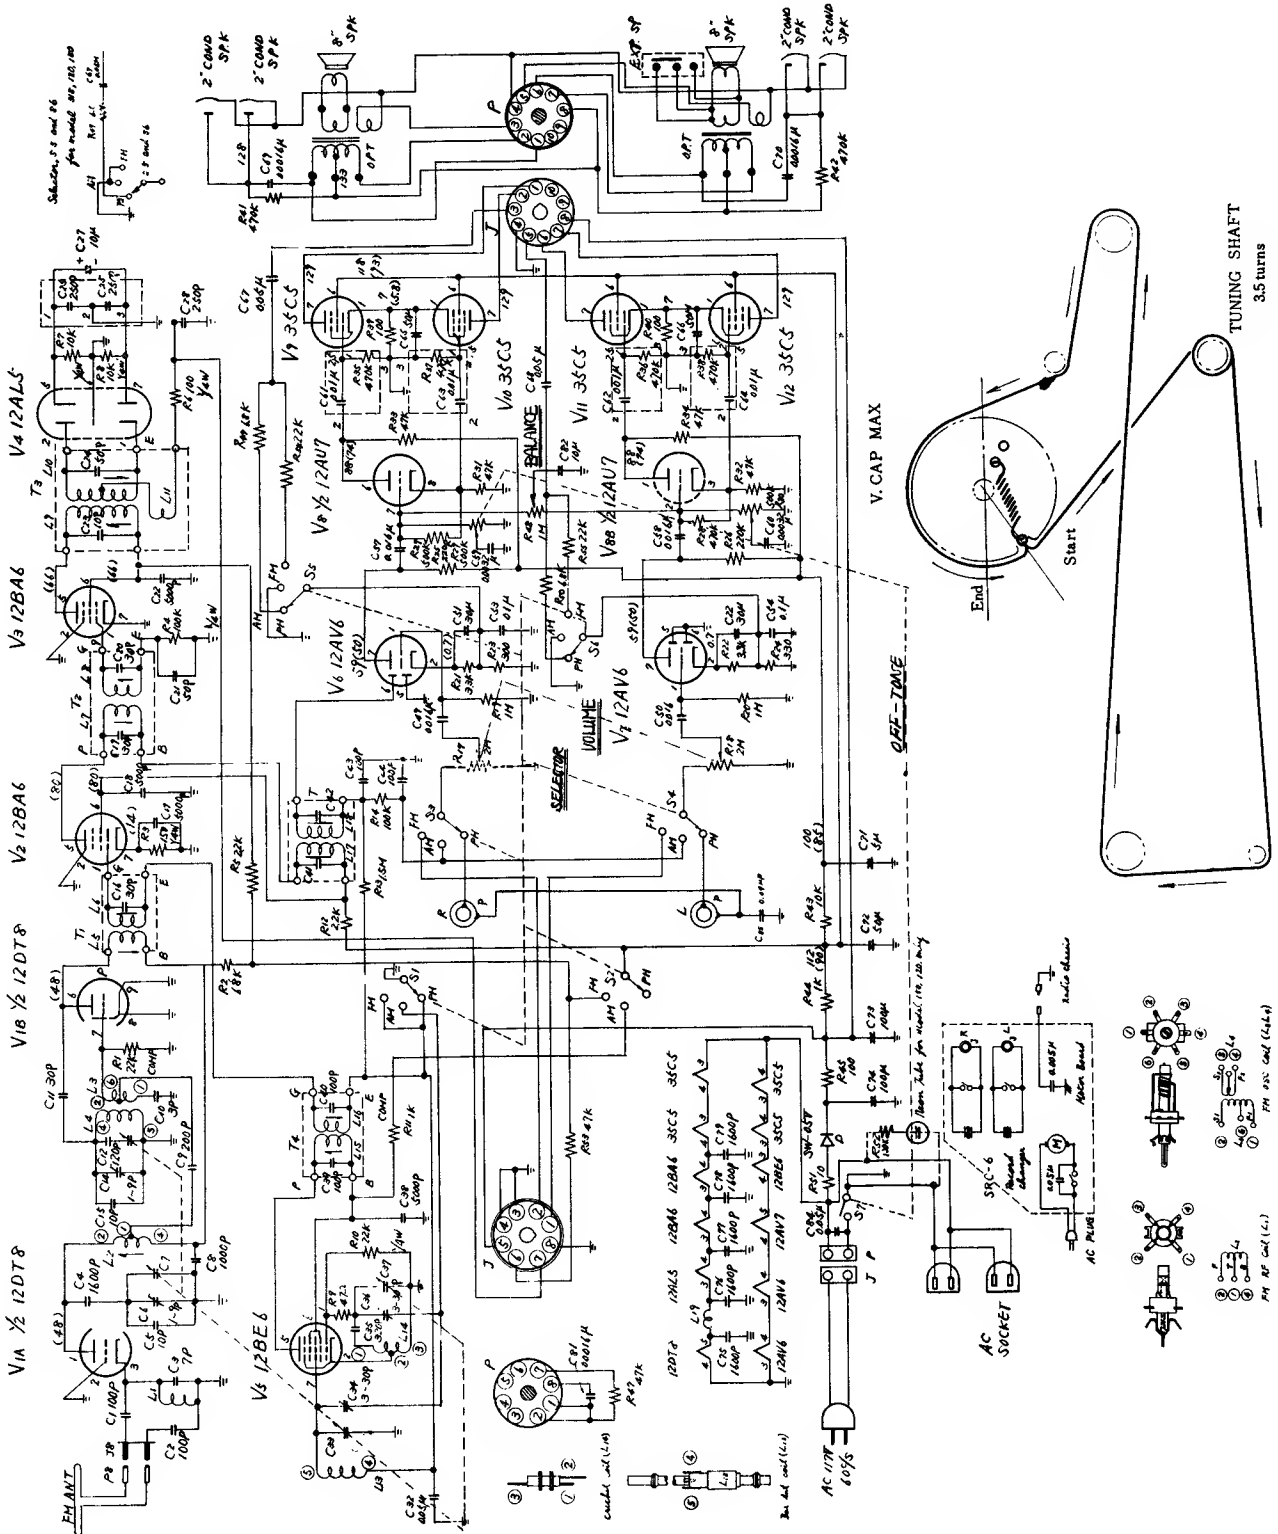

DELMONICO MODEL FMS-411

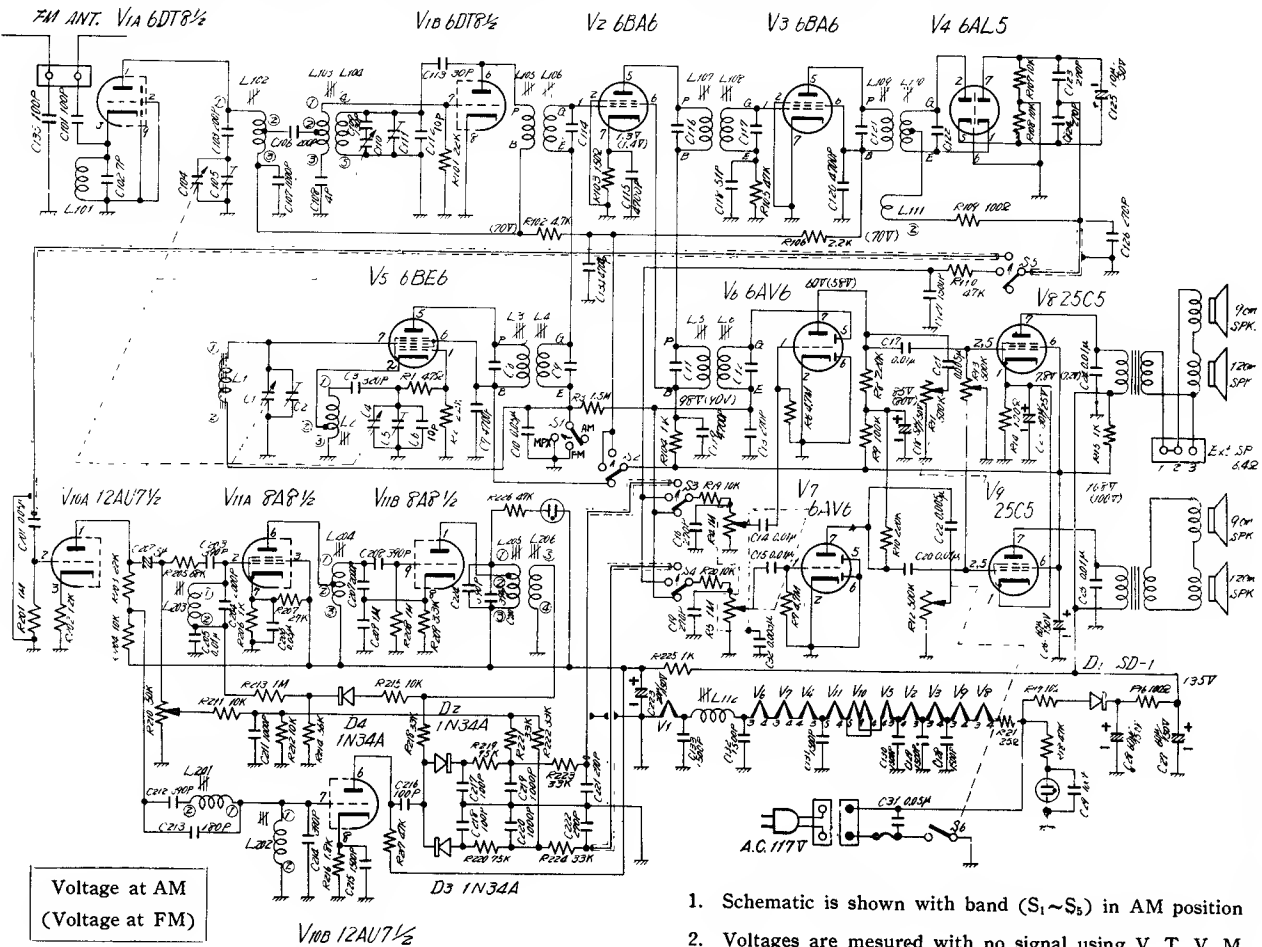

Voltage at AM
(Voltage at FM)

1. Schematic is shown with band (S₁~S₃) in AM position
2. Voltages are measured with no signal using V. T. V. M


END

CONDENSER
CLOSED


START

CORD IS 61"


3 TURNS

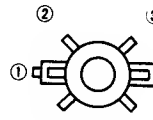


MPX COIL (L204)

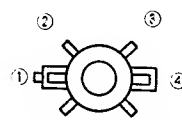

MPX COIL (L205, 206)



AM OSC. COIL (L2)

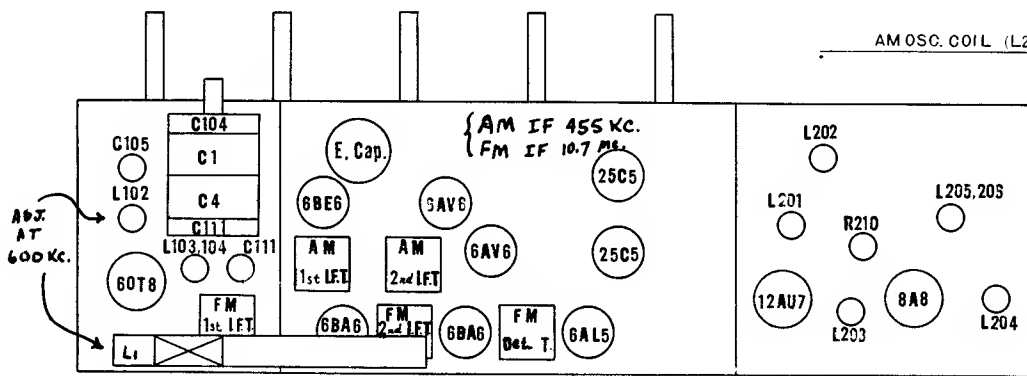


MODEL AND CHASSIS CROSS-REFERENCE


Emerson Radio

Chassis 120715, 120716, 120724
(material on pages 23 through 25)


MODEL NUMBER	AM/FM TUNER	STEREO AMPLIFIER
P-1925A	120715	120716
P-1927	120715	120716
P-1935	120724	120716
P-1938	120724	120716

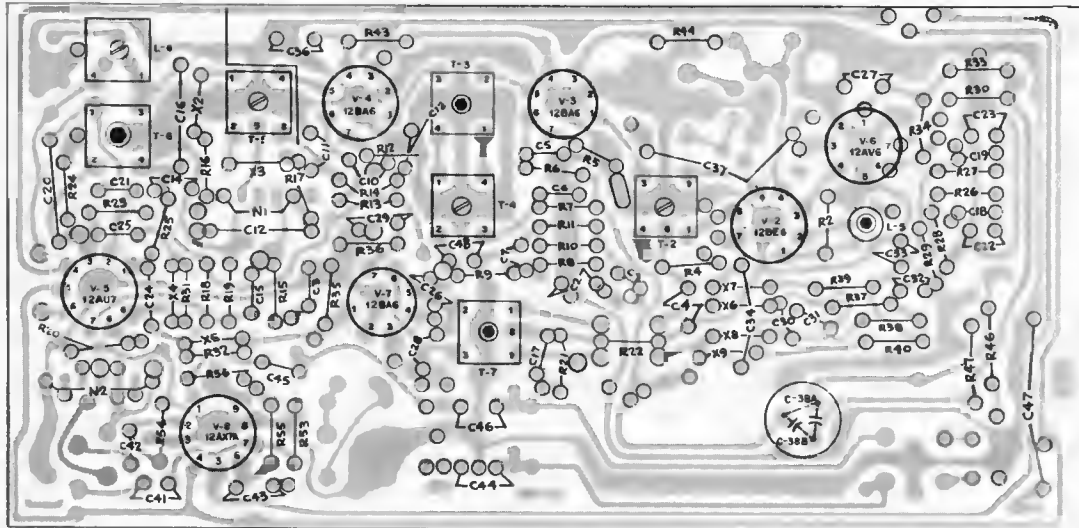

ETCHED PRINTED CIRCUIT, AM-FM TUNING CHASSIS (TOP VIEW)

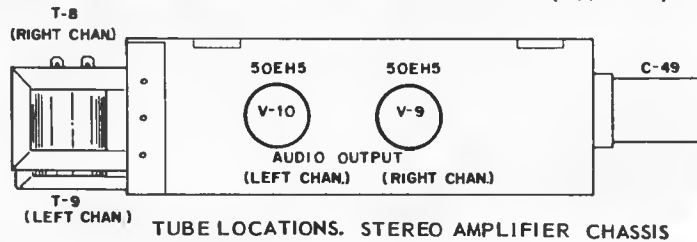


TUBE LOCATIONS. STEREO AMPLIFIER CHASSIS

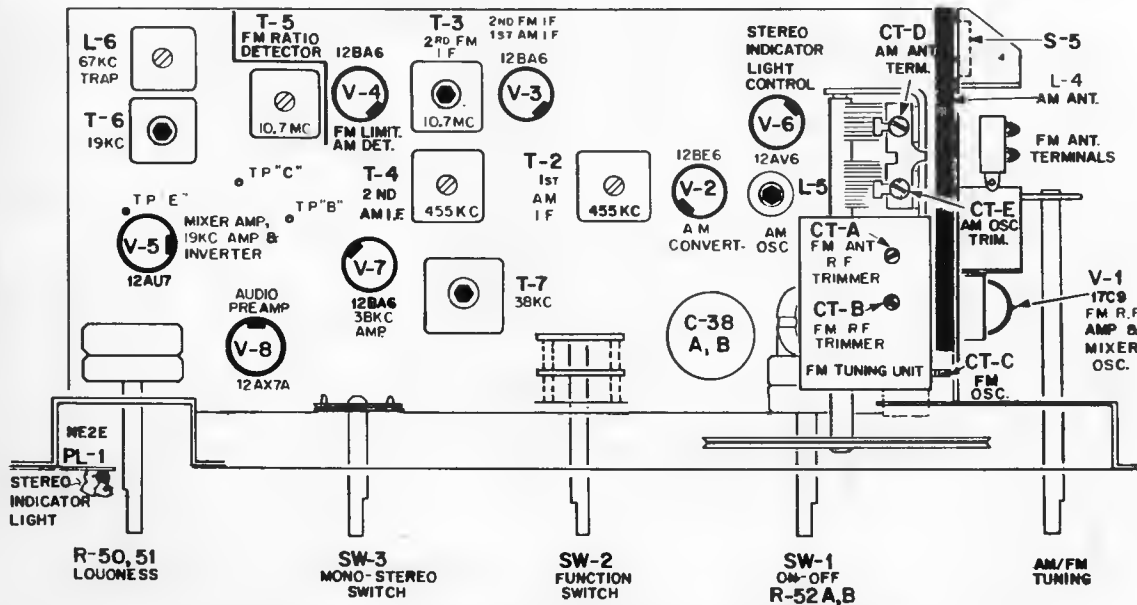

TUBE LOCATIONS AND ALIGNMENT POINTS, AM-FM TUNING CHASSIS.


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

EMERSON Chassis 120715, 120716, 120724, Schematic Diagram

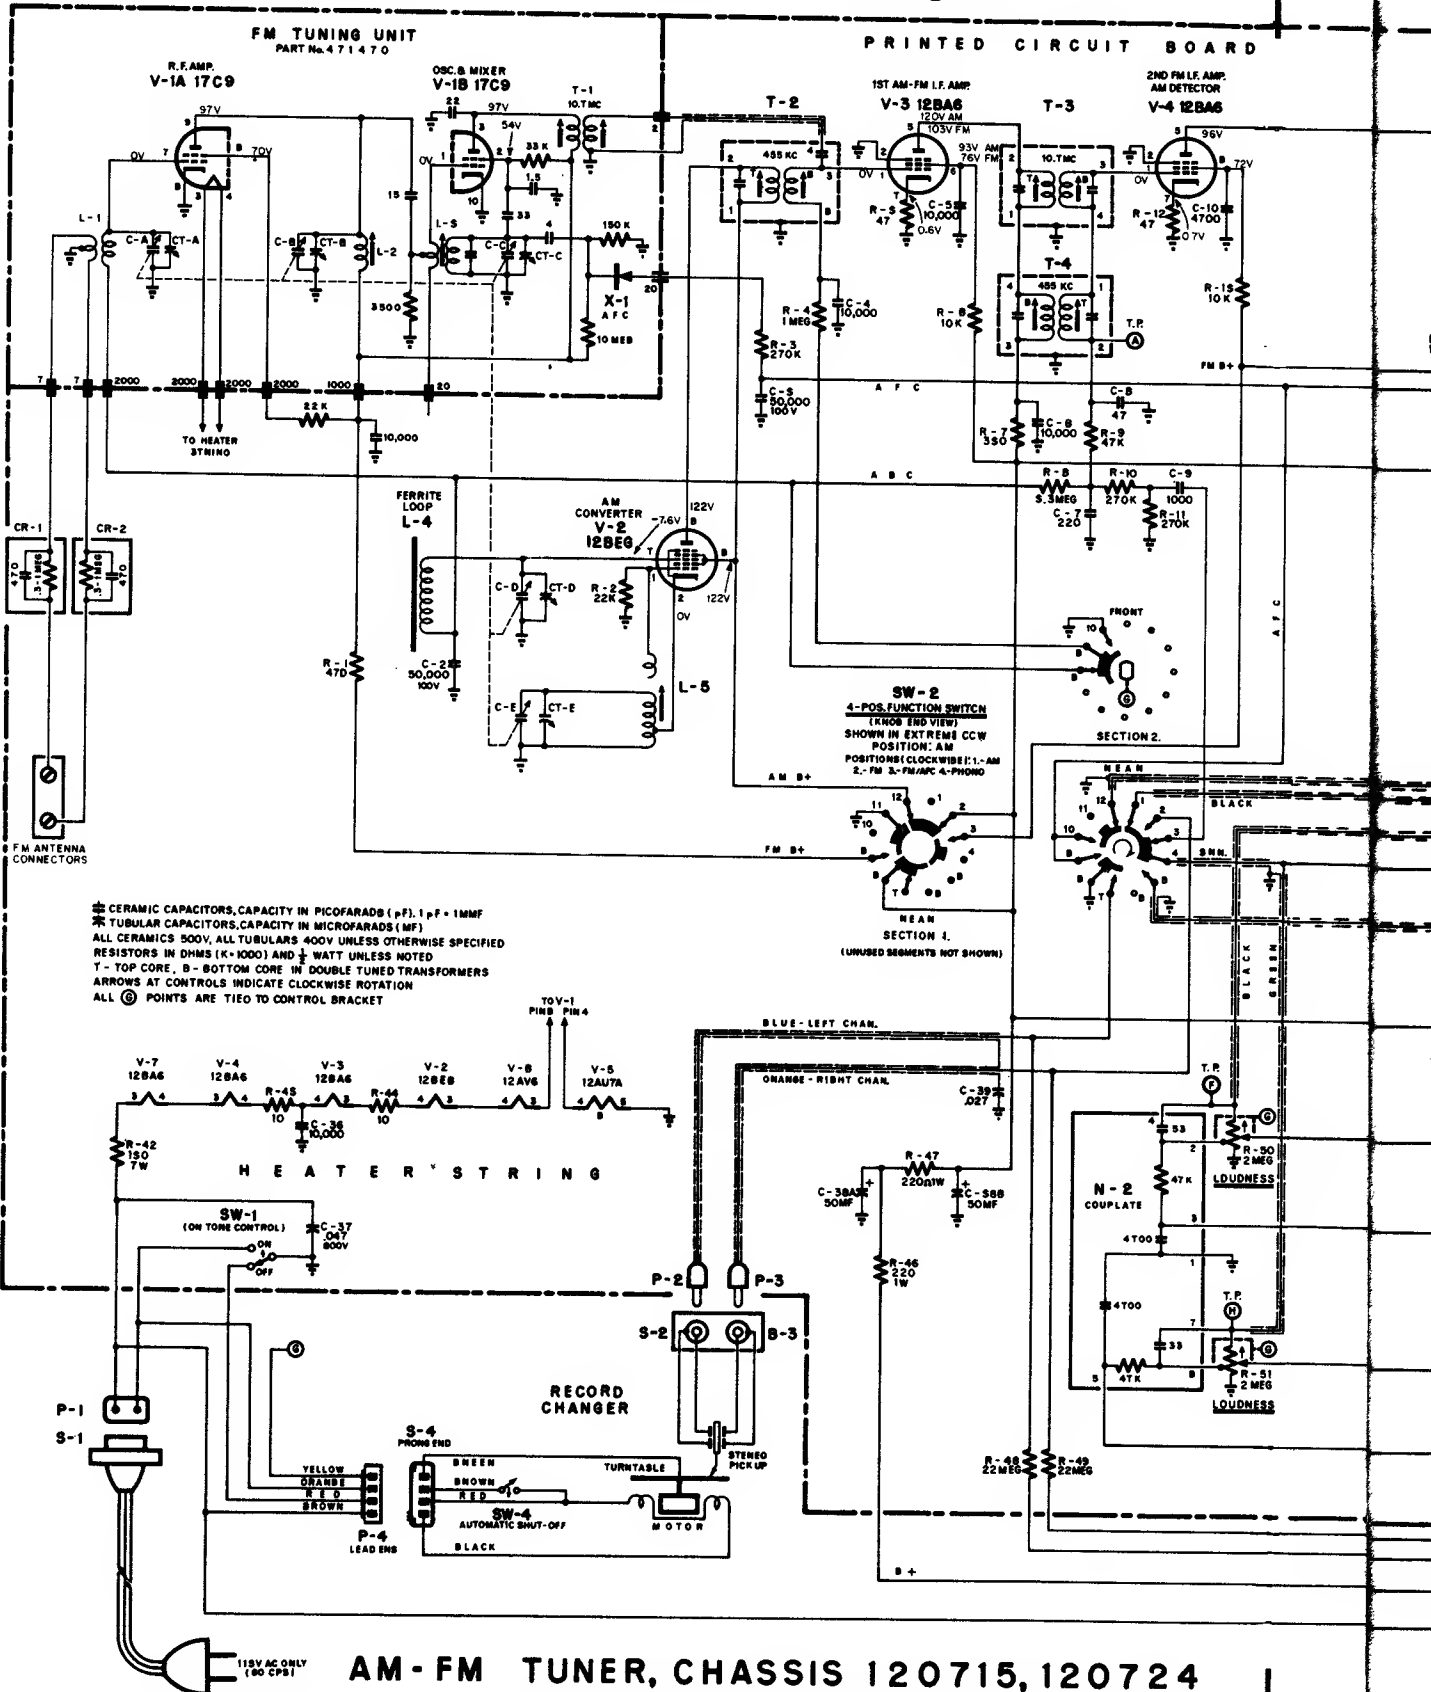

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

EMERSON Chassis 120715, 120716, 120724, Diagram, Continued

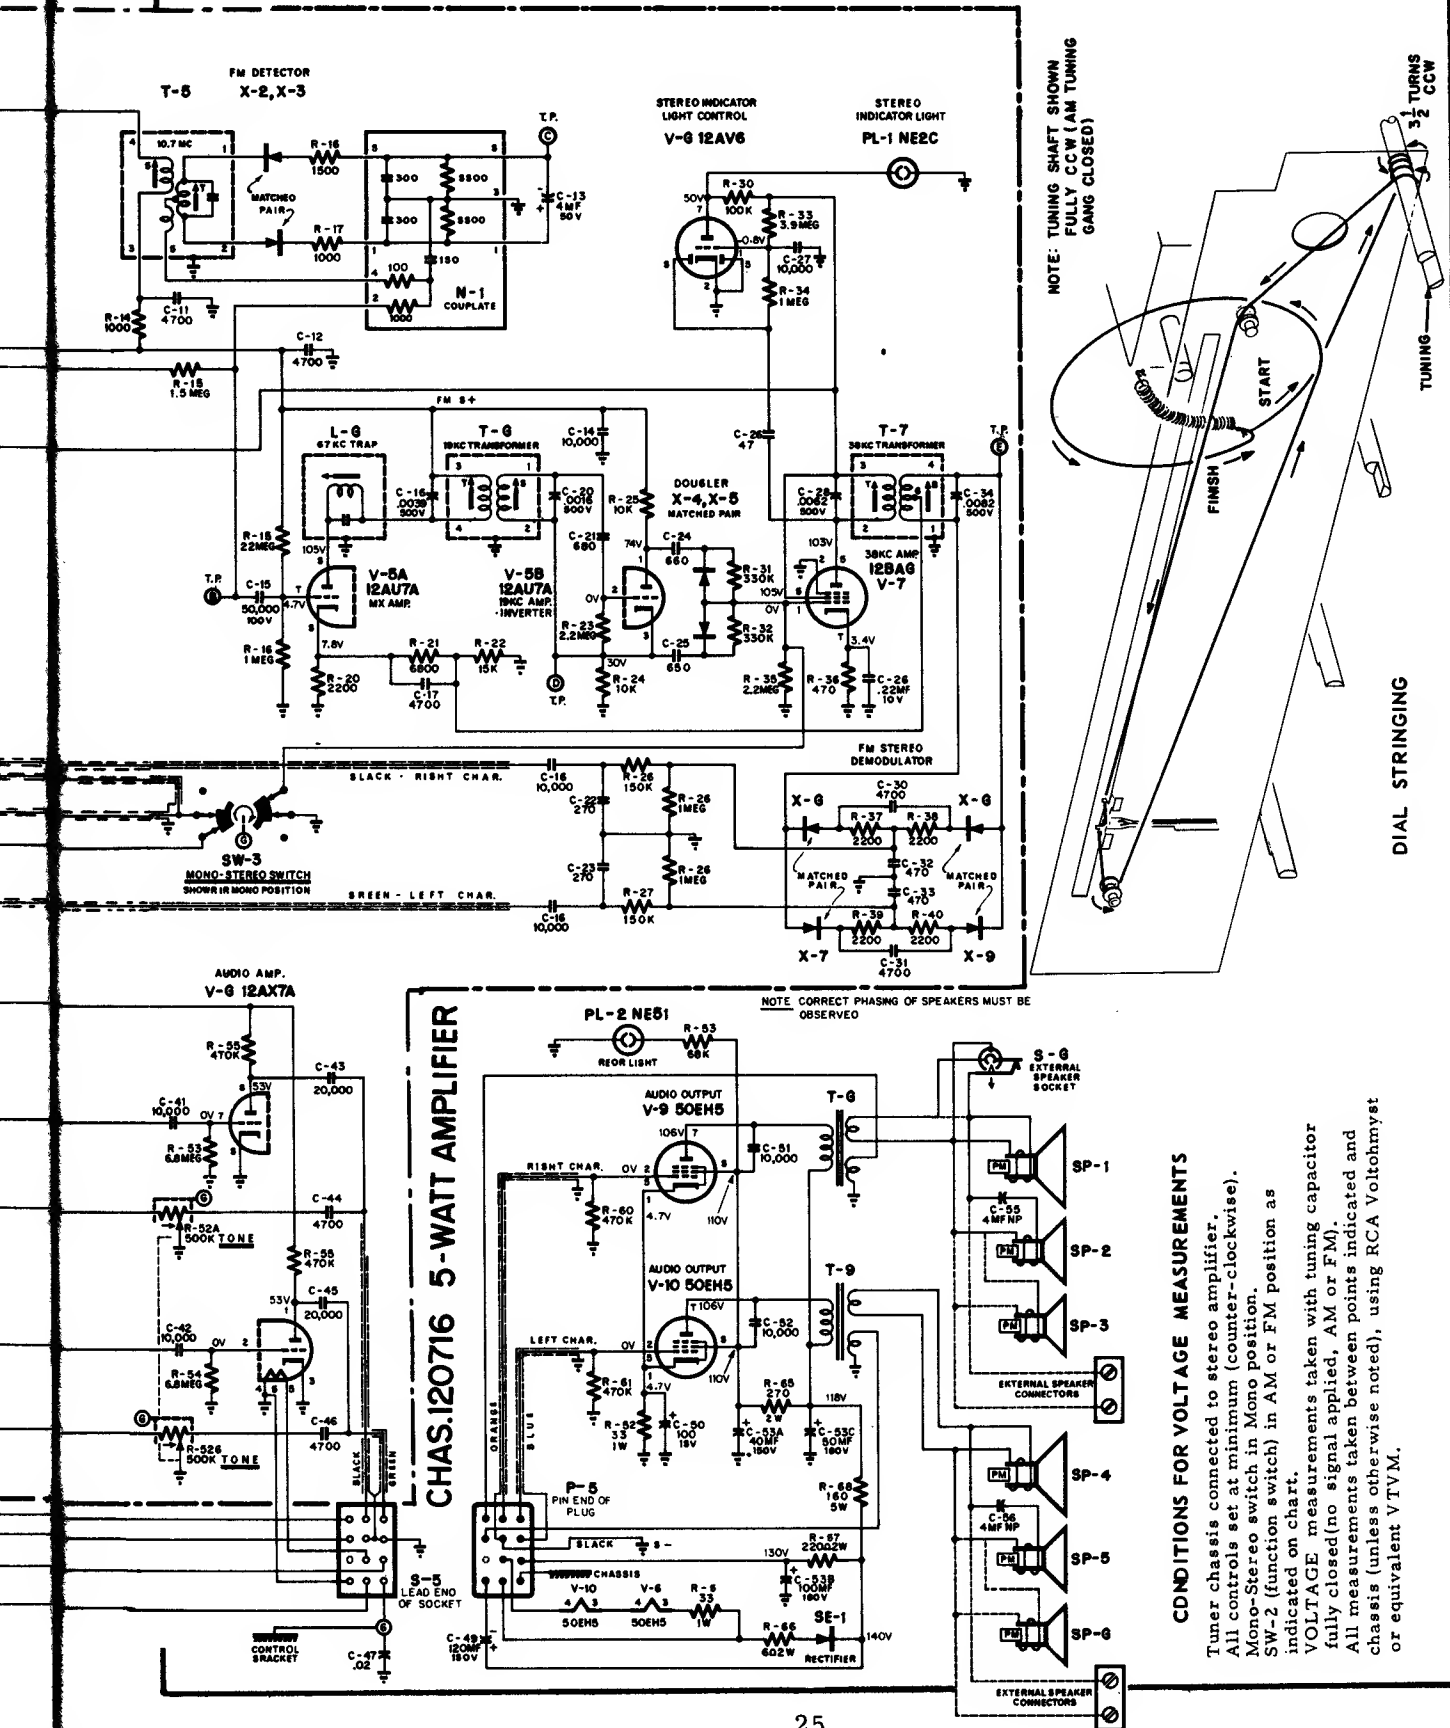


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION



MODEL 897
"MERCURY"
CH. 120664, 664L

CH. 120664, 120664L

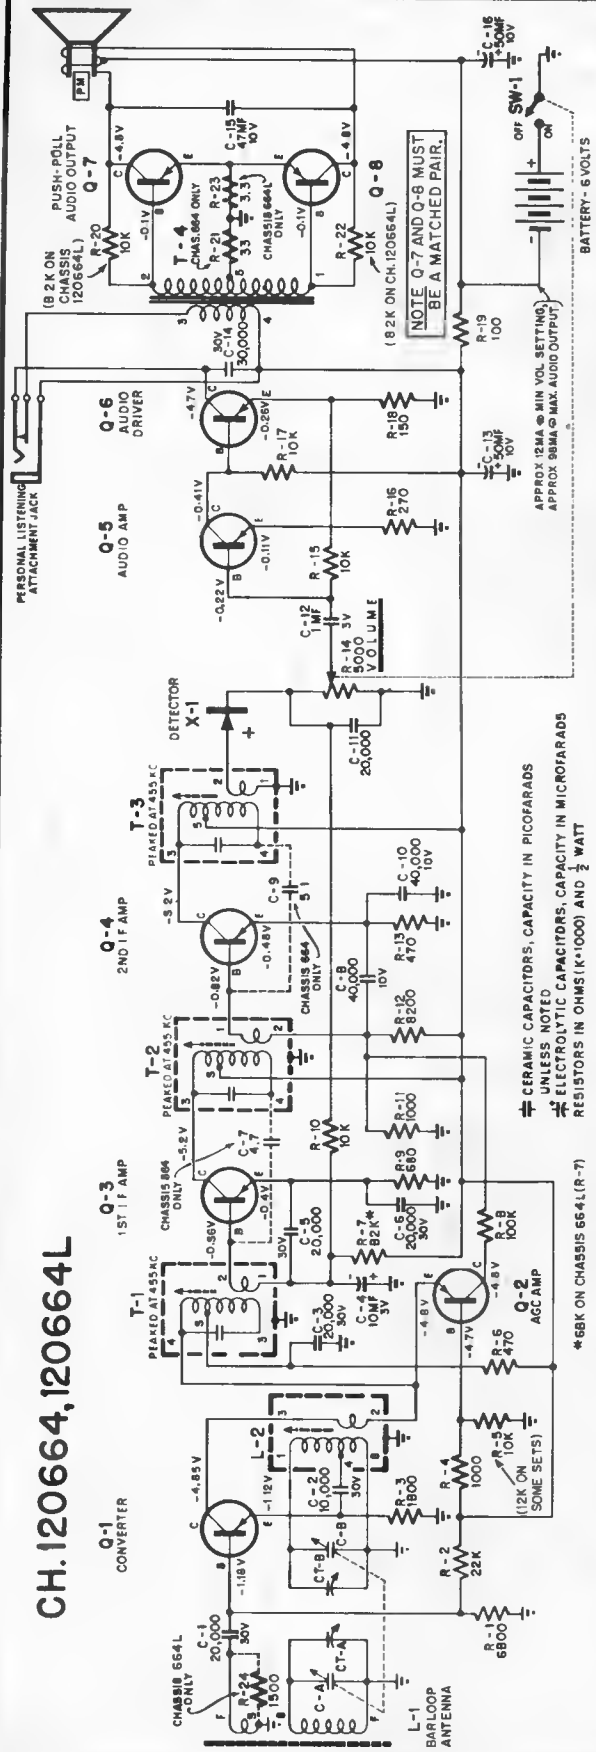


N.O.T.E.: THE FOLLOWING TRANSISTOR COMBINATIONS MUST BE OBSERVED (CHASSIS 664 ONLY)

TRANSISTOR	PART No.	PART No.
Q-1	815065	815086
Q-7, Q-8	815070A OR 815070B	815070C OR 815070D


N.O.T.E.: THE FOLLOWING TRANSISTOR COMBINATIONS MUST BE OBSERVED (CHASSIS 664L ONLY)

TRANSISTOR	PART No.	PART No.
Q-8	815120B0C	815120E
Q-7, Q-8	815120E	815120B0C

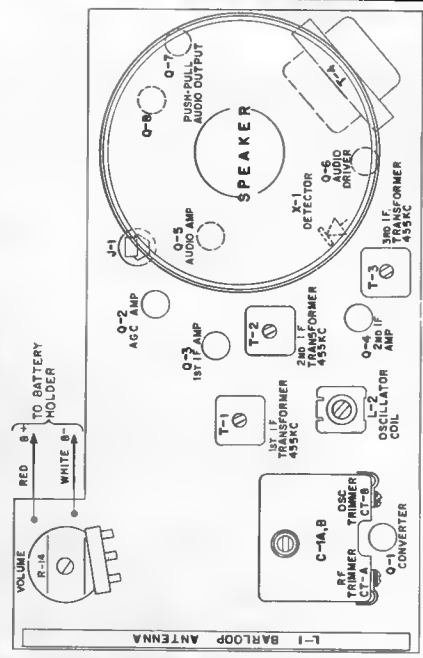

⊞ CERAMIC CAPACITORS, CAPACITY IN PICOFARADS UNLESS NOTED
⊞ ELECTROLYTIC CAPACITORS, CAPACITY IN MICROFARADS
⊞ RESISTORS IN OHMS (K=1000) AND 1/2 WATT

*68K ON CHASSIS 664L(R-7)

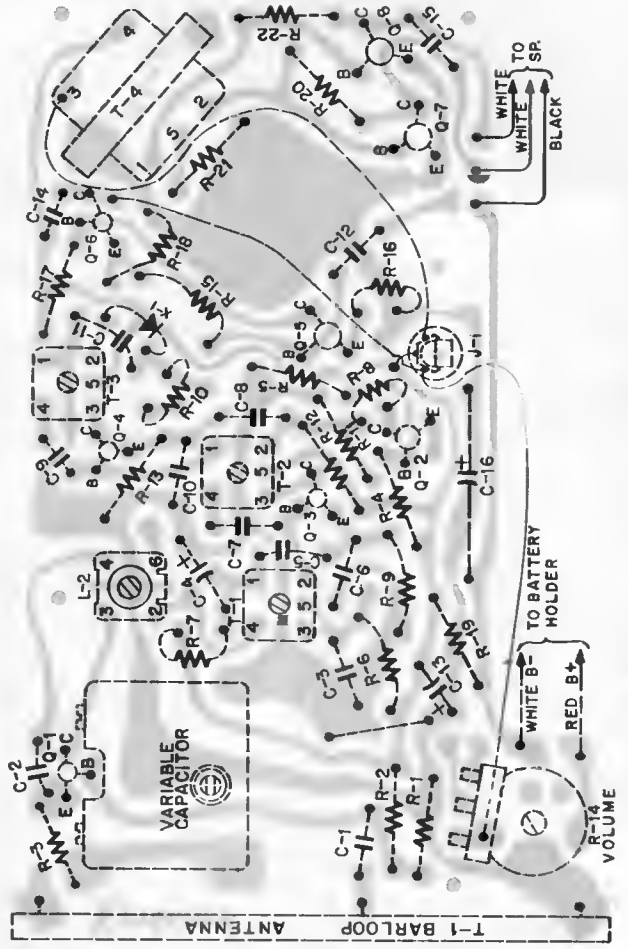

ETCHED PRINTED CIRCUIT CHASSIS 120664, 120664-L (BOTTOM VIEW)


Emerson Radio

MODELS:
P-1939, P-1940
AUDIO CH.: 120719
AM/FM TUNER: 120720C


DUMONT

MODELS:
524, 525, 526.

(Material on pages 27 through 29)

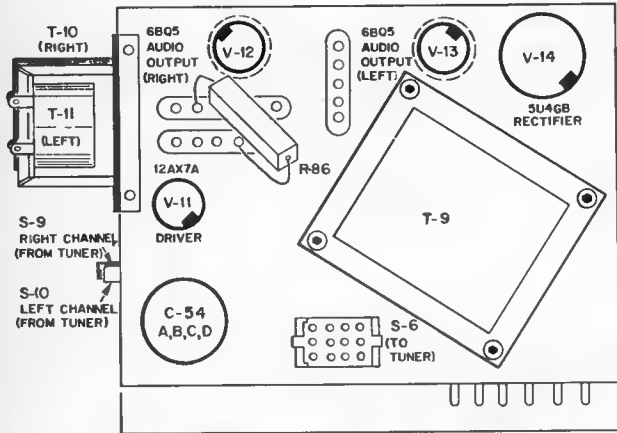


TUBE LOCATIONS.
STEREO AMP. CHASSIS

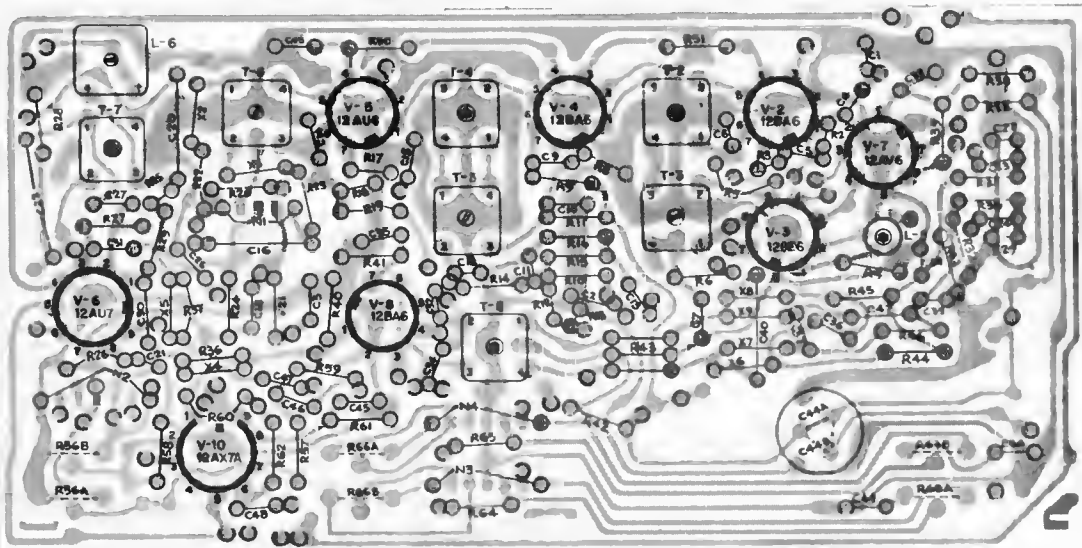


ETCHED PRINTED CIRCUIT, AM-FM TUNING CHASSIS (TOP VIEW)

TUBE LOCATIONS
AND ALIGNMENT POINTS,
AM-FM TUNING CHASSIS.

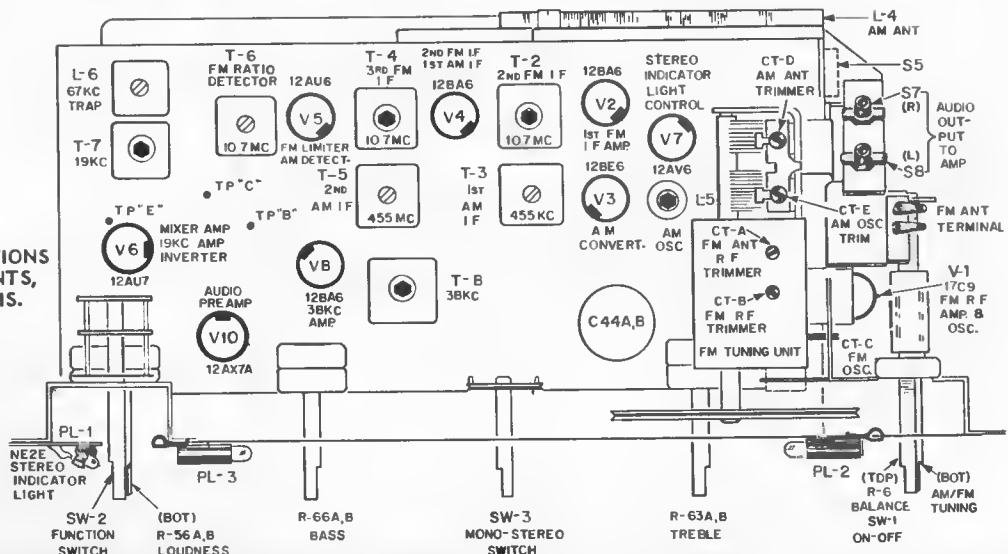

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

EMERSON and DU MONT Chassis 120719 and 120720C Diagrams



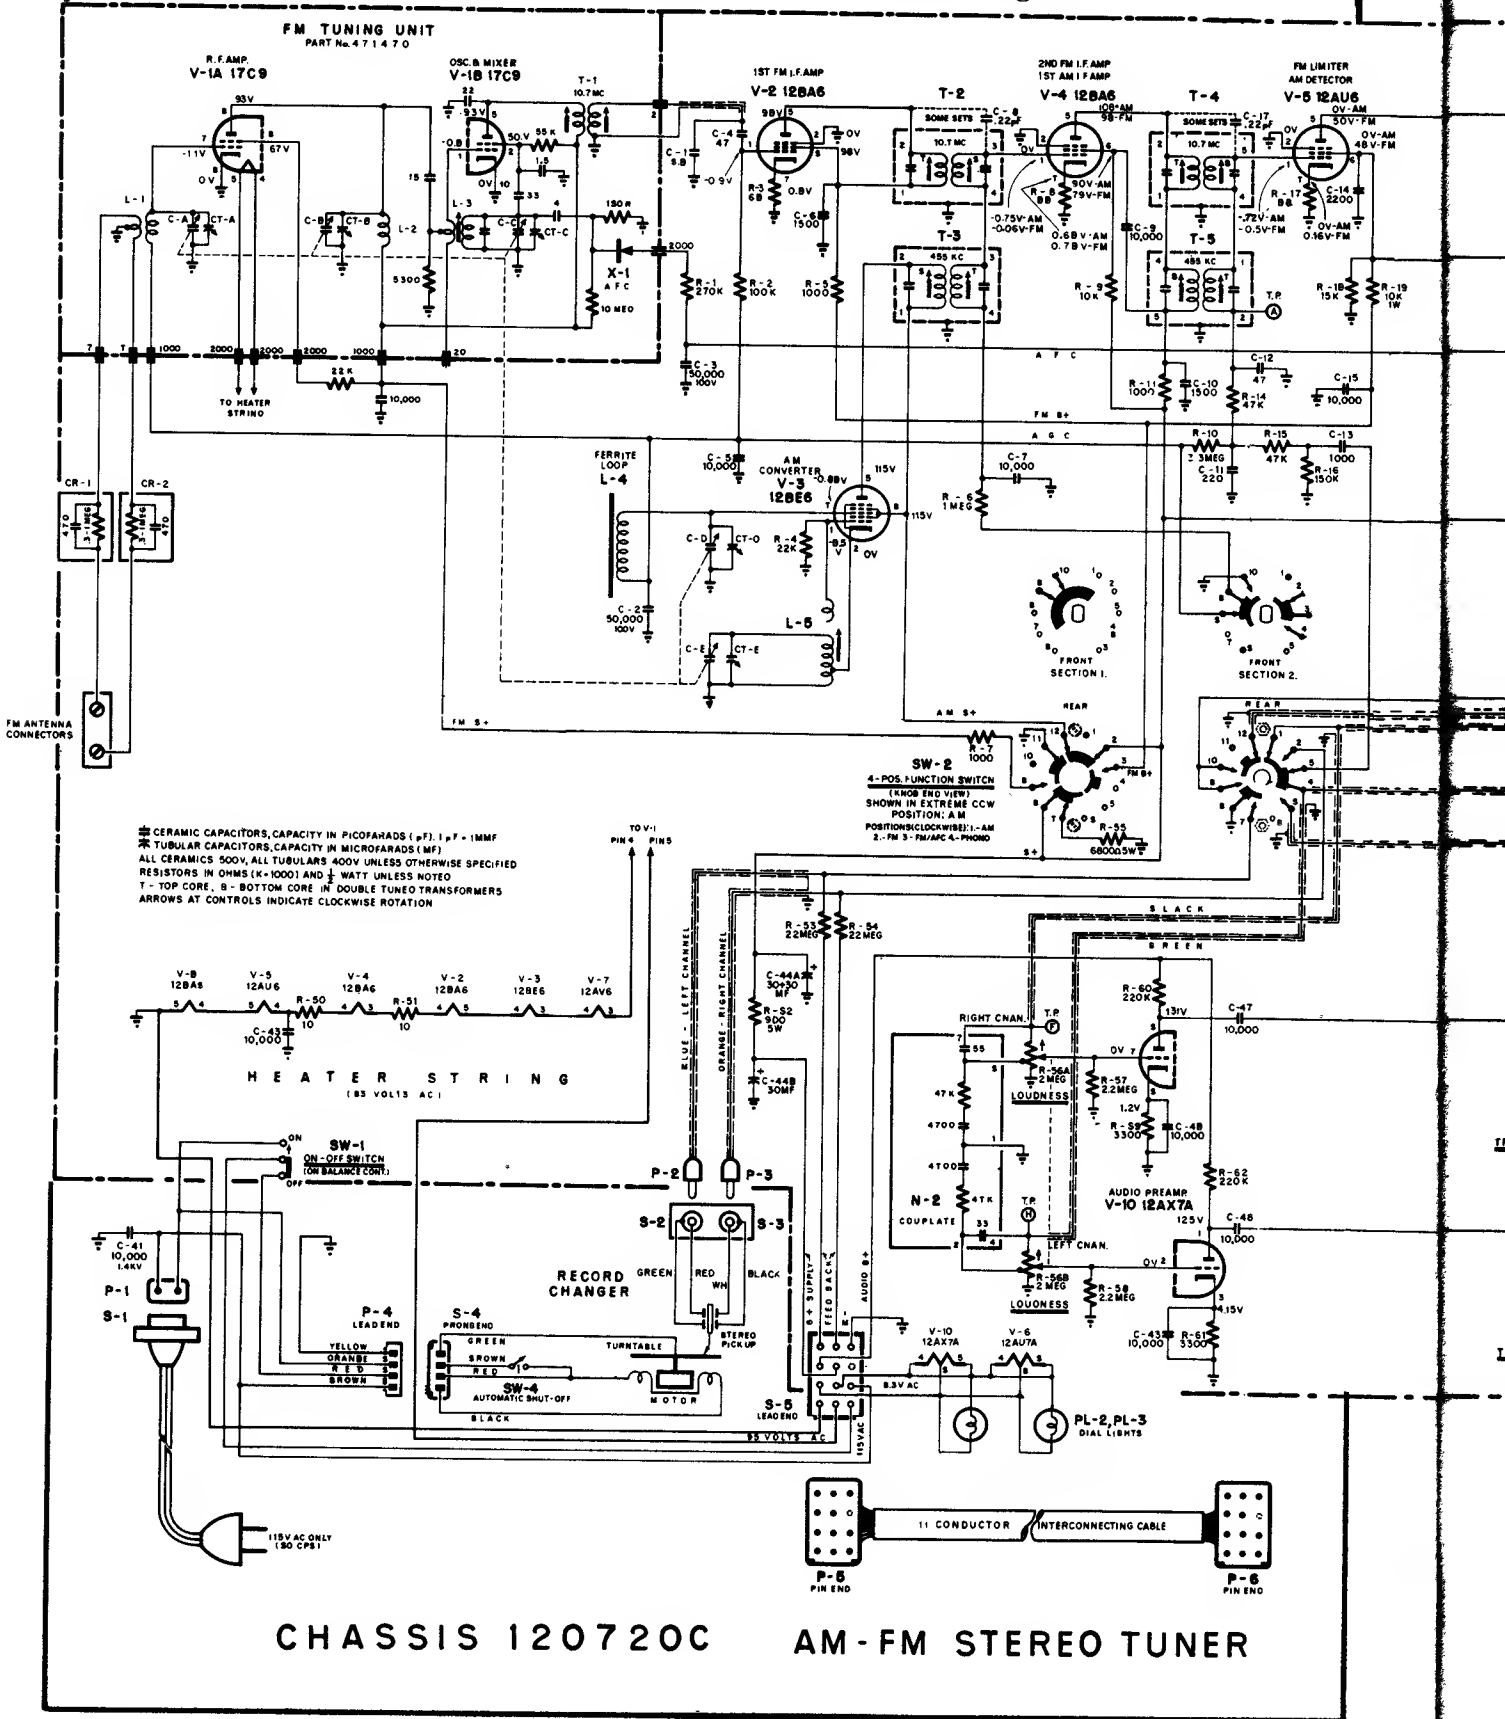


* CERAMIC CAPACITORS, CAPACITY IN PICOFARADS (pF), 1 pF = .0001 MF
 * TUBULAR CAPACITORS, CAPACITY IN MICROFARADS (MF)
 ALL CERAMICS 500V, ALL TUBULARS 400V UNLESS OTHERWISE SPECIFIED
 RESISTORS IN OHMS (K=1000) AND WATT UNLESS NOTED
 T - TOP CORE, B - BOTTOM CORE IN DOUBLE TUNED TRANSFORMERS
 ARROWS AT CONTROLS INDICATE CLOCKWISE ROTATION

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

EMERSON and DUMONT Chassis 120719 and 120720C Diagrams, Continued

PRINTED CIRCUIT BOARD

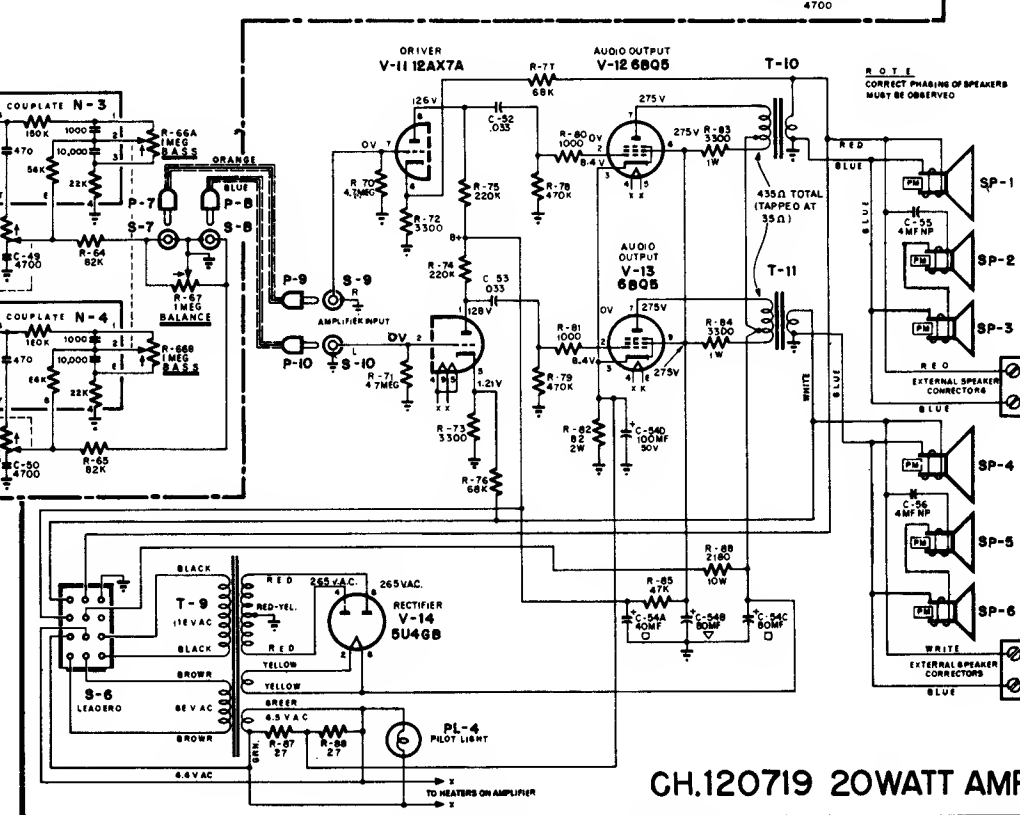
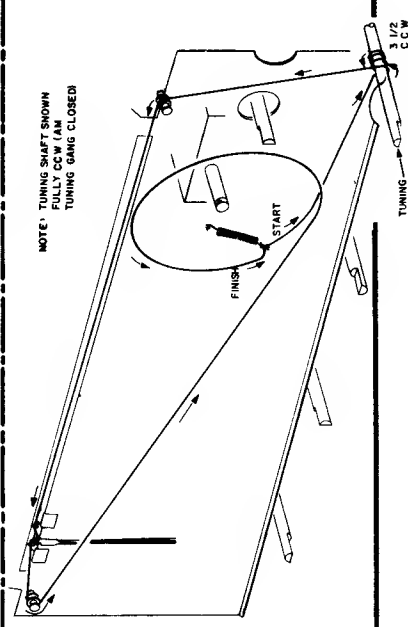
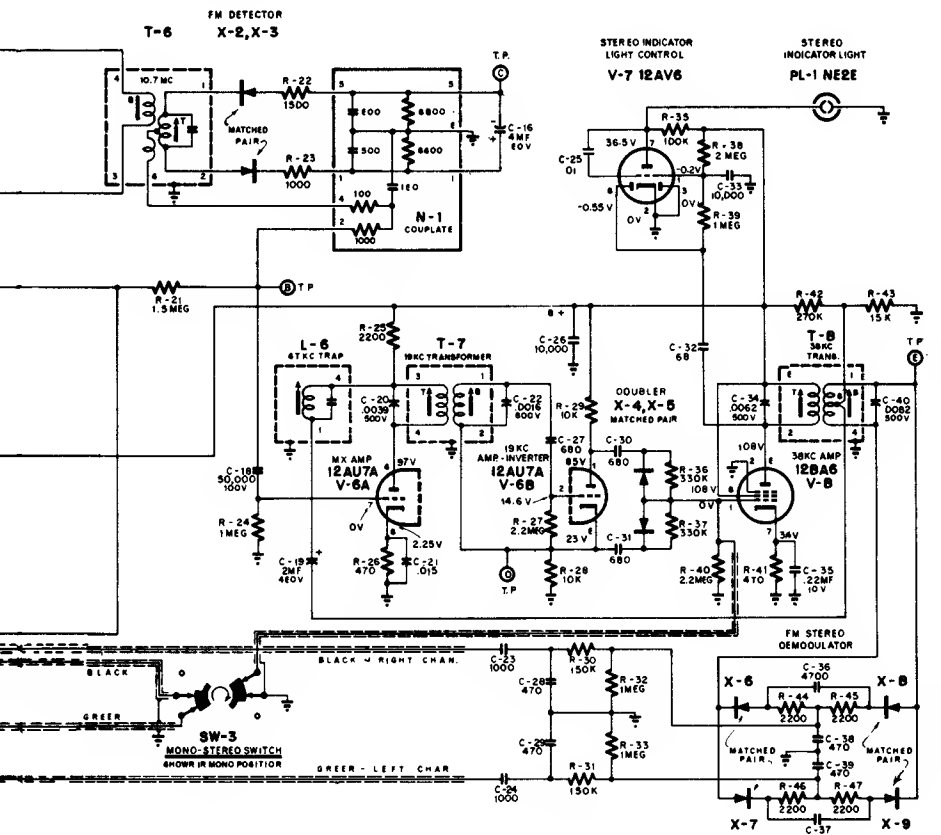


CONDITIONS FOR VOLTAGE MEASUREMENTS
 Tuner chassis connected to stereo amplifier.
 All controls set at minimum (counter-clockwise).
 Mono-Stereo switch in Mono position.
 SW-2 (function switch) in AM or FM position as indicated on chart.
 VOLTAGE measurements taken with tuning capacitor fully closed (no signal applied, AM or FM).
 All measurements taken between points indicated and chassis (unless otherwise noted), using RCA Voltohmmyst or equivalent V TVM.

CH.120719 20WATT AMPLIFIER


Emerson Radio

MODELS:
P-1944, P-1946
CHASSIS: 120726

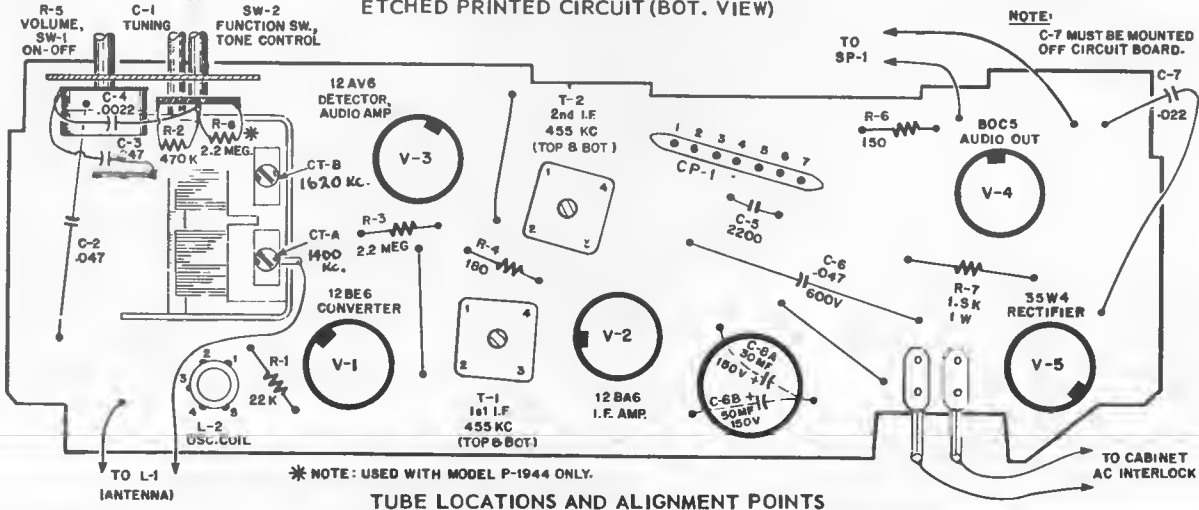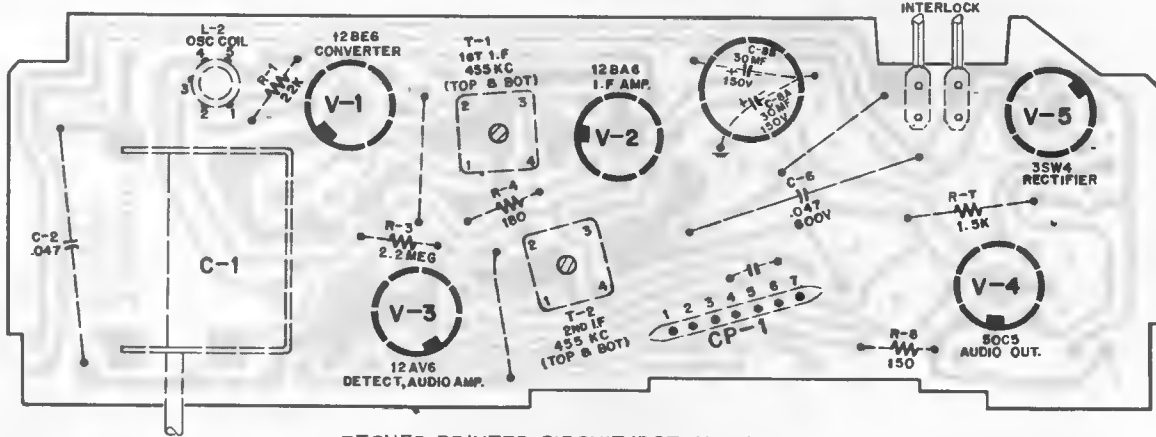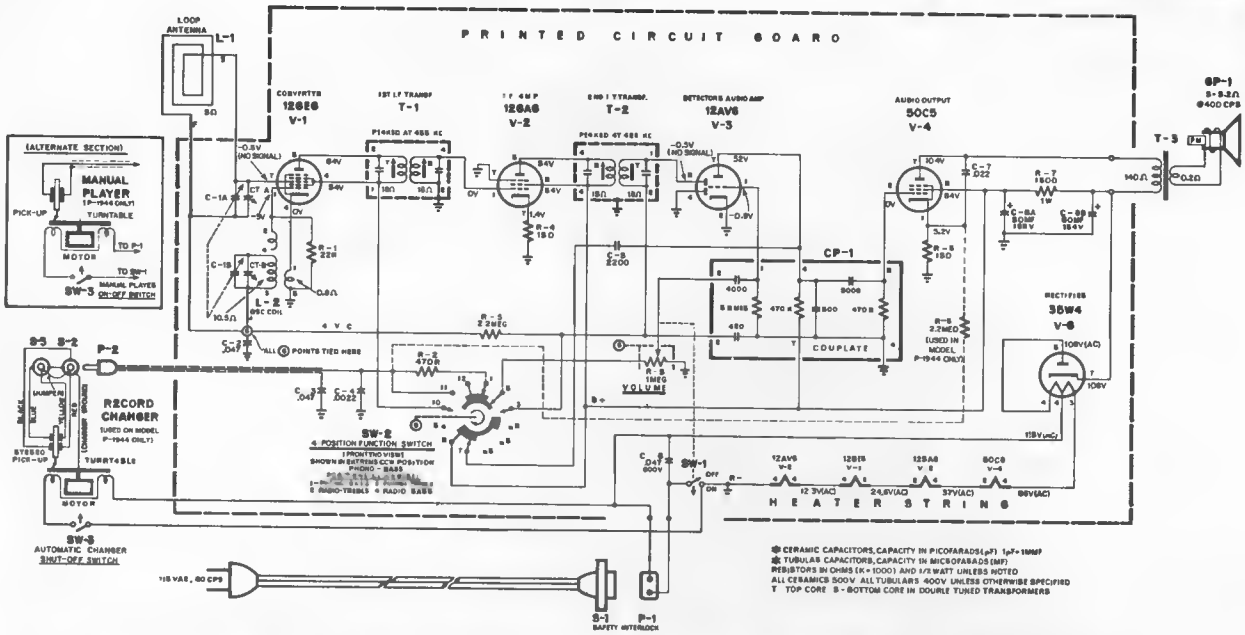


Emerson Radio

MODELS:
32P01, 32P02
CHASSIS: 120745


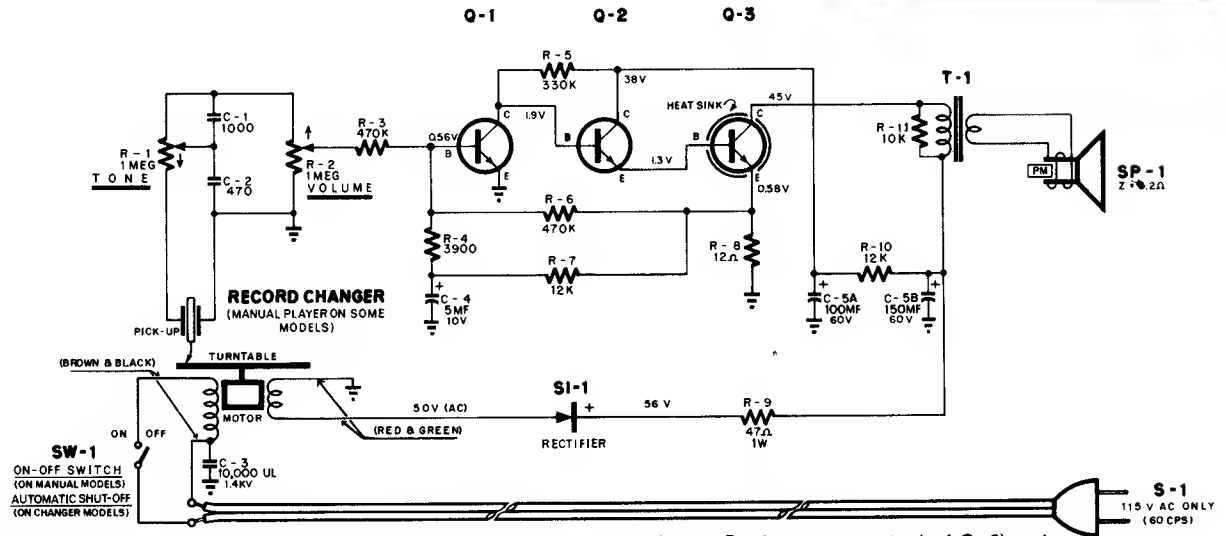


NOTE: All voltages measured with VTVM with common lead attached to B- (common terminal of C-5) and volume control set at minimum (fully counter-clockwise).

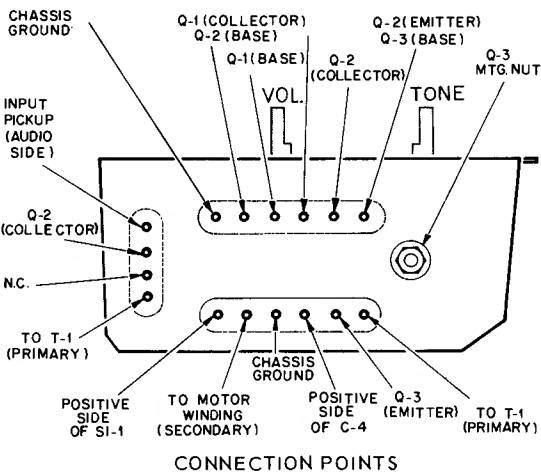

CONNECTION POINTS

ADJUSTMENT SETTINGS, RECORD CHANGER 819218

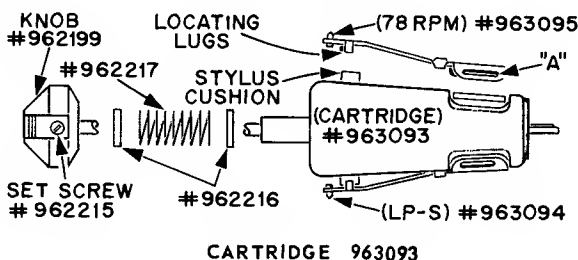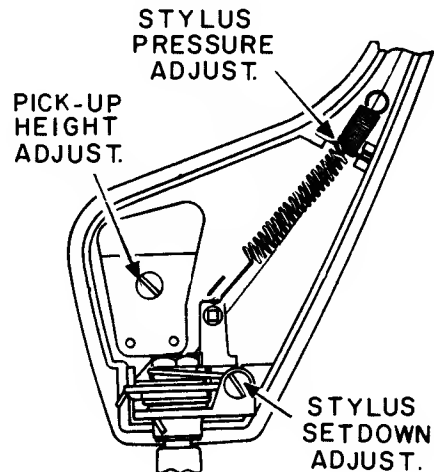

CARTRIDGE 963093

To replace either of the styli in cartridge number 963093, remove defective stylus by releasing clipped-on end at point (A). When installing new stylus, be sure the two locating lugs directly behind the sapphire tip are seated on either side of the stylus cushion.

Cartridge number 963093 (Ronette DC-500) is supplied complete with mounting bracket and all associated parts. To replace, remove cartridge mounting screw from top of tone arm, install new cartridge and replace mounting screw.

STYLUS SET-DOWN

Raise pick-up arm and adjust screw indicated for proper set-down on lead-in groove of 10" record. When correctly positioned for a 10" record, set-down point for 7" and 12" records should also be correct.

PICK-UP HEIGHT

Raise pick-up arm to a vertical position and adjust screw indicated until pick-up clears a stack of 10 records on the turntable by at least 1/8". A check should then be made to see that pick-up arm does not contact underside of remaining records stacked on the spindle shelf, and also to see that pick-up arm clears top of rest post during change cycle.




STYLUS PRESSURE

Adjust stylus pressure by repositioning balance spring in the various holes provided inside pick-up arm until correct pressure of 6 to 8 grams is obtained.


Emerson Radio

MODEL: 31T01
CHASSIS: 120747

Model 31T01, Chassis 120747
(For diagram see page 33)

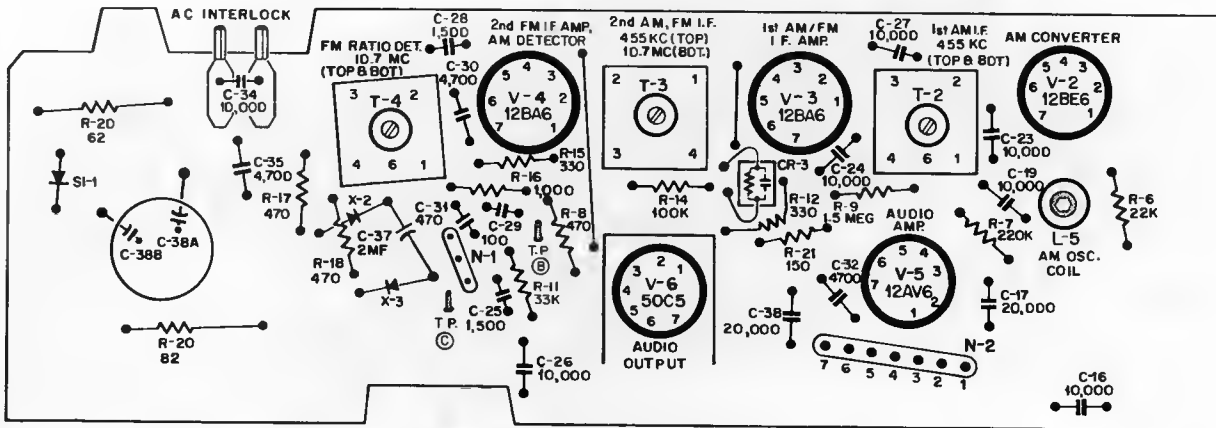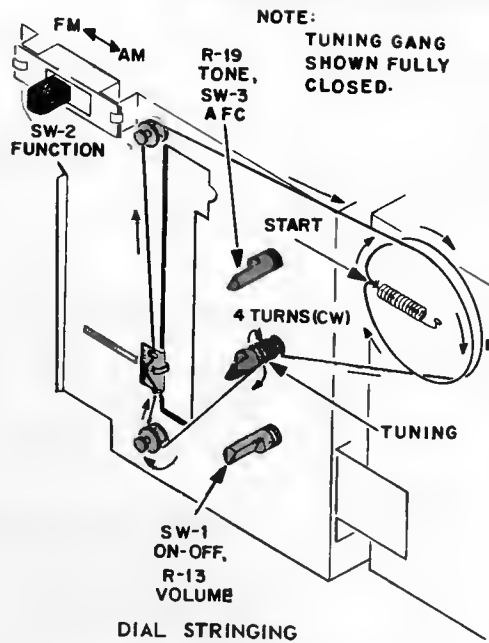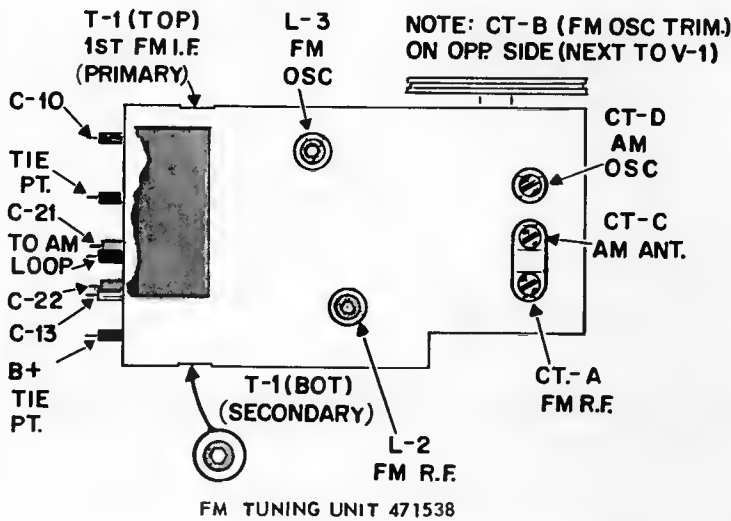


TUBE LOCATIONS AND ALIGNMENT POINTS

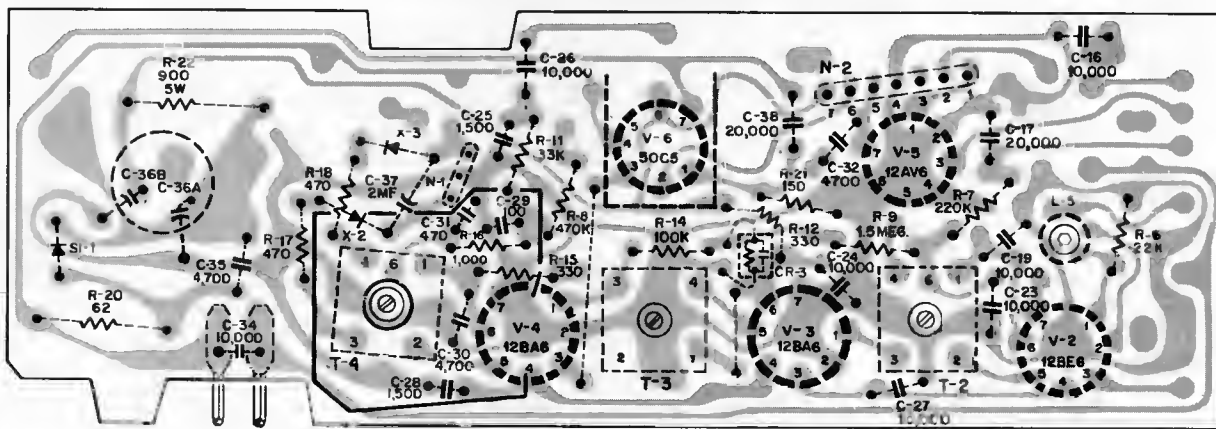

ETCHED CIRCUIT CHASSIS (BOTTOM VIEW)


MODEL: 31T01
CHASSIS: 120747

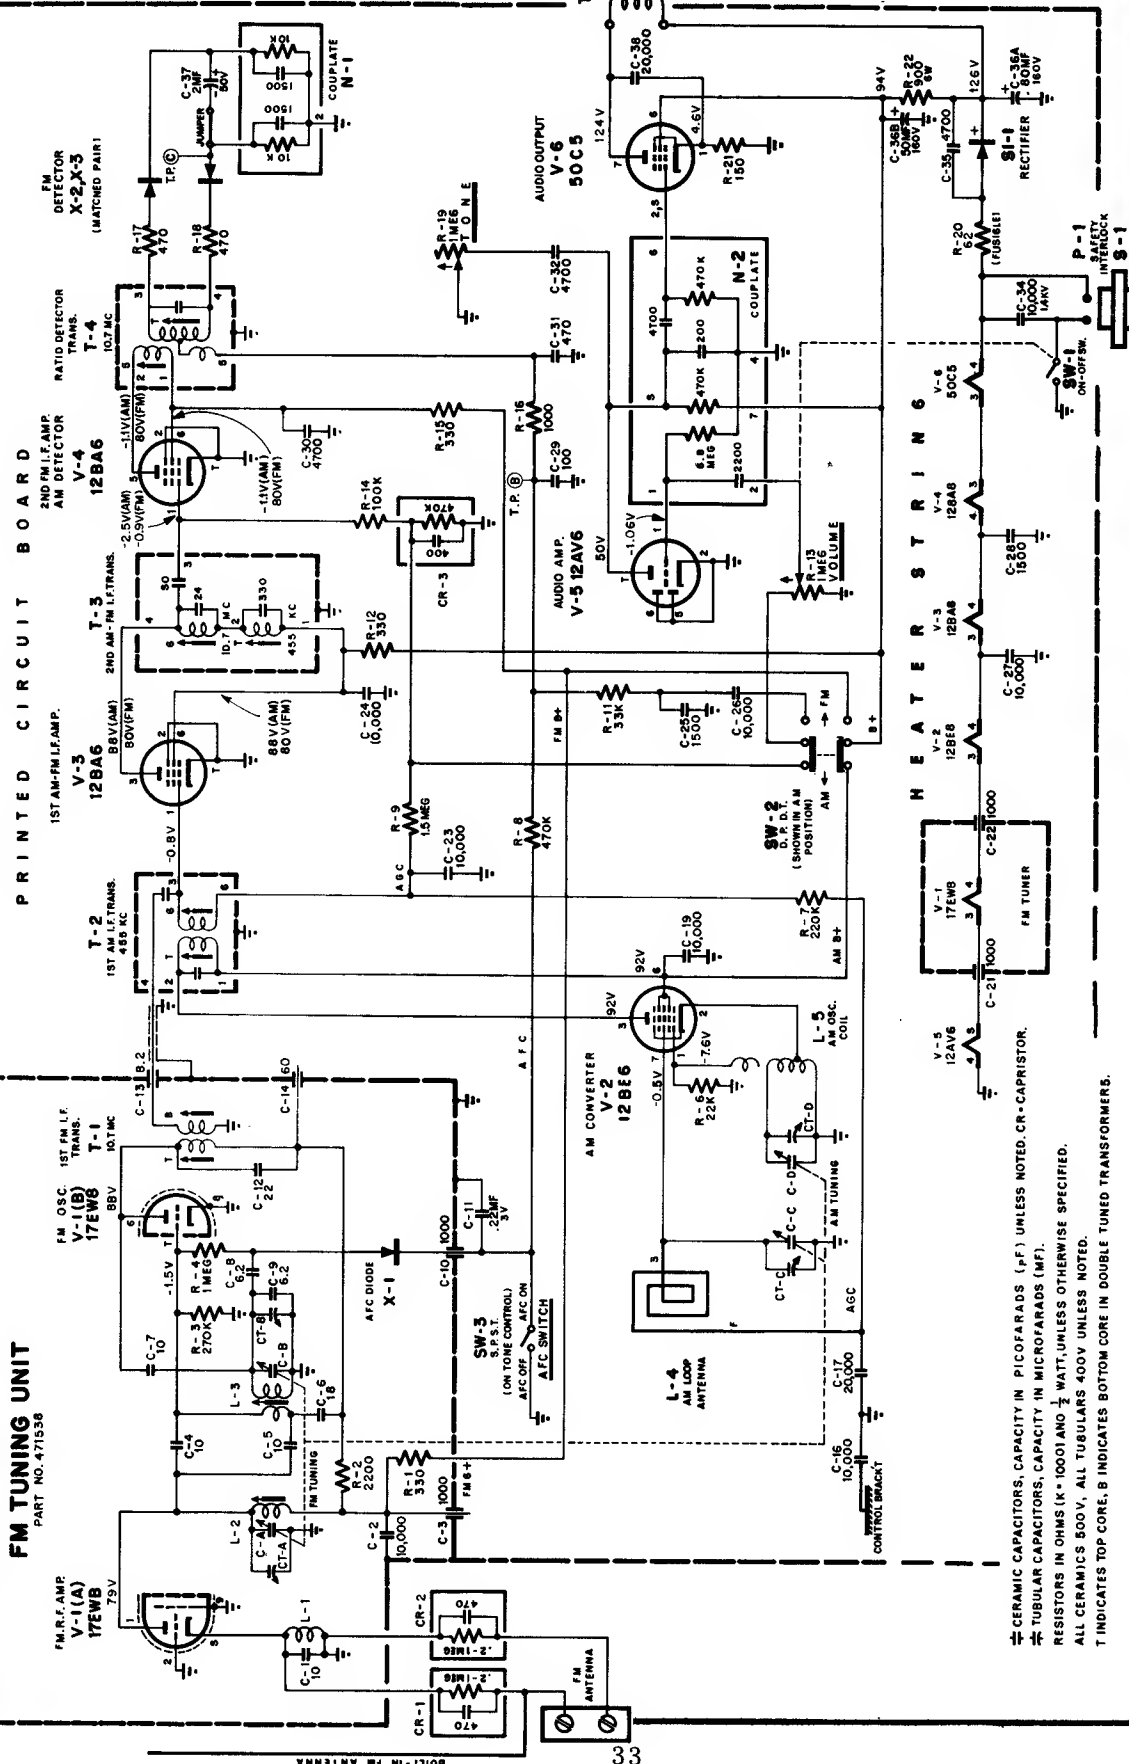


⚡ CERAMIC CAPACITORS; CAPACITY IN PICOFARADS (PF) UNLESS NOTED. CR-CAPRISTOR.
 ⚡ TUBULAR CAPACITORS; CAPACITY IN MICROFARADS (MF).
 ⚡ RESISTORS IN OHMS (K=1000) AND 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
 ⚡ ALL CERAMICS 500V, ALL TUBULARS 400V UNLESS NOTED.
 T INDICATES TOP CORE, B INDICATES BOTTOM CORE IN DOUBLE TUNED TRANSFORMERS.

EMERSON Model 31T01, Chassis 120747
(Continued from page 32)

Gamble-Shogmo, Inc.

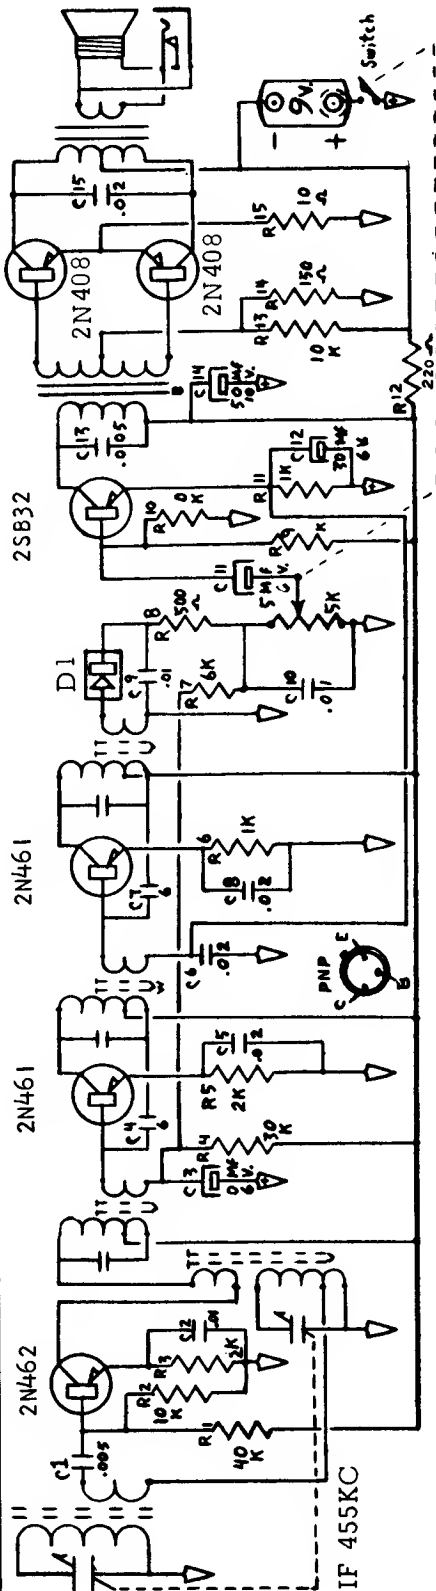


MODEL 60-9925A

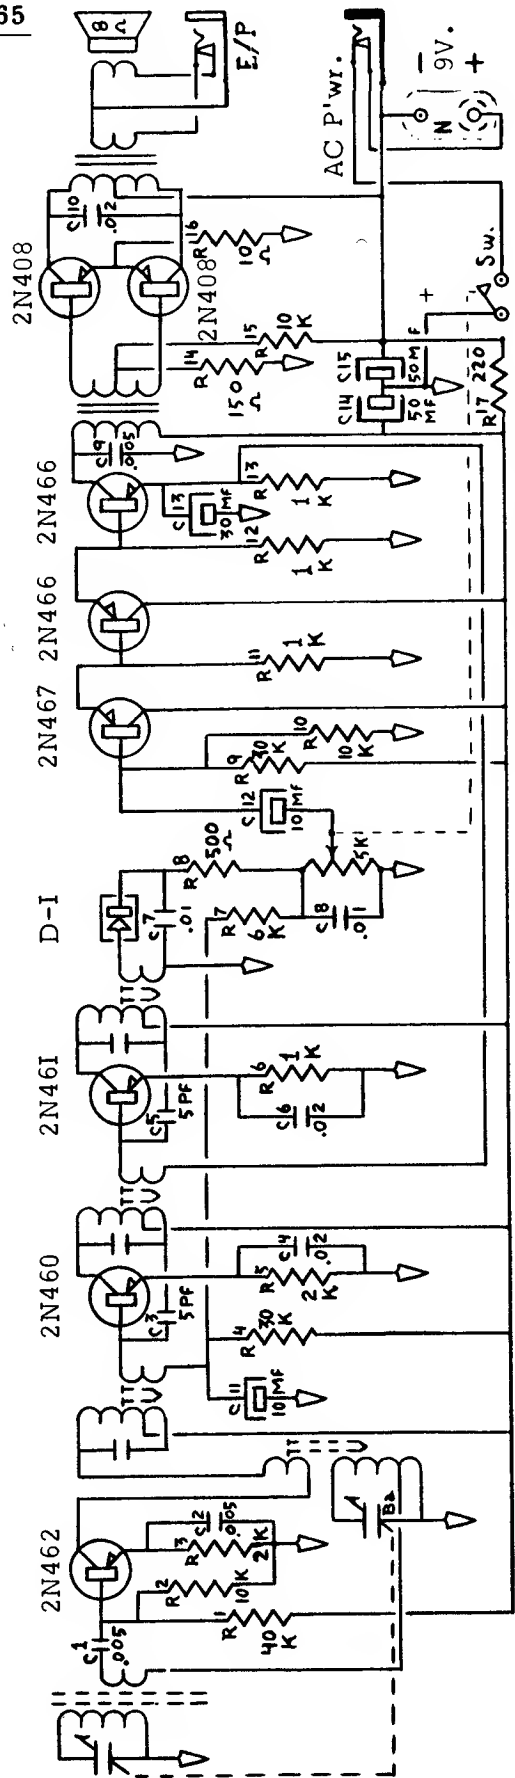

GENERAL ELECTRIC

Model A-600 Phono-Viewer

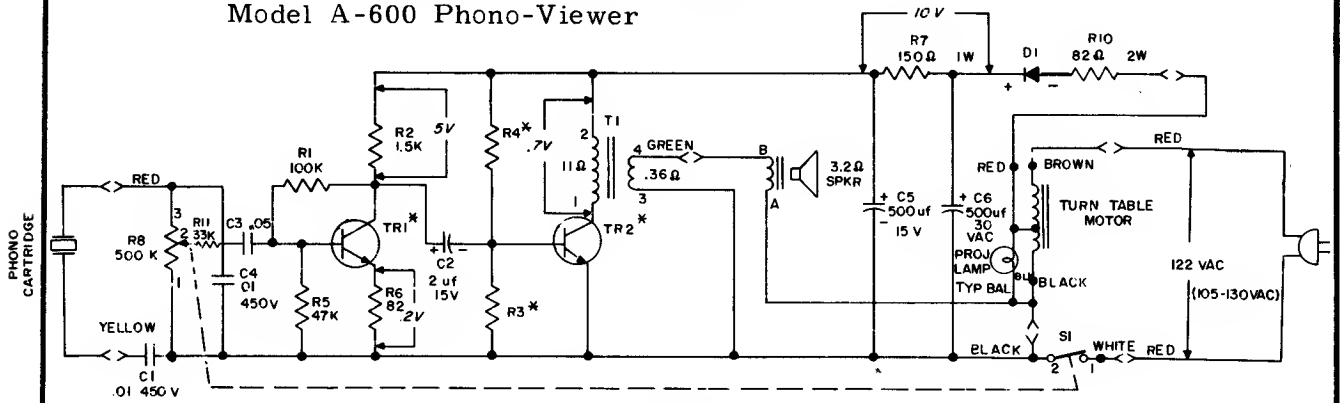


UNLESS OTHERWISE NOTED
CAPACITORS MORE THAN 1 = MMF
CAPACITORS LESS THAN 1 = MF
RESISTORS ARE 1/2 WATT, K=1000

SEE LIST FOR VALUES OF RESISTORS
R3 AND R4. (VALUES CHANGE WITH
TRANSISTOR RATINGS)



— < — = WIRE NUT CONNECTIONS

TAB ON TOP
OVER PIN 2





BOTTOM VIEW

TRANSISTOR
MOUNTING

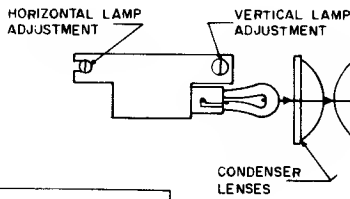

PICTORIAL DIAGRAM-
OPTICAL SYSTEM

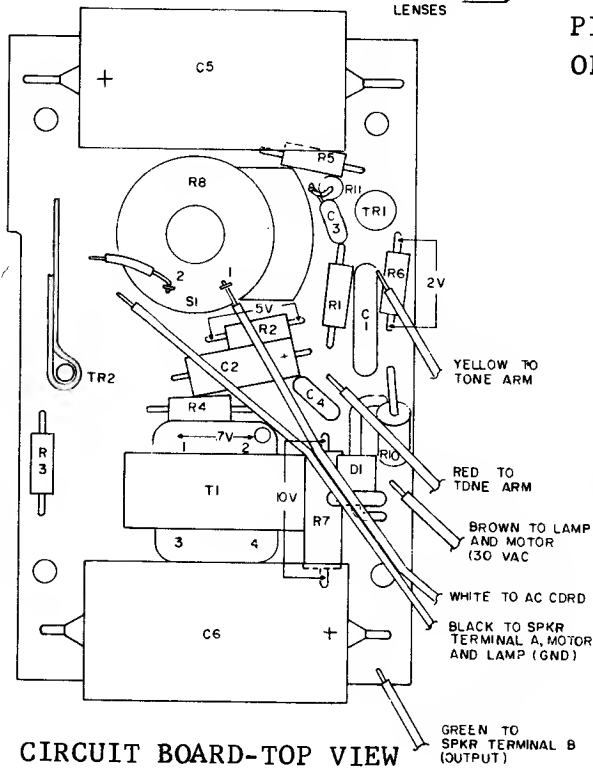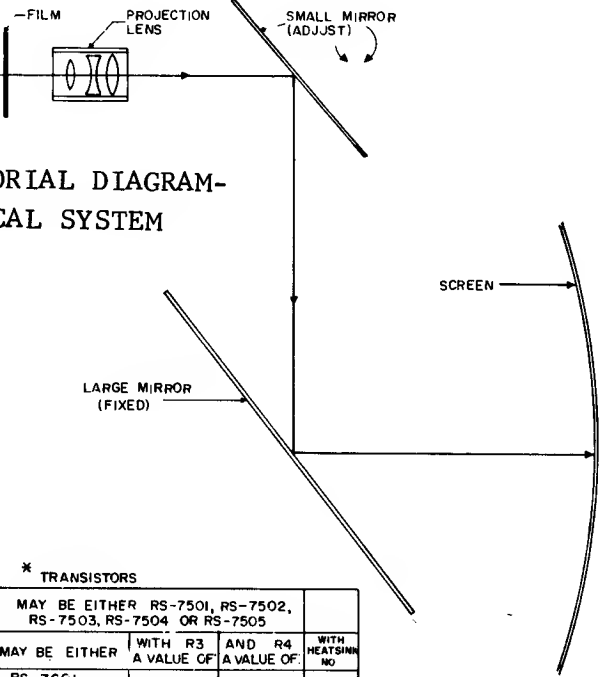


CIRCUIT BOARD-TOP VIEW

* TRANSISTORS



TR1	MAY BE EITHER RS-7501, RS-7502, RS-7503, RS-7504 OR RS-7505		
TR2	WITH R3 A VALUE OF	AND R4 A VALUE OF	WITH HEATSHIELD NO
RS-7601 OR	1K	10K	RS-6683
RS-7602 OR	1K	12K	RS-6683
RS-7603 OR	1K	12K	RS-6683
RS-7604 OR	1K	12K	RS-6683
RS-7605 OR	1K	12K	RS-6683
RS-7619 OR	1.5K	12K	
RS-7620	15K	12K	

GENERAL ELECTRIC

Models C403D, C505B, C506B

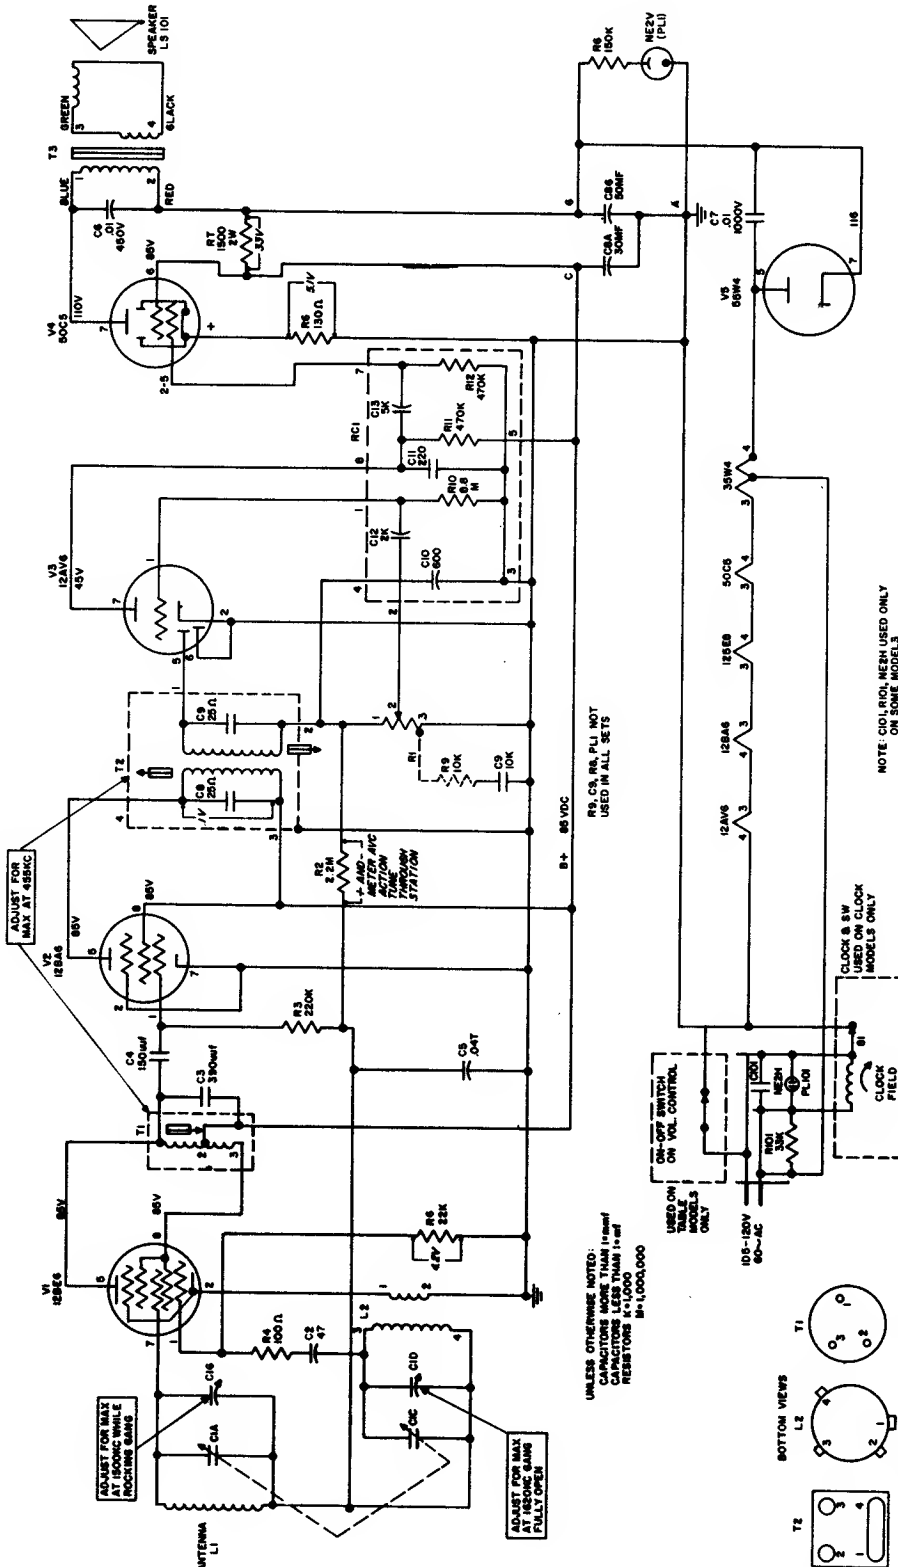


CATALOG NO.	SYMBOL	DESCRIPTION
RS-6437	R1	500 K Volume Control
POTENTIOMETER		
RS-6442	L1	Antenna
RS-6443	L2	Osc. Coil
RS-2149	T1	I.F. Transformer
RS-6439	T2	I.F. Transformer
RS-6441	T3	Output Transformer
RS-6441	CG1	Couplate
RS-6441	CG1	Audio Couplate
RS-6440	C1	Tuning Capacitor
RS-1785	C2	47 mmf. cap. N2200
	C3	390 mmf. MICA cap.
	C4	150 mmf. cap.
	C5	.05 mfd. cap.
	C6	.01 mfd. cap. 450V
RS-2060	C7	.01 mfd. cap. 1000V
	C8	75/30 mfd. 150V ELECTROLYTIC
CAPACITORS		
COILS AND TRANSFORMERS		

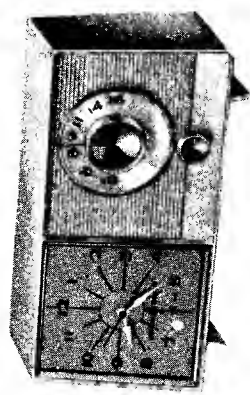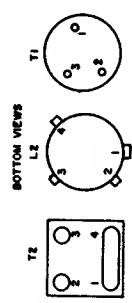

GENERAL ELECTRIC

Models P910AA, P911AA, P914AA, P945B, P950A, P960A, P995A, P996A
(For Table 2, Component Substitution Chart, see page 39, at right)

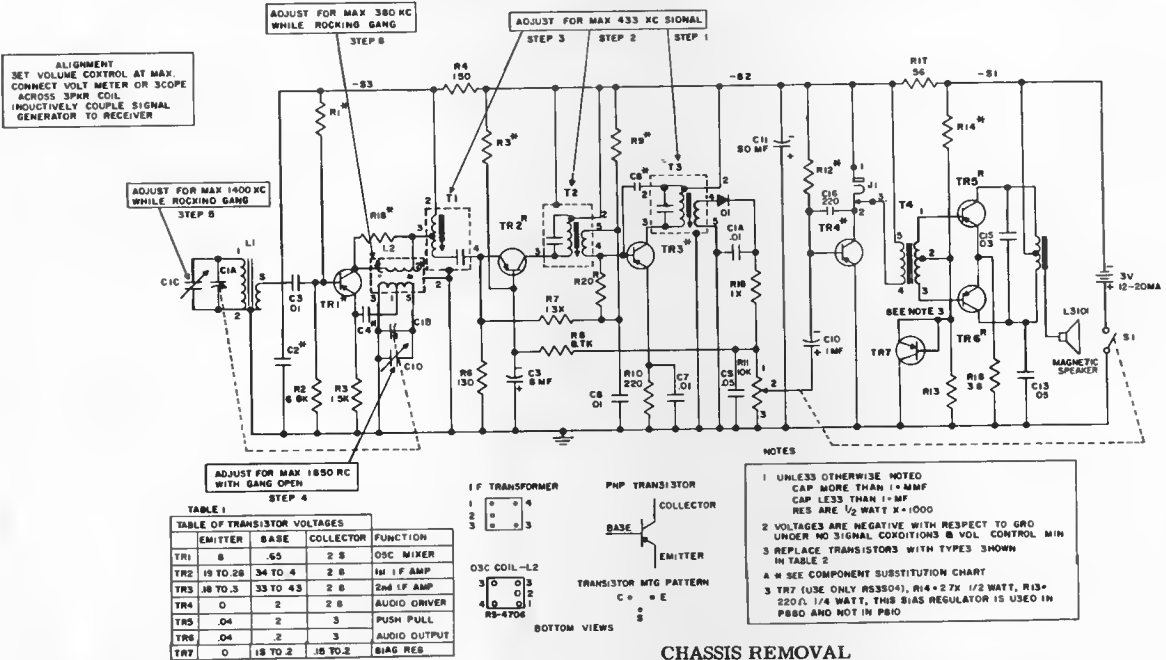


TROUBLESHOOTING

A check of battery condition and total current drain of the receiver should be made first. All current measurements are made at quiescence with the receiver turned on, volume control at minimum, tuning gang closed, and with no-signal conditions.

The total quiescent receiver current drain is 12 to 20 mills. This is measured by inserting a milliammeter in series with the batteries.

CHASSIS REMOVAL

- Remove the dial knob screw with a small Phillips screw driver and lift off the dial knob.
- Remove cabinet back by inserting a coin in the slot on the bottom of the set, giving it a slight twist.
- Remove two 1/8" Phillips-head screws located underneath the batteries.
- Remove 1/8" Phillips-head screw located next to the tuning capacitor.
- Slide out the circuit board in the direction of the cabinet bottom and lift out.

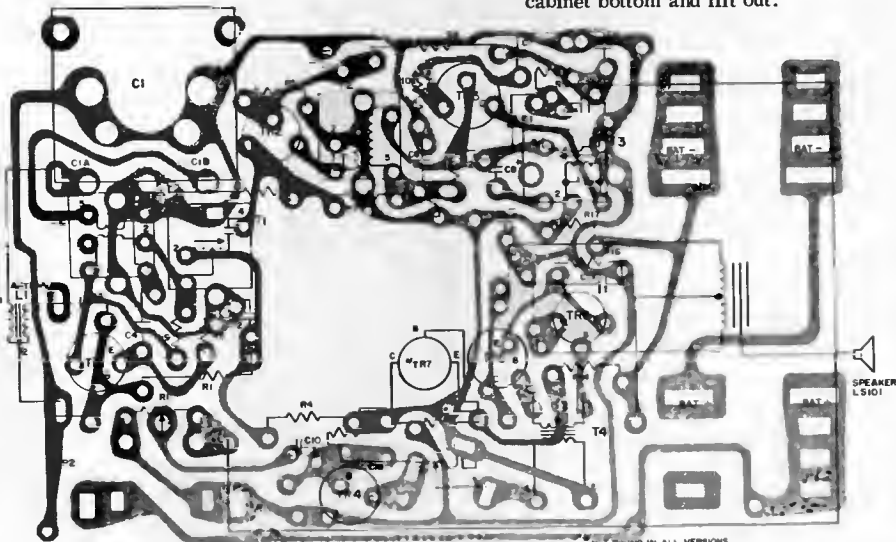

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION



Models P910AA, P911AA, P914AA, P945B, P950A, P960A, P995A, P996A


TABLE 2, COMPONENT SUBSTITUTION CHART

The following components may vary in different group versions of this model. Use it to determine the necessary changes required when substituting another component for the original one. When substituting from one group, all items listed as being in the new group must be used.

GROUP	TR1	TR2	TR3	TR4	TR5,6	R1	R5	R8	R9	R12	R14	R15	R19	R20	C2	C4	C8
1	RS-3868	RS-3862	RS-3863	RS-5531	RS-5734	18K	27K	8.2K	12K	100K	2.7K	220	8.2K	3.3K	.005	.005	omit
2	RS-3868	RS-3862	RS-3863	RS-5531	RS-5735	18K	27K	8.2K	12K	100K	2.7K	220	8.2K	3.3K	.005	.005	omit
3	RS-3868	RS-3862	RS-3863	RS-5531	RS-5736	18K	27K	8.2K	12K	100K	2.7K	220	8.2K	3.3K	.005	.005	omit
4	RS-3868	RS-3862	RS-3863	RS-5531	RS-5737	18K	27K	8.2K	12K	100K	2.7K	220	8.2K	3.3K	.005	.005	omit
5	RS-3868	RS-3862	RS-3863	RS-5532	RS-5734	13K	27K	8.2K	12K	120K	2.7K	220	8.2K	3.3K	.005	.005	omit
6	RS-3868	RS-3862	RS-3863	RS-5532	RS-5735	18K	27K	8.2K	12K	120K	2.7K	220	8.2K	3.3K	.005	.005	omit
7	RS-3868	RS-3862	RS-3863	RS-5532	RS-5736	18K	27K	8.2K	12K	120K	2.7K	220	8.2K	3.3K	.005	.005	omit
8	RS-3868	RS-3862	RS-3863	RS-5532	RS-5737	18K	27K	8.2K	12K	120K	2.7K	220	8.2K	3.3K	.005	.005	omit
9	RS-3868	RS-3862	RS-3863	RS-5533	RS-5731	18K	27K	8.2K	12K	180K	1.8K	150	8.2K	3.3K	.005	.005	omit
10	RS-3868	RS-3862	RS-3863	RS-5533	RS-5732	13K	27K	8.2K	12K	180K	1.8K	150	8.2K	3.3K	.005	.005	omit
11	RS-3868	RS-3862	RS-3863	RS-5533	RS-5733	18K	27K	8.2K	12K	180K	1.8K	150	8.2K	3.3K	.005	.005	omit
12	RS-3868	RS-3862	RS-3863	RS-5533	RS-5734	18K	27K	8.2K	12K	180K	2.7K	220	8.2K	3.3K	.005	.005	omit
13	RS-3868	RS-3862	RS-3863	RS-5533	RS-5735	18K	27K	8.2K	12K	180K	2.7K	220	8.2K	3.3K	.005	.005	omit
14	RS-3868	RS-3862	RS-3863	RS-5533	RS-5736	18K	27K	8.2K	12K	180K	2.7K	220	8.2K	3.3K	.005	.005	omit
15	RS-3868	RS-3862	RS-3863	RS-5533	RS-5737	18K	27K	8.2K	12K	180K	2.7K	220	8.2K	3.3K	.005	.005	omit
16	RS-3868	RS-3862	RS-3863	RS-5534	RS-5731	18K	27K	8.2K	12K	220K	1.8K	150	8.2K	3.3K	.005	.005	omit
17	RS-3868	RS-3862	RS-3863	RS-5534	RS-5732	18K	27K	8.2K	12K	220K	1.8K	150	8.2K	3.3K	.005	.005	omit
18	RS-3868	RS-3862	RS-3863	RS-5534	RS-5733	18K	27K	8.2K	12K	220K	1.8K	150	8.2K	3.3K	.005	.005	omit
19	RS-3868	RS-3862	RS-3863	RS-5535	RS-5731	18K	27K	8.2K	12K	270K	1.8K	150	8.2K	3.3K	.005	.005	omit
20	RS-3868	RS-3862	RS-3863	RS-5535	RS-5732	18K	27K	8.2K	12K	270K	1.8K	150	8.2K	3.3K	.005	.005	omit
21	RS-3868	RS-3862	RS-3863	RS-5535	RS-5733	18K	27K	8.2K	12K	270K	1.8K	150	8.2K	3.3K	.005	.005	omit
22	RS-5107	RS-5206	RS-5312	RS-5531	RS-5734	22K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.01	RS-3413
23	RS-5107	RS-5206	RS-5312	RS-5531	RS-5735	22K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.01	RS-3413
24	RS-5107	RS-5206	RS-5312	RS-5531	RS-5736	22K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.01	RS-3413
25	RS-5107	RS-5206	RS-5312	RS-5531	RS-5737	22K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.01	RS-3413
26	RS-5107	RS-5206	RS-5312	RS-5532	RS-5734	22K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.01	RS-3413
27	RS-5107	RS-5206	RS-5312	RS-5532	RS-5735	22K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.01	RS-3413
28	RS-5107	RS-5206	RS-5312	RS-5532	RS-5736	22K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.01	RS-3413
29	RS-5107	RS-5206	RS-5312	RS-5532	RS-5737	22K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.01	RS-3413
30	RS-5107	RS-5206	RS-5312	RS-5533	RS-5731	22K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.01	RS-3413
31	RS-5107	RS-5206	RS-5312	RS-5533	RS-5732	22K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.01	RS-3413
32	RS-5107	RS-5206	RS-5312	RS-5533	RS-5733	22K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.01	RS-3413
33	RS-5107	RS-5206	RS-5312	RS-5533	RS-5734	22K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.01	RS-3413
34	RS-5107	RS-5206	RS-5312	RS-5533	RS-5735	22K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.01	RS-3413
35	RS-5107	RS-5206	RS-5312	RS-5533	RS-5736	22K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.01	RS-3413
36	RS-5107	RS-5206	RS-5312	RS-5533	RS-5737	22K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.01	RS-3413
37	RS-5107	RS-5206	RS-5312	RS-5534	RS-5731	22K	47K	12K	18K	220K	1.8K	150	omit	omit	.01	.01	RS-3413
38	RS-5107	RS-5206	RS-5312	RS-5534	RS-5732	22K	47K	12K	18K	220K	1.8K	150	omit	omit	.01	.01	RS-3413
39	RS-5107	RS-5206	RS-5312	RS-5534	RS-5733	22K	47K	12K	18K	220K	1.8K	150	omit	omit	.01	.01	RS-3413
40	RS-5107	RS-5206	RS-5312	RS-5535	RS-5731	22K	47K	12K	18K	270K	1.8K	150	omit	omit	.01	.01	RS-3413
41	RS-5107	RS-5206	RS-5312	RS-5535	RS-5732	22K	47K	12K	18K	270K	1.8K	150	omit	omit	.01	.01	RS-3413
42	RS-5107	RS-5206	RS-5312	RS-5535	RS-5733	22K	47K	12K	18K	270K	1.8K	150	omit	omit	.01	.01	RS-3413
43																	
44																	
45	RS-5109	RS-5206	RS-5312	RS-5535	RS-5733	18K	47K	12K	18K	270K	1.8K	220	omit	omit	.01	.005	RS-3413
46	RS-5109	RS-5206	RS-5312	RS-5531	RS-5734	18K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.005	RS-3413
47	RS-5109	RS-5206	RS-5312	RS-5531	RS-5735	18K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.005	RS-3413
48	RS-5109	RS-5206	RS-5312	RS-5531	RS-5736	18K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.005	RS-3413
49	RS-5109	RS-5206	RS-5312	RS-5531	RS-5737	18K	47K	12K	18K	100K	2.7K	220	omit	omit	.01	.005	RS-3413
50	RS-5109	RS-5206	RS-5312	RS-5532	RS-5734	18K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.005	RS-3413
51	RS-5109	RS-5206	RS-5312	RS-5532	RS-5735	18K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.005	RS-3413
52	RS-5109	RS-5206	RS-5312	RS-5532	RS-5736	18K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.005	RS-3413
53	RS-5109	RS-5206	RS-5312	RS-5532	RS-5737	18K	47K	12K	18K	120K	2.7K	220	omit	omit	.01	.005	RS-3413
54	RS-5109	RS-5206	RS-5312	RS-5533	RS-5731	18K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.005	RS-3413
55	RS-5109	RS-5206	RS-5312	RS-5533	RS-5732	18K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.005	RS-3413
56	RS-5109	RS-5206	RS-5312	RS-5533	RS-5733	18K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.005	RS-3413
57	RS-5109	RS-5206	RS-5312	RS-5533	RS-5734	18K	47K	12K	18K	180K	1.8K	150	omit	omit	.01	.005	RS-3413
58	RS-5109	RS-5206	RS-5312	RS-5533	RS-5735	18K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.005	RS-3413
59	RS-5109	RS-5206	RS-5312	RS-5533	RS-5736	18K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.005	RS-3413
60	RS-5109	RS-5206	RS-5312	RS-5533	RS-5737	18K	47K	12K	18K	180K	2.7K	220	omit	omit	.01	.005	RS-3413
61	RS-5109	RS-5206	RS-5312	RS-5534	RS-5731	18K	47K	12K	18K	220K	1.8K	150	omit	omit	.01	.005	RS-3413
62	RS-5109	RS-5206	RS-5312	RS-5534	RS-5732	18K	47K	12K	18K	220K	1.8K	150	omit	omit	.01	.005	RS-3413
63	RS-5109	RS-5206	RS-5312	RS-5534	RS-5733	18K	47K	12K	18K	220K	1.8K	150	omit	omit	.01	.005	RS-3413
64	RS-5109	RS-5206	RS-5312	RS-5535	RS-5731	18K	47K	12K	18K	270K	1.8K	150	omit	omit	.01	.005	RS-3413
65	RS-5109	RS-5206	RS-5312	RS-5535	RS-5732	18K	47K	12K	18K	270K	1.8K	150	omit	omit	.01	.005	RS-3413
66	RS-5109	RS-5206	RS-5312	RS-5535	RS-5733	18K	47K	12K	18K	270K	1.8K	150	omit	omit	.01	.005	RS-3413

GENERAL ELECTRIC

MODEL P920A

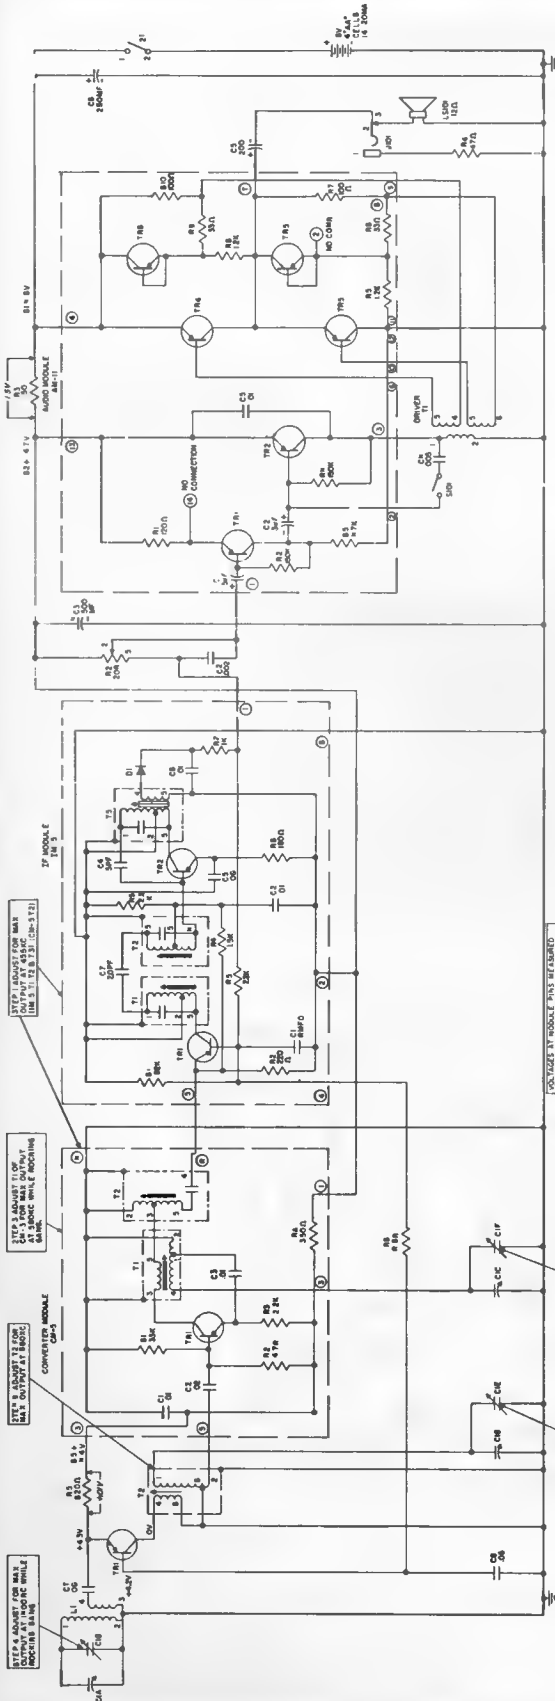


- NOTES
1. UNLESS OTHERWISE NOTED, CAPACITORS ARE IN MICROFARADS.
 2. VOLTAGES ARE POSITIVE WITH RESPECT TO GROUND UNLESS OTHERWISE NOTED.
 3. IMPEDANCES ARE IN OHMS UNLESS OTHERWISE NOTED.
 4. ALL PARTS LISTED IN THE PARTS LIST ARE GENERAL RADIO PARTS.
 5. USED.

VOLTAGE AT MODULE PINS (RELATIVE POSITIVE IN RESPECT TO GROUND)

MODULE	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9	PIN 10	PIN 11	PIN 12	PIN 13	PIN 14	PIN 15
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0



VOLTAGE AT MODULE PINS (RELATIVE POSITIVE IN RESPECT TO GROUND)

MODULE	PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7	PIN 8	PIN 9	PIN 10	PIN 11	PIN 12	PIN 13	PIN 14	PIN 15
1	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
2	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
3	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
4	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
6	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
8	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
9	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
10	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
12	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
13	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
14	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0




GENERAL ELECTRIC ELECTRIC

Models RP2020A, -B, RP2021, RP2100, RP2101, RP2108

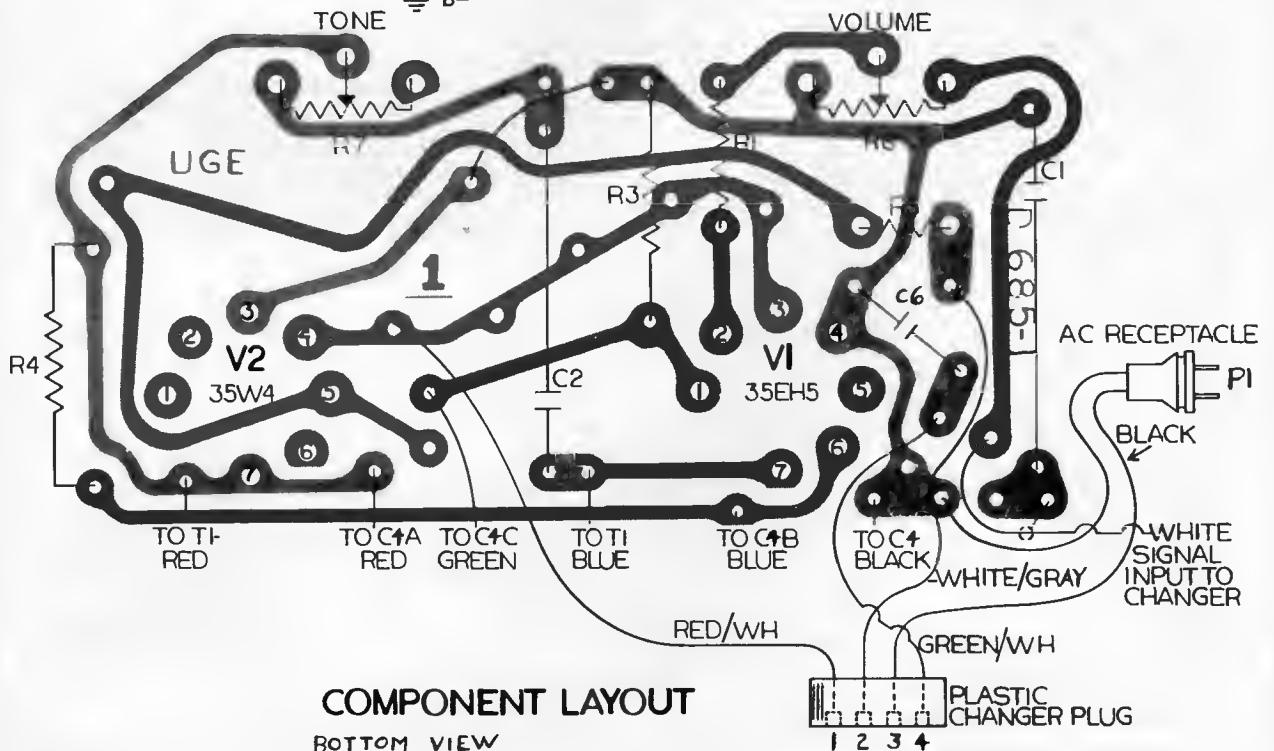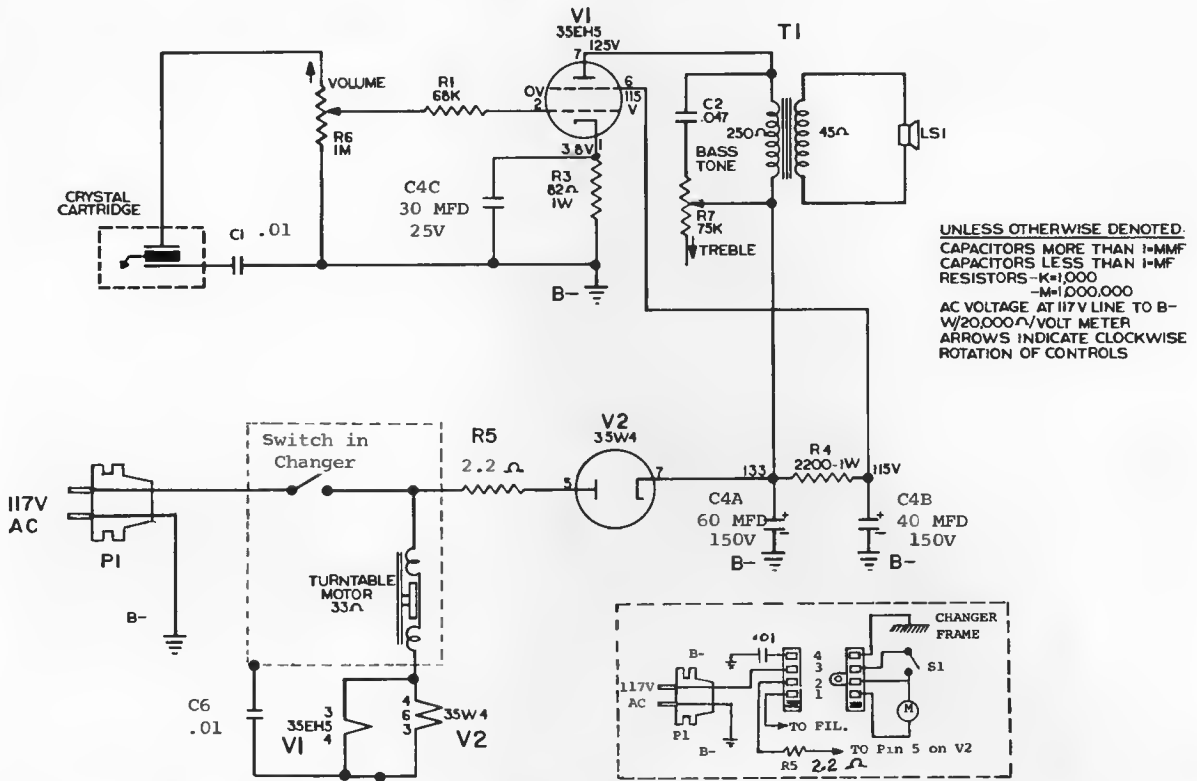

GENERAL ELECTRIC

Models RP2040A, RP2041A, RP2140, RP2142, RP2143

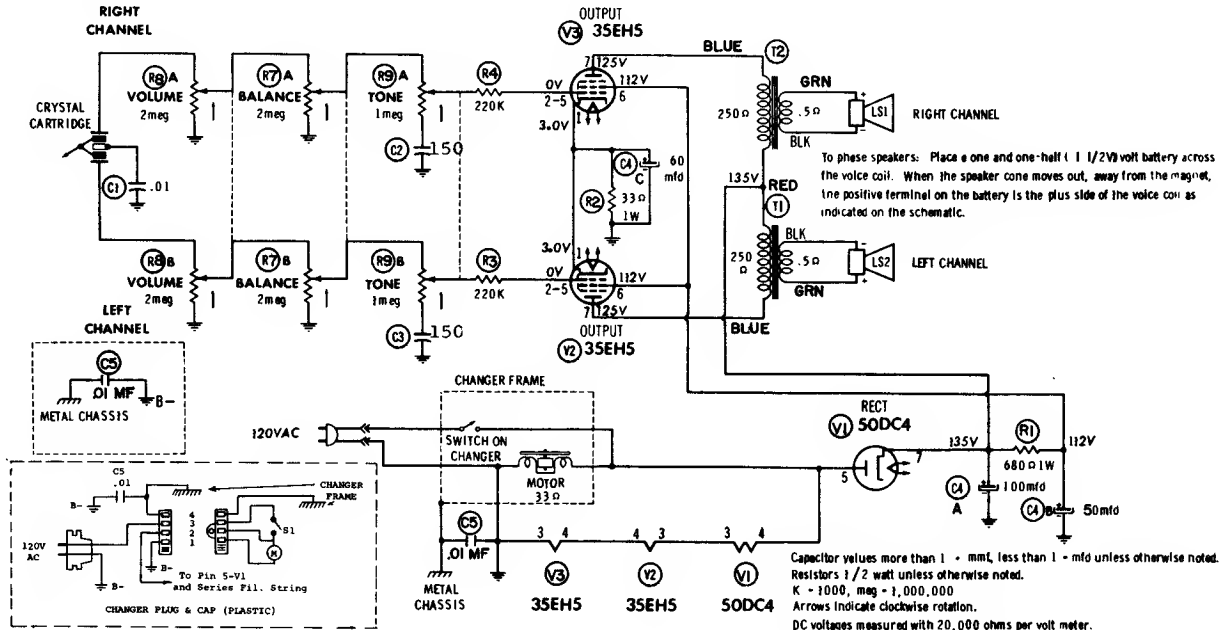


- TO REMOVE RECORD CHANGER**
1. Open record changer compartment and place record changer into playing position.
 2. Remove two (2) screws from the back cover and remove back cover.
 3. Place the shipping screw clips to a vertical position.
 4. Lift the record changer and tilt upwards until the plastic power plug and signal plugs are accessible. Remove plugs from record changer.
 5. Remove record changer from compartment.

- TO REMOVE AMPLIFIER**
1. Follow Steps 1 through 4 as described under "TO REMOVE RECORD CHANGER".
 2. Remove knobs from control panel.
 3. Free all wires from the metal lead dresser tabs.
 4. Slide the AC power receptacle from the bracket.

5. Remove tape and wire nuts connecting the speaker leads. Be sure to label speaker leads to assure proper phasing when re-assembling.
6. Remove screw holding electrolytic.
7. Remove all tubes from amplifier.
8. Remove nuts holding amplifier to cabinet and remove amplifier.

- TO REMOVE SPEAKER**
1. Unclasp speaker wing clamp and swing out speaker enclosure.
 2. Lift wing enclosure off hinges and place grille front on a soft cloth.
 3. Remove six (6) screws from speaker enclosure back and remove back.
 4. Unsolder and label speaker leads to assure proper phasing when reassembling.
 5. Remove nuts holding speaker to grille and remove speaker.

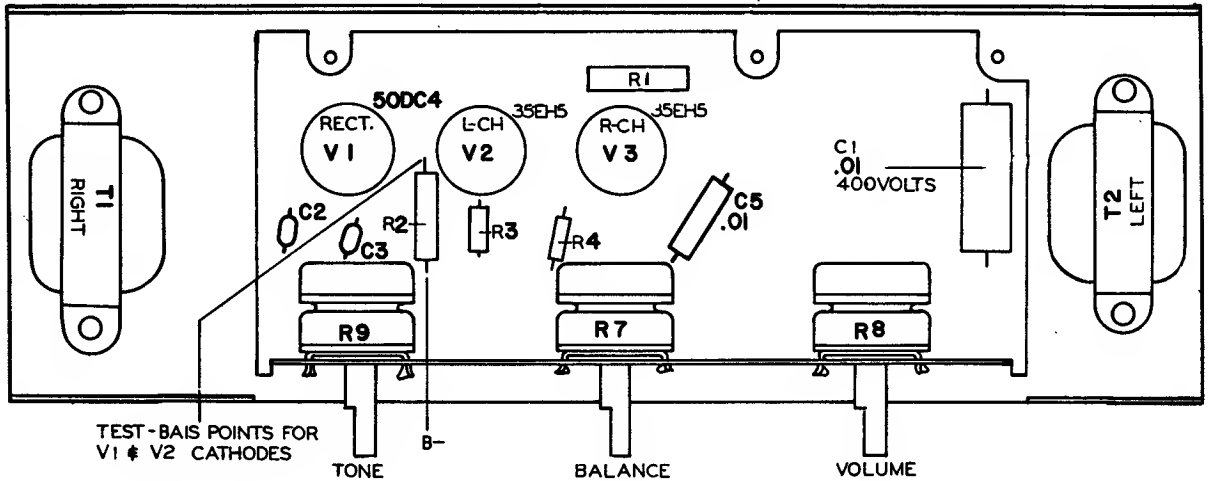




To phase speakers, place a 1.5-volt battery across the voice coil. When the speaker cone moves out 1/4 way from the magnet, the positive terminal of the battery is the plus (+) side of the voice coil as indicated on schematic.

RIGHT CHANNEL

LEFT CHANNEL

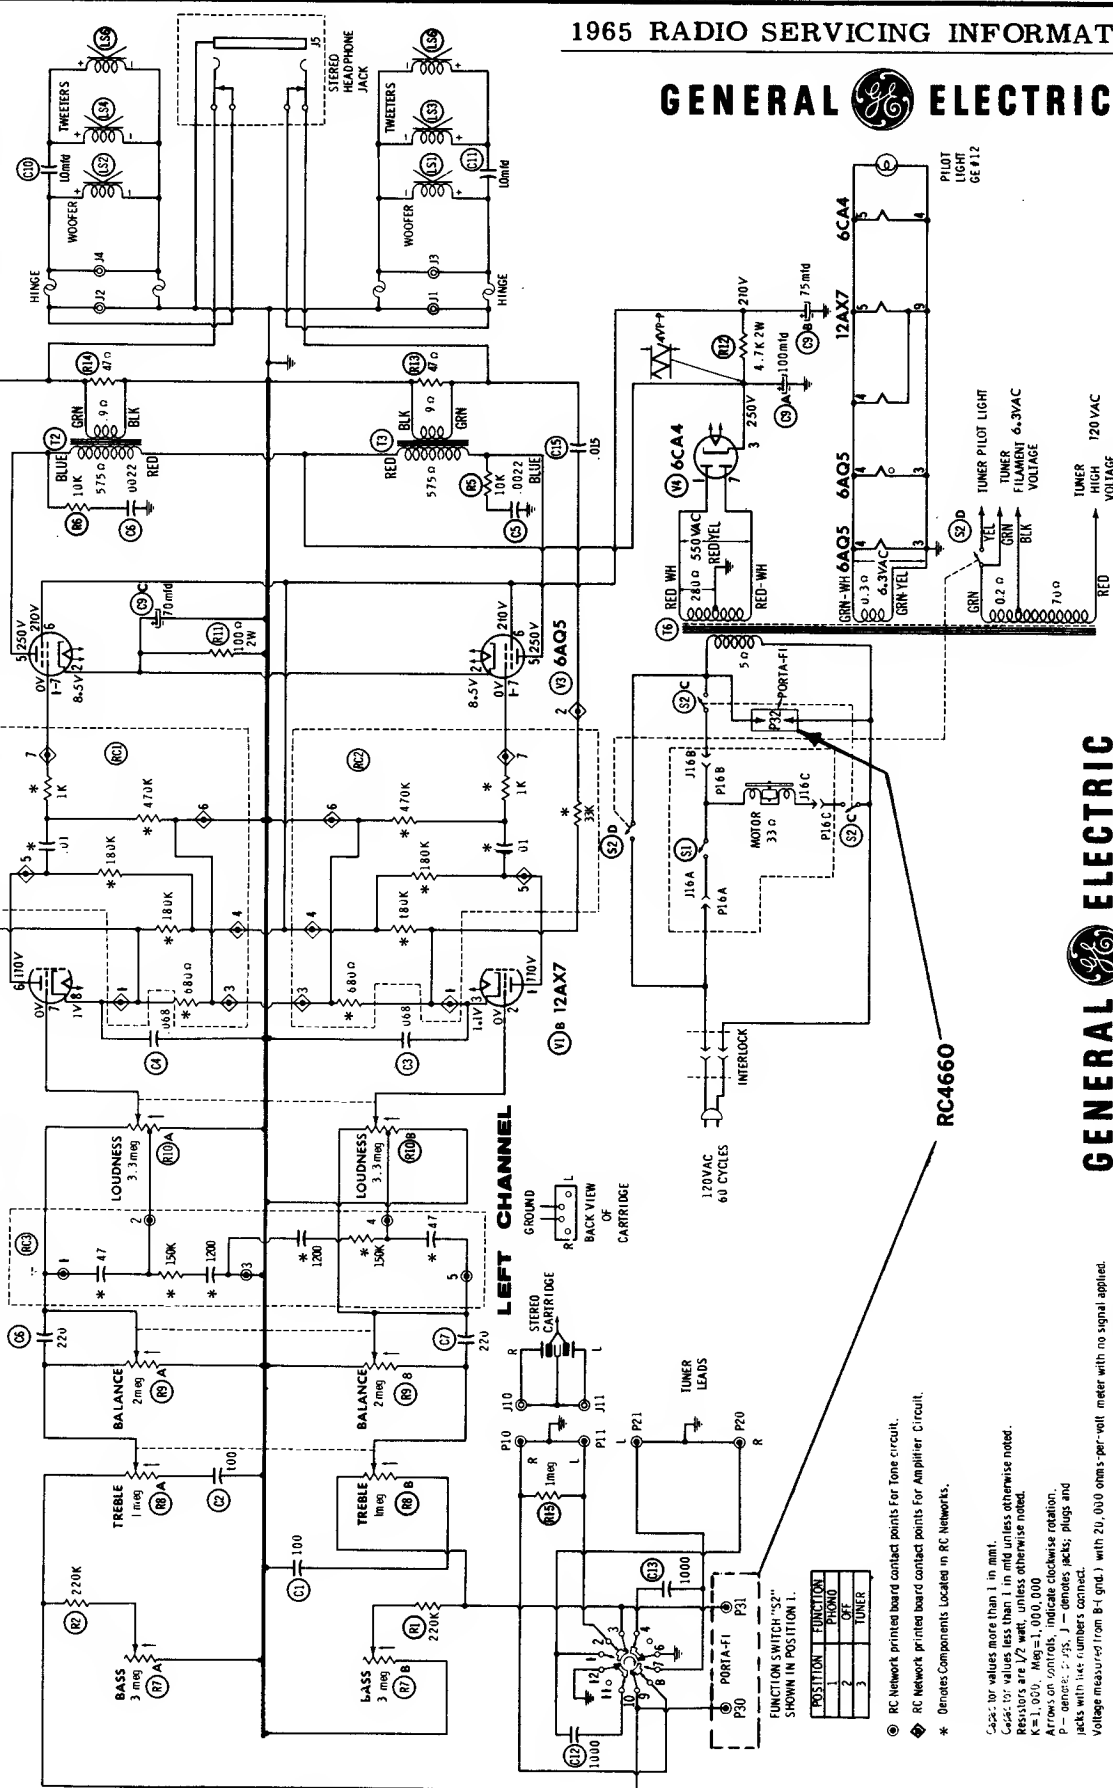

RC4660

- ⊙ RC Network printed board contact points for Tone circuit.
- ⊕ RC Network printed board contact points for Amplifier Circuit.
- * Denotes Components Located in RC Networks.

FUNCTION SWITCH "S2" SHOWN IN POSITION 1.

POSITION	FUNCTION
1	PHONO
2	OFF
3	TUNER

Case: for values more than 1 in. mm.
 Case: for values less than 1 in. mm unless otherwise noted.
 Resistors are 1/2 watt, unless otherwise noted.
 R=1,000; M=1,000,000
 P=100,000 ohms; indicate clockwise rotation.
 P=100,000 ohms; indicate counter-clockwise rotation.
 Plugs with like numbers connect.
 Voltage measured from B+ (grid 1) with 20,000 ohm-per-volt meter with no signal applied.

Models RC4640A, RC4641, RC4642, RC4650A, B, RC4651, RC4652, RC4660, RC4661, RC4662





GENERAL ELECTRIC


(Continued on pages 46-47)

TU222 AM-FM FM STEREO TUNERS

- TU222-1
- TU222-2
- TU222-3
- TU222-5
- TU222-8
- TU222-9
- TU222-10
- TU222-11
- TU222-12

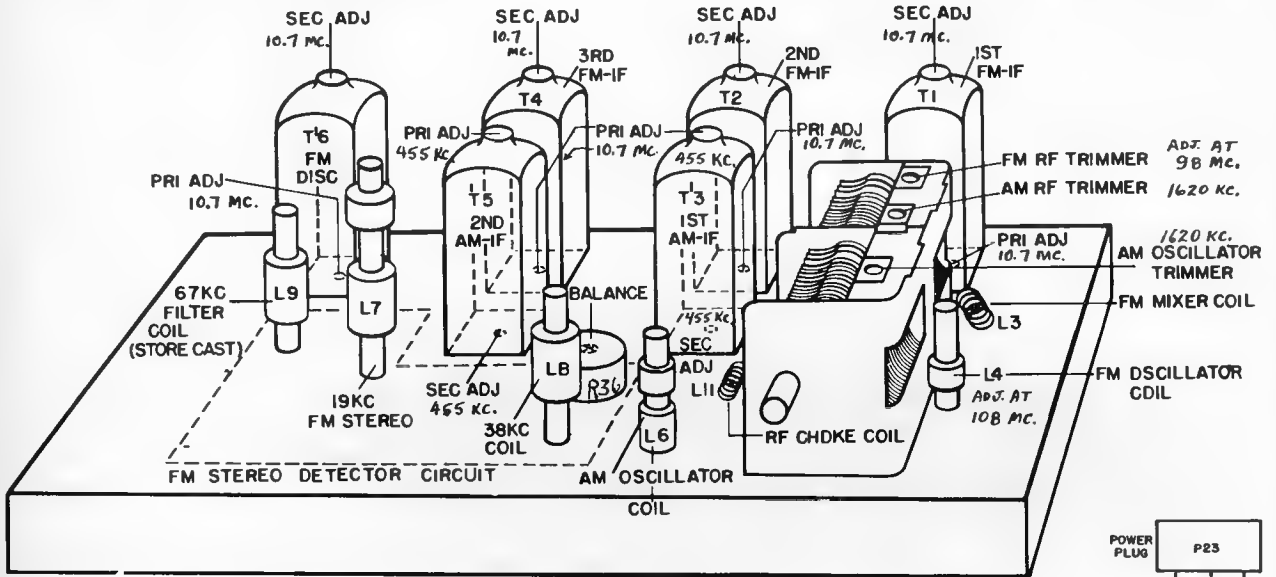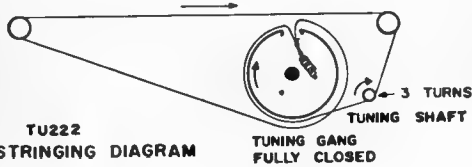


ALIGNMENT POINT LOCATIONS
TOP VIEW

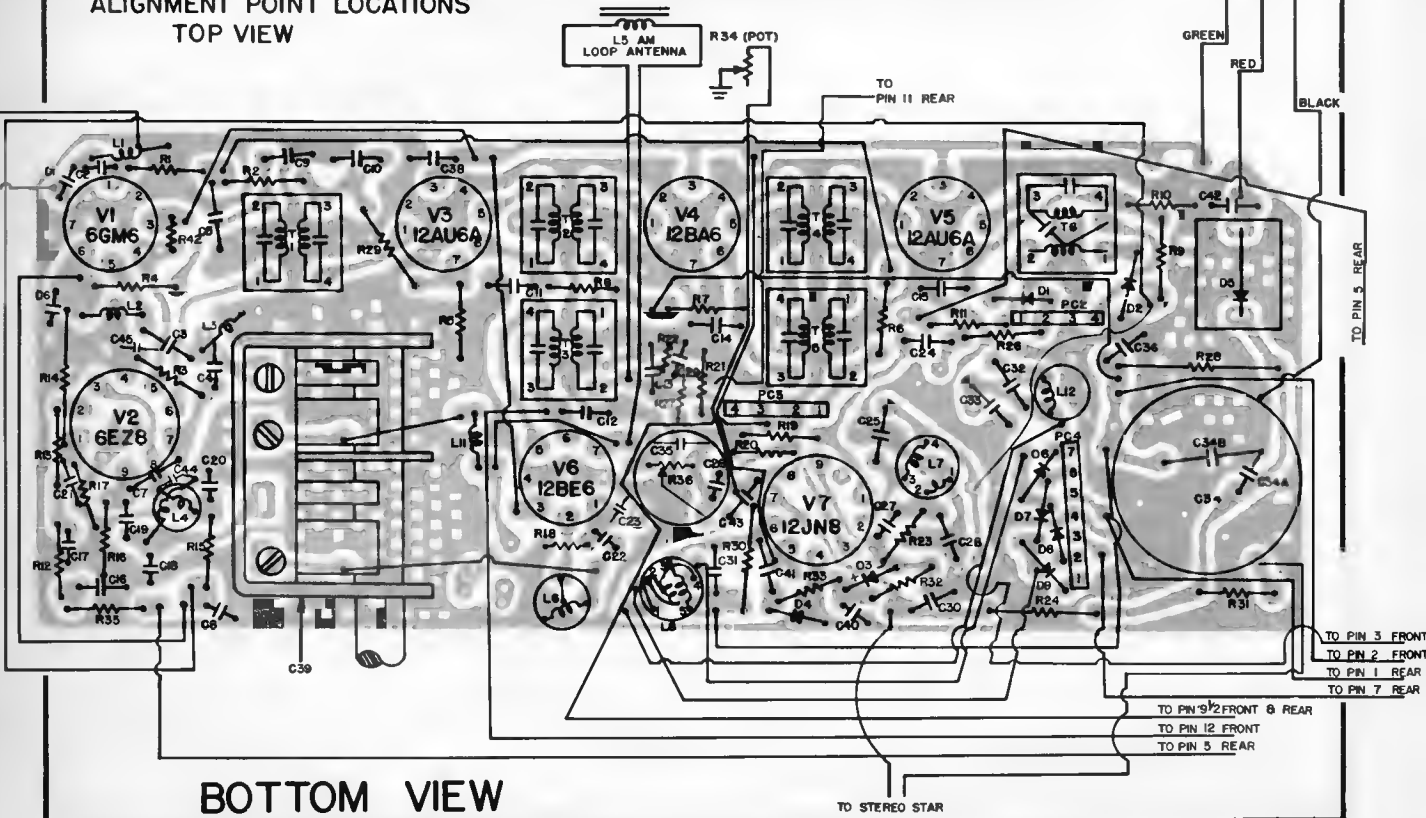

BOTTOM VIEW

GENERAL ELECTRIC TU222 AM-FM Tuner Diagram

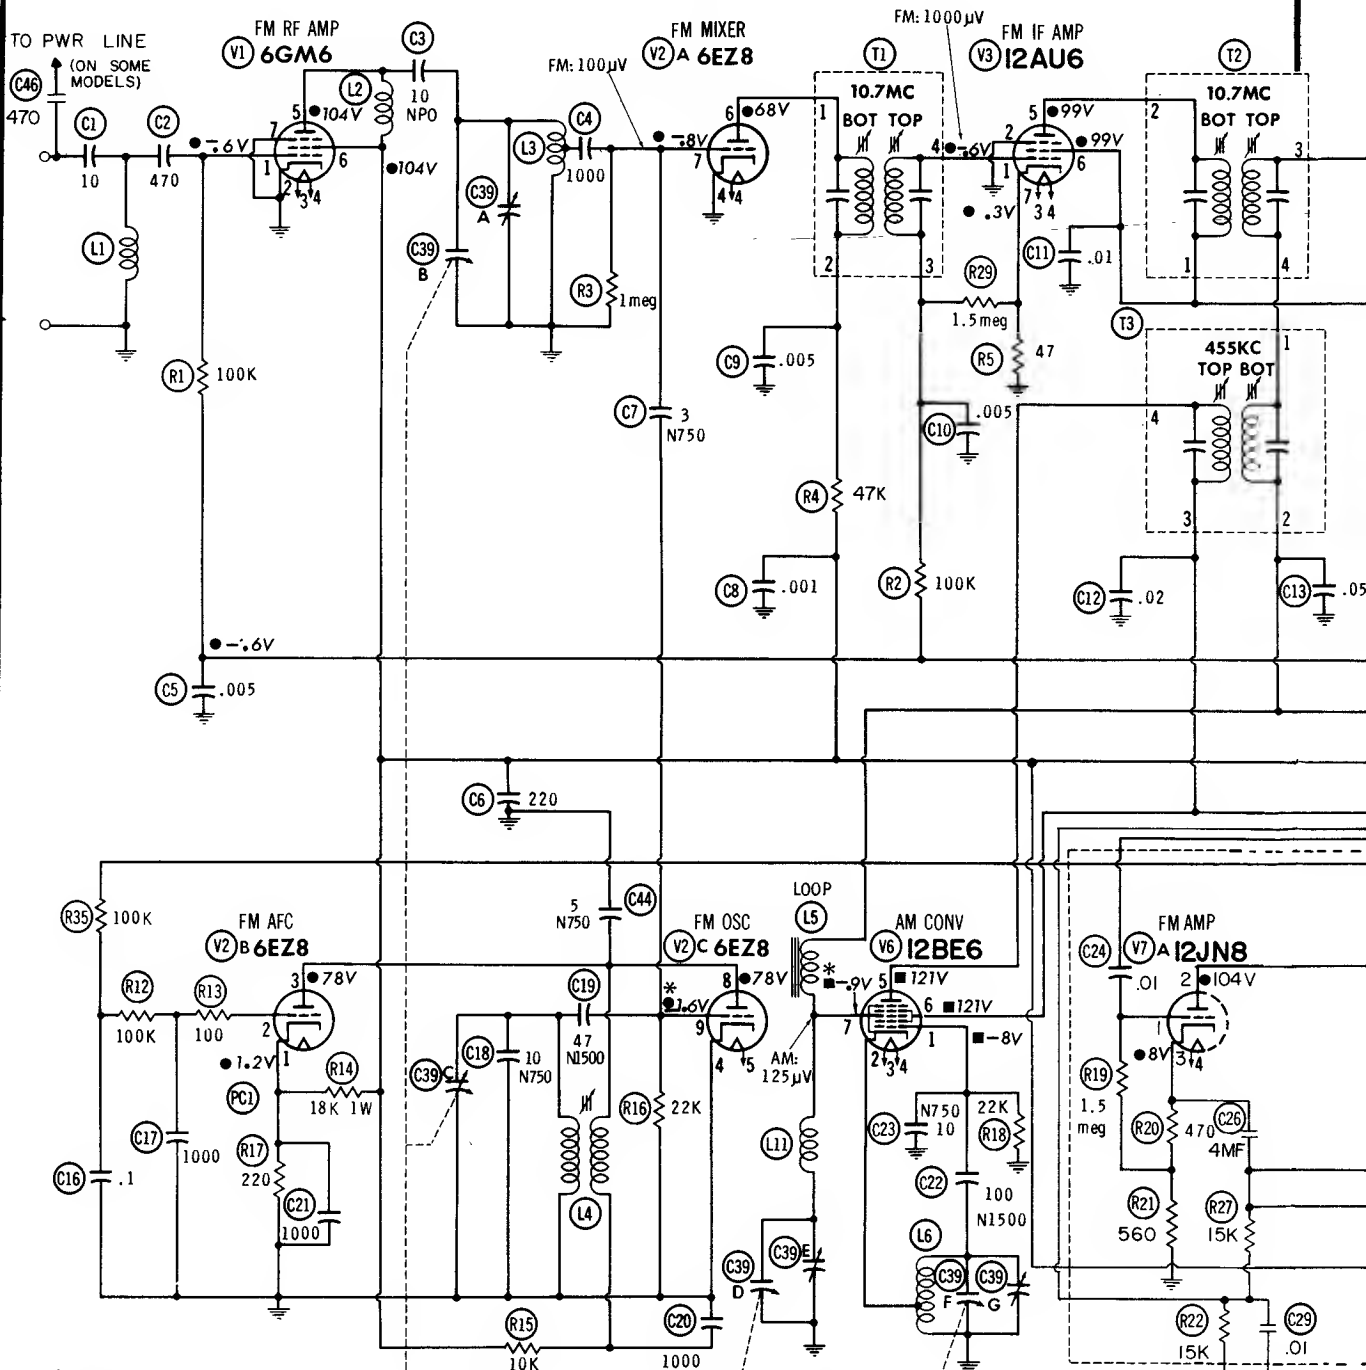

K=1,000, Meg=1,000,000

All DC voltages measured with respect to ground using a VTVM.

Line voltage maintained at 120 VAC.

● Taken in FM position, no signal applied.

■ Taken in AM position, no signal applied.

* Measured with 470KΩ resistor in series with DC probe of VTVM.

FM-IF sensitivities are μV inputs for -1VDC on limiter grid.


AM-IF sensitivities are μV input (30% mod., 400 cps) for 100mv output.

Capacitor values more than 1 in mfd.

Capacitor values less than 1 in mfd, unless otherwise noted.


Resistors are 10%, 1/2 watt, unless otherwise noted.

▲ Approximate value when receiving FM Stereo station.

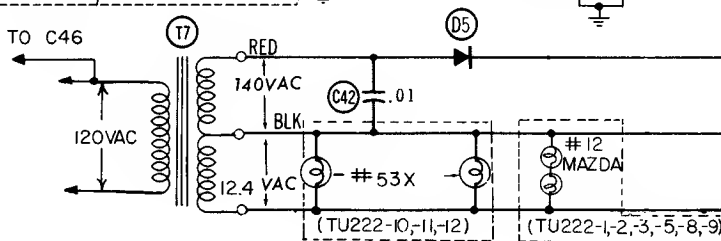


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

GENERAL ELECTRIC TU222 AM-FM Tuners, Continued

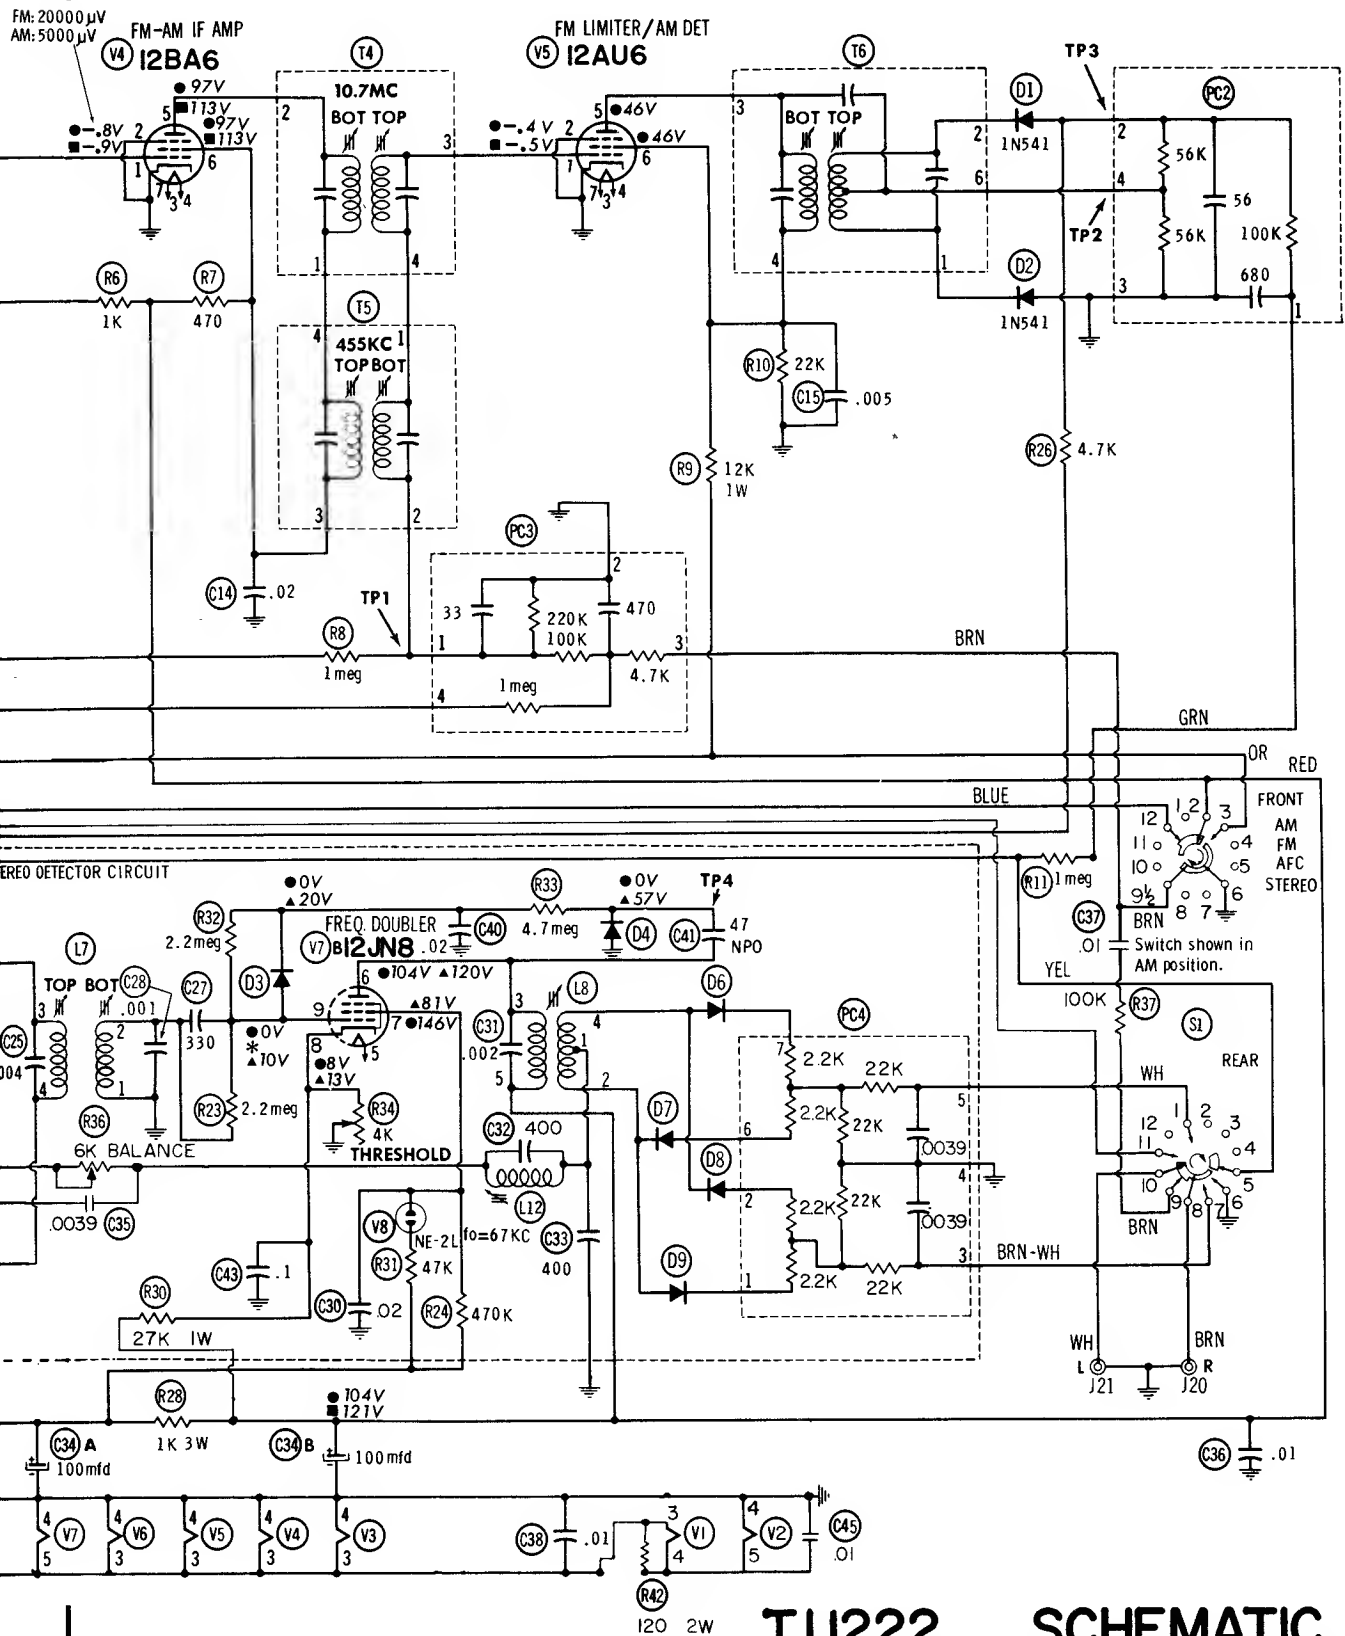

T7 AMPLIFIER SCHEMATIC

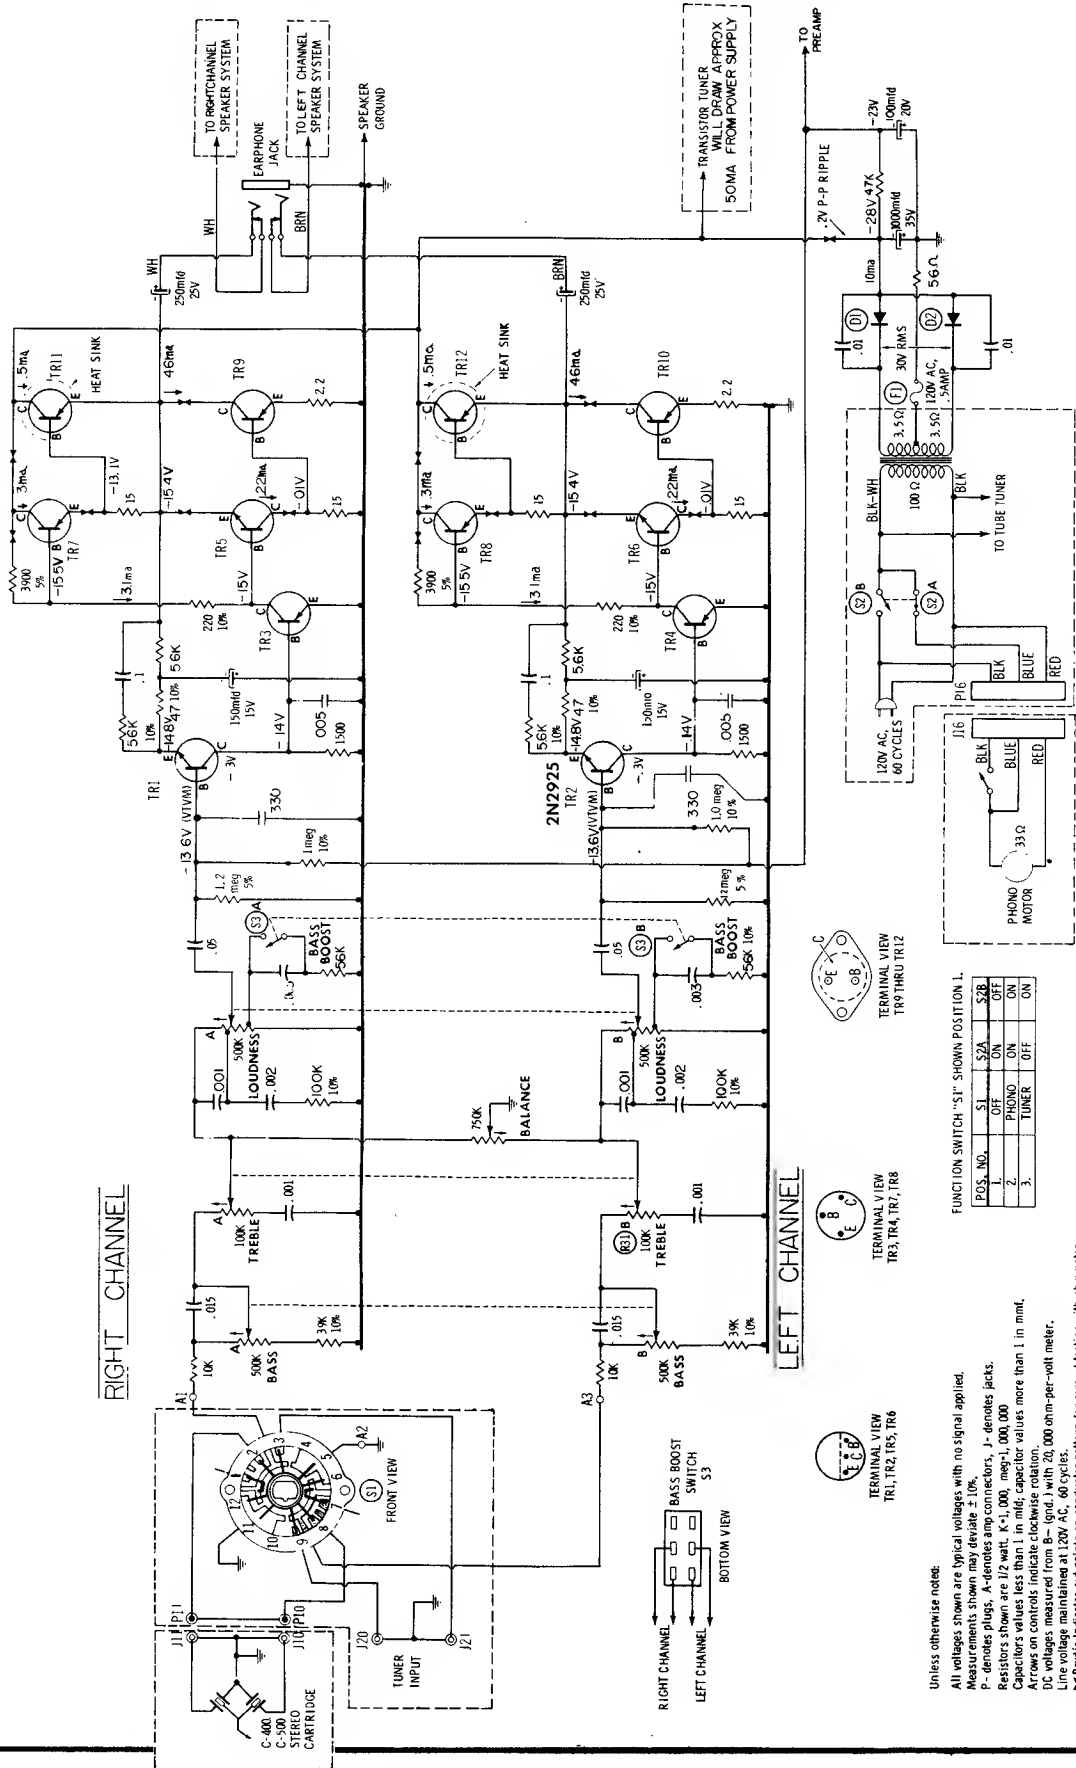


FUNCTION SWITCH "S" SHOWN POSITION 1.

POS. NO.	S1	S2A	S2B
1.	OFF	ON	OFF
2.	PHONO	ON	ON
3.	TUNER	OFF	ON

Unless otherwise noted:
 All voltages shown are typical voltages with no signal applied.
 Measurements shown may vary $\pm 10\%$.
 P - denotes plate; A - denotes amp. connectors; 1 - denotes jacks.
 Resistors shown are 1/2 watt. K=1,000; meg=1,000,000.
 Capacitors values less than 1 in. mfd. capacitor values more than 1 in. mfd.
 Arrows on controls indicate clockwise rotation.
 DC voltages measured from B - (gnd.) with 20,000 ohm-per-volt meter.
 Line voltage maintained at 120V AC, 60 cycles.
 Bowtie indicates cut points on conductor pattern for circuit testing with ohmmeter.


Hitachi, Ltd.

MODEL TH-600

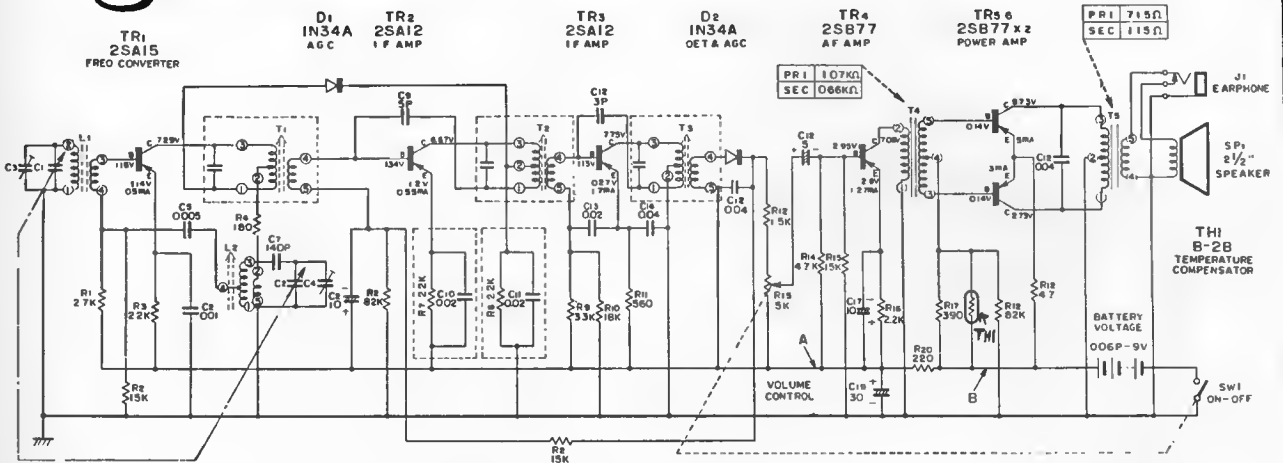


I. F. 455 KC.

The printed circuit board may be removed after removing the back cover and two mounting screws of the printed circuit board shown in Fig.

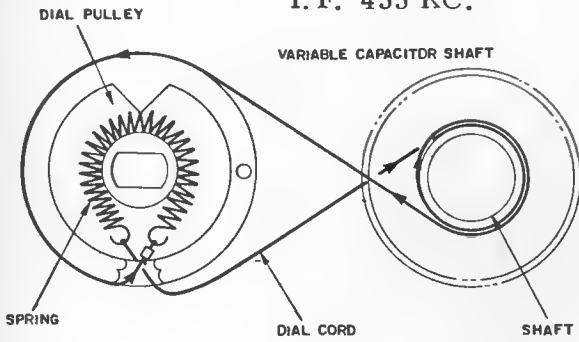


PRINTED CIRCUIT BOARD HOLDING SCREWS

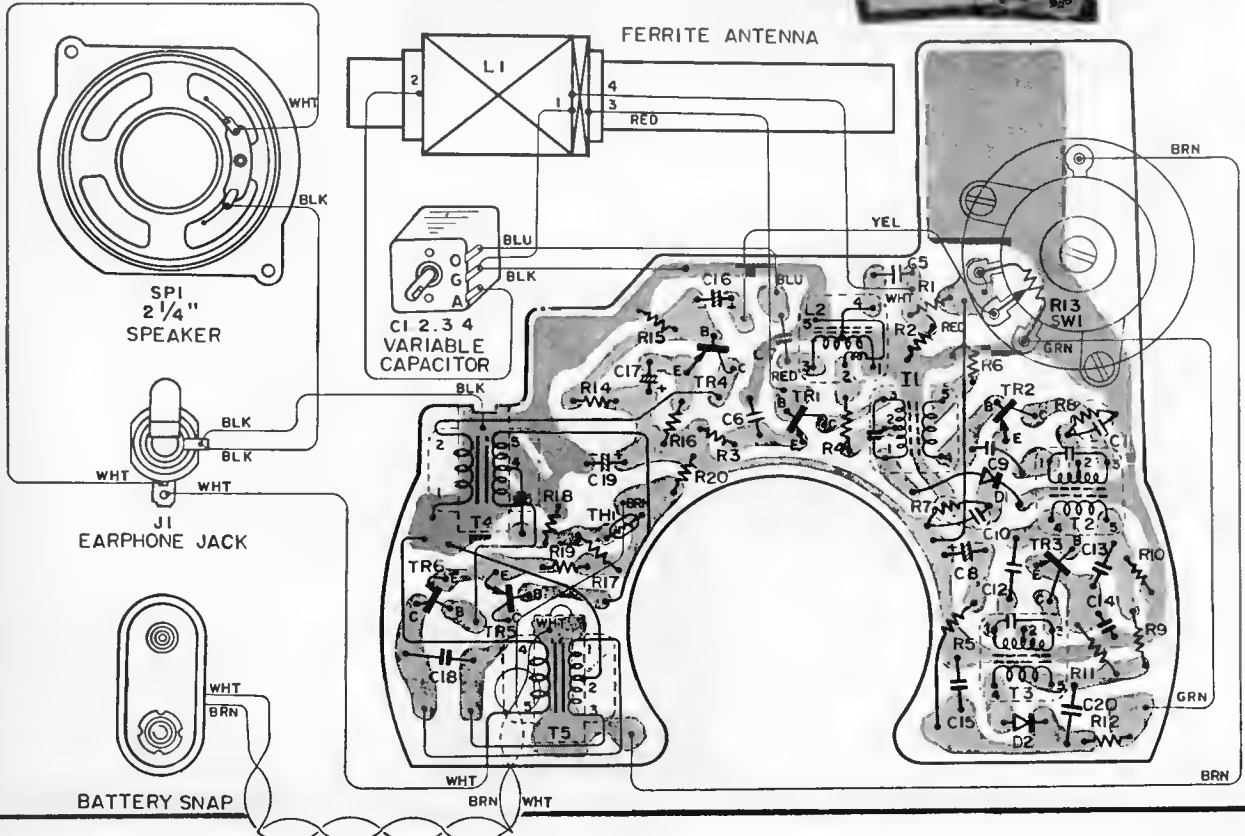

Hitachi, Ltd.



MODEL TH-812

(Continued on next page at right)

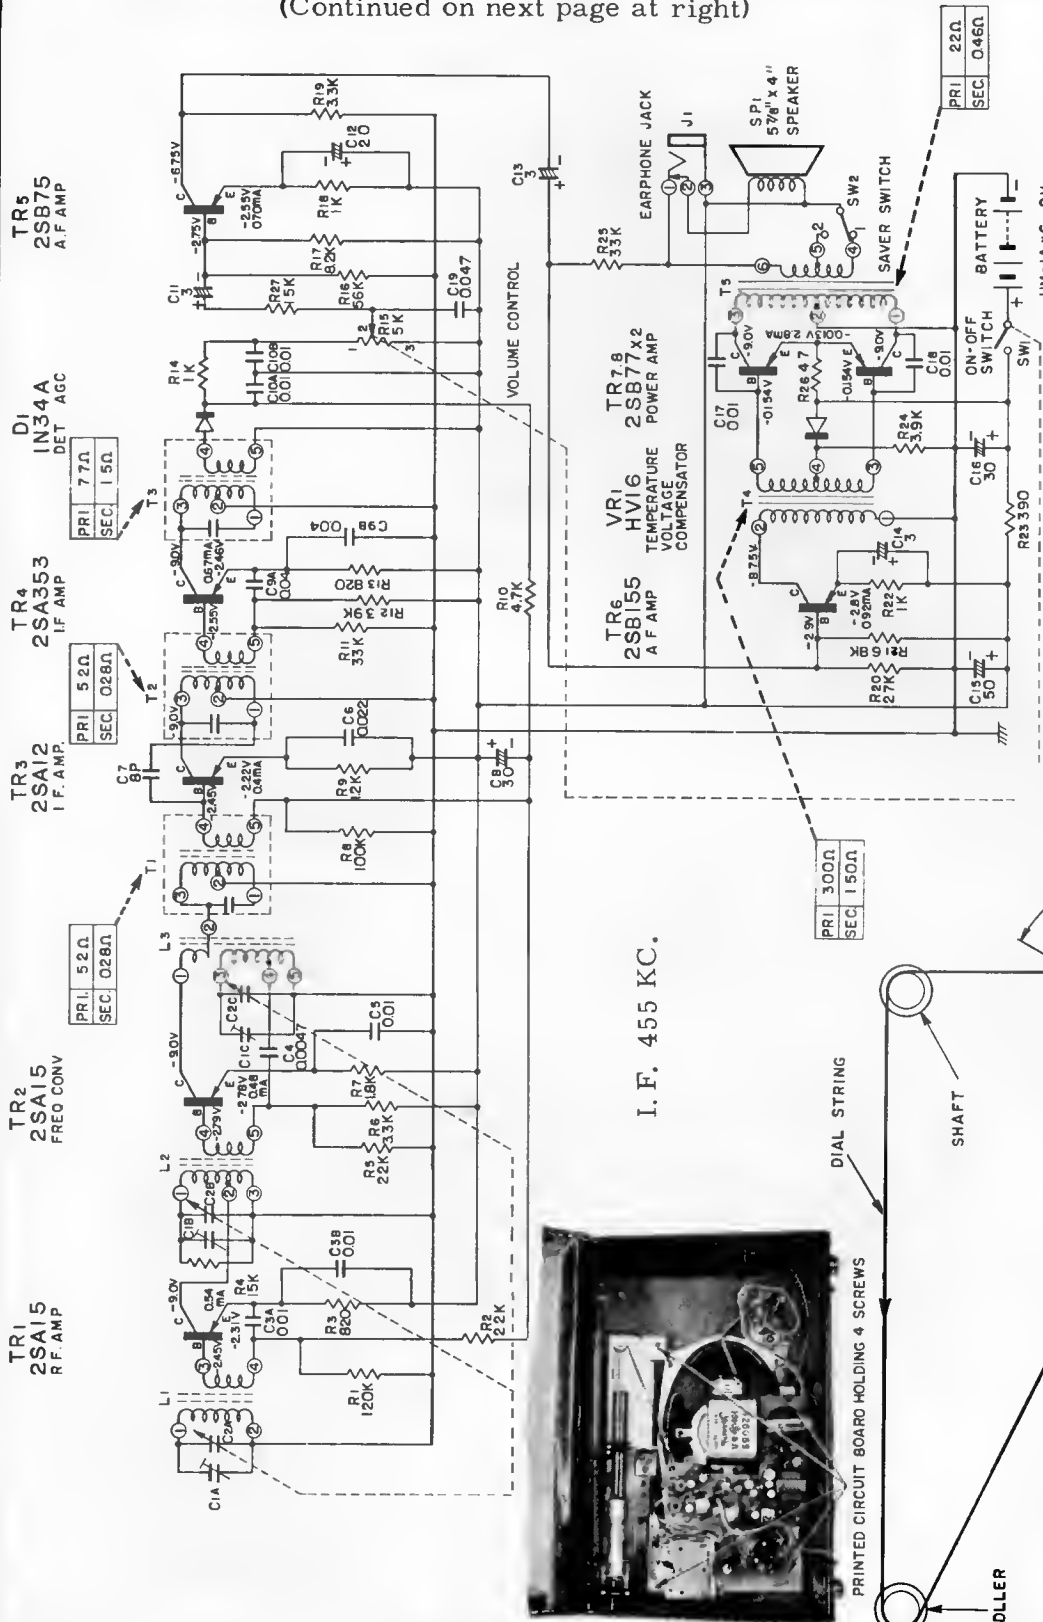


CIRCUIT DIAGRAM (TH-812)

- NOTES:
1. Voltage and current values are those of no signal time.
 2. Resistance unit is Ω, unit of capacity is either μF or F.

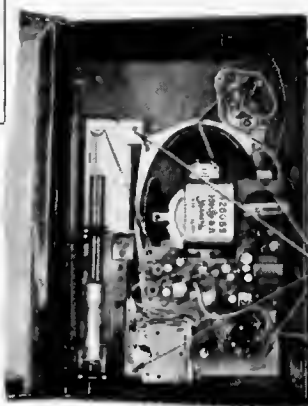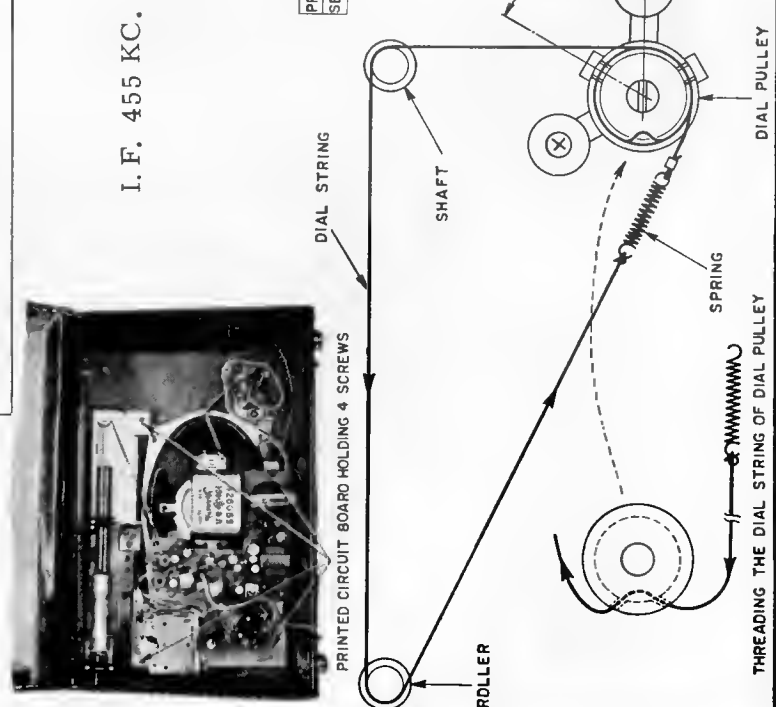

HITACHI Model TH-812, Continued from page at left.

BOARD DIAGRAM

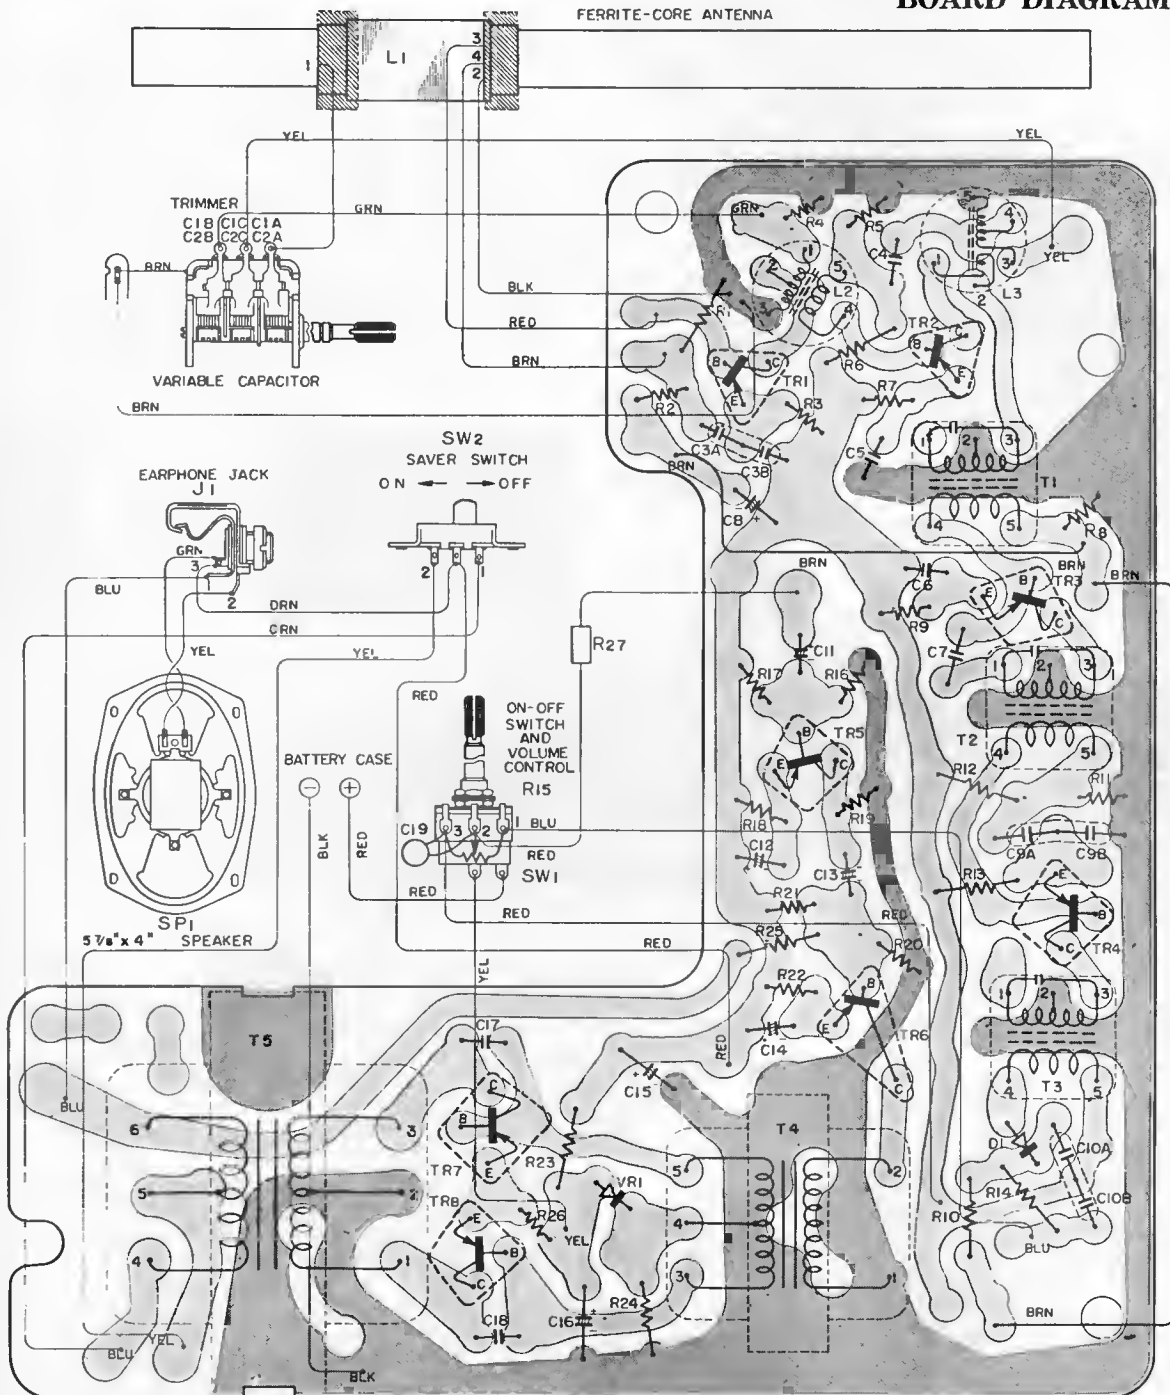




Signal tracing by injection of a signal from a signal generator is recommended as test procedure. The signal generator should be connected in series with a capacitor to avoid shorting out bias voltages. Of the transistors used in this receiver, the BASE is the signal input terminal (corresponding to signal grid of tubes), the COLLECTOR is the signal output terminal (corresponding to plate of tubes), and the EMITTER is the common terminal (corresponding to cathode of tubes),

The output circuit used in this receiver is of "Class-B" type. In "Class-B" output, the battery current increases greatly with increased signal input to the "Class-B" transistors.

Extreme care should be taken to avoid accidental shorting of transistor elements to circuit ground. This is especially true of the output transistors; if either BASE terminal is accidentally grounded for a few seconds, the output transistors will be permanently damaged.



Hitachi.Ltd.

MODEL TH-848

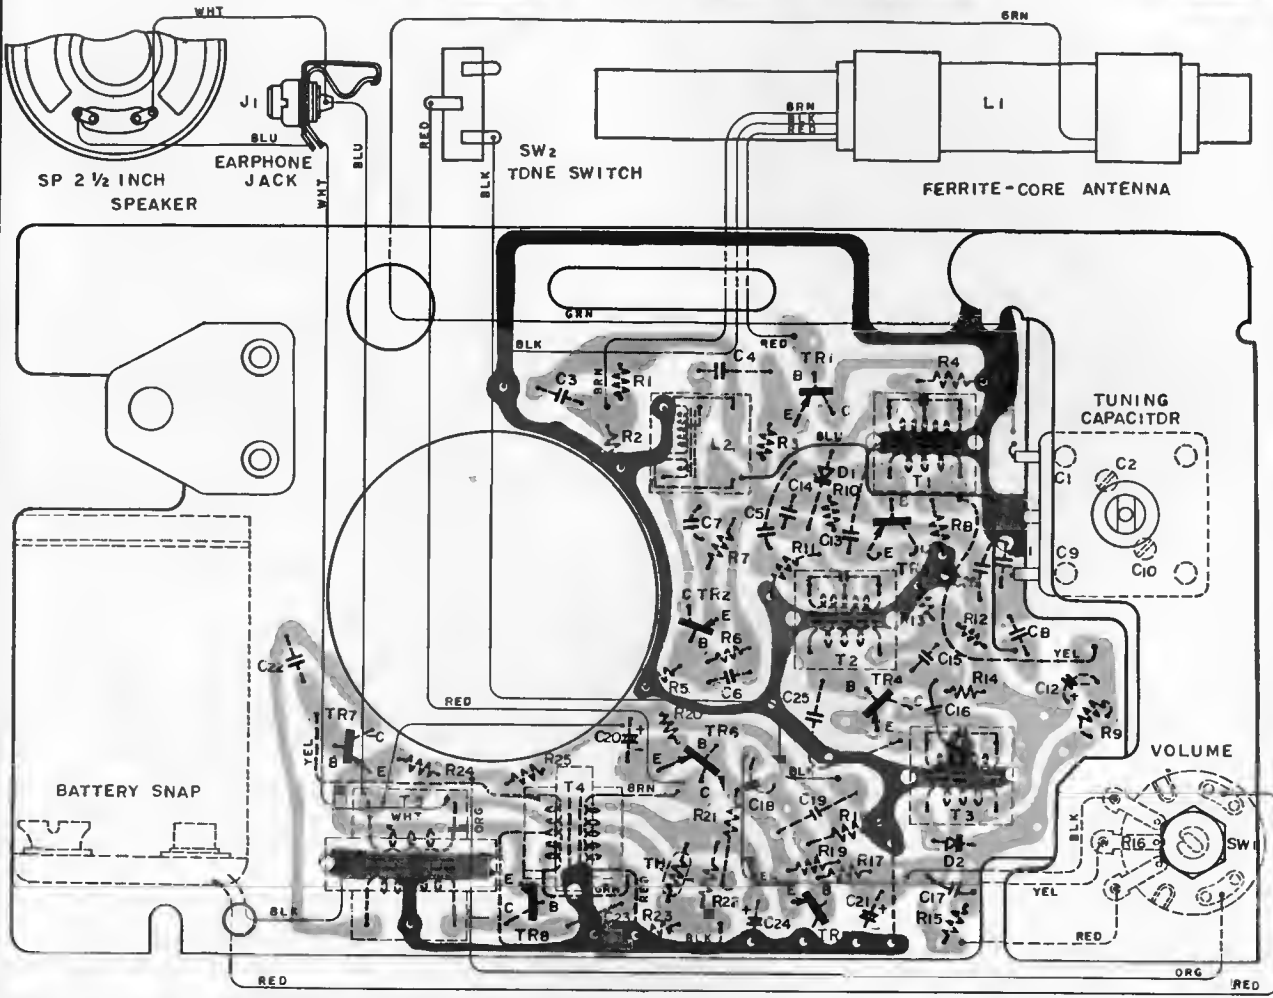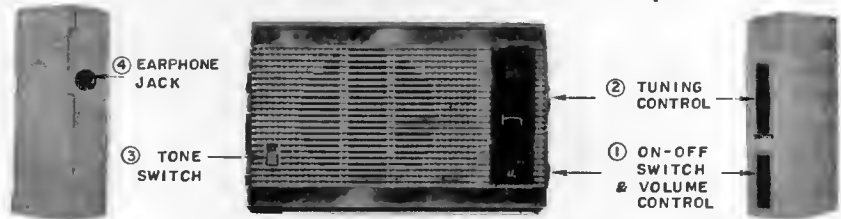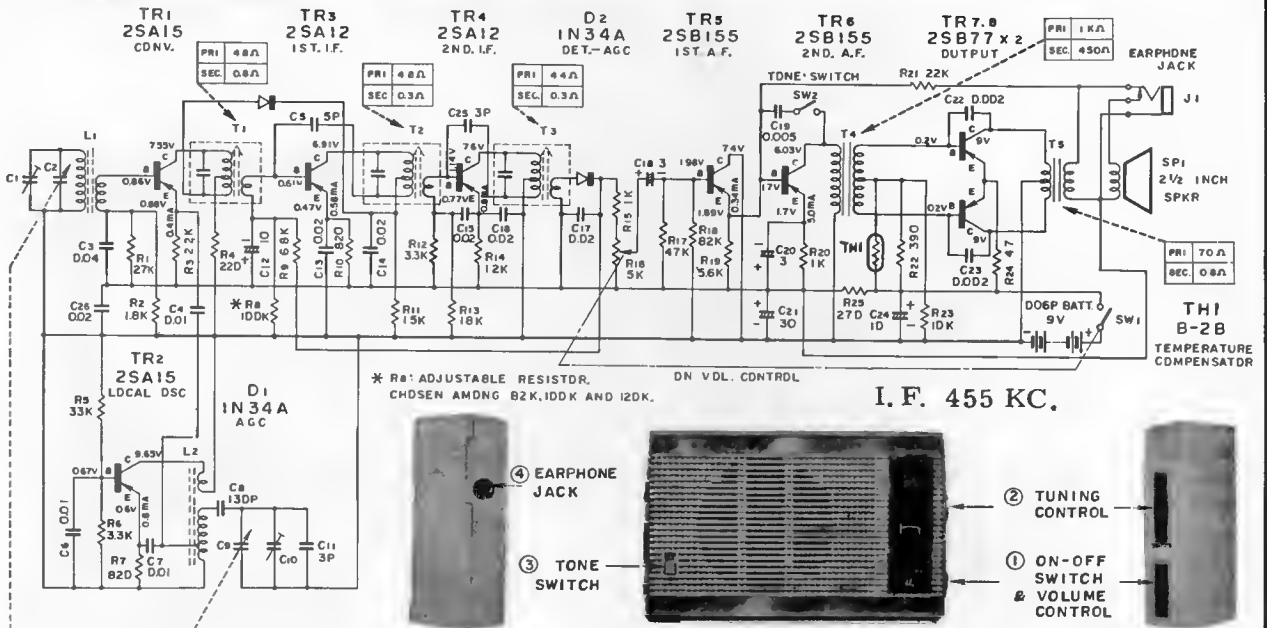

Magnavox


2AM-70 TRANSISTOR PORTABLE RADIO

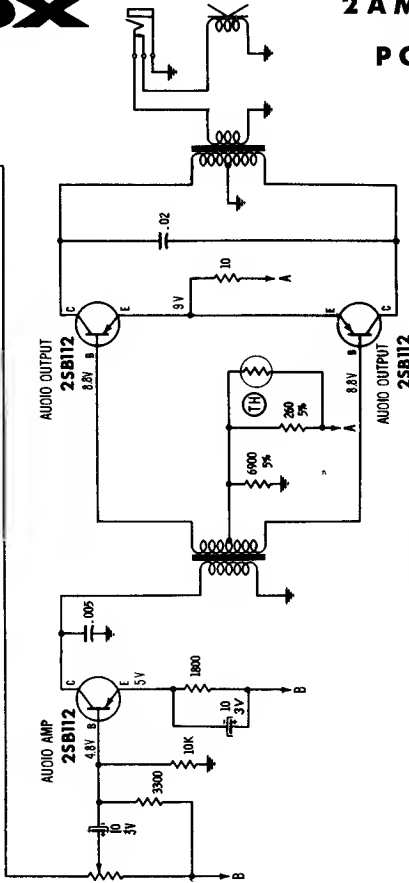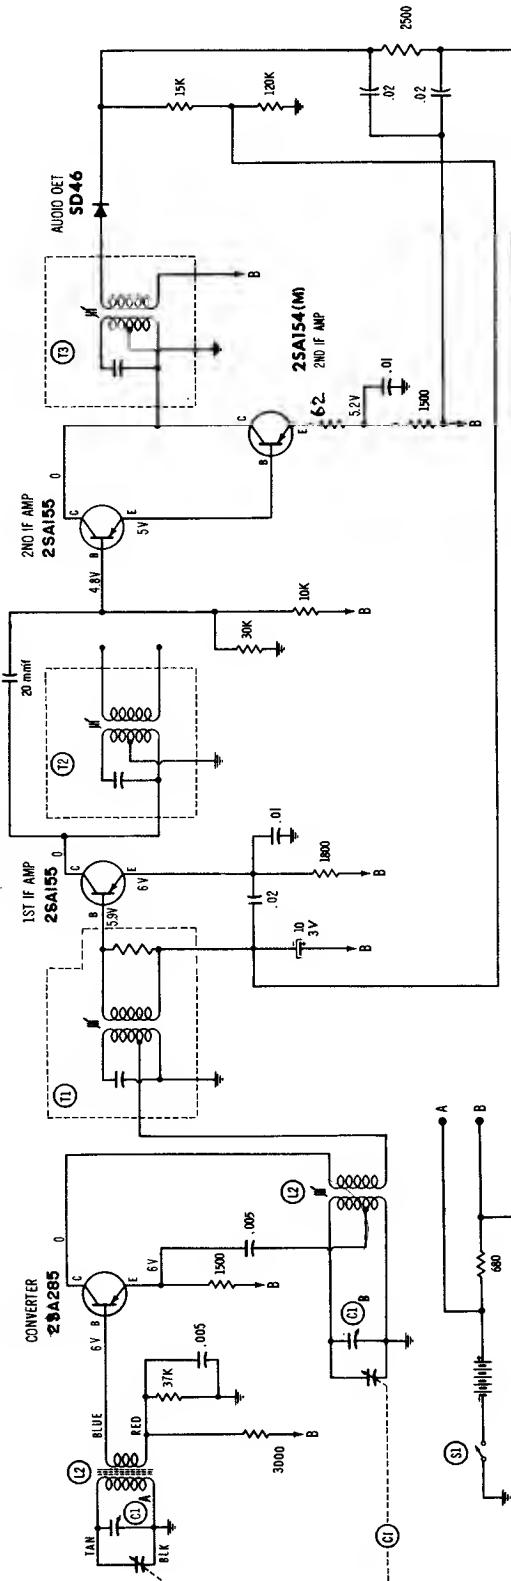

ALIGNMENT

SIGNAL GENERATOR COUPLING	FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
Loop	455KC	Tuning Gang fully open	Across voice coil	T3, T2, T1	Adjust for maximum output.
Loop	600KC	600KC	Across voice coil	L2, L1	Adjust for maximum output.
Loop	1400KC	1400KC	Across voice coil	C1A, C1B	Adjust for maximum output.
Loop	600KC	600KC	Across voice coil	---	Recheck step 2.


If new antenna is inserted, adjust L1 by moving coil. Wax into place after it has been properly adjusted.

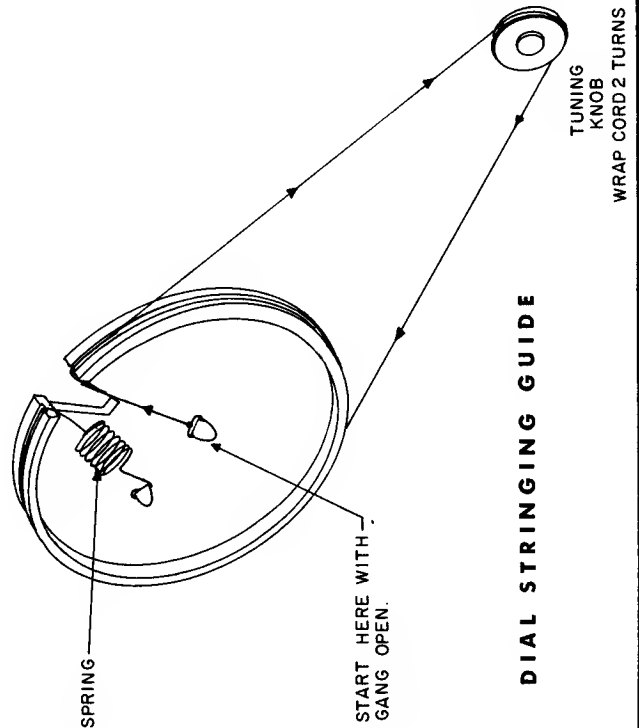

Magnavox

AM83 TRANSISTOR PORTABLE RADIO

(Continued on the next page, at right)

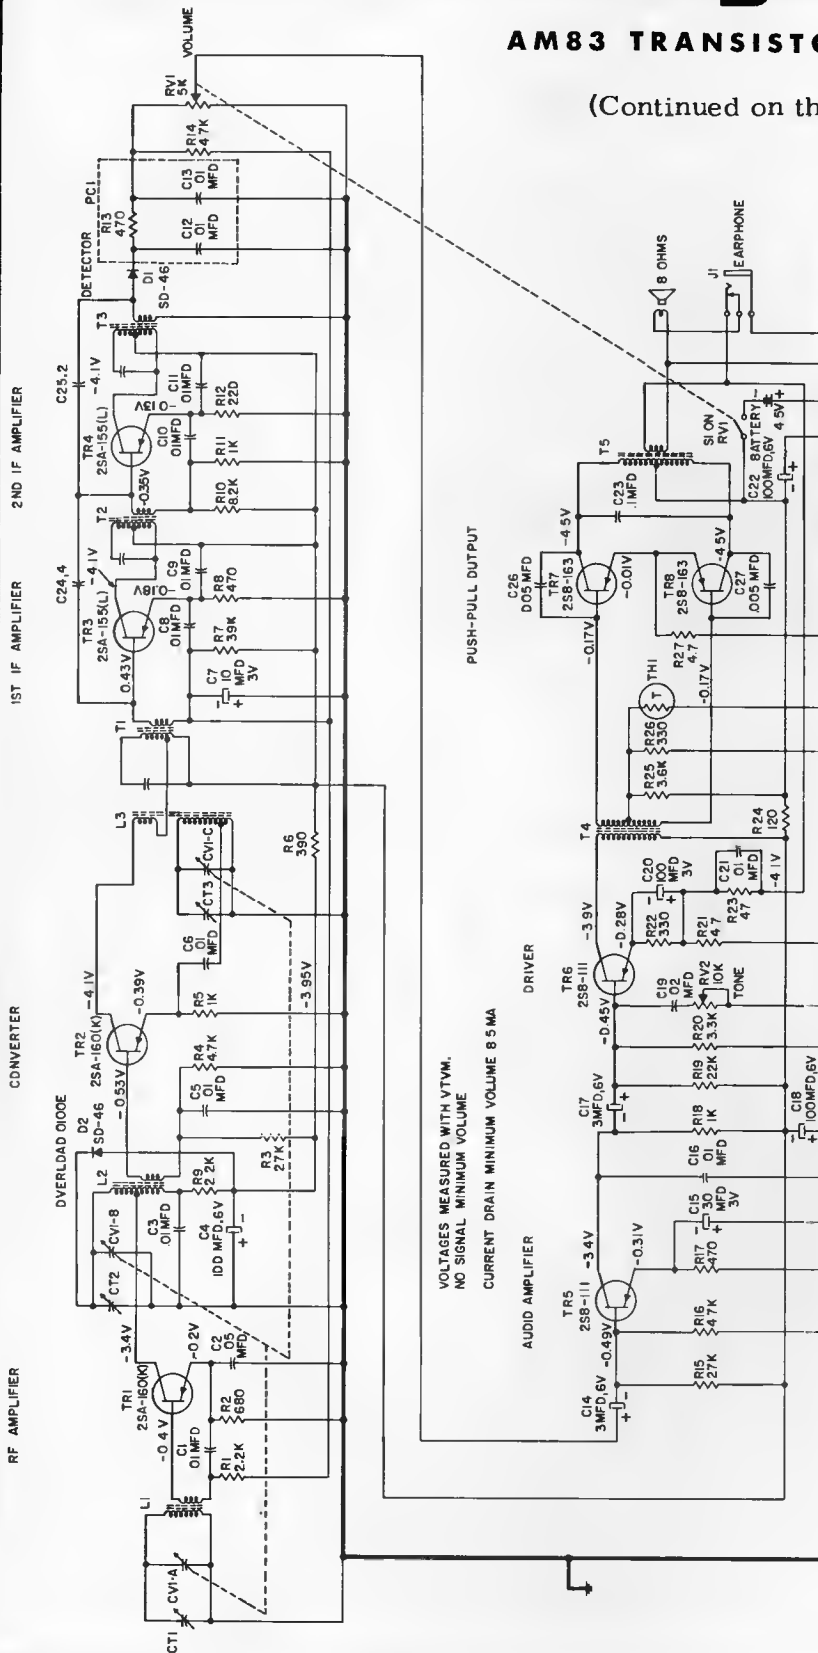


ALIGNMENT

Volume control should be adjusted at maximum position and Tone control at flat level. Output of signal generator should be no higher than necessary to obtain an output reading. Loosely couple generator to Receiver Antenna.


COUPLING	SIGNAL GENERATOR		RADIO DIAL		OUTPUT METER		REMARKS
	FREQUENCY	ADJUST	SETTING	METER	ADJUST	REMARKS	
Loop	455KC	T3, T2, T1	Tuning Gang fully open	Across voice coil	T3, T2, T1	Adjust for maximum output.	Adjust for maximum output.
Loop	800KC	L3, L2, L1	600KC	Across voice coil	L3, L2, L1	Adjust for maximum output.	Adjust for maximum output.
Loop	1400KC	CT3, CT2, CT1	1400KC	Across voice coil	CT3, CT2, CT1	Adjust for maximum output.	Adjust for maximum output.
Loop	600KC	---	600KC	Across voice coil	---	Recheck step 2.	Recheck step 2.

If new antenna is inserted, adjust L1 by moving coil. Wax into place after it has been properly adjusted.

MAGNAVOX Model AM83, Continued from preceding page at left

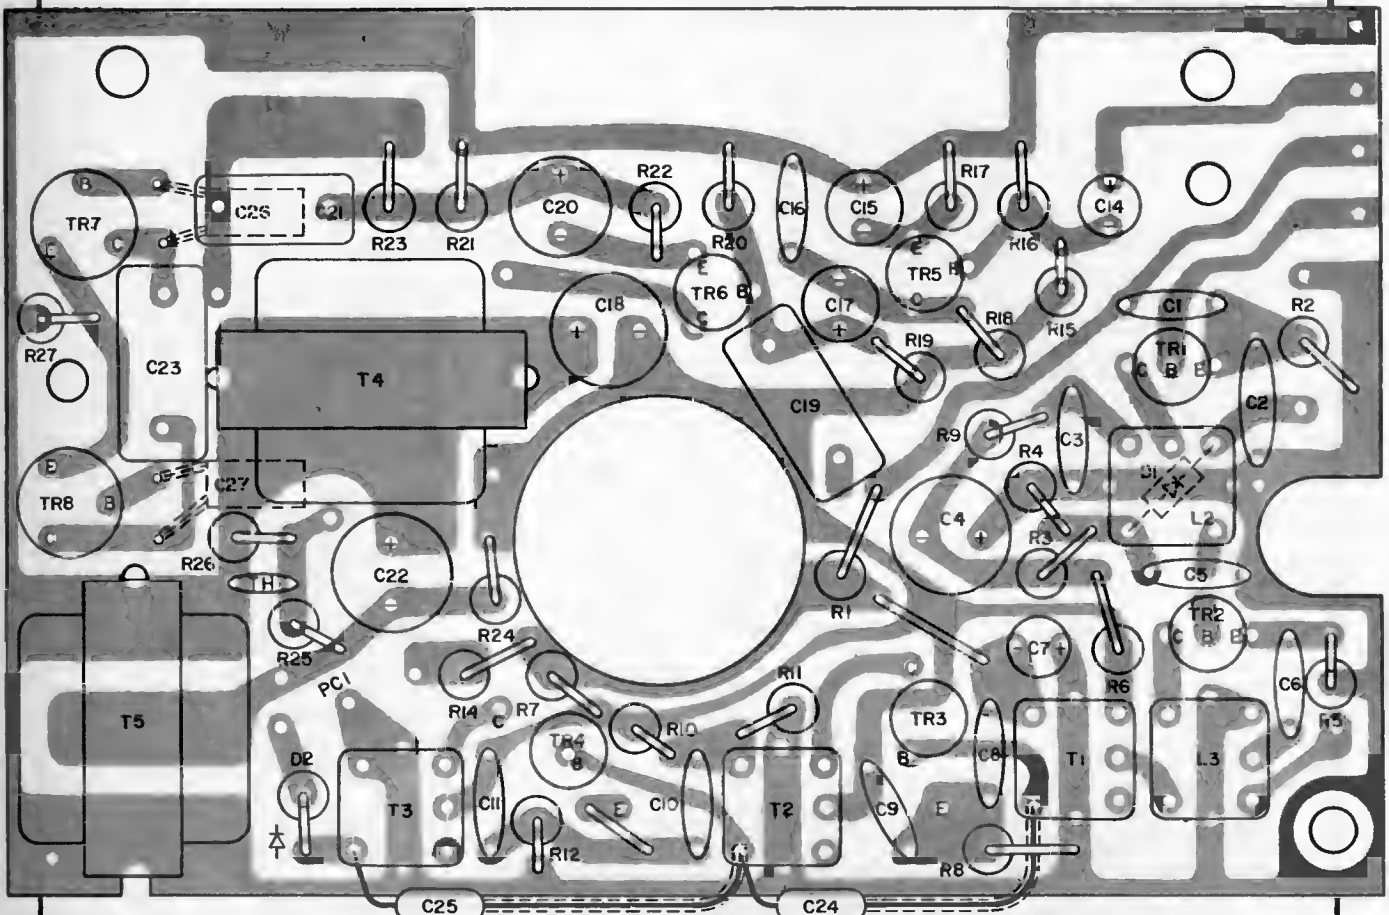

PRINTED WIRING AND COMPONENT PLACEMENT PATTERN
(VIEWED FROM PRINTED WIRING SIDE OF BOARD)

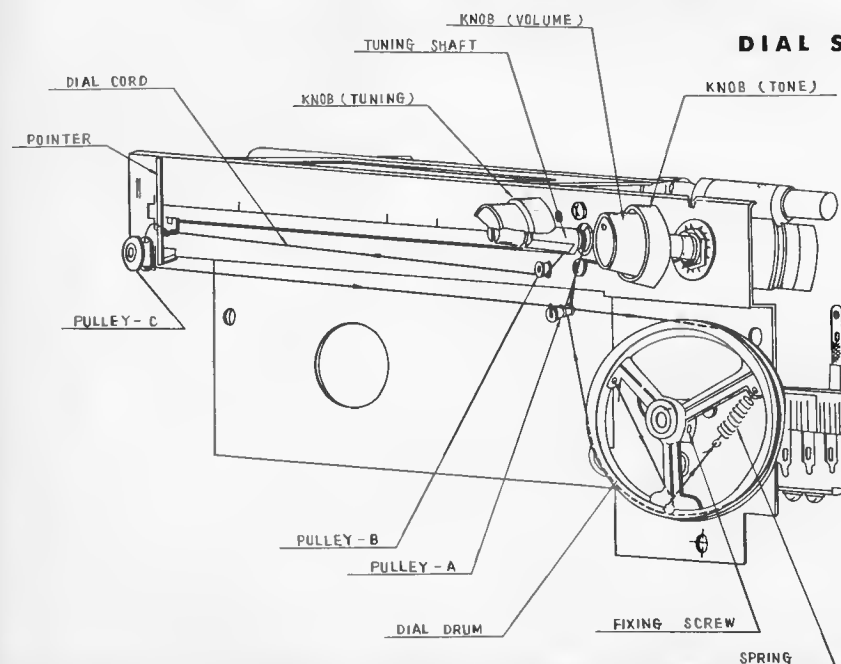


DIAL STRINGING GUIDE

DIAL STRINGING GUIDE


- 1 STRING SHOULD BE PRE-STRETCHED . APPROX. 1% BEFORE BEING ASSEMBLED TO CHASSIS.
- 2 FIGURE SHOWS THE VARIABLE AIR CONDENSER FULLY CLOSED CONDITION
- 3 FASTEN ONE END OF STRING TO DIAL DRUM.
- 4 NEXT WIND STRING 2 TURNS AROUND THE TUNING SHAFT THROUGH THE PULLEY - A.
5. REEL STRING ALONG PULLEYS ACCORDING TO THE ORDER AS SHOWN FIGURE: PULLEY NO. B-C-A.
6. WIND STRING 3/4 TURNS ALONG THE GUTTER OF DIAL DRUM
- 7 FINALLY FASTEN THE OTHER END OF STRING TO THE SPRING. STRING SHOULD BE STRETCHED AS FULLY AS POSSIBLE.

MAGNA VOX
Model AM82 Radio

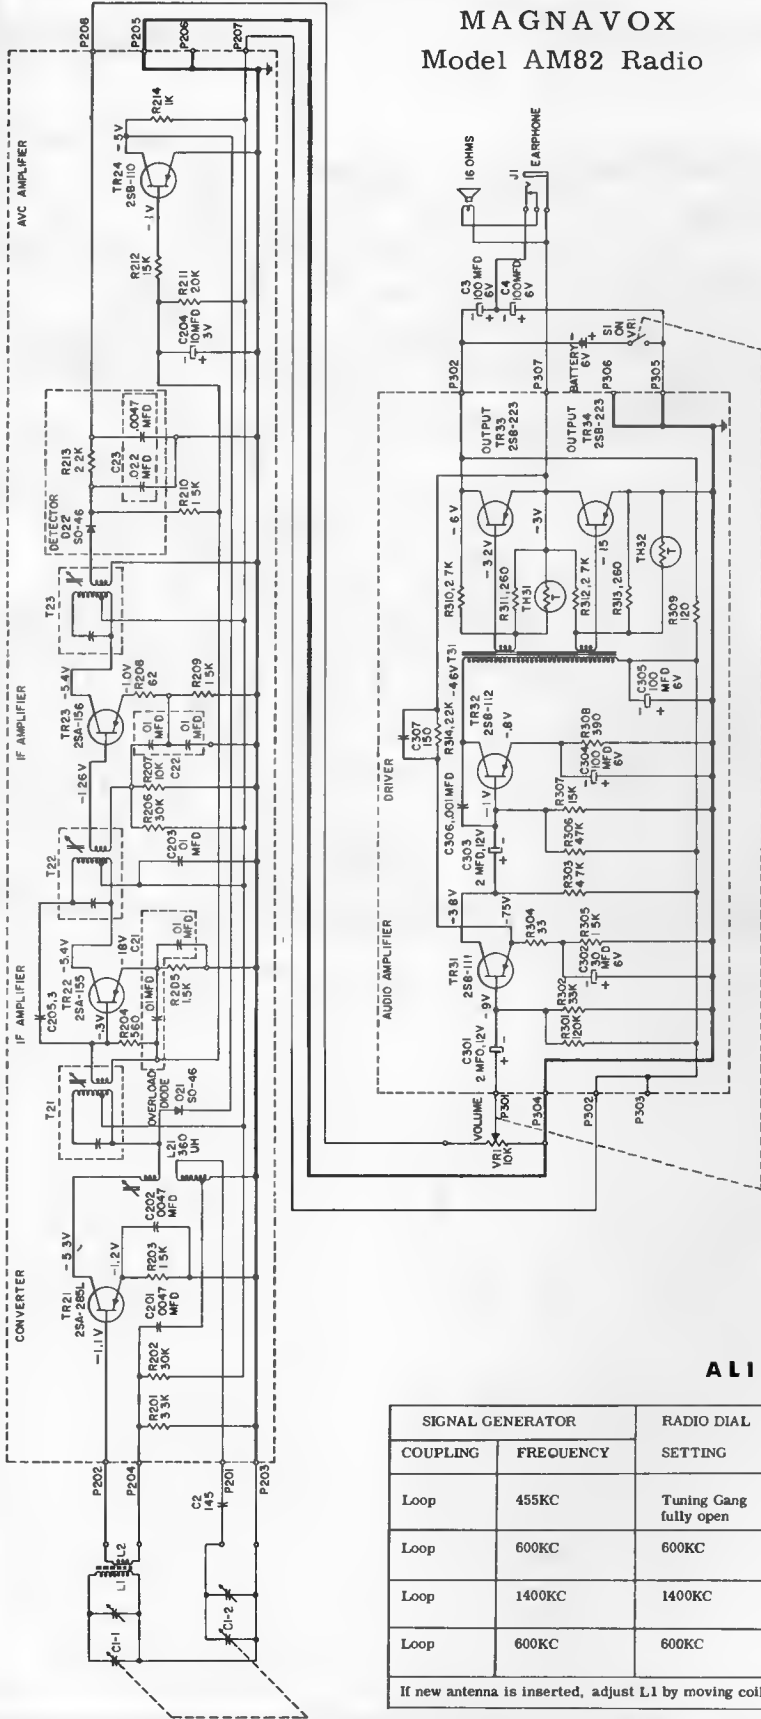

CURRENT DRAIN MINIMUM VOLUME 8 MA
20% TOLERANCE ON ALL READINGS

VOLTAGE MEASURED WITH VTVM, NO SIGNAL
AND VOLUME CONTROL SET TO MINIMUM

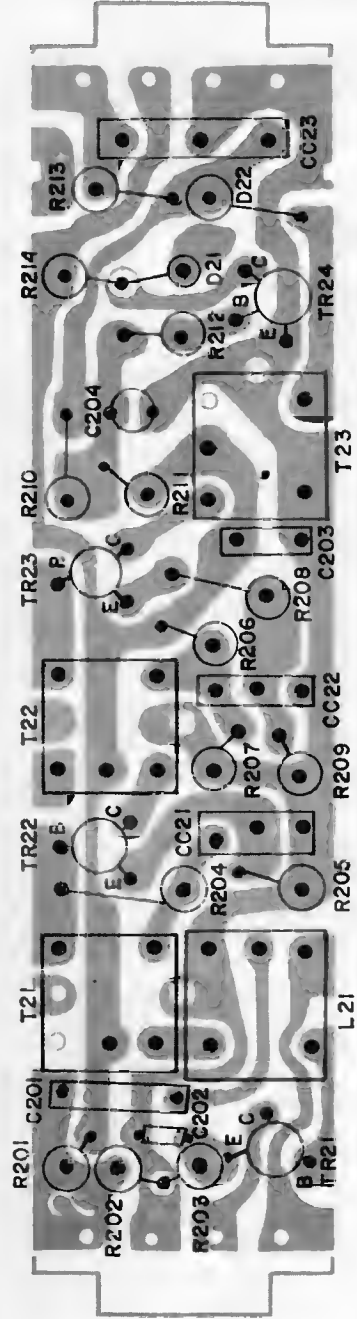

RF - IF PRINTED WIRING AND COMPONENT PLACEMENT PATTERN
(VIEWED FROM PRINTED WIRING SIDE OF BOARD)

ALIGNMENT

SIGNAL GENERATOR		RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
COUPLING	FREQUENCY				
Loop	455KC	Tuning Gang fully open	Across voice coil	T23, T22, T21	Adjust for maximum output.
Loop	600KC	600KC	Across voice coil	L21, L1	Adjust for maximum output.
Loop	1400KC	1400KC	Across voice coil	C1-1, C1-2	Adjust for maximum output.
Loop	600KC	600KC	Across voice coil	---	Recheck step 2.

If new antenna is inserted, adjust L1 by moving coil Wax into place after it has been properly adjusted.

Magnavox

R207 AM/FM RADIO TUNER


MODELS 2ST686, 2ST687, 2ST690

(Material below and continued on the next three pages)


The R207 Series chassis are AM-FM tuners using transistors throughout the entire circuit. These tuners are designed to operate in conjunction with an external audio amplifier which also provides the DC voltage necessary to operate the tuner. This DC voltage is dropped from a -31 VDC and regulated at -16VDC.

The Sensitivity Control (R403) is used to adjust the point at which the diodes cut off. To set this control, tune the receiver off station and adjust this control clockwise until the background noise just disappears. For reception of weak stations, it may be necessary to reduce this setting slightly.

DIAL STRINGING GUIDE


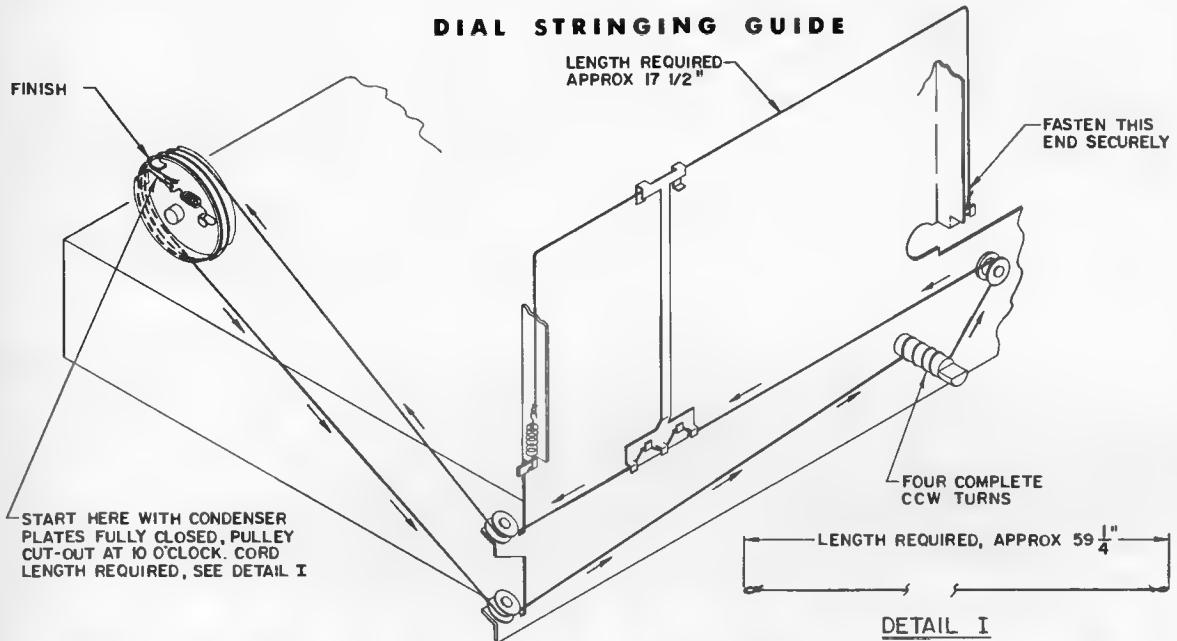


AM-FM-IF BOARD (BOTTOM VIEW)

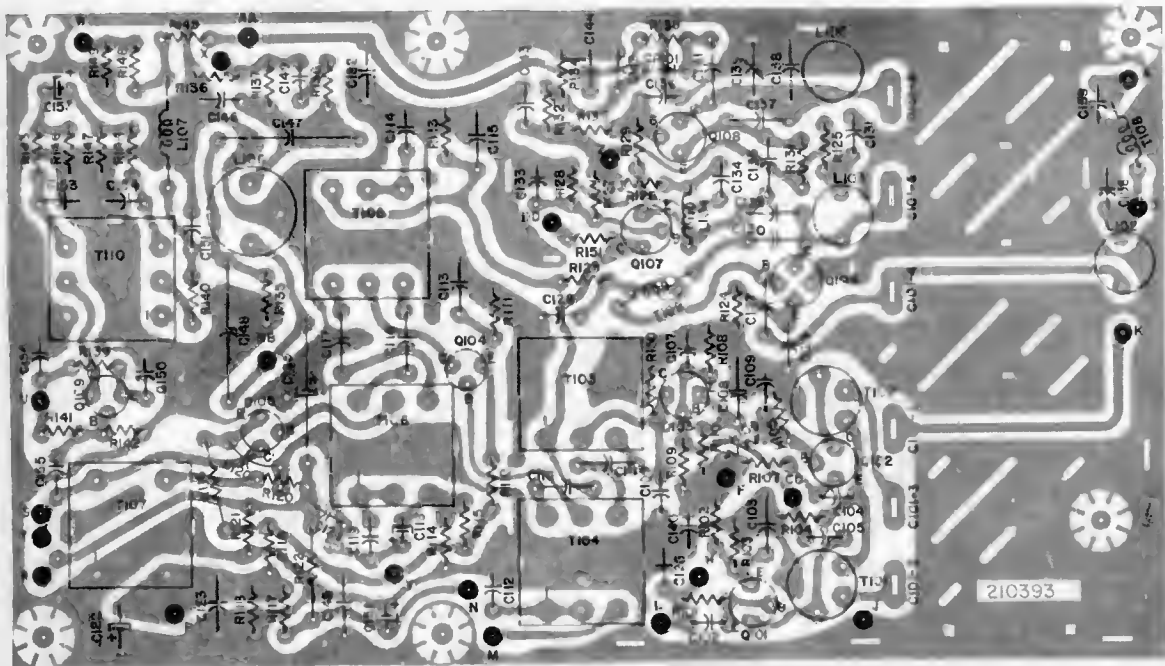

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


MAGNAVOX R207 Tuner Diagram

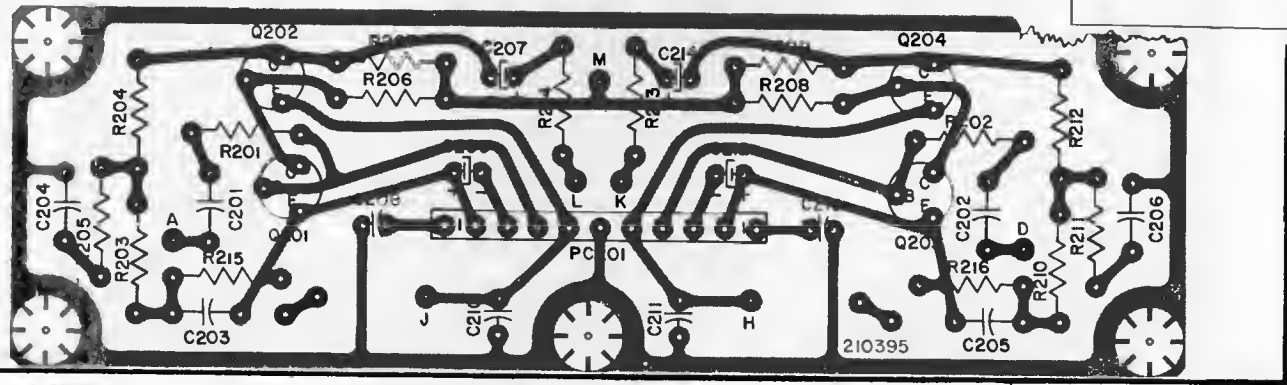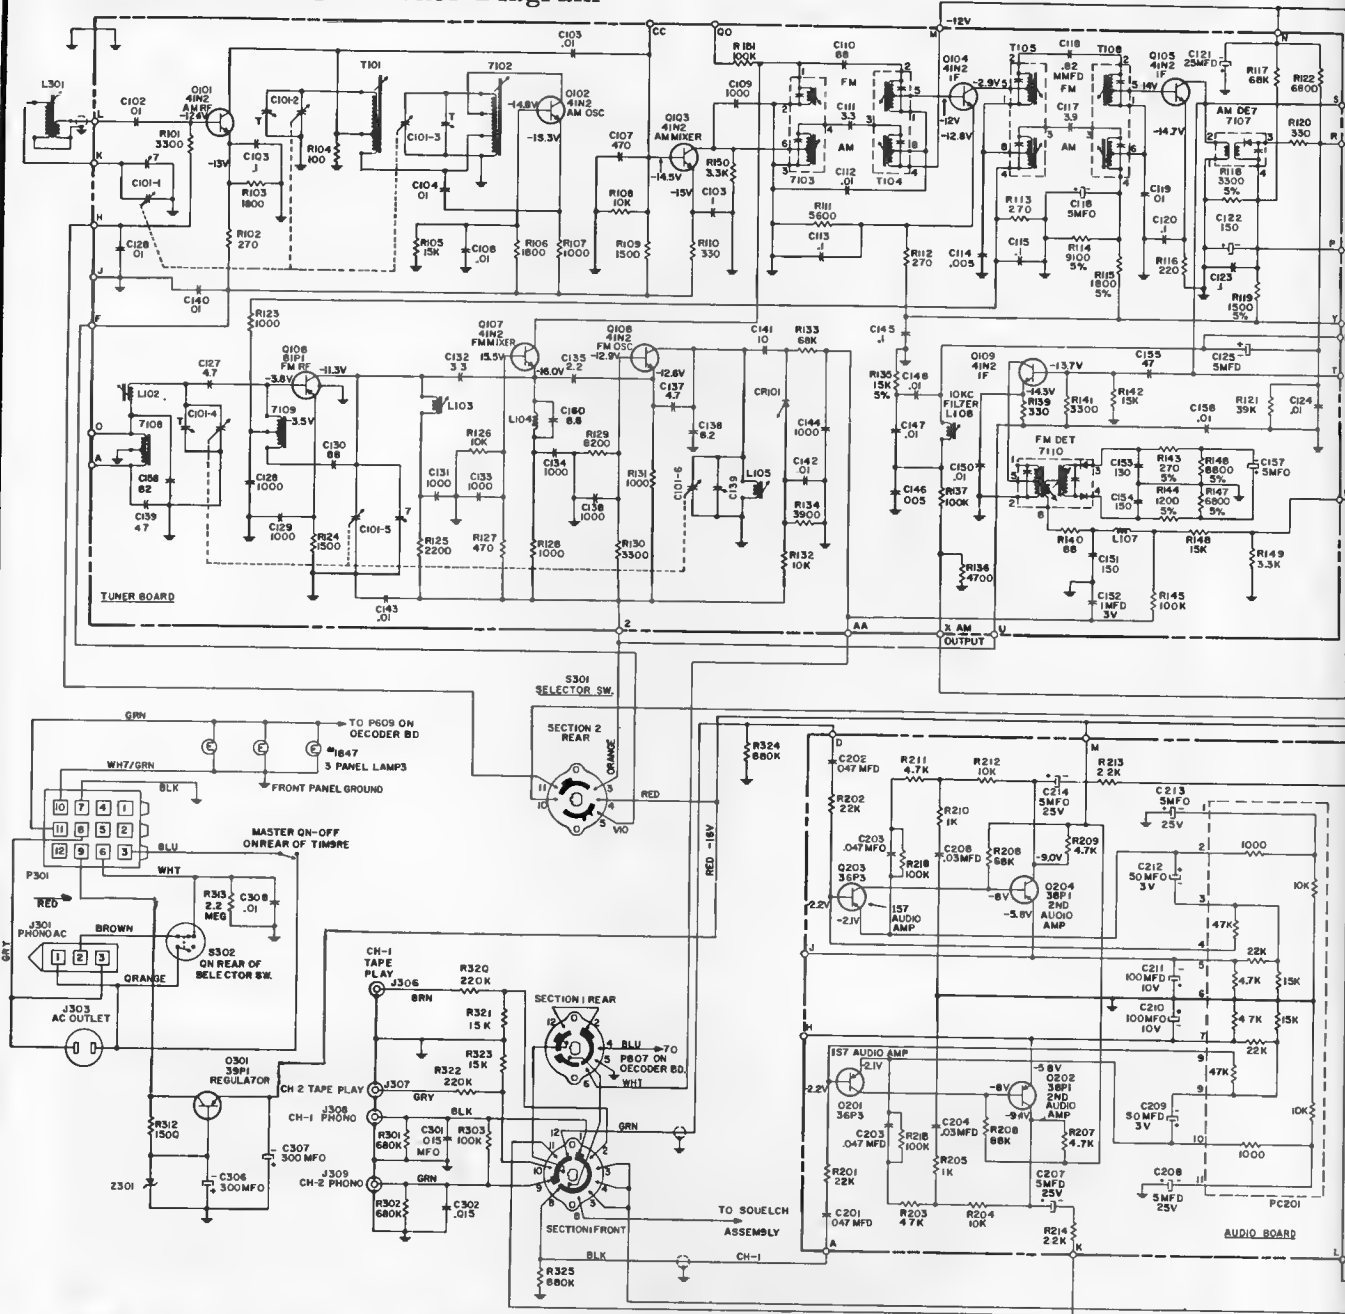

AUDIO BOARD (BOTTOM VIEW) 58

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


MAGNAVOX R207 Tuner Diagram, Continued

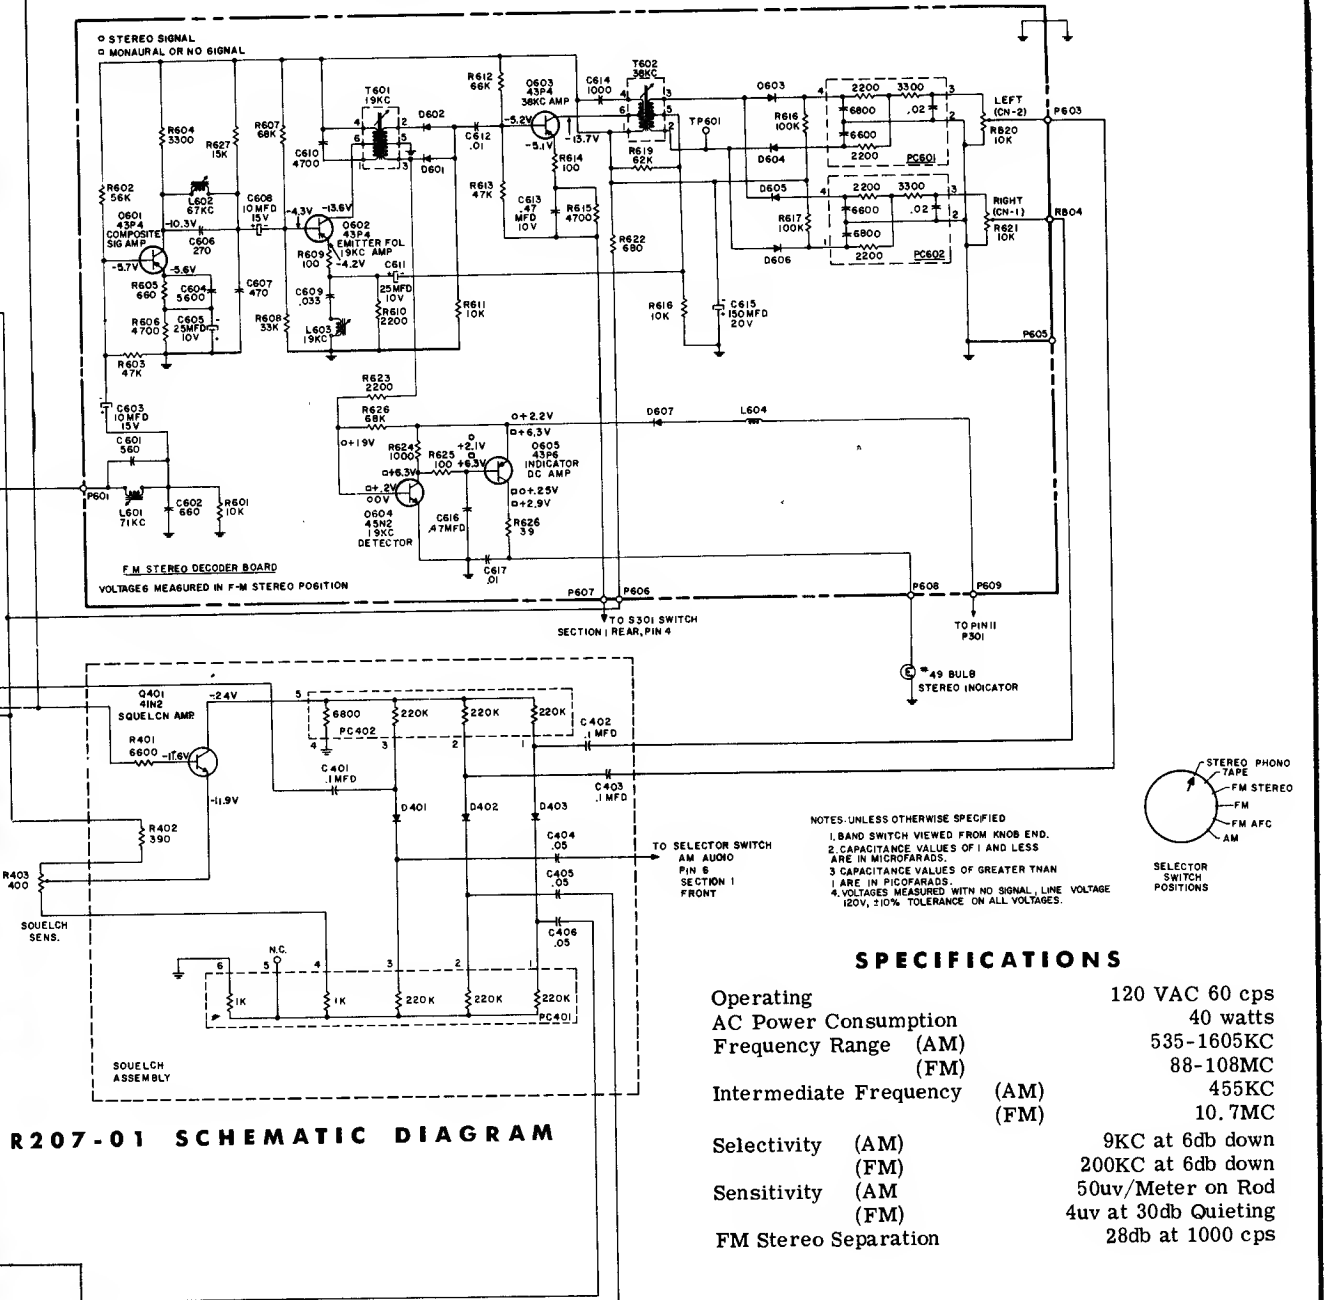

R207-01 SCHEMATIC DIAGRAM


SPECIFICATIONS

Operating	120 VAC 60 cps
AC Power Consumption	40 watts
Frequency Range (AM)	535-1605KC
	(FM) 88-108MC
Intermediate Frequency (AM)	455KC
	(FM) 10.7MC
Selectivity (AM)	9KC at 6db down
	(FM) 200KC at 6db down
Sensitivity (AM)	50uv/Meter on Rod
	(FM) 4uv at 30db Quieting
FM Stereo Separation	28db at 1000 cps

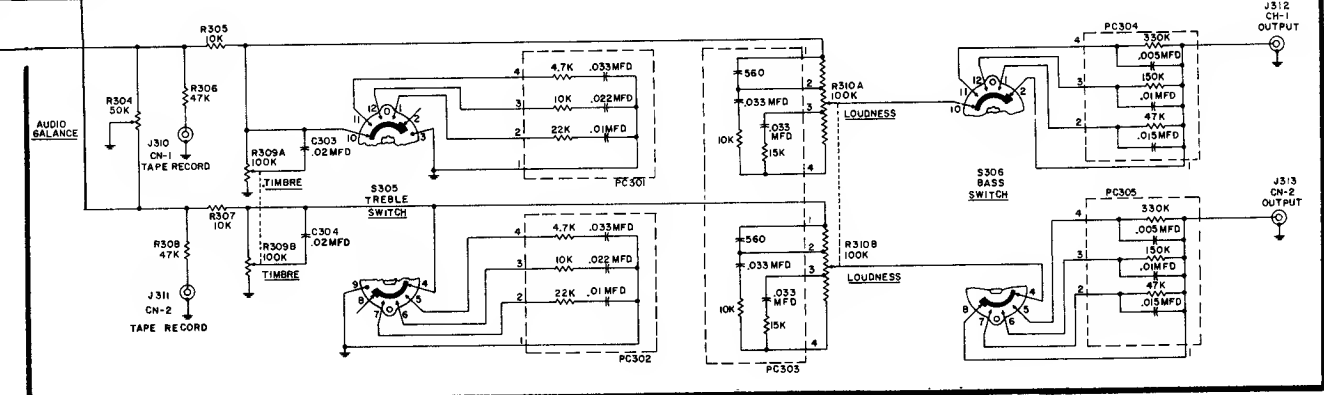


MAGNAVOX R207 AM/FM Radio Tuner

(Continued from preceding three pages)

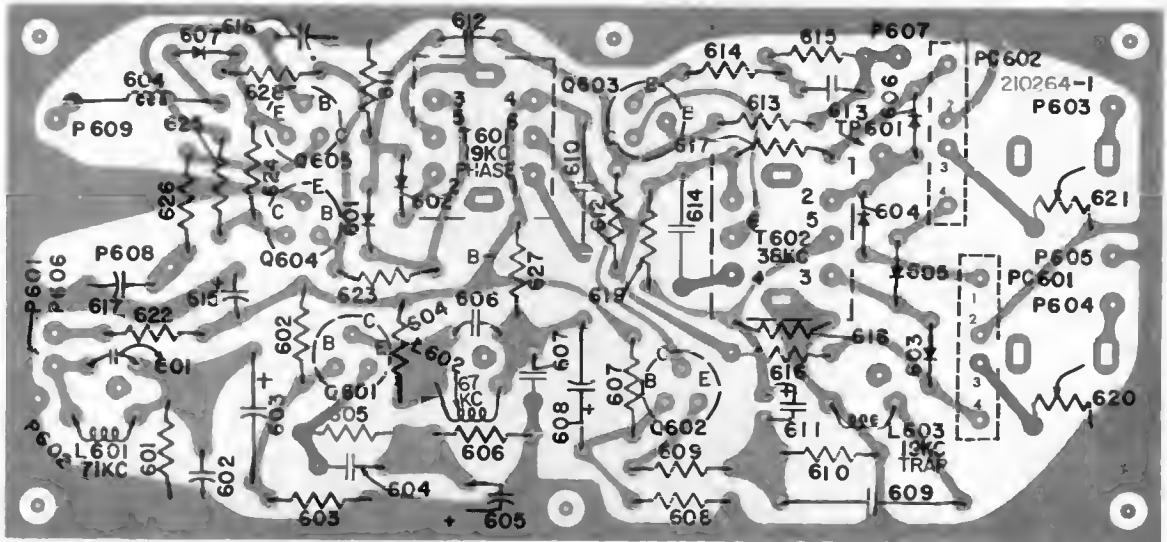


FM STEREO BOARD (BOTTOM VIEW)

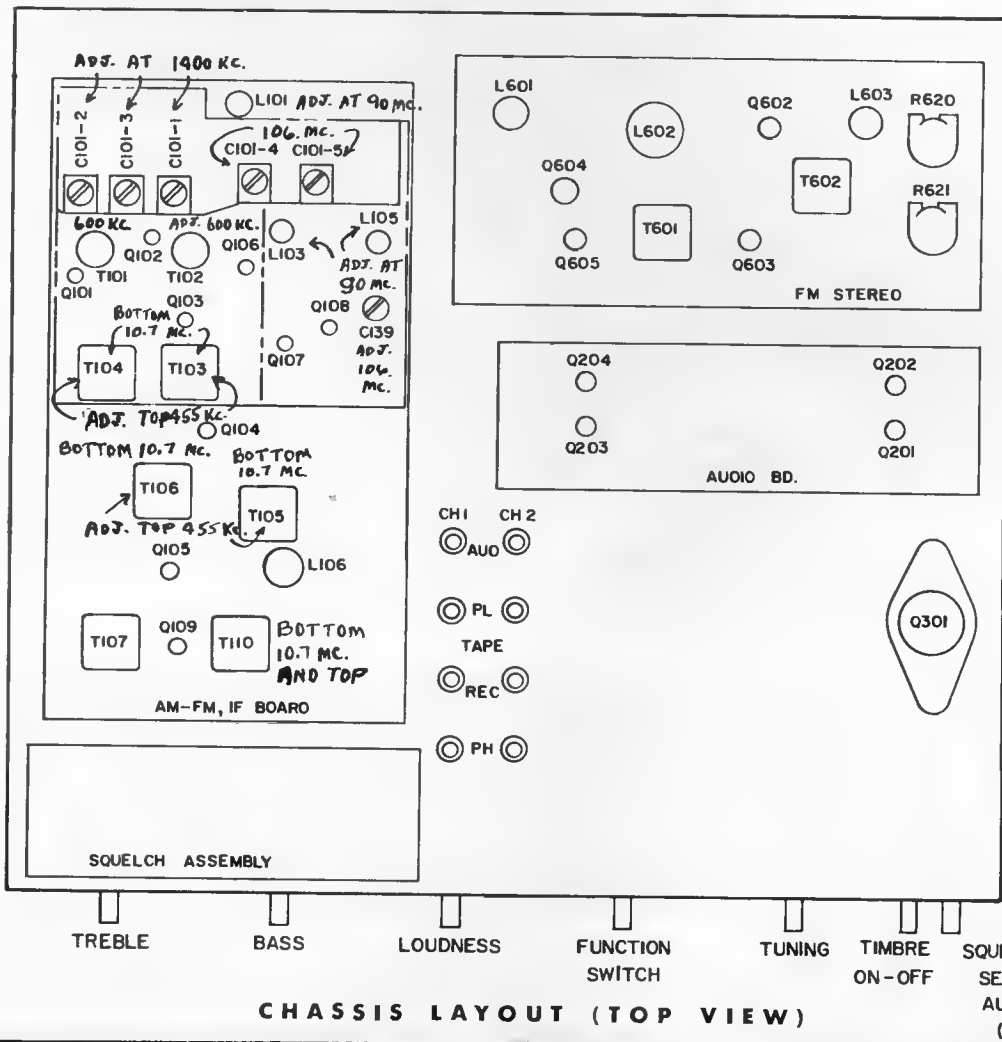


CHASSIS LAYOUT (TOP VIEW)

Magnavox

A551 SERIES AMPLIFIER

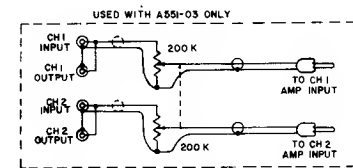

CHASSIS	R16	R68	C14	C62
A551-01	220K	220K	OMIT	OMIT
A551-02	220K	220K	50MF-25V	50MF-25V
A551-03	OMIT	OMIT	OMIT	OMIT

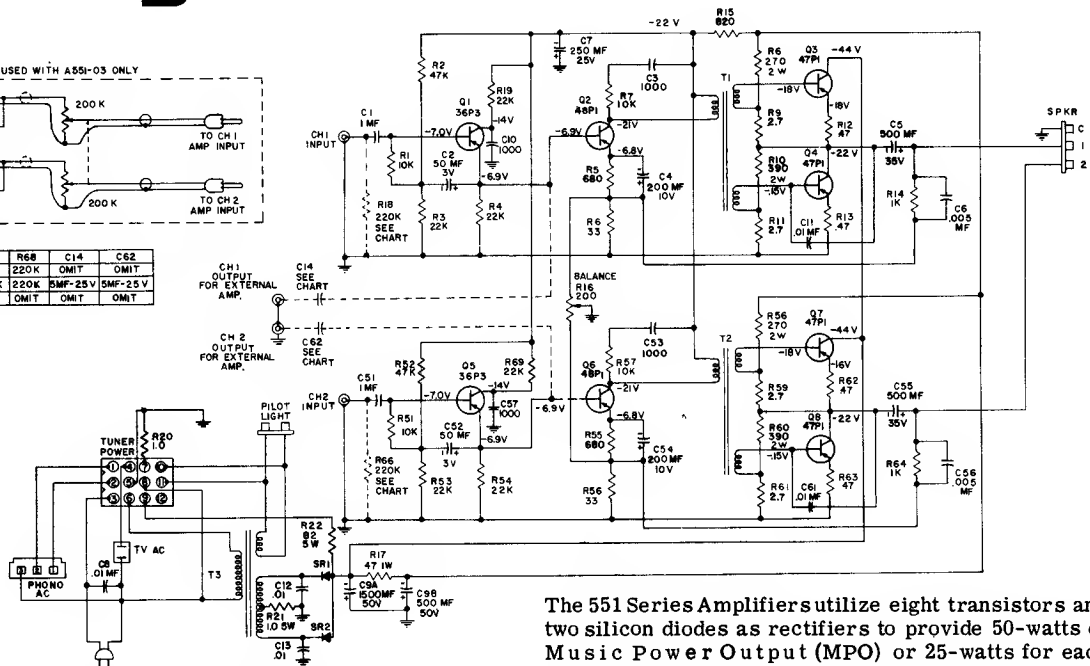


These amplifiers are the transformerless output type designed to use the speaker voice coil as the load. This type of circuit is quite common in transistor audio amplifiers. The voice coil impedance, therefore, plays an important part in the overall operation of the amplifier.

The 551 Series Amplifiers utilize eight transistors and two silicon diodes as rectifiers to provide 50-watts of Music Power Output (MPO) or 25-watts for each channel. Power is supplied from a 117VAC source. The power transformer is a step-down type designed to provide approximately 36 VDC @ 300MA after rectification by the two silicon diodes. These amplifiers are designed to work in conjunction with, and supply power for, a separate AM-FM transistor tuner.



A590 SERIES AMPLIFIER CHASSIS

MODEL	C14	C15	R23	R24	R14,16,64,66	R28	C18
A590-01-00	OMIT	OMIT	5W	5W	3.3	OMIT	OMIT
A590-01-10	01	01	5W	5W	3.3	OMIT	OMIT
A590-01-21	01	01	OMIT	OMIT	2.7	OMIT	OMIT
A590-02-00	01	01	OMIT	OMIT	2.7	350	350
A590-01-11	01	01	1.5W	1.5W	3.3	OMIT	OMIT

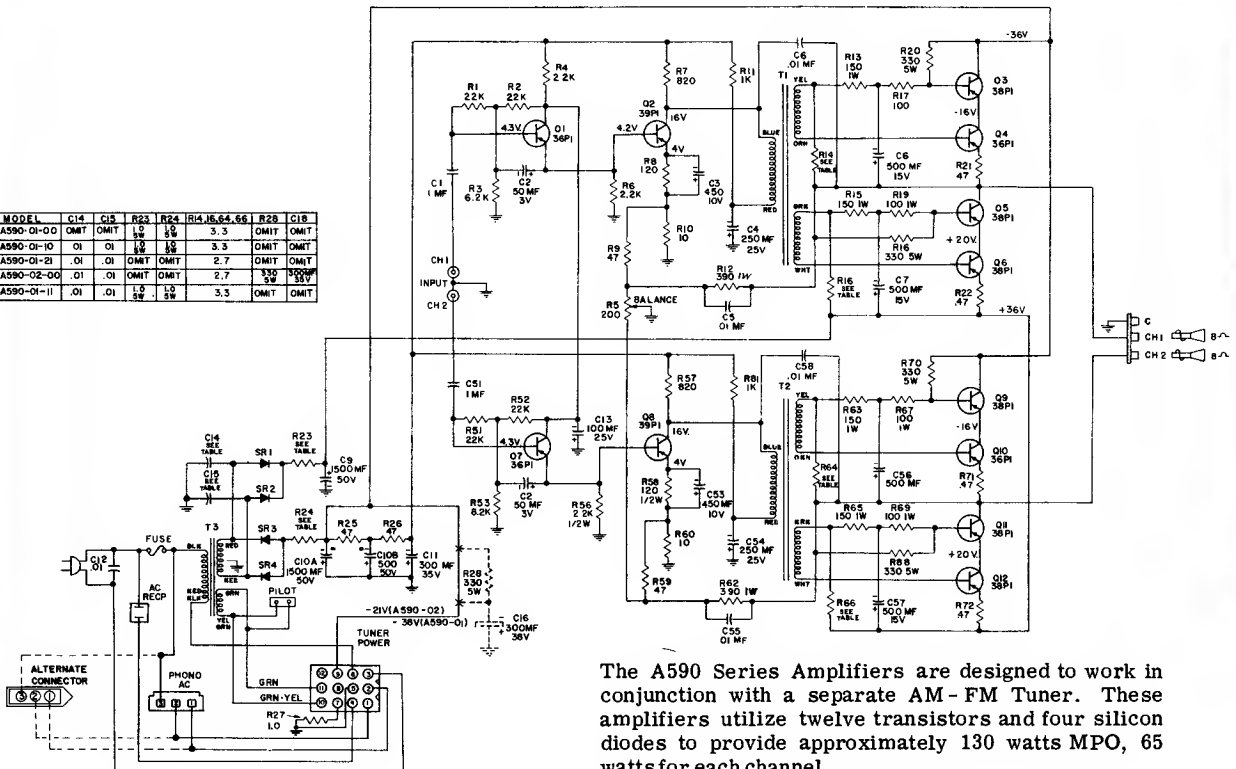

The A590 Series Amplifiers are designed to work in conjunction with a separate AM-FM Tuner. These amplifiers utilize twelve transistors and four silicon diodes to provide approximately 130 watts MPO, 65 watts for each channel.

MONTGOMERY WARD
Model GEN-1257A

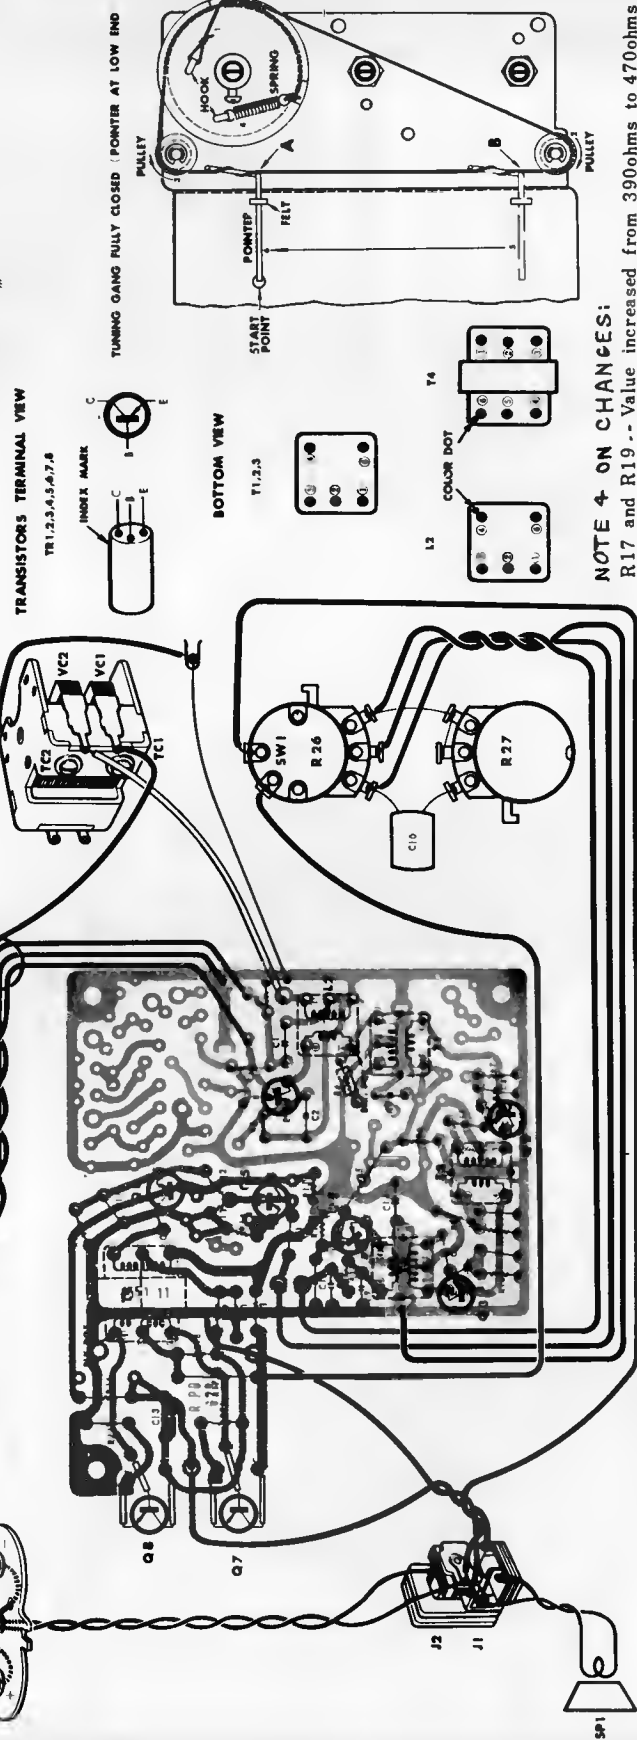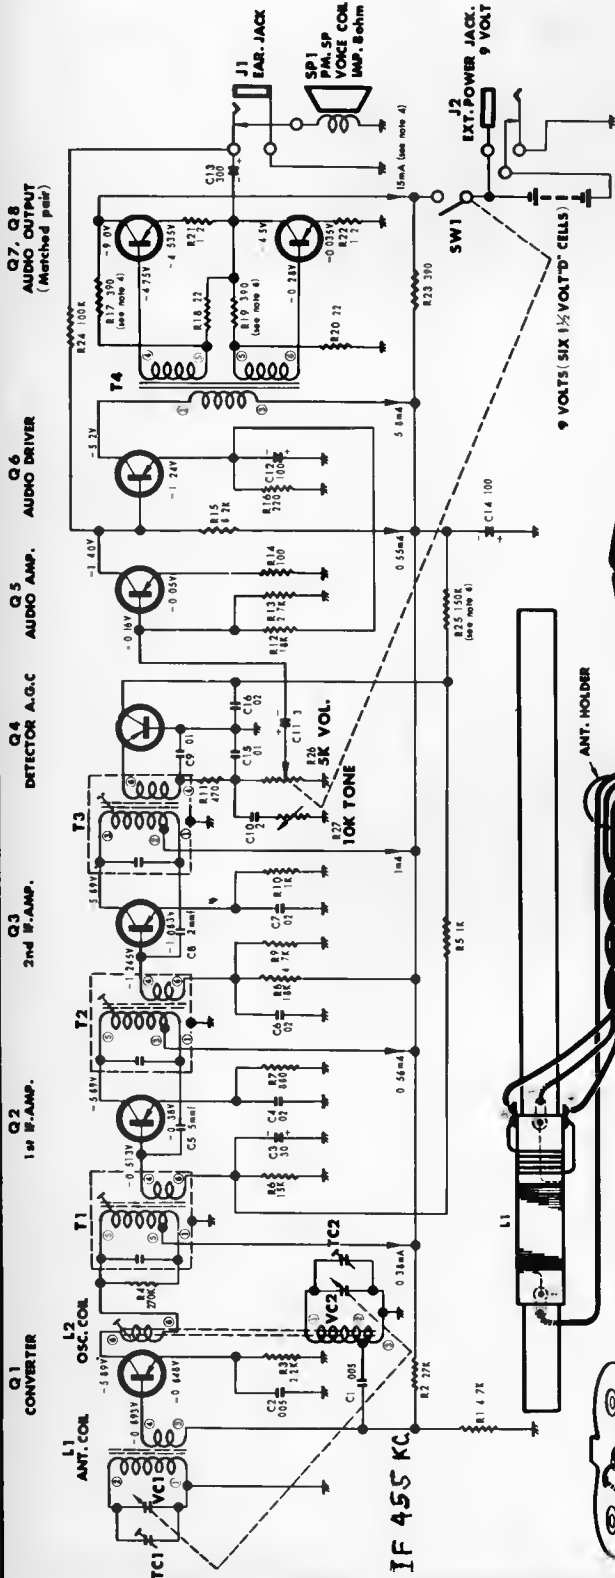

NOTE 4 ON CHANGES:
R17 and R19 -- Value increased from 390ohms to 470ohms
R25 Value decreased from 150ohms to 120ohms

M O N T G O M E R Y W A R D

MODELS
 GEN-1802A, GEN-1803A,
 GEN-1804A, GEN-1805A,
 & GEN-1806A

- NOTES:
1. ALL CAPACITANCE VALUES ARE IN MICROFARADS + 80% - 20% 50V MIN. UNLESS OTHERWISE INDICATED.
 2. ALL RESISTANCE VALUES ARE IN OHMS, 1/2 W ± 10% UNLESS OTHERWISE INDICATED.
 3. VOLTAGES SHOWN AT EACH TRANSISTOR ELECTRODE (±20%) MEASURED TO COMMON GROUND WITH A VTVM WITH NO INPUT SIGNAL AND VOLUME CONTROL SET AT MAXIMUM, NEGATIVE GROUND.
 4. ALL COIL AND TRANSFORMER RESISTANCES ARE MEASURED OUT OF CIRCUIT. RESISTANCES LESS THAN 1 OHM ARE NOT SHOWN.

IF 455 KC.




TRANSISTORS (BOTTOM VIEW)




OSCILLATOR COIL AND I.F. TRANSFORMERS (BOTTOM VIEW)

SWITCH ON CLOCK MODELS LOCATED ON TIMER MECHANISM

Bottom View Printed Board

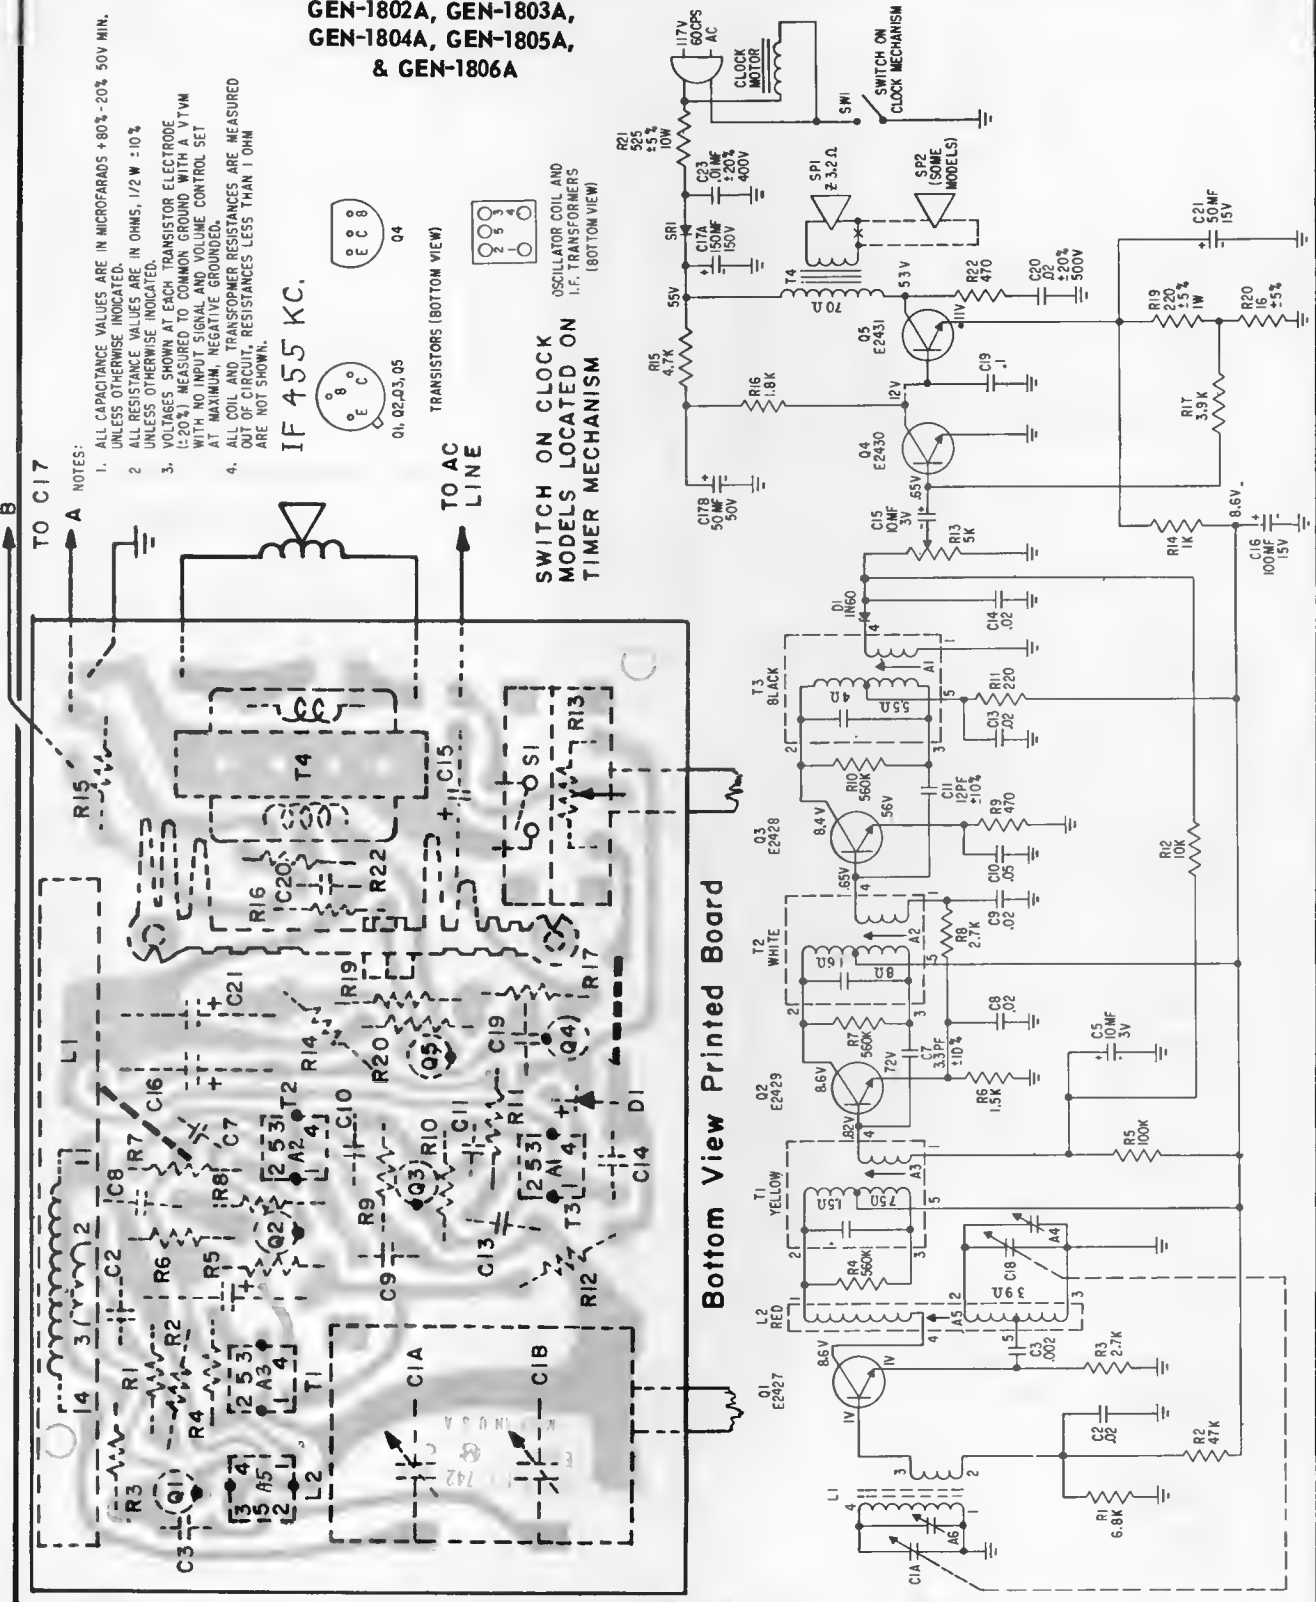

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

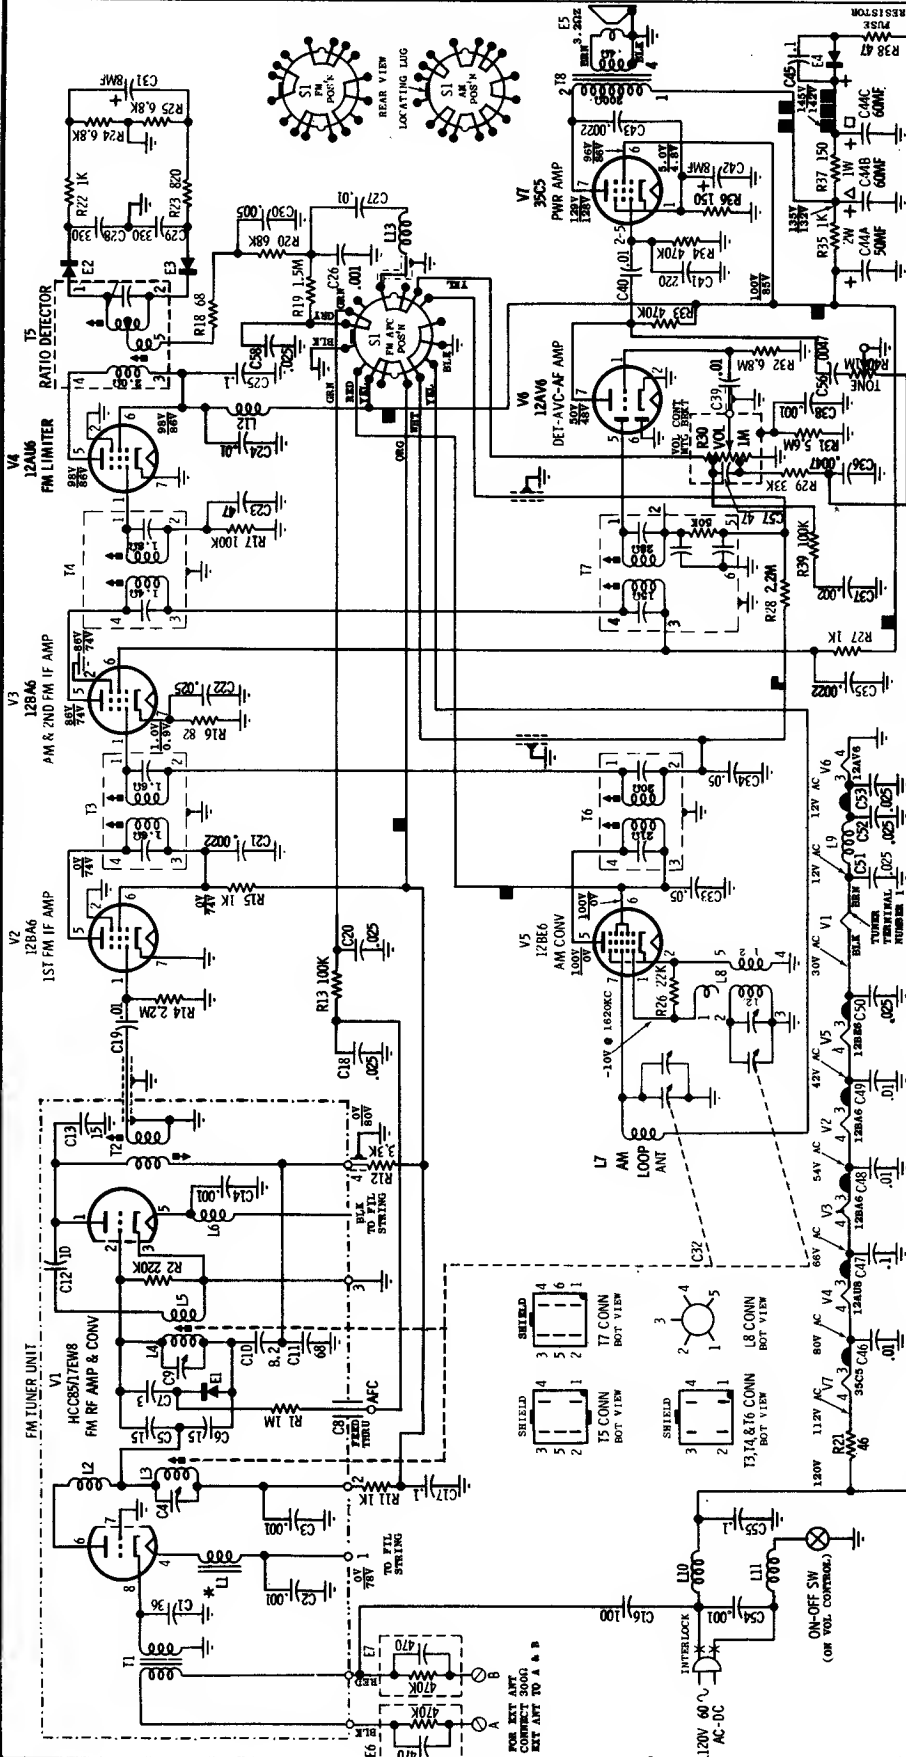

MOTOROLA

CHASSIS HS-4109

MODELS B7, B10


Chassis HS-4108, Model B7,
Chassis HS-4123, Model B8,
are similar to HS-4109.

V TAKEN WITH S1 IN AM POSITION
V TAKEN WITH S1 IN FM POSITION

PLATED CHASSIS BOARD WIRING LEGEND
-B+ = B+ NOT IN ALL SETS
-AVC = AVC NOT IN ALL SETS

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF; ALL OTHERS IN MMF. VOLTAGES - MEASURED FROM POINT INDICATED TO B - WITH A VTVM ± 10% NO SIGNAL INPUT. WITH 120V 60~ AC INPUT


TUNING RANGE - AM - 535 KC TO 1620 KC. IF - 455 KC
FM - 88 MC TO 108 MC. IF - 10.7 MC
⊥ = B-

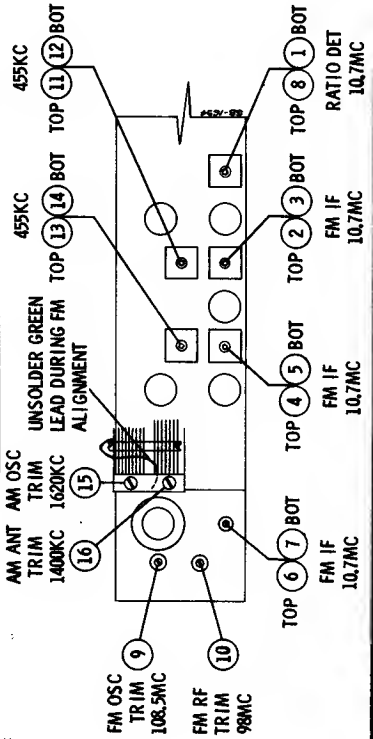

MOTOROLA

CHASSIS HS-4135,4134 MODELS BC4, B11, B12

(Diagram on page 67, plated chassis views on page 68)

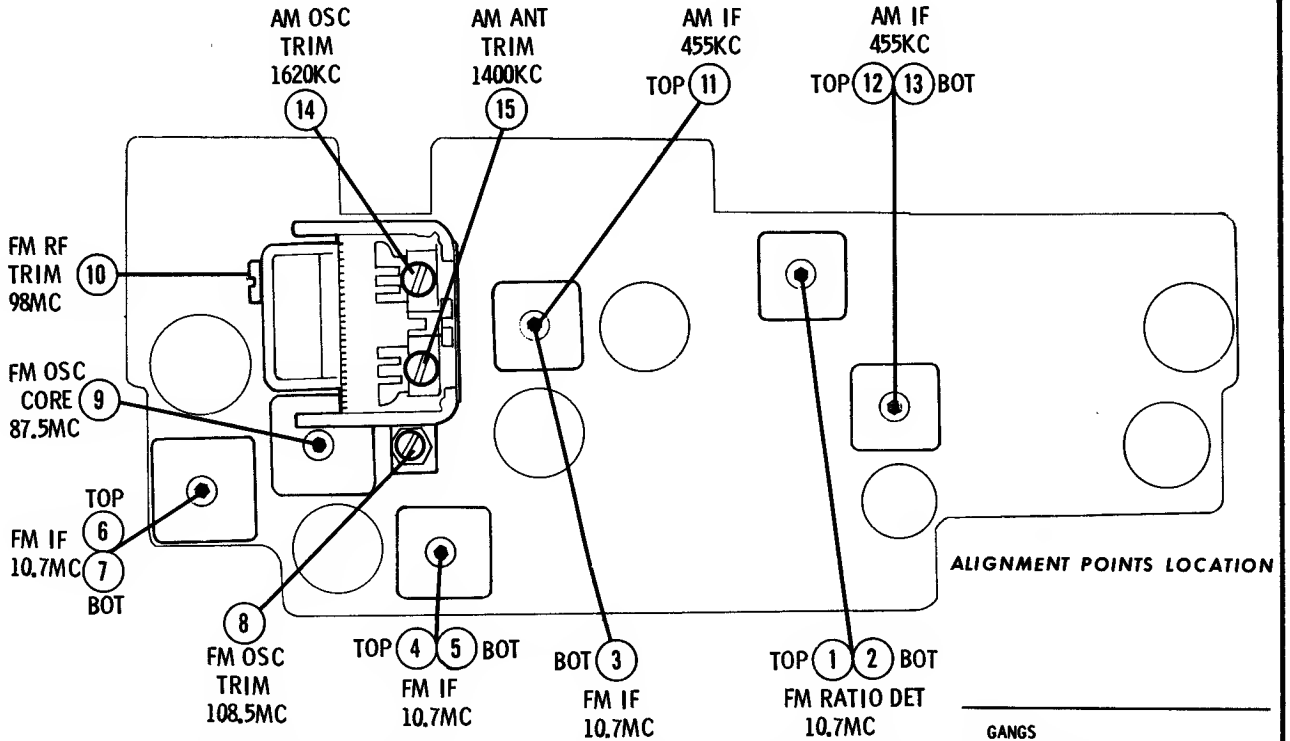



CHASSIS REMOVAL - ALL MODELS

1. Remove tuning knob only; do not attempt to remove captivated volume knob and pointer dial.
2. Remove 4 cabinet back mounting screws, separate back from front of cabinet, then disconnect FM antenna connecting lead from inside back; if necessary, unsolder leads connected to cabinet back.


3. Remove screw from left side of AM antenna insulator and screw from AM gang mounting bracket.

4. On Model B12 only, also remove 2 chassis bracket mounting screws located at right and left sides inside cabinet; then remove 3 screws from bottom of cabinet.

5. Slide chassis out from rear of cabinet; when re-installing chassis into cabinet, make sure the slots at the rear of the volume knob and pointer dial line up properly with their respective shafts on the chassis.

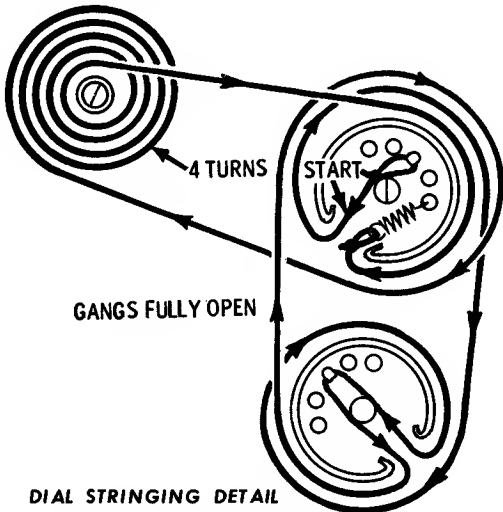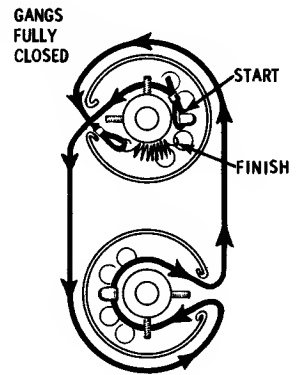


DIAL STRINGING DETAIL

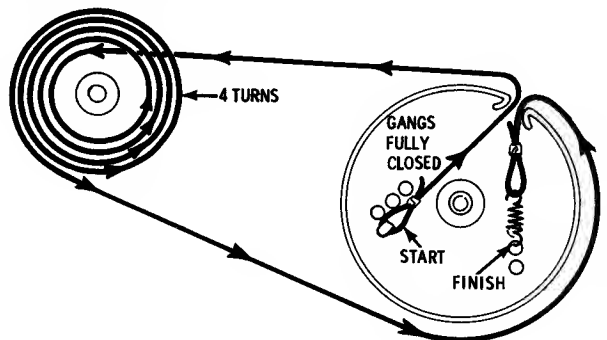


ALTERNATE STRINGING USED IN SOME SETS

MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

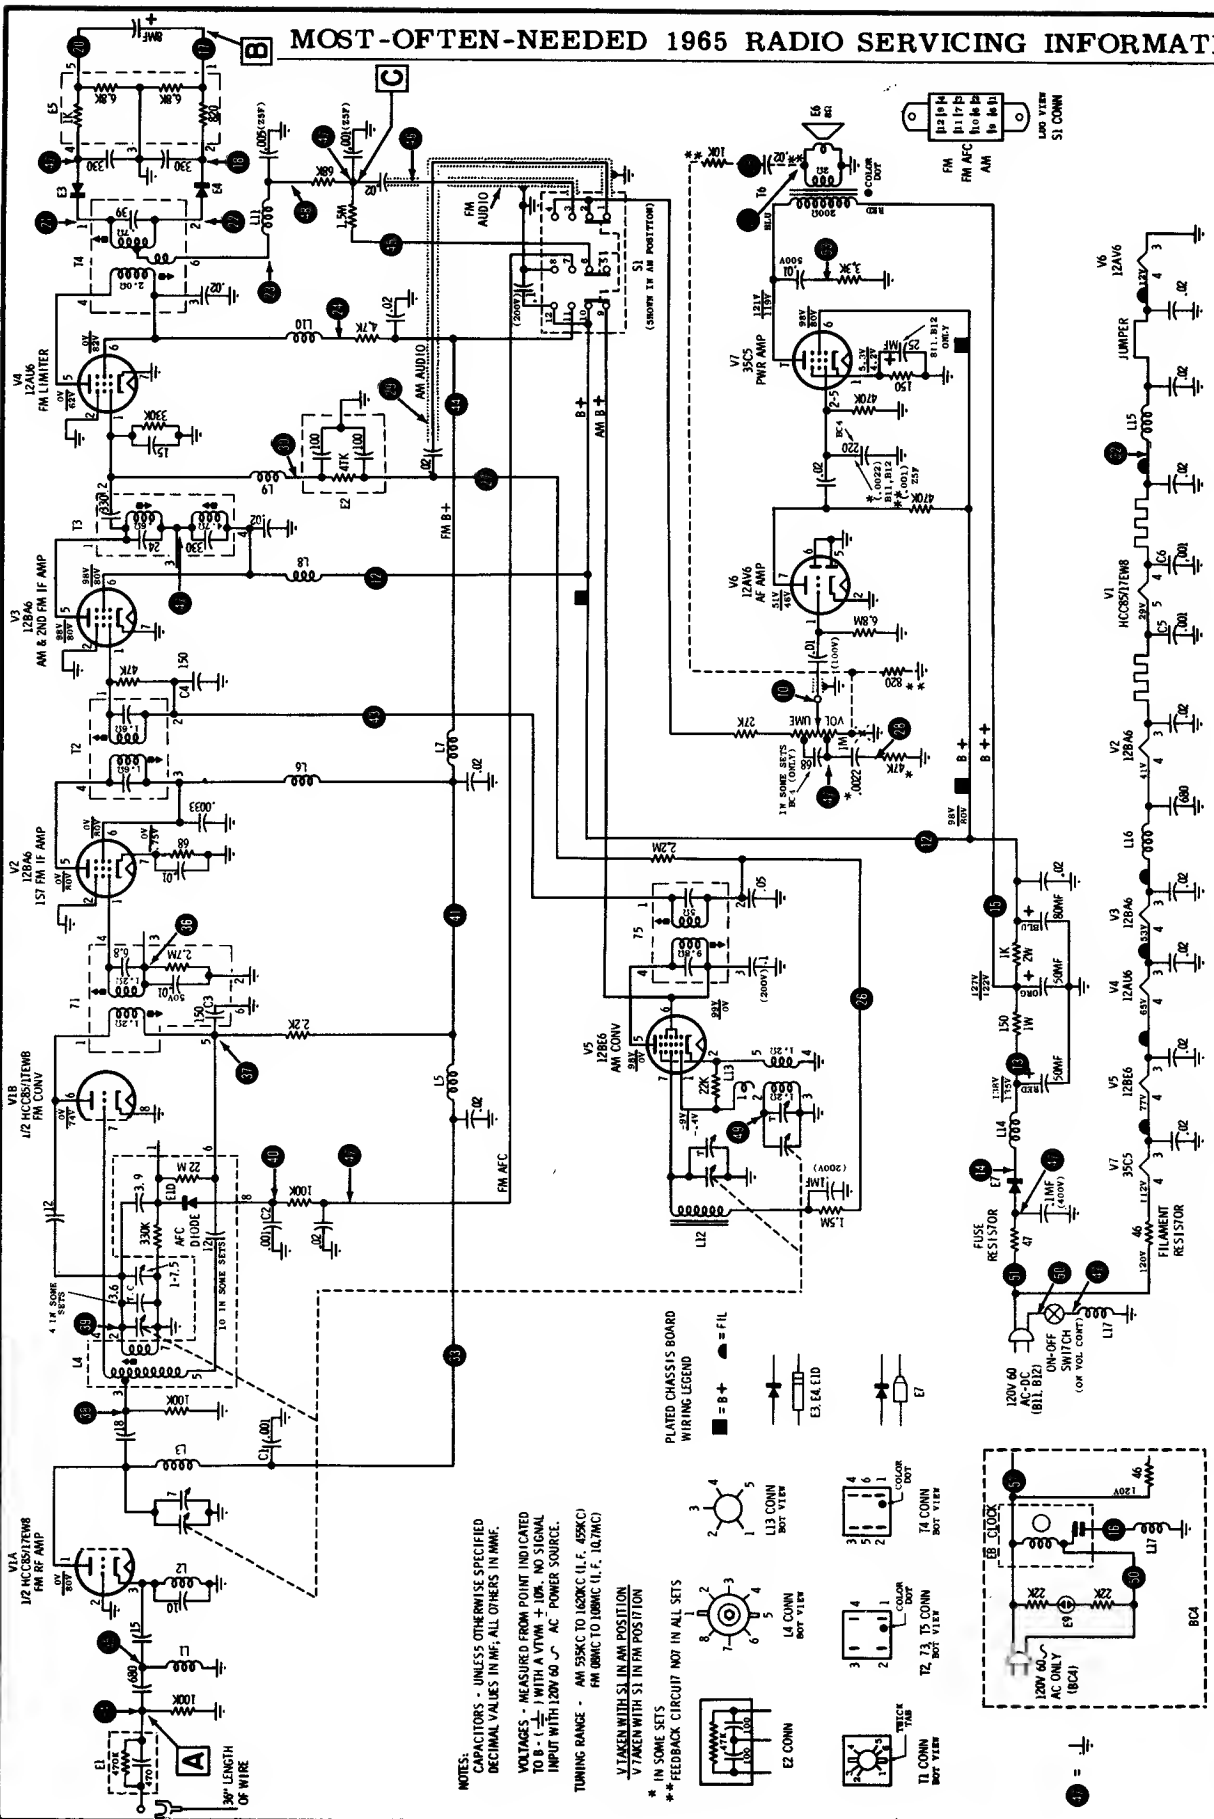

NOTES:
 CAPACITORS - UNLESS OTHERWISE SPECIFIED DECIMAL VALUES IN MF, ALL OTHERS IN MME.
 VOLTAGES - MEASURED FROM POINT INDICATED TO B - (E) WITH A VTVM + 10K. NO SIGNAL INPUT WITH 120V 60 AC POWER SOURCE.
 TUNING RANGE - AM 55KC TO 1620KC (I.F. 455KC) FM (88MC TO 108MC (I.F. 10.7MC))


V TAKEN WITH SL IN AM POSITION
 * IN SOME SETS
 ** FEEDBACK CIRCUIT NOT IN ALL SETS

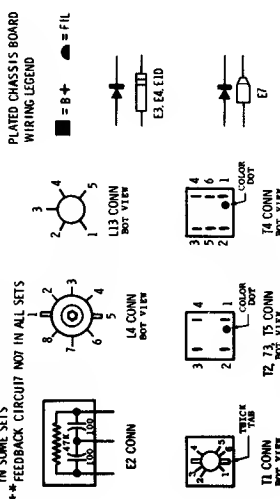

MOTOROLA Chassis HS-4134, HS-4135, Models BC4, B11, B12, Continued

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

MOTOROLA Chassis HS-4134, HS-4135, Models BC4, B11, B12, Continued

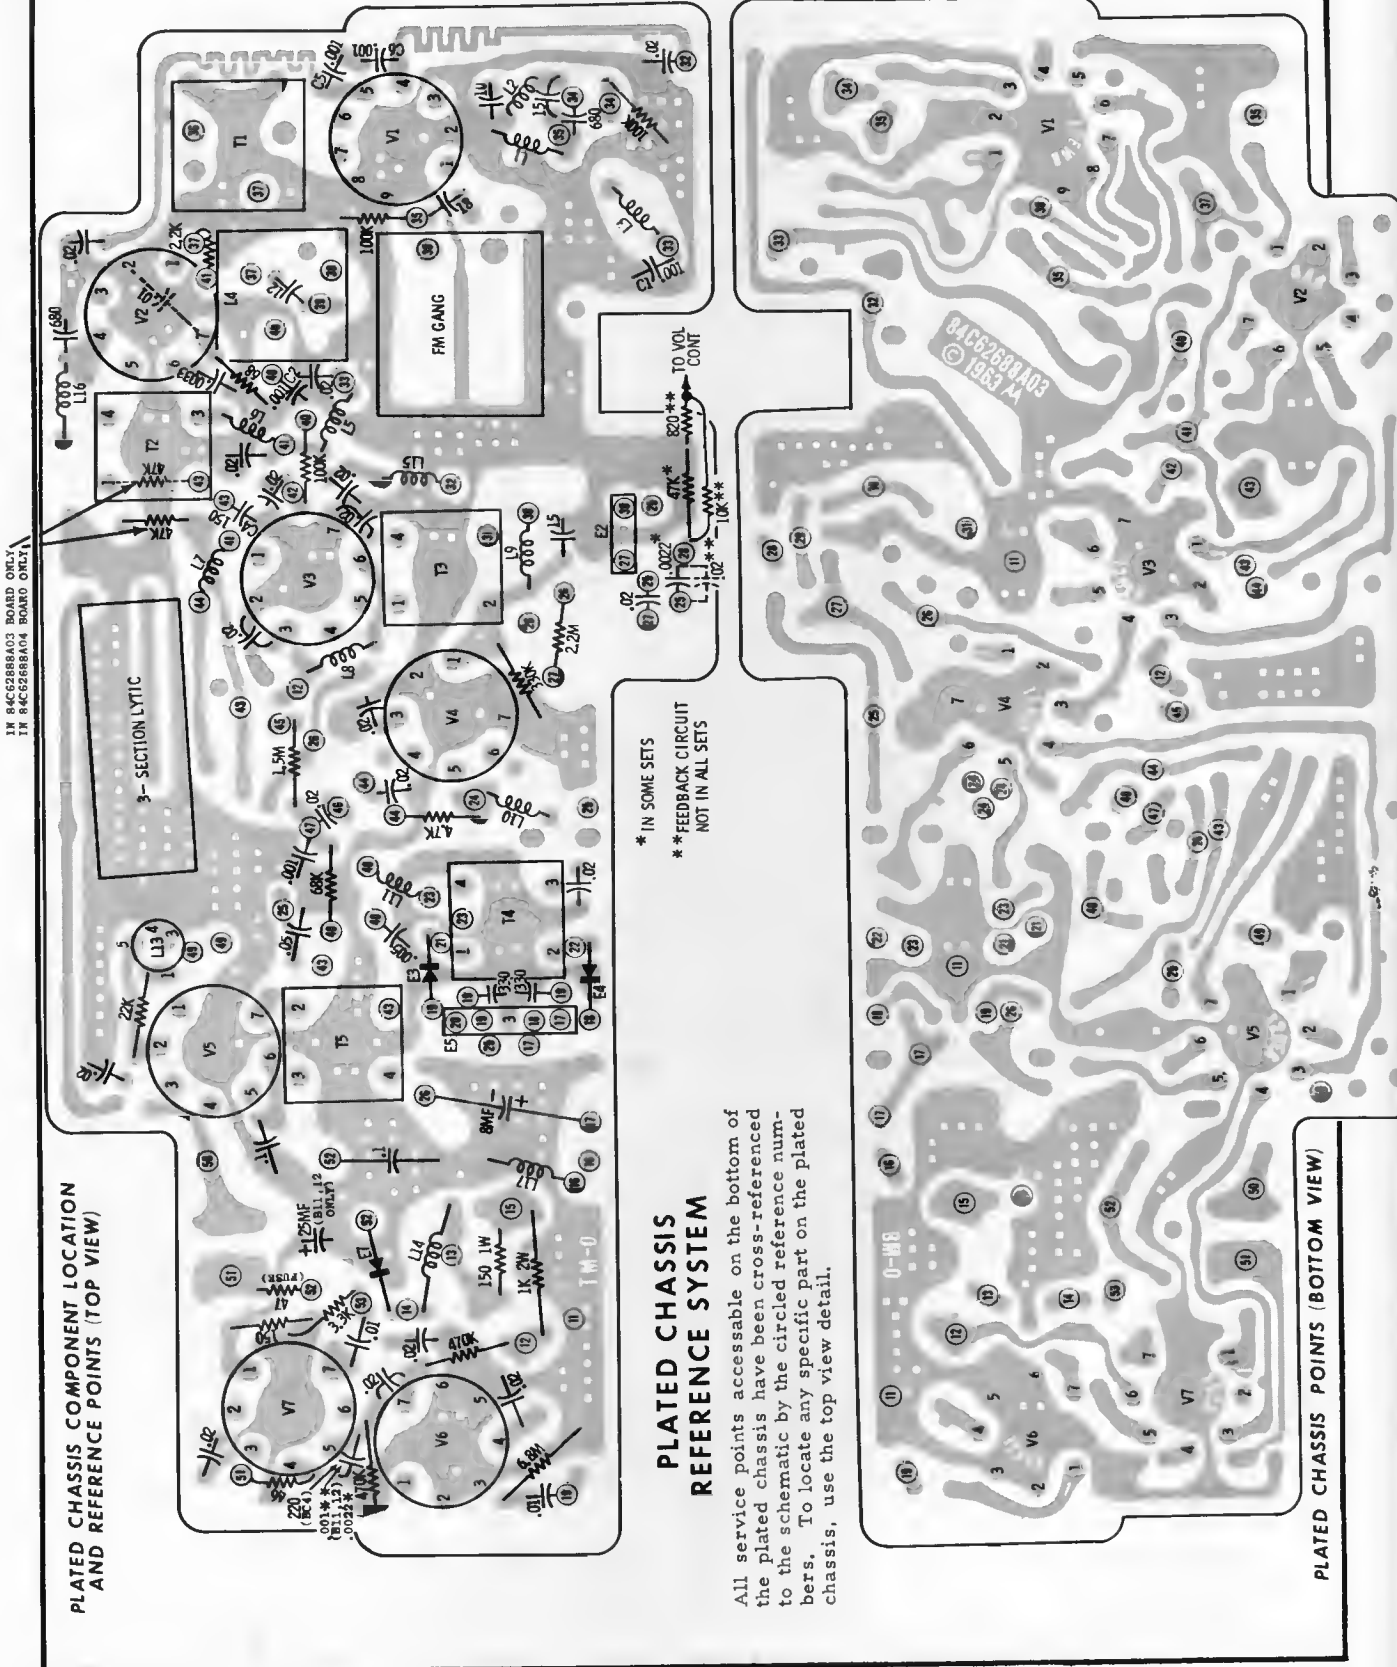

PLATED CHASSIS COMPONENT LOCATION AND REFERENCE POINTS (TOP VIEW)


PLATED CHASSIS REFERENCE SYSTEM

All service points accessible on the bottom of the plated chassis have been cross-referenced to the schematic by the circled reference numbers. To locate any specific part on the plated chassis, use the top view detail.

- * IN SOME SETS
- ** FEEDBACK CIRCUIT NOT IN ALL SETS






PLATED CHASSIS POINTS (BOTTOM VIEW)

MOTOROLA CHASSIS HS-4137 MODEL A25

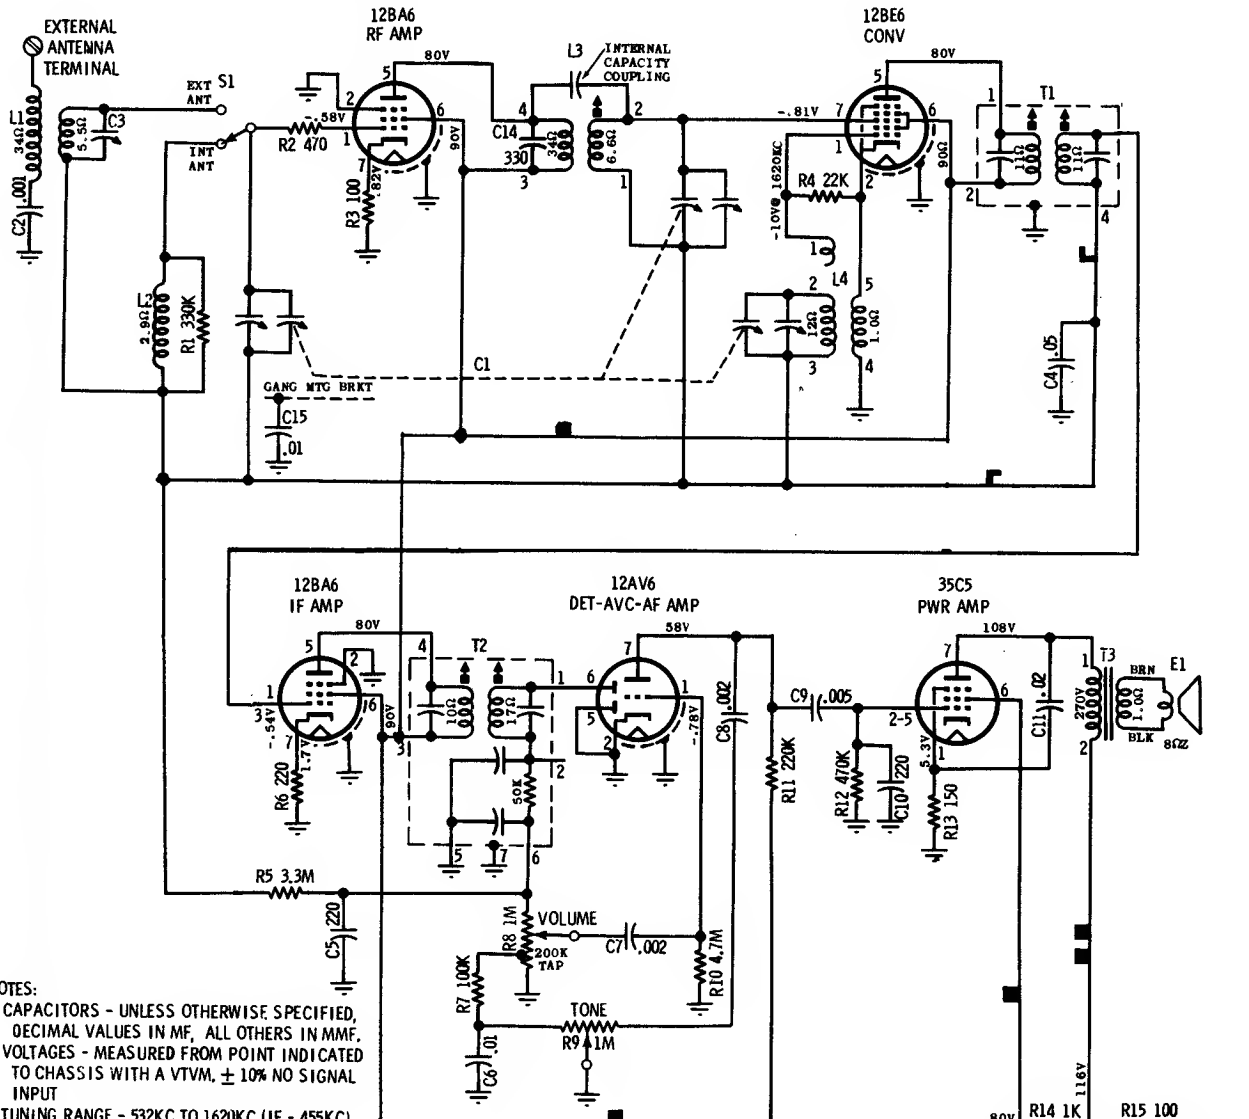


NOTES:
 CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF, ALL OTHERS IN MMF. VOLTAGES - MEASURED FROM POINT INDICATED TO CHASSIS WITH A VTVM, ± 10% NO SIGNAL INPUT
 TUNING RANGE - 532KC TO 1620KC (IF - 455KC)

PLATED BOARD WIRING LEGEND

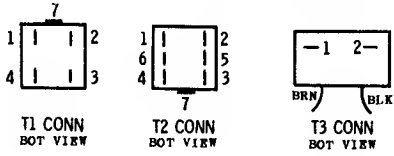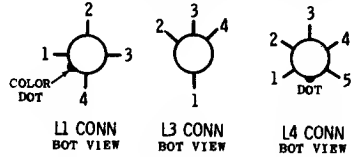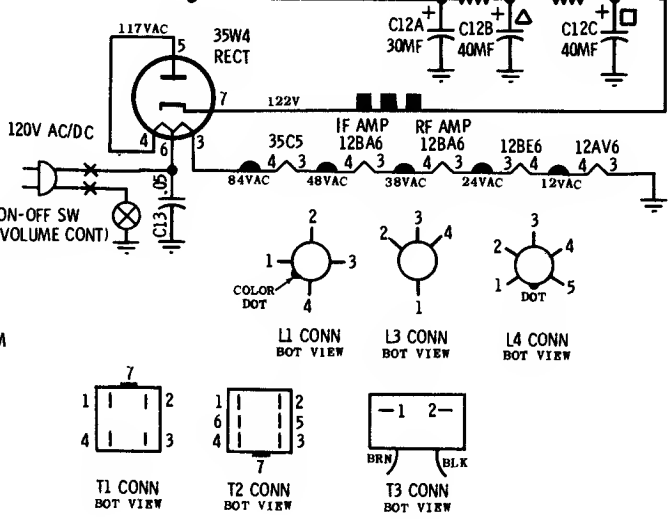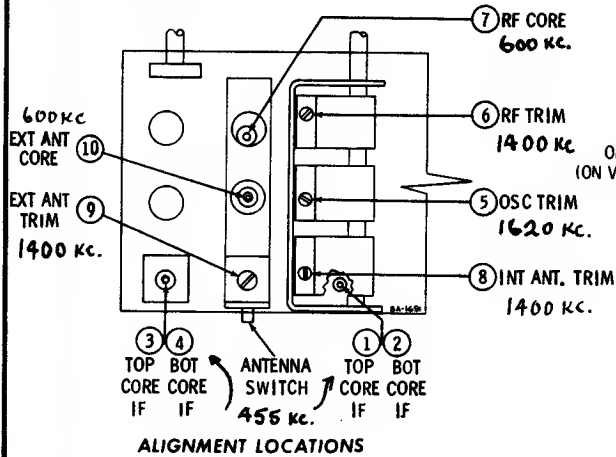

MOTOROLA MODELS A26, A27, C38, C39

(Continued on page 71)

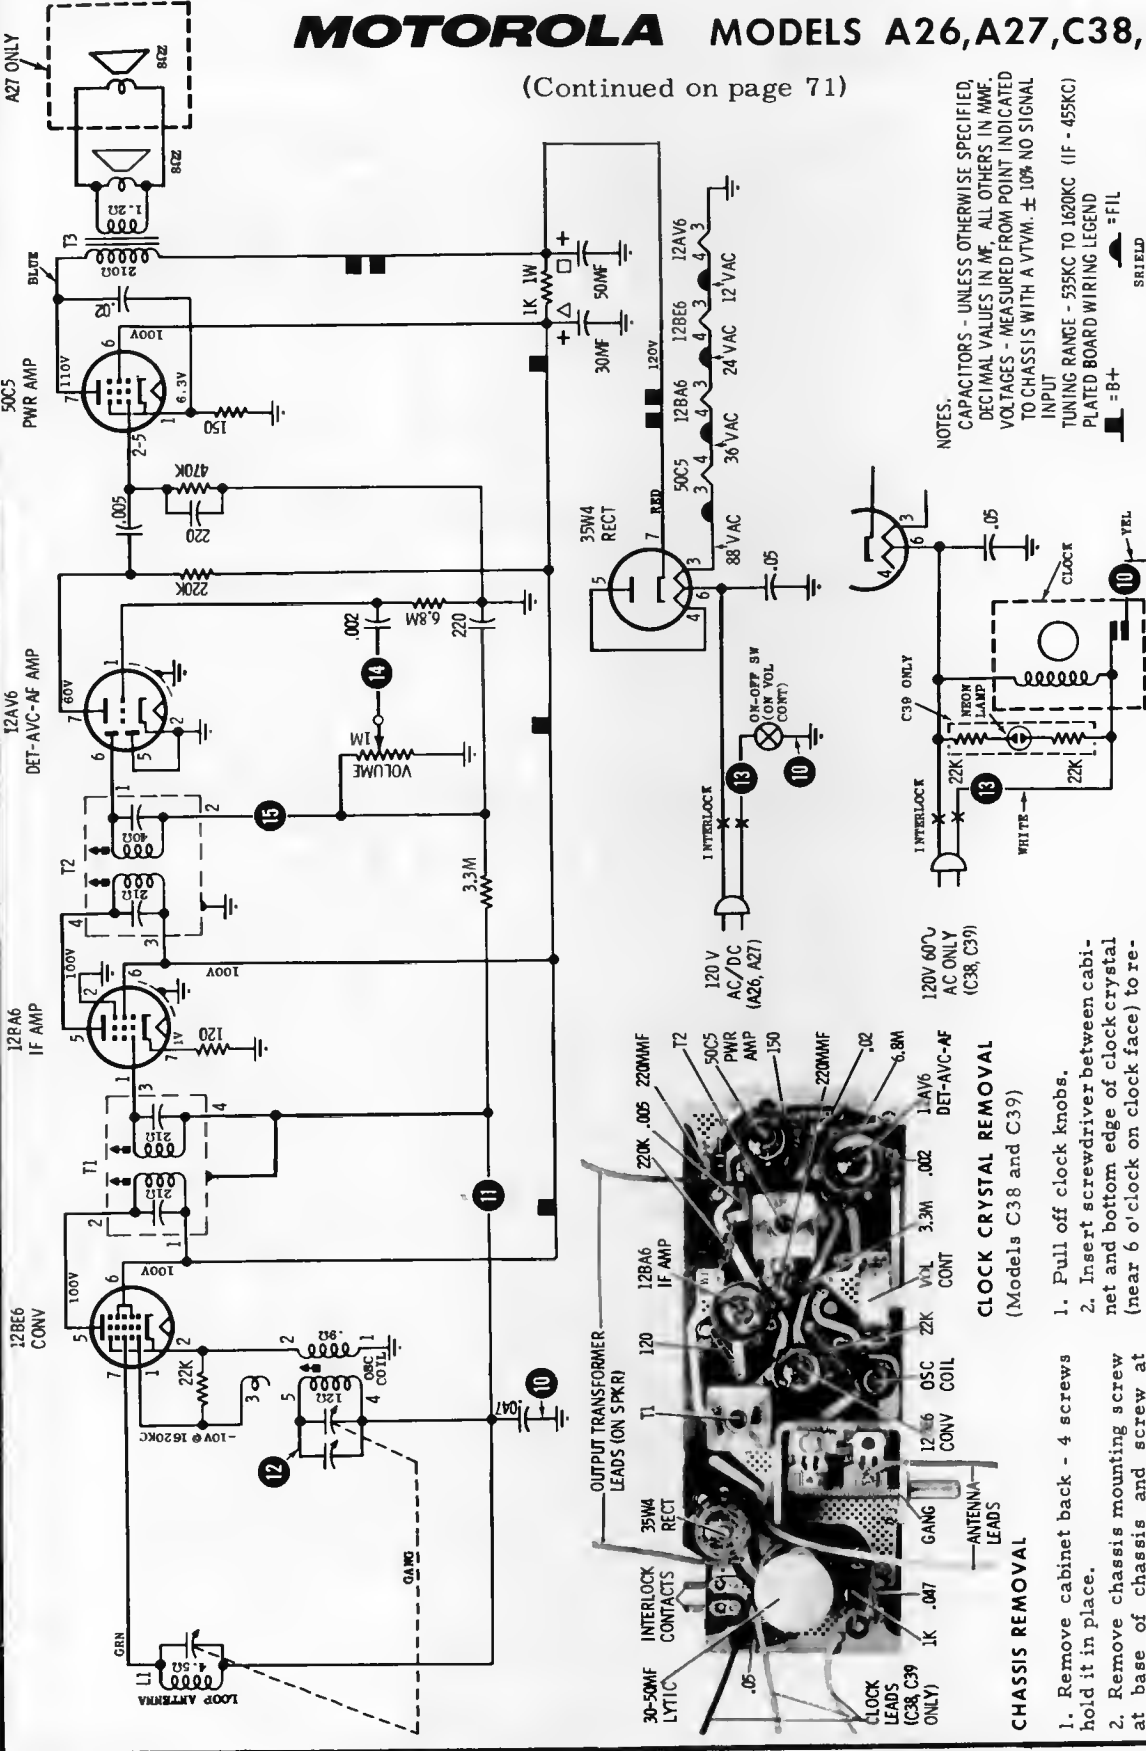

NOTES.
 CAPACITORS - UNLESS OTHERWISE SPECIFIED,
 DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
 VOLTAGES - MEASURED FROM POINT INDICATED
 TO CHASSIS WITH A VTVM. $\pm 10\%$ NO SIGNAL
 INPUT
 TUNING RANGE - 535KC TO 1620KC (IF - 455KC)
 PLATED BOARD WIRING LEGEND

 = B+
 = B-
 OSC COIL CONN T1 & T2 CONN
 BOT VIEW BOT VIEW

CLOCK CRYSTAL REMOVAL

(Models C38 and C39)

1. Pull off clock knobs.
 2. Insert screwdriver between cabinet and bottom edge of clock crystal (near 6 o'clock on clock face) to release catch; then lift out crystal.
- NOTE: Use caution when removing crystal because the cabinet front can be easily scratched. DO NOT allow the screwdriver or tab on the crystal to slide across the cabinet.



CHASSIS REMOVAL

1. Remove cabinet back - 4 screws hold it in place.
2. Remove chassis mounting screw at base of chassis and screw at tuning gang mounting bracket.
3. Pull off volume knob ONLY. (Do not pull captivated tuning knob.)
4. Unsolder appropriate leads to slide chassis out of tuning knob and cabinet.

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

MOTOROLA Models A26, A27, C38, C39, Continued


ALIGNMENT LOCATIONS

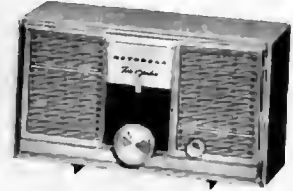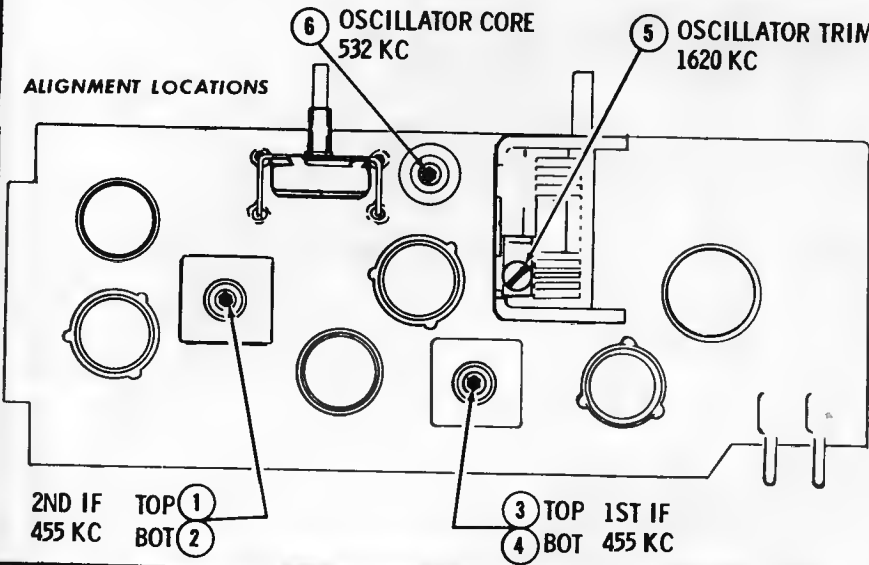


MODEL A27

PLATED CHASSIS REFERENCE SYSTEM

All service points accessible on the bottom of the plated chassis have been cross-referenced to the schematic by the circled reference numbers. To locate any specific part on the plated chassis, use the plated chassis parts location photo.

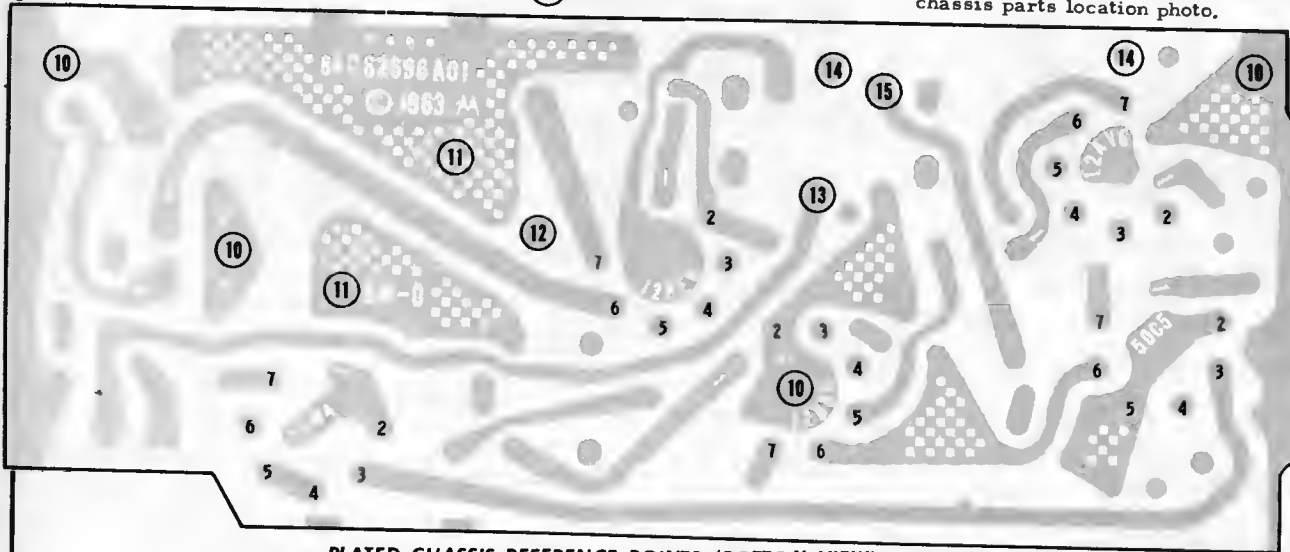

PLATED CHASSIS REFERENCE POINTS (BOTTOM VIEW)

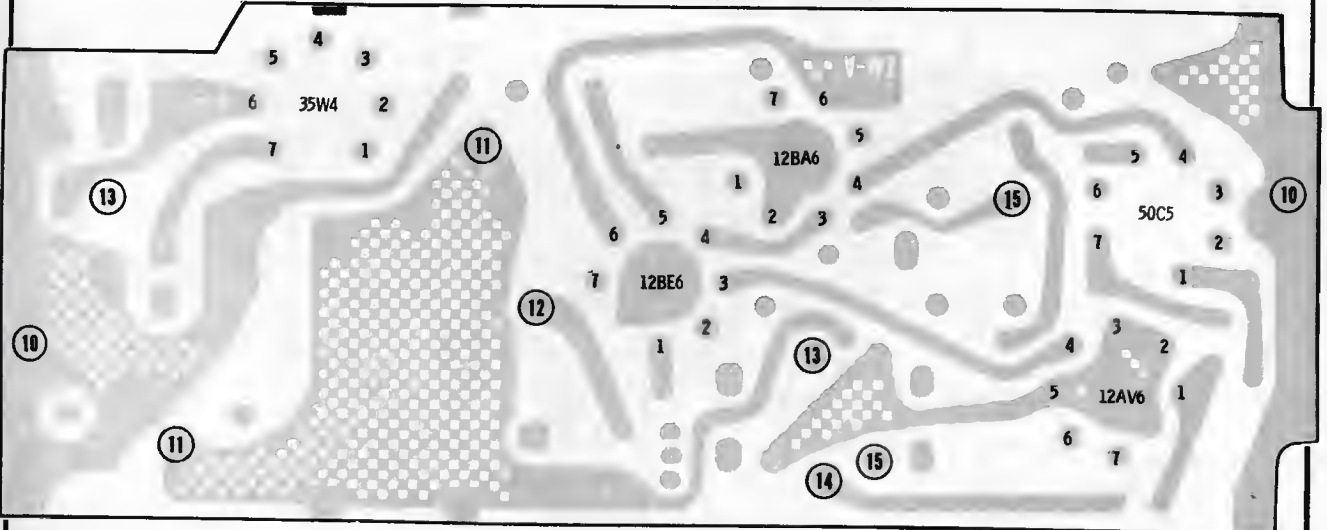




PLATED CHASSIS REFERENCE POINTS (TOP VIEW)

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO




MOTOROLA Chassis HS-1128, HS-1147

SCHEMATIC DIAGRAM (HS-1128 & 1147)

NOTES:
 CAPACITORS—UNLESS OTHERWISE SPECIFIED
 DECIMAL VALUES IN μ F; ALL OTHERS IN M μ F.
 VOLTAGES—MEASURED FROM POINT INDICATED TO
 CHASSIS WITH A VTVM. \pm 10% NO SIGNAL INPUT.
 TUNING RANGE—AM 530KC TO 1600KC (IF—455KC)
 FM 88 MC TO 108 MC (IF—10.7 MC)

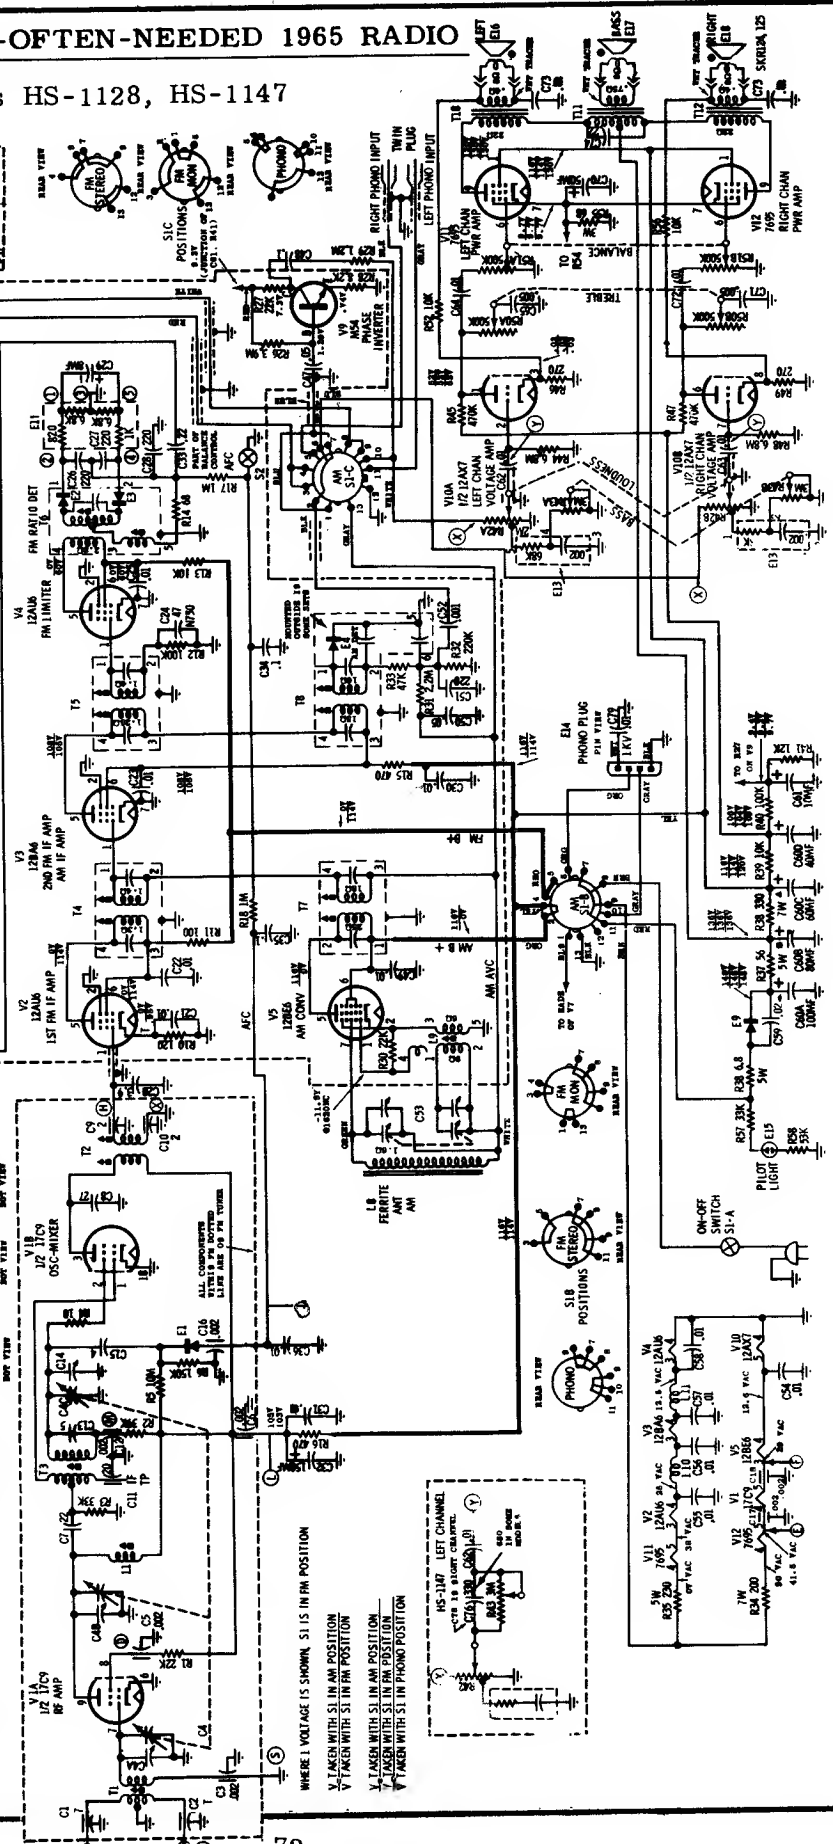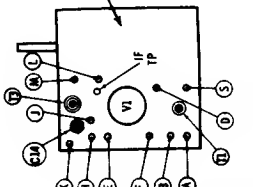

WHERE 1 VOLTAGE IS SHOWN, S1 IS IN FM POSITION
 V1 TAKEN WITH S1 IN AM POSITION
 V2 TAKEN WITH S1 IN FM POSITION
 V3 TAKEN WITH S1 IN AM POSITION
 V4 TAKEN WITH S1 IN FM POSITION
 V5 TAKEN WITH S1 IN PHONO POSITION

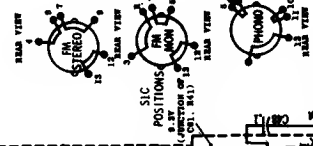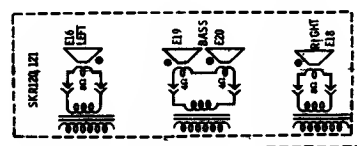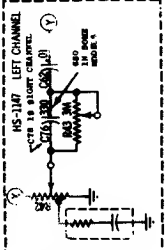


MOTOROLA MODELS SKR120,121,124,125

CHASSIS HS-1128,1147

MOTOROLA

MOTOROLA CHASSIS HS-1130, 1181, 1253, MODELS SP53, SP54

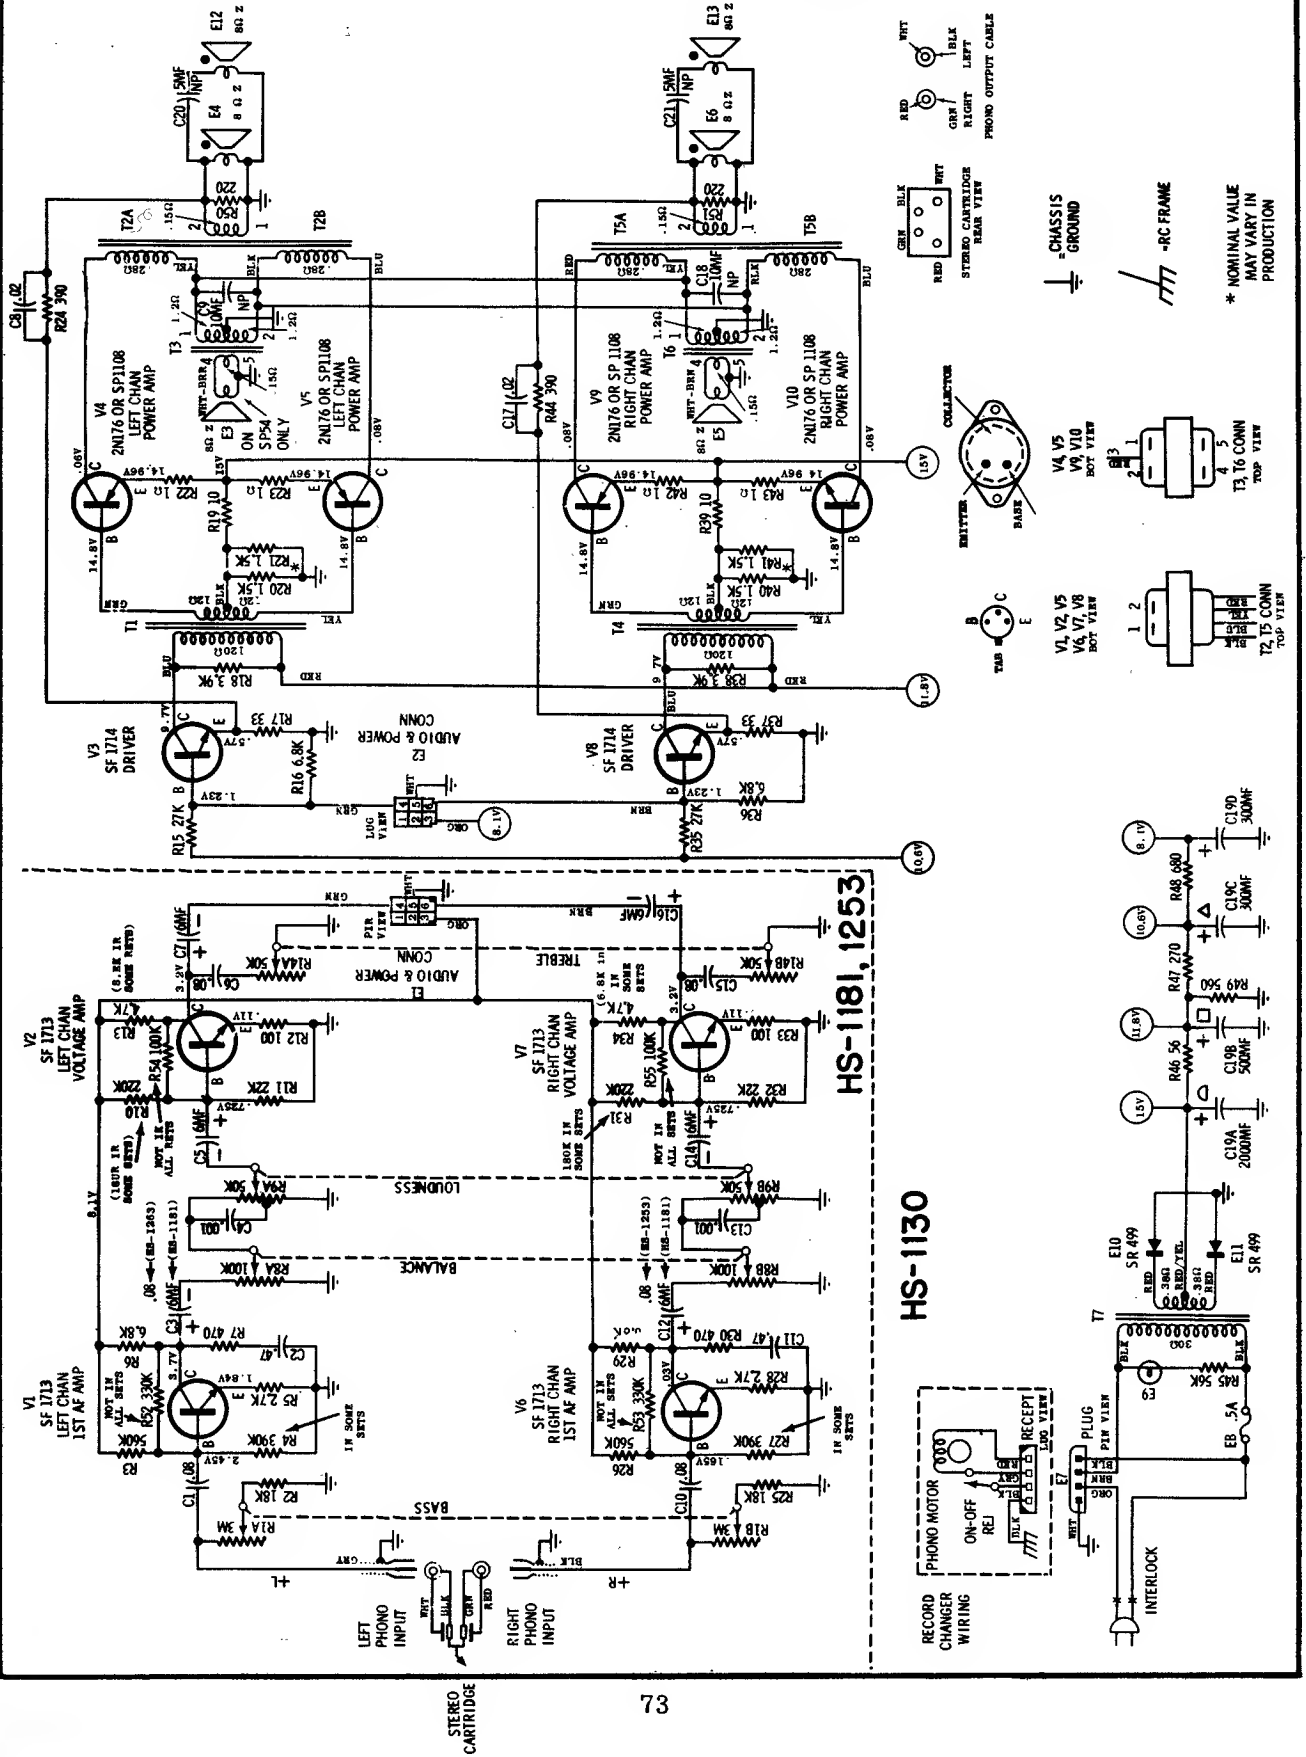

MOTOROLA CHASSIS HS-1137,1138,1222

MODELS SK136,161,162,SKR135,136,161,162, SK-166, SKR-166, SKR-167

(Material on pages 74 through 76)

Three-Channel Stereophonic Consoles; SK versions use the HS-1137 pre-amp, SKR versions use the HS-1138 tuner pre-amp; all versions use the HS-1222 power amp.


OPERATING AMPLIFIER WITH LOAD - Always operate the amplifier chassis with an output load (either the speakers or an 8 ohm, 10 watt resistive load) across each channel.

SPEAKER PHASING - Refer to the schematic diagram.

ELECTRICAL SPECIFICATIONS

Power Supply: 120 volts, 60 cycle AC only


Power Consumption: 190 watts (includes radio power).

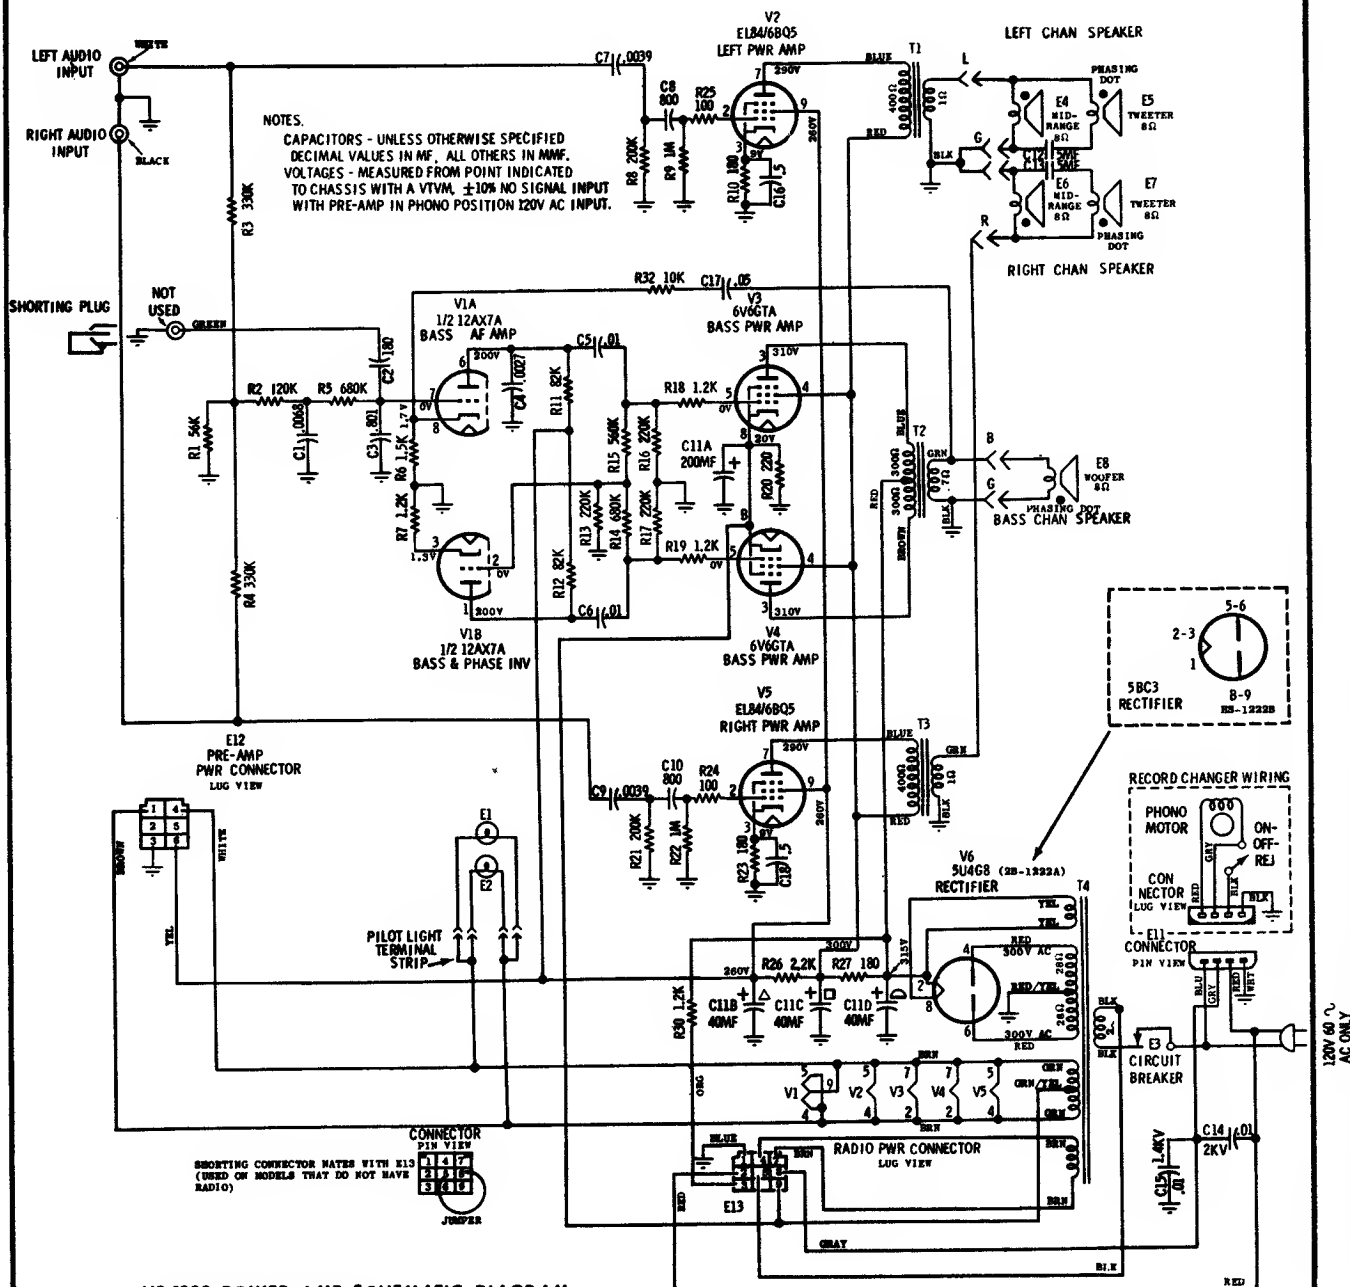

HS-1222 POWER AMP SCHEMATIC DIAGRAM

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

MOTOROLA Chassis HS-1137, HS-1138 (see pages 74, 76, for related data)

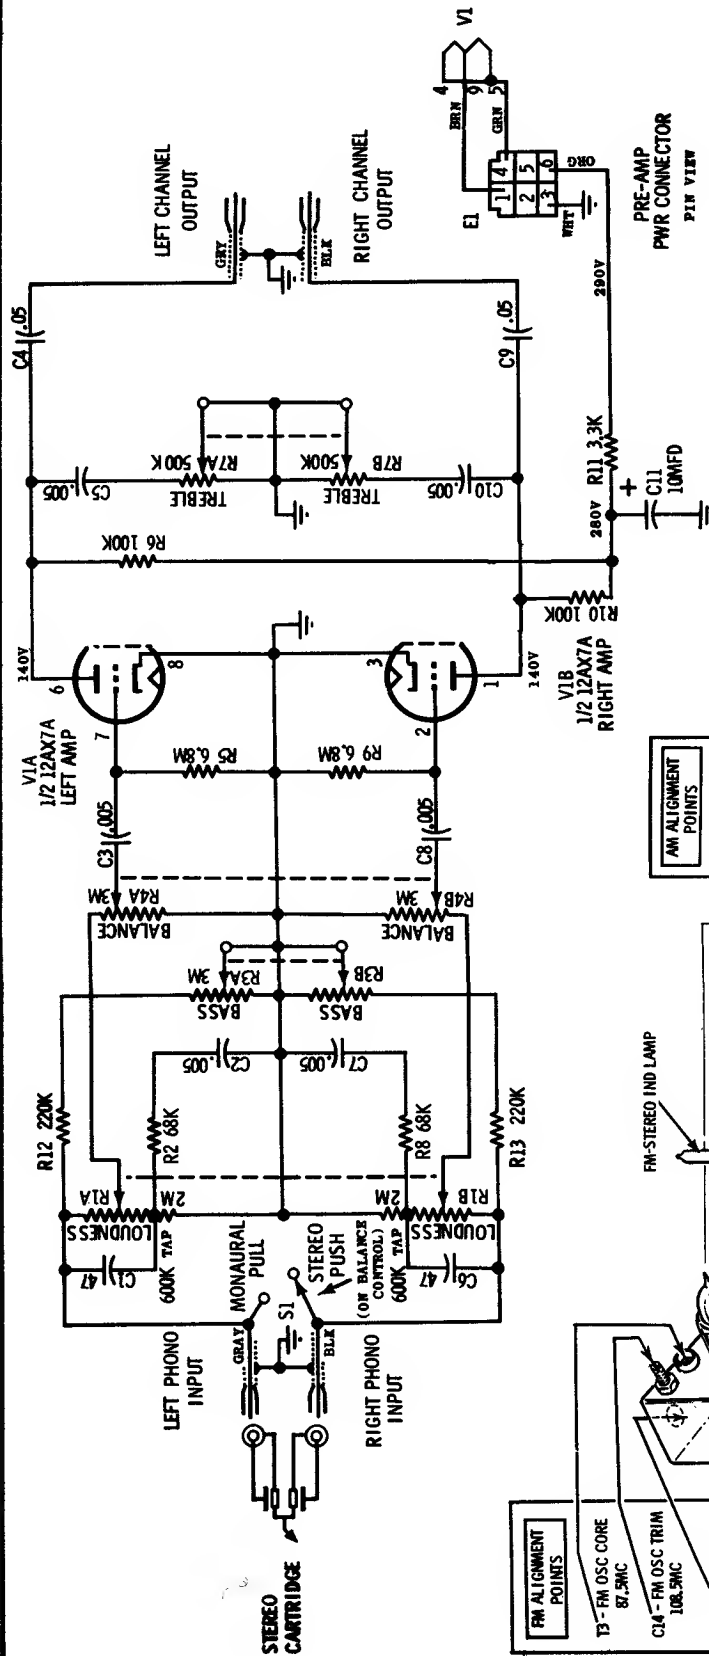

HS-1137 PRE-AMP SCHEMATIC DIAGRAM


CHASSIS REMOVAL

Pre-Amp (HS-1137)

1. Remove control knobs.
2. Remove back cover by removing screws.
3. Remove record storage compartment by removing its bezel and then compressing top edges.
4. Remove 4 hex nuts and 1 machine screw located next to loudness control.
5. Pull pre-amp down and disconnect any leads if necessary.


TUNER CHASSIS (HS-1138)

1. Remove back cover by removing screws and pulling cover back to disengage inter-lock plug.
2. Remove record storage compartment by removing screw in bracket at bottom of storage compartment. Compress top edges of compartment to remove it.
3. Disconnect cables, remove the chassis mounting screws and lift chassis out. Power amp chassis can be removed by removing screws holding chassis to cabinet bottom and lifting chassis out. Be sure all cables are disconnected before removing chassis.

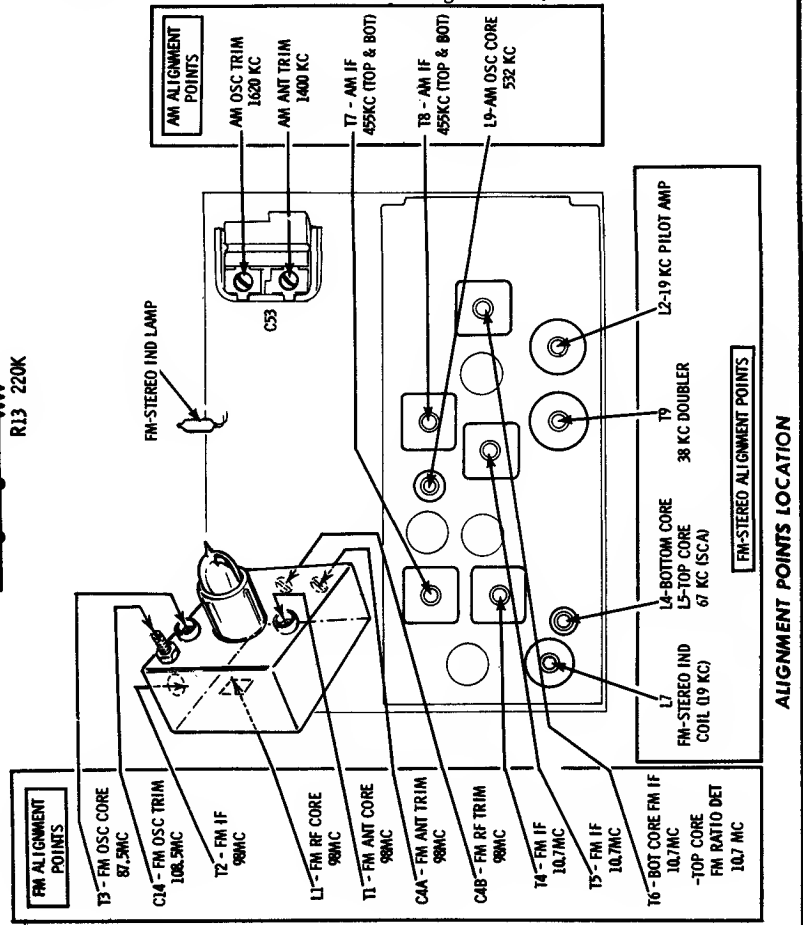

ALIGNMENT POINTS LOCATION

MOTOROLA Chassis HS-1138 Diagram

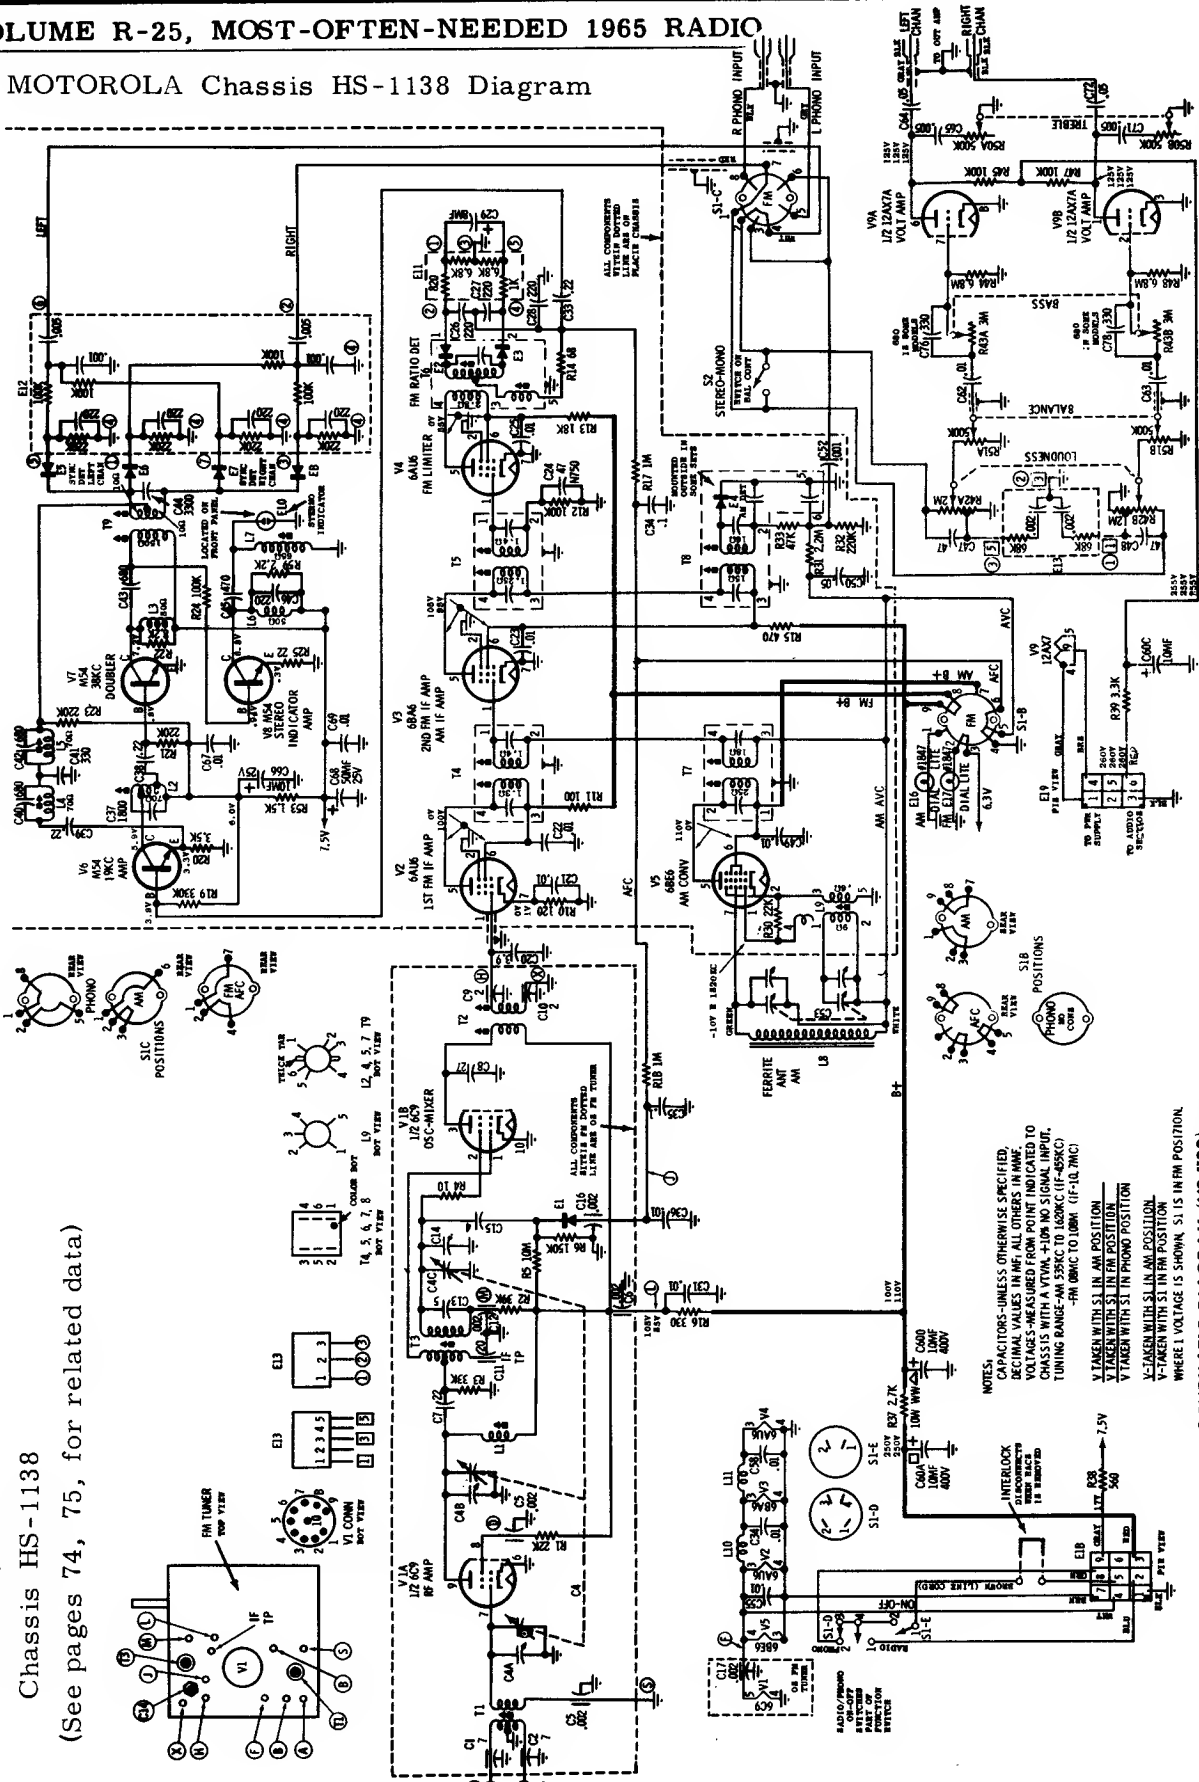

SCHEMATIC DIAGRAM (HS-1138)

MOTOROLA Chassis HS-1138

(See pages 74, 75, for related data)


MOTOROLA

MODELS SK145,163,SKR145,163 CHASSIS HS-1185,1186,1239

CHASSIS REMOVAL


1. Remove back cover by removing screws and pulling cover back to disengage inter-lock plug.
2. Remove record storage compartment by removing screw in bracket at bottom of storage compartment. Compress top edges of compartment to remove it.
3. Disconnect cables, remove chassis mounting screws and lift chassis out. Power amp chassis can be removed by removing screws holding chassis to cabinet bottom and lifting chassis out.

These models are three-channel Stereophonic consoles. SK versions use HS-1186 pre-amp chassis which is very similar to HS-1137 (on page 75); SKR versions use HS-1185 tuner which is very similar to HS-1138 (page 76); all versions use HS-1239 power amplifier, schematic diagram below.

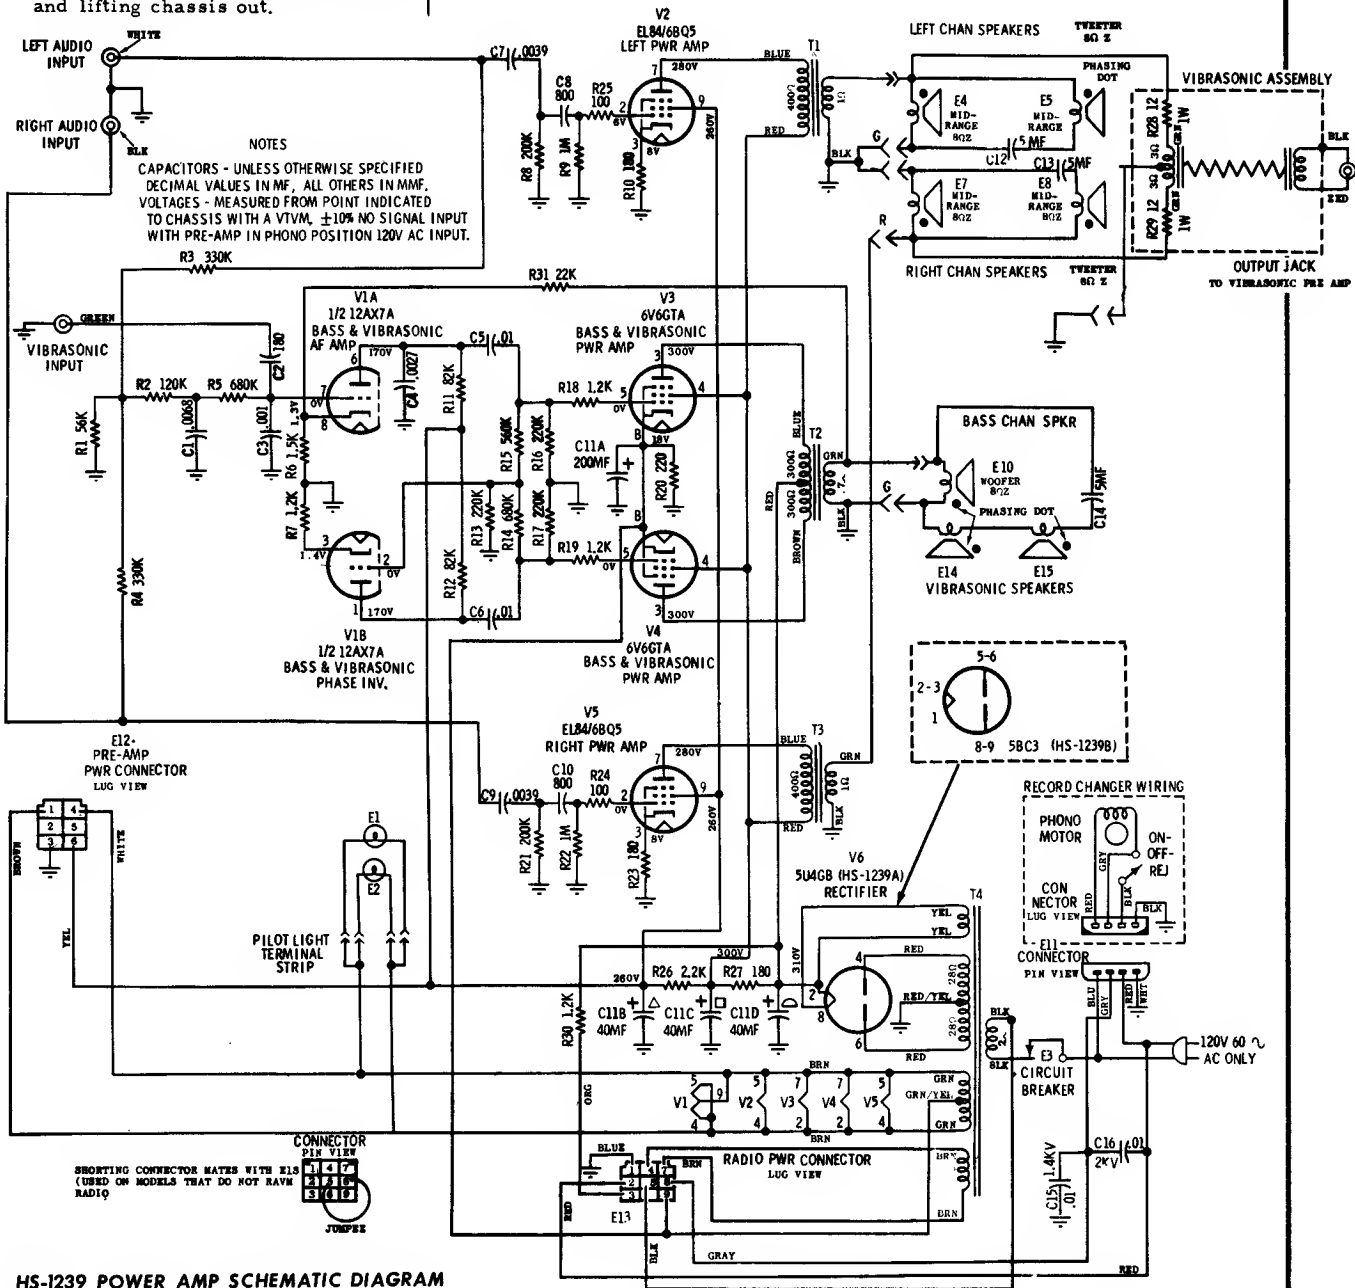

MOTOROLA

MODEL SK135 CHASSIS HS-1150

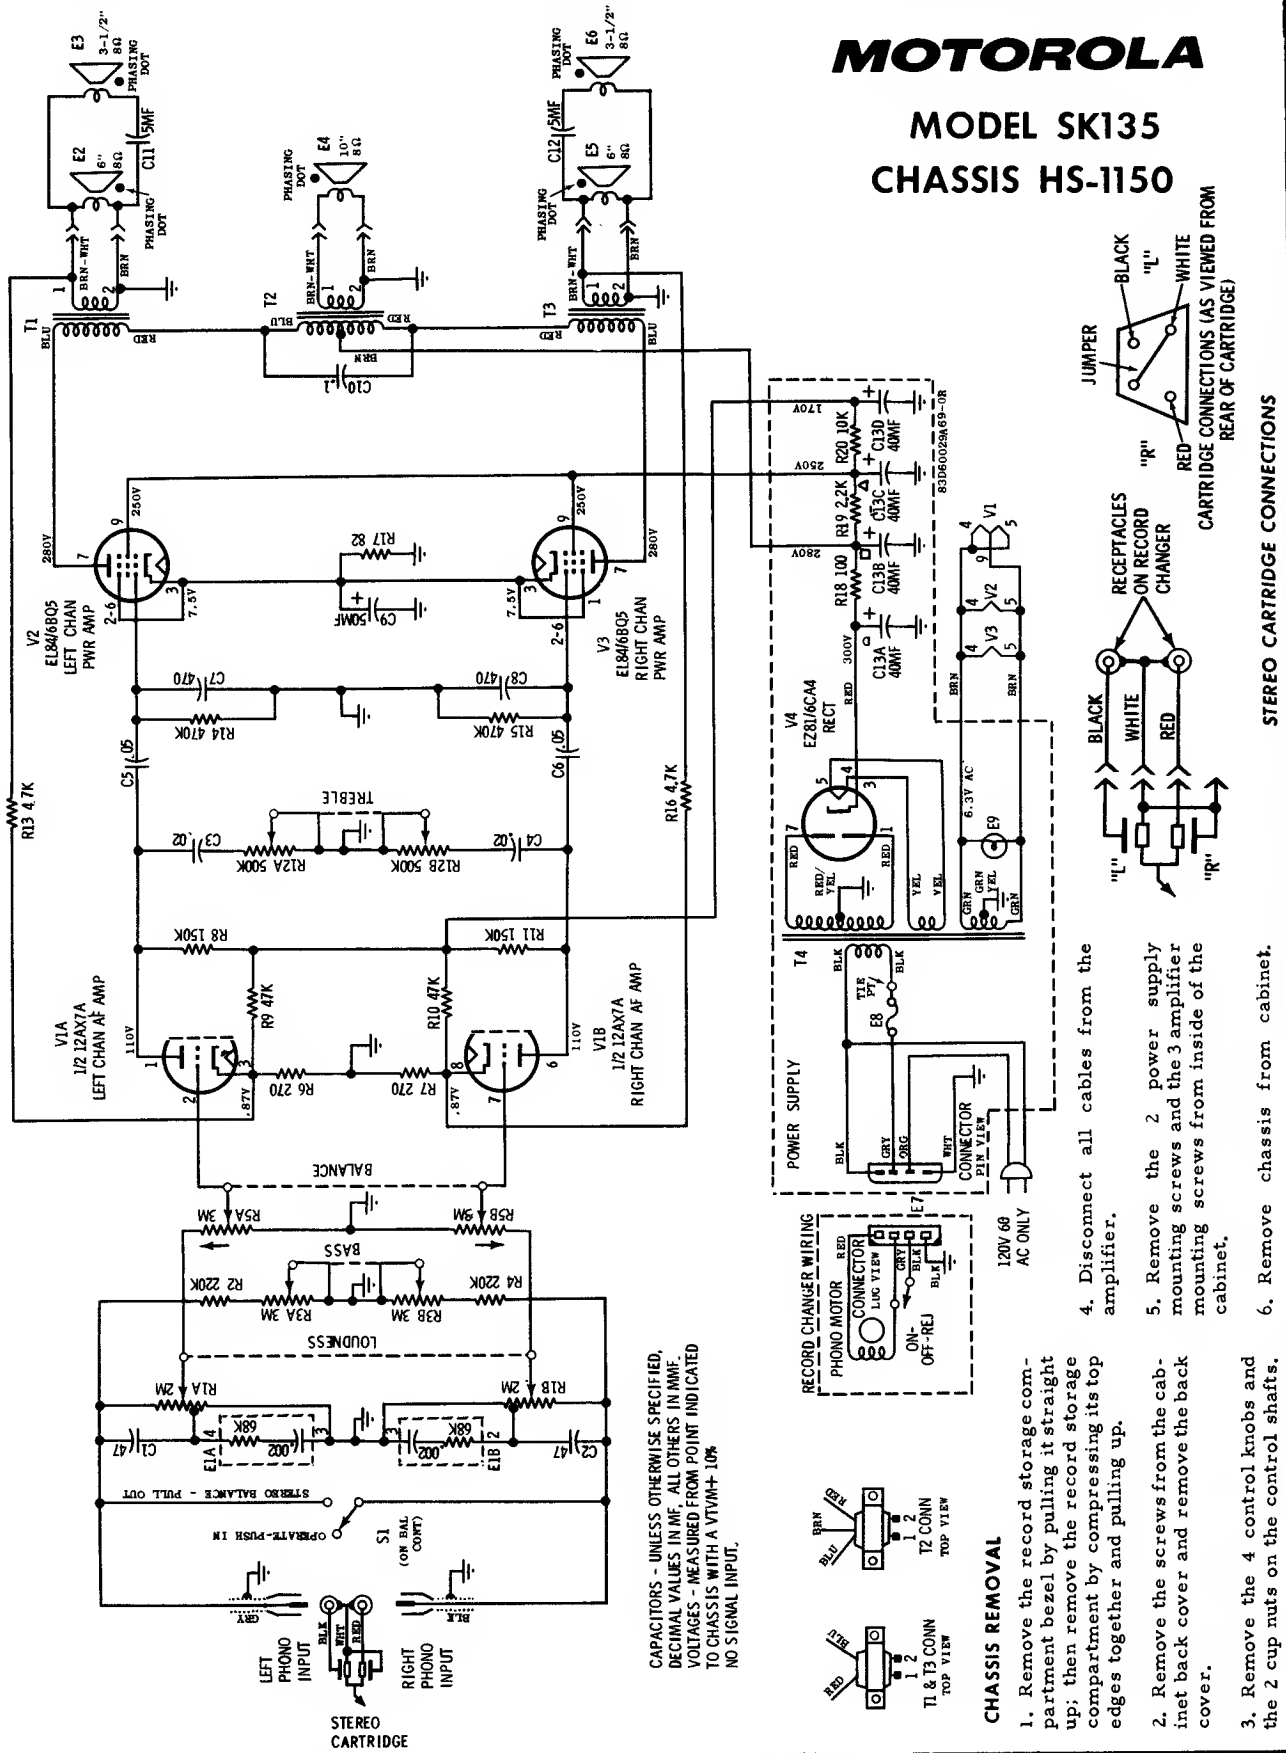


CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF, ALL OTHERS IN MME. VOLTAGES - MEASURED FROM POINT INDICATED TO CHASSIS WITH A VTVM/± 10% NO SIGNAL INPUT.

CHASSIS REMOVAL

1. Remove the record storage compartment bezel by pulling it straight up; then remove the record storage compartment by compressing its top edges together and pulling up.
2. Remove the screws from the cabinet back cover and remove the back cover.
3. Remove the 4 control knobs and the 2 cup nuts on the control shafts.

4. Disconnect all cables from the amplifier.
5. Remove the 2 power supply mounting screws and the 3 amplifier mounting screws from inside of the cabinet.
6. Remove chassis from cabinet.

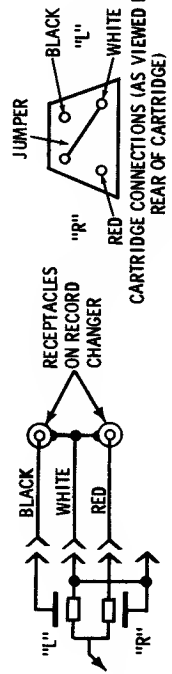

STEREO CARTRIDGE CONNECTIONS


MOTOROLA

MODELS SK147,148,150,154,164,165, SKR147,148,150,153,154,164,165

CHASSIS HS-1141,1197,1198

The SK models are stereophonic amplifiers using HS-1197 pre-amplifier (this page) and HS-1198 power amplifier (page 80). The SKR types use the same amplifiers and HS-1141 tuner (p. 81).

HS-1197 PRE-AMP SCHEMATIC DIAGRAM

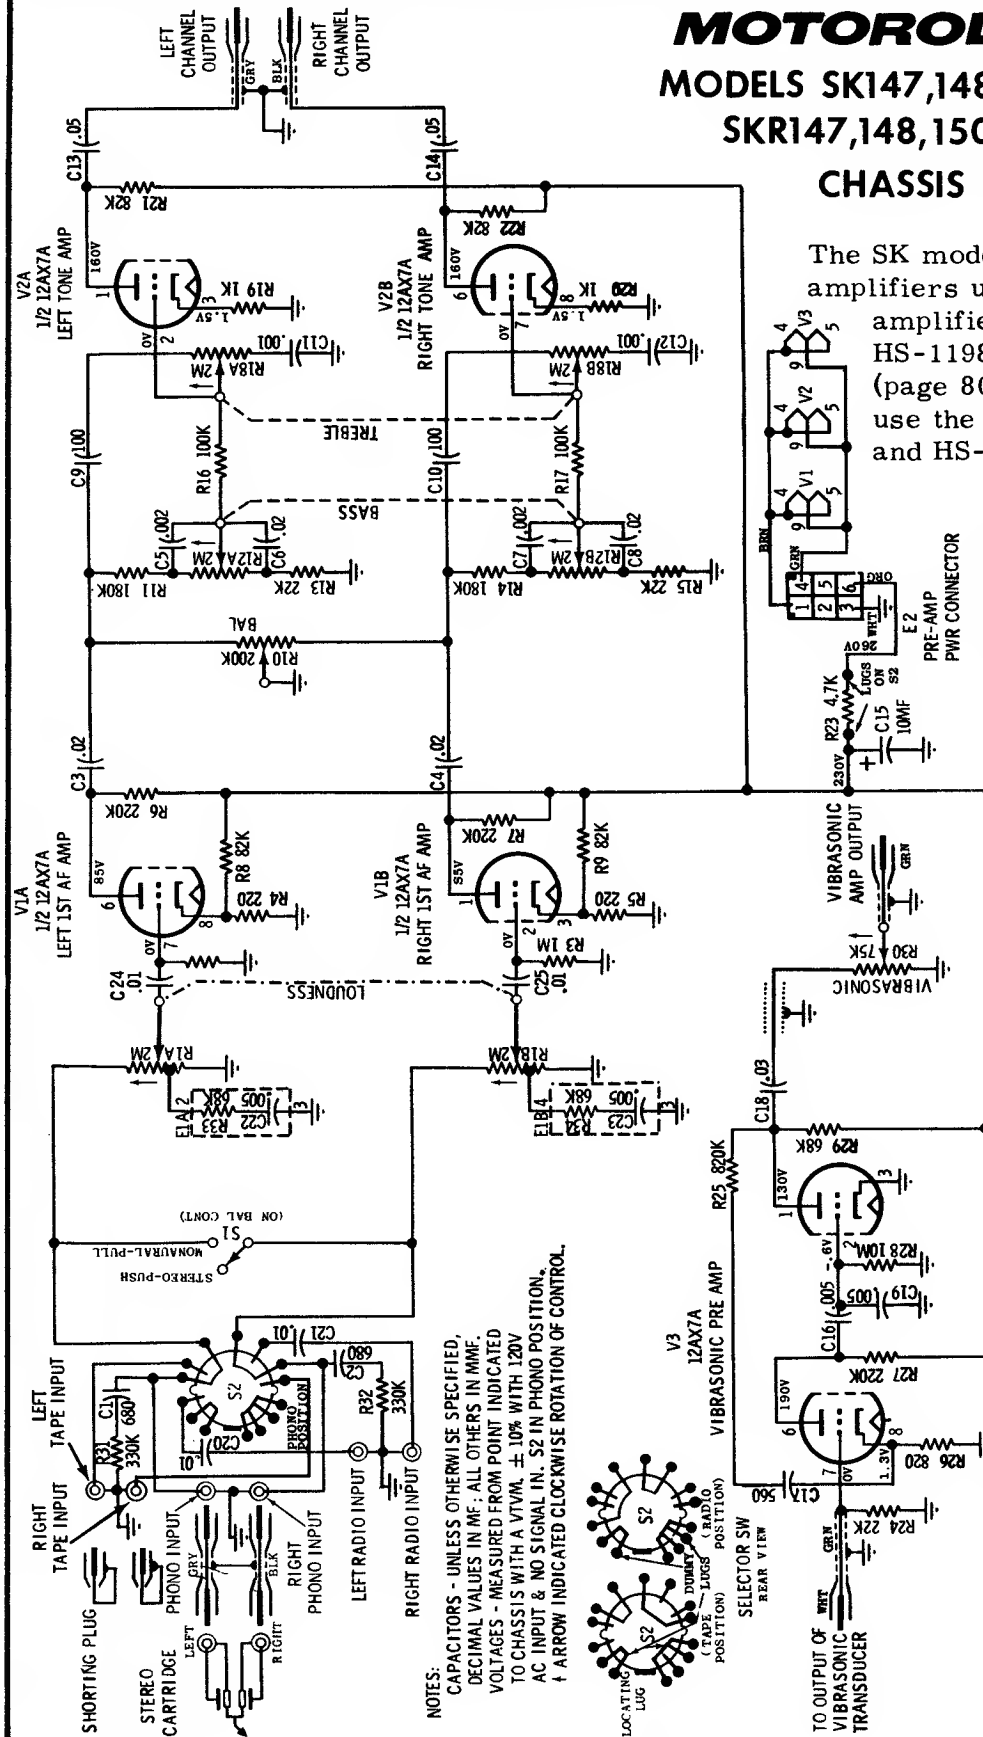

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF; ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED TO CHASSIS WITH A VTVM, $\pm 10\%$ WITH 120V AC INPUT & NO SIGNAL IN. S2 IN PHONO POSITION.
↑ ARROW INDICATED CLOCKWISE ROTATION OF CONTROL.

mounting hex nuts and 2 rubber sleeves with eyelets and remove chassis from cabinet.

CHASSIS REMOVAL (POWER AMP HS-1198)

1. Remove cabinet back cover mounting screws and cabinet back cover.
2. Disconnect all cables, remove chassis mounting screws then the chassis.

and washers; then lift chassis out of cabinet.

CHASSIS REMOVAL (HS-1197)


1. On models that contain the built-in AM-FM tuner, HS-1141, it will be necessary to remove the HS-1141 as described above because the HS-1199 pre-amp is attached to it.
2. On models not containing the AM-FM tuner, remove the cabinet back cover as above, disconnect all cables, then remove the 2 chassis

CHASSIS REMOVAL (HS-1141)


1. Remove cabinet back cover mounting screws and cabinet back cover.
2. On models that use a record well, remove the well as follows: Remove record well bezel by lifting straight up, then remove well by compressing top edges and pulling up.
3. Unplug all cables and leads; remove 2 chassis mounting wing nuts

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


MOTOROLA Chassis HS-1198 Amplifier (for list of models see page 79)

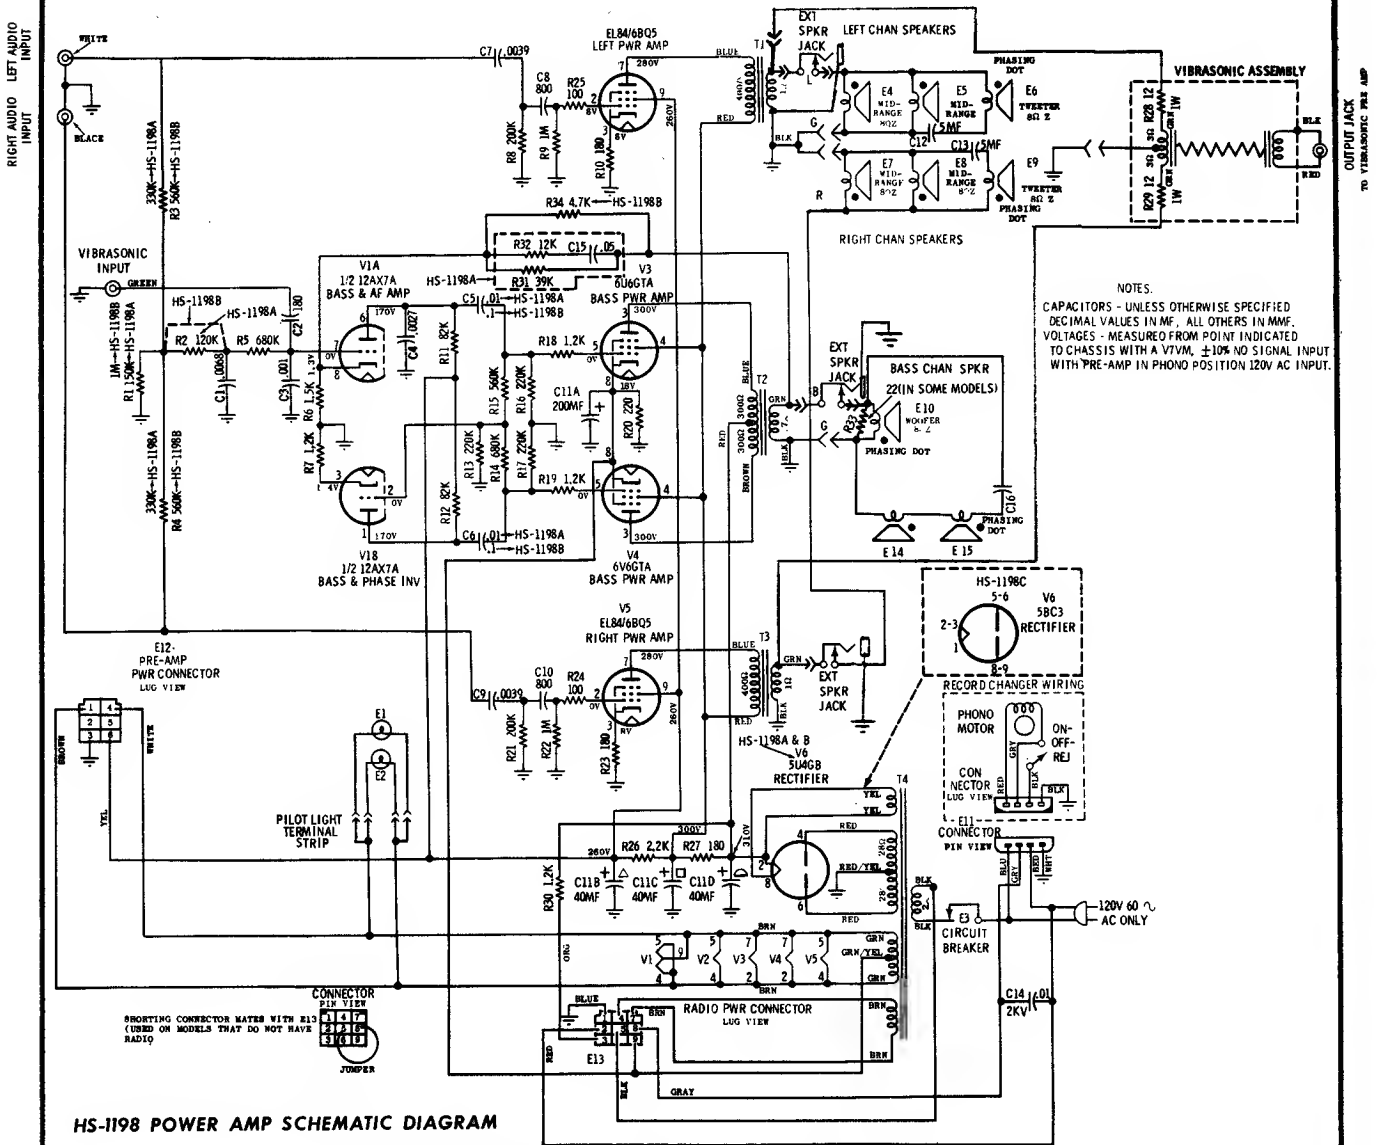

Additional material for HS-1141 Tuner, see page 81

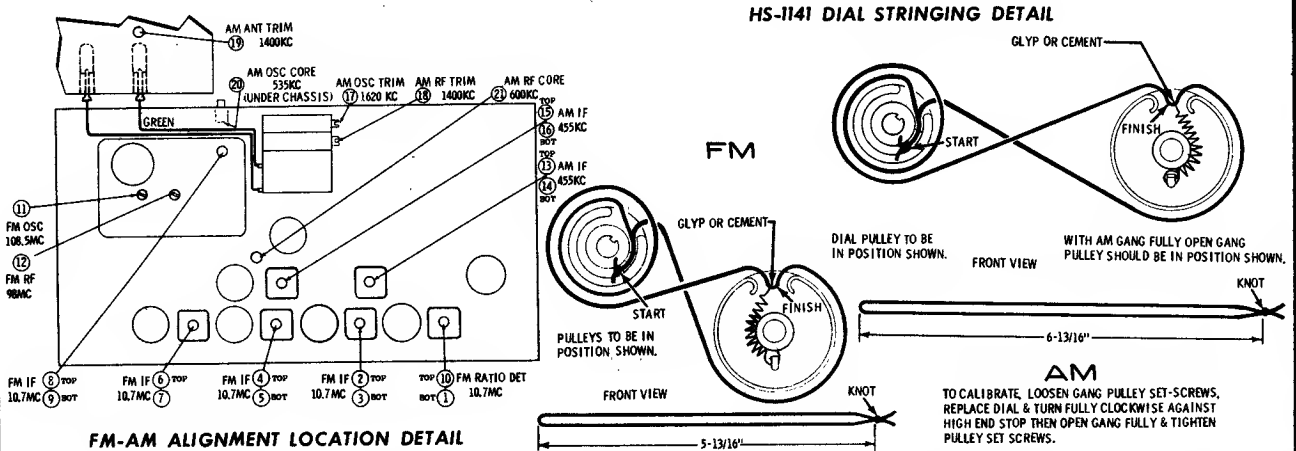

MOTOROLA Chassis HS-1141 Tuner used in various models, see pages 79 and 82
(Tuner HK81 uses HS-1141 and is used with various models)

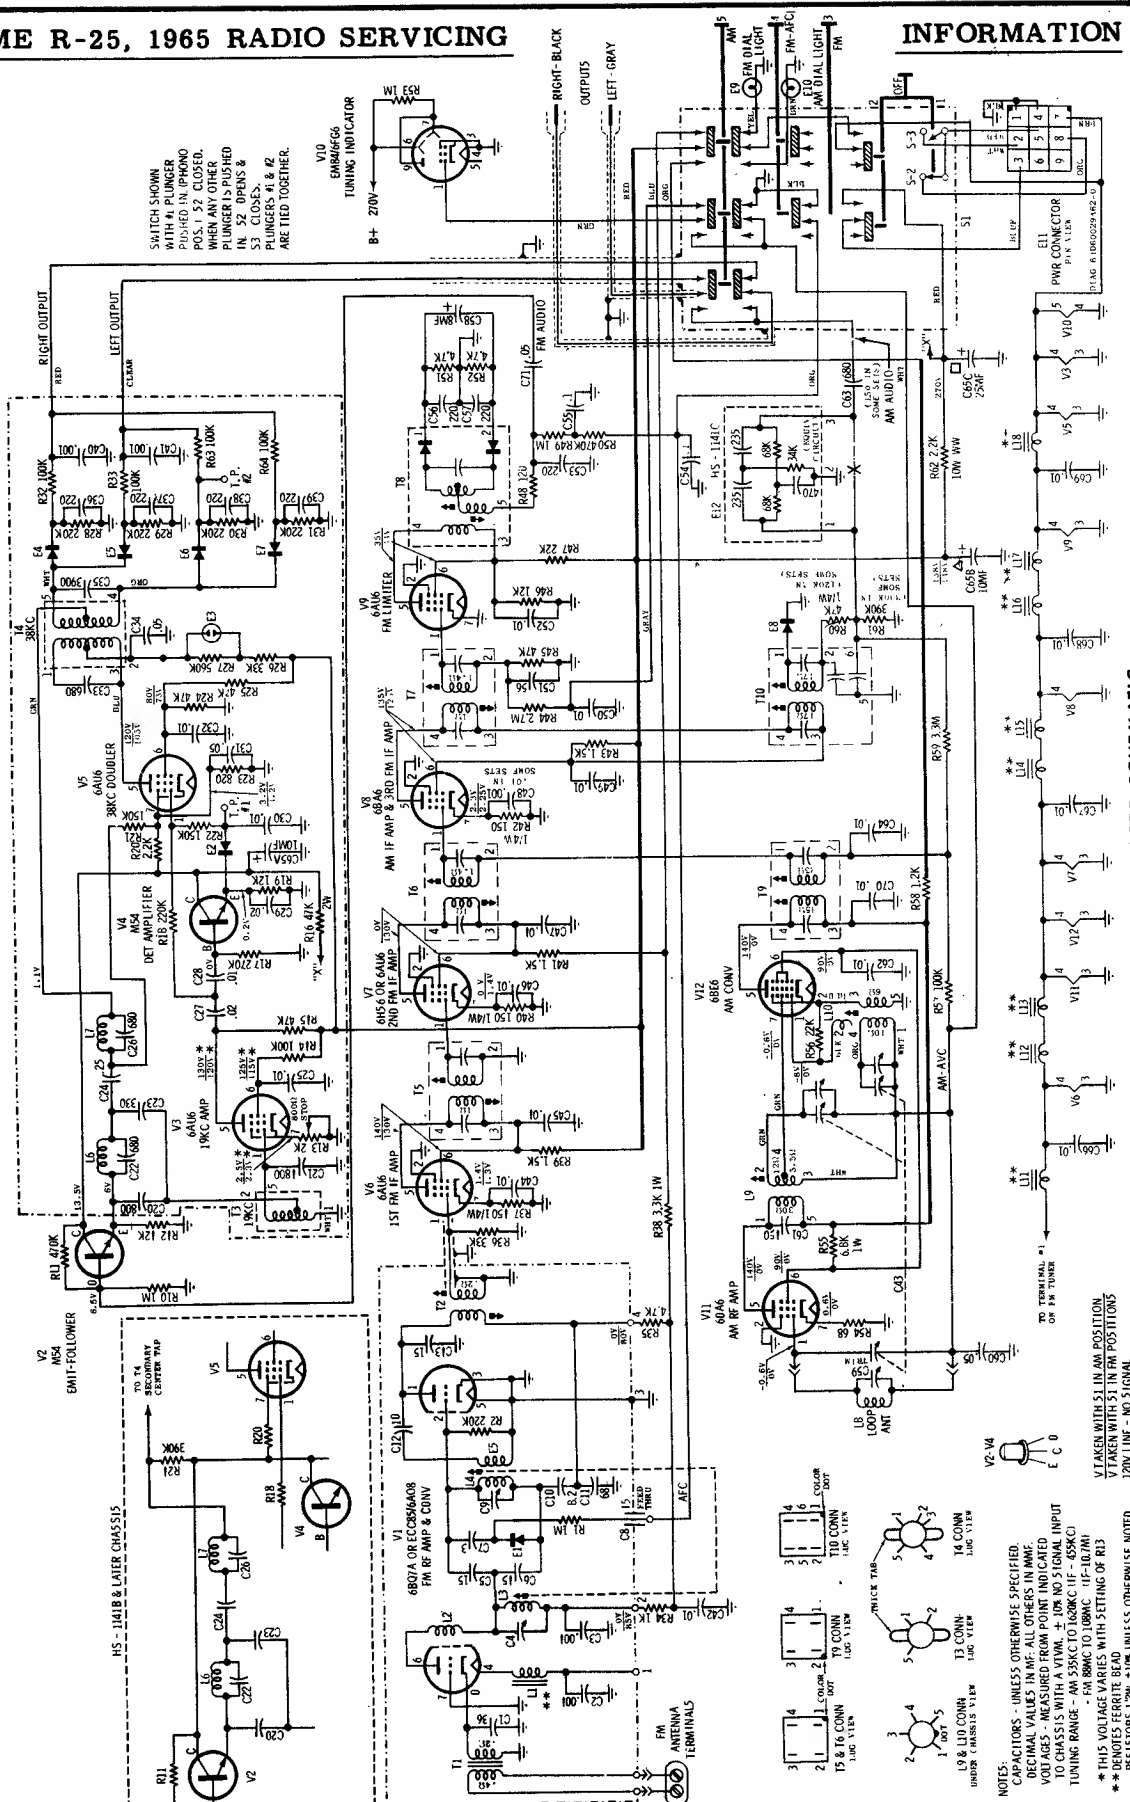

HS-1141 A-M-FM TUNER REVISED SCHEMATIC


NOTES:
 CAPACITORS - UNLESS OTHERWISE SPECIFIED, DECIMAL VALUES IN MF; ALL OTHERS IN MMF.
 VOLTAGES - MEASURED FROM POINT INDICATED TO CHASSIS WITH A 100K Ω, ± 10K Ω SIGNAL INPUT TUNING RANGE - AM 550KC TO 1600KC (HS-1141, HK81)
 * THIS VOLTAGE VARIES WITH SETTINGS OF R13
 ** DENOTES FREQUENCY BEAD
 RESISTORS 1/2W, ± 10% UNLESS OTHERWISE NOTED

MOTOROLA

MODELS SK151,152, SKR151,152,155,156,157,158,159,160


CHASSIS HS-1141,1199,1200,1200-1

Models with SK prefix use HS-1199 pre-amplifier (see page 83) and HS-1200 or HS-1200-1 (see circuit below) for stereo reproduction. Stereo models with SKR prefix use the same amplifiers and HS-1141 tuner (diagram on page 81). Other tuner data on page 80.

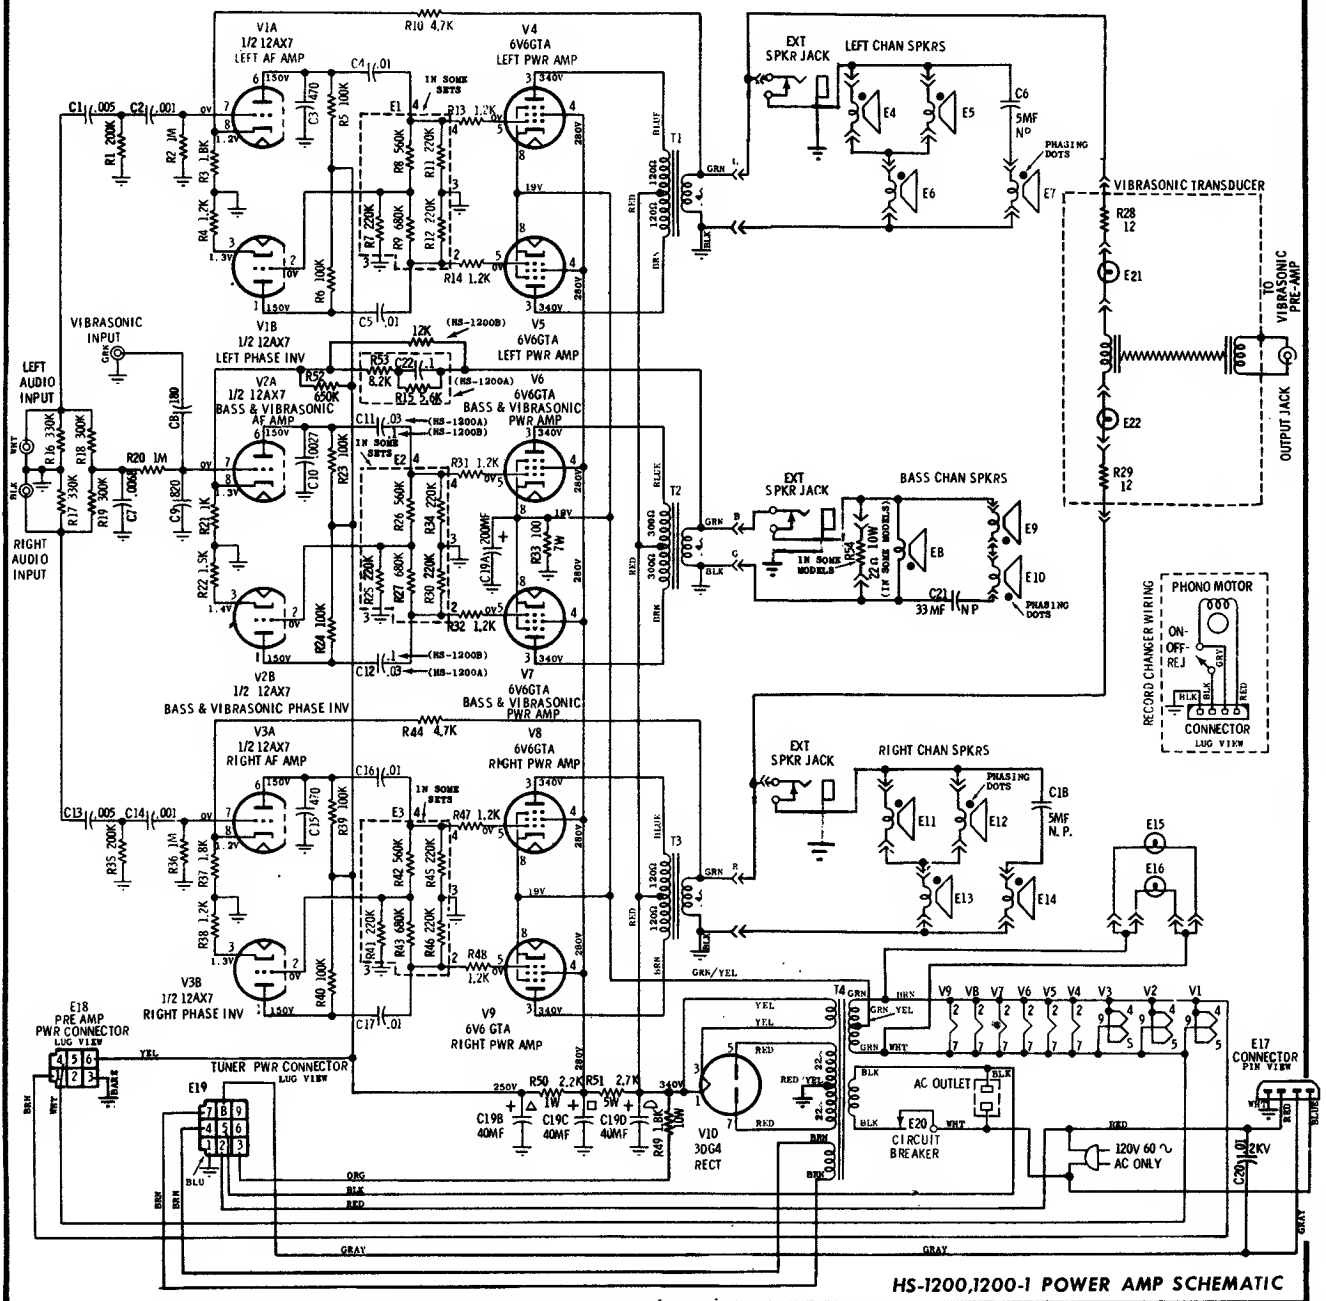

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

MOTOROLA Chassis HS-1199 Pre-Amplifier

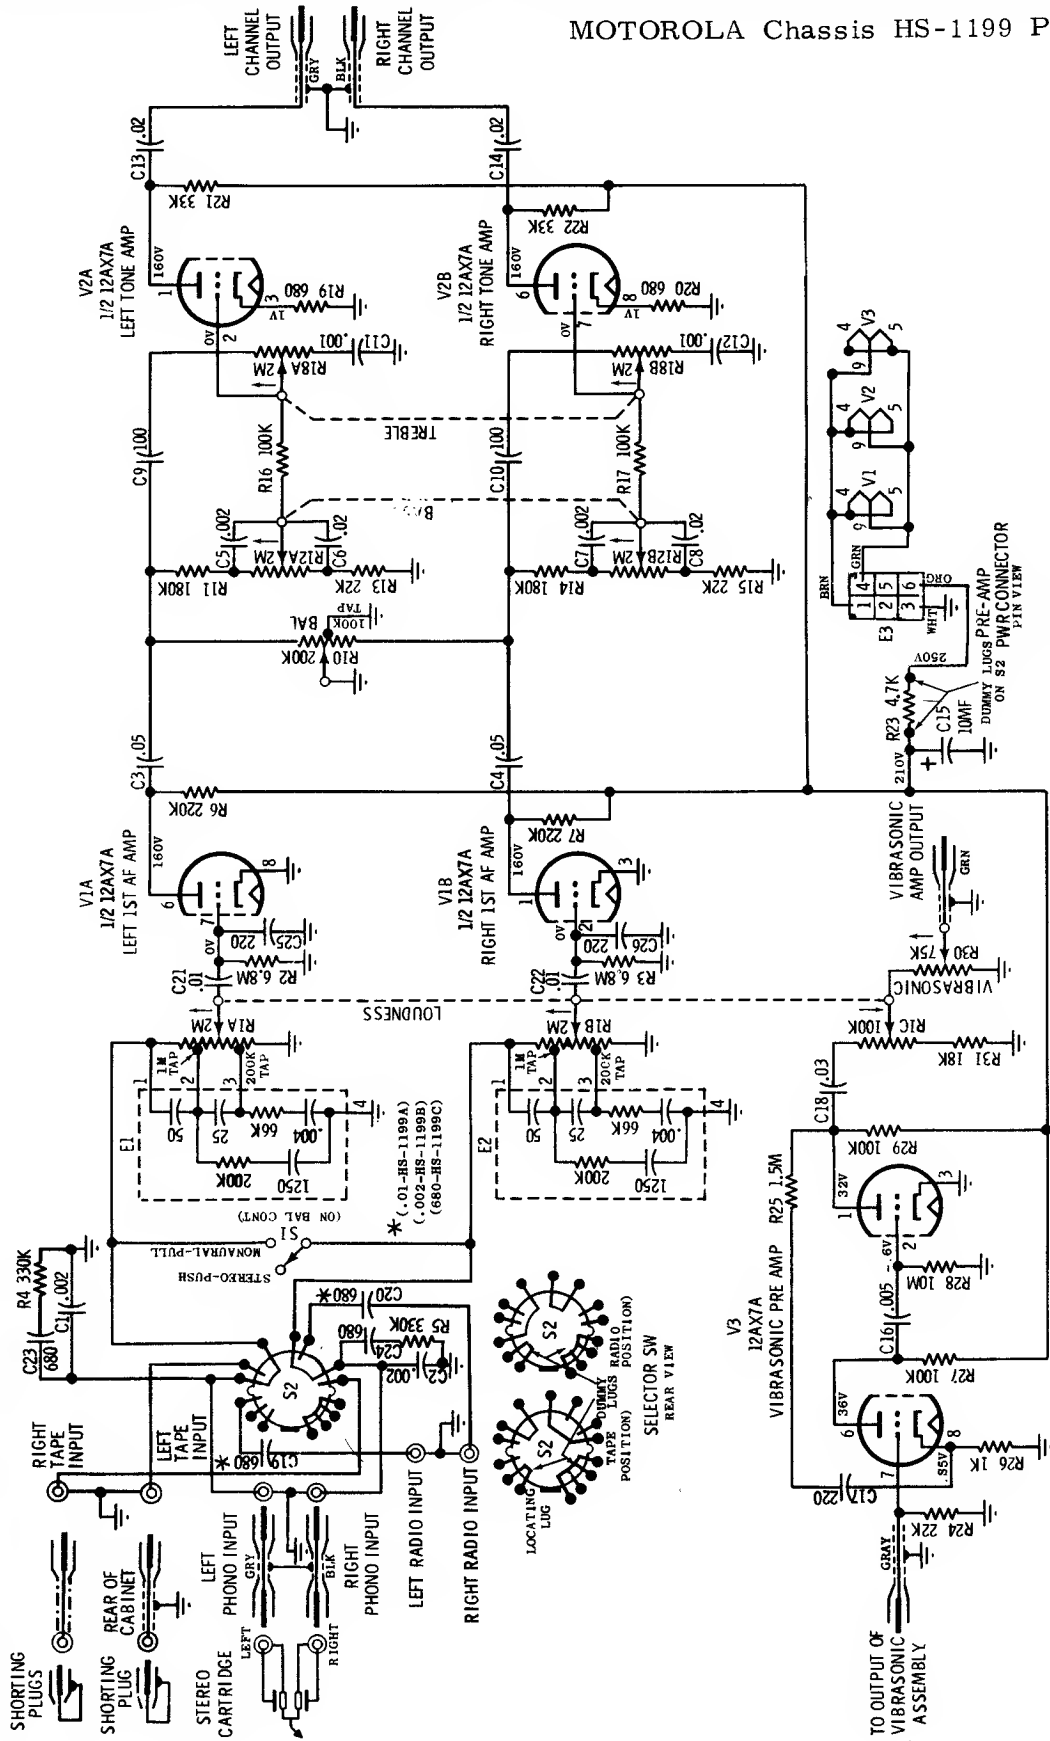

NOTE:
 CAPACITORS - UNLESS OTHERWISE SPECIFIED,
 DECIMAL VALUES IN MF; ALL OTHERS IN MMF.
 VOLTAGES - MEASURED FROM POINT INDICATED
 TO CHASSIS WITH A VTVM, ± 10% NO SIGNAL INPUT.
 ↑ ARROW INDICATES CLOCKWISE ROTATION OF CONTROL

HS-1199 PRE-AMP SCHEMATIC DIAGRAM


MOTOROLA

MODELS SK180A, 181A, 182A,
183A, 190A, 191A, 192A, 193A
SD194A, 195A, 196A

CHASSIS HS-1241, 1259, 1264, 1328

(Material on pages
84 through 87)

SCHEMATIC DIAGRAM HS-1241A, B, C & HS-1328

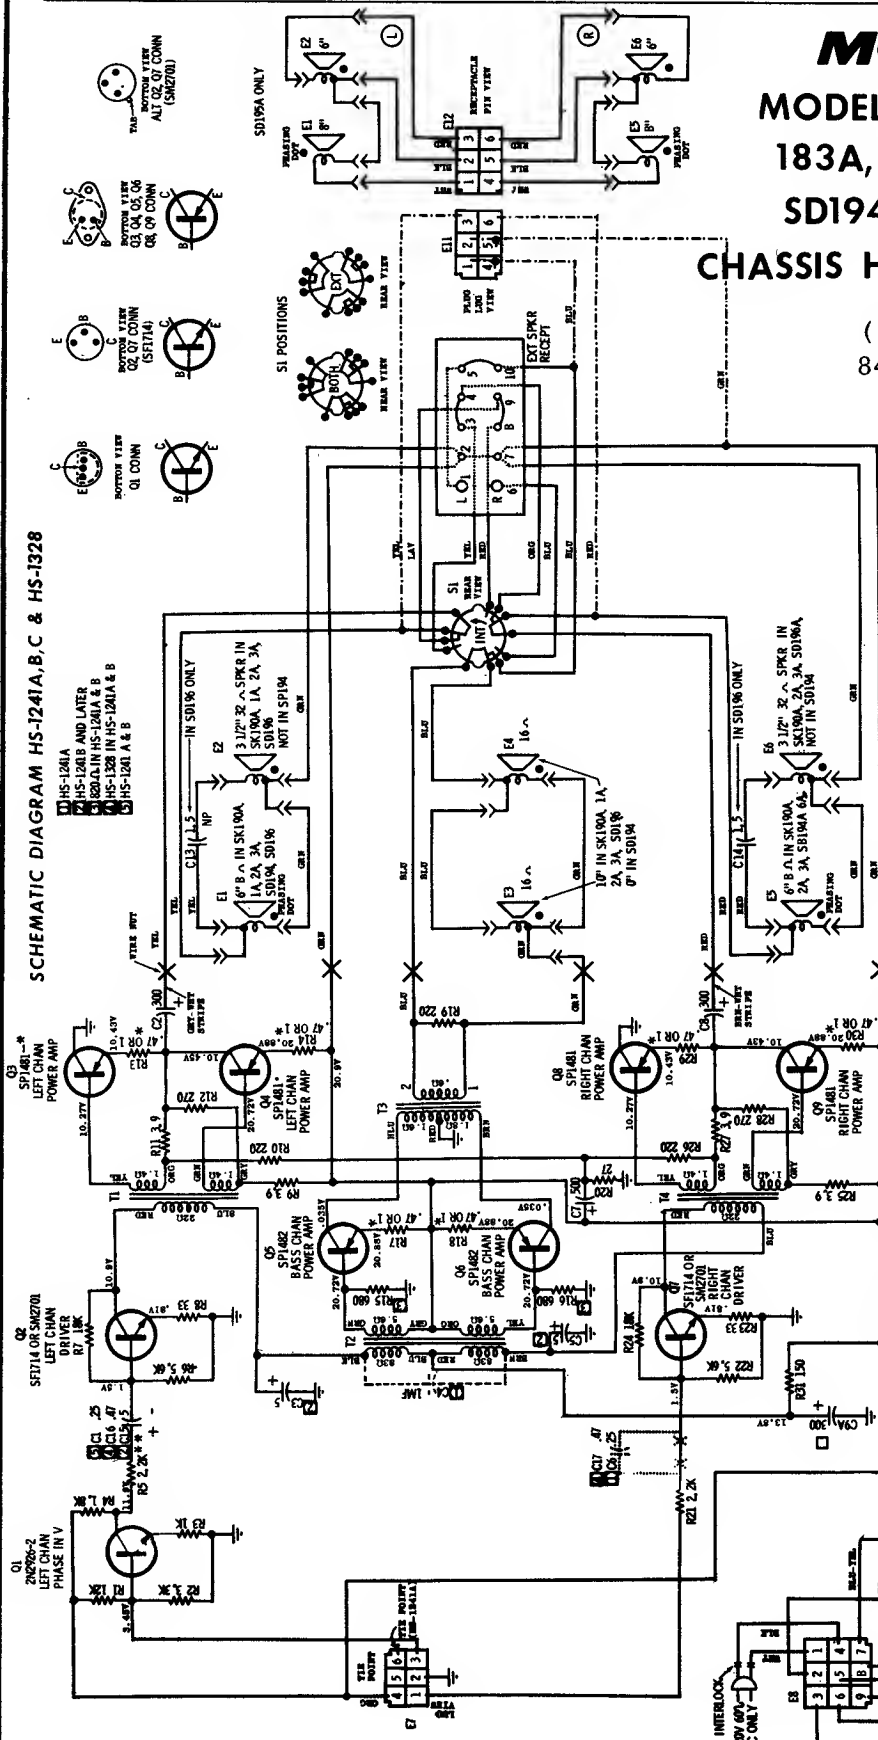

SK180A, 181A, 182A, 183A (chassis HS-1259 - tuner pre-amp, HS-1264 - power amp) - Stereophonic consoles with AM-FM multiplex tuners. Features include a two-channel, 10 watt (music power) amplifier and 6 speakers.

SK190A, 191A, 192A, 193A (chassis HS-1259 - tuner pre-amp, HS-1241 - power amp) - Stereophonic consoles with AM-FM multiplex tuners. Features include a three-channel, 20 watt (music power) amplifier with 6 speakers.

SD194A, 195A (chassis HS-1259 - tuner pre-amp, HS-1241 - power amp) - Stereophonic consoles with AM-FM multiplex tuners. Features include a three-channel, 20 watt (music power) amplifier with 4 speakers.

SD196A (chassis HS-1259 - tuner pre-amp, chassis HS-1328 - power amp) - Stereophonic console with AM-FM multiplex tuners. Features include a three-channel, 20 watt (music power) amplifier with 6 speakers.

* WHEN SP1481-1, -2, -3, -4 OR SP1482-1, -2, -3, -4 ARE USED EMITTER RESISTOR IS .47 Ω.
WHEN SP1481-5, -6, -7 OR SP1482-5, -6, -7 ARE USED EMITTER RESISTOR IS 1 Ω.


NOTES:
CAPACITORS - IN μF UNLESS OTHERWISE SPECIFIED.
VOLTAGES MEASURED FROM POINT INDICATED TO CHASSIS WITH VTVM ± 5%. NO SIGNAL IN.
⊕ - CHASSIS

HS-1241A, B, C & HS-1328 SCHEMATIC

MOTOROLA


MODELS SK180A,181A,182A,183A,
190A,191A,192A,193A SD194A,195A,196A
CHASSIS HS-1241,1259,1264,1328

(Continued)

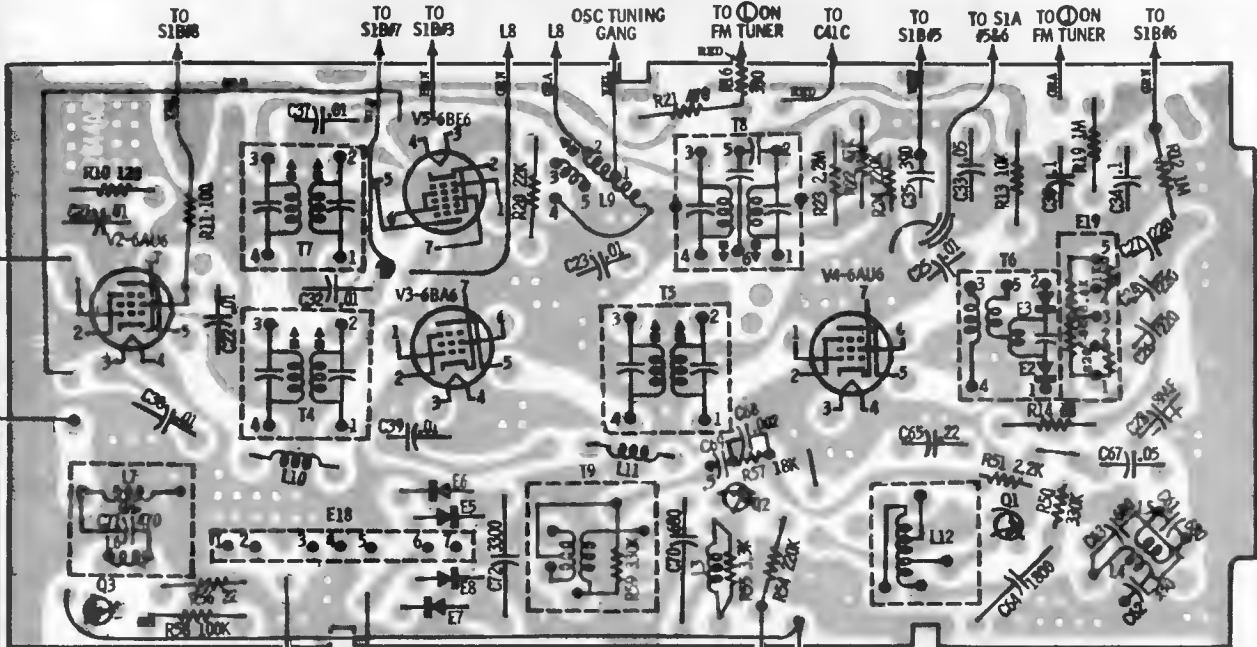

TOP VIEW

PLATED CHASSIS BOARD WIRING AS VIEWED FROM COMPONENT SIDE-CHASSIS HS-1259

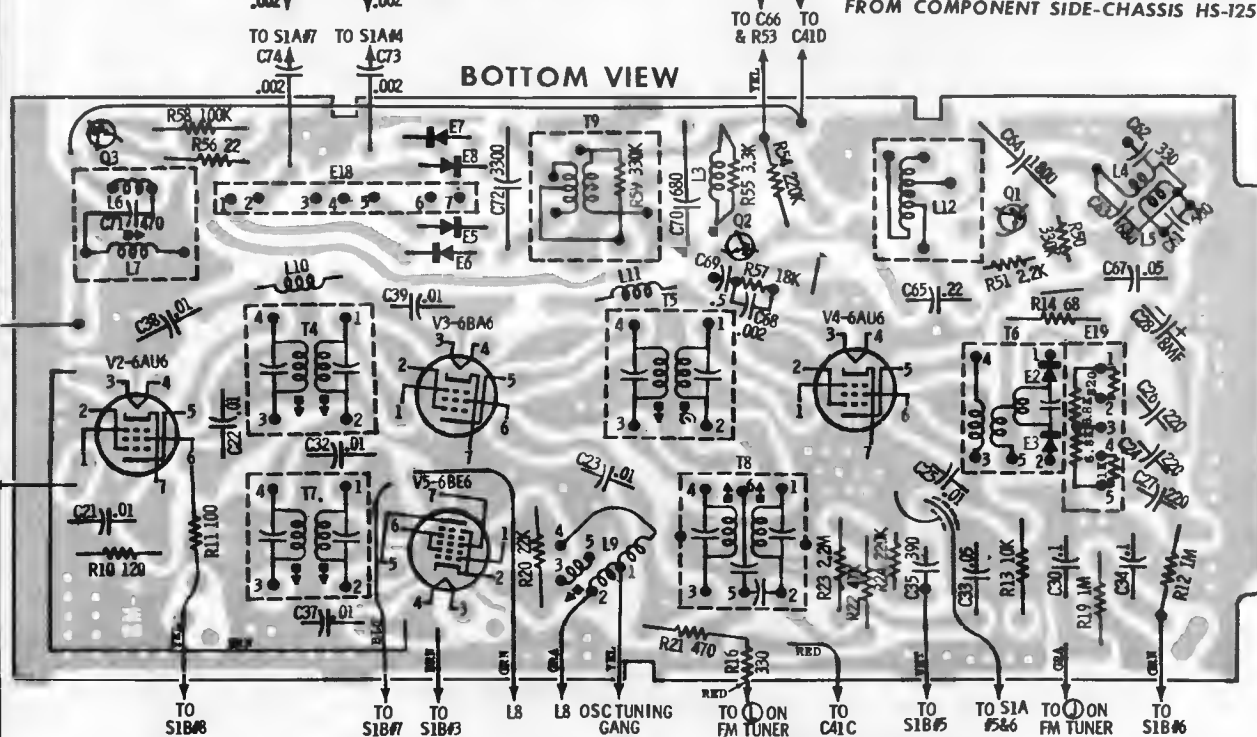

BOTTOM VIEW


PLATED CHASSIS BOARD AS VIEWED FROM BOTTOM-(COMPONENTS SHOWN ARE LOCATED ON OPPOSITE SIDE)-CHASSIS HS-1259

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO

MOTOROLA

MODELS SK180A,181A,182A,183A,
190A,191A,192A,193A SD194A,195A,196A
CHASSIS HS-1241,1259,1264,1328

(Continued)

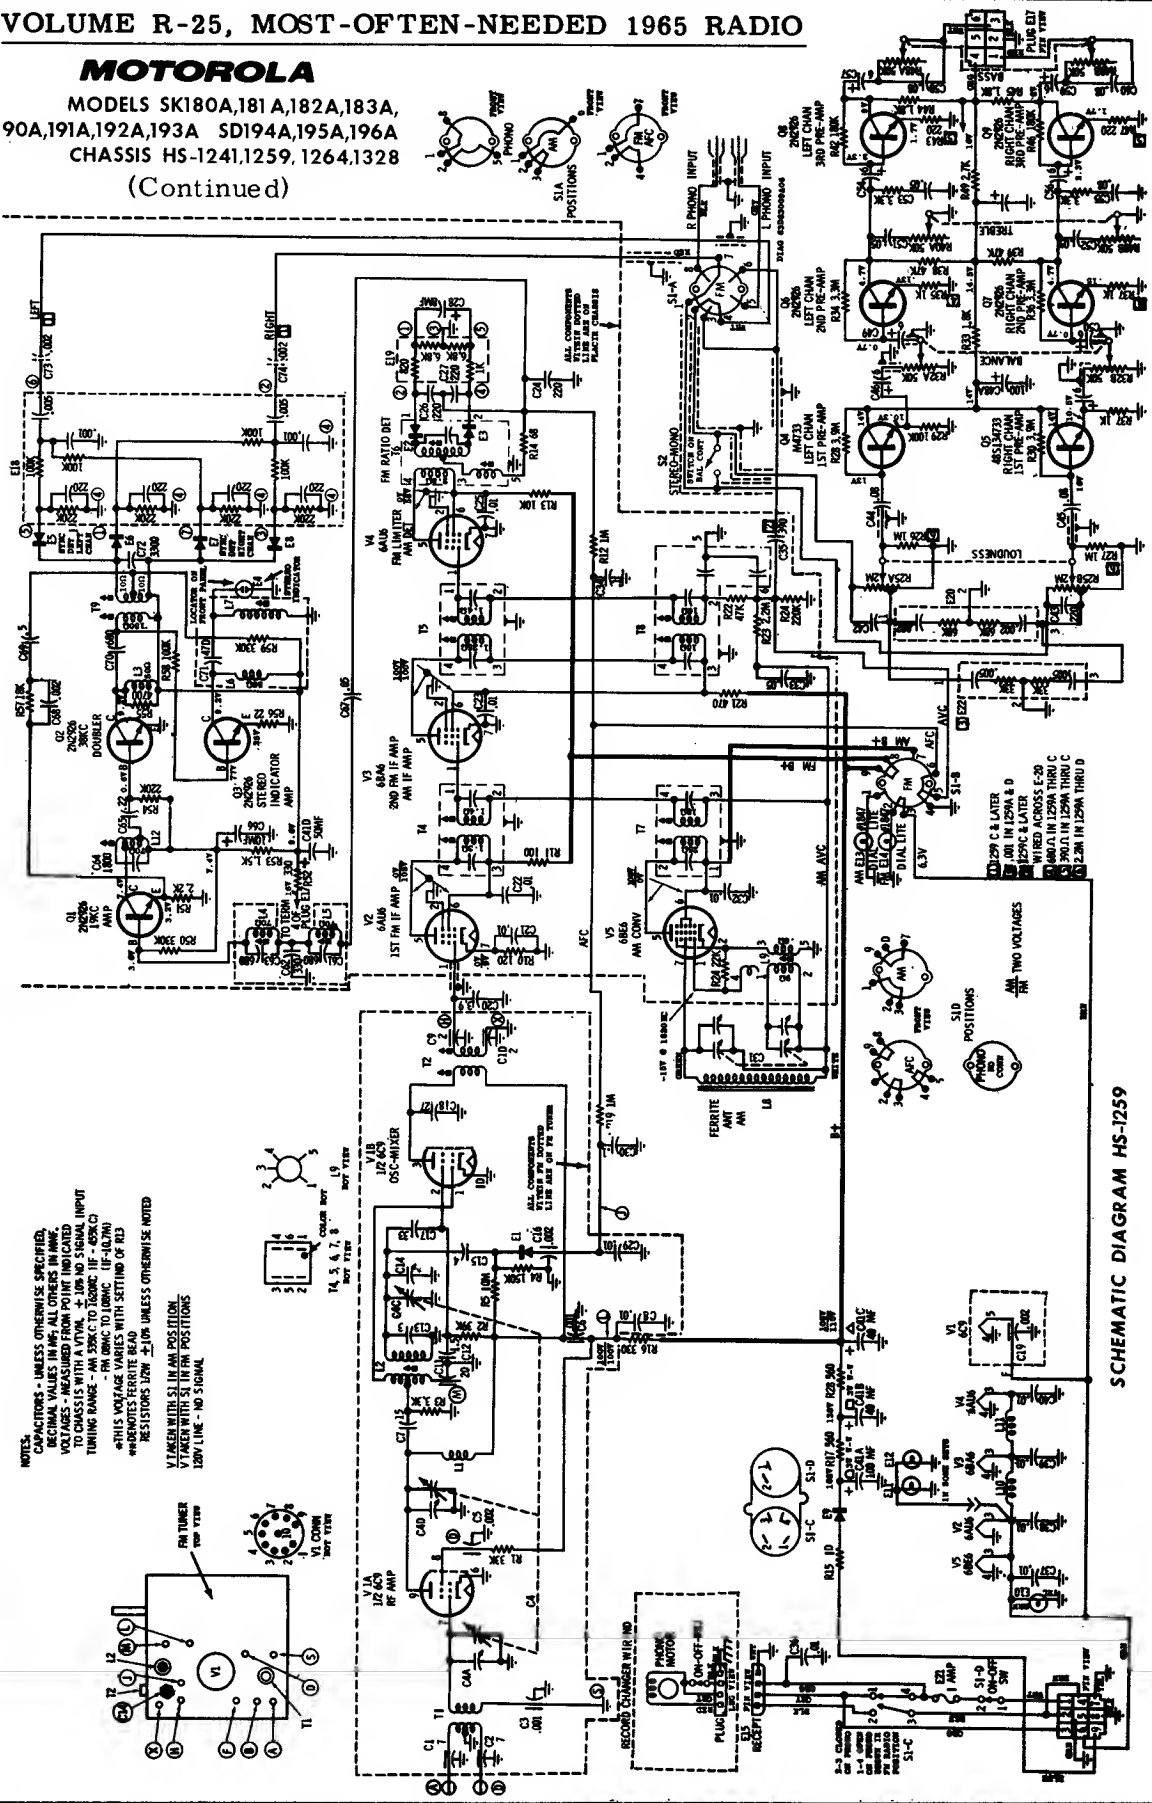

NOTES:
CAPACITORS - UNLESS OTHERWISE SPECIFIED,
DECIMAL VALUES IN μ F; ALL OTHERS IN MMF.
VOLTAGES - MEASURED FROM POINT INDICATED.
RESISTORS - UNLESS OTHERWISE SPECIFIED,
TUNING RANGE - FM 88MC TO 108MC IF - 100KHZ
FM 88MC TO 108MC IF - 100KHZ
*THIS VOLTAGE VARIES WITH SETTING OF R13
**NOTES FERRITE BEAD
RESISTORS 120V \pm 10% UNLESS OTHERWISE NOTED
V TAKEN WITH S1 IN AM POSITION
V TAKEN WITH S1 IN FM POSITION
120V LINE - NO SIGNAL



SCHMATIC DIAGRAM HS-1259

MOTOROLA Chassis HS-1259 (for list of models see page 84)

MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

MOTOROLA (Continued)

MODELS SK180A,181A,182A,183A,
190A,191A,192A,193A SD194A,195A,196A
CHASSIS HS-1241,1259,1264,1328

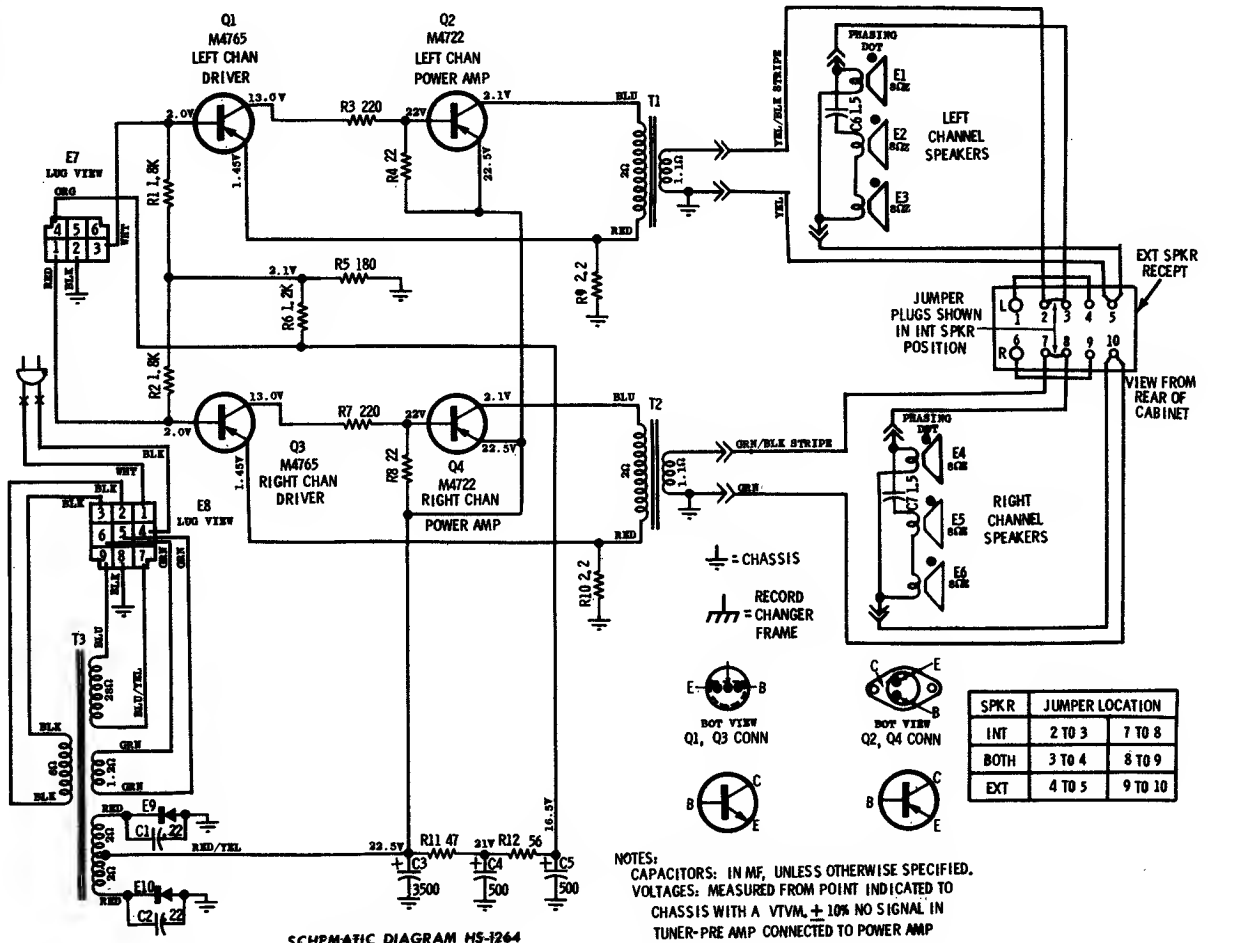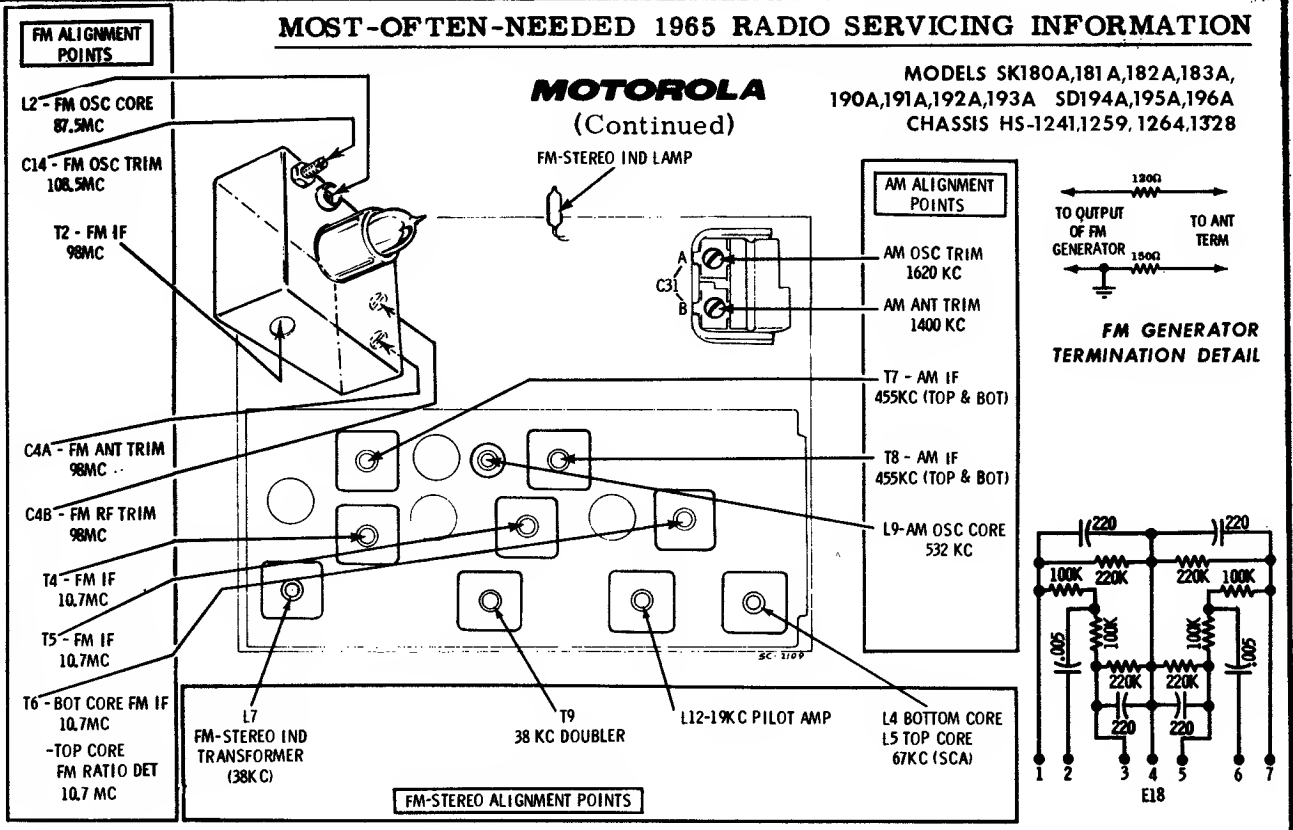


SCHEMATIC DIAGRAM HS-1264

MOTOROLA CHASSIS HS-1260, 1323








(Continued)

MOTOROLA Chassis HS-1260, HS-1323, Models SK172A, -173A, -175A, -176A, -177A, -178A, -178A, ST82A

(Continued on next page)

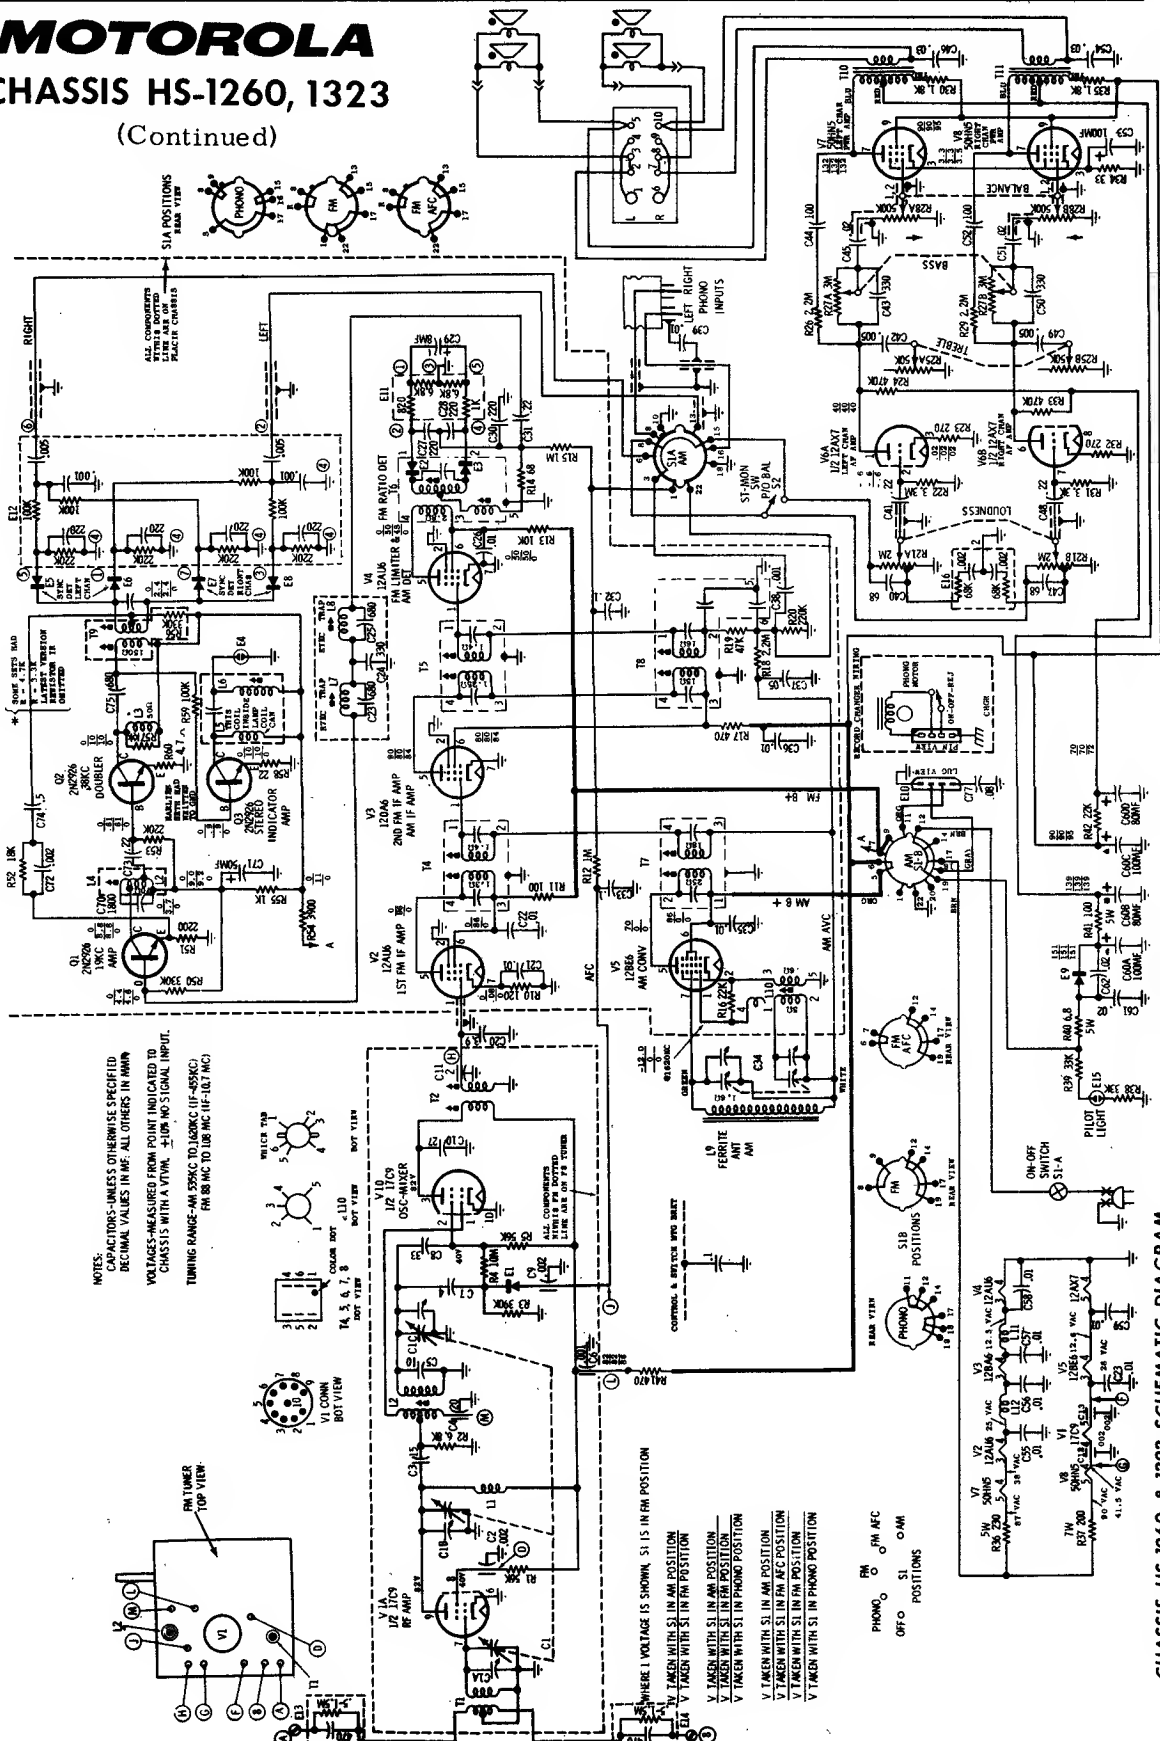

NOTES:
CAPACITORS—UNLESS OTHERWISE SPECIFIED
DECIMAL VALUES IN MF, ALL OTHERS IN MMF.
VOLTAGE MEASURED FROM POINT INDICATED TO
CHASSIS WITH A VTVM. *TOP, *B'S SIGNAL INPUT.
TUNING RANGE—AM 550KC TO 1.600KC (IF-455KC)
FM 88 MC TO 108 MC (IF-10.7 MC)

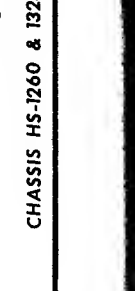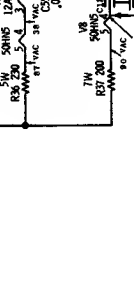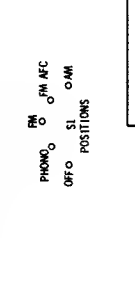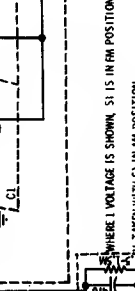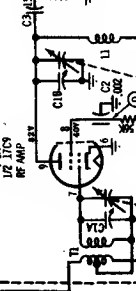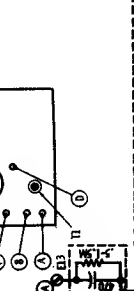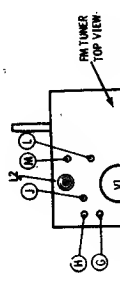



CHASSIS HS-1260 & 1323 SCHEMATIC DIAGRAM

MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


MOTOROLA Chassis HS-1260, HS-1323, Continued

FM ALIGNMENT POINTS



- L2 - FM OSC CORE 87.5MC
- CLC - FM OSC TRIM 108.5MC
- T2 - FM IF 98MC
- CL1A - FM ANT TRIM 98MC
- CL1B - FM RF TRIM 98MC
- T4 - FM IF 10.7MC
- T5 - FM IF 10.7MC
- T6 - BOT CORE FM IF 10.7MC
-TOP CORE FM RATIO DET 10.7 MC

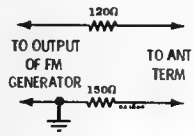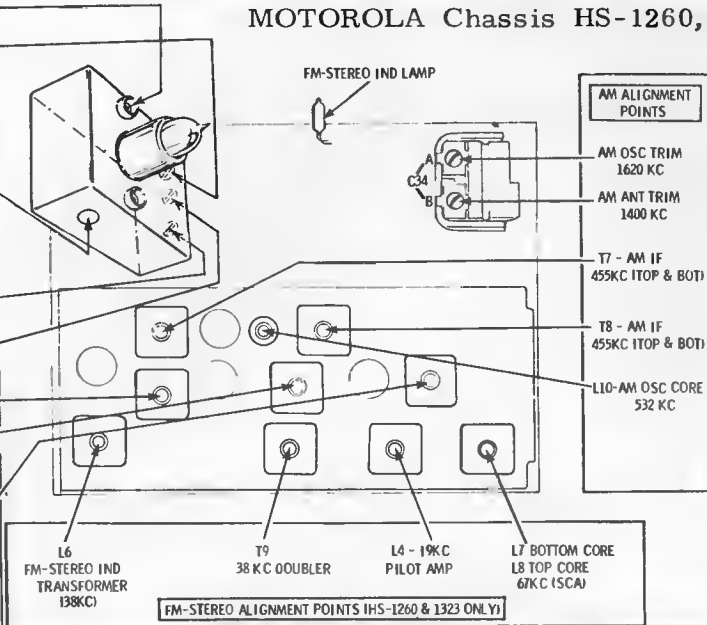

FM GENERATOR TERMINATION DETAIL

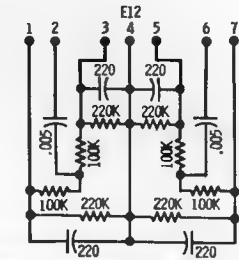


TOP VIEW

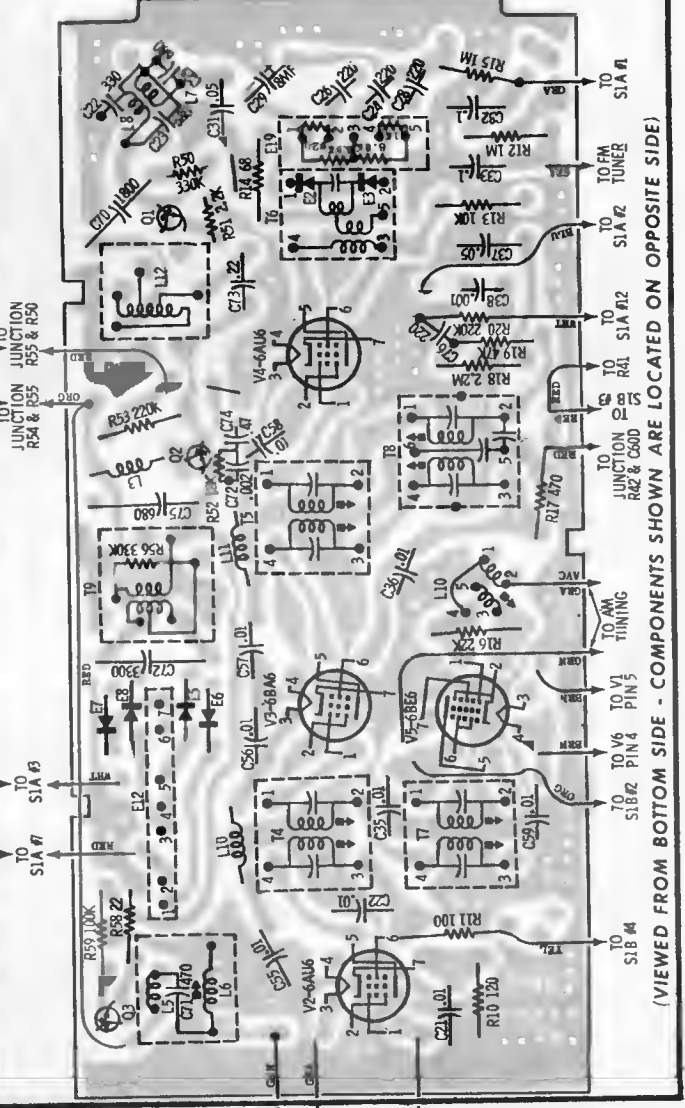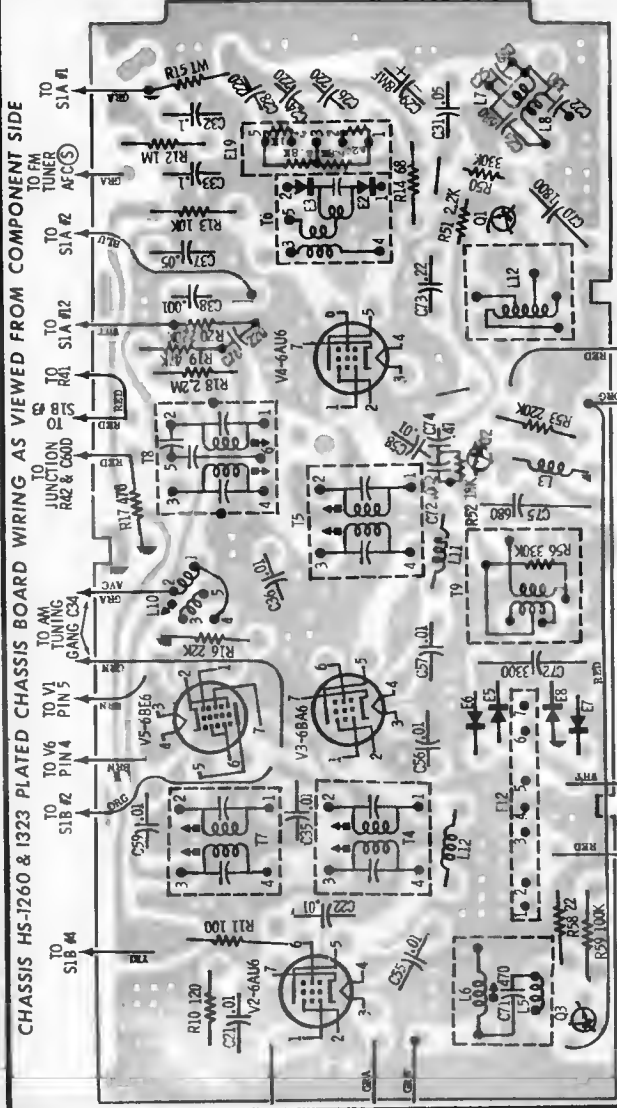


BOTTOM VIEW

(VIEWED FROM BOTTOM SIDE - COMPONENTS SHOWN ARE LOCATED ON OPPOSITE SIDE)




HS-1242,1266 SCHEMATIC DIAGRAM

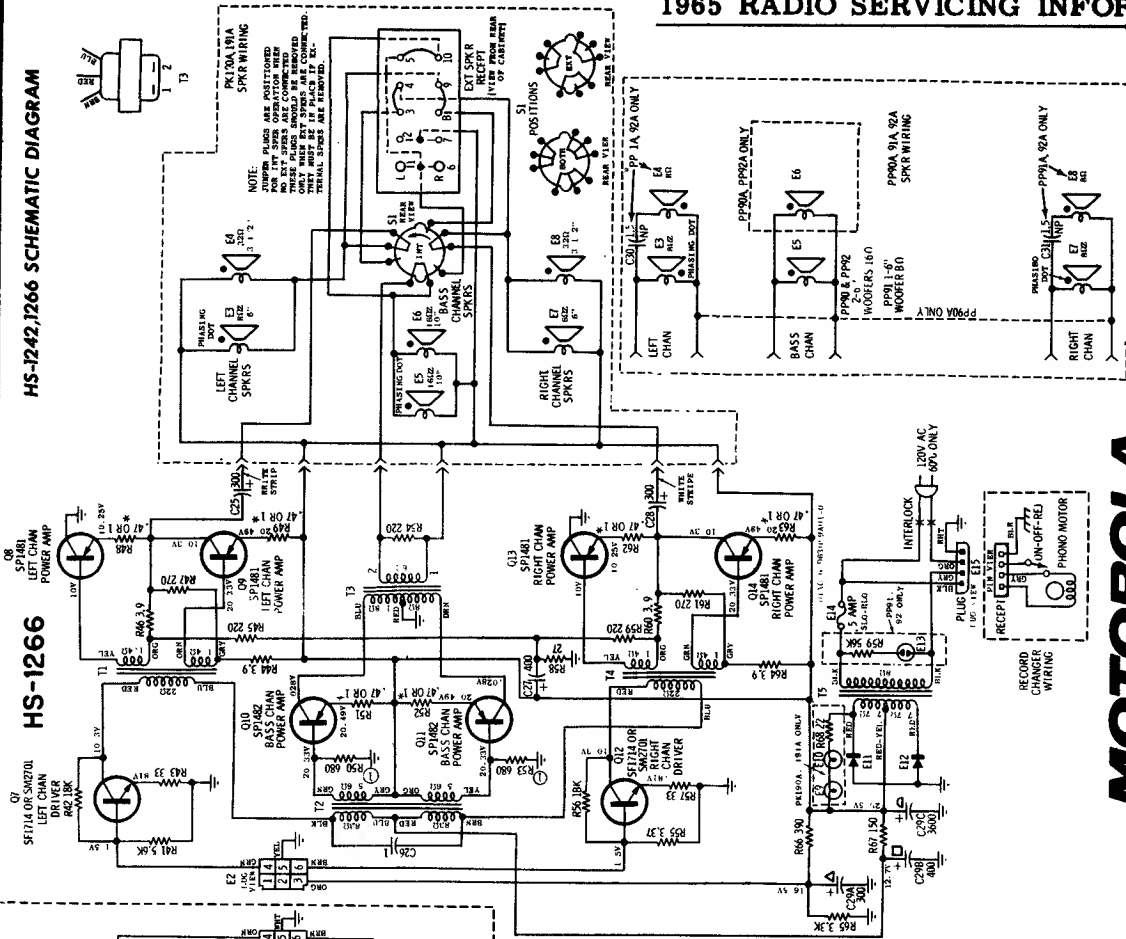

HS-1266

HS-1242


NOTES:
CAPACITORS: IN μ E UNLESS OTHERWISE SPECIFIED.
VOLTAGES: MEASURED FROM POINT INDICATED IN CHASSIS WITH VTVM \pm 10%. NO SIGNAL IN.
HS-1242 & 1266 CONNECTED TOGETHER.

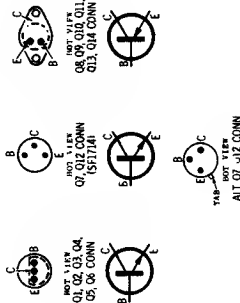

⊕ - CHASSIS

⊕ - RECORD CHANGER FRAME

① 400 IN SOME MODELS

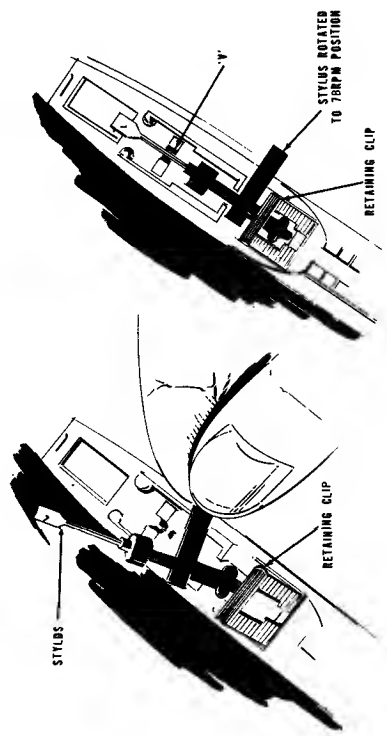


MOTOROLA


MODELS PK190A,191A,PP90A,91A, 92A
CHASSIS HS-1242,1266

MOTOROLA


MODELS PK175A, 176A, 177A, 178A

CHASSIS HS-1261

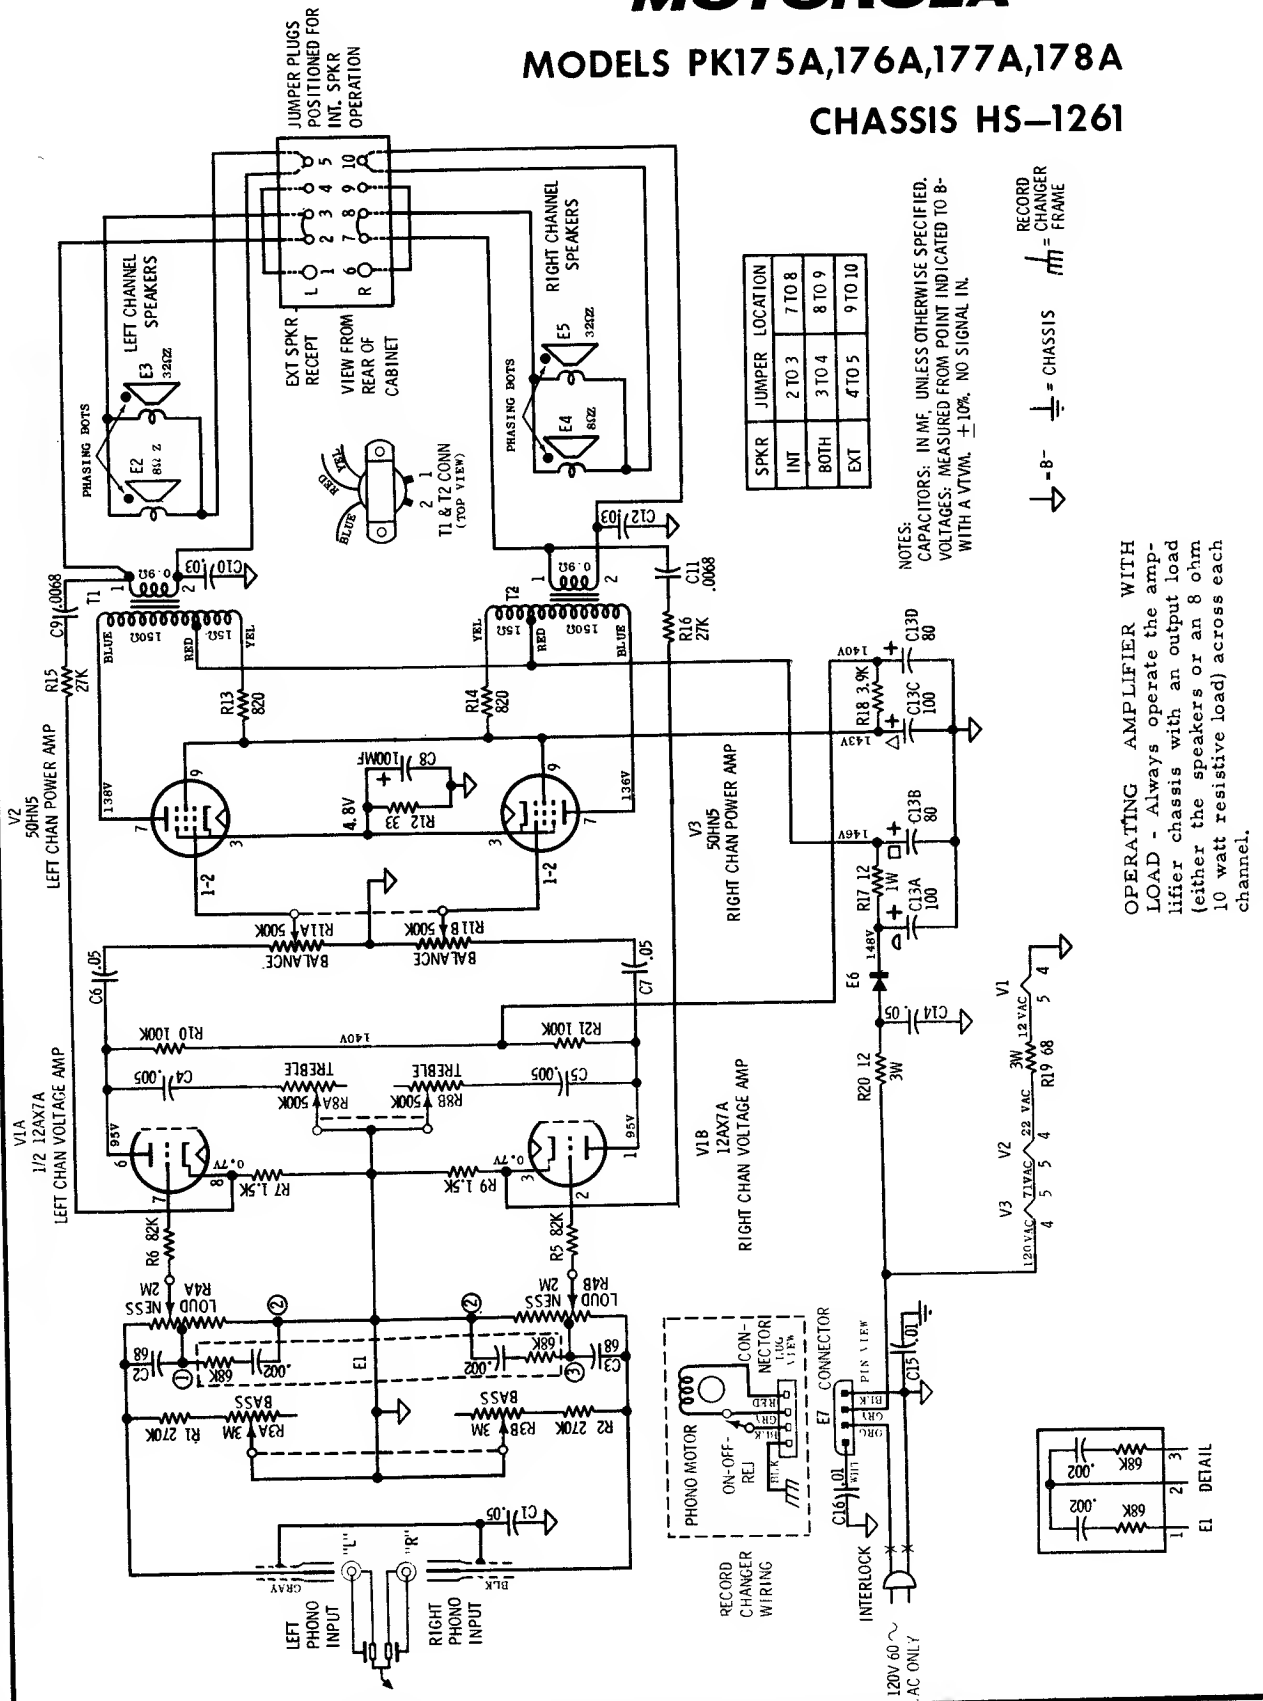

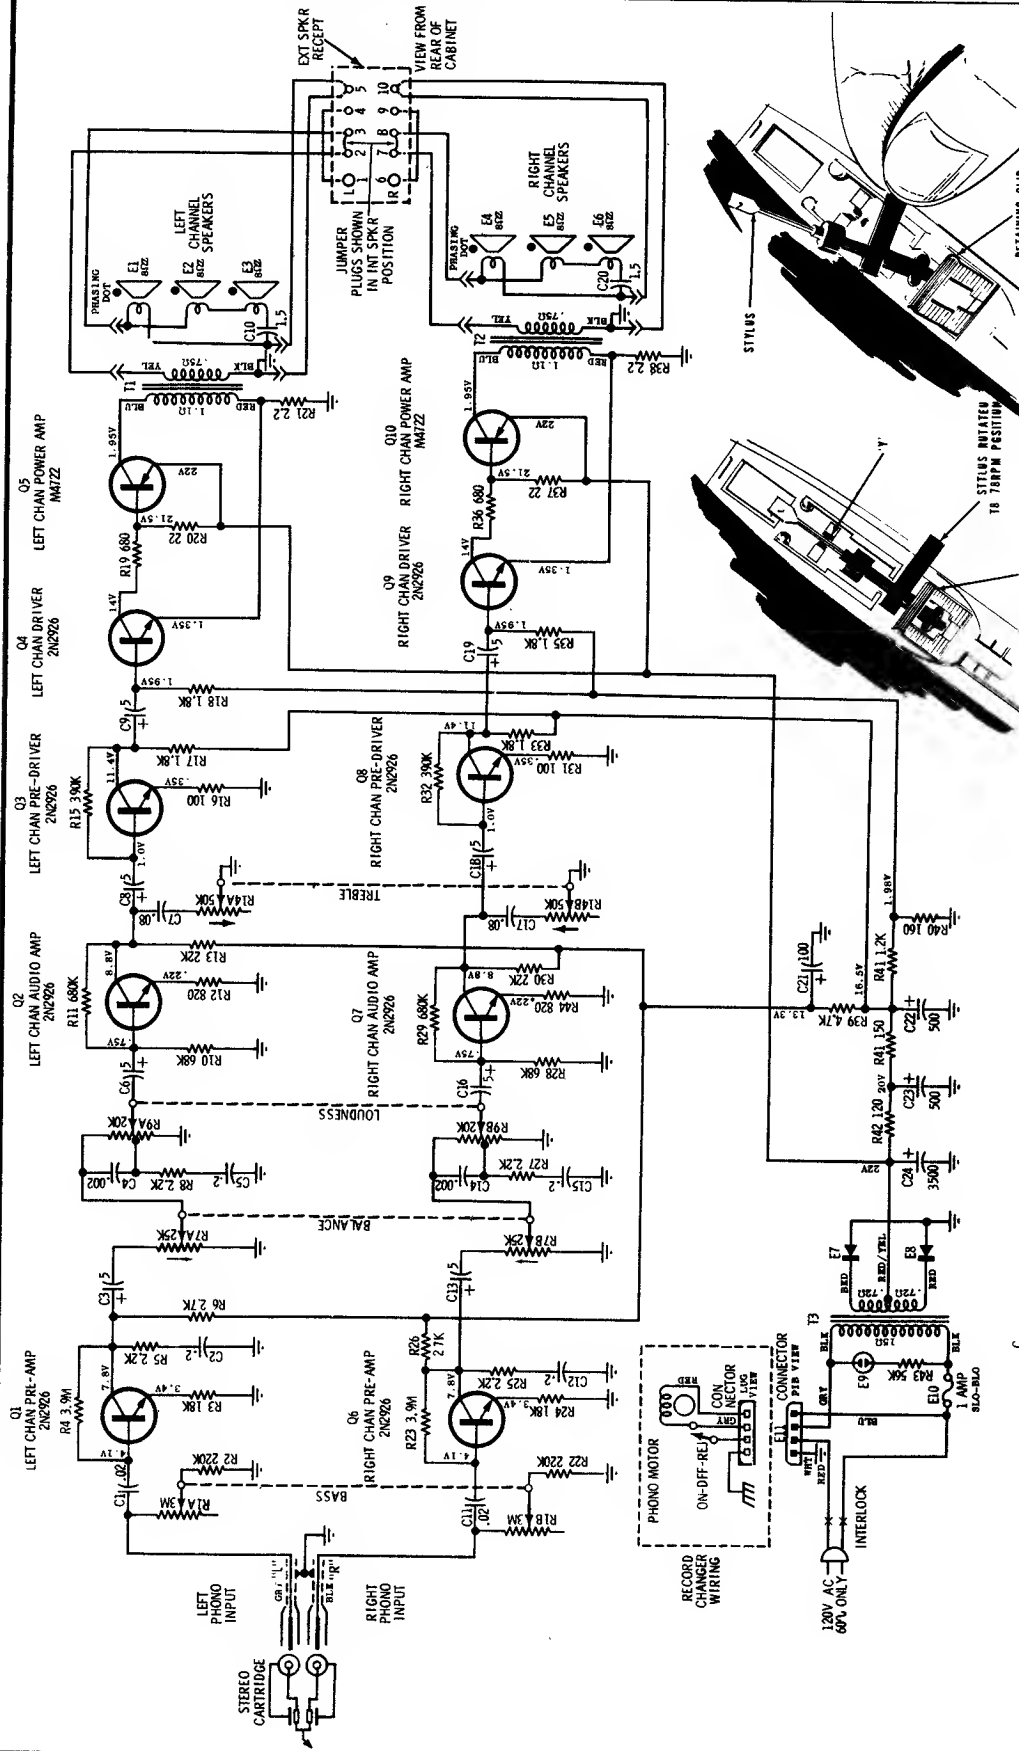


STYLUS REPLACEMENT

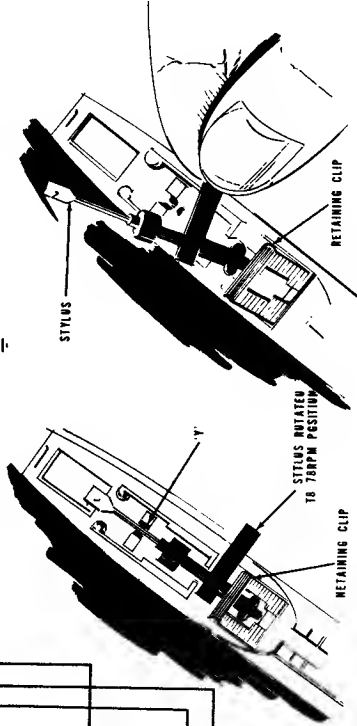

MOTOROLA
MODELS PK180A, 182A, 183A
CHASSIS HS-1262


SPKR	JUMPER LOCATION
INT	2 TO 3
BOTH	3 TO 4
EXT	4 TO 5
	9 TO 10

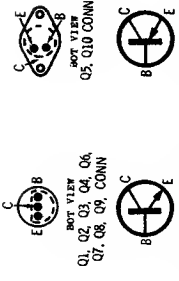

NOTES: RECORD CHANGER WIRING. CAPACITORS: IN MF, UNLESS OTHERWISE SPECIFIED. VOLTAGES: MEASURED FROM POINT INDICATED TO CHASSIS WITH A VTVM, ± 10% NO SIGNAL IN.



MOTOROLA

MODELS PP80A, PT81A CHASSIS HS-1269

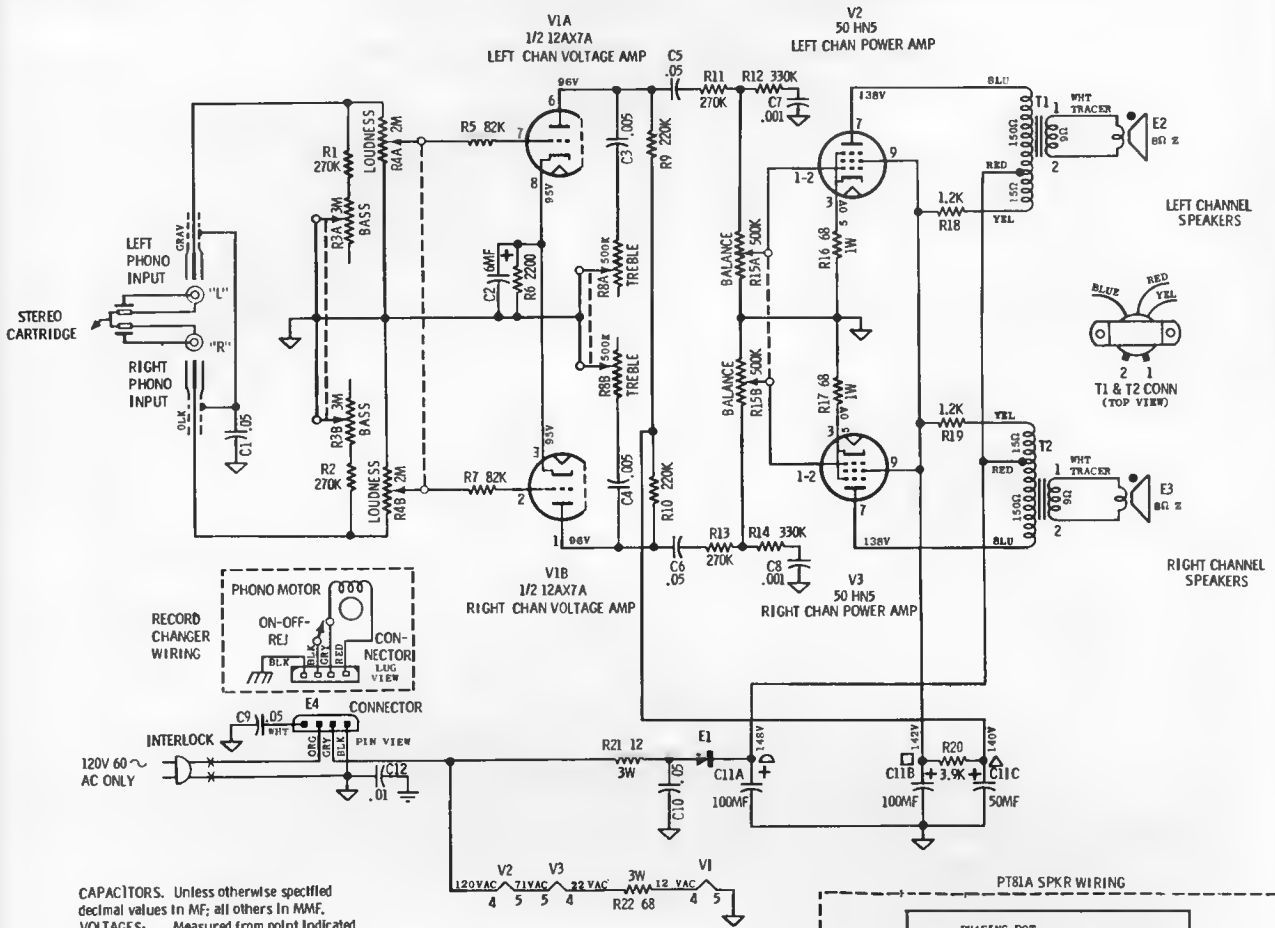

CAPACITORS. Unless otherwise specified decimal values in MF; all others in MMF. VOLTAGES: Measured from point indicated to B- with a VTVM, +10%. No signal in.

↓ = B- ⊥ = CHASSIS = RECORD CHANGER FRAME

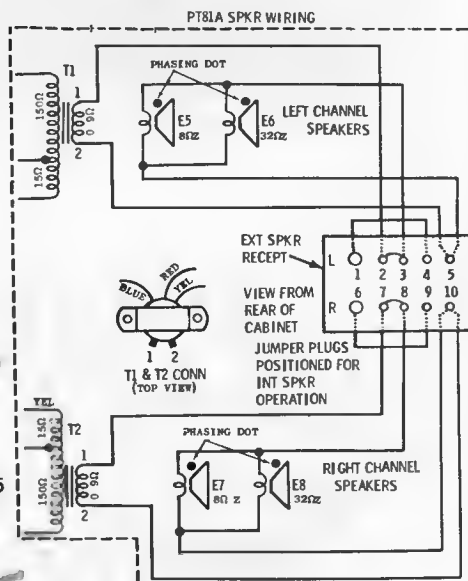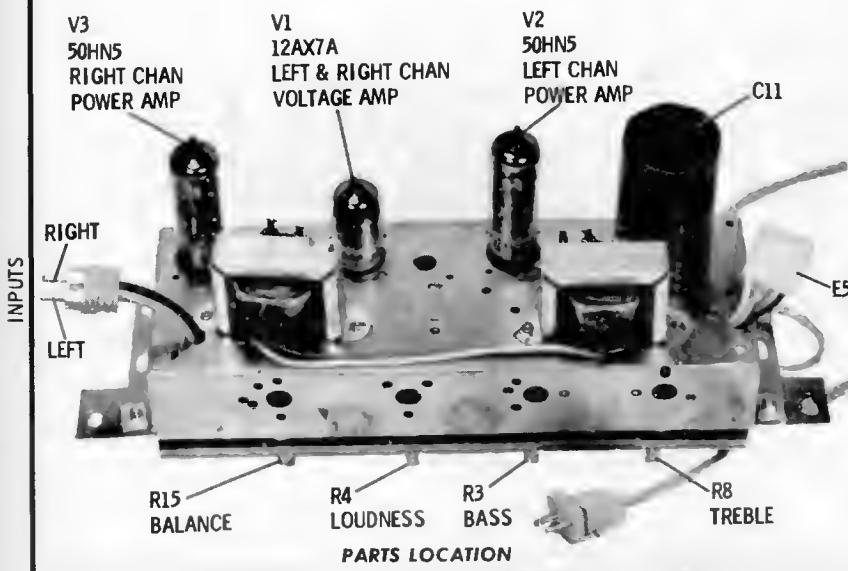


SPKR	JUMPER LOCATION
INT	2 TO 3 7 TO 8
BOTH	3 TO 4 8 TO 9
EXT	4 TO 5 9 TO 10


Packard Bell

TABLE MODEL RADIOS 5R11 & 5R12

TABLE MODEL CLOCK RADIOS 5RC13 & 5RC14


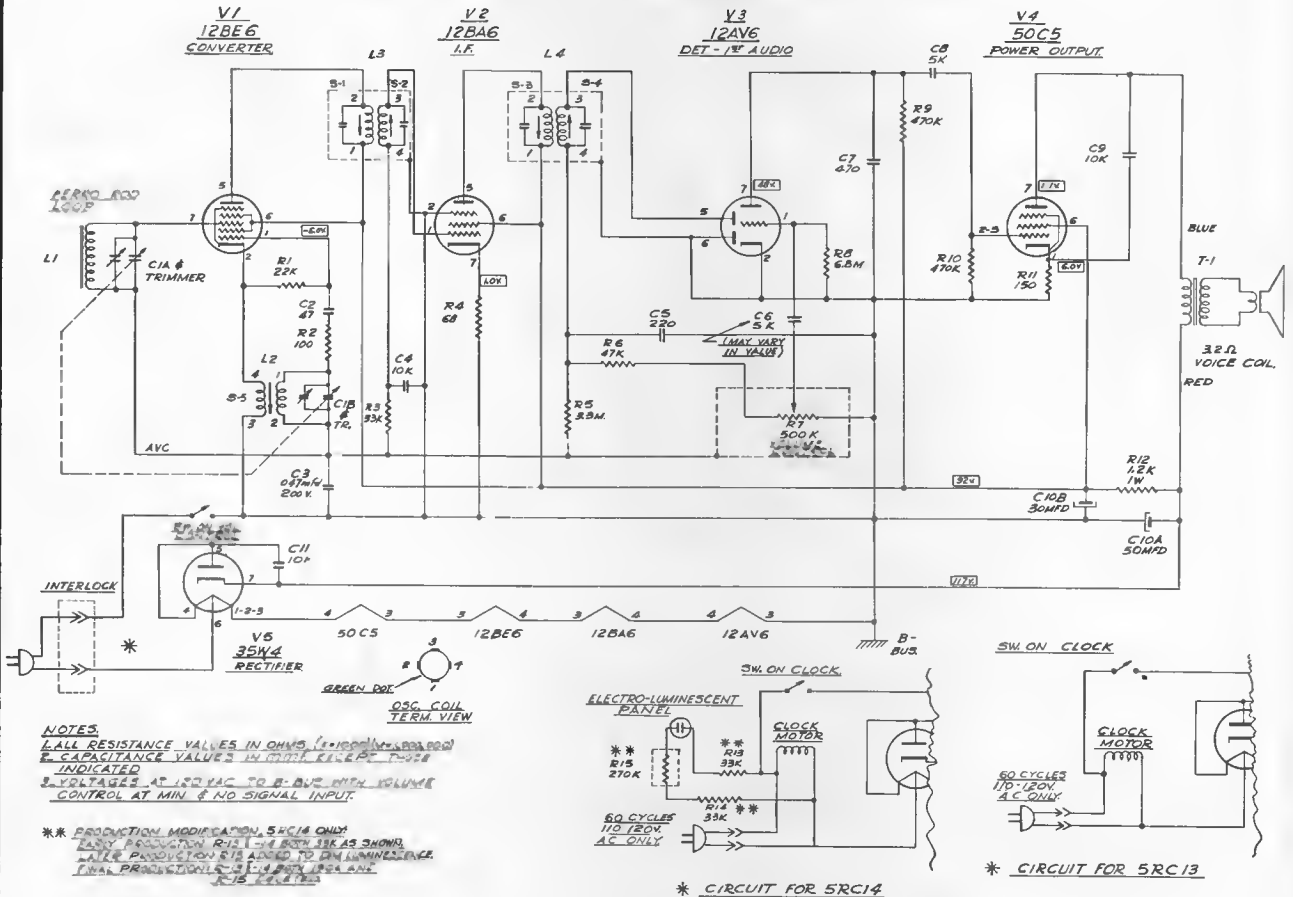


IF 455 KC.

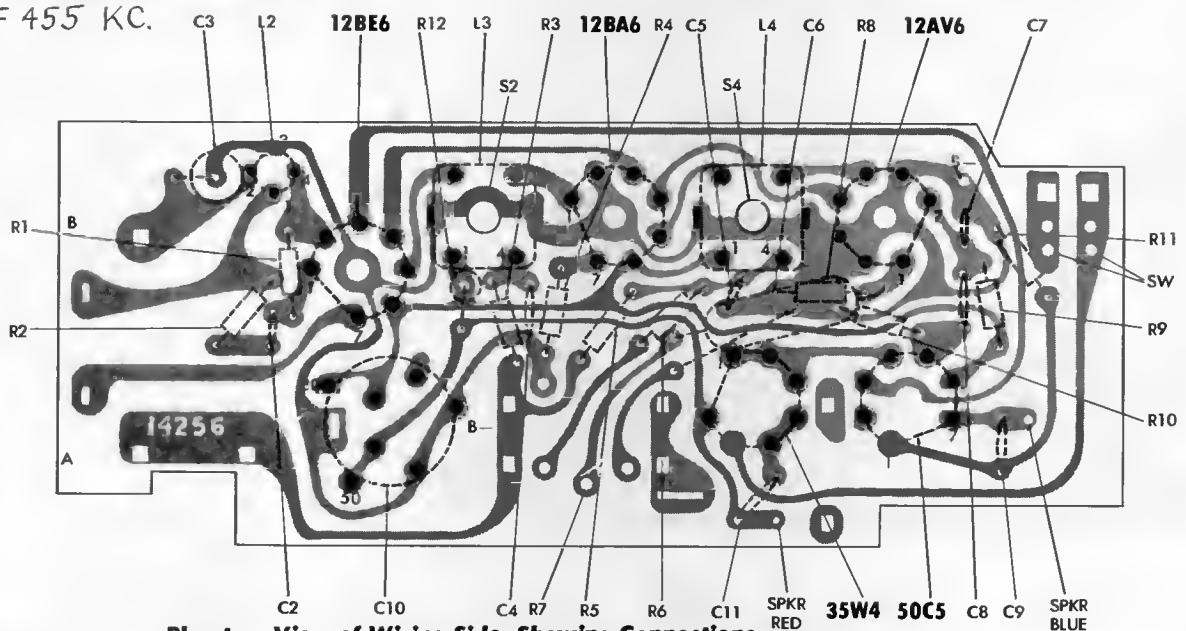


PHILCO

TRANSISTOR PORTABLE MODEL T-69

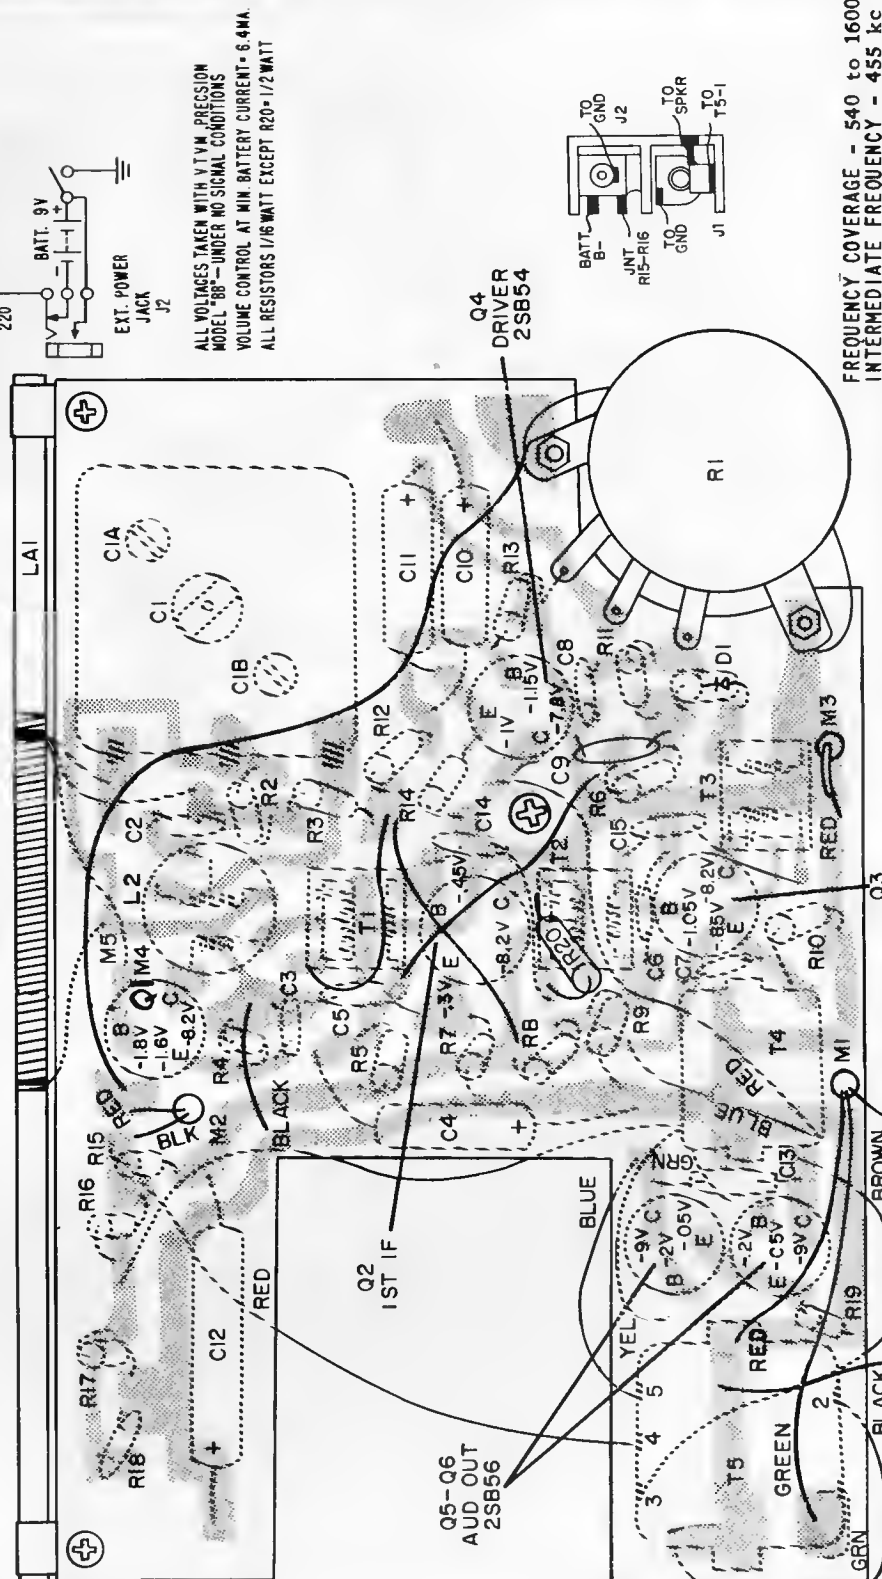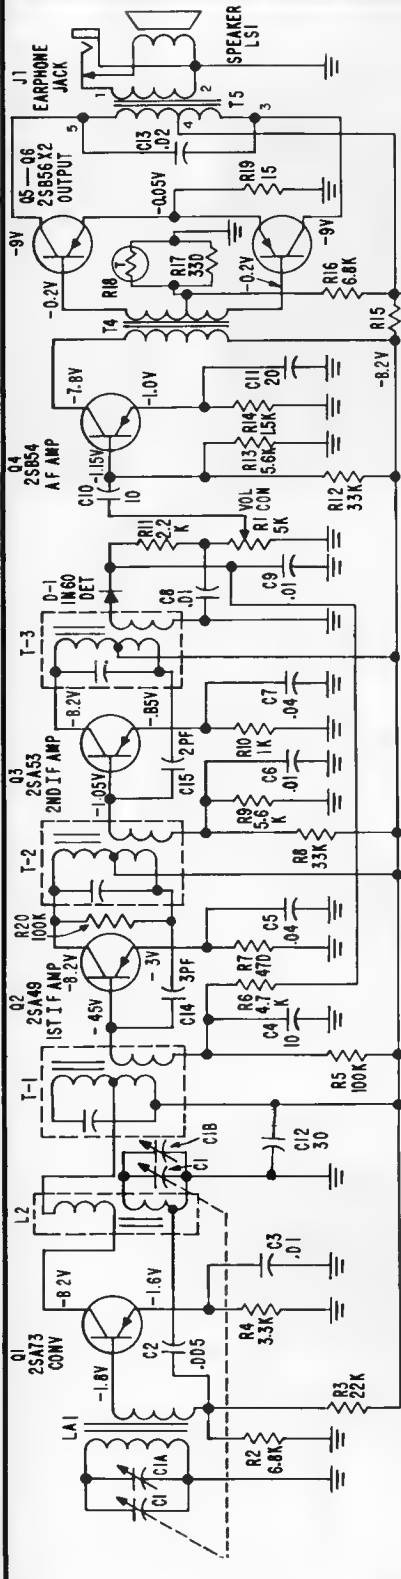

ALL VOLTAGES TAKEN WITH V.T.V.M. PRECISION MODEL "88" - UNDER NO SIGNAL CONDITIONS
VOLUME CONTROL AT MIN. BATTERY CURRENT = 6.4MA.
ALL RESISTORS 1/16 WATT EXCEPT R20 = 1/2 WATT

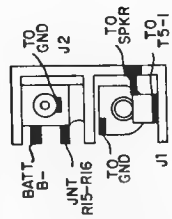


FREQUENCY COVERAGE - 540 to 1600 kc.
INTERMEDIATE FREQUENCY - 455 kc

Perma-Circuit Panel - Bottom View

PHILCO

TRANSISTOR PORTABLE MODEL NT601


(Continued on page 97, adjacent at right)

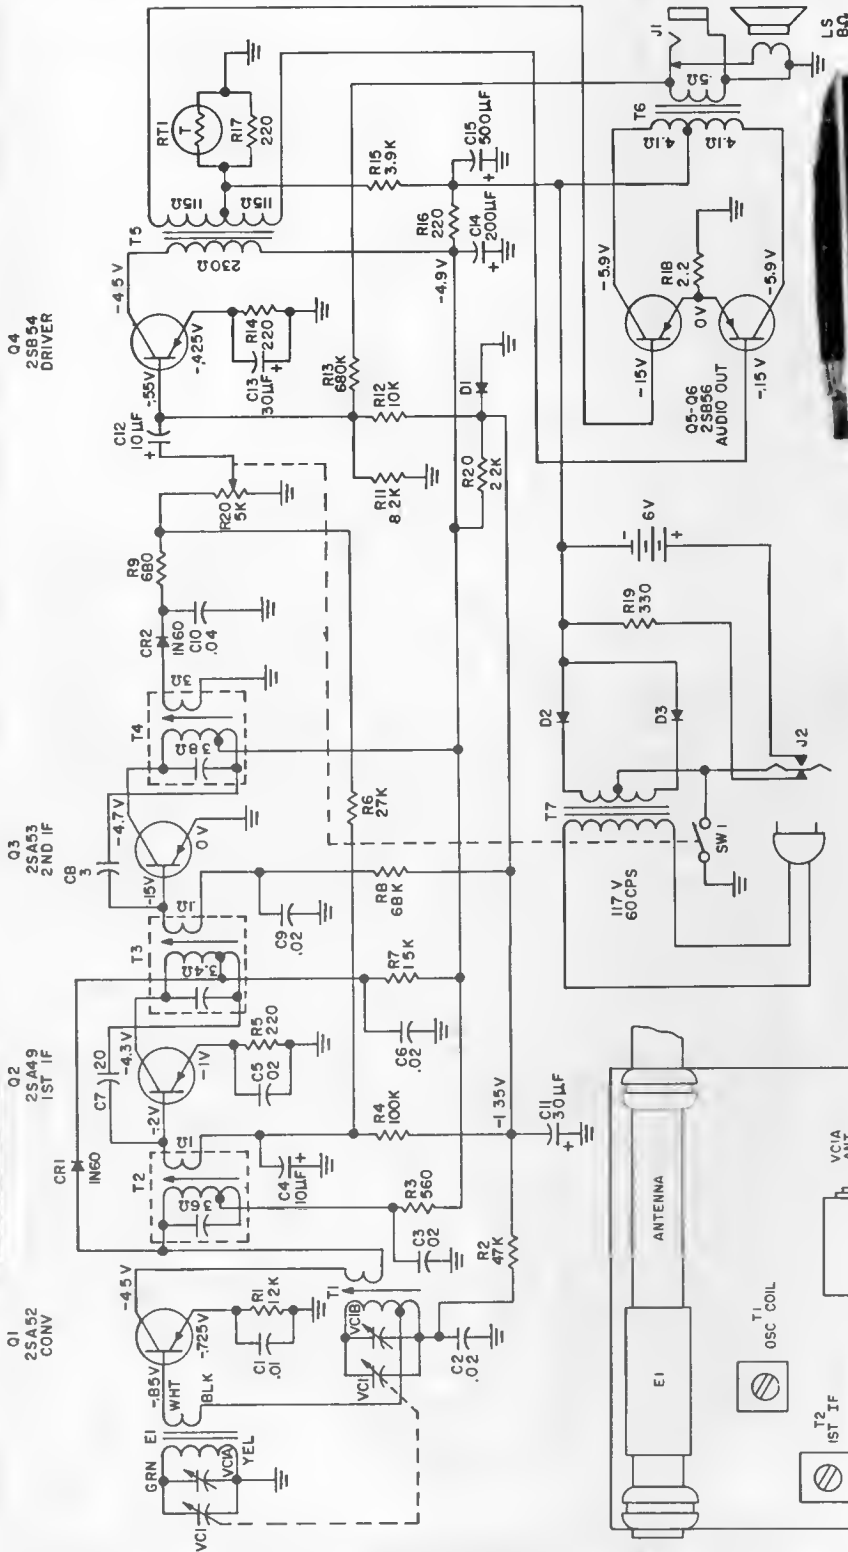

- NOTES:
1. ALL COIL RESISTANCES MEASURED IN CIRCUIT
 2. ALL VOLTAGES MEASURED FROM B+6V TO POINTS INDICATED
 3. VOLTAGES TAKEN WITH NO SIGNAL AND VOLUME CONTROL AT MINIMUM UNDER SAME CONDITIONS BATTERY CURRENT 8 MA
 4. ALL VOLTAGES AND RESISTANCES MEASURED WITH PRECISION VTVM MODEL 88
 5. ALL CAPACITOR VALUES IN PFS UNLESS OTHERWISE INDICATED, VALUES LESS THAN ONE ARE IN MFDS

CABINET REMOVAL

1. Remove Back - Loosen two screws on back.
2. Remove Volume Knob - Pull off.
3. Remove Tuning Knob - Insert Screwdriver thru hole in bottom of Cabinet and loosen two Screws on Tuning Knob, Rotate Knob as necessary to reach screws.
4. Remove Battery Case - Remove four screws inside case and lift out Case and Cord compartment.
5. Remove Chassis Panel - Remove five screws on Panel and Lift out.
6. Remove Power Transformer - Remove two screws on transformer.

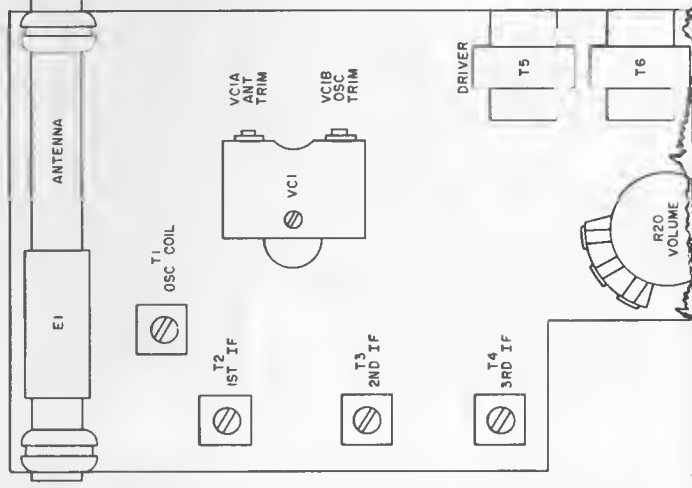


Chassis Alignment Points

PHILCO

TRANSISTOR PORTABLE MODEL NT601

(Continued)

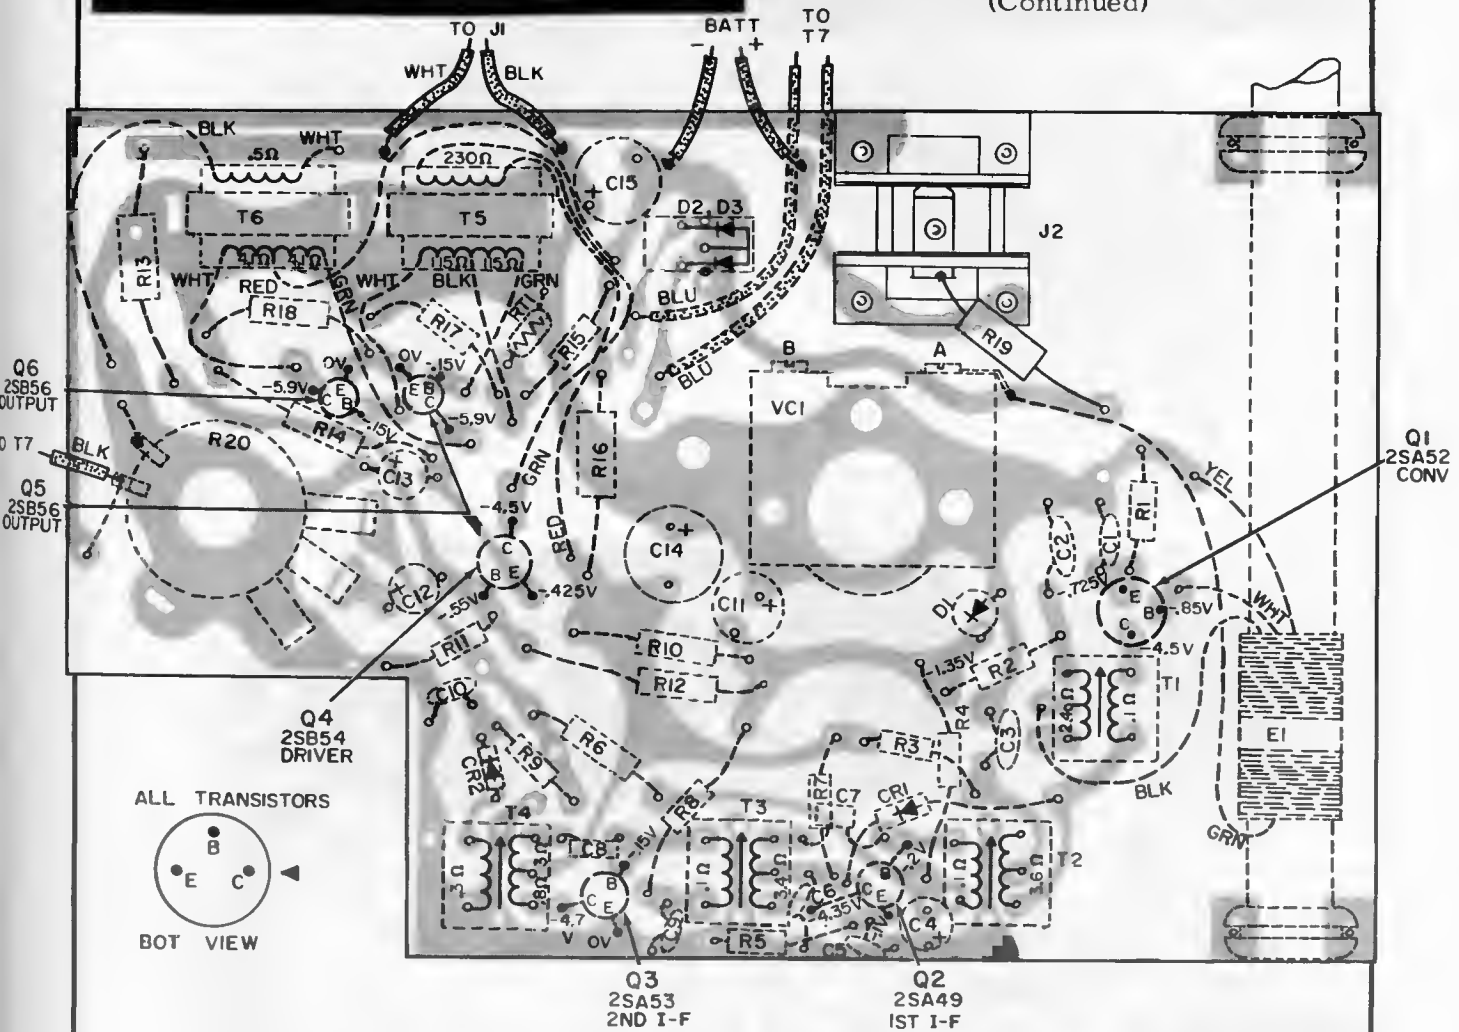

Bottom View - Perma-Circuit Panel, Top View Component Layout - NT601



ALIGNMENT CHART

STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	ADJUST
1	USE RADIATING LOOP SEE NOTE	455KC	TUNING GANG FULLY OPEN	ADJUST FOR MAX. OUTPUT	T4, T3, T2
2	REPEAT STEP 1 UNTIL NO FURTHER IMPROVEMENT IS OBTAINED				
3	SAME AS STEP 1	525KC	TUNING GANG FULLY CLOSED	ADJUST FOR MAX. OUTPUT	T1 OSC. COIL
4	SAME AS STEP 1	1630KC	TUNING GANG FULLY OPEN	ADJUST FOR MAX. OUTPUT	VC1B OSC. TRIM.
5	REPEAT STEPS 3 AND 4				
6	SAME AS STEP 1	1400KC	1400KC	ADJUST FOR MAX. OUTPUT	VC1A ANT. TRIM.
7	SAME AS STEP 1	600KC	600KC	ADJUST COIL ONLY IF NECESSARY	E1 ANT. COIL

NOTE: FOR RADIATING LOOP, USE A 6 TO 8 TURN, 6 INCH DIAMETER LOOP MADE OF INSULATED WIRE. CONNECT LOOP TO GENERATOR TERMINALS AND PLACE ABOUT 12 INCHES FROM RADIO

PHILCO

TRANSISTOR PORTABLE MODEL NT-600

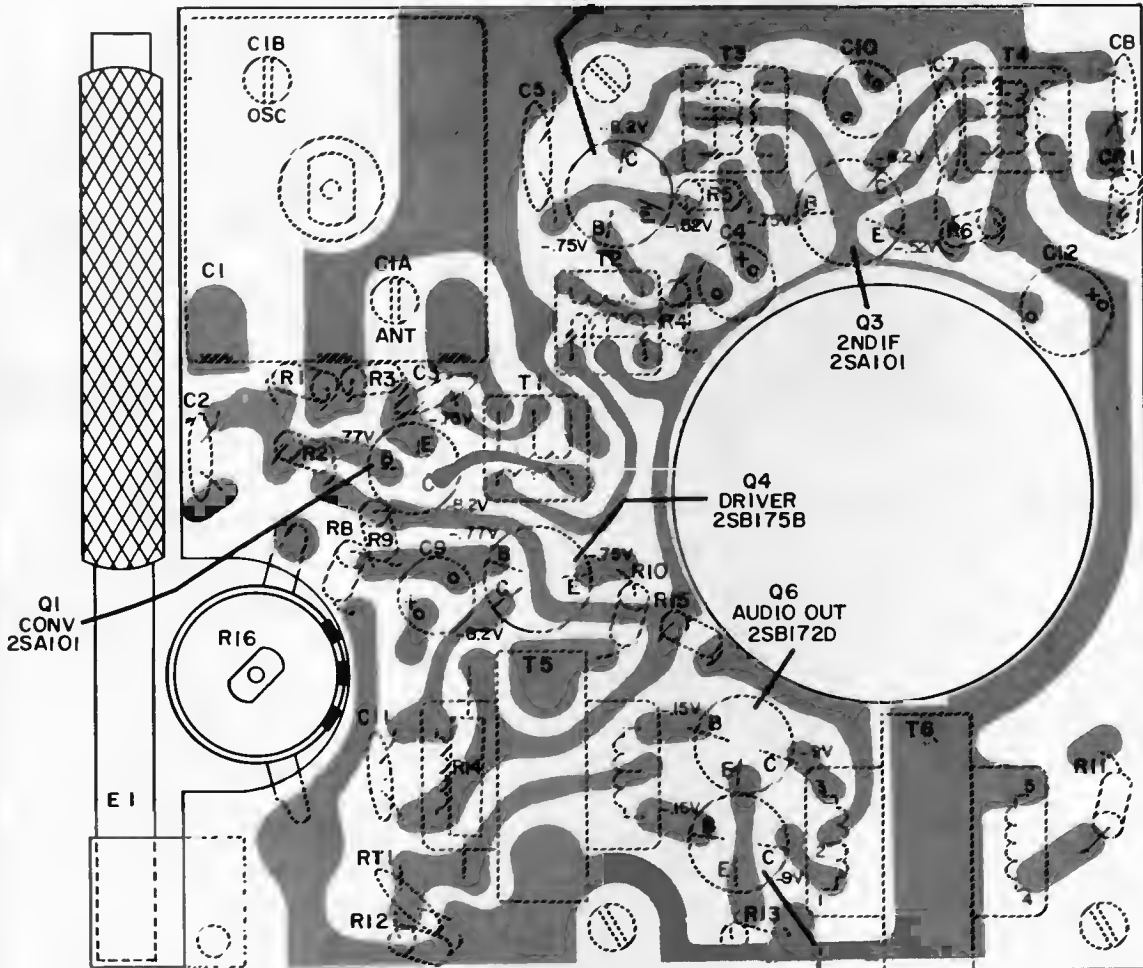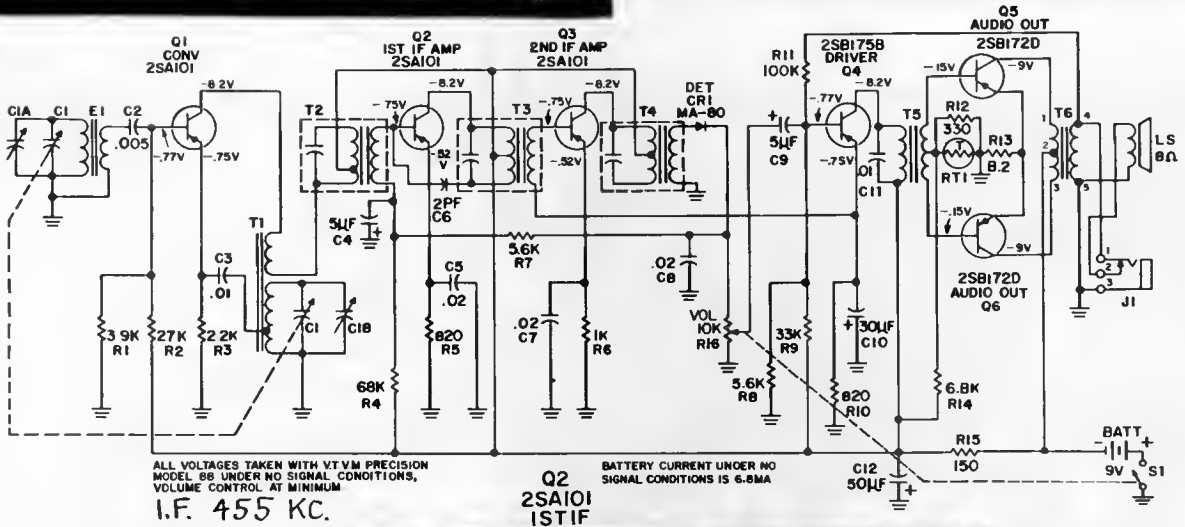


NOTE: WHEN REPLACING BATTERY, NEW BATTERY MAY READ SEVERAL TENTHS OF A VOLT HIGHER THAN ORIGINAL BATTERY. THEREFORE, VOLTAGES MAY READ SLIGHTLY HIGHER THAN THOSE INDICATED ON BASE LAYOUT.

Perma Circuit Panel
Bottom View, Showing Parts on Top


PHILCO

MODEL NT602

(Alignment data on page 100)

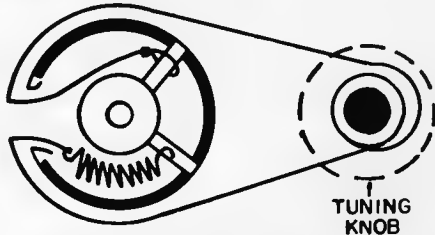


TUNING KNOB




Dial Cord Stringing - Model NT602


FREQUENCY COVERAGE: 530KC to 1650KC
 INTERMEDIATE FREQUENCY: 455KC
 ANTENNA: Self-contained ferrite

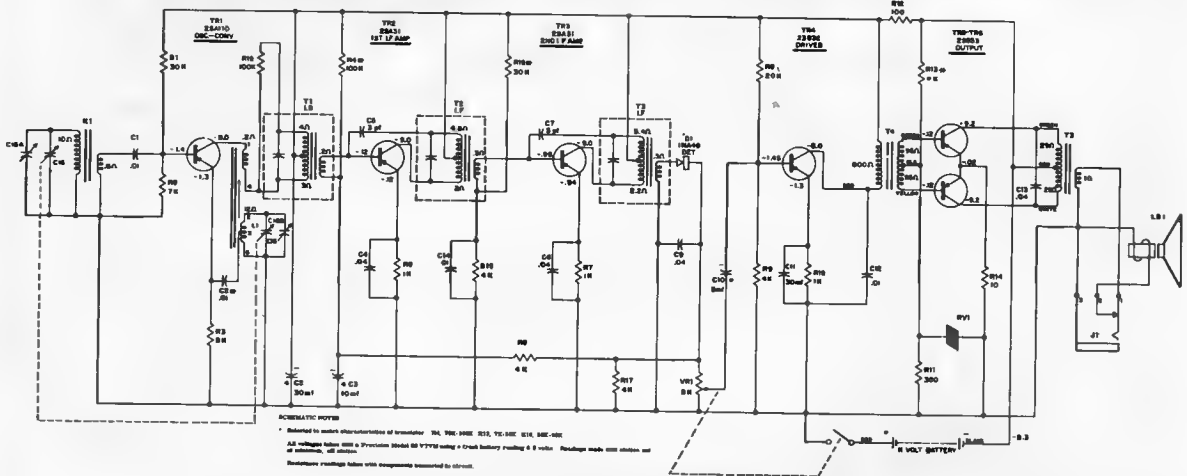

Schematic Diagram - NT602

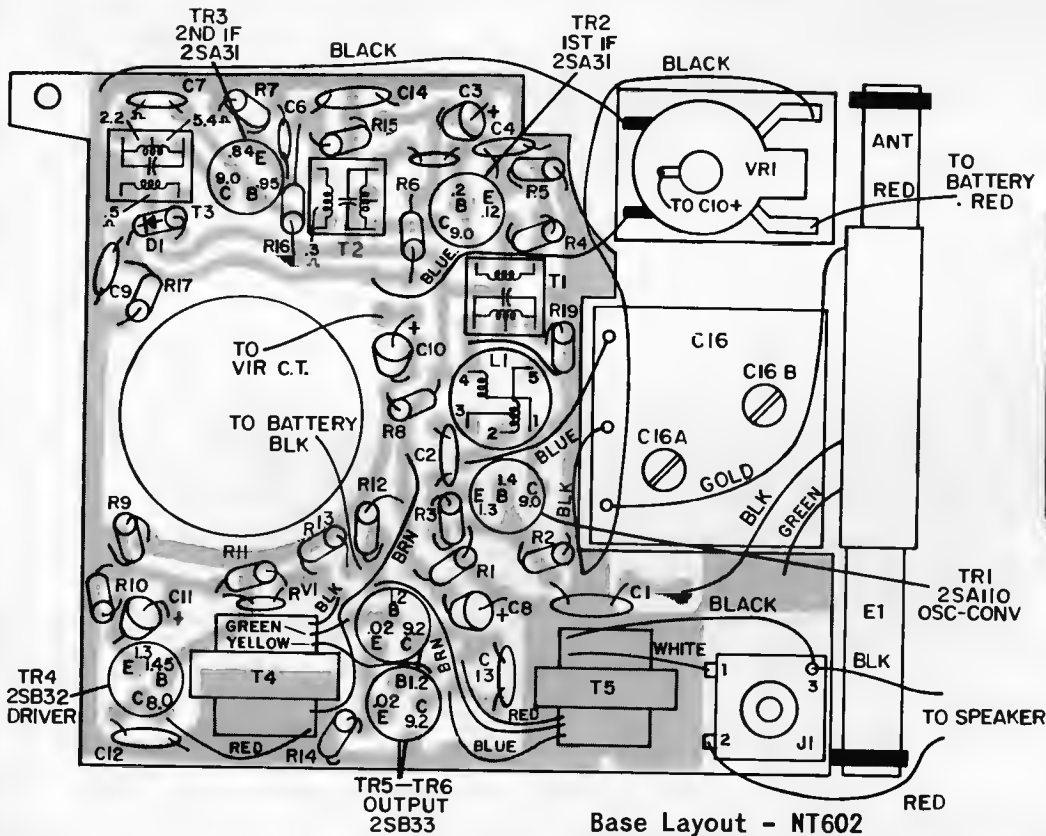


Base Layout - NT602

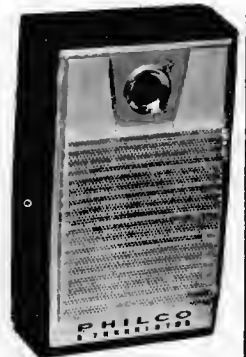

NT602

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO

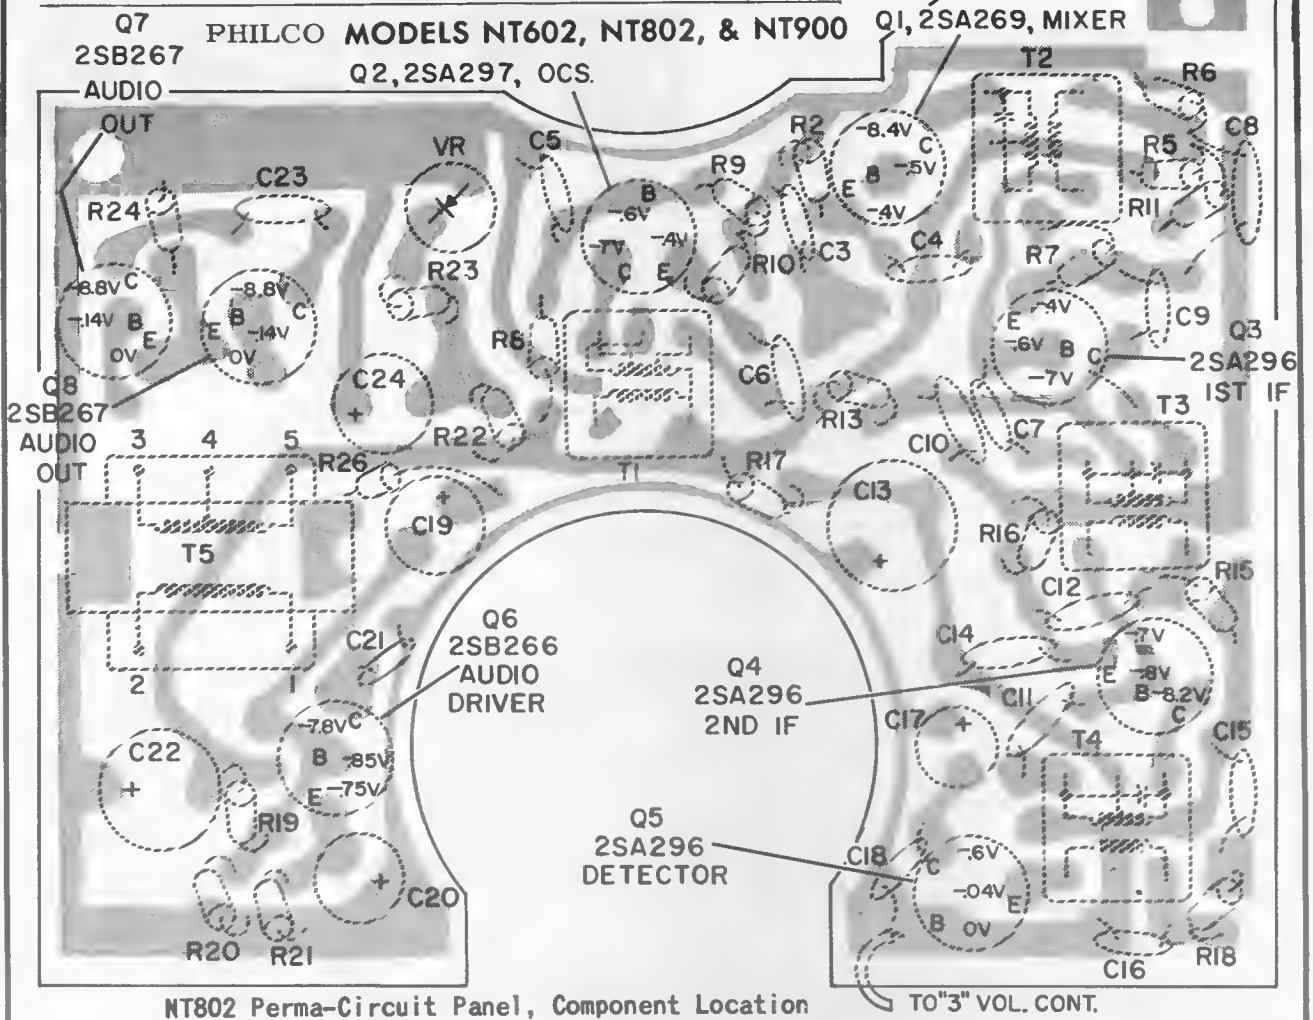

ALIGNMENT PROCEDURE - NT602, NT802 AND NT900


ALIGNMENT: Connect an a-c voltmeter or oscilloscope across speaker voice coil. Connect ground lead of AM R-F generator to chassis; output lead as indicated in chart. Keep voltage across voice coil below .6 volts (reduce generator output).

STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	NT602	NT802	NT900
1	CONNECT SIGNAL GENERATOR THRU A 0.1 MF CAPACITOR TO RF SECTION OF GANG (C1A)	455KC	TUNING GANG FULLY OPEN	ADJUST FOR MAX. IN ORDER GIVEN	T3 T2 T1	T4 T3 T2	T4 T3 T2
2	USE RADIATING LOOP (SEE NOTE BELOW)	520KC	520KC	ADJUST FOR MAX. ROCK TUNING GANG WHILE MAKING ADJUSTMENTS	L1	T1	T1
3	SAME AS STEP 2	1650KC	1650KC	ADJUST FOR MAX. OUTPUT	C16B	C1B	C1B
4	SAME AS STEP 2	620KC	620KC	SLIDE ANTENNA COIL BACK AND FORTH FOR MAX. OUTPUT	ANT. COIL	ANT. COIL	ANT. COIL
5	SAME AS STEP 2	1400KC	1400KC	ADJUST FOR MAX. OUTPUT	C16A	C1A	C1A


NOTE: USE A 6 TO 8 INCH DIAMETER LOOP MADE UP OF INSULATED WIRE. CONNECT TO GENERATOR TERMINALS, AND LOOSE COUPLE TO RADIO ANTENNA.

PHILCO

MODEL NT802

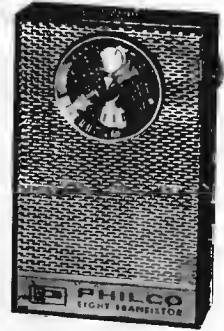


NT802

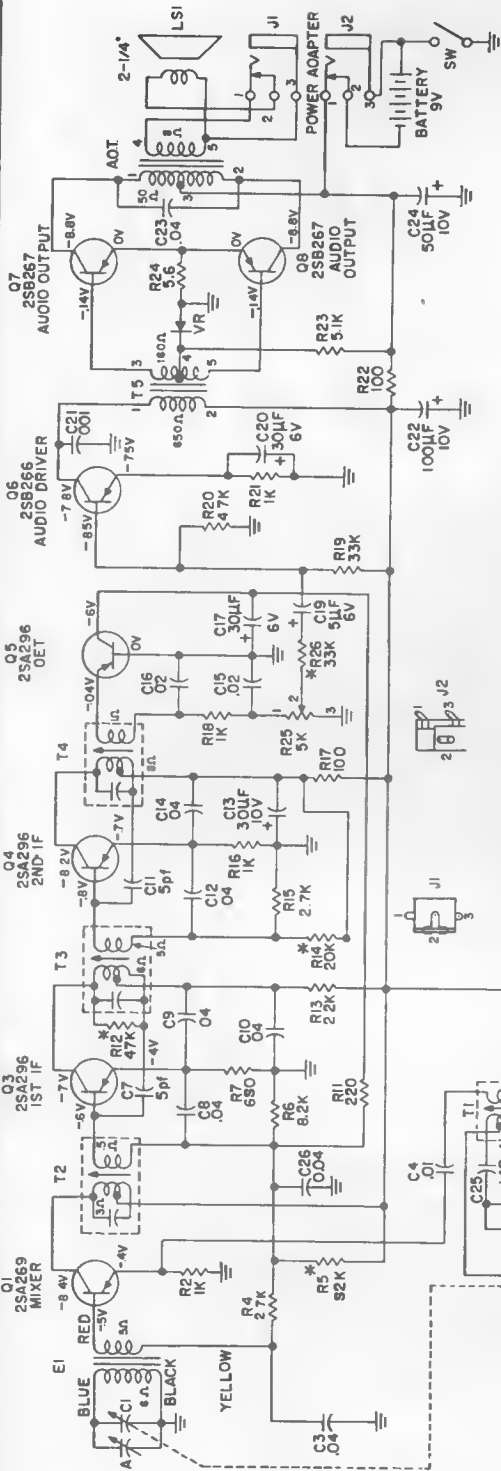


ALL VOLTAGES TAKEN WITH "PRECISION" VTVM MODEL '88'. VOLUME CONTROL SET AT MINIMUM, NO SIGNAL, UNDER SAME CONDITIONS, BATTERY CURRENT 86 MA.
ALL COIL RESISTANCES TAKEN IN CIRCUIT

* R12	47K, 100K
R26	33K, 47K
R5	68K, 82K
R14	20K, 18K, 22K

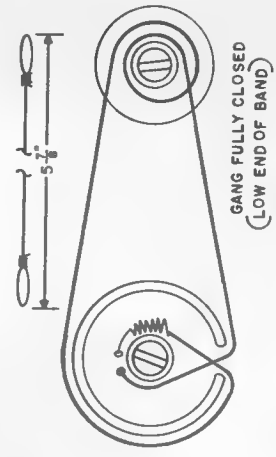



PERMA-CIRCUIT PANEL REMOVAL NT802

Panel Removal - To remove panel from cabinet, remove three Phillips head screws located at A1, C9 and G1 (see bottom component location view). Panel and jack assembly may now be lifted out simultaneously. The speaker will remain in the cabinet. Jack assembly and panel can not be removed separately. They must be removed together. Remove jack assembly by prying up side of jack assembly toward front of radio.

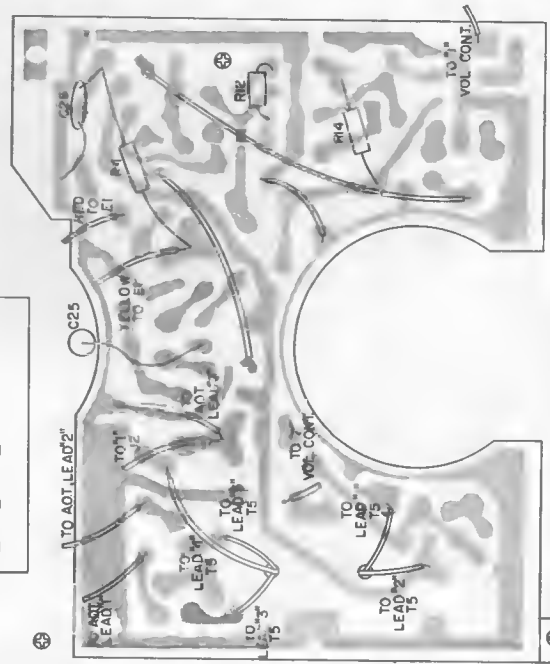

Bottom Component Location



PHILCO Model NT900, Continued (Alignment data on page 100)

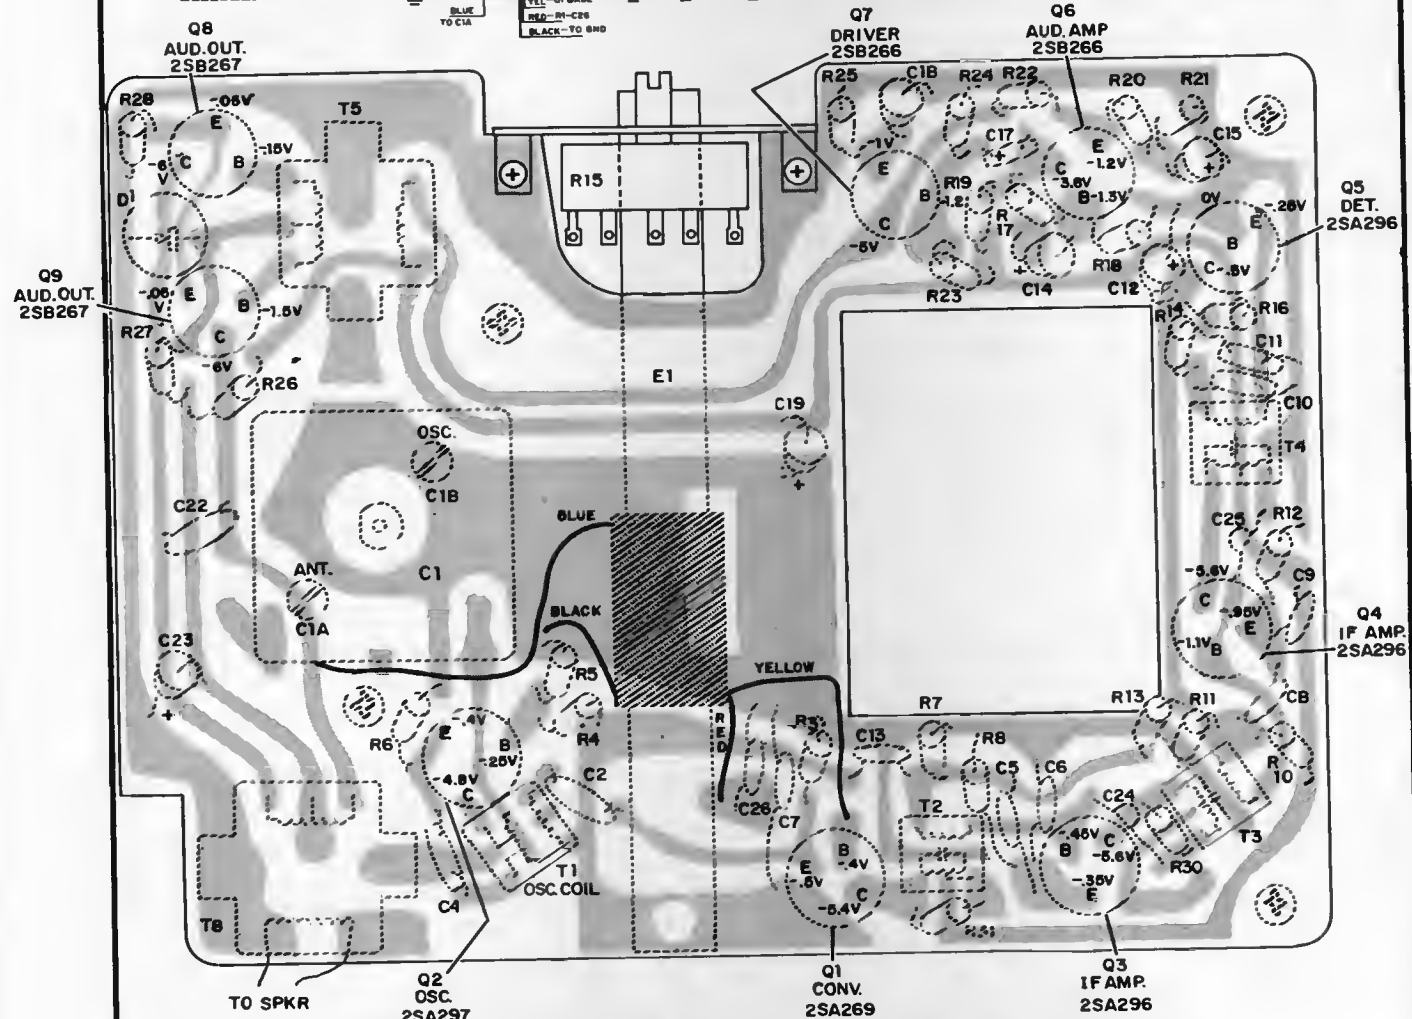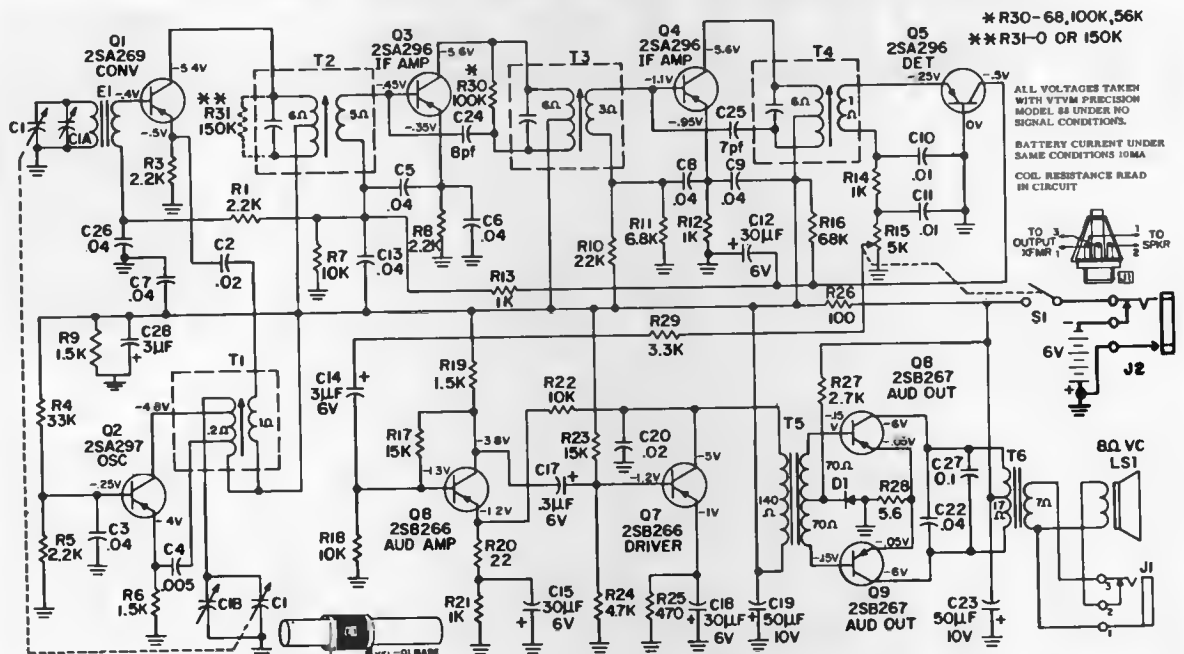

Bottom View of Perma-Circuit Panel - NT900

PHILCO

TABLE/CLOCK AM RADIOS MODELS N721, N880, & N881

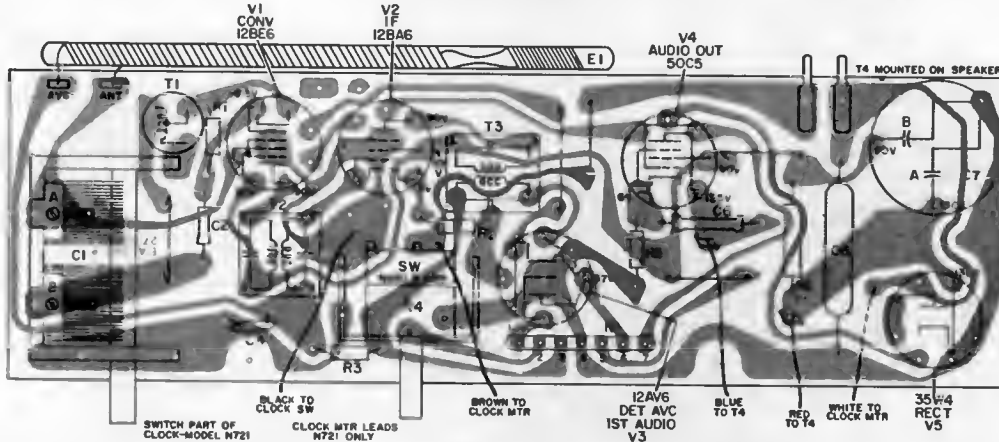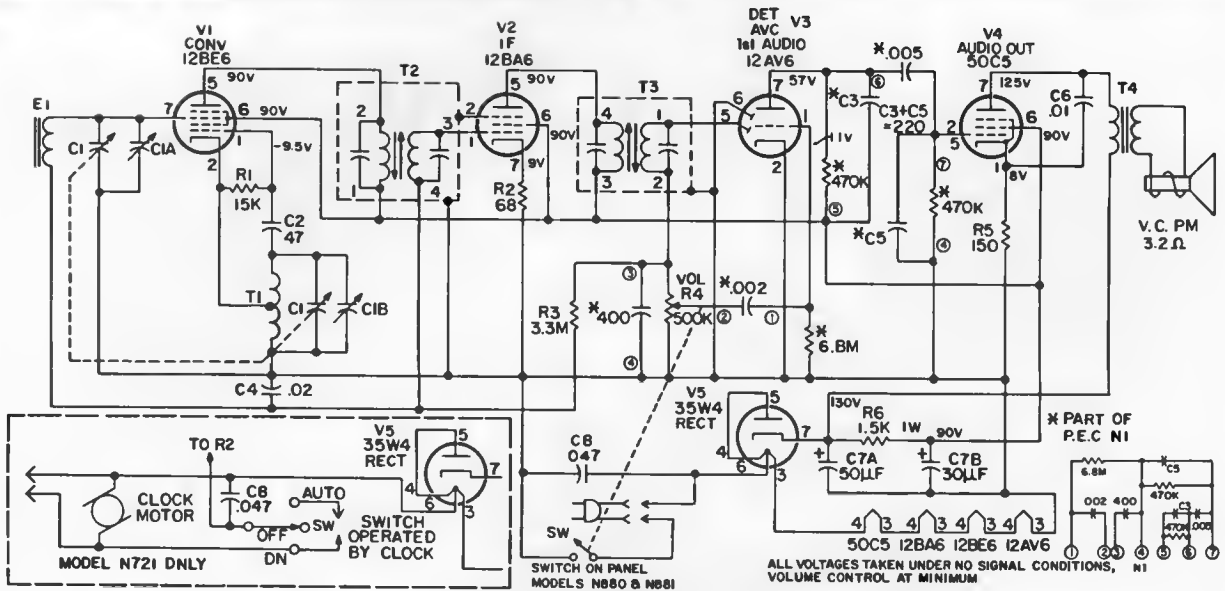

Models N721, N880 & N881 - Component Layout Perma-Circuit Panel, Bottom View

ALIGNMENT PROCEDURE

Allow test equipment to warm up for 15 minutes before proceeding with alignment. Connect AC voltmeter or oscilloscope across speaker voice coil. Use an AM RF signal generator. Connect ground lead to B minus and output lead as indicated in chart. Attenuate signal generator output throughout alignment to maintain output level below 1 volt.


STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	ADJUST
1	CONNECT GENERATOR THROUGH A .1 MF CAPACITOR TO ANTENNA SECTION OF GANG	455KC	TUNING GANG FULLY OPEN	ADJUST FOR MAXIMUM OUTPUT IN ORDER GIVEN	T3 - TOP T3 - BOTTOM T2 - BOTTOM T2 - TOP
2	USE RADIATING LOOP	1620KC	1620KC	ADJUST FOR MAXIMUM	C1B - OSC. TRIM.
3	SAME AS STEP 2	1400KC	1400KC	ADJUST FOR MAXIMUM	C1A - ANT. TRIM.

NOTE: Use a 6 to 8 turn 6-inch diameter loop made of insulated wire. Connect to signal generator and loosely couple to radio antenna.


PHILCO

MODEL N795


(For alignment see table on page 103)

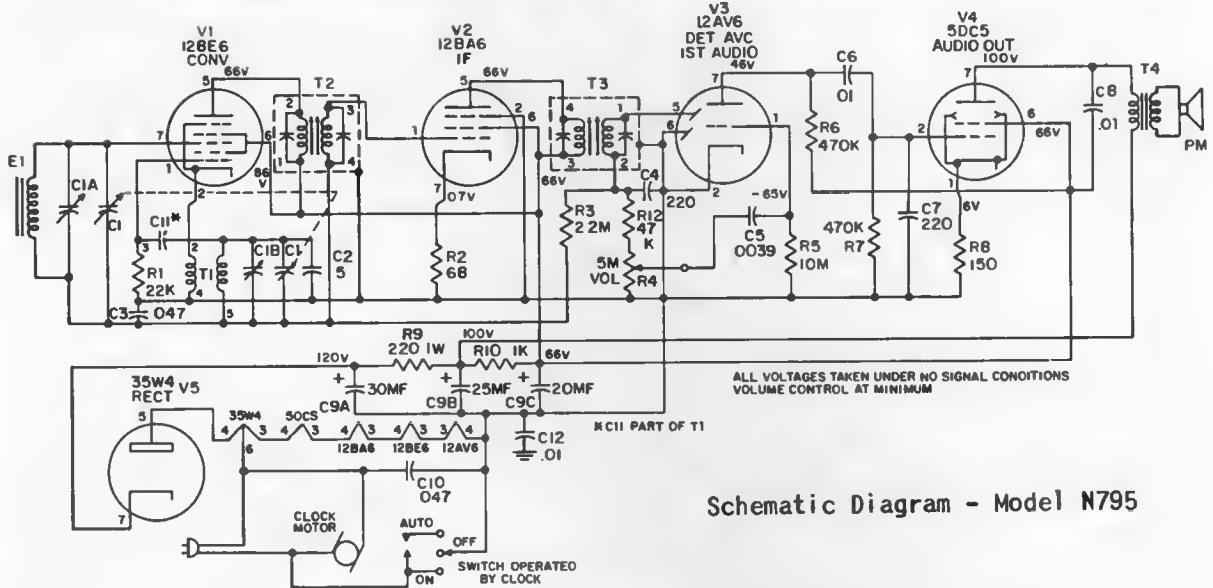

Schematic Diagram - Model N795

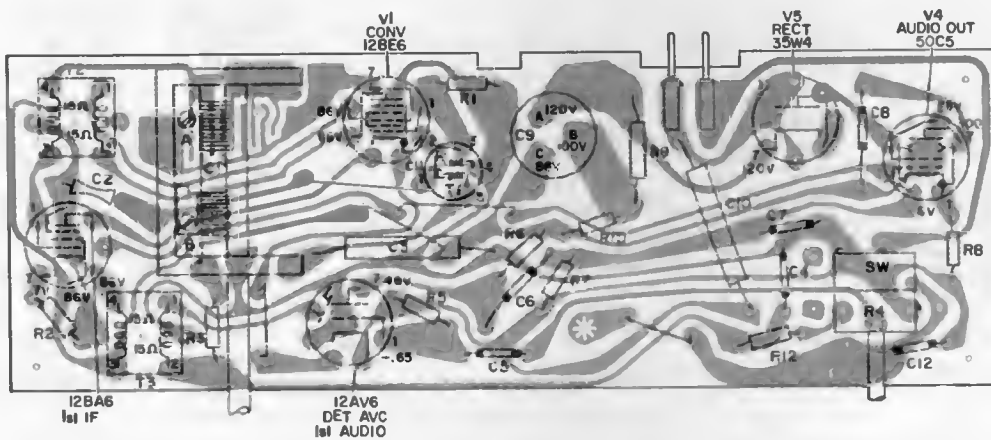

Model N795 - Component Layout Perma-Circuit Panel, Bottom View

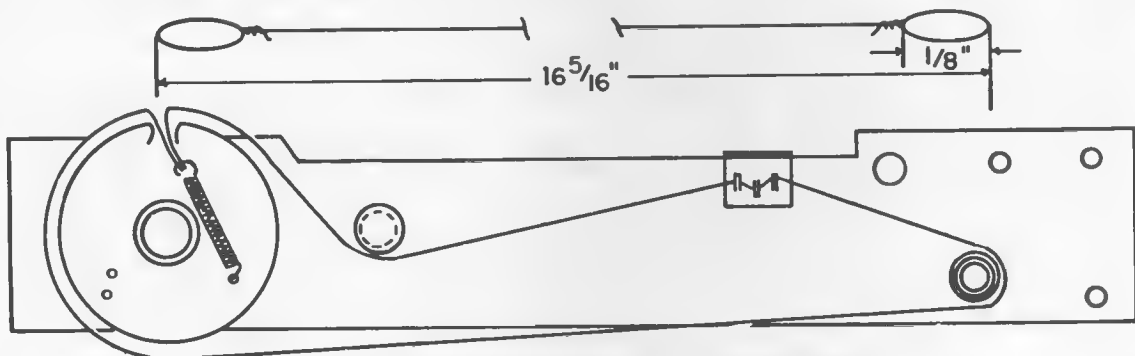




Dial Cord Stringing - Model N795 Only

PHILCO


AM Only Models N-723, N-724, N-884, N-885




N-884

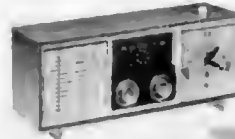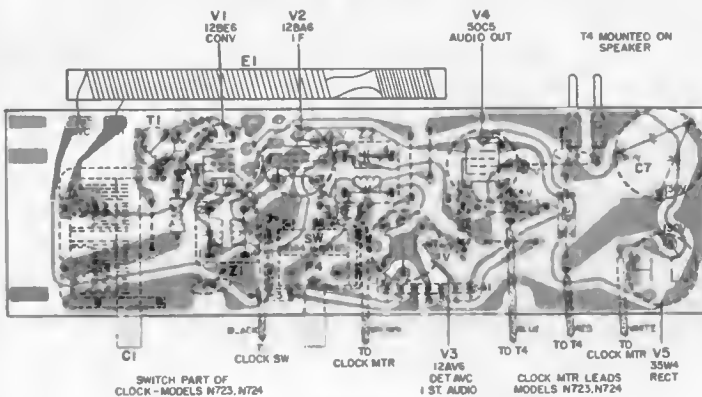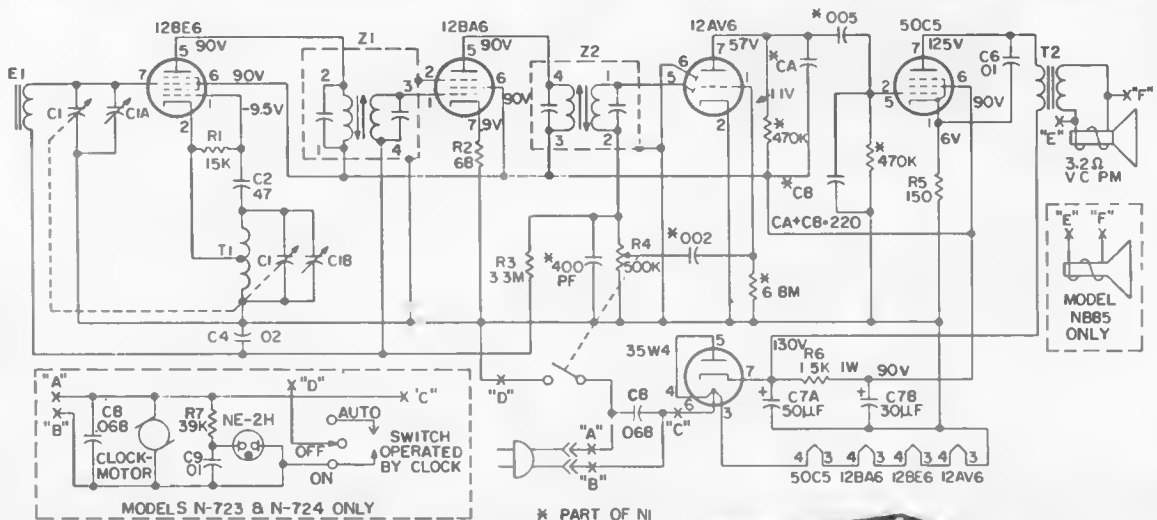

N-723

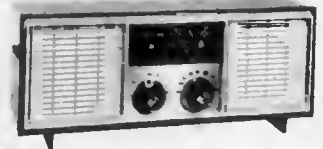

N-885

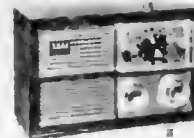

N-724

ALIGNMENT


Connect an a-c voltmeter or oscilloscope across speaker voice coil. Connect ground lead of the AM R-F signal generator to chassis output lead as indicated in chart. Keep voltage across voice coil below .5 volt (reduce generator output). Set volume control to maximum, tuning control as indicated in chart. During alignment keep antenna and chassis in same relative position as they are in cabinet.

SIGNAL GENERATOR		RADIO			
STEP	CONNECTION TO RADIO	DIAL SETTING	DIAL SETTING	SPECIAL INSTRUCTIONS	ADJUST
1	Ground lead to B-; output lead through a .1 mf condenser to grid (pin 7) of 12BE6 or top of r-f tuning condenser.	455KC	Tuning gang fully open.	Adjust tuning cores, in order given, for maximum output.	Z2 - top Z2 - bottom Z1 - bottom Z1 - top
2	Radiating loop (See note below).	1620KC	1620KC	Adjust for maximum output.	C1-B - osc.
3	Same as Step 2.	1500KC	1500KC	Adjust for maximum output.	C1-A - aerial


NOTE: Make up a 6-8 turn, 6 inch diameter loop from insulated wire, connect to signal-generator leads, and place near radio loop. For proper adjustment of the oscillator trimmer, fully open the tuning gang and insert a .006 inch non-metallic shim between the heel of the rotor and the top of the stator plates. Close the tuning gang sufficiently to hold the shim in place, and then remove the shim without disturbing the gang setting.

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


PHILCO Models N-725 and N-727

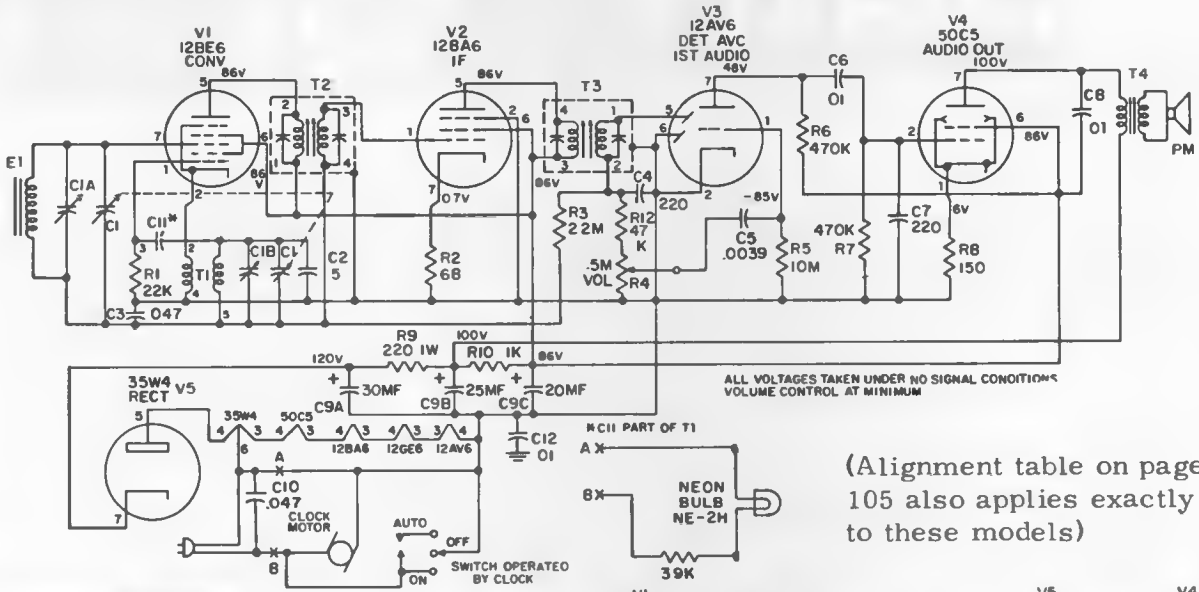


(Alignment table on page 105 also applies exactly to these models)

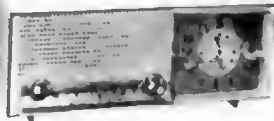

N-725

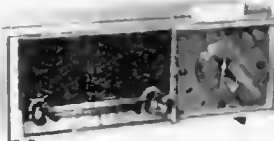

N-727

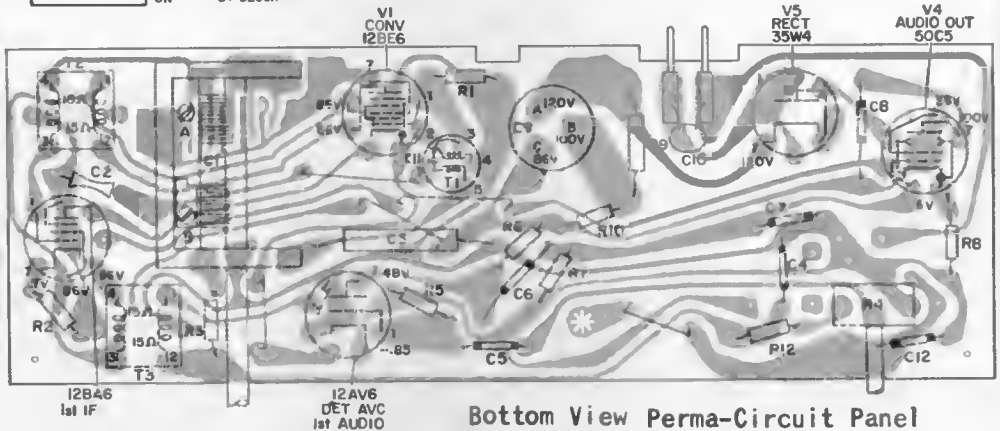


Bottom View Perma-Circuit Panel

SYM-BOL	LOCA-TION	DESCRIPTION	SERVICE PART NO.
C1	C2	Capacitor, variable tuning	
C2	B2	Capacitor, 5 pf, temp. comp.	30-1287-1
C3	E3	Capacitor, .047 mf, AVC	30-4650-45
C4	L4	Capacitor, 220 pf, diode filter	30-1283-25
C5	G5	Capacitor, .0039 mf, 1st audio	30-1283-64
C6	G4	Capacitor, .01 mf, out. grid	30-1283-69
C7	L3	Capacitor, 220 pf, out. grid	30-1283-25
C8	M1	Capacitor, .01 mf, out. plate	30-1283-69
C9	H2	Capacitor, electrolytic 30/25/20	30-2585-11
C10	J2	Capacitor, .047 line bypass	30-4650-45
C11	F2	Part of T1	*
C12	M5	Capacitor, .01 mf, B- to gnd.	30-1283-69

SYM-BOL	LOCA-TION	DESCRIPTION	SERVICE PART NO.
R1	F1	Resistor, 22K ohms, osc. grid	
R2	A4	Resistor, 68 ohms, I-F cathode	
R3	C4	Resistor, 2.2M ohms, AVC	
R4	M4	Control, volume	
R5	F4	Resistor, 10M ohms, 1st audio grid	
R6	G3	Resistor, 470K, 1st audio plate	
R7	H4	Resistor, 470K, 1st output grid	
R8	N3	Resistor, 150 ohms, output cathode	
R9	J2	Resistor, 220 ohms, 1W, B+ filter	
T1	H1	Transformer, oscillator	32-4756-1
Z1	B1	Transformer, 1st I-F	32-4583-23
Z2	B4	Transformer, 2nd I-F	32-4583-23

PHILCO



MODELS N-730, N-940

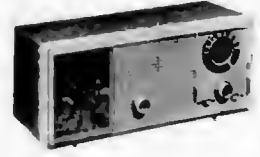

N-730



N-940

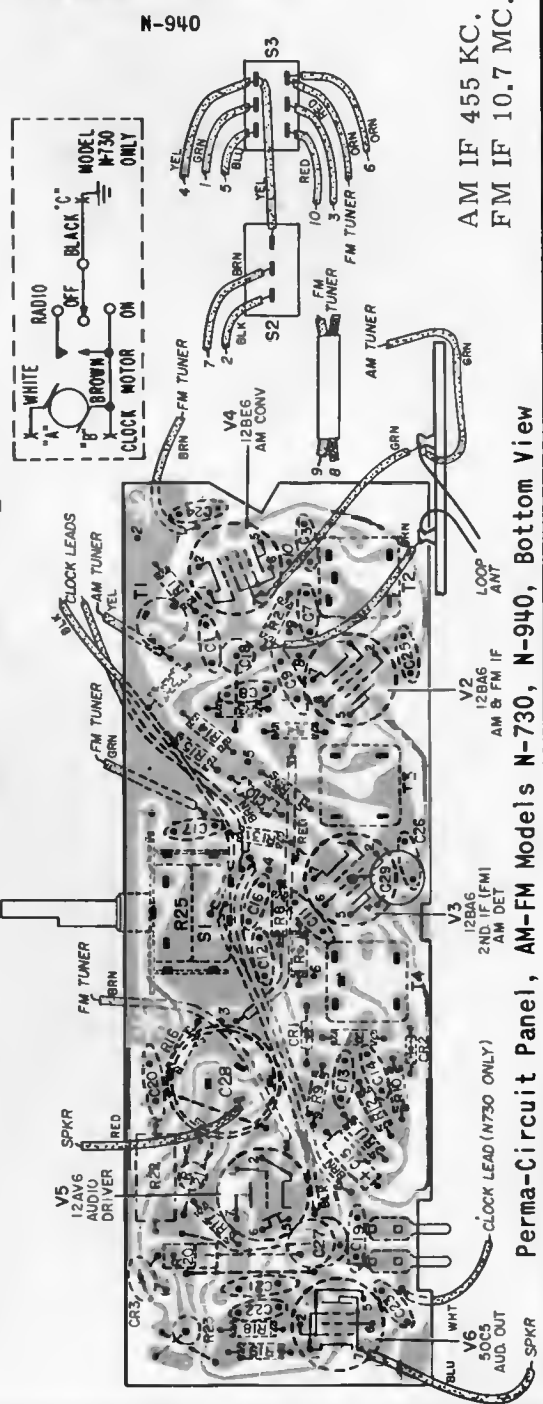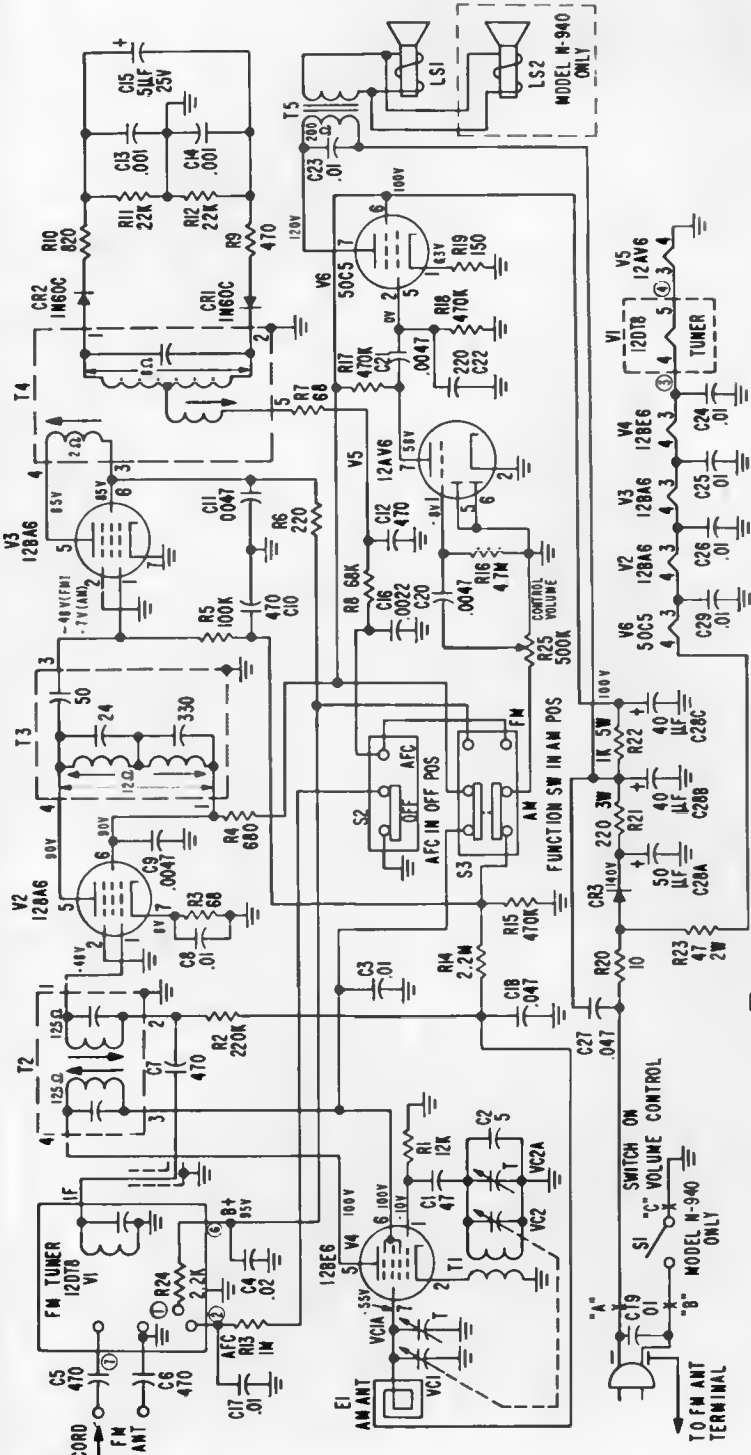


AM IF 455 KC.
FM IF 10.7 MC.

Perma-Circuit Panel, AM-FM Models N-730, N-940, Bottom View




VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

PHILCO

Models N-731, N-732,
N-942, N-944

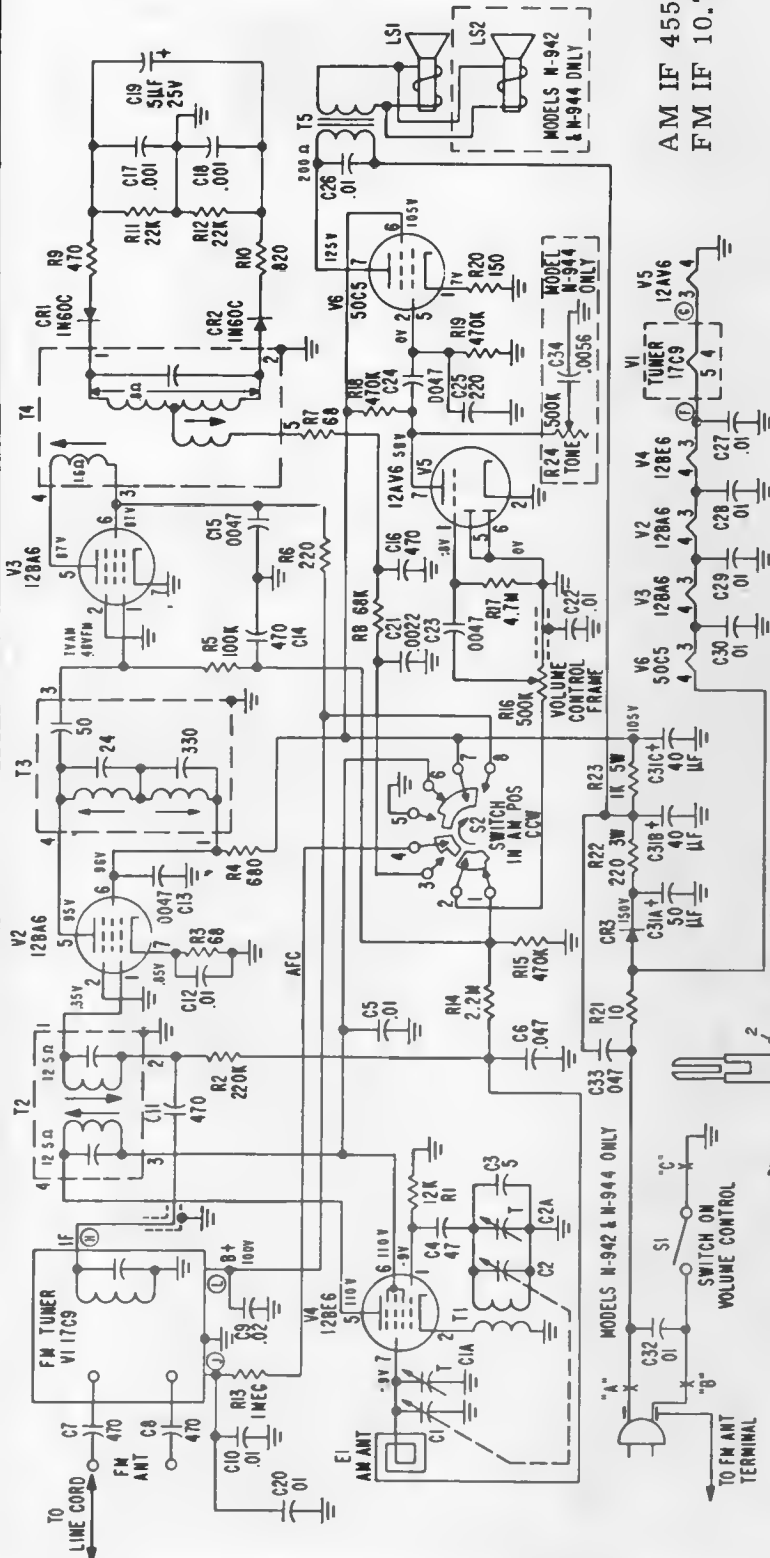


AM IF 455 KC.
FM IF 10.7 MC.

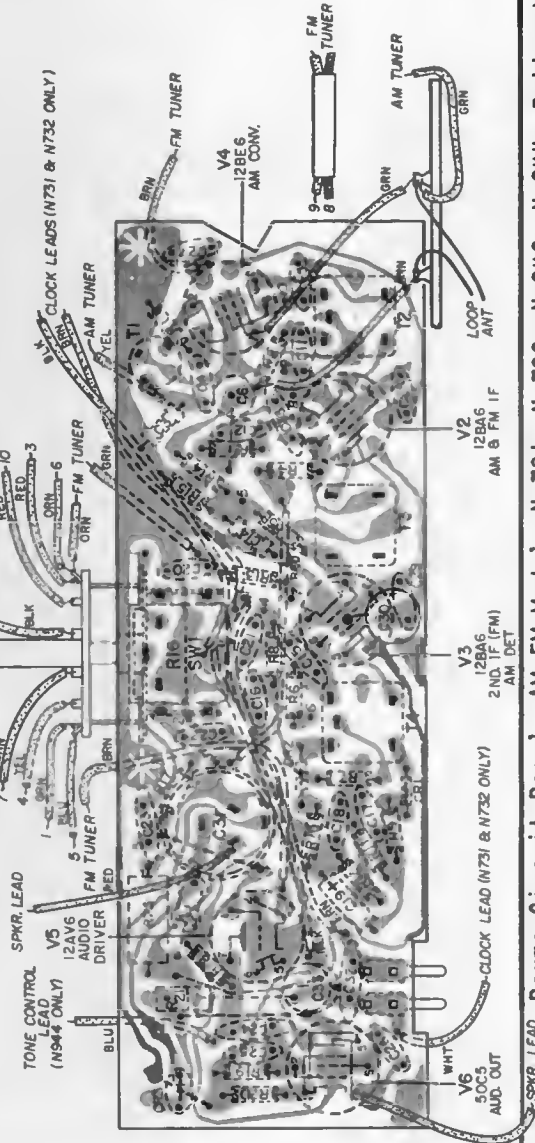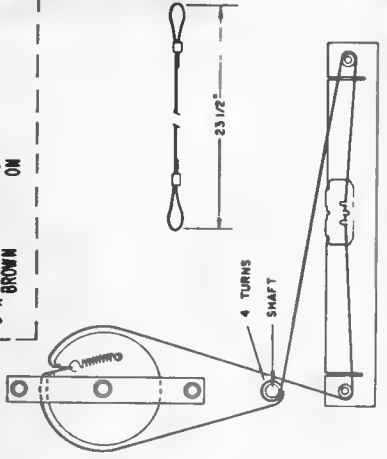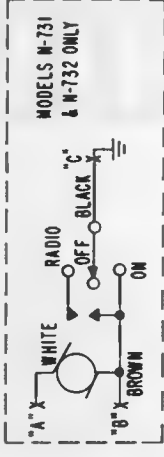

Perma-Circuit Panel, AM-FM Models N-731, N-732, N-942, N-944, Bottom View


PHILCO

TRANSISTOR PORTABLE MODEL NT-807

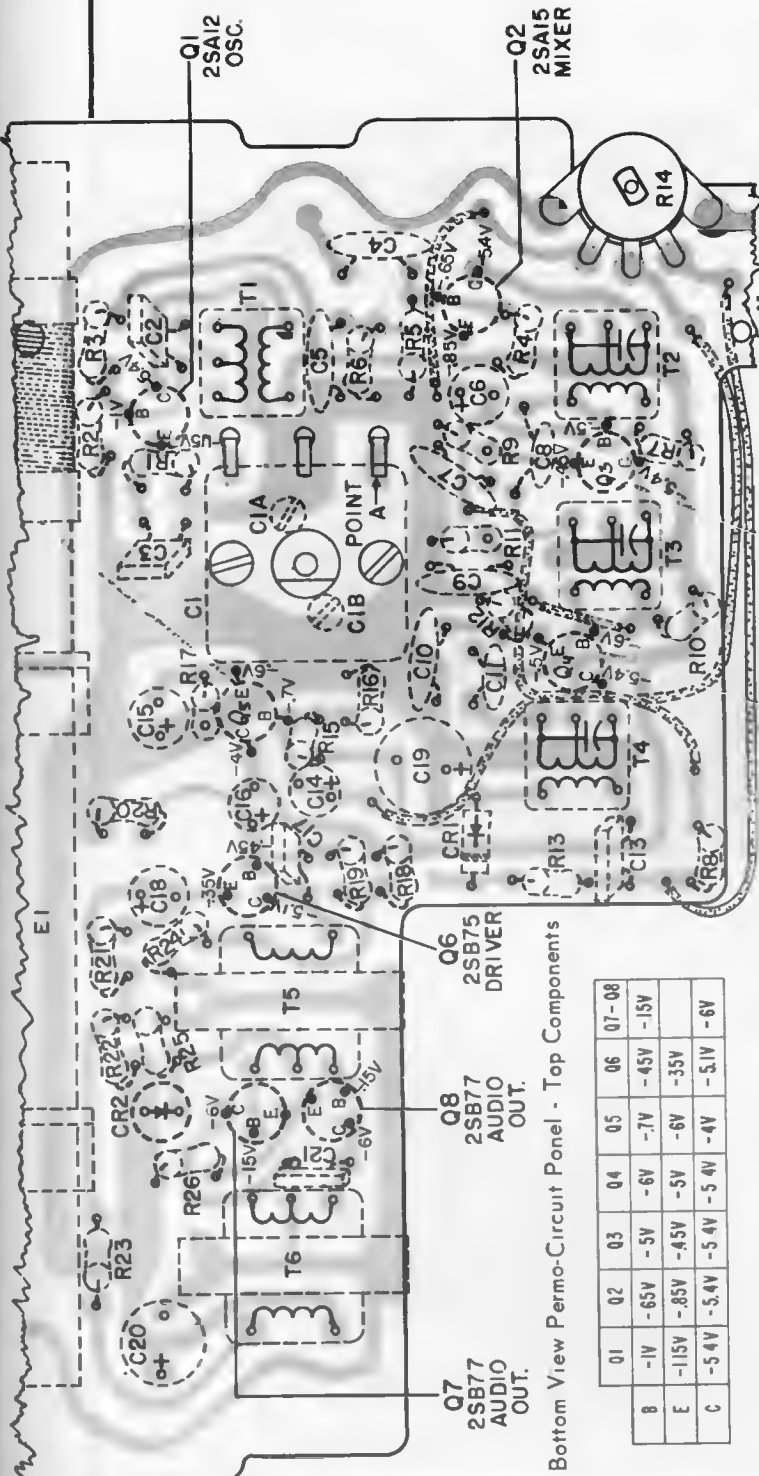

Bottom View Permo-Circuit Panel - Top Components

	Q1	Q2	Q3	Q4	Q5	Q6	Q7-Q8
B	-1V	-65V	-5V	-6V	-7V	-45V	-15V
E	-115V	-85V	-45V	-5V	-6V	-35V	
C	-5.4V	-5.4V	-5.4V	-5.4V	-4V	-5.1V	-6V

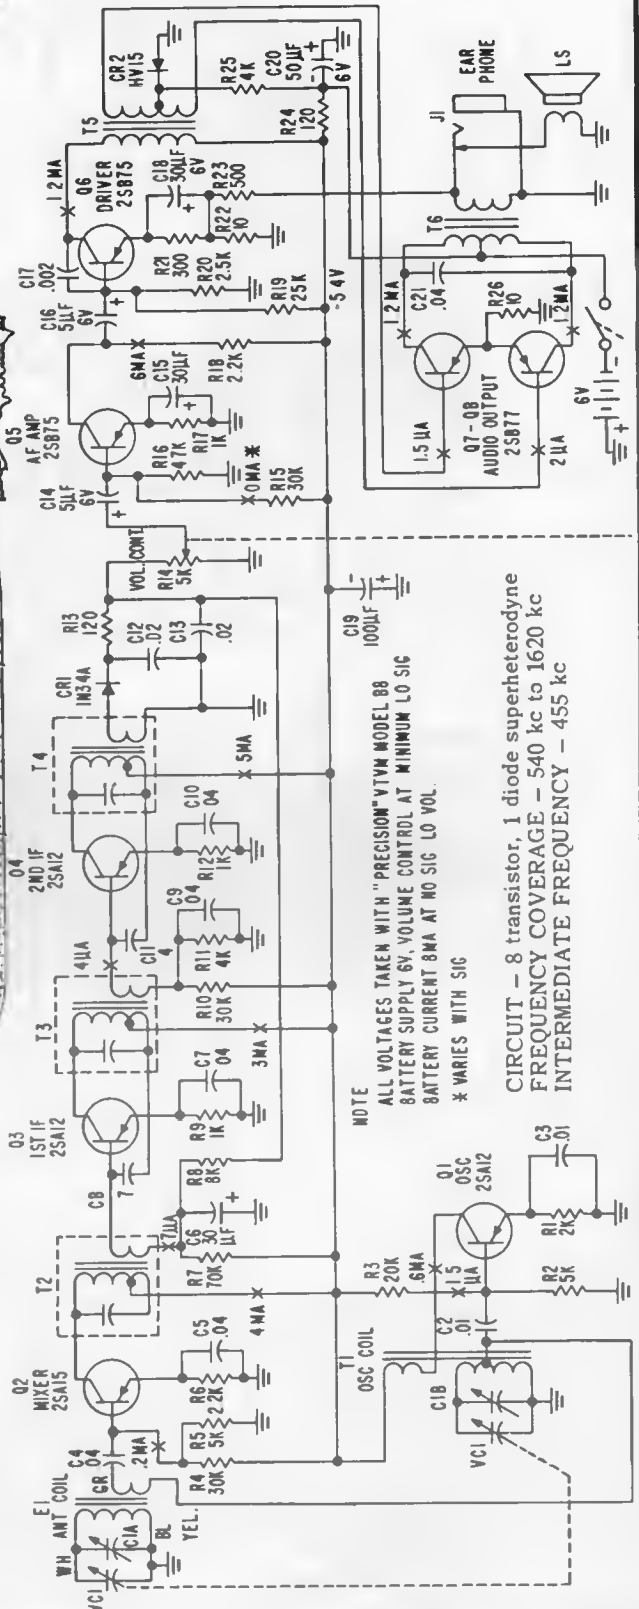



NOTE

ALL VOLTAGES TAKEN WITH "PRECISION" VTVM MODEL 88
 BATTERY SUPPLY 6V, VOLUME CONTROL AT MINIMUM LO SIG
 BATTERY CURRENT 8MA AT NO SIG LO VOL.
 * VARIES WITH SIG



CIRCUIT - 8 transistor, 1 diode superheterodyne
 FREQUENCY COVERAGE - 540 kc to 1620 kc
 INTERMEDIATE FREQUENCY - 455 kc

RADIO SERVICING INFORMATION

PHILCO
MODEL NT-808

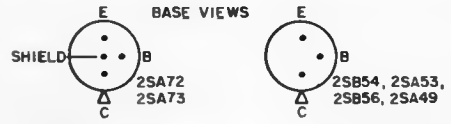
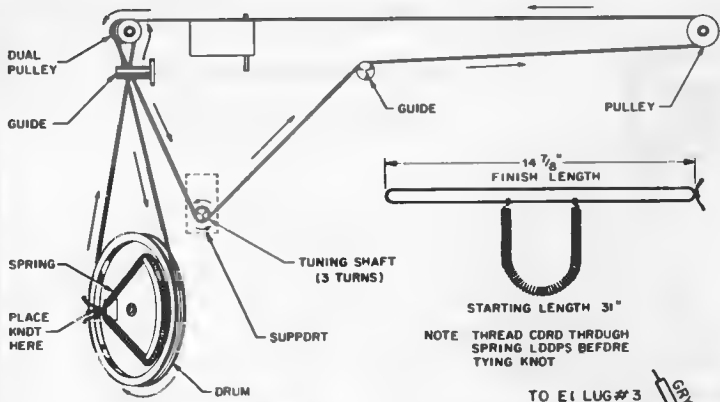


IF = 455 KC

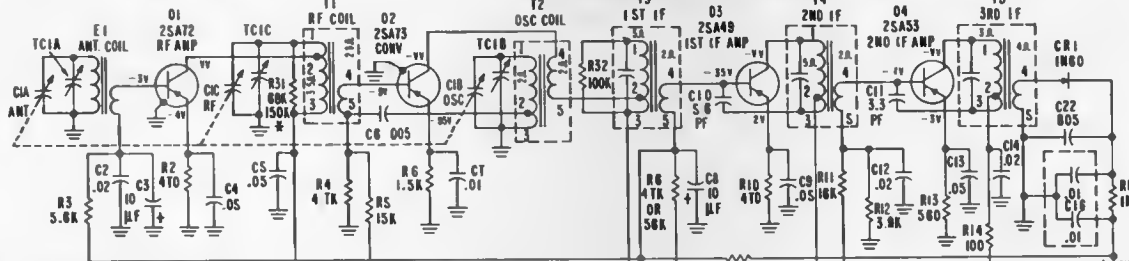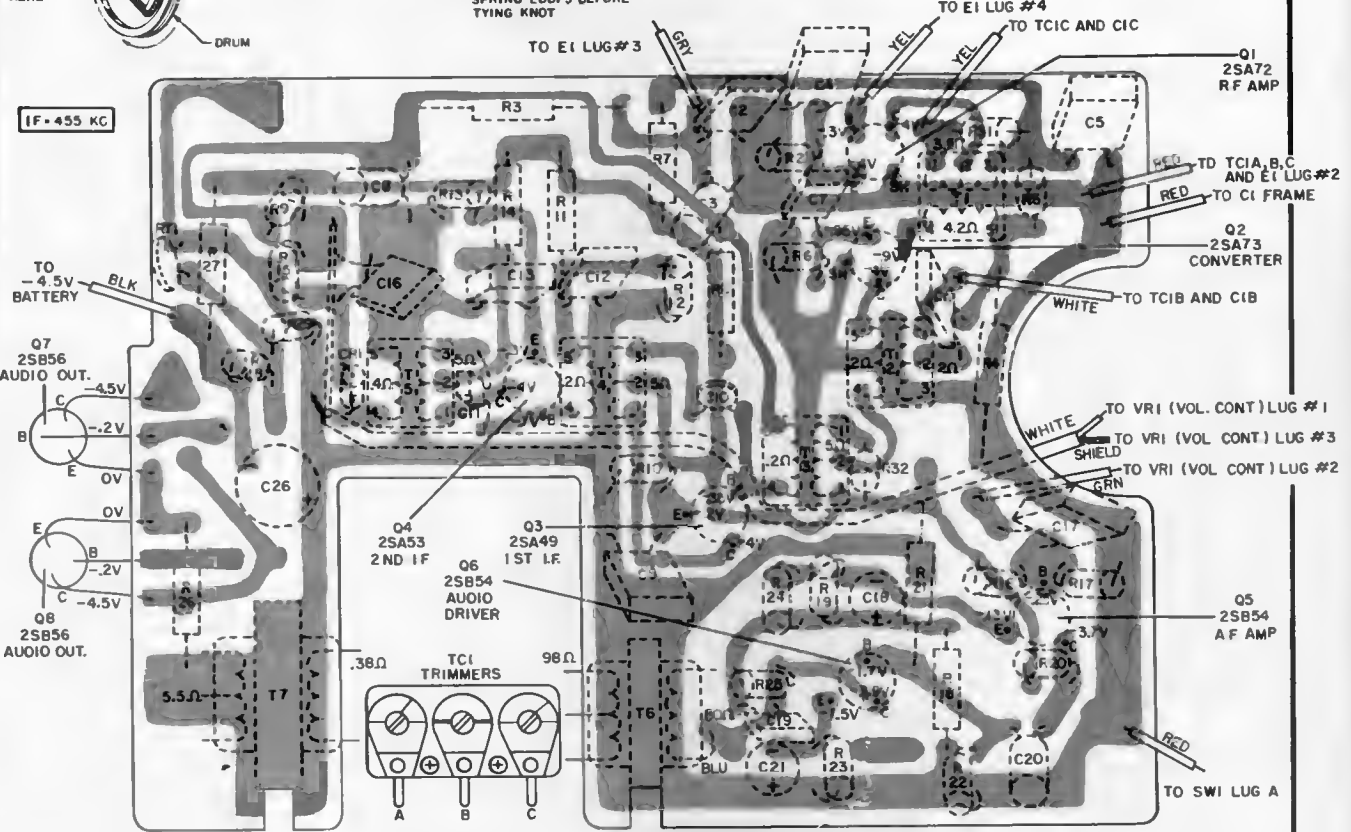


NOTES

- 1 ALL COIL RESISTANCES MEASURED IN CIRCUIT
- 2 ALL VOLTAGES MEASURED FROM B+ 4.5 V TO POINTS INDICATED
- 3 VOLTAGES TAKEN WITH NO SIGNAL AND WITH VOLUME CONTROL AT MINIMUM, UNDER SAME CONDITIONS BATTERY CURRENT DRAIN 12MA
- 4 VOLTAGES AND RESISTANCES TAKEN WITH "PRECISION" VTM MODEL "66"
- * REPLACE WITH ORIGINAL VALUE

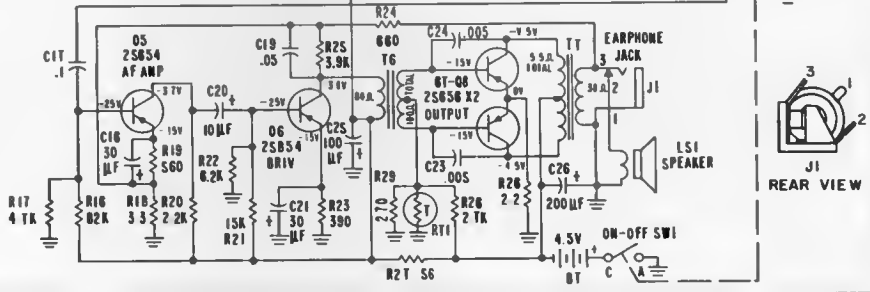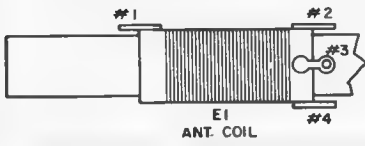

PHILCO

AM-FM TRANSISTOR PORTABLE MODEL NT-906

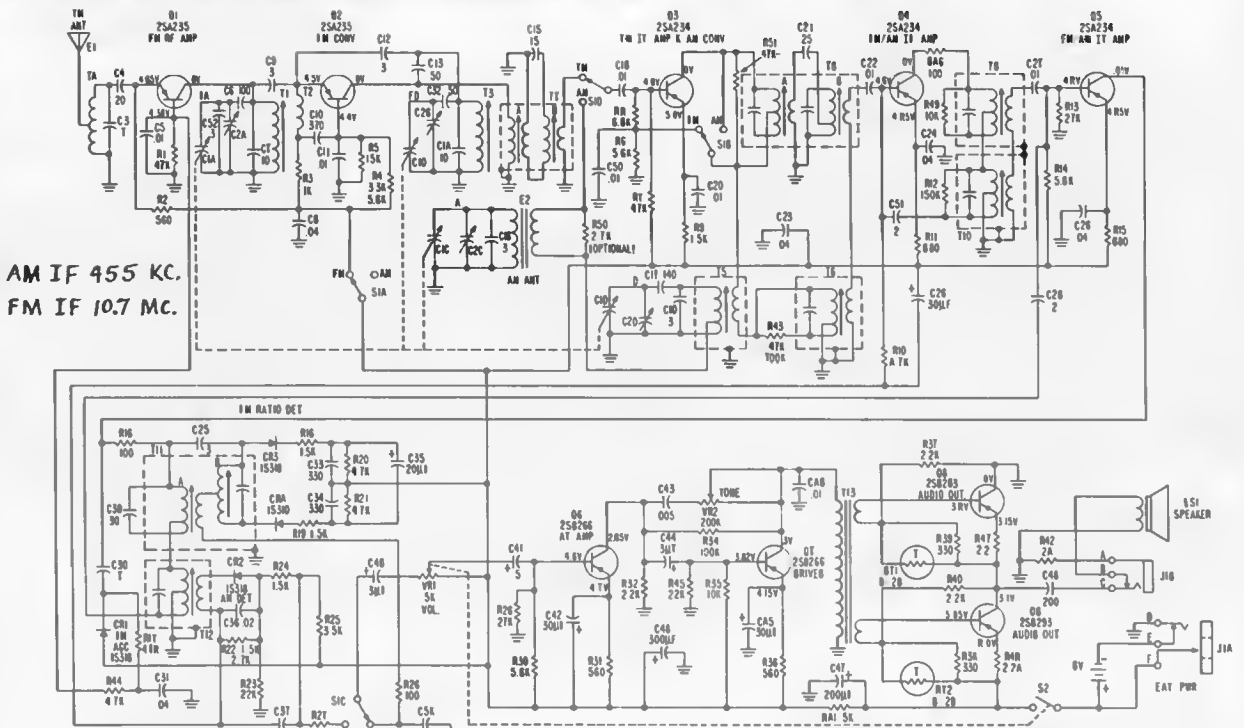

AM IF 455 KC.
FM IF 10.7 MC.

1. ALL VOLTAGES MEASURED FROM D- TO POINTS INDICATED
2. VOLTAGES READ WITH NO SIGNAL AND VOLUME AT MINIMUM UNDER SAME CONDITIONS BATTERY CURRENT AM 12MA FM 14MA
3. VOLTAGE READINGS MAY BE HIGHER WITH NEW BATTERIES
4. VOLTAGES MEASURED WITH "PRECISION" VTVM MODEL "88"
5. VOLTAGES TAKEN IN AM POSITION EXCEPT Q1 AND Q2 WHICH WERE TAKEN IN FM POSITION


- E EMITTER
- B-BASE
- C COLLECTOR
- S SHIELD

NOTE -
1. ALL RESISTANCE READINGS MEASURED IN-CIRCUIT
2. ALL VOLTAGES AND RESISTANCES WERE MEASURED WITH "PRECISION" VTVM MODEL "88"


VOLTAGE CHART

	C	B	E
Q1	0	3.22	1.18
	0	4.38	4.55
Q2	0	1.25	0.15
	0	4.4	4.5
Q3	0	4.8	5.0
	0	4.2	3.2
Q4	0	4.6	4.85
	0	4.45	4.7
Q5	0.5	4.6	4.85
	0.25	4.45	4.85
Q6	2.85	4.6	4.7
	2.52	4.4	4.55
Q7	3	3.82	4.15
	3	3.52	4.0
Q8	0	3.0	3.15
	0	3.0	3.15
Q9	3.1	3.85	4.0
	3.1	3.85	4.0

VOLTAGES MARKED WITH * READ WITH SWITCH IN FM POSITION, ALL OTHERS IN AM POSITION. ALL OTHERS IN AM BATTERY CURRENT MEASURED WITH VOLUME AND TONE CONTROL AT MINIMUM AND NO SIGNAL ON FM 14MA, AM 12MA




Cord Stringing

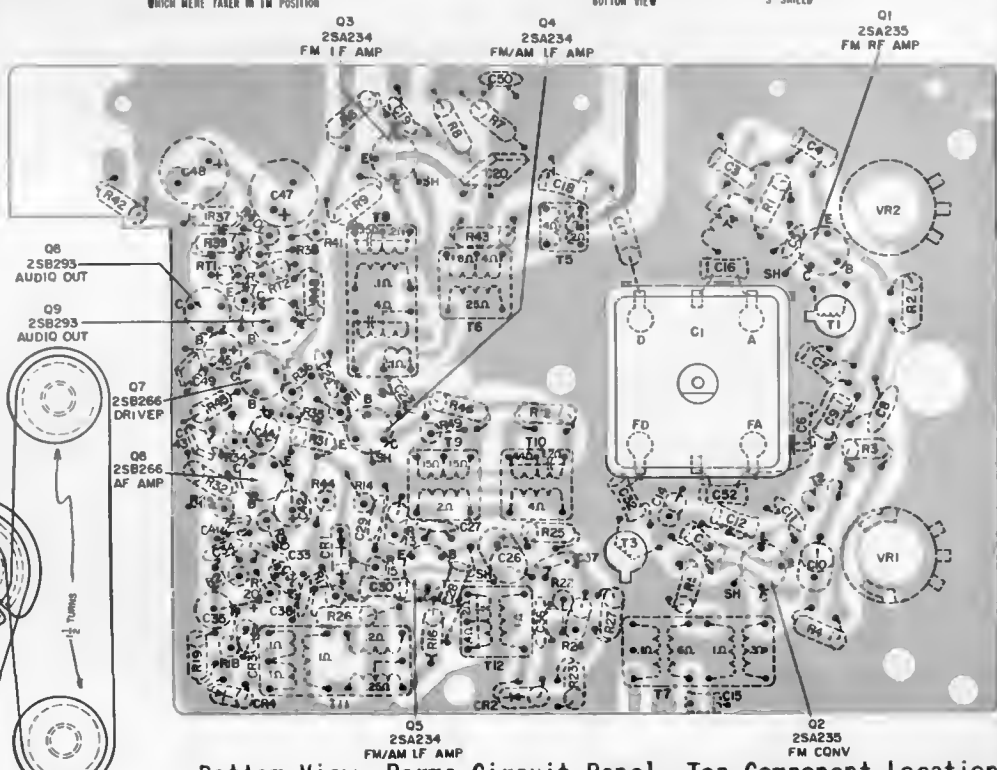

Bottom View, Perma-Circuit Panel, Top Component Location

PHILCO



AM-FM TRANSISTOR PORTABLE MODEL NT-906

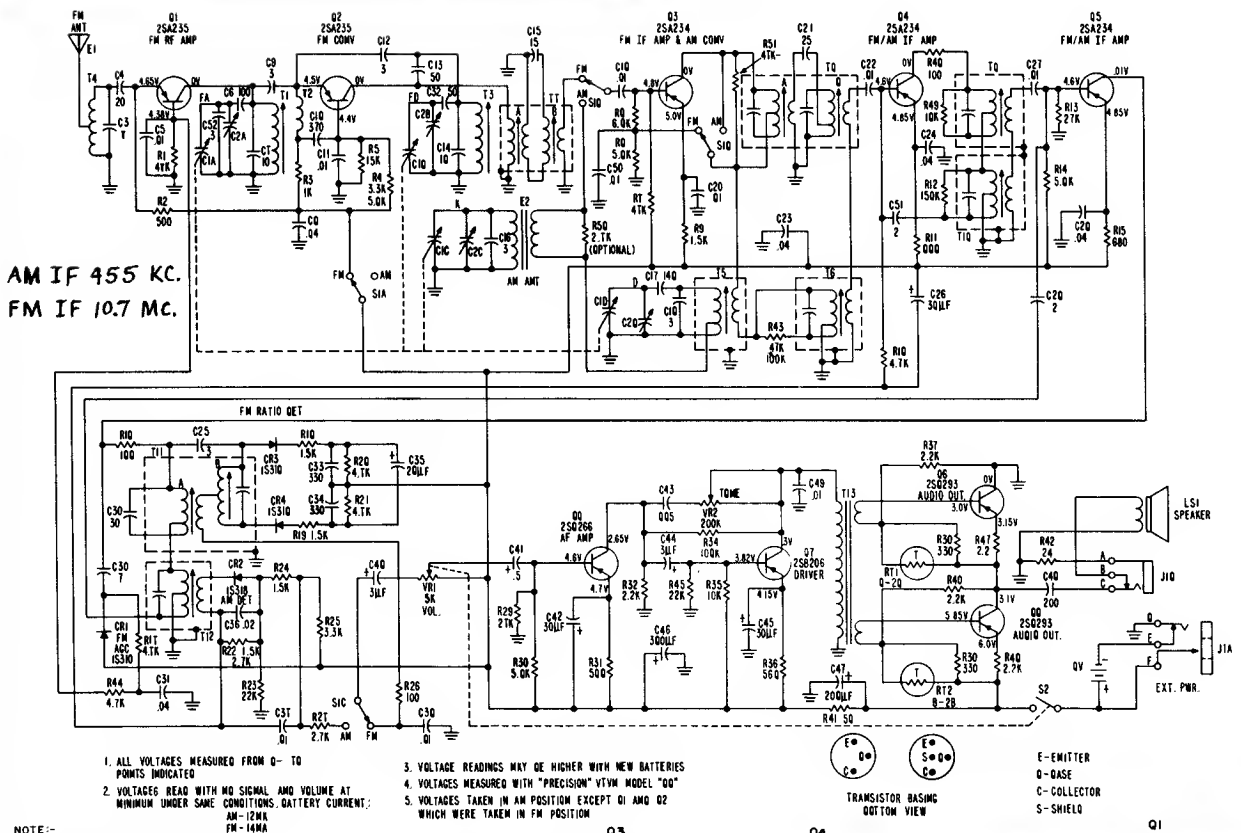

VOLTAGE CHART

	C	B	E
Q1	0	3.22	1.68
	0	4.38	4.65
Q2	0	2.25	1.5
	0	4.4	4.5
Q3	0	4.8	5.0
	0	2.8	3.2
Q4	0	4.6	4.85
	0	4.45	4.7
Q5	0.5	4.6	4.85
	0.5	4.6	4.85
Q6	2.65	4.6	4.7
	2.52	4.4	4.55
Q7	3	3.62	4.15
	3	3.82	4.0
Q8	0	3.0	3.15
	0	3.0	3.15
Q9	3.1	5.85	6.0
	3.1	5.85	6.0


VOLTAGES MARKED WITH * READ WITH SWITCH IN FM POSITION, ALL OTHERS IN AM. BATTERY CURRENT MEASURED WITH VOLUME AND TONE CONTROL AT MINIMUM AND NO SIGNAL. ON FM 14MA, AM 12MA.

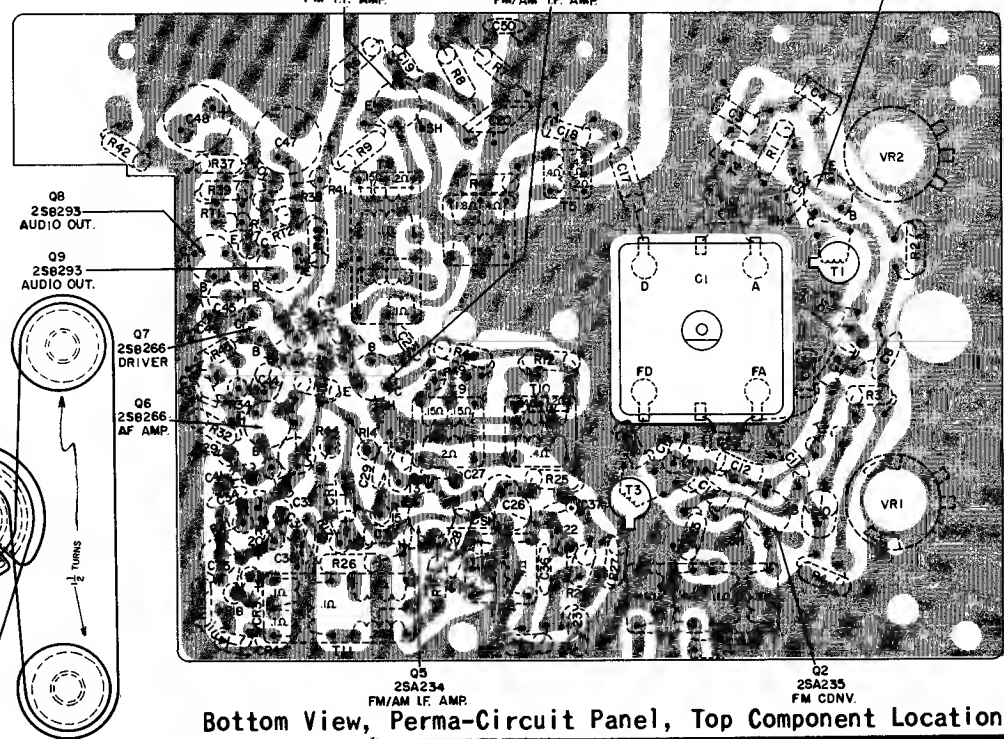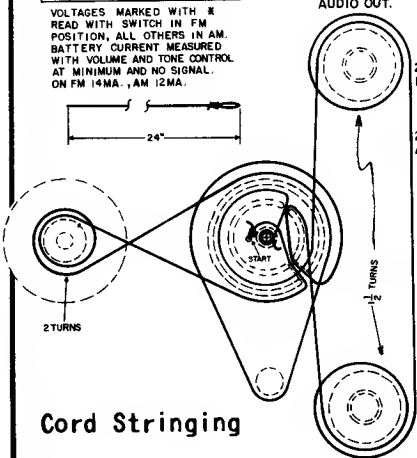

PHILCO

MODEL T-908

(Continued on the next page at right)

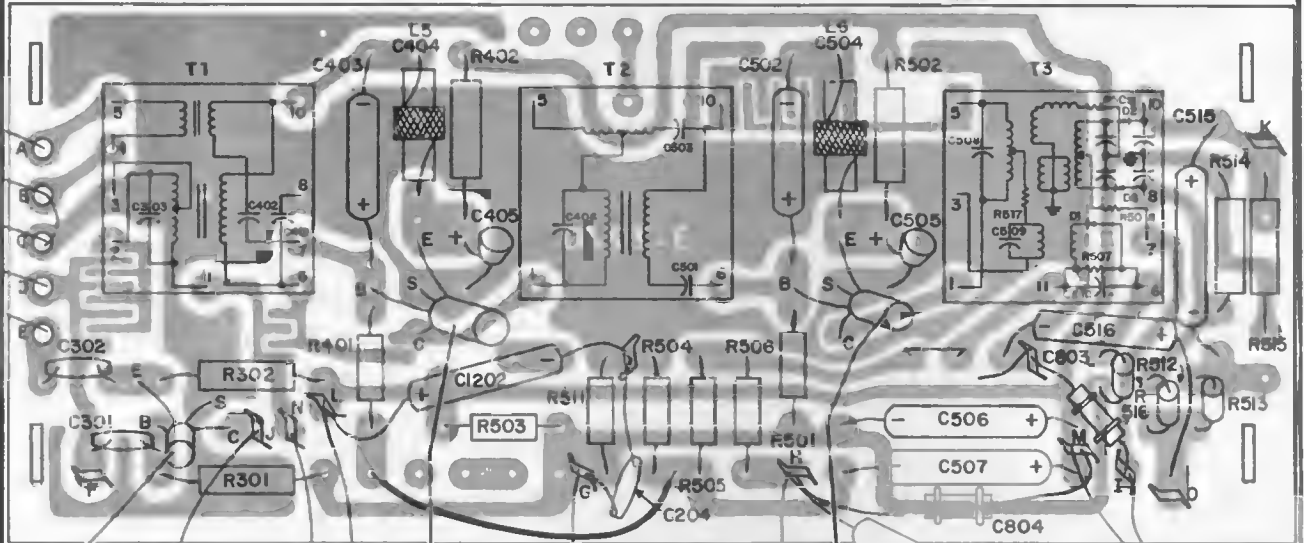

Q3
FM IF & AM CONV.
2SA92/93

	AM	FM
E	7V	6.8V
B	6.8V	6.6V
C	.3V	0V



Q4
AM-FM IF
AF116

	AM	FM
E	6.8V	6.6V
B	6.4V	6V
C	0V	0V




Q5
AM-FM IF
2SA92/93

	AM	FM
E	6.8V	6.6V
B	6.4V	6.2V
C	.36V	.36V



TO S3-6 & S2A-3
TO AUD. PANEL (BB)




Top View, IF Panel

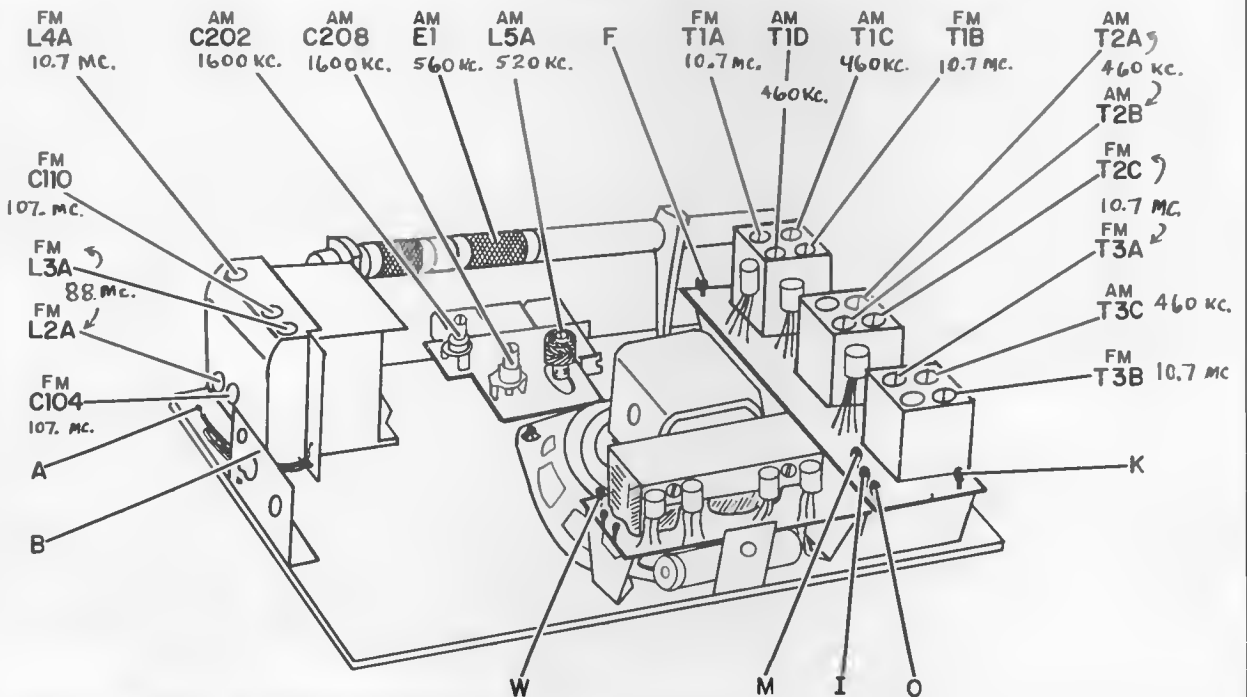

AM-FM CHASSIS ALIGNMENT POINTS

PHILCO MODEL T-908

(Continued from the page at left)

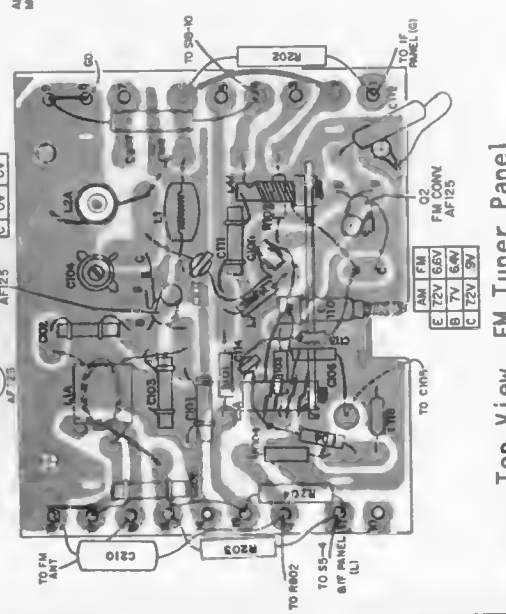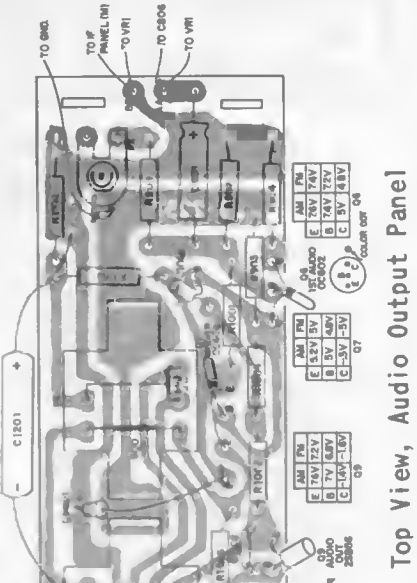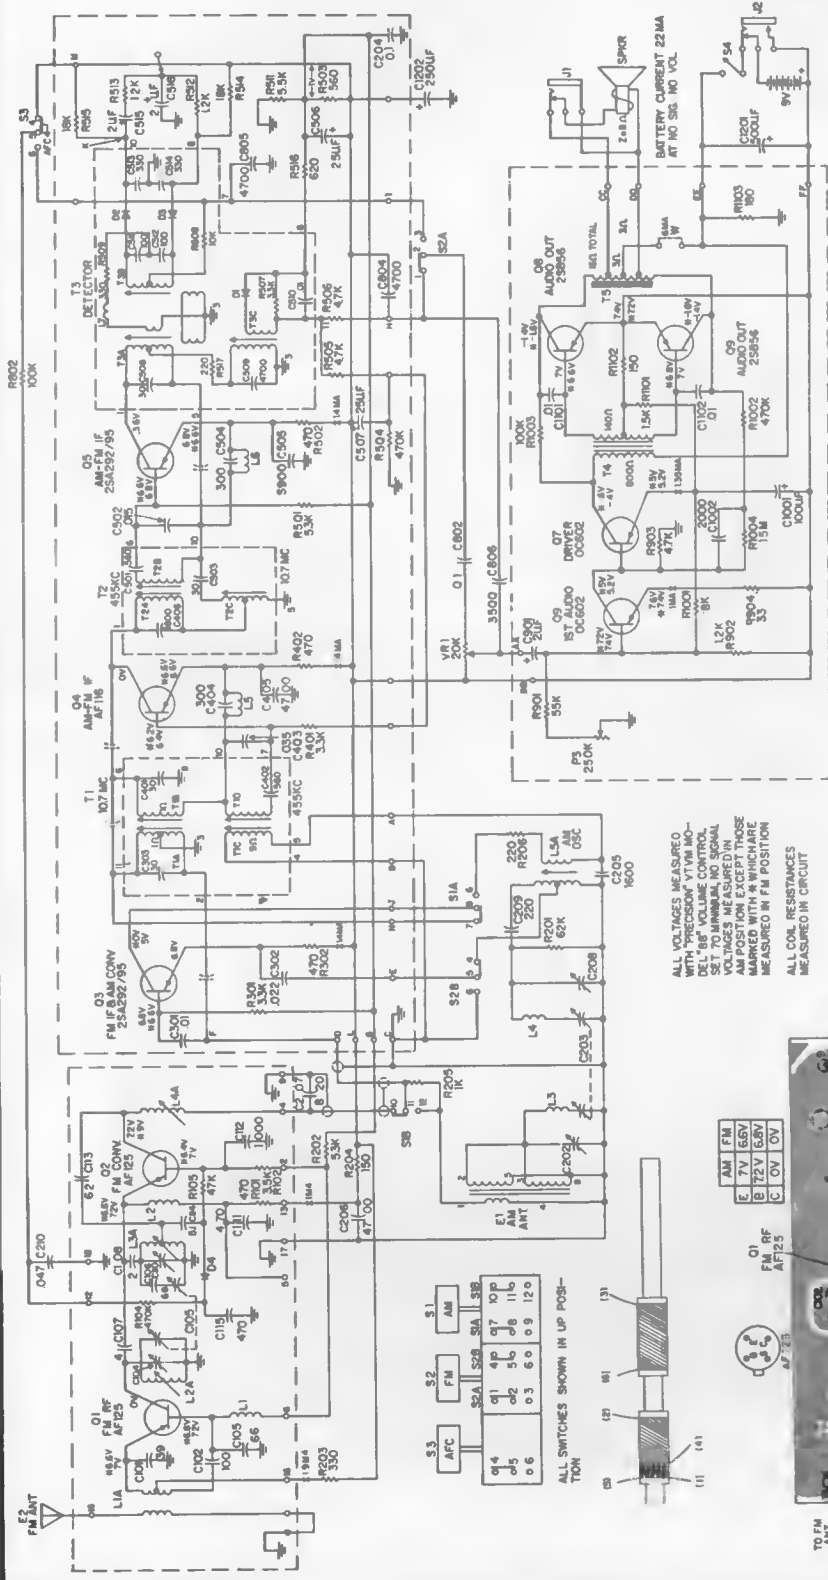


PHILCO

AM-FM TRANSISTOR PORTABLE MODEL NT-913



(Continued on the next page at right)

CABINET REMOVAL FOR SERVICING


1. Remove two screws from bottom of cabinet.
2. Loosen two screws located under handle (turn CCW five turns maximum). Do not remove screws.
3. Lay radio on its back; lift front frame with chassis from cabinet.
4. Remove nut holding power jack in cabinet.
5. FM antenna lead and battery leads must be unsoldered to detach cabinet completely.

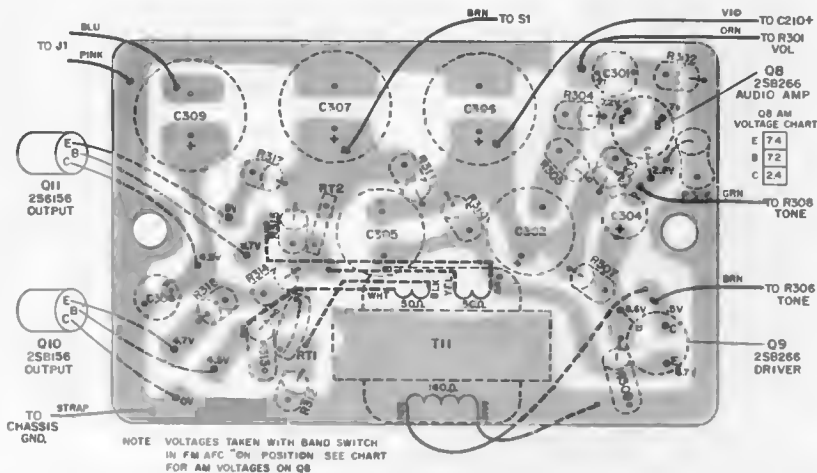

Bottom View - Audio Perma-Circuit Panel
Top Components Layout

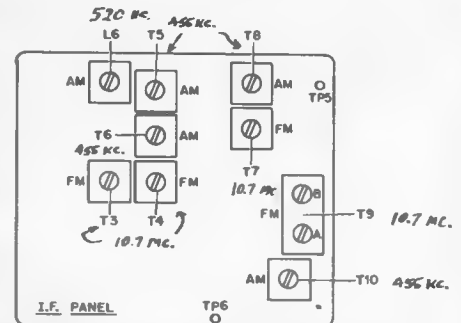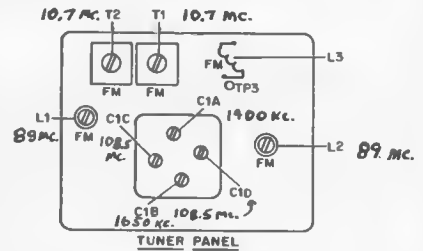


FM Alignment Curve and Alignment Points

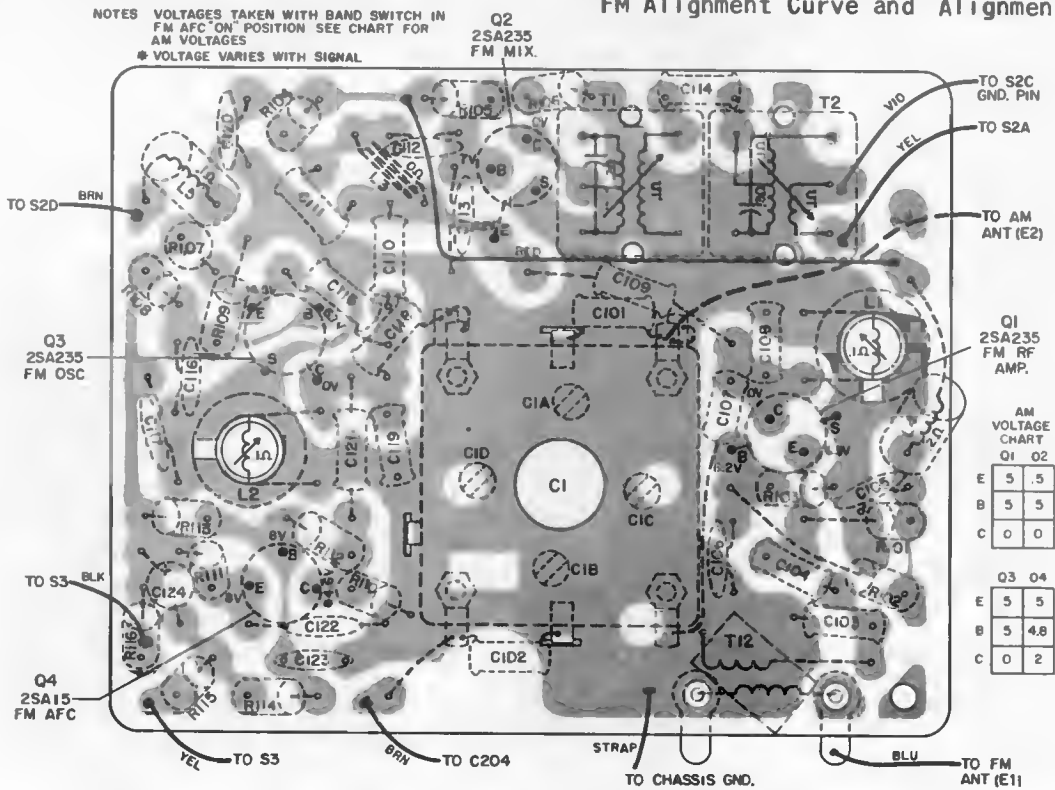


Bottom View - Tuner Perma-Circuit Panel Top Components Layout

PHILCO Model NT-913, Continued from page at left

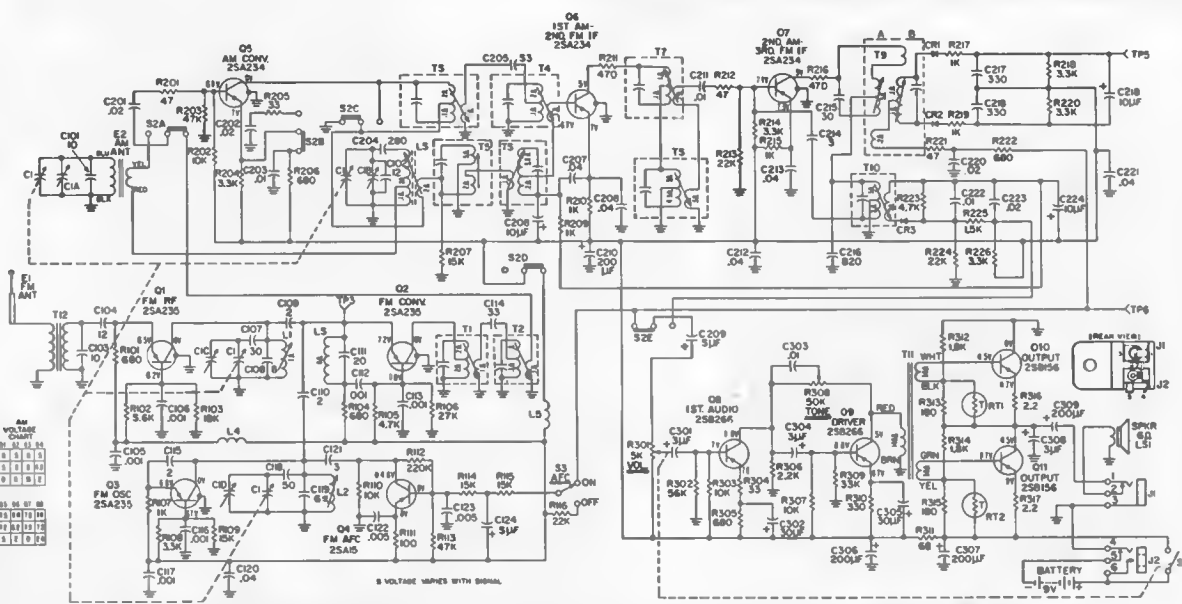

- NOTES
1. ALL CAPACITANCE VALUES OF 10 AND ABOVE ARE PF. ALL VALUES LESS THAN 10 ARE IN MFD UNLESS OTHERWISE INDICATED.
 2. ALL VOLTAGES AND RESISTANCES MEASURED WITH "PRECISION MODEL 80 VTM"; AND BAND SWITCH IN FM AFC "ON" POSITION; AS SHOWN, RESISTANCES MEASURED IN CIRCUIT.
 3. BATTERY CURRENT FOR FM 25MA AM 18MA.
 4. VOLTAGE AND CURRENT READINGS MEASURED WITH VOLUME AT MINIMUM AND NO SIGNAL.




AM VOLTAGE CHART

	Q5	Q6	Q7
E	7.5	8.4	T5
B	7.3	8.2	7.3
C	0	2	.3

Q6
2SA234
1ST. AM-
2ND. FM LF.

Q7
2SA234
2ND. AM-
3RD. FM LF.

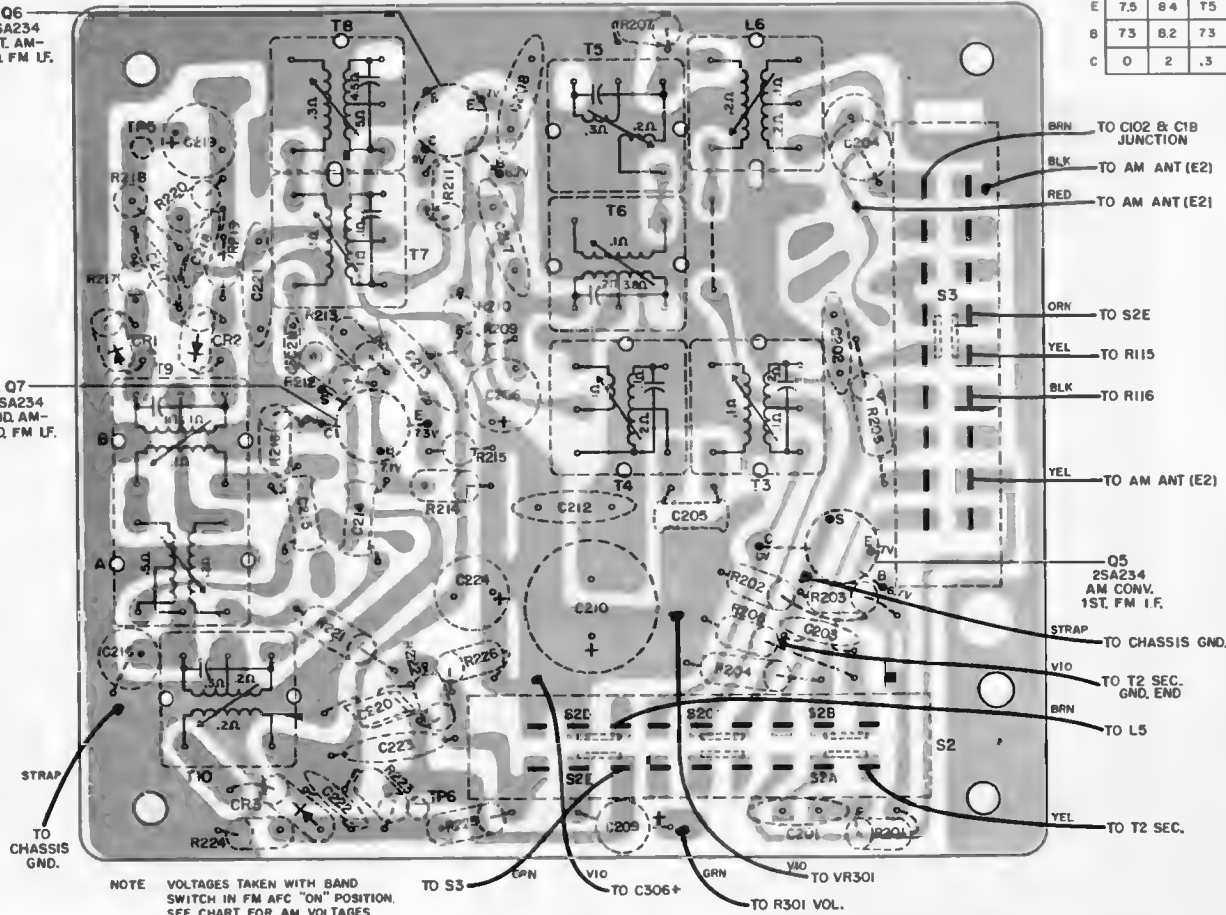


NOTE VOLTAGES TAKEN WITH BAND SWITCH IN FM AFC "ON" POSITION. SEE CHART FOR AM VOLTAGES

Bottom View - IF Perma-Circuit Panel Top Components Layout

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

PHILCO Model NT-913, Continued from page at left

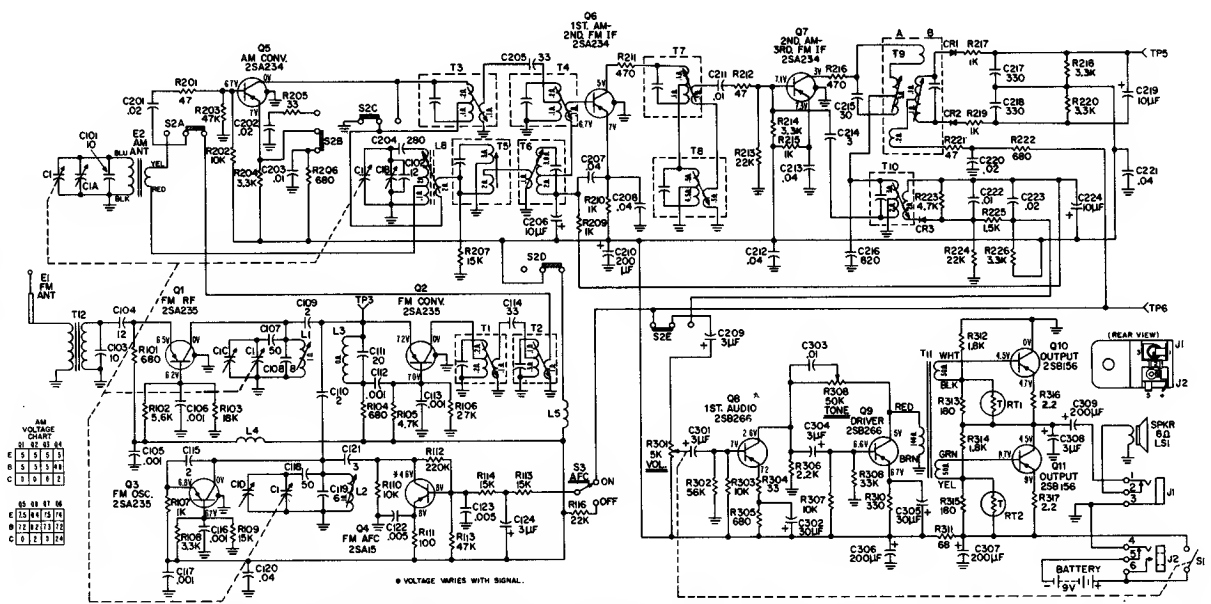

AM VOLTAGE CHART

H	31	31	31
E	5	5	5
B	1	1	1
C	1	1	1

AS SHOWN IN

E	13	14	14
B	12	12	12
C	1	1	1

NOTES: 1. ALL CAPACITANCE VALUES OF 10 AND ABOVE ARE PF. ALL VALUES LESS THAN 10 ARE IN MFDS UNLESS OTHERWISE INDICATED.
 2. ALL VOLTAGES AND RESISTANCES MEASURED WITH "PRECISION MODEL 66 VTM"; AND BAND SWITCH IN FM AFC "ON" POSITION AS SHOWN. RESISTANCES MEASURED IN CIRCUIT.
 3. BATTERY CURRENT FOR FM 25MA, AM 18MA.
 4. VOLTAGE AND CURRENT READINGS MEASURED WITH VOLUME AT MINIMUM AND NO SIGNAL.

TRANSISTOR BASINGS - BOTTOM VIEWS


28A15	28B156	28B156	28A334	28A235
1	2	3	1	2

AM VOLTAGE CHART

Q5	Q6	Q7	
E	7.5	8.4	7.5
B	7.3	B.2	7.3
C	0	.2	.3

Q6
2SA234
1ST. AM-
2ND. FM I.F.

Q7
2SA234
2ND. AM-
3RD. FM I.F.

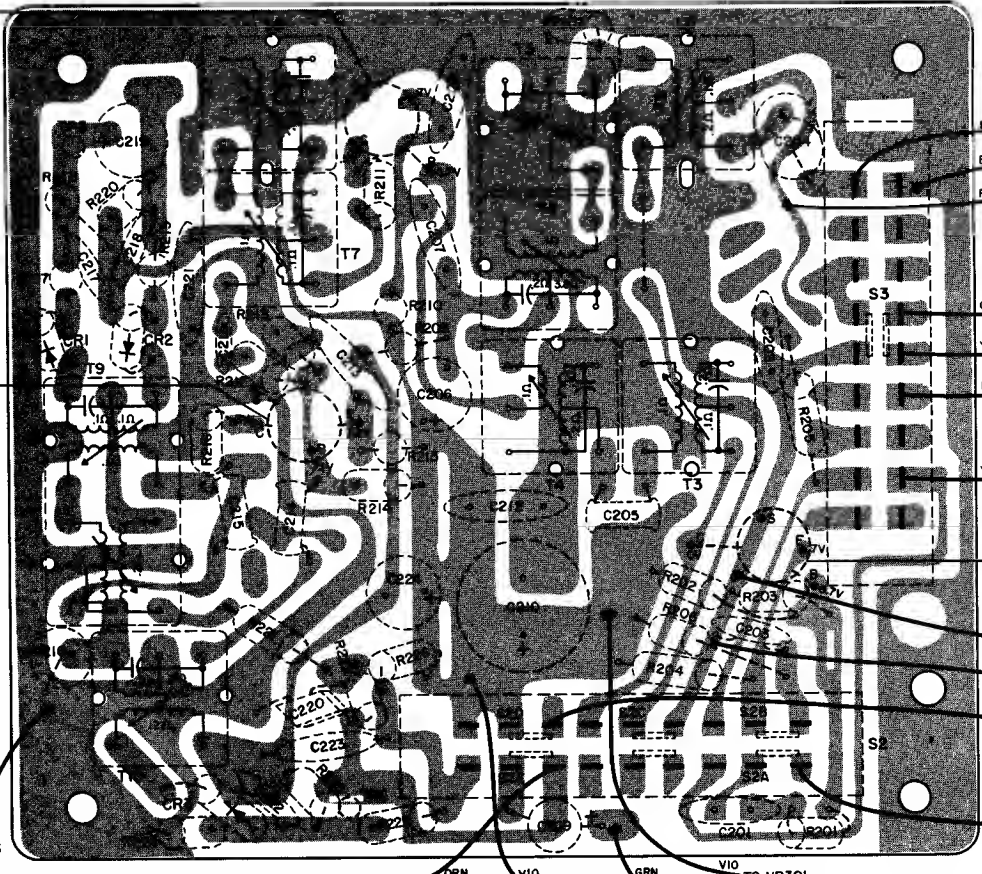


NOTE: VOLTAGES TAKEN WITH BAND SWITCH IN FM AFC "ON" POSITION. SEE CHART FOR AM VOLTAGES.

Bottom View - IF Perma-Circuit Panel Top Components Layout

PHILCO MODEL NT-1004

(Continued on next page)

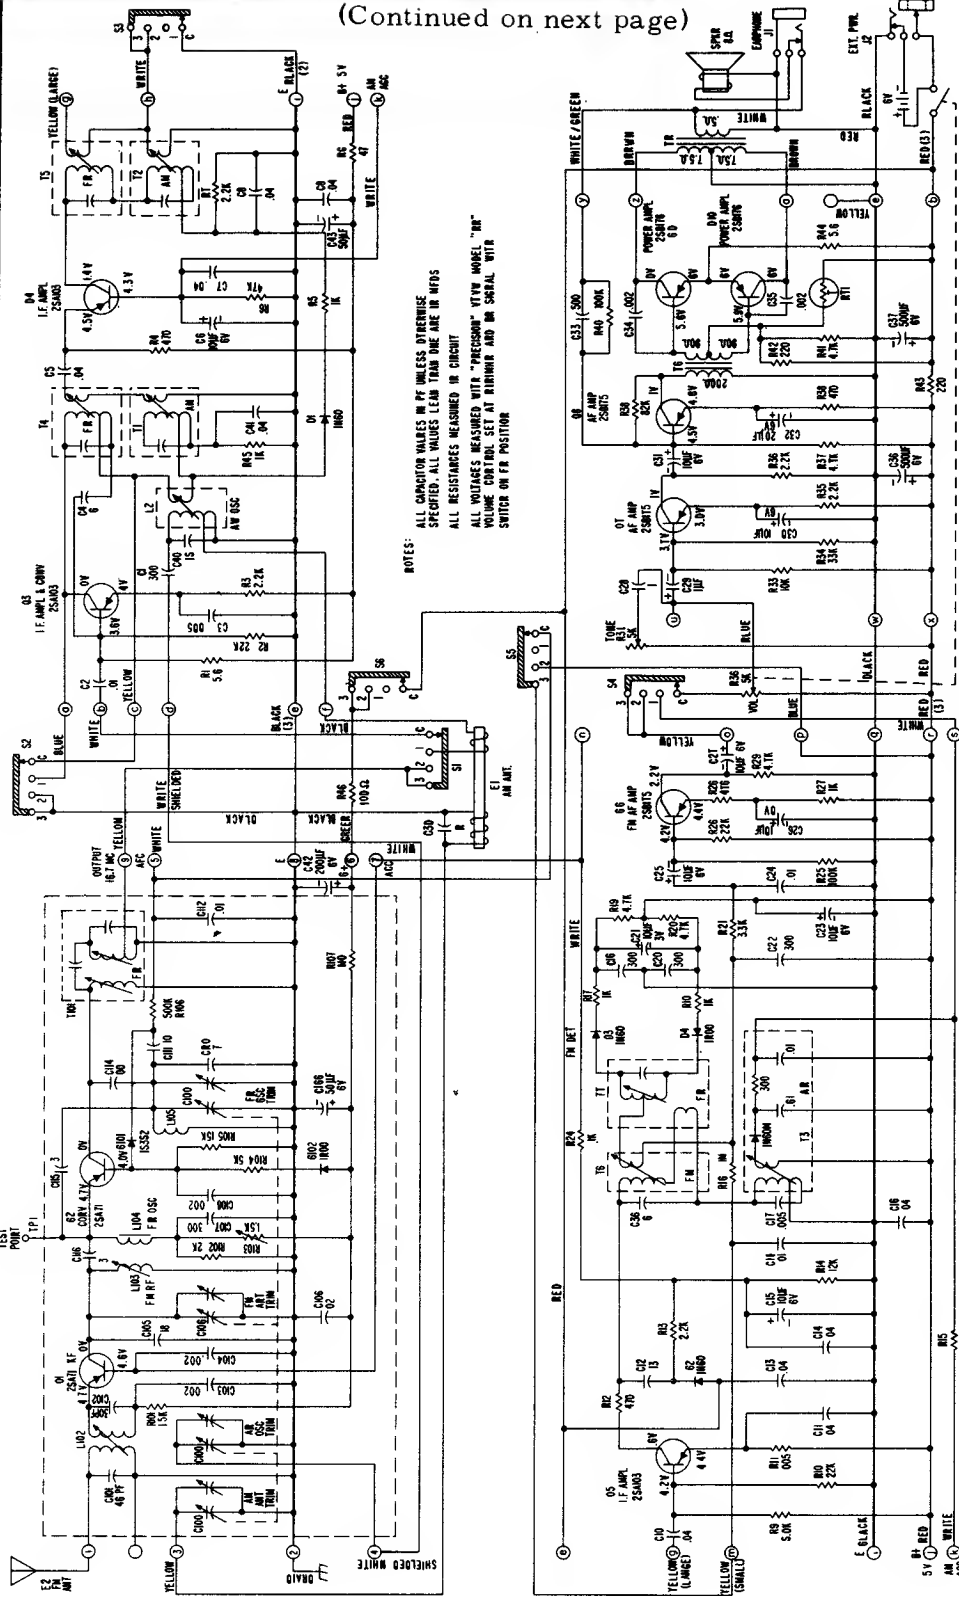

NOTES:
 ALL CAPACITOR VALUES IN PF UNLESS OTHERWISE SPECIFIED. ALL VALUES LEAN THAN ARE IN MTS
 ALL RESISTANCE MEASURED IN CIRCUIT
 ALL VOLTAGES MEASURED WITH "PRECISION" VTVM MODEL "M" VOLUME CONTROL SET AT MINIMUM AND IN SERIAL WITH SWITCH ON PER POSITION

AM-FM TRANSISTOR PORTABLE—MODEL NT-1004

Chassis Removal

1. Remove Battery Sleeve with Batteries.
2. Remove 4 Screws located at each corner of chassis.
3. Remove Knobs and pull FM antenna out of cabinet and fold down.
4. Lift chassis straight up out of cabinet, now bottom sides of Perma-Circuit Panels are accessible.

Tuner Removal


1. Remove chassis from cabinet.
2. Remove Dial Cord, Tuning Sleeve and Tuning Gear Assy.
3. Unsolder all leads including grounding lug to chassis.
4. Remove three screws holding tuner to chassis frame.

Dial Cord - Model NT1004

PHILCO

**MODELS M-1001, M-1620, M-1662, M-1663,
M-1664, & M-1700 AMPLIFIER & TUNER**

Also Model M-1701 is like M-1663

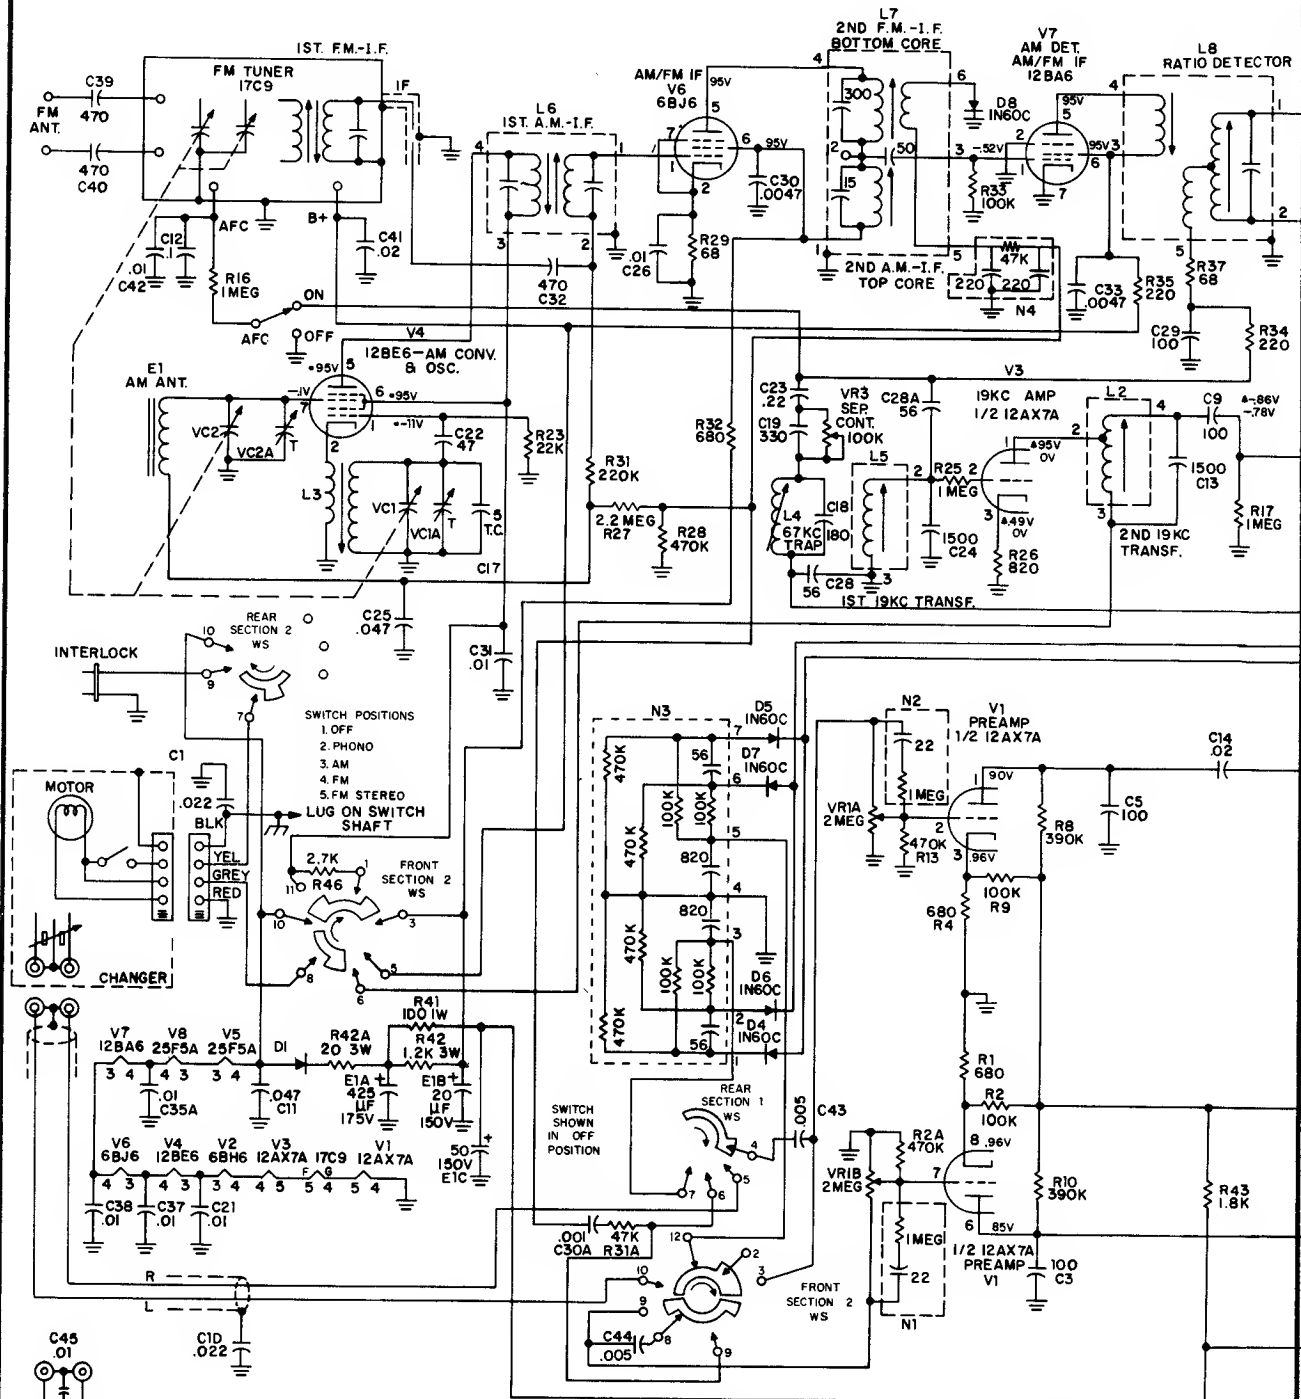

**AMPLIFIER AND TUNER PANEL REMOVAL
MODELS M-1001, M-1620,
M-1662, M-1663, M-1664**







(USED ON MODELS
M-1620 & M-1700.
CID OMITTED ON
THESE MODELS)

1. Unsolder all wires holding perma-circuit panel in chassis.

2. Remove two nuts securing function switch and loudness control front dial panel.
3. Remove three screws securing rear chassis piece and remove piece.
4. Remove five screws securing panel to chassis.
5. Pull panel back and away from chassis.

PHILCO

MODELS M-1001, M-1620,
M-1662, M-1663, M-1664, &
M-1700 AMPLIFIER & TUNER

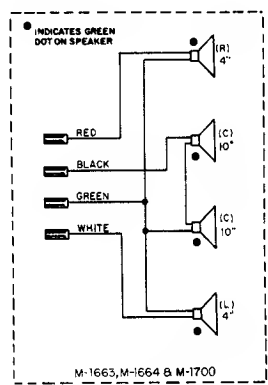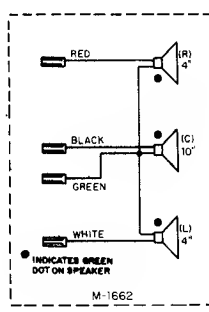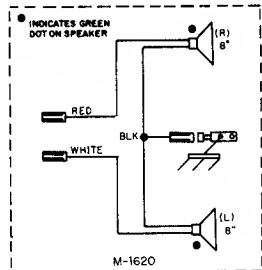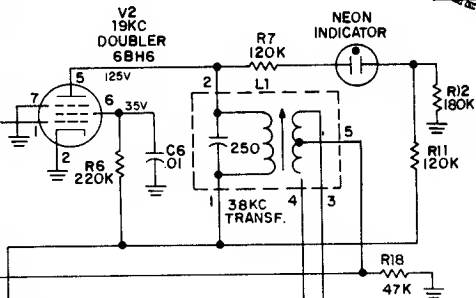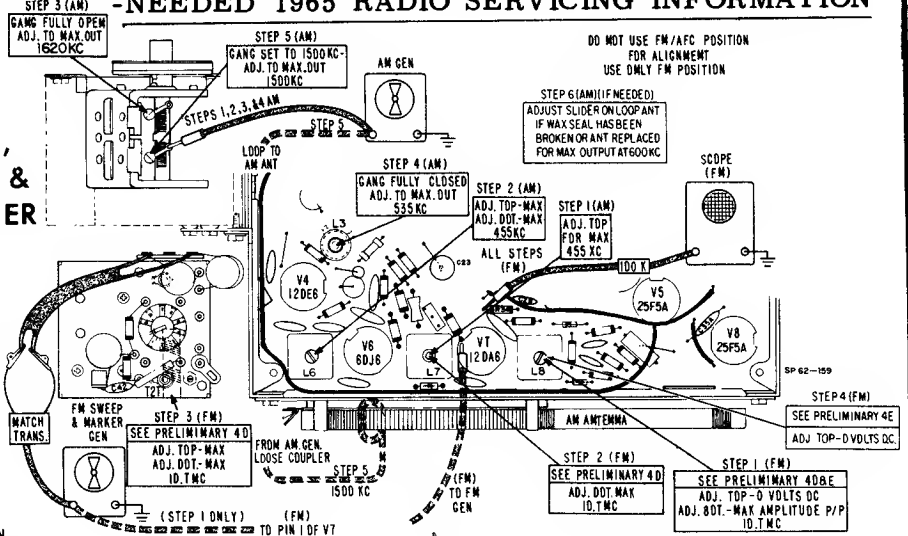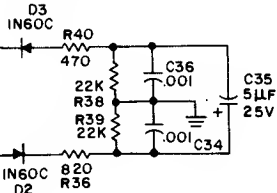

Alignment Procedure Chart

PRELIMINARY ALIGNMENT INFORMATION

1. Connect amplifier through isolation transformer to eliminate dangerous shock hazard.
2. Allow receiver and test equipment 15 minutes to warm up and stabilize.
3. For AM Alignment -
 - A. Connect VTVM across one external speaker jack.
 - B. Use 30% modulation on generator for AM alignment.
 - C. Proceed with alignment steps as illustrated in alignment chart.
4. For FM Alignment -
 - A. Connect FM generator, through a 72 ohm to 300 ohm matching network, to antenna terminals.
 - B. Use ±120 KC sweep deviation for FM alignment.
 - C. Keep generator output as low as possible throughout FM alignment procedure.
 - D. Adjust top and bottom core of T2T, bottom core of L7 and bottom core of L8 for a symmetrical maximum amplitude "S" curve with 10.7 mc marker in the middle. Curve must be obtained in T2T with tuning slugs nearest to end of coil form.
 - E. Add VTVM across scope connections to adjust only the top of L8.
 - F. Proceed with alignment steps as illustrated in alignment chart.


ALL VOLTAGES TAKEN WITH "PRECISION" VTVM MODEL '88' ALL CONTROLS SET AT MINIMUM, SELECTOR SWITCH SET TO PHONO POSITION UNLESS OTHERWISE NOTED.
*VOLTAGES TAKEN IN AM POSITION.
∆VOLTAGES TAKEN IN FM STEREO POSITION.

Circuit for M-1001 differs in some details.


(Continued on page 120)

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

PHILCO Models M-1001, M-1620, M-1662, M-1663, M-1664, M-1700, Continued

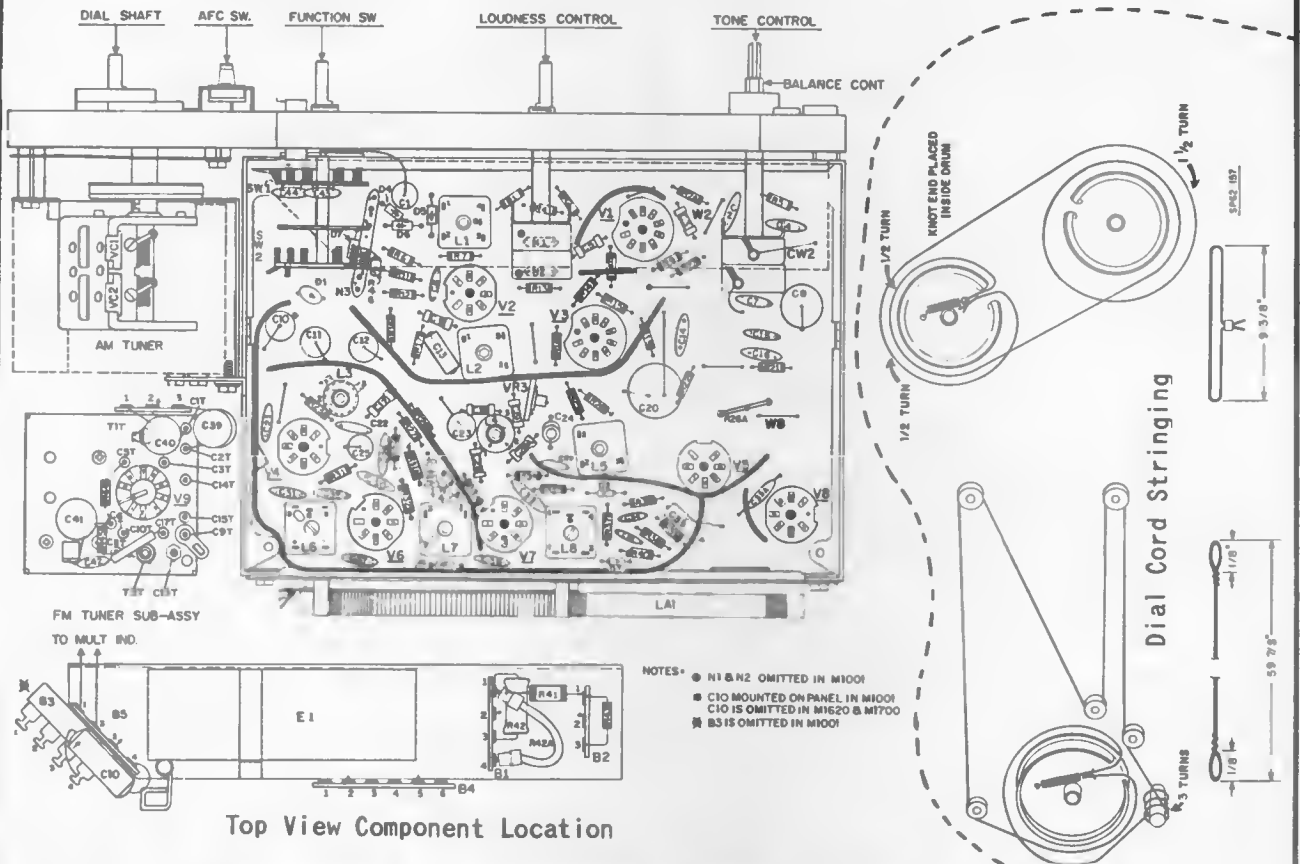


Top View Component Location

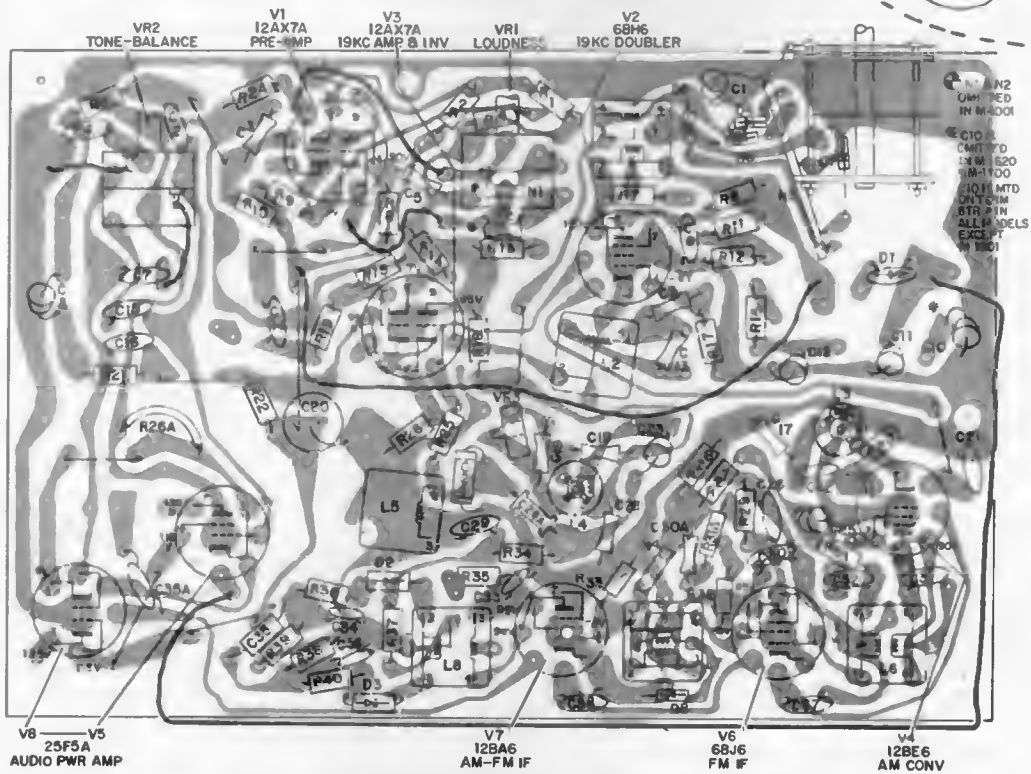

Bottom Perma-Circuit View Parts Location

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


PHILCO Models M-1666, M-1669, M-1680, M-1688, M-1689, M-1704
(Circuit diagram and other information on pages 122-123)

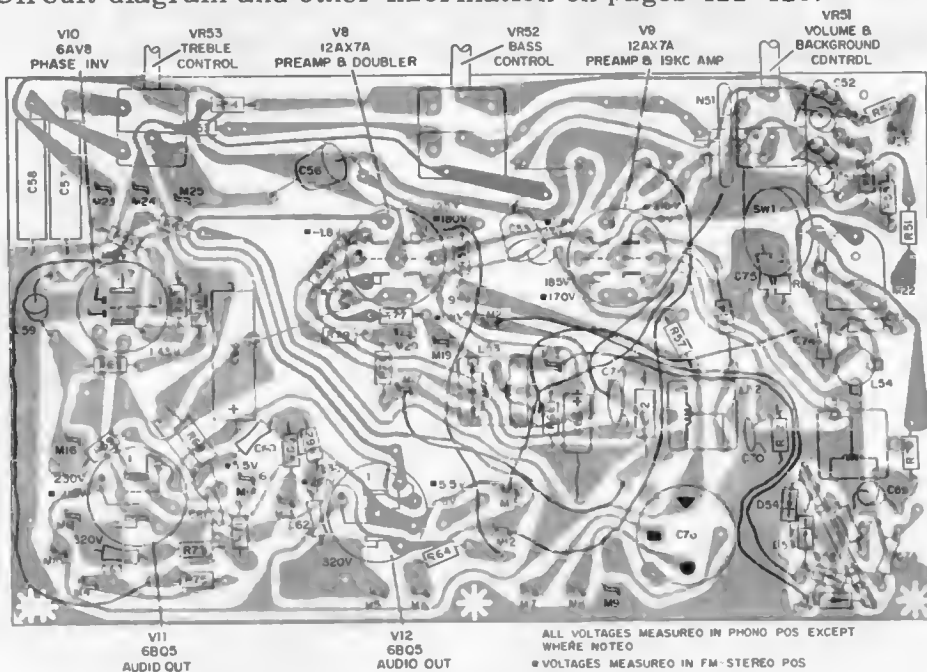

Bottom Perma-Circuit View, Parts Location

PRELIMINARY ALIGNMENT INFORMATION

1. Connect amplifier through isolation transformer to eliminate dangerous shock hazard.
2. Allow receiver and test equipment 15 minutes to warm up and stabilize.
3. For AM Alignment -
 - A. Connect VTVM across center output transformer.
 - B. Use 30% modulation on generator for AM alignment.
 - C. Proceed with alignment steps as illustrated in alignment chart.
4. For FM Alignment -
 - A. Connect FM generator, through a 72 ohm to 300 ohm matching network, to antenna terminals.
 - B. Alignment is to be made in FM position. DO NOT USE FM/AFC position.
 - C. Use ± 75 kc sweep deviation for FM alignment.
 - D. Keep generator output as low as possible throughout FM alignment procedure.

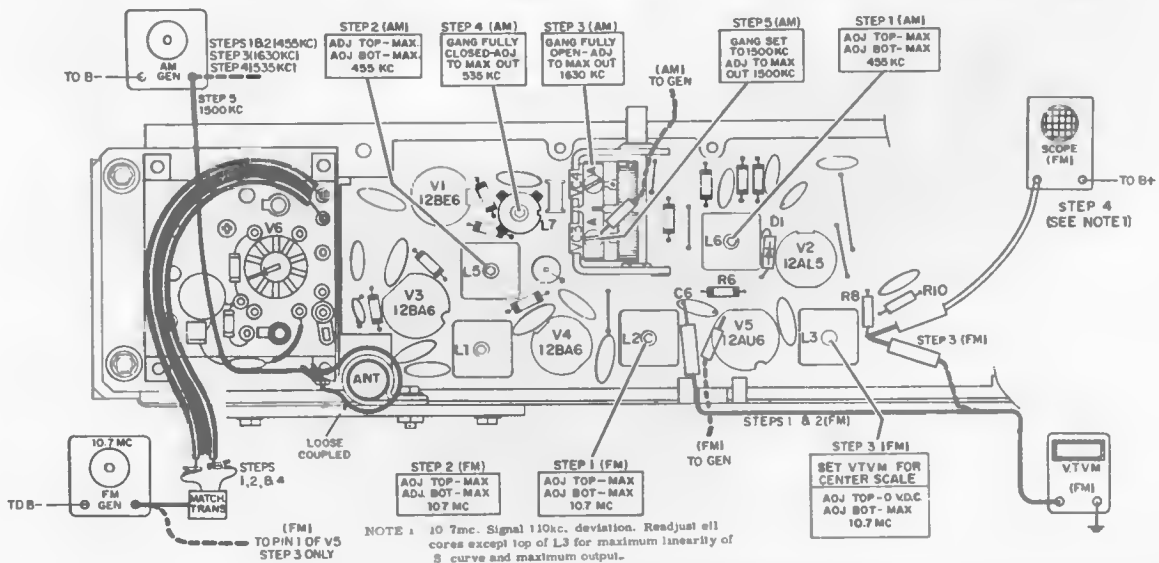


Alignment Procedure Chart AM-FM Tuner

PHILCO

MODELS M-1666, M-1669, M-1680,
M-1688, M-1689, & M-1704
AMPLIFIER & TUNER

(See page 121 for other data)

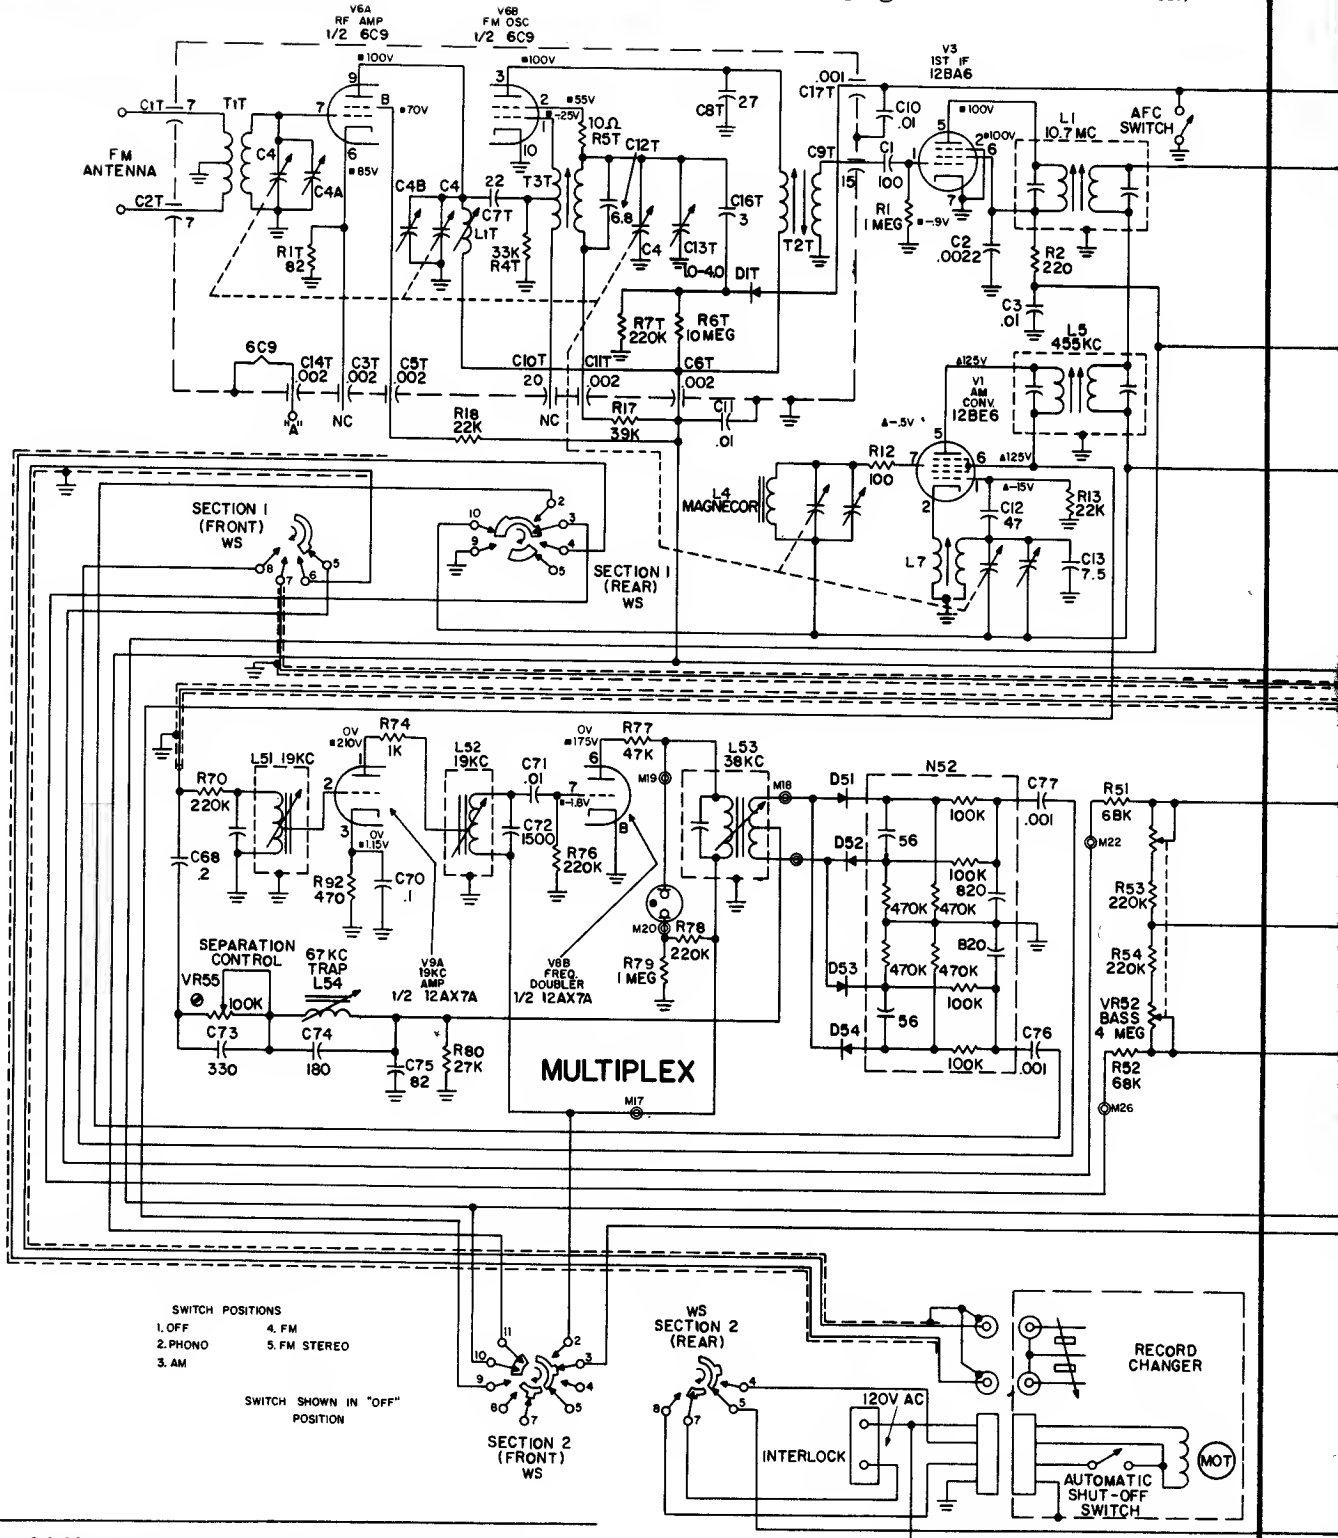


Amplifier and Tuner Schematic Diagram

PHILCO

MODELS M-1666, M-1669, M-1680,
M-1688, M-1689, M-1704, & M-1741
AMPLIFIER & TUNER

(Continued)

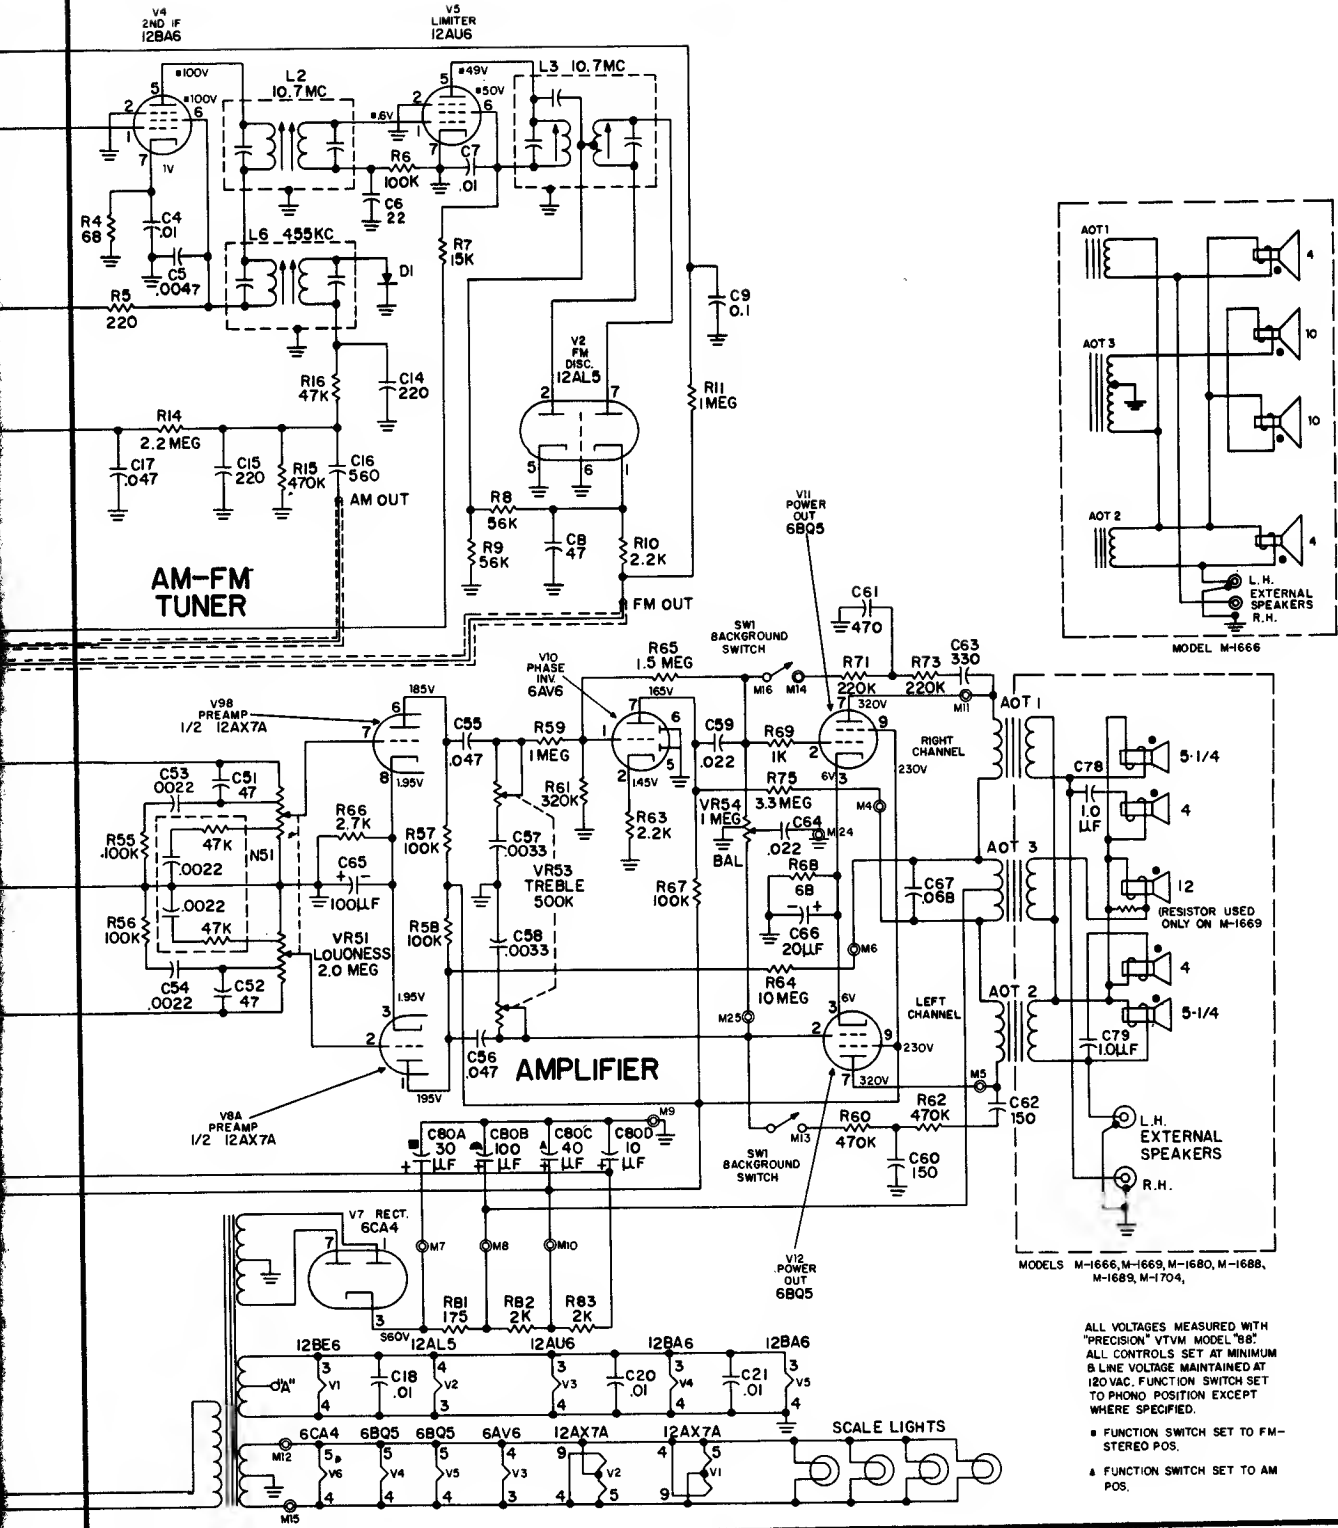


ALL VOLTAGES MEASURED WITH "PRECISION" VTVM MODEL "88". ALL CONTROLS SET AT MINIMUM & LINE VOLTAGE MAINTAINED AT 120 VAC. FUNCTION SWITCH SET TO PHONO POSITION EXCEPT WHERE SPECIFIED.





- FUNCTION SWITCH SET TO FM-STEREO POS.
- FUNCTION SWITCH SET TO AM POS.

PHILCO

PORTABLE PHONO MODEL N1508

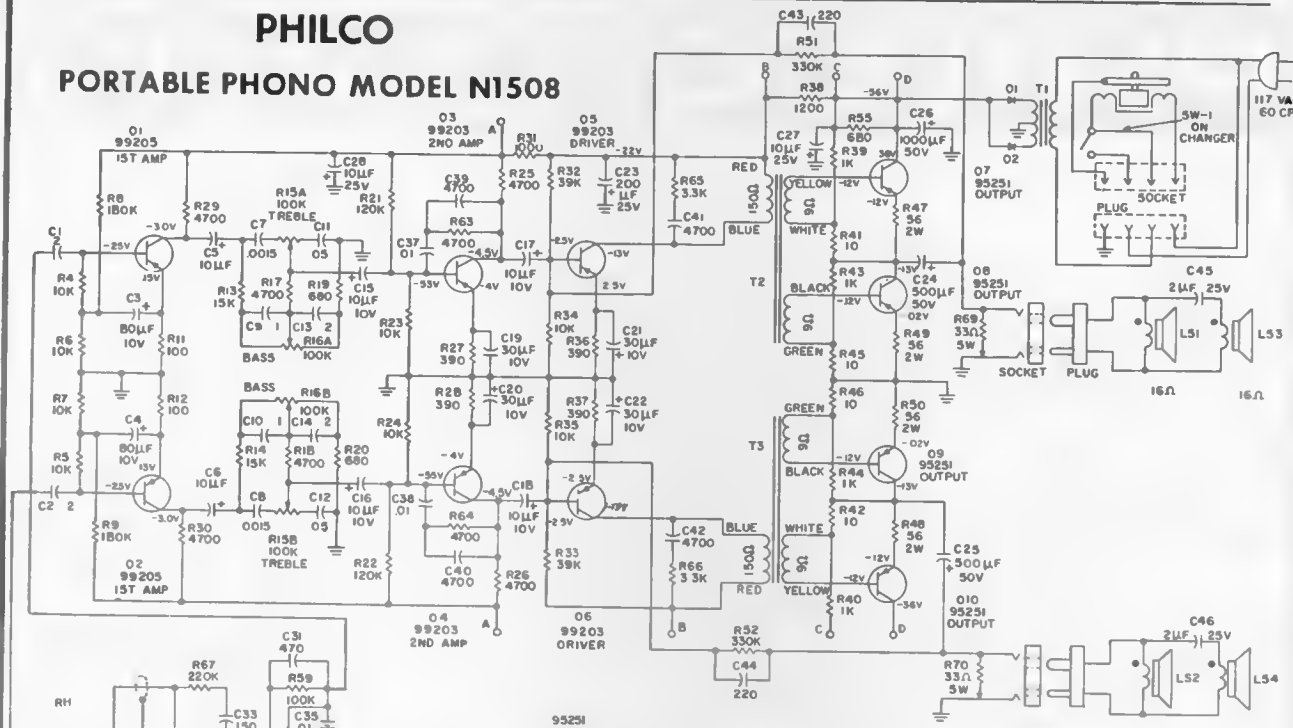

NOTES
 VOLTAGES MEASURED WITH VTVM "PRECISION" MODEL "8B" TO GROUND B+
 ALL CAPACITANCE VALUES OF 10 AND ABOVE ARE IN PF AND ALL
 VALUES BELOW 10 ARE IN UF UNLESS OTHERWISE INDICATED
 ALL RESISTANCES MEASURED IN-CIRCUIT WITH VTVM

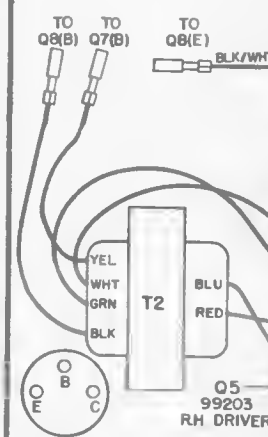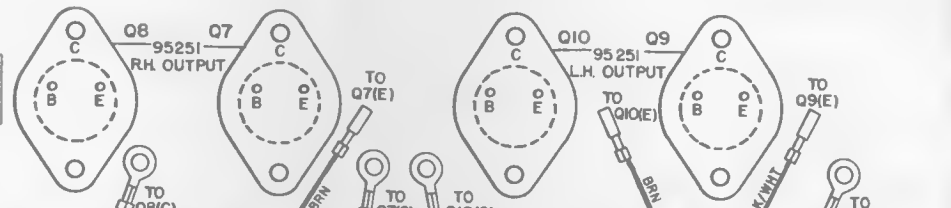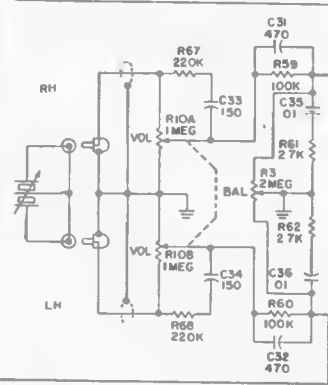

BOTTOM VIEW
 99203
 99203
 99205
 Q5 99203 RH DRIVER
 Q3 99203 RH 2ND AMP
 Q1 99205 RH 1ST AMP

TRANSISTOR VOLTAGE CHART

	C	B	E
Q1	-3V	-25V	-15V
Q2	-3V	-25V	-15V
Q3	-4.5V	-55V	-4V
Q4	-4.5V	-55V	-4V
Q5	-13V	-2.5V	-2.5V
Q6	-13V	-2.5V	-2.5V
Q7	-36V	-12V	-12V
Q8	-13V	-12V	-02V
Q9	-13V	-12V	-02V
Q10	-36V	-12V	-12V



ALL VOLTAGES MEASURED FROM GROUND B+

R16 BASS R15 TREBLE 124 Bottom View Perma Circuit Panel-Top Component Layout

RCA VICTOR



Model VFE 01W

Chassis RS-188B

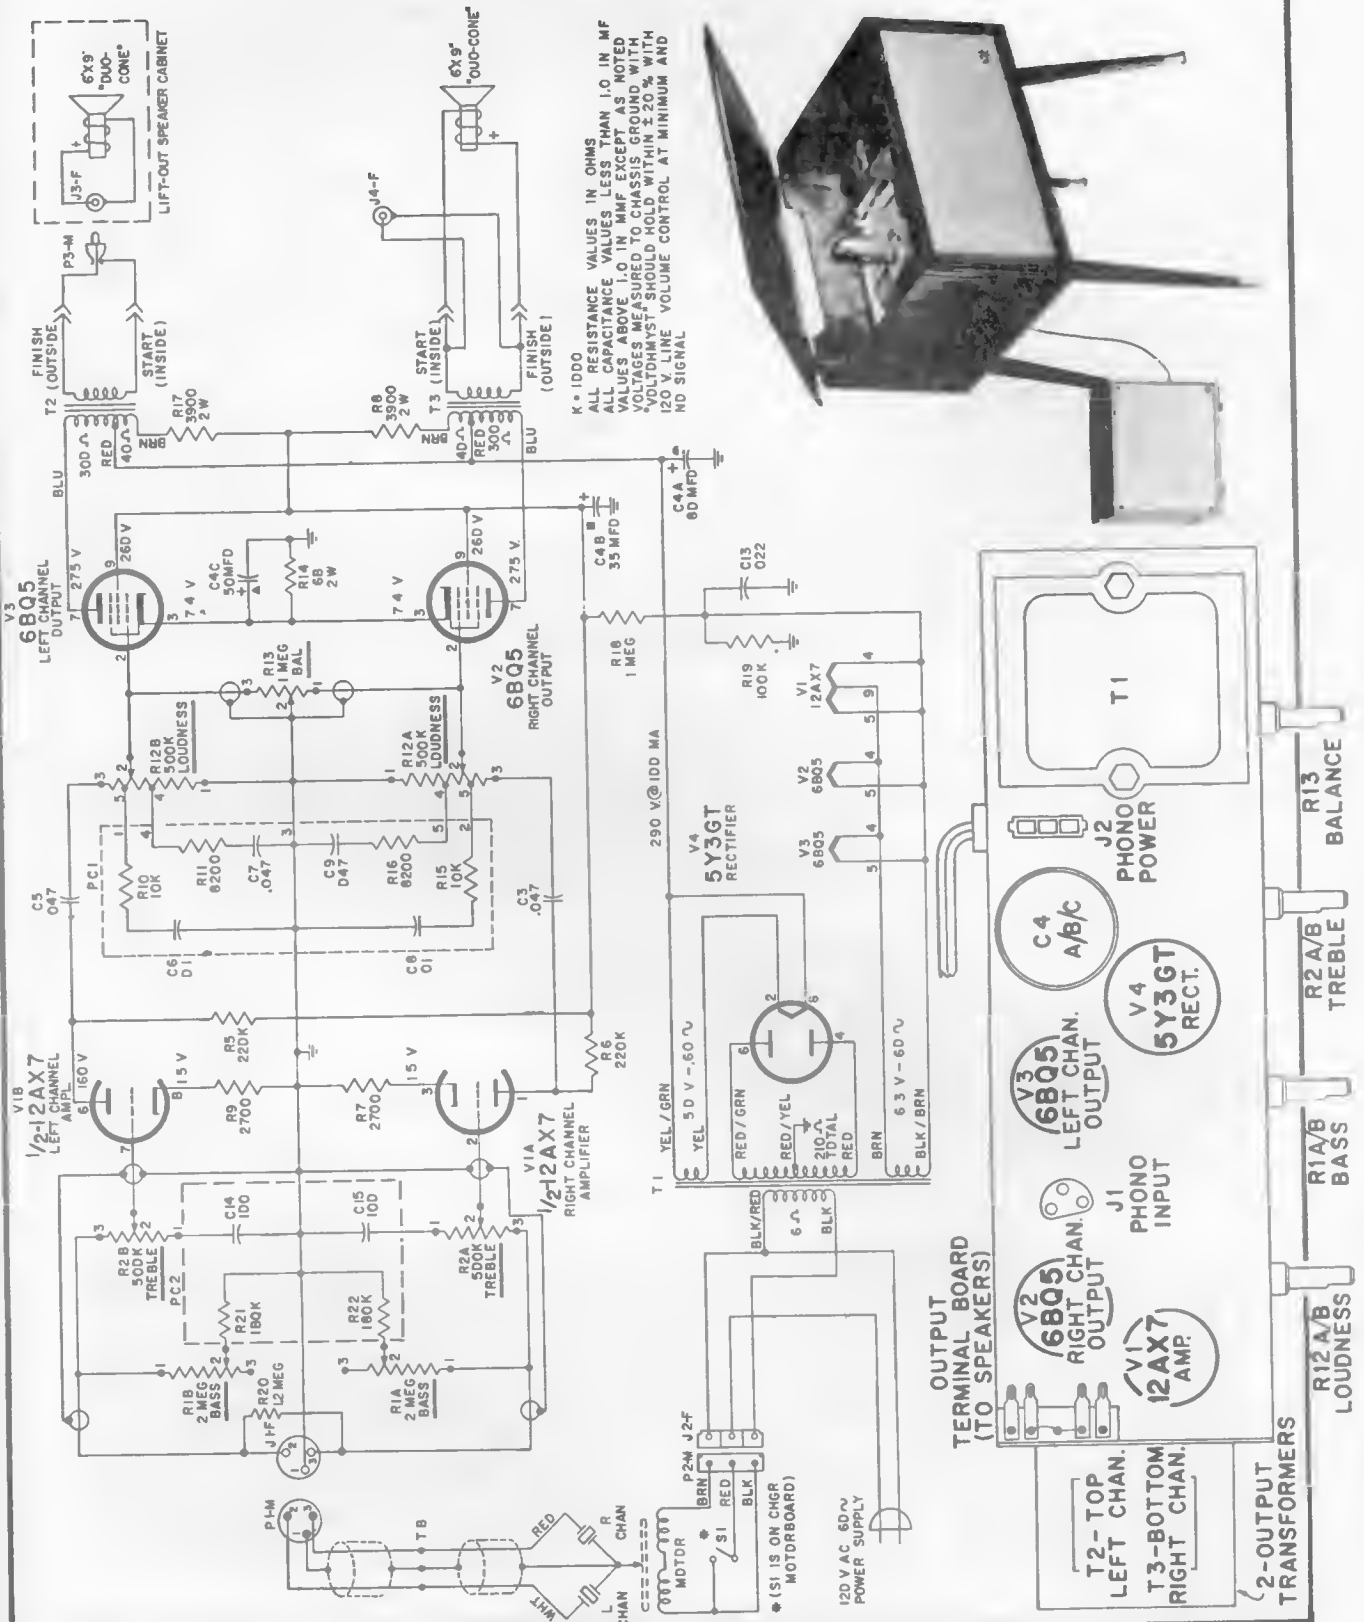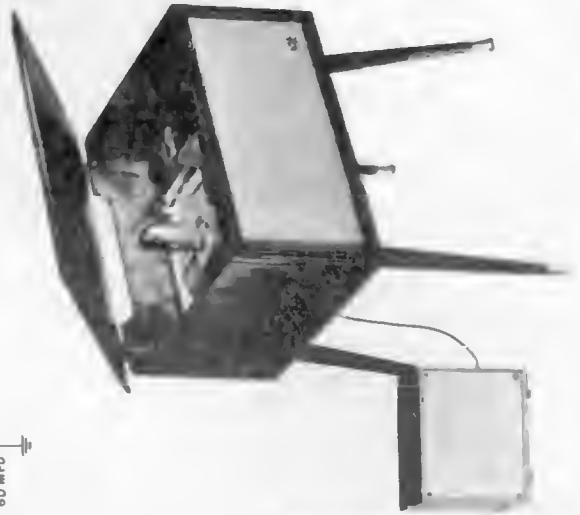


RCA VICTOR

Models RFA 11V, VX, RFA 15A, AX, V, VX, Z, ZX, use Chassis RC-1213A, AX
 Models RFD 11V, VX, use Chassis RC-1213J, JX
 Model RFD 15V uses Chassis RC-1213C or K
 Models RFD 19G, V, Z, use Chassis RC-1213D, L
 (Material below and on page at right)

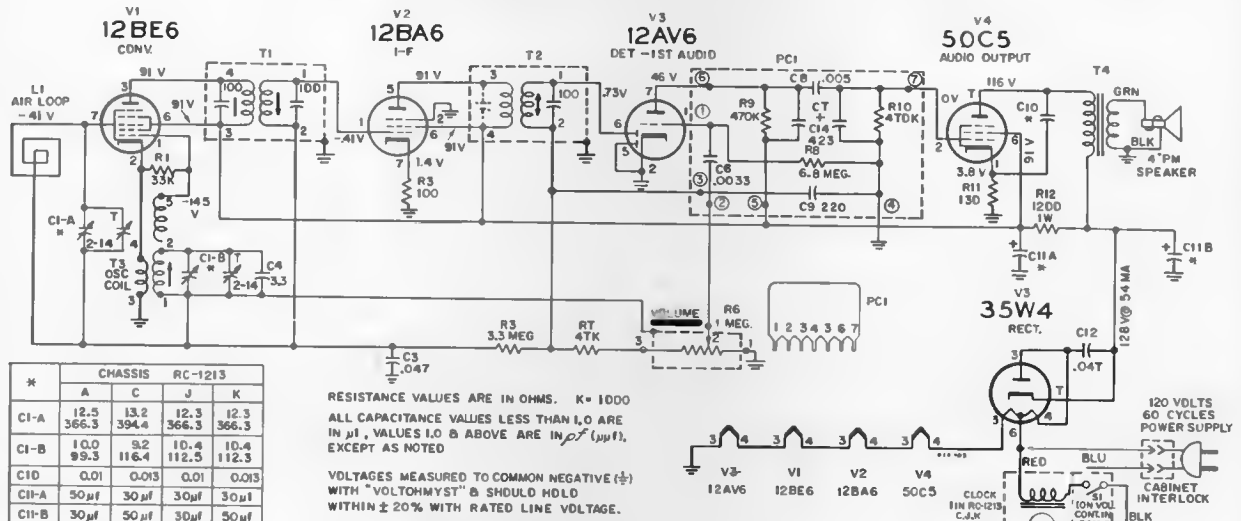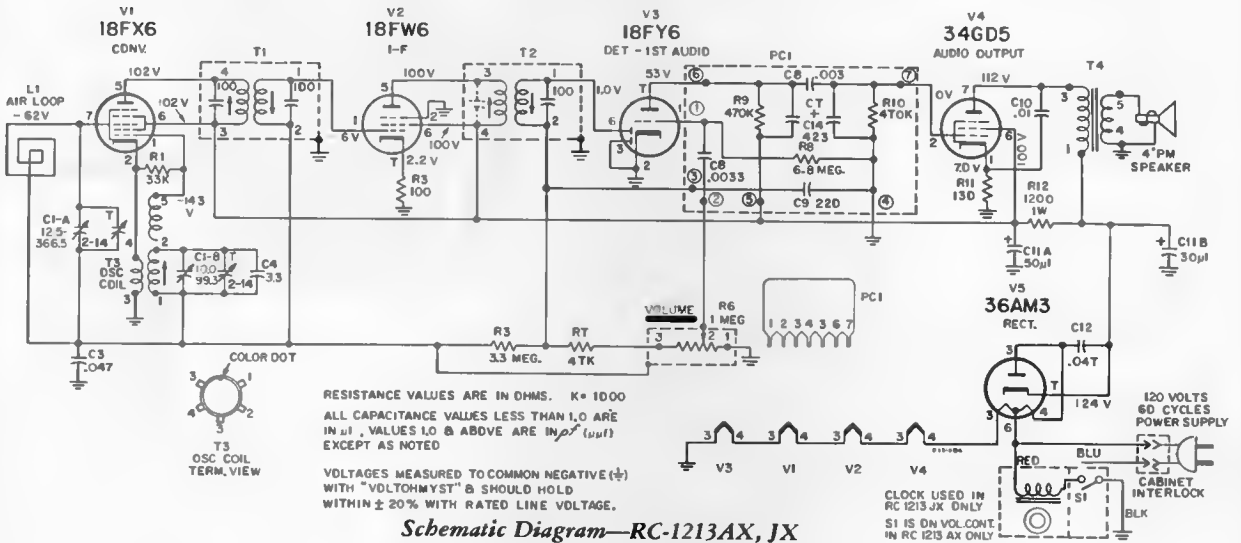

*	CHASSIS RC-1213			
	A	C	J	K
C1-A	12.5 366.3	13.2 394.4	12.3 366.3	12.3 366.3
C1-B	10.0 99.3	9.2 116.4	10.4 112.5	10.4 112.3
C1D	0.01	0.03	0.01	0.03
C11-A	50 μ F	30 μ F	30 μ F	30 μ F
C11-B	30 μ F	50 μ F	30 μ F	50 μ F

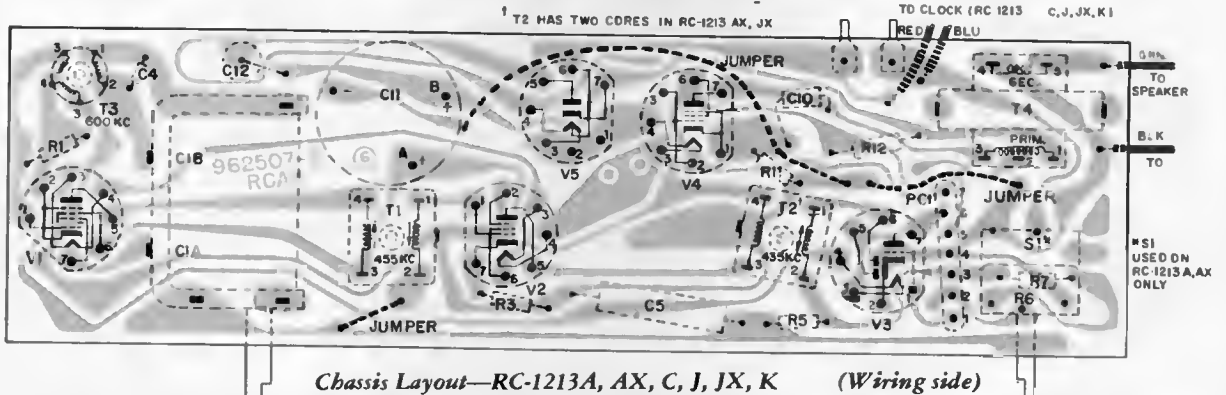

RCA VICTOR

(Continued from page adjacent at left)

Models RFA 11V, VX, RFA 15A, AX, V, VX, Z, ZX, all use Chassis RC-1213A, AX
 Models RFD 11V, VX, use Chassis RC-1213J, JX
 Model RFD 15V uses Chassis RC-1213C or K
 Models RFD 19G, V, Z, use Chassis RC-1213D, L

TUBE AND CHASSIS ACCESSIBILITY

1. DO NOT ATTEMPT TO REMOVE THE KNOBS. The tuning and volume control knobs are held captive to the cabinet by retainers on their shafts.
2. Remove the back cover by lifting the protrusions on the bottom of the back cover, out of the slots in the base of the cabinet.
3. Unsolder speaker leads if necessary. Avoid putting a strain on the speaker leads.
4. Remove two chassis retainers (screws or clips), one at the volume control and one on the left end mounting.
5. Grasp tuning capacitor and volume control, and pull chassis out of knobs and mounting slots.


To reassemble—reverse above procedure.

The "Security Sealed Circuitry" chassis used in these instruments are all basically similar; the differences, where they exist, are shown in the schematic diagrams, in the chassis layout diagrams and in the replacement parts list. 100 ma. type tubes are used in chassis RC-1213AX and JX, and 150 ma. type tubes in chassis RC-1213A, C, D, J, K and L. The "X" chassis are found in the "X" models.


ALIGNMENT PROCEDURE

Step	Connect high side of signal gen. to—	Set signal gen. to—	Turn radio dial to—	Adjust—for peak output
1	Pin #1 of V2 (12BA6 or 18FW6) through .01 mf copolator	455 kc (Modulated)	Quite point near 1600 kc	T2 (2nd I-F Irons.), top and bottom cores (See note)
2	Pin #7 of V1 (12BE6 or 18FX6) through .01 mf copolator			T1 (1st I-F Irons.), top and bottom cores
3	Repeat steps 1 and 2			
4	Short wire placed near antenna to radiote signal	1620 kc (Modulated)	Gang fully open	C1-B-T (osc. trimmer)
5		1400 kc (Modulated)	1400 kc	C1-A-T (Anl. trimmer)
6		600 kc (Modulated)	600 kc (rock gong)	T3 (osc. coil)
7	Repeat steps 3, 4 and 5			

NOTE: In chassis using the 150 ma. type tubes, T2 may have only one core which may be adjusted from either the top or bottom.

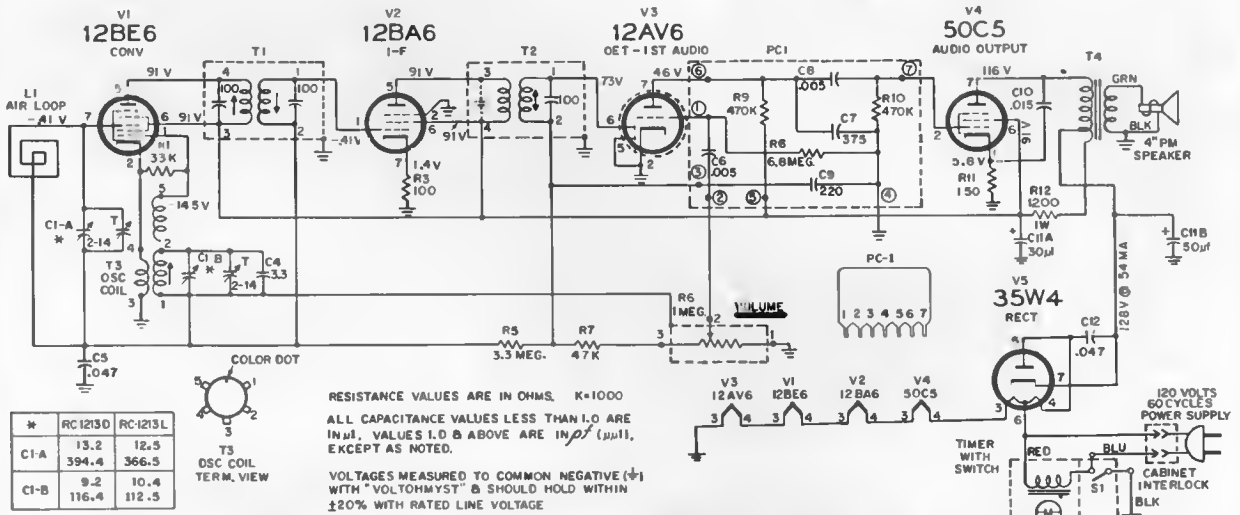

Schematic Diagram—RC-1213D, L

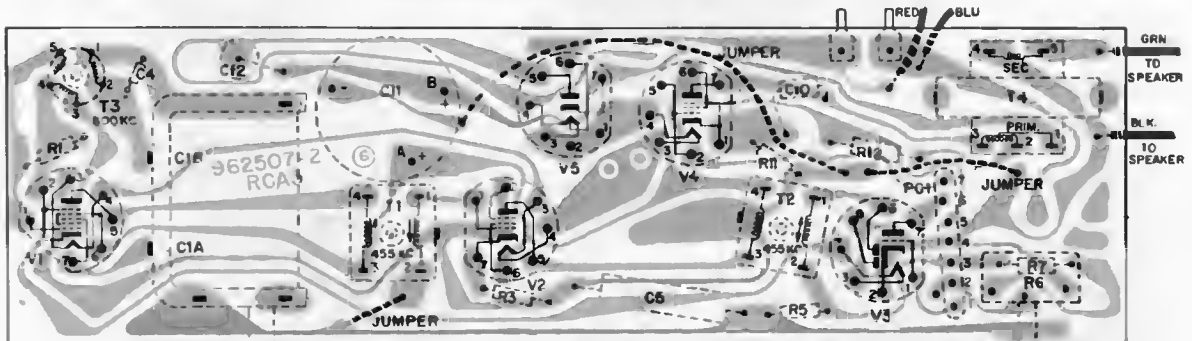





Chassis Layout—RC-1213D, L (Wiring Side)

RCA VICTOR


Models RFC 15E, V, RFC 19W, use Chassis RC-1210F, and Model RFS 15W use Chassis RC-1210E.

(Continued on the page at right)

FREQUENCIES	Tuning	IF
AM	535-1620 kc.	455 kc
FM	88-108 mc	10.7 mc

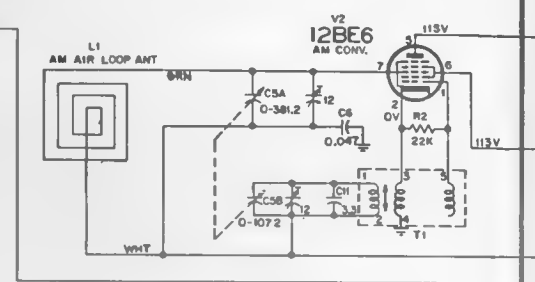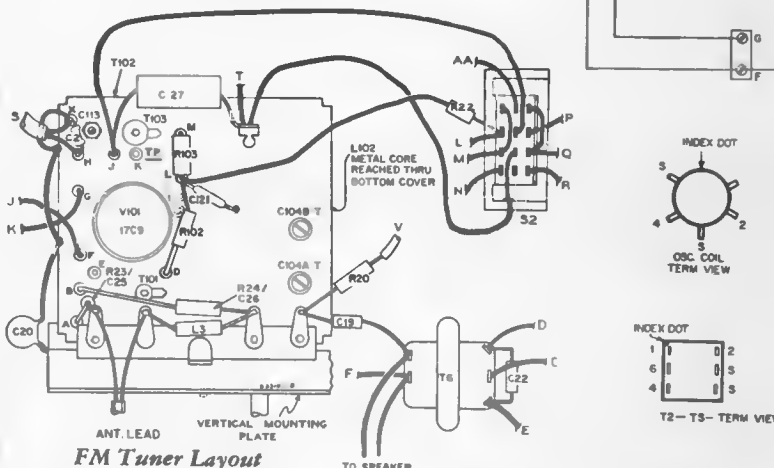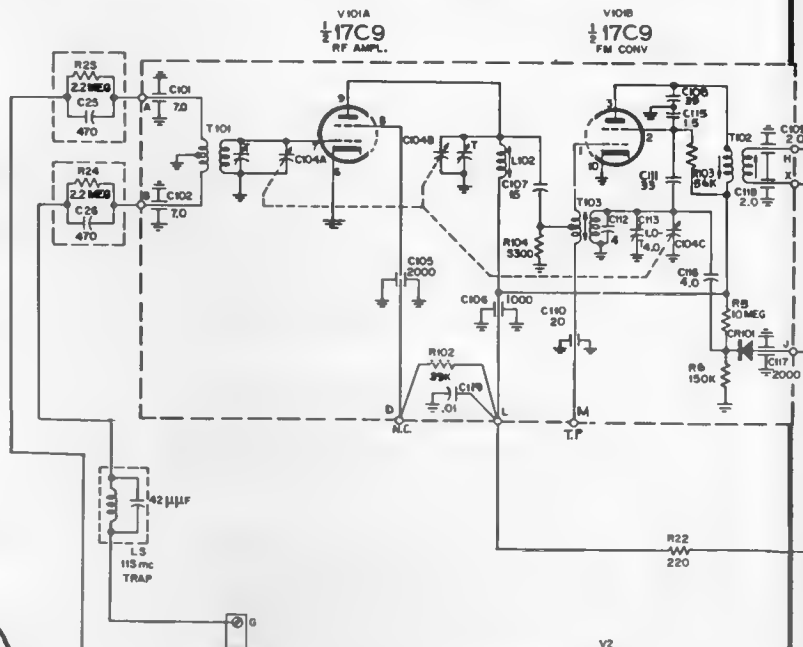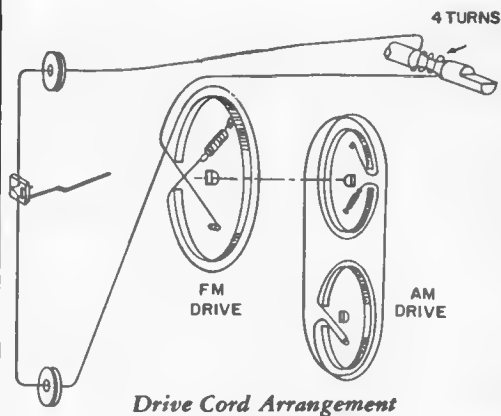


K=1000
 ALL RESISTANCE VALUES IN OHMS
 ALL CAPACITANCE VALUES LESS THAN 1.0 IN μF, VALUES ABOVE 1.0 IN μμF
 UNLESS OTHERWISE INDICATED
 VOLTAGES MEASURED TO COMMON NEG. (⊕) WITH "VOLTOMYST" SHOULD HOLD WITHIN ±20% WITH 120 VOLT INPUT.

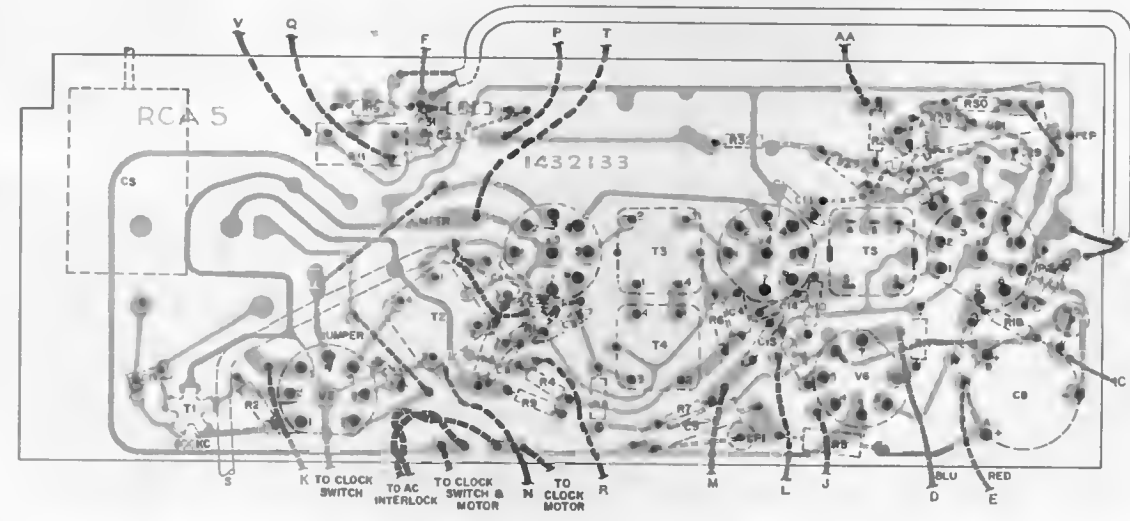

RCA VICTOR

Models RFC 15E, V, RFC 19W, use Chassis RC-1210F,
and Model RFS 15W use Chassis RC-1210E.



(Continued from page at left)

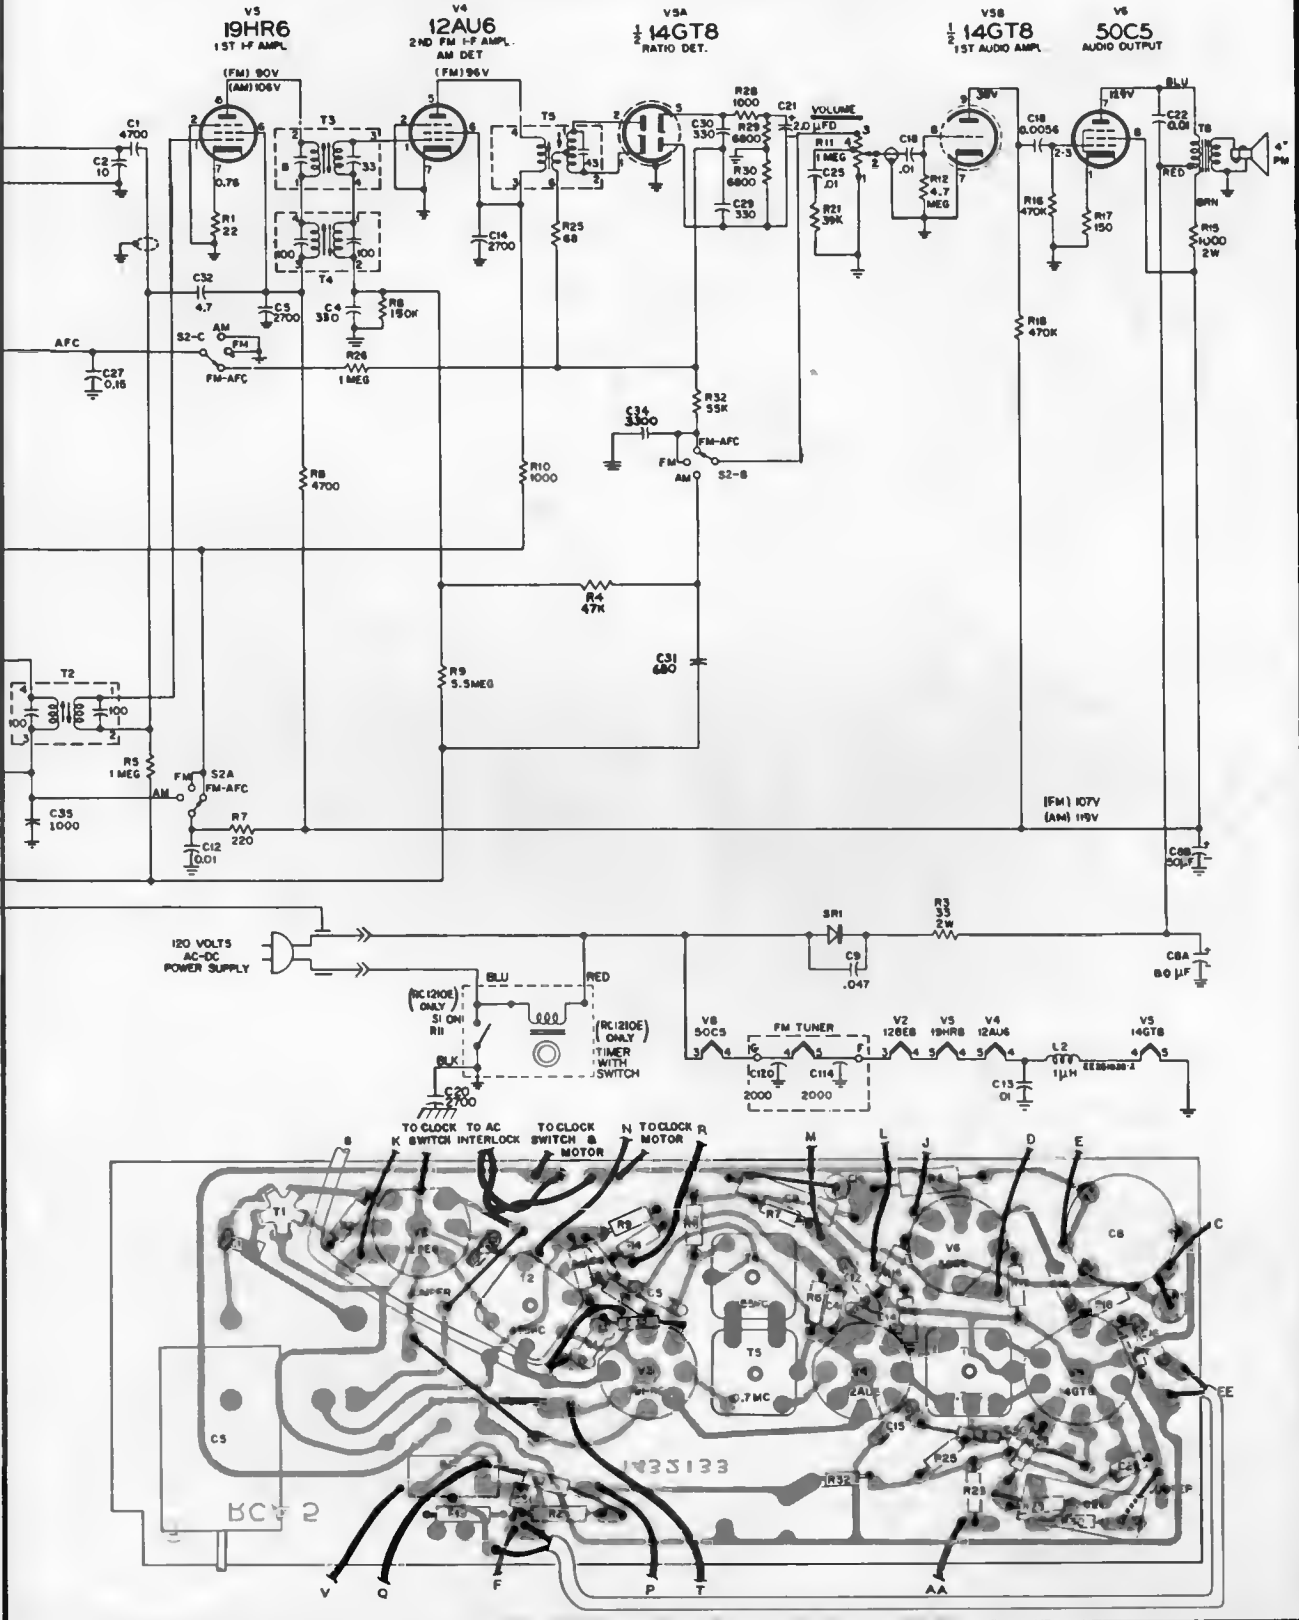




Chassis Layout (Component side) 129

RCA VICTOR

Models VFP 09E, T, VFP 11A, B, G, use Chassis RP-219-39
 Models VFP 19E, T, VFP 21A, T, VFP 32E, G, use RP-219-49
 Models VFP 43A, VFP 49E, use Chassis RP-219-42
 Models VFP 58A, VFP 60E, use Chassis RP-219A-12

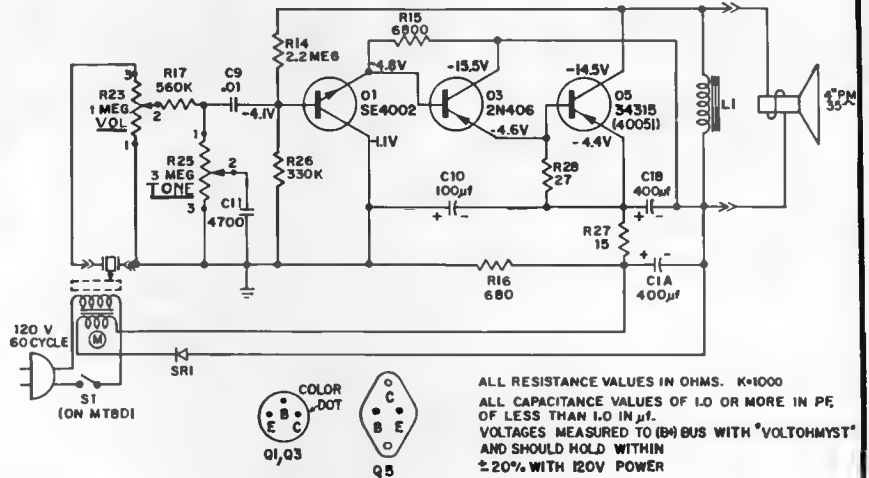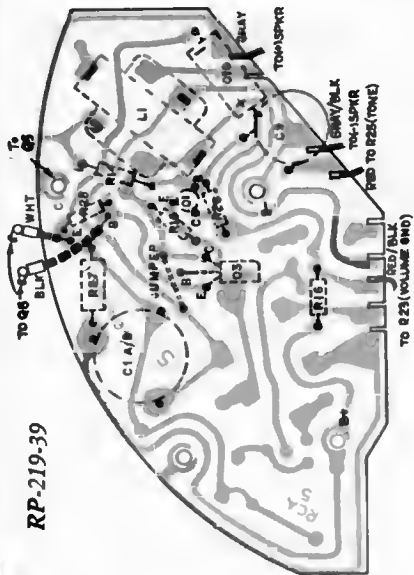


ALL RESISTANCE VALUES IN OHMS. K=1000
 ALL CAPACITANCE VALUES OF 10 OR MORE IN PF
 OF LESS THAN 10 IN μF.
 VOLTAGES MEASURED TO (B) BUS WITH *VOLTOHMYST*
 AND SHOULD HOLD WITHIN
 ±20% WITH 120V POWER

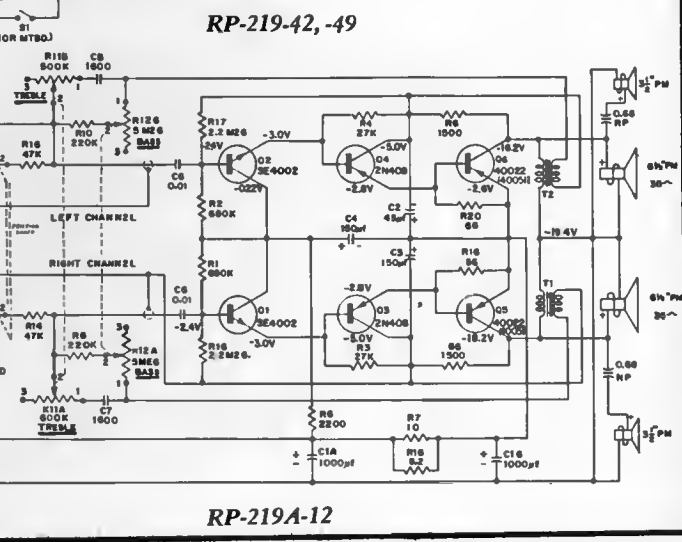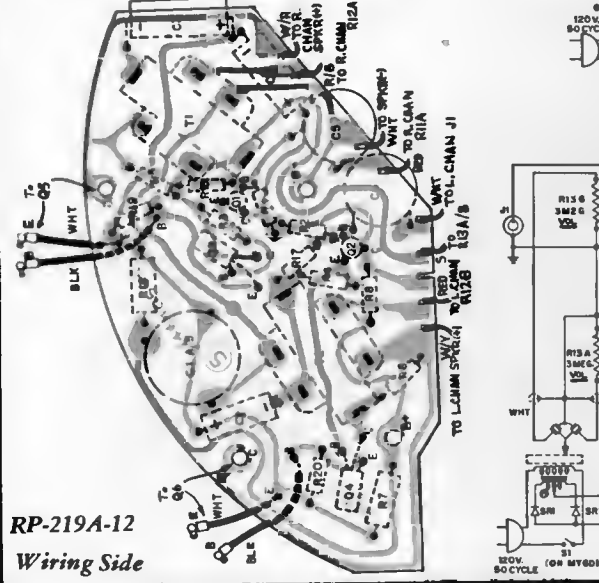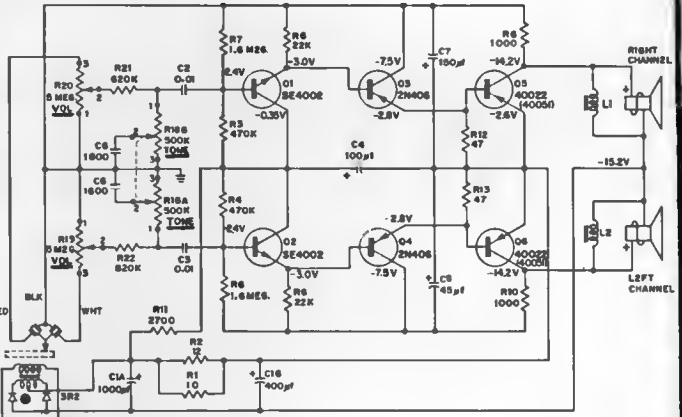

RCA VICTOR

Models RFG 20A, H, V, use Chassis RC-1219A, B
 Models RFG 25B, E, use Chassis RC-1219B

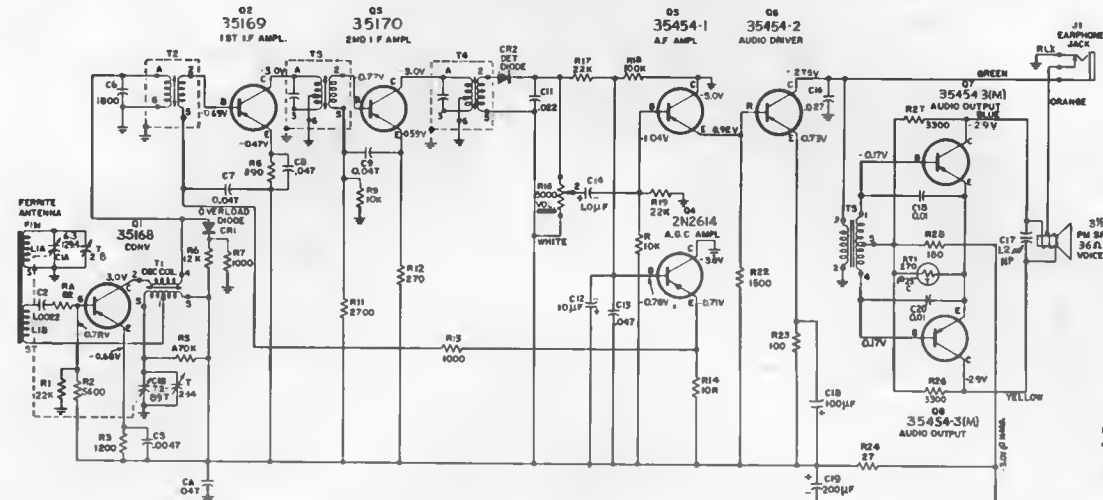


ALIGNMENT PROCEDURE

Step	Connect High Side of Signal Generator to—	Signal Gen. Output	Dial Pointer Setting	Adjust for Max. Output
1	Loop or piece of short wire placed near antenna for radiated signal	455 kc	Gang fully open	T4 (3rd I-F)
2				T3 (2nd I-F)
3				T2 (1st I-F)
4				Repeat Steps 1, 2, and 3
5	1620 kc	Gang fully open	Oscillator Trimmer C1B-T	
6	1400 kc	1400 kc (rock gang if necessary)	Antenna Trimmer CIA-T	
7	600 kc	600 kc (rock gang)	Osc. coil T1	
B	Repeat Steps 5, 6, and 7			


USE PROPER ALIGNMENT TOOL FOR MAKING ADJUSTMENTS. CORES ARE EASILY BROKEN BY IMPROPER HANDLING, MAKING NECESSARY REPLACEMENT OF ENTIRE COIL.

VOLTAGES MEASURED WITH "VOLTOHMIST" FROM (+) BATTERY SHOULD HOLD WITHIN ±20% WITH NEW BATTERY VOLUME CONTROL AT MINIMUM R NO SIGNAL.
 *4100Ω ALL RESISTANCE VALUES IN OHMS ALL CAPACITANCE VALUES LESS THAN 1.0 ARE IN μF. THOSE ABOVE 1.0 ARE IN pF EXCEPT AS NOTED.
 †7 & 8 ARE A MATCHED PAIR.



CHASSIS REMOVAL


1. Remove tuning and volume knobs.
2. Open case as explained under "Battery Replacement."
3. Remove three screws securing chassis. (Two at battery end of board and one at speaker end.)
4. Remove nut holding earphone jack (RC-1219B) or slide earphone jack out of slot (RC-1219A).
5. Unsolder speaker wires if necessary (or remove clips holding speaker to case).
6. Unsolder battery wires if necessary.
7. Lift board out of case.

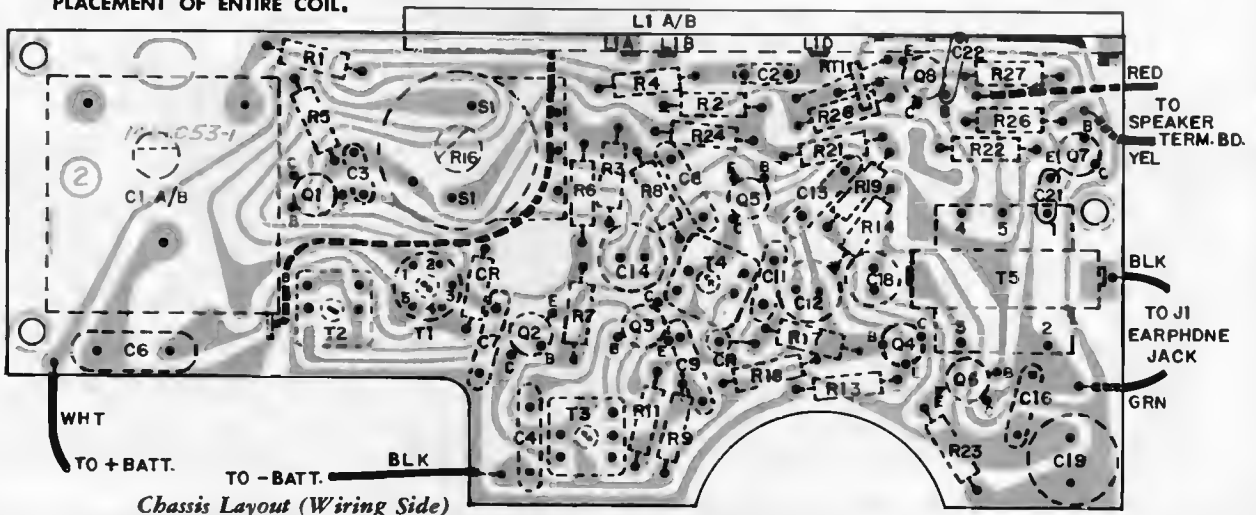

RCA VICTOR

Model VFP 65 E

Chassis RS-206A

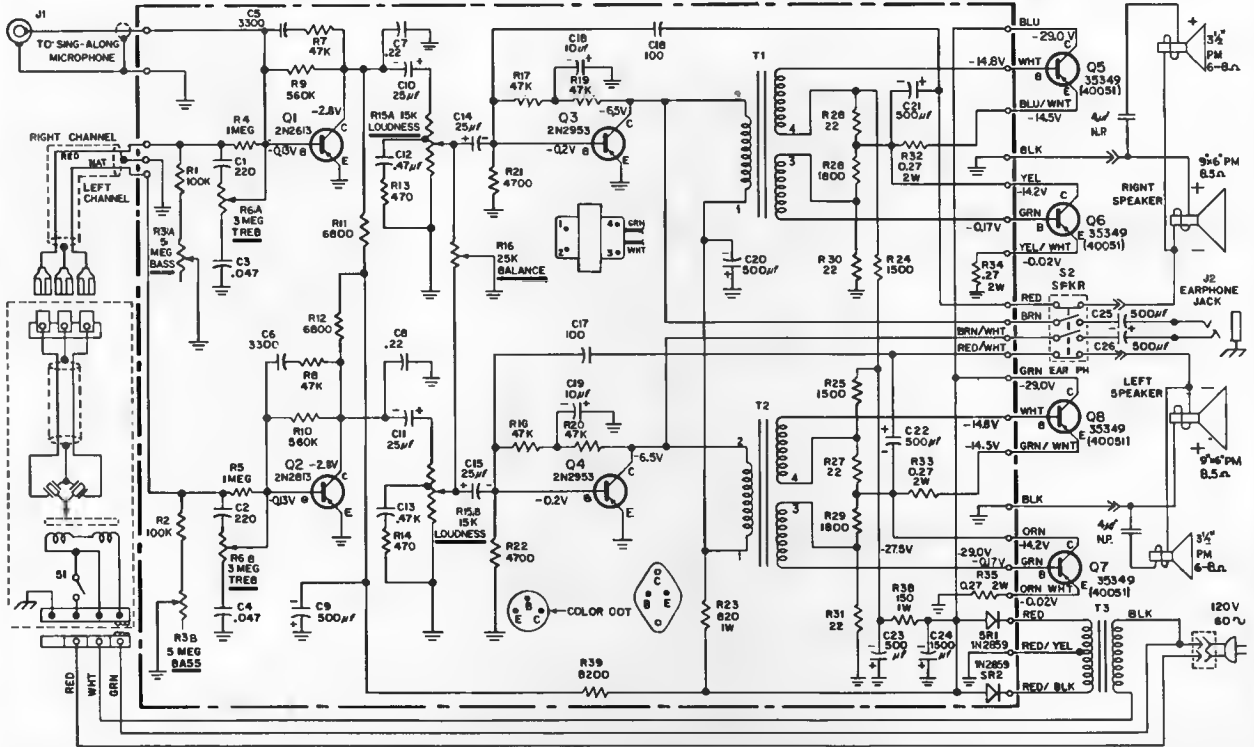

All capacitance values below 1.0 are in μf . Those 1.0 and above are in μf (μf), unless otherwise noted.

ACCESS TO CHASSIS

The chassis is accessible through the small panel on the rear of the instrument.


1. Remove power cord.
2. Remove three (3) painted screws holding small access panel on rear of instrument.
3. Swing panel down and to right on its pivot. DO NOT ATTEMPT TO REMOVE PANEL.

CHASSIS REMOVAL

The top of the record changer compartment comprises the complete chassis. It rests on and is secured to a ledge at the front and is held by screws at the rear. The recommended procedure for its removal is as follows:

1. Remove knobs.
2. Open small access panel as described in "Access to Chassis."


3. Position two (2) holes in access panel over screws holding power cord interlock.
4. Remove two (2) machine screws holding interlock.
5. Pull record changer drawer down.
6. Unscrew two (2) bolts securing record changer in drawer. (Lift mat of turntable and reach bolts through access holes in turntable, one at front and one at rear.) DO NOT ATTEMPT TO REMOVE RECORD CHANGER DRAWER.
7. Lift up changer and disconnect cables.
8. Remove four (4) plated screws holding front of chassis to horizontal ledge located inside of compartment at front of top.
9. Remove wires, running down each back corner of compartment, from holding clips.
10. Remove four (4) painted screws holding rear of chassis to rear of instrument—just below the access panel. (Hold chassis—top of compartment—to prevent its falling.)
11. Chassis may then be lowered and removed.
12. Disconnect speaker cables from transformers and lift chassis out of case.

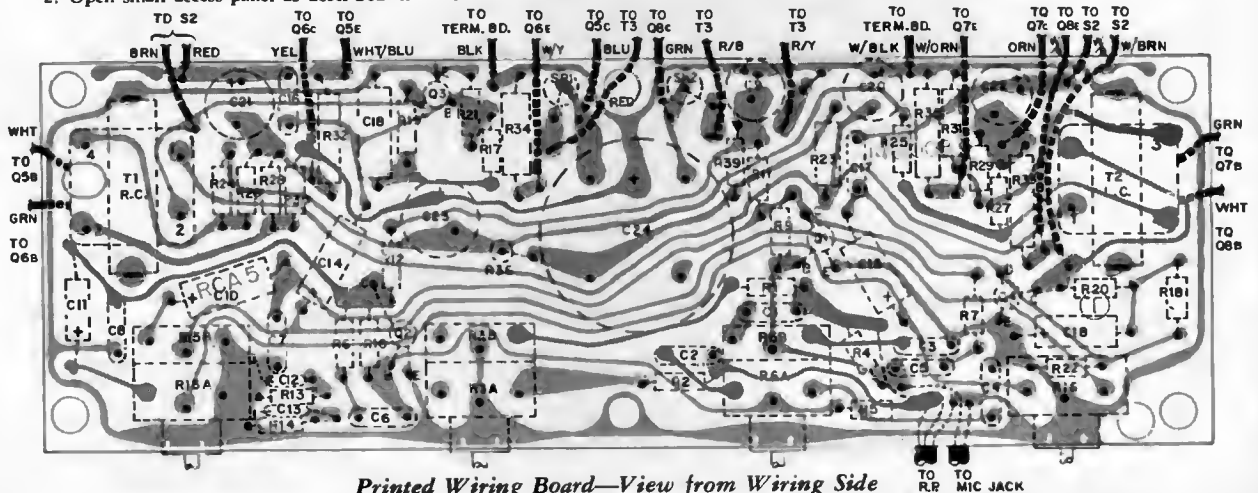

Printed Wiring Board—View from Wiring Side

RCA VICTOR

(Material on pages 133 through 135)

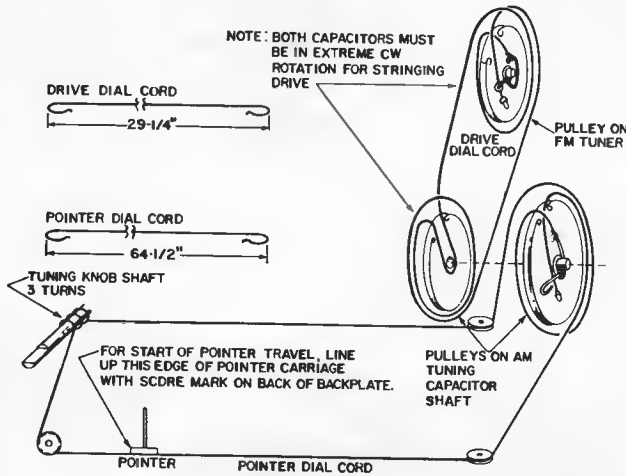

Dial Cord Arrangement



Model Series	Tuner Chassis	Amplifier Chassis
VFR05M	RC-1215D	RS-203C
VFR05W	RC-1215D	RS-203C
VFR19M	RC-1215D	RS-203C
VFR25L	RC-1215D	RS-203C
VFT05M	RC-1215E	RS-203C
VFT05W	RC-1215E	RS-203C
VFT10E	RC-1215E	RS-203C
VFT19M	RC-1215E	RS-203C
VFT22W	RC-1215E	RS-203C
VFT25L		

Tuner Chassis RC-1215D is an AM/FM tuner (No Stereo)
 Tuner Chassis RC-1215E is an AM/FM/FM-Stereo tuner

All instruments are self-contained combination Radio/"Victrola" consoles designed to provide in-the-cabinet stereophonic reproduction. Models in the VFT 0, 1, and 2 series contain an AM/FM/FM-Stereo tuner, a stereophonic record changer, a dual channel audio amplifier, and two complete speaker systems. The VFR 0, 1, and 2 series instruments do not incorporate FM-Stereo or the stereo indicator light, but in all other respects are identical to the VFT 0, 1, and 2 series combination consoles.



Tap input jacks are provided in all instruments as well as a terminal block for the connection of external speakers. When used, external speakers are connected in parallel with the internal speaker system.

PB300 LAYOUT

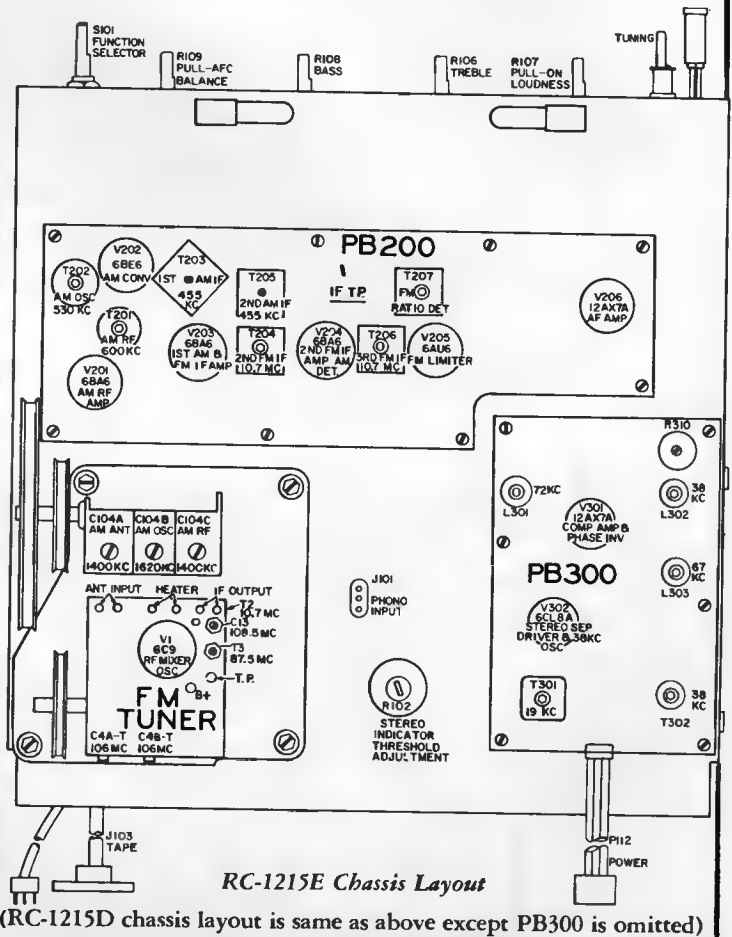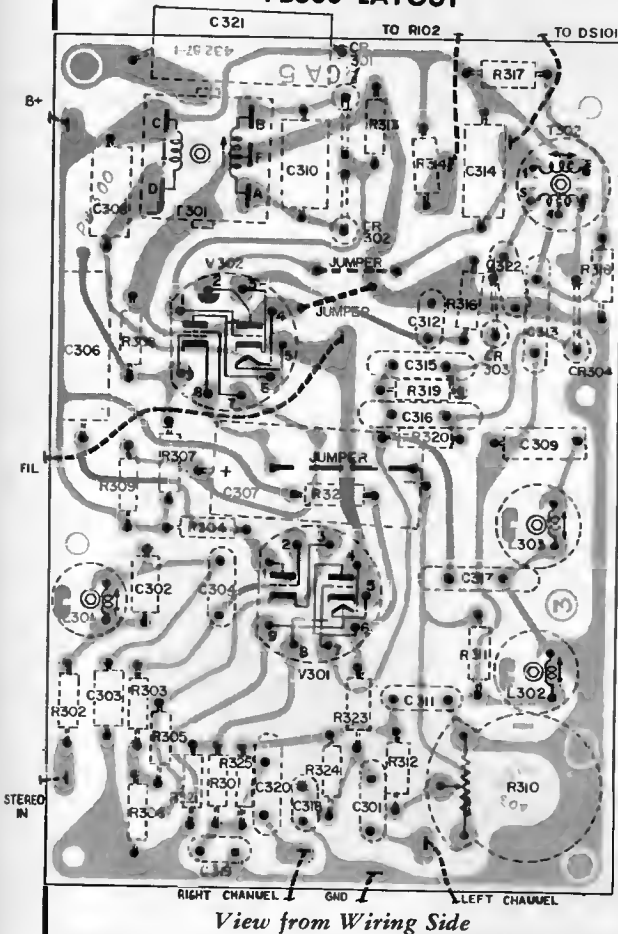


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

RCA Victor Tuner Chassis RC-1215D, E, Amplifier Chassis RS-203C, Continued

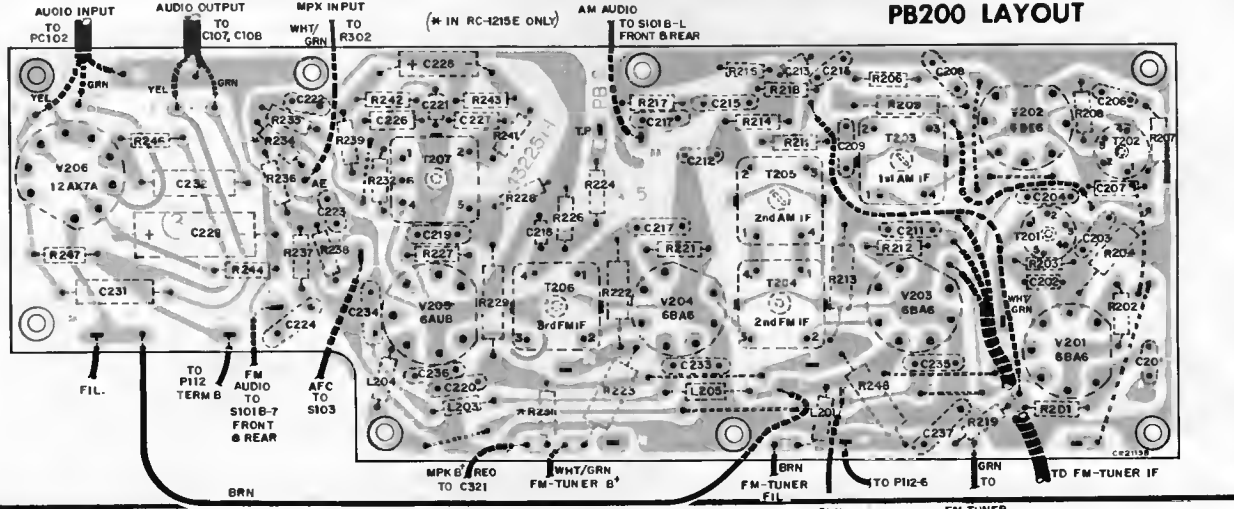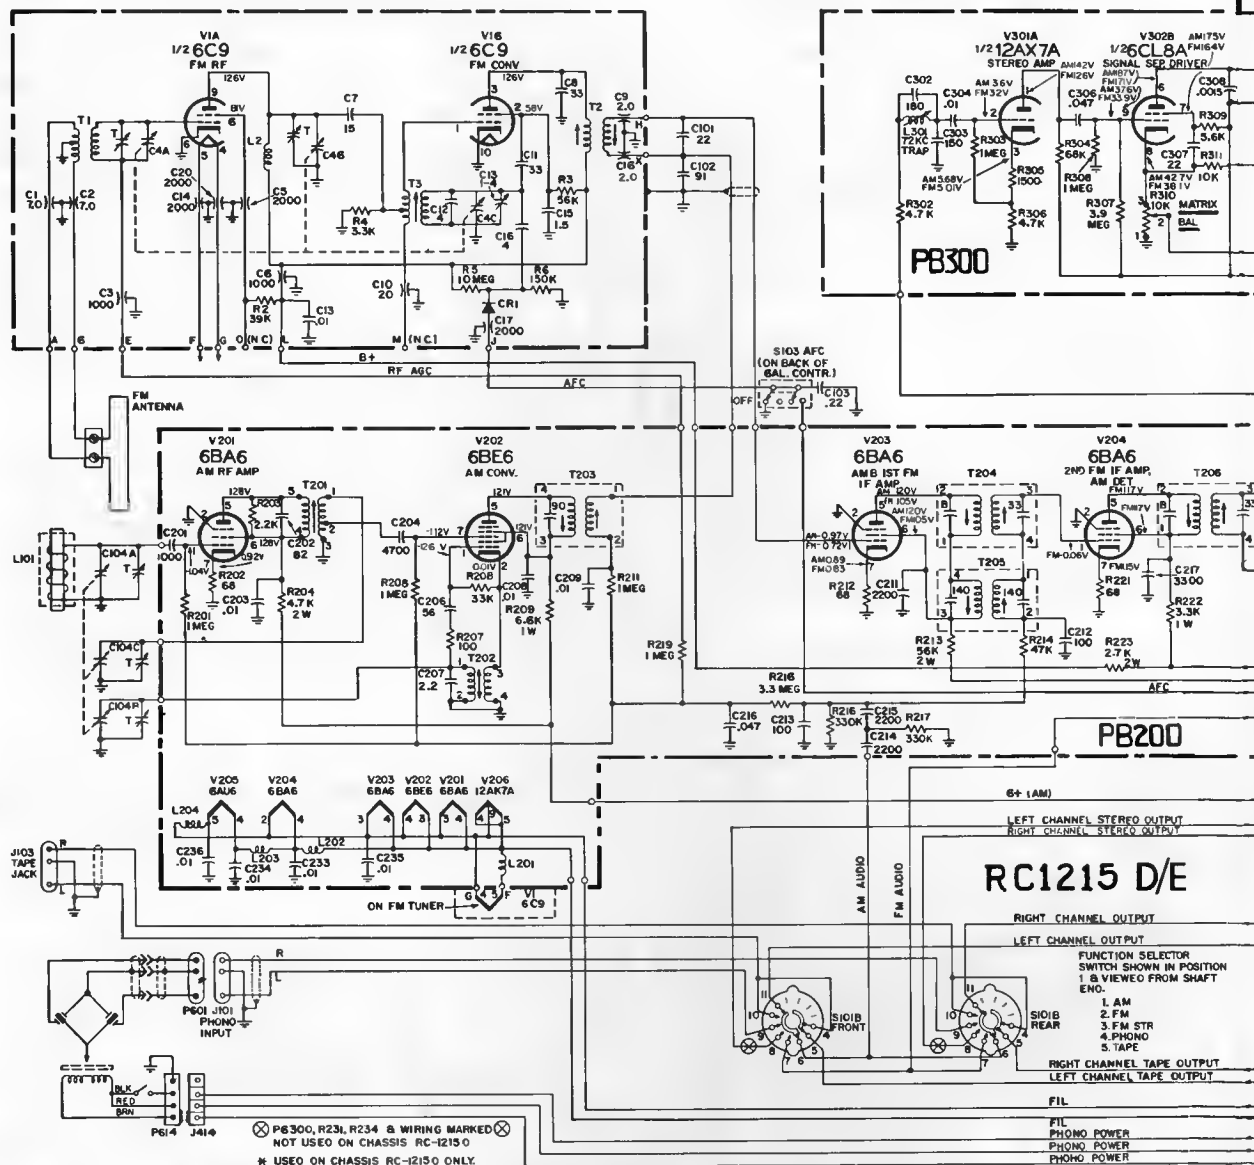


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

RCA Victor Tuner Chassis RC-1215D, E, Amplifier Chassis RS-203C, Continued


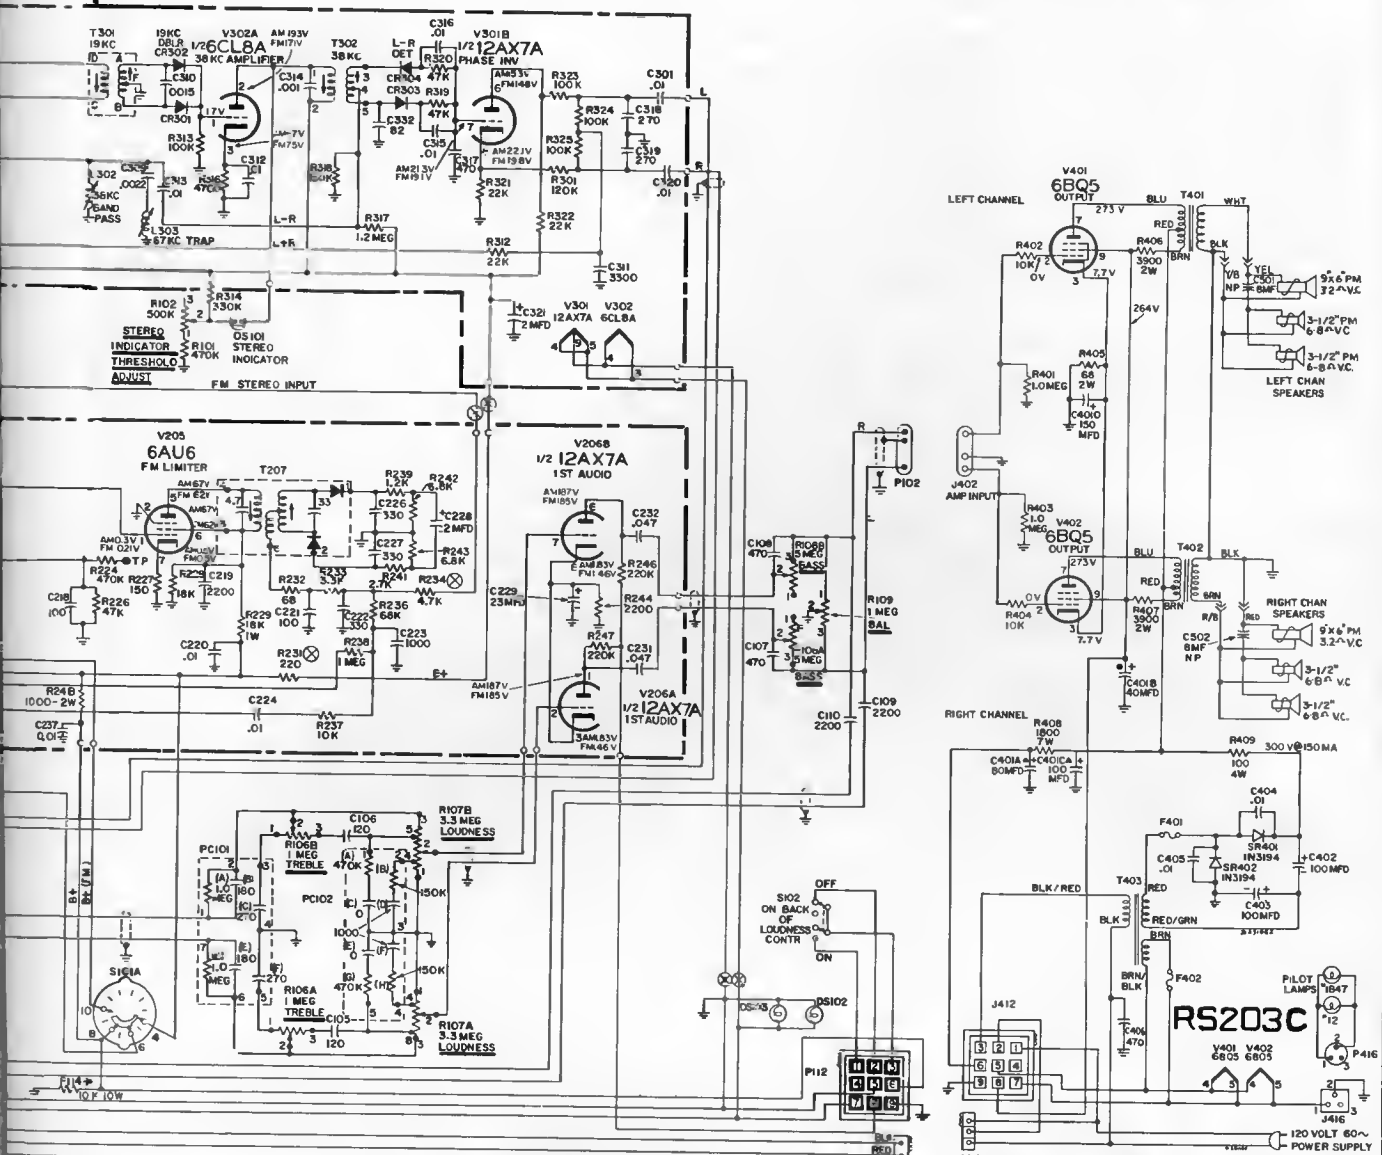


(* IN RC-1215E ONLY)

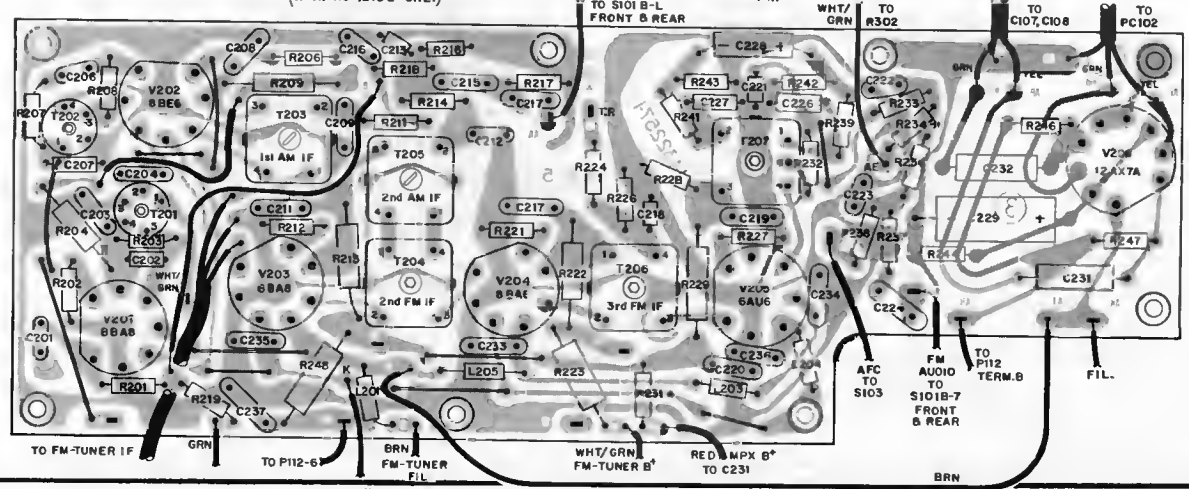


RCA VICTOR

Models VFT 44W, VFT 52M, VFT 54L, VFT 56C, VFT 65W, VFT 72W, VFT 74L, VFT 74Z, VFT 76W, VFT 82M, VFT 82V, VFT 83F, VFT 83V, VFT 84E, VFT 85W, VFT 86L, employ Amplifier Chassis RS-210A covered on this page, and Tuner Chassis RC-1215J or K which are practically identical to the RC-1215E chassis covered on the preceding three pages.

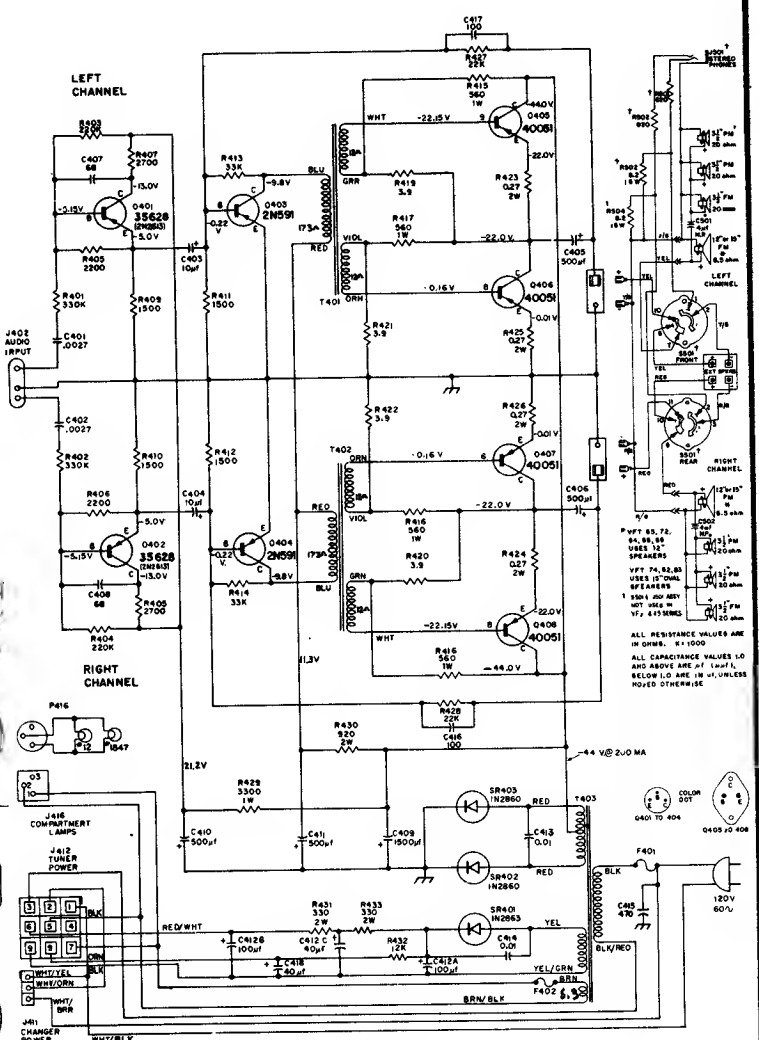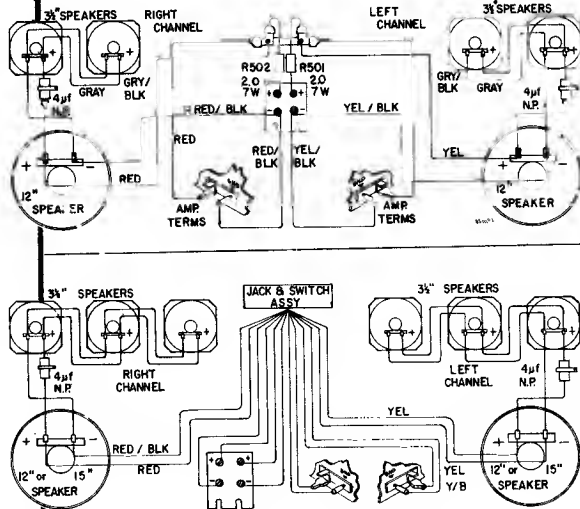



Speaker Wiring

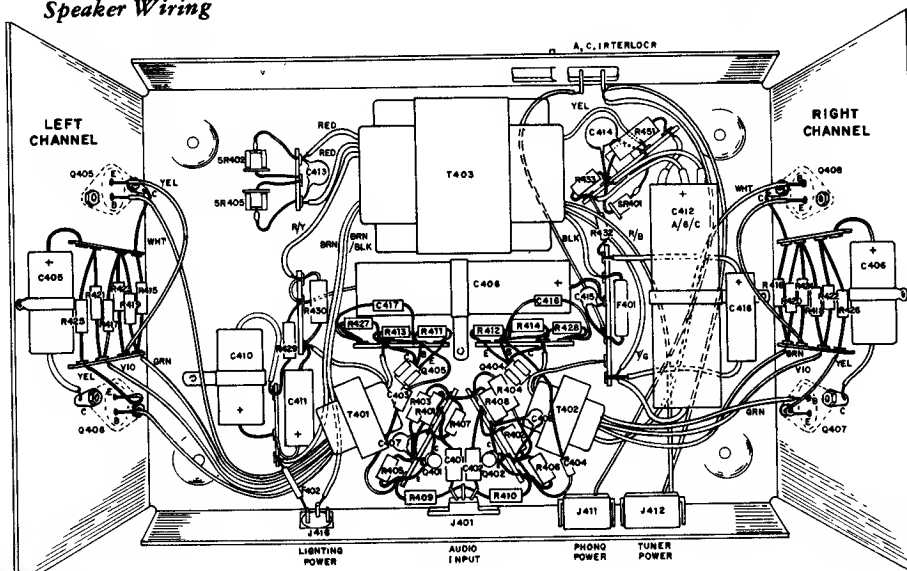


RS-210A Chassis Layout

RCA VICTOR


Models VFT 26W, VFT 27L, VFT 28M, VFT 29W, VFT 30W, and VFT 31L, employ Amplifier Chassis RS-212A covered on this page, and Tuner Chassis RC-1215M which is practically identical to RC-1215E chassis covered on preceding pages.

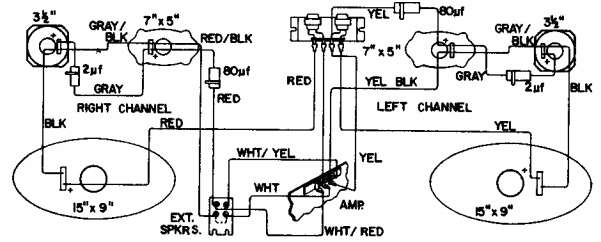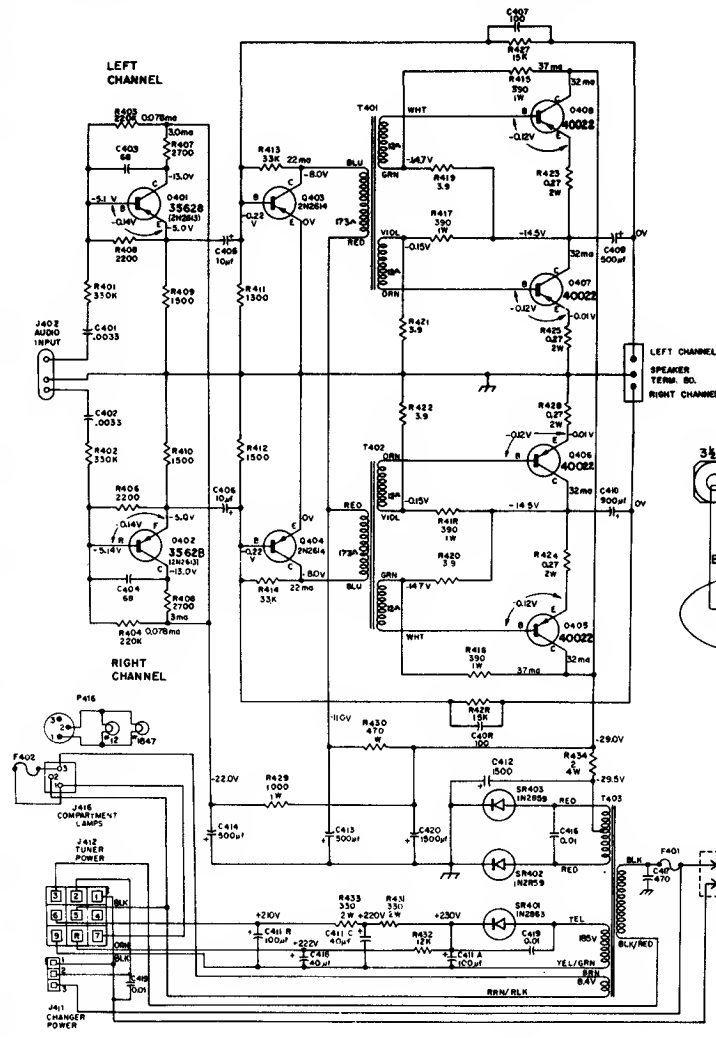


Speaker Wiring—VFT 26, 27, 28

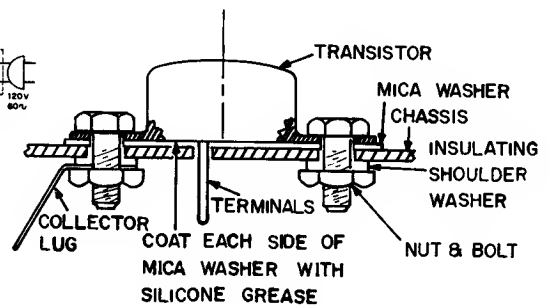

Output Transistor Mounting

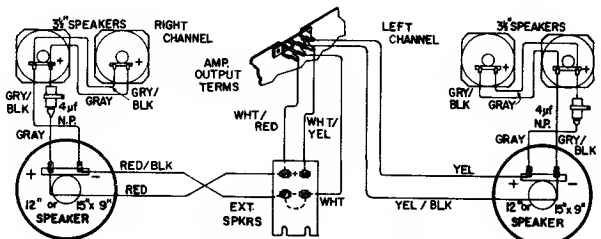

Speaker Wiring—VFT 29, 30, 31

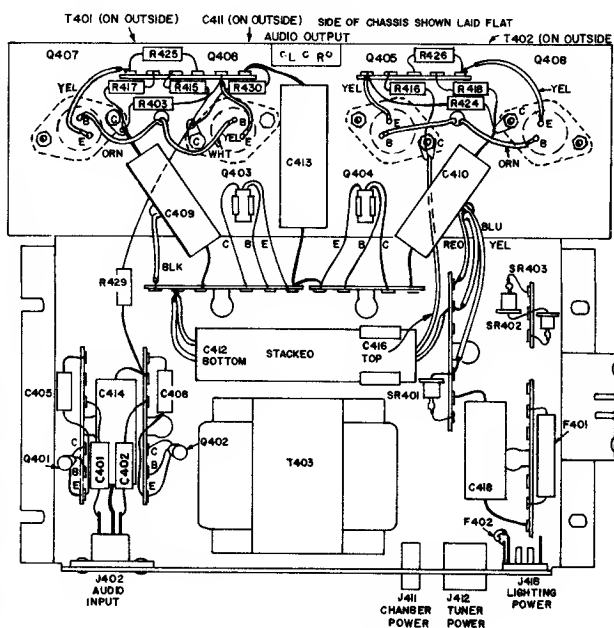

RS 212A Chassis Layout

A terminal board is available on the rear of the instrument for the attachment of accessory external speakers (RCA XFK21, 22, 23 or equivalent) should they be desired. A jack is available in the record storage compartment for use of binaral headphones (RCA XFK 11 or equivalent). A switch adjacent to the jack provides for various operating modes of the internal speakers, external speakers (if used) and the headphones.

RCA VICTOR

RGD 24 Series

Chassis RC-1213P


Model RGD 24A—Light Blue

Model RGD 24N—Cream


Model RGD 24Y—Iceberg White

TUBE AND CHASSIS ACCESSIBILITY

1. DO NOT ATTEMPT TO REMOVE THE KNOBS. The tuning and volume control knobs are held captive to the cabinet by retainers on their shafts.
2. Remove the back cover by lifting the protrusions on the bottom of the back cover, out of the slots in the base of the cabinet.
3. Unsolder speaker leads if necessary. Avoid putting a strain on the speaker leads.
4. Remove two chassis retainers (screws or clips), one at the volume control and one on the left end mounting.
5. Grasp tuning capacitor and volume control, and pull chassis out of knobs and mounting slots.

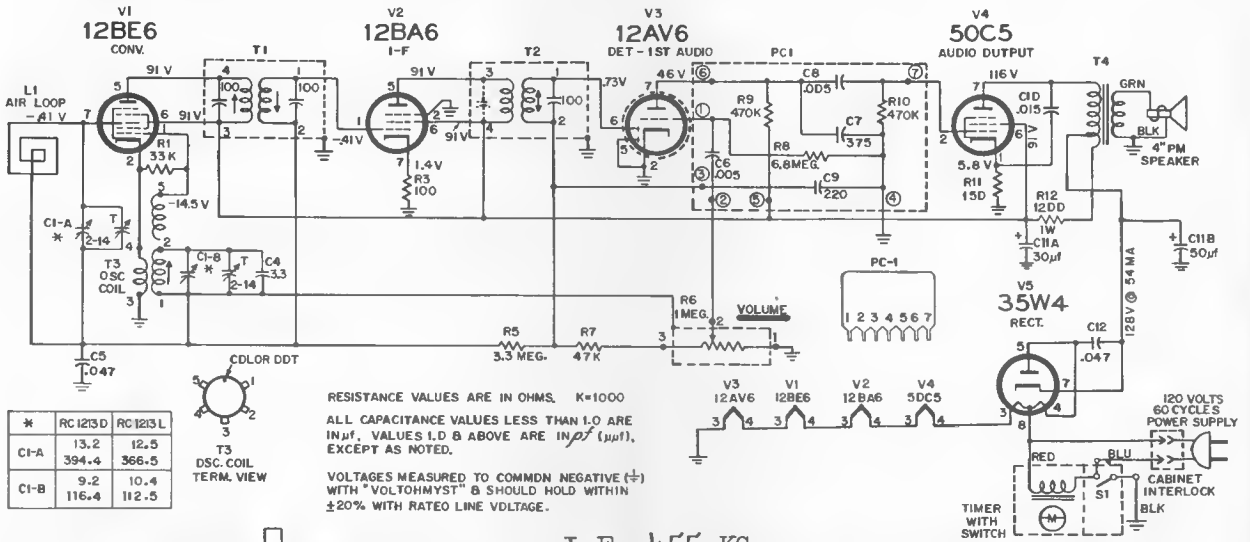


*	RC1213D	RC1213L
CI-A	13.2	12.5
	394.4	366.5
CI-B	9.2	10.4
	116.4	112.5




RESISTANCE VALUES ARE IN OHMS, K=1000
 ALL CAPACITANCE VALUES LESS THAN 1.0 ARE IN µf, VALUES 1.0 & ABOVE ARE IN µf (µµf), EXCEPT AS NOTED.
 VOLTAGES MEASURED TO COMMON NEGATIVE (+) WITH "VOLTOHMYST" & SHOULD HOLD WITHIN ±20% WITH RATE LINE VOLTAGE.

I. F. 455 KC.

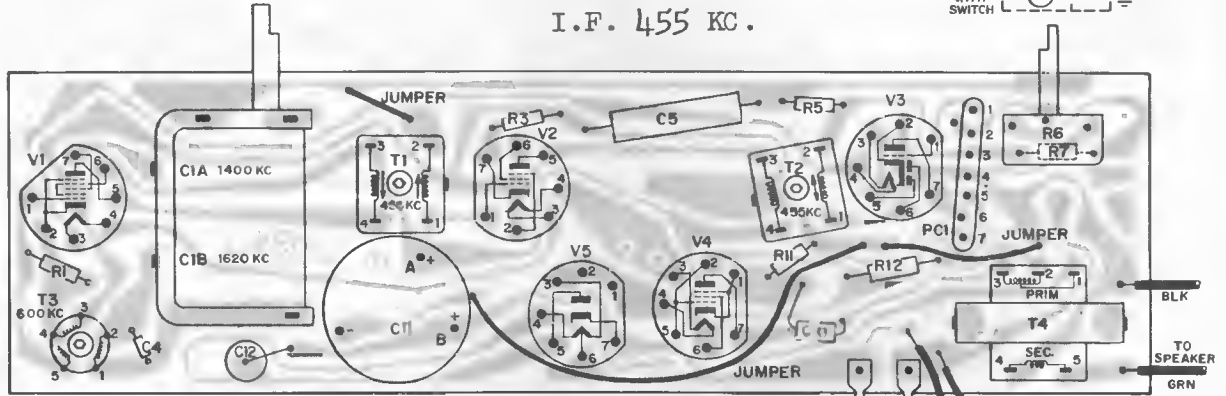

Chassis Layout—RC-1213P (Component Side)

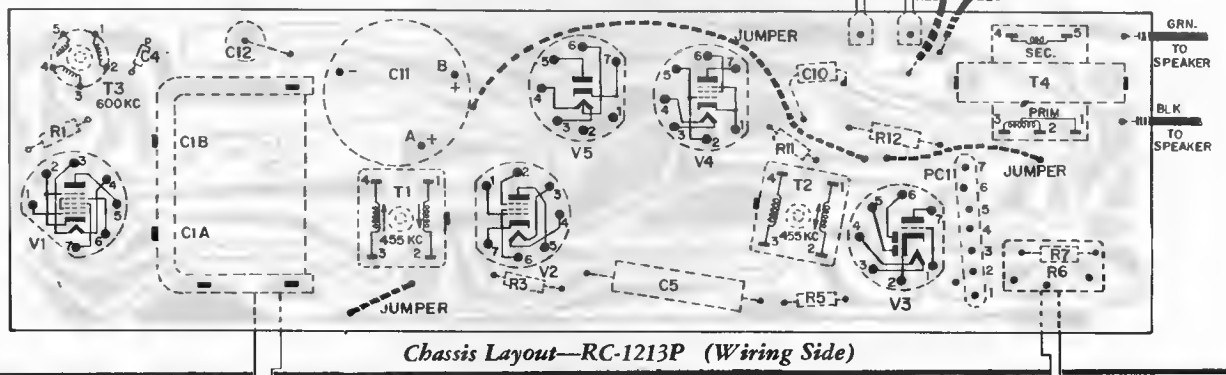


Chassis Layout—RC-1213P (Wiring Side)


Silvertone

SEARS, ROEBUCK AND CO.

Chassis 132.83601, Models 5008, 5009

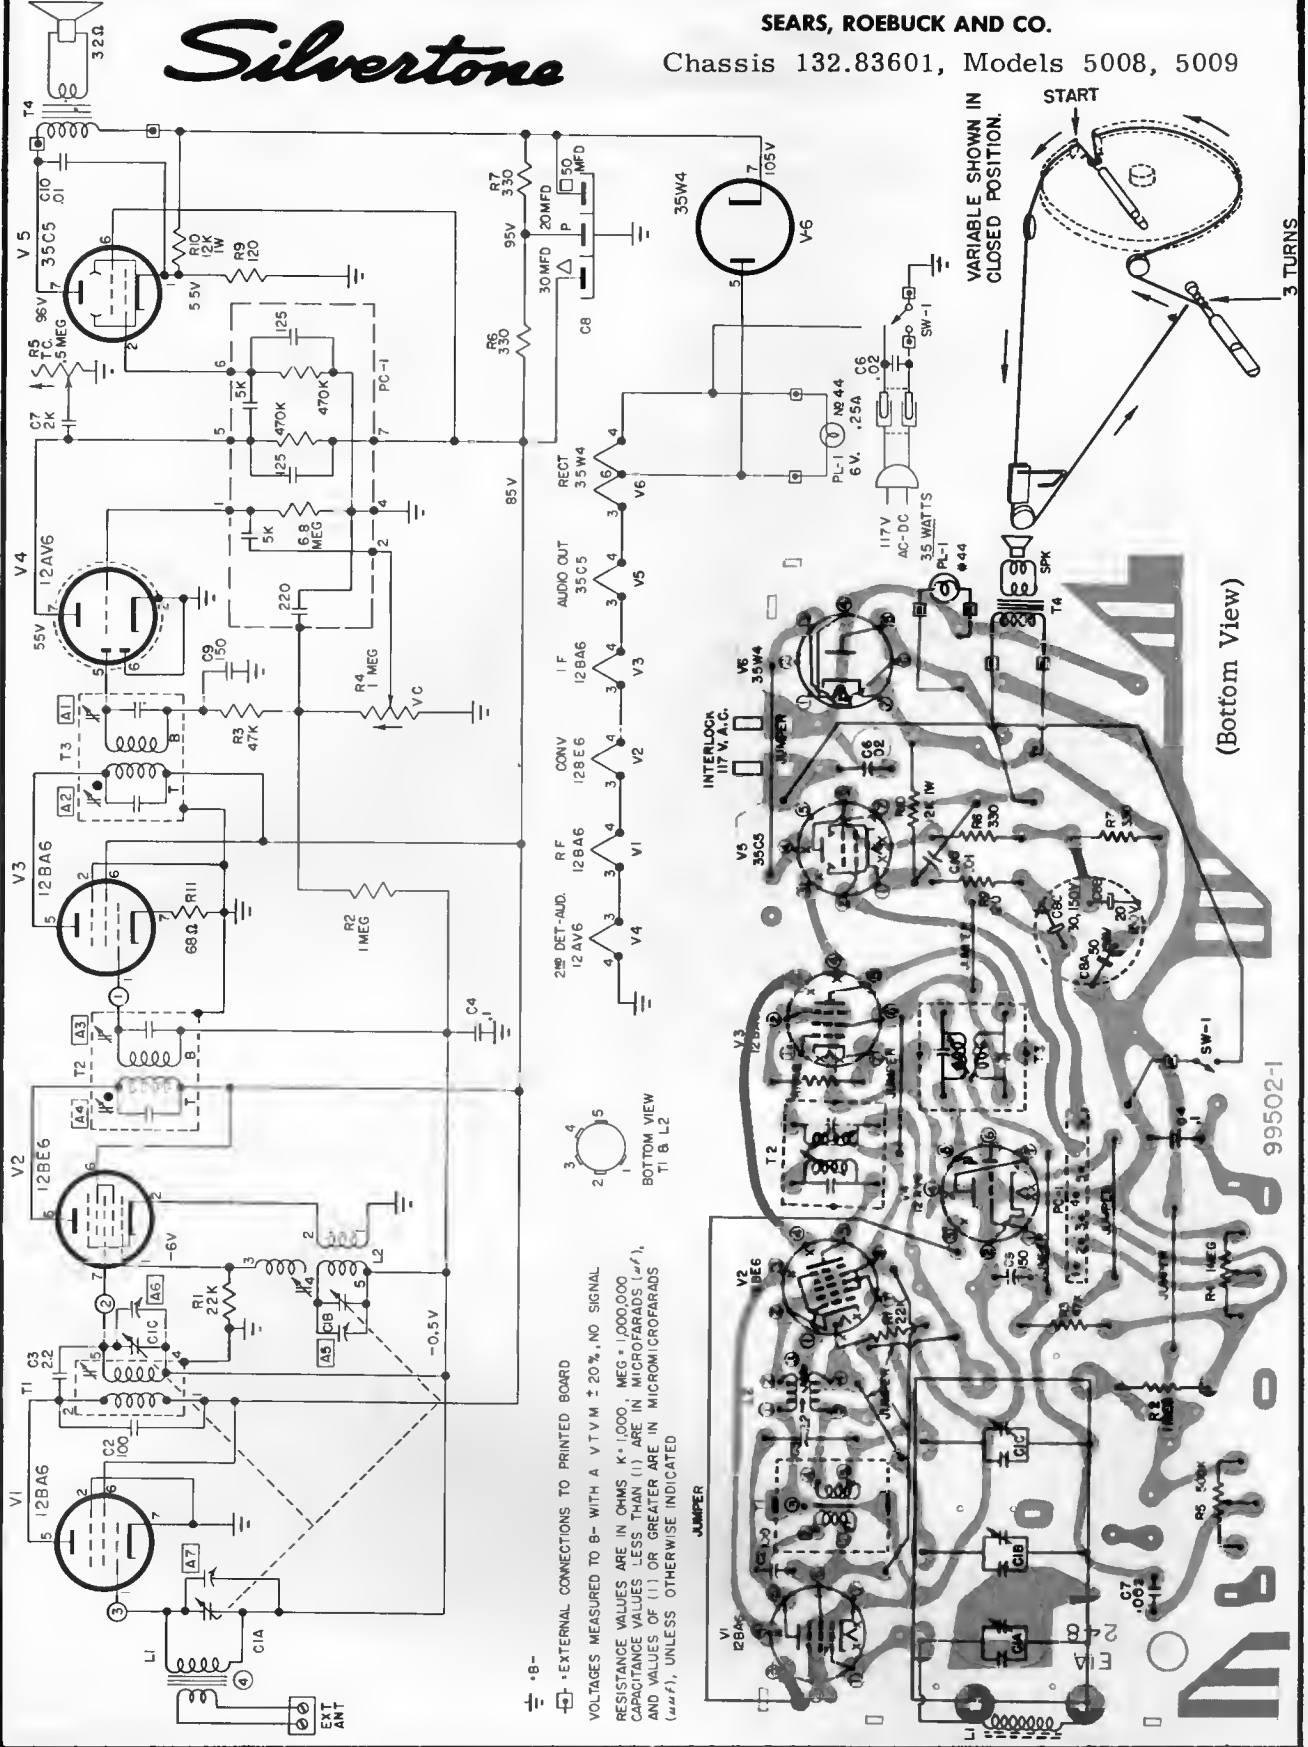

• 8-
 *EXTERNAL CONNECTIONS TO PRINTED BOARD
 VOLTAGES MEASURED TO B- WITH A VTVM ± 20%, NO SIGNAL
 RESISTANCE VALUES ARE IN OHMS K = 1,000, MEG = 1,000,000
 CAPACITANCE VALUES LESS THAN (1) ARE IN MICROFARADS (μF),
 AND VALUES OF (1) OR GREATER ARE IN MICROMICROFARADS
 (μμF), UNLESS OTHERWISE INDICATED

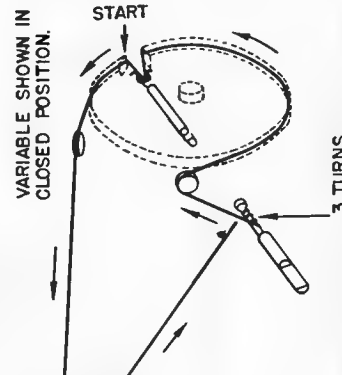

STRINGING DIAGRAM


CIRCUIT BOARD DIAGRAM

(Bottom View)

99502-1

Silvertone

Sears, Roebuck Chassis 132.84101, Models 5045, 5046
(Diagram and top view on page 141)

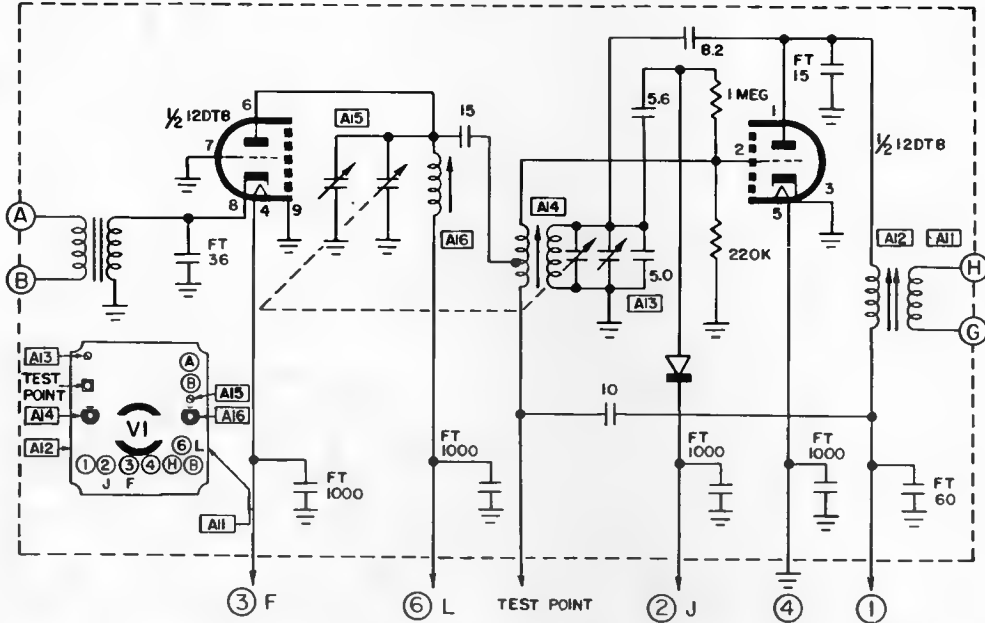


TUNER SCHEMATIC


AM ALIGNMENT PROCEDURE

Position of Variable	Generator Frequency	Dummy Antenna	Generator Connection (high)	Generator Ground Lead	Adjust Trimmer in Order Shown for Max. Output	Trimmer Function
Open	455 Kc	.05 mfd.	Pin 7, 12BE6	B-through	A1, 2, 3, 4	I. F.
Open	1640 Kc		*Test Loop	Test Loop	A5	Oscillator
1400 Kc	1400 Kc		*Test Loop	Test Loop	A6	Antenna
**600 Kc	600 Kc		*Test Loop	Test Loop	Check Point	

*Three (3) turns of wire 6" in diameter placed about one foot from the receiver antenna. The alignment procedure should be repeated in the original order for greatest accuracy. Always keep the output from the signal generator at its lowest possible value to make the AVC action of the receiver ineffective.
** Check point only - No adjustment.

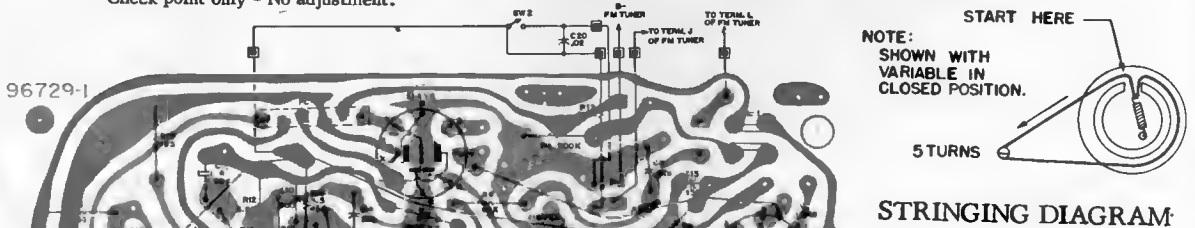


STRINGING DIAGRAM

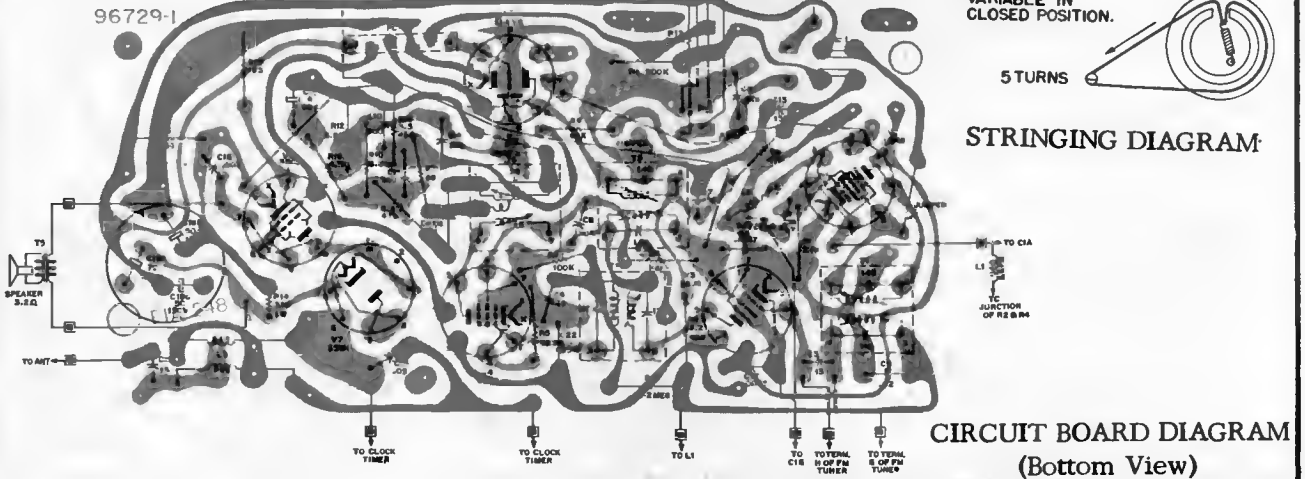

CIRCUIT BOARD DIAGRAM
(Bottom View)

RADIO SERVICING INFORMATION

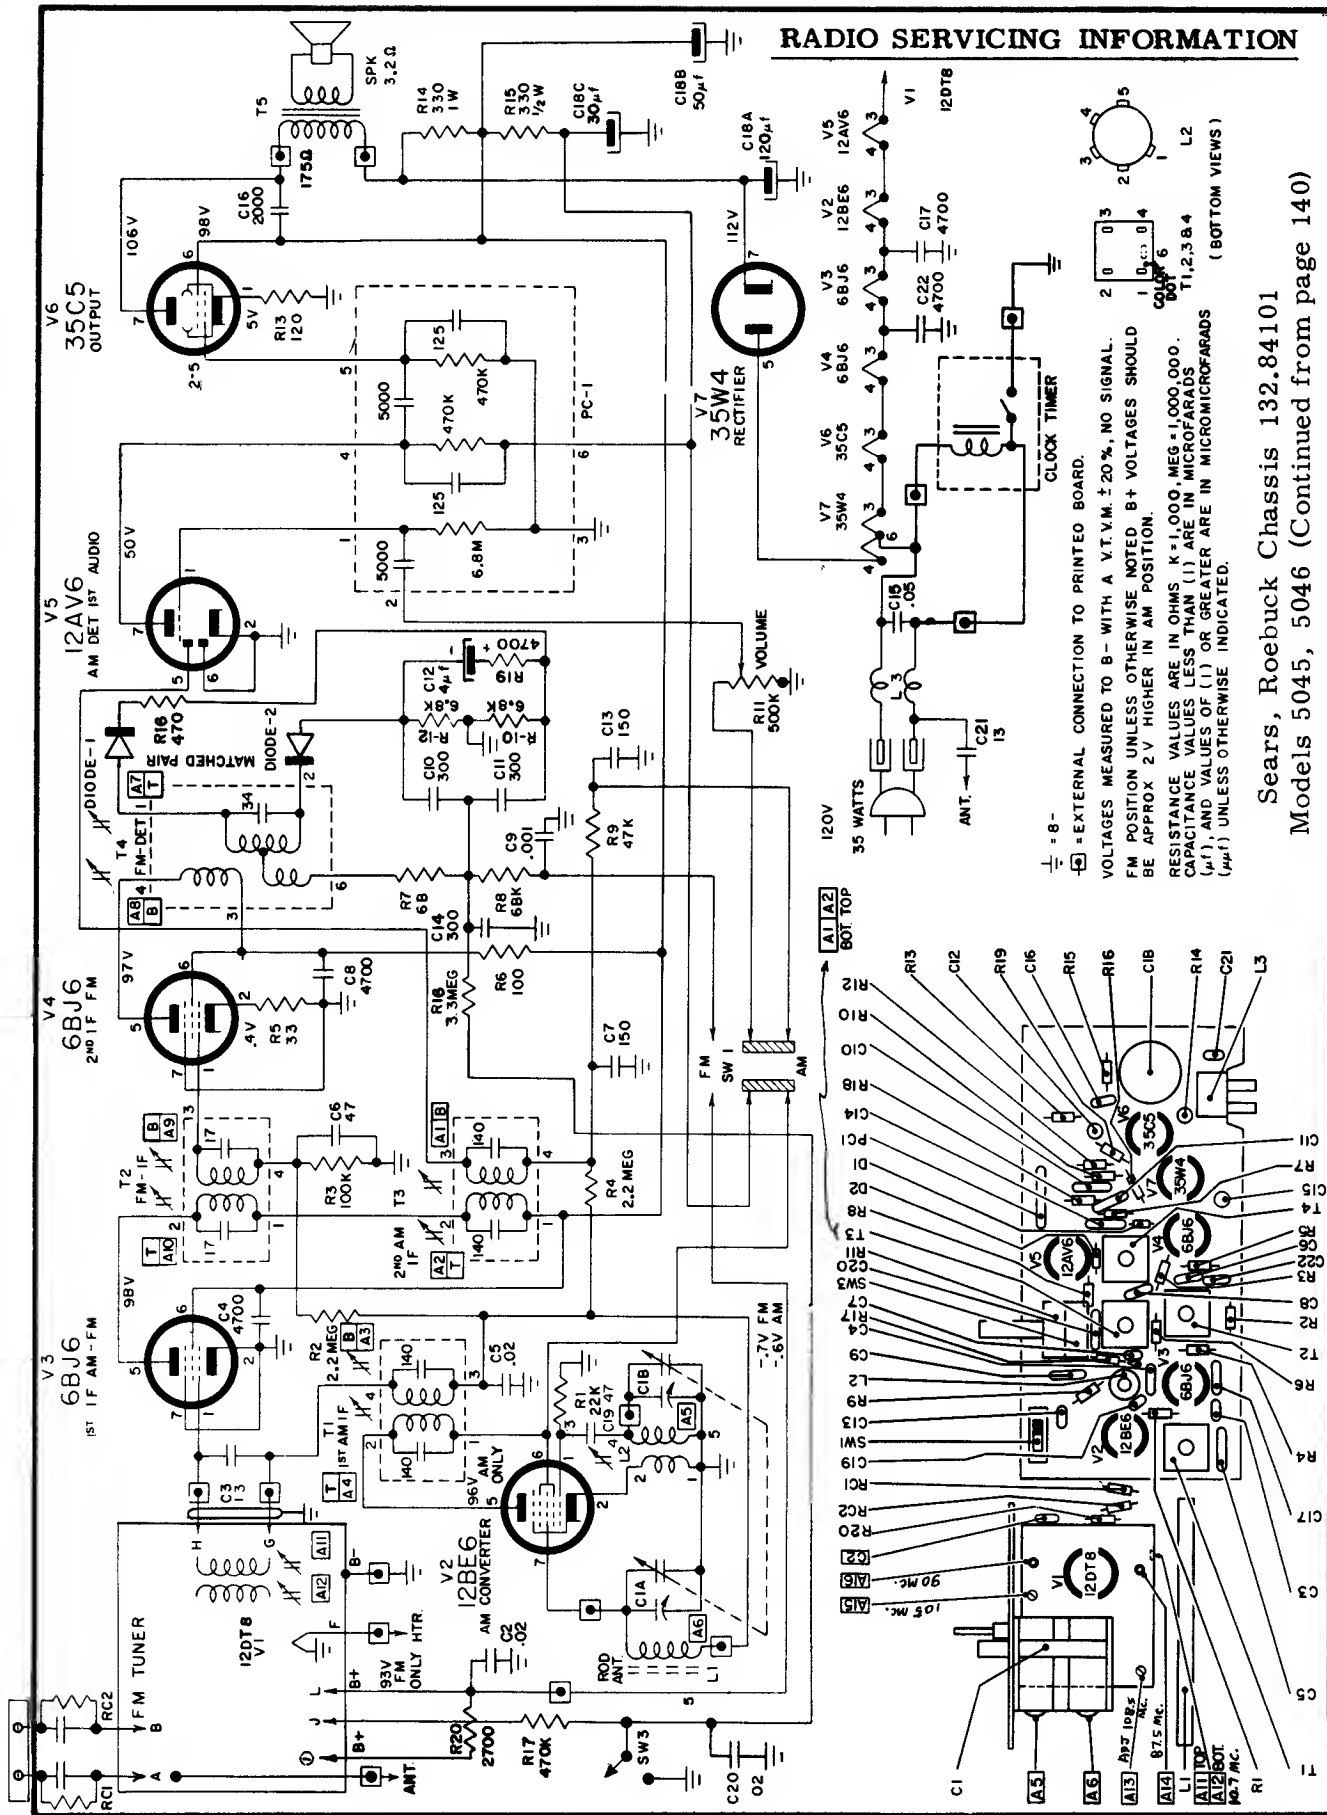


Sears, Roebuck Chassis 132.84101
Models 5045, 5046 (Continued from page 140)

⊕ - 8 -
 ⊕ = EXTERNAL CONNECTION TO PRINTED BOARD.
 VOLTAGES MEASURED TO B - WITH A V.T.M. ± 20%, NO SIGNAL.
 FM POSITION UNLESS OTHERWISE NOTED. B+ VOLTAGES SHOULD
 BE APPROX 2V HIGHER IN AM POSITION.
 RESISTANCE VALUES LESS THAN 1,000,000.
 CAPACITANCE VALUES LESS THAN 100,000.
 (μf), AND VALUES OF 100 OR GREATER ARE IN MICROMICROFARADS
 (μμf) UNLESS OTHERWISE INDICATED.

A1 A2 A3 A4 A5 A6 A7 A8 A9 A10 A11 A12 A13 A14 A15 A16 A17
 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17
 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53 54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 92 93 94 95 96 97 98 99 100


SEARS | *Silvertone* RADIO CHASSIS NO. 528.63101

CLOCK-RADIO MODELS 5036, 5037, 5038, 5039

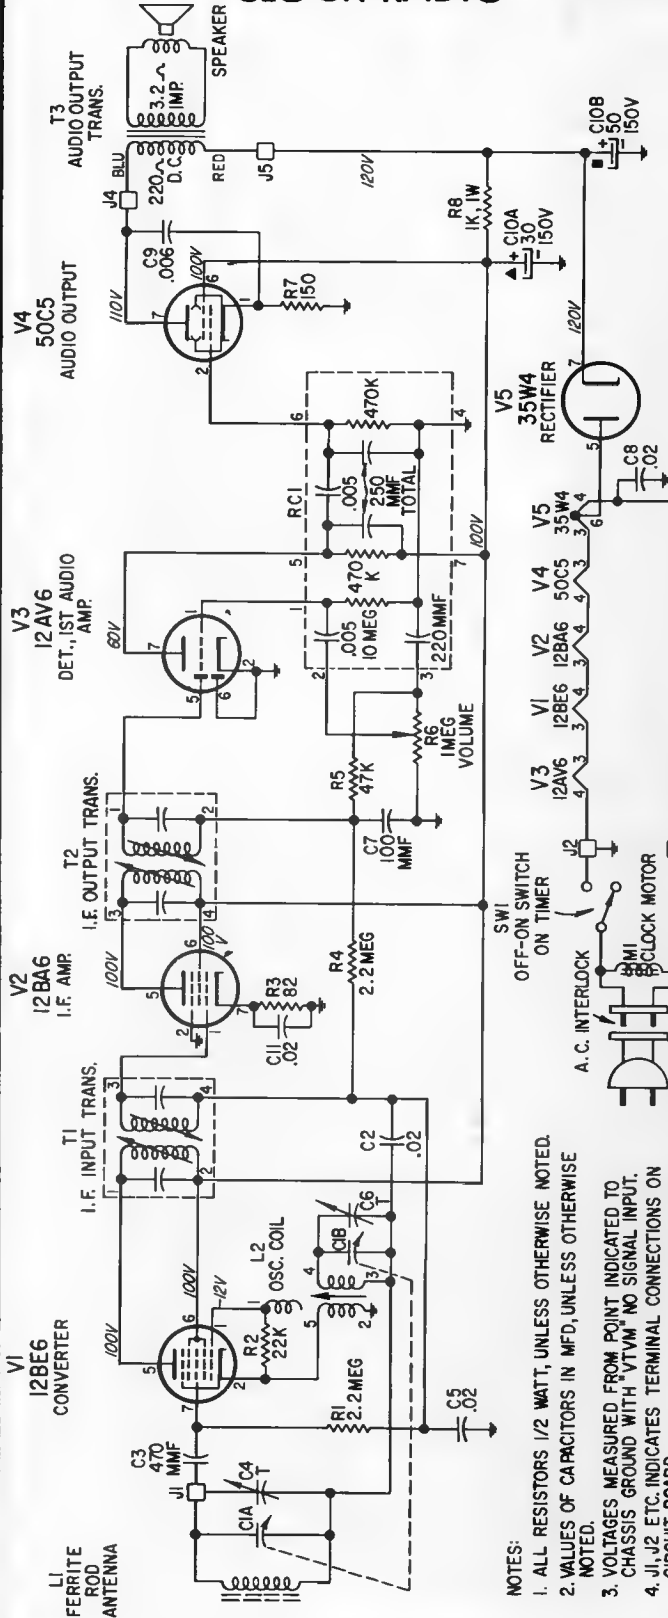


- NOTES:**
1. ALL RESISTORS 1/2 WATT, UNLESS OTHERWISE NOTED.
 2. VALUES OF CAPACITORS IN MFD, UNLESS OTHERWISE NOTED.
 3. VOLTAGES MEASURED FROM POINT INDICATED TO CHASSIS GROUND WITH "VTVM" NO SIGNAL INPUT.
 4. J1, J2, ETC. INDICATES TERMINAL CONNECTIONS ON CIRCUIT BOARD.

IF 455 KC.

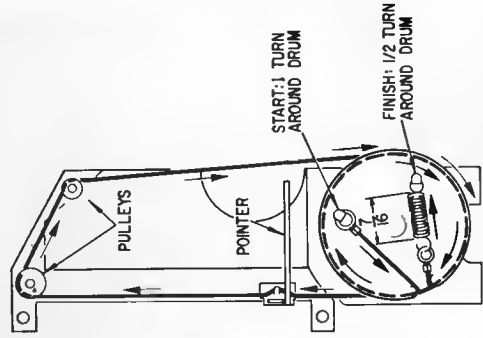

NOTE: STRINGING DIAGRAM SHOWN WITH TUNING GANG FULLY CLOSED

STRINGING DIAGRAM

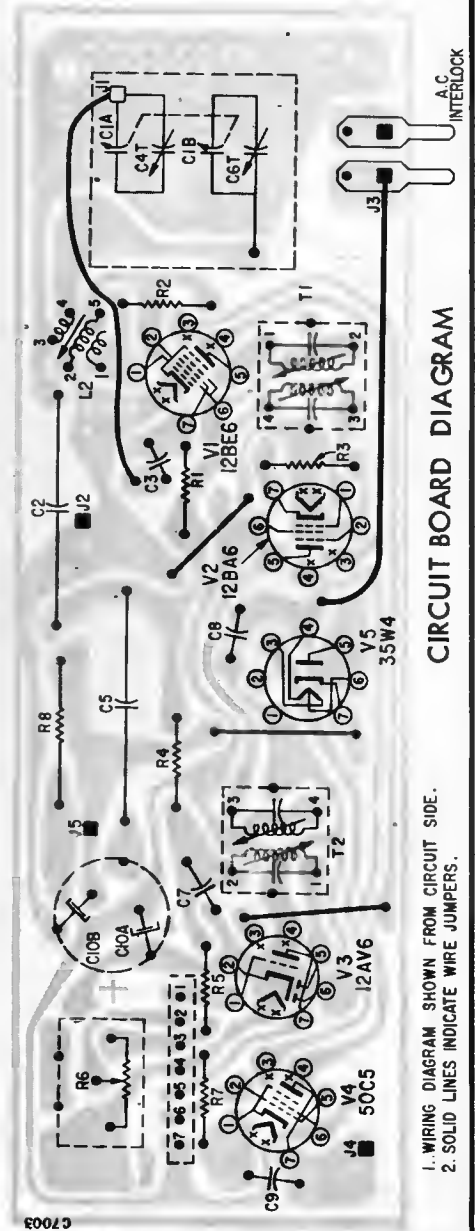


CIRCUIT BOARD DIAGRAM

1. WIRING DIAGRAM SHOWN FROM CIRCUIT SIDE.
2. SOLID LINES INDICATE WIRE JUMPERS.




SHARP ELECTRONICS CORP.

MODEL BP-374

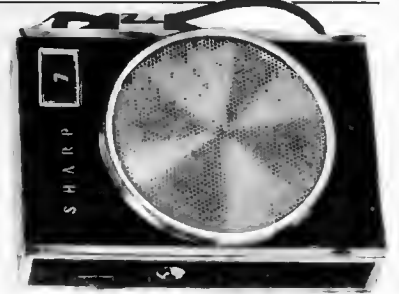


2SA337 2SA12 2SA12 2SB155 2SB155 2SB77 (x2)

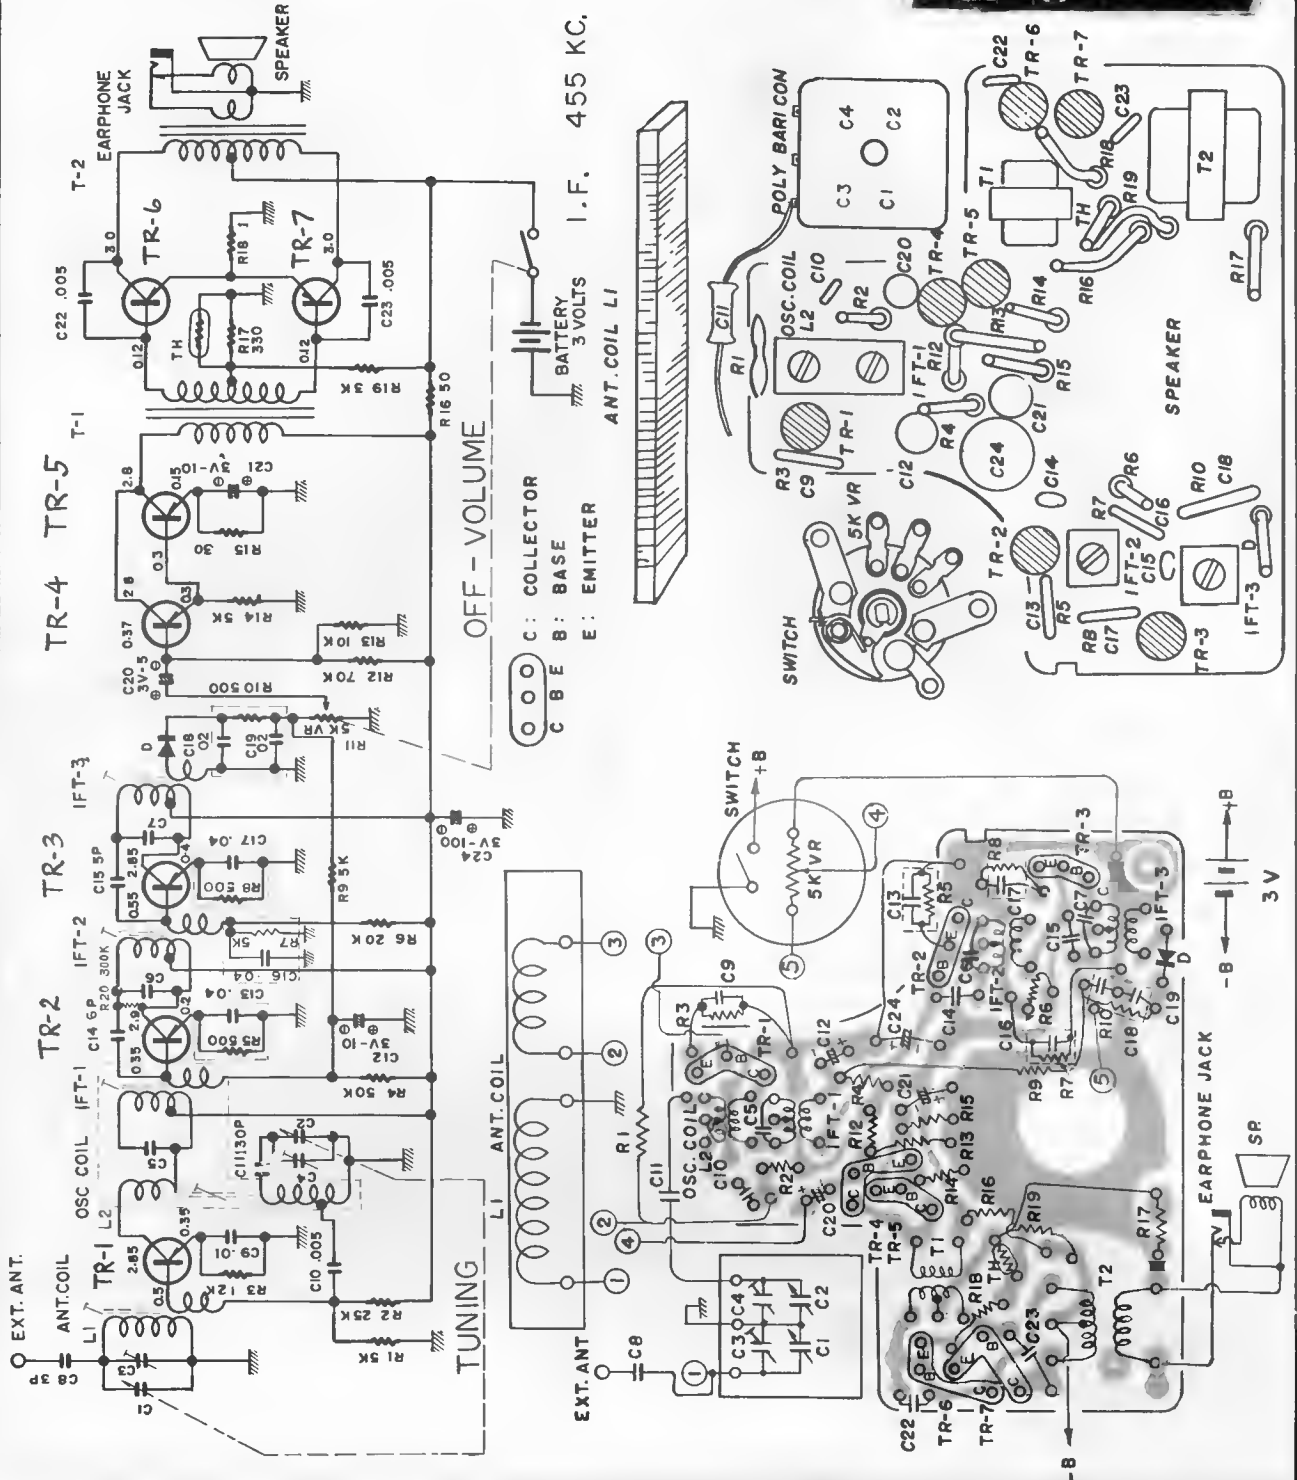




SHARP ELECTRONICS

MODEL BP-460

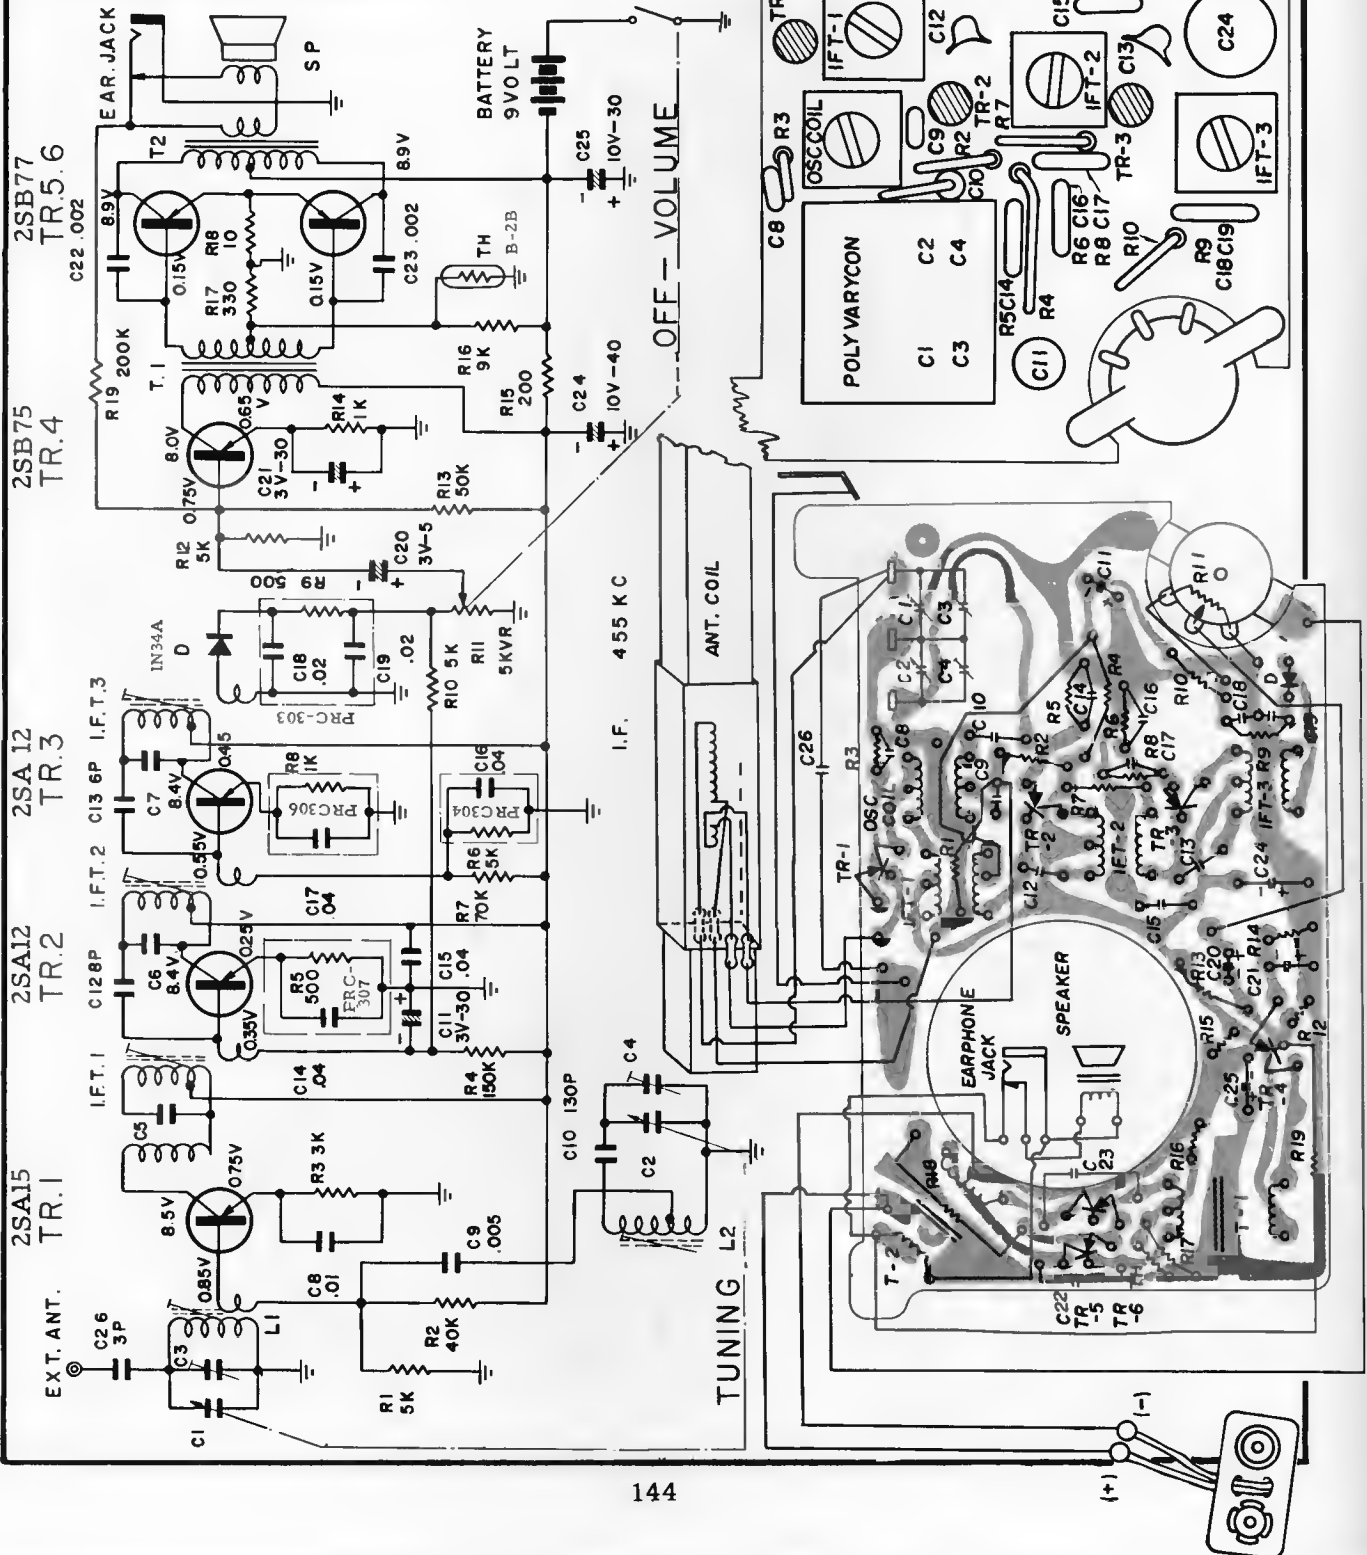


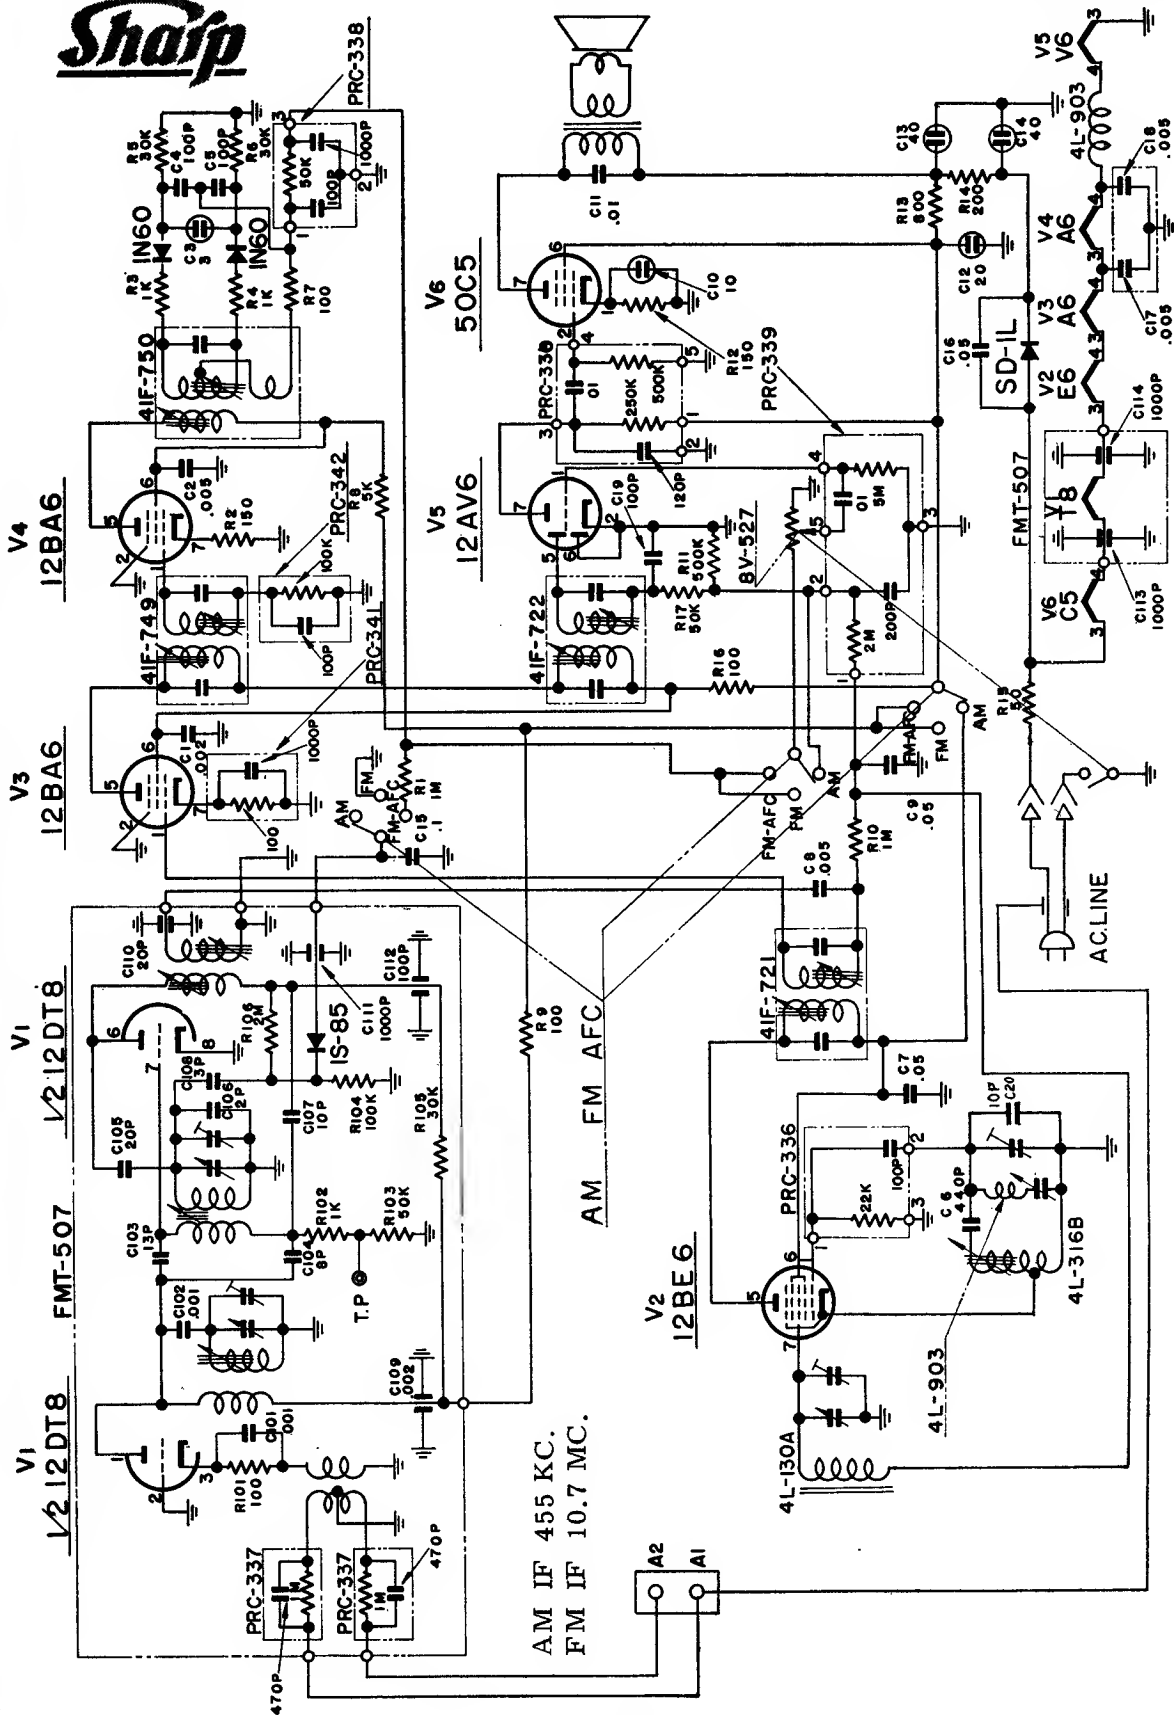

SHARP ELECTRONICS MODEL FMA-11


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

SHARP ELECTRONICS Model BP-485

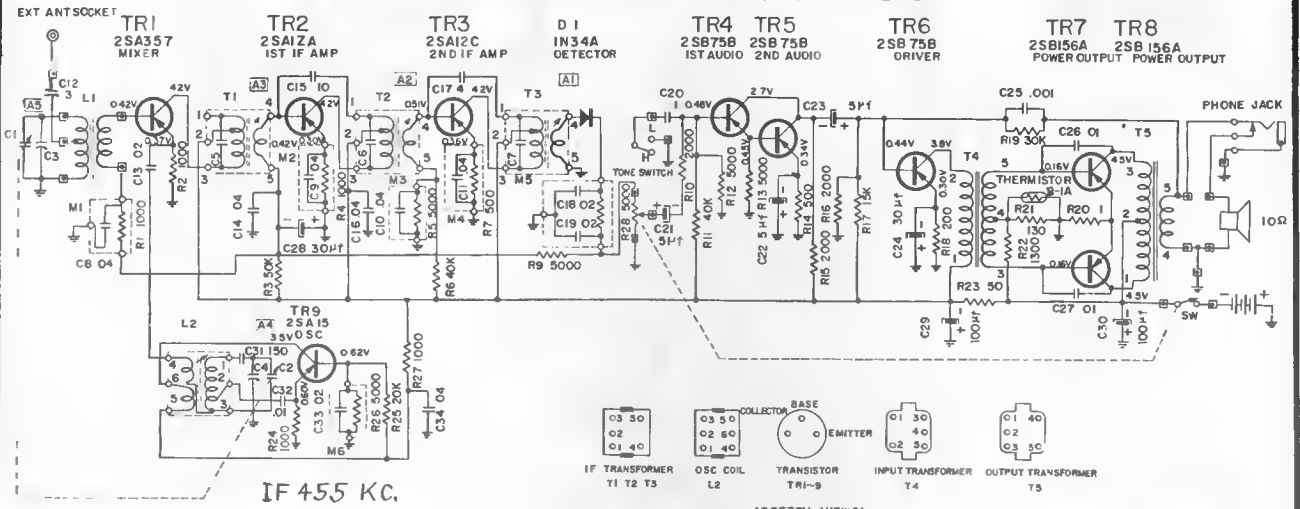

⊥ = COMMON GROUND
 [] = EXTERNAL CONNECTOR TO PRINTED CIRCUIT BOARD
 RESISTANCE VALUES ARE IN OHMS. K=1000.
 CAPACITANCE VALUES LESS THAN 10 ARE IN MICROFARADS(μF) AND VALUES GREATER THAN 10 ARE IN MICRO-MICROFARADS(pF) EXCEPT WHERE NO TEO
 CAPACITANCE READINGS TO COMMON GROUND(⊥) ARE MEASURED WITH VACUUM TUBE VOLTMETER UNDER NO SIGNAL CONDITIONS.
 TOTAL BATTERY CURRENT DRAIN UNDER NO SIGNAL CONDITIONS IS 11 TO 100 MA.


M1=C8 044R1 1000, M2=C9 044R4 1000, M3=C10 04+R5 5000, M4=C11 04+R7 5000, M5=C18 C19 02+R8 500, M6=C33 02+R26 5000.
 PRC-320 PRC-306 PRC-304 PRC-307 PRC-303 PRC-315

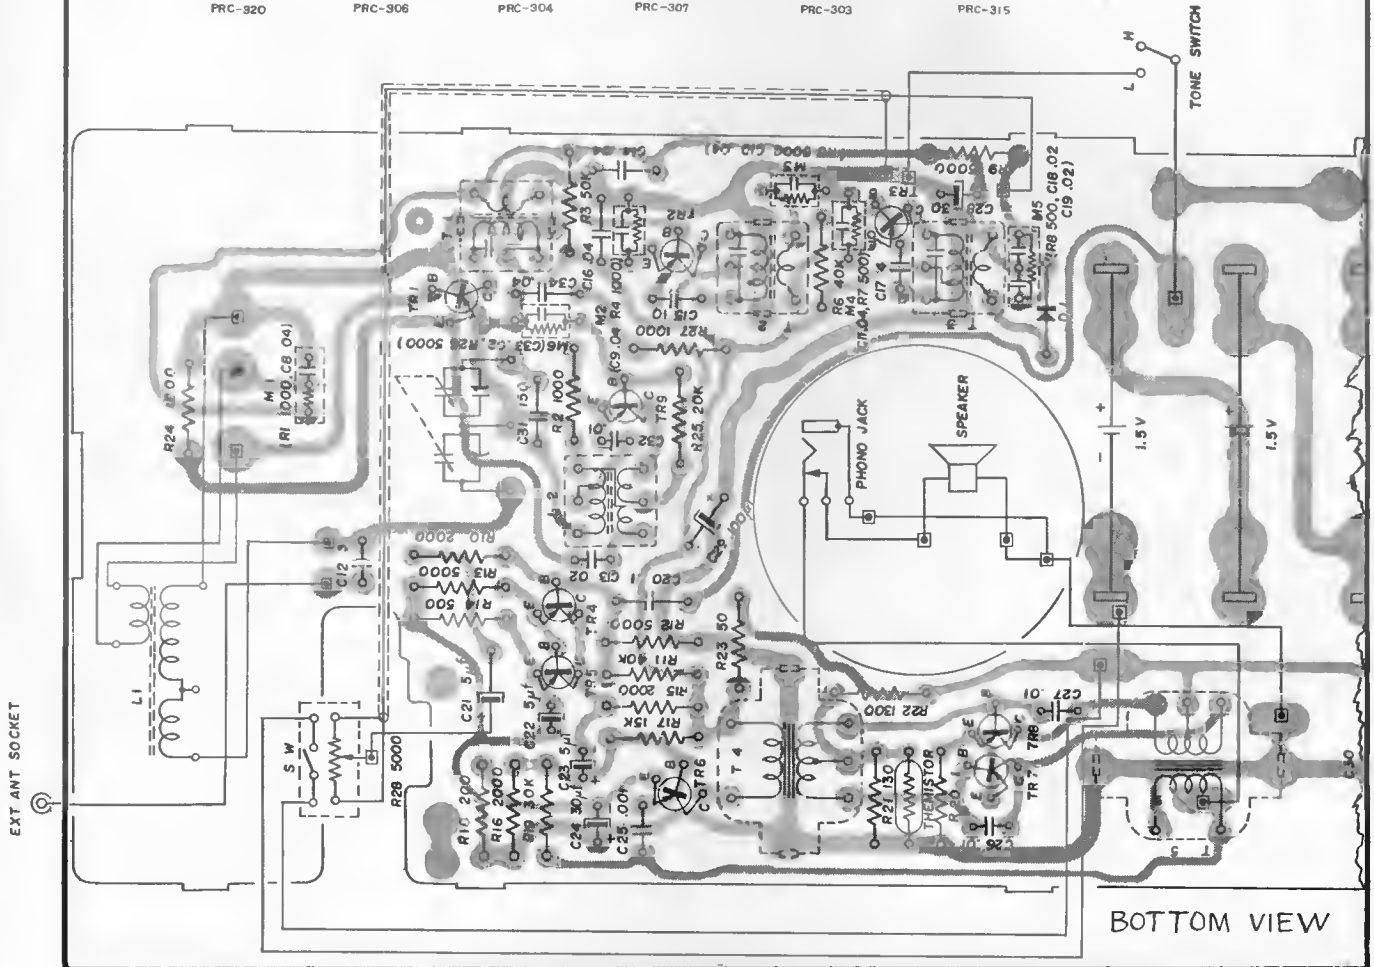

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


SONY CORPORATION

Model TR-8

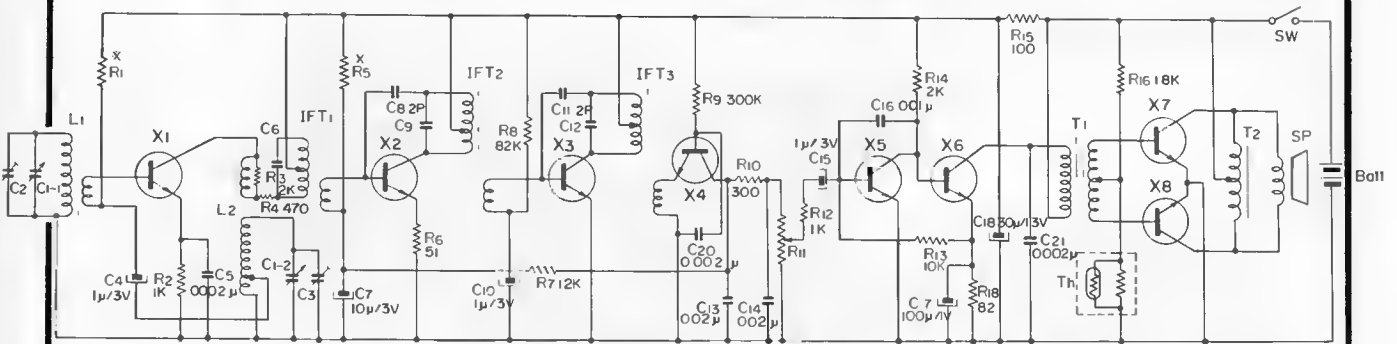

X To be adjusted


SONY TR-8

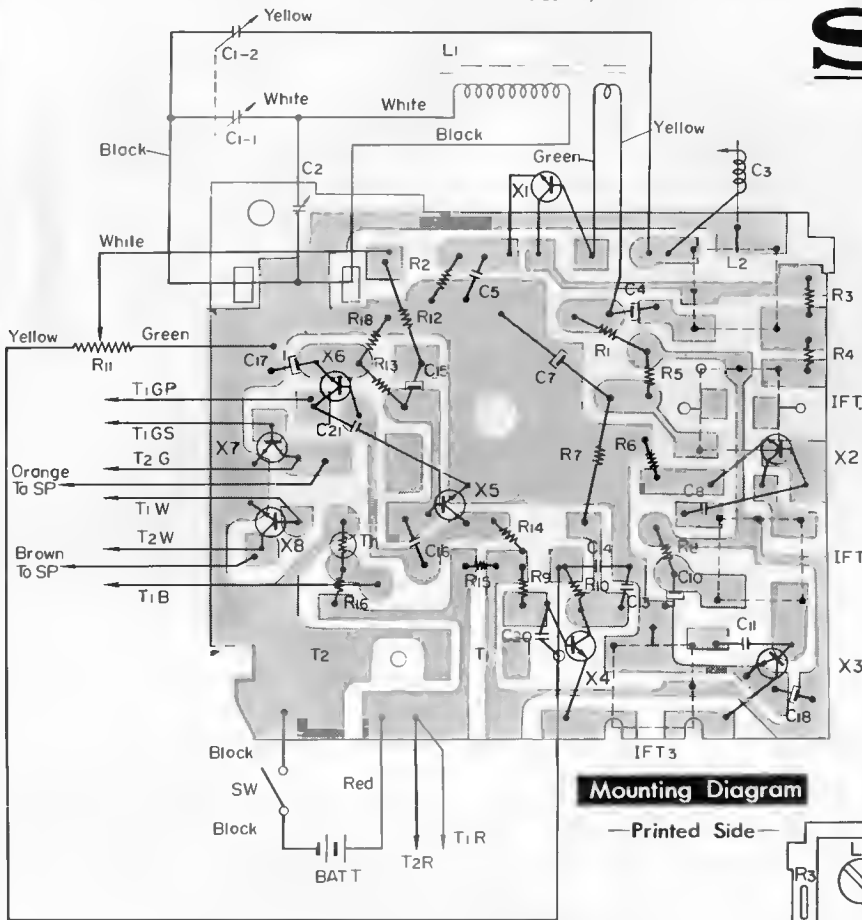


Mounting Diagram

—Printed Side—

Symbol	Description
L ₁	Ferrite Bar Antenna
L ₂	Oscillator Coil
IFT ₁	IF Transformer
IFT ₂	"
IFT ₃	"
T ₁	Driver Transformer
T ₂	Output Choke Coil
SP	Speaker
SW	Power Switch (built in VR)
Batt.	Mercury Battery (2.6 V)
X ₁	Transistor TX-128
X ₂	" TX-128
X ₃	" TX-128
X ₄	" TX-128
X ₅	" TX-128
X ₆	" TX-128
X ₇	" 2SD6
X ₈	" 2SD6
Th	Thermistor CS-120

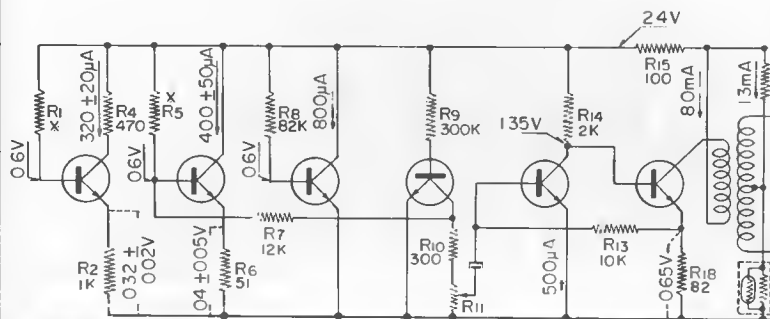

Voltage and Current Distribution Chart at Zero Signal

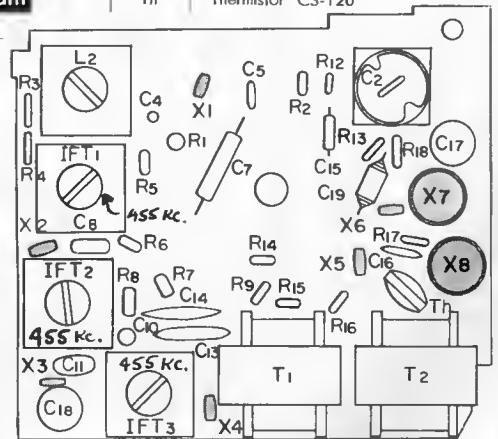



Mounting Diagram

—Parts Side—

SONY CORPORATION


Model TR-830

X1 2SC73 X3 2SC76 X4 2SC76 X5 2SD65 X6 2SD66 X7,8 2SD65

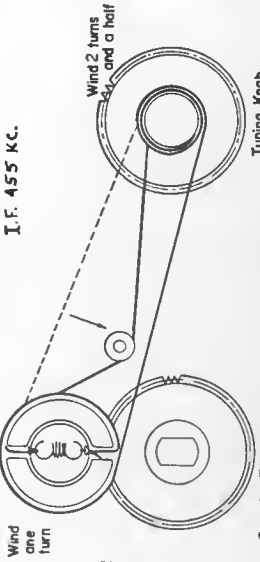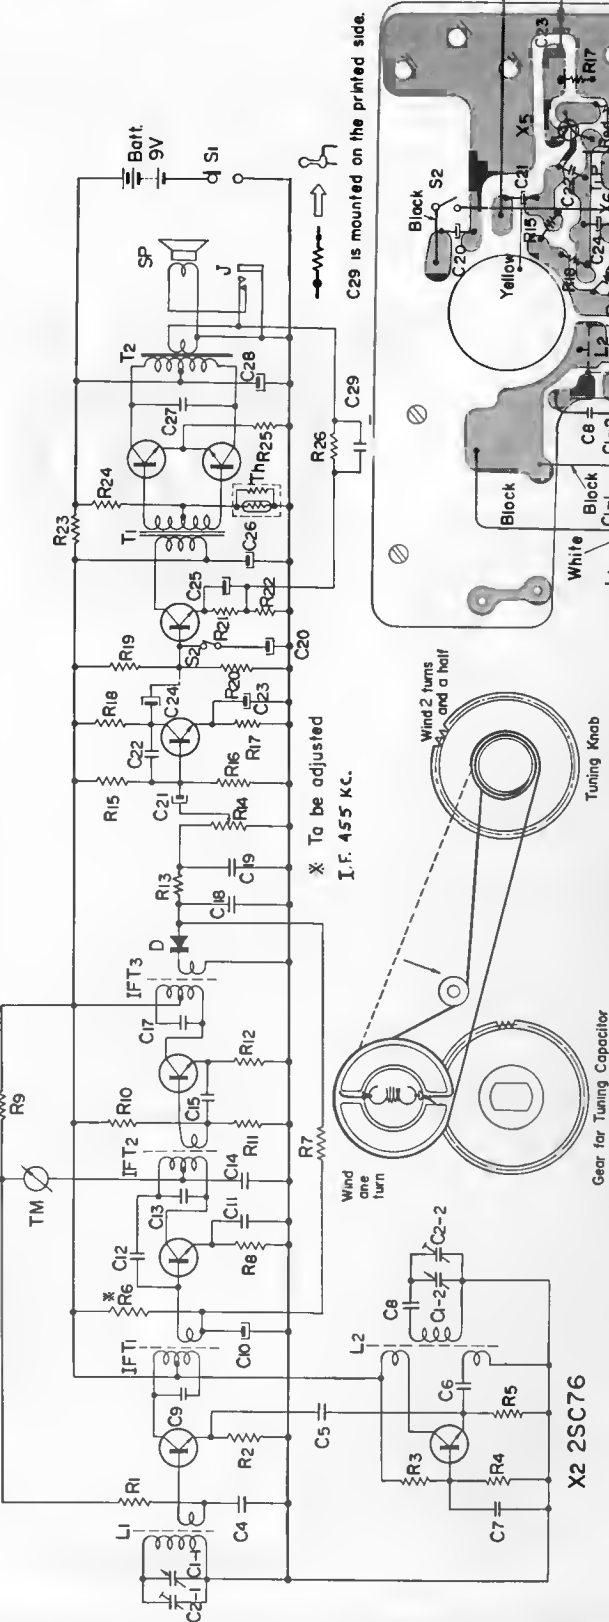

C29 is mounted on the printed side.

* To be adjusted I.F. 455 kc.



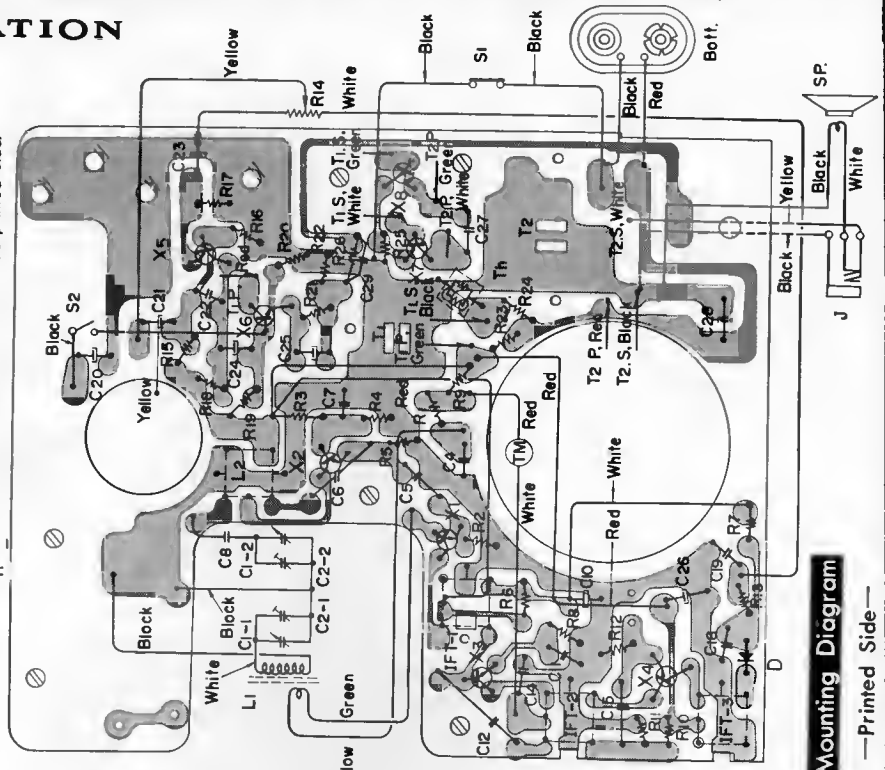


Mounting Diagram
—Printed Side—

Symbol	Description	Symbol	Description	Symbol	Description
D	Diode 1T23G	R16	5.6K Ω	C10	10 μ F 3V Electrolytic
Th	Thermistor CS-120	R17	1K Ω	C11	0.02 μ F Ceramic
R1	Resistor 10K Ω $\frac{1}{8}$ W Carbon	R18	1K Ω	C12	1PF
R2	30K Ω "	R19	27K Ω	C13	150PF (built in IFT ₂)
R3	39K Ω $\frac{1}{8}$ W Carbon	R20	10K Ω	C14	0.01 μ F Ceramic
R4	5.6K Ω "	R21	1K Ω	C15	0.01 μ F "
R5	2.2K Ω "	R22	10 Ω	C16	—deleted—
*R6	120K Ω "	R23	220 Ω	C17	150PF (built in IFT ₃)
R7	5.6K Ω "	R24	7.5K Ω	C18	0.02 μ F Ceramic
R8	470 Ω "	R25	10 Ω	C19	0.01 μ F "
R9	10K Ω "	R26	680 Ω	C20	0.3 μ F 15V Electrolytic
R10	39K Ω "	C1-1-2	Tuning Capacitor, 2 gang	C21	10 μ F 3V "
R11	3.3K Ω "	C2-1-2	Trimmer Capacitor, 2 unit	C22	0.005 μ F Mylar
R12	470 Ω "	C4	0.02 μ F Ceramic	C23	10 μ F 3V Electrolytic
R13	1.8K Ω "	C5	0.002 μ F Mylar	C24	10 μ F 6V "
R14	5K Ω Volume Control	C6	0.002 μ F "	C25	30 μ F 3V "
R15	36K Ω $\frac{1}{8}$ W Carbon	C7	0.01 μ F Ceramic	C26	30 μ F 10V "
	* To be adjusted	C8	130PF Styrol	C27	0.04 μ F Ceramic
		C9	150PF (built in IFT ₁)	C28	50 μ F 10V Electrolytic
				C29	0.02 μ F Ceramic

SYLVANIA

CHASSIS: 309-1

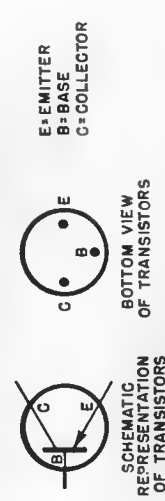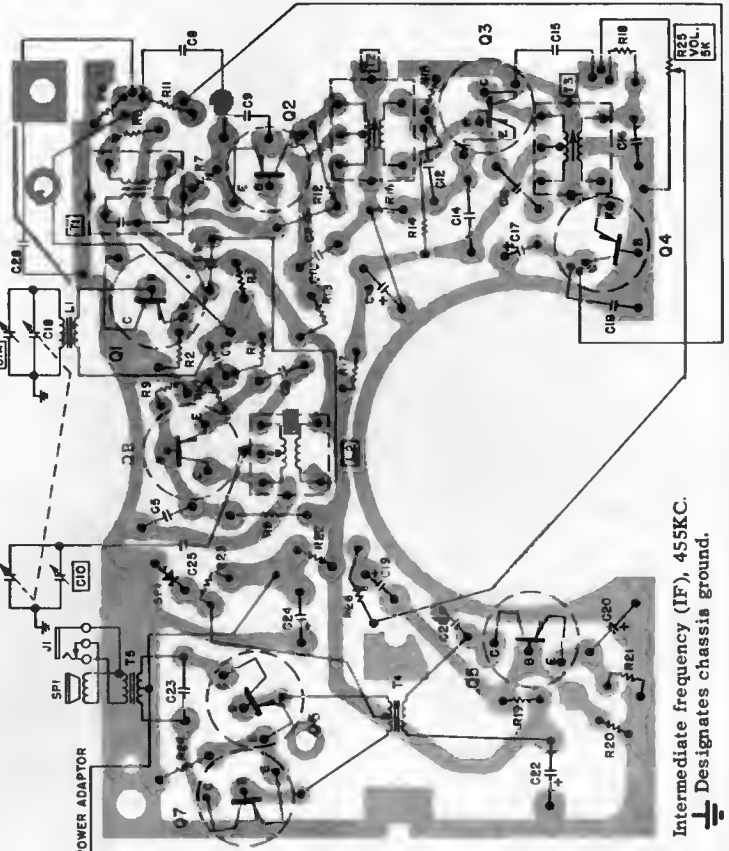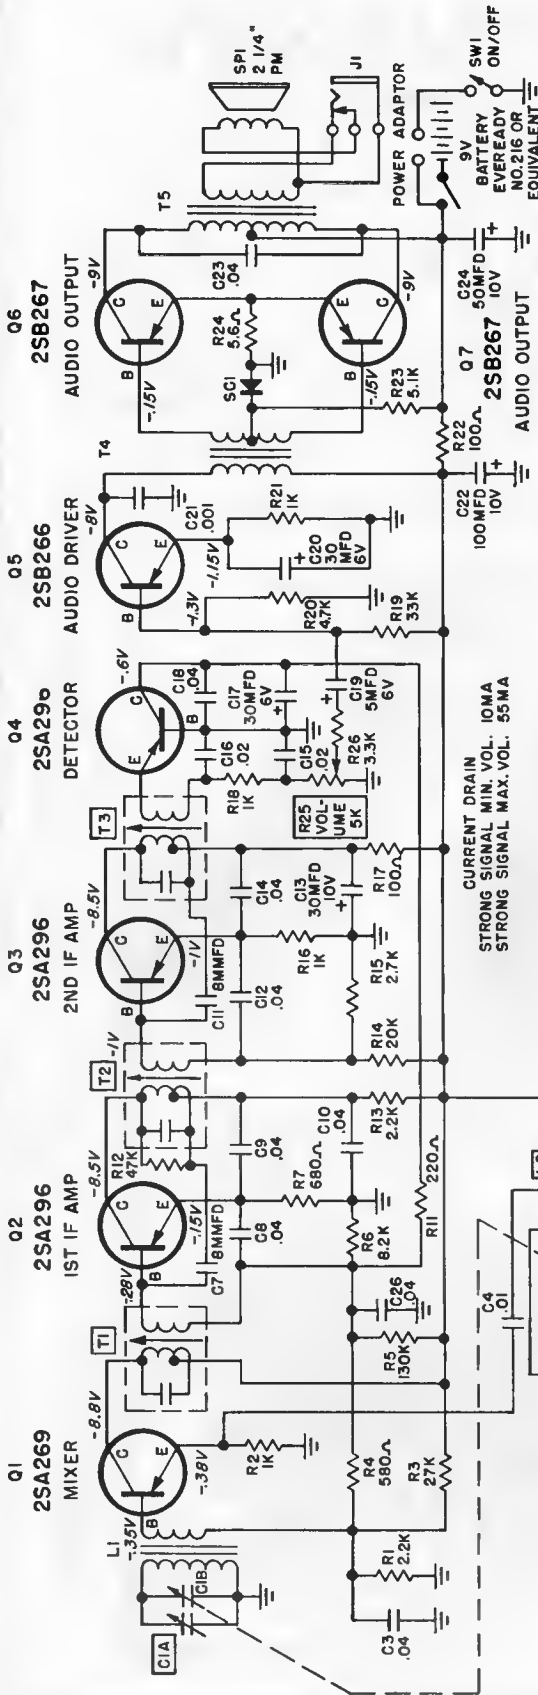

CHASSIS REMOVAL

1. Remove back cover by inserting a coin into the cover opening slot (located on bottom of case) and twist until cover is free. Lift off back cover.
2. Remove battery.
3. Remove the three (3) screws securing chassis to case.
4. Slide out the external power jack and carefully lift out chassis and lay to one side of case.
5. To replace chassis reverse the above procedure.

SYLVANIA


CHASSIS: 324-1

CHASSIS REMOVAL

1. Remove back cover by inserting a coin into the cover opening slot (located on bottom of case) and twist until cover is free. Lift off back cover.
2. Remove battery.
3. Remove the two (2) screws located near the corners of the chassis and loosen the screw securing the clamp on the speaker field. Remove the clamp.
4. Slide out the external power jack and carefully lift out chassis and lay to one side of the case.
5. To replace chassis reverse the above procedure.


BATTERY COMPLEMENT

EVEREADY number 216
 RAY - O - VAC number 1604
 MALLORY number TR146R
 OR EQUIVALENT TYPE BATTERIES.

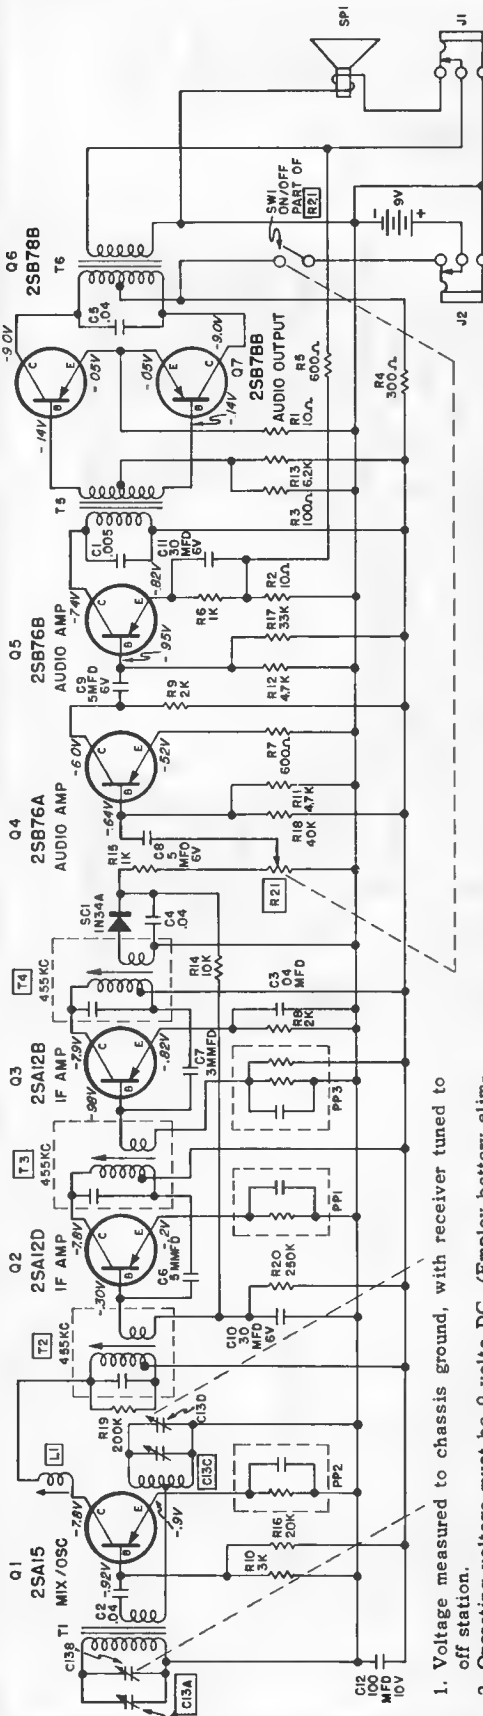

BATTERY: 9V EVEREADY
 NO 216 OR EQUIVALENT
 MIN CURRENT DRAIN 8MAOC
 MAX CURRENT DRAIN 50MAOC

1. Voltage measured to chassis ground, with receiver tuned to off station.
2. Operating voltage must be 9 volts DC. (Employ battery eliminator)
3. Voltages shown are average readings. Variations may be noted due to normal production tolerance.
4. All capacitors in microfarads unless otherwise specified.

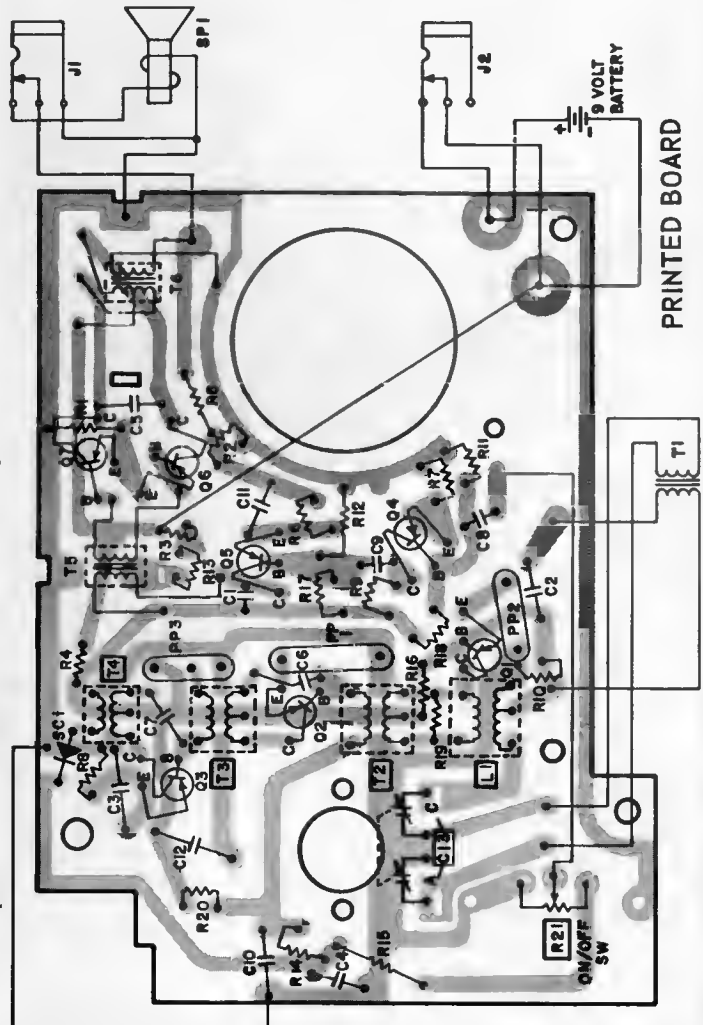


SYLVANIA

CHASSIS: 408-1,-2

MODELS SC508K, M, TG, W, SC511M, W


MODEL
SC511M, W

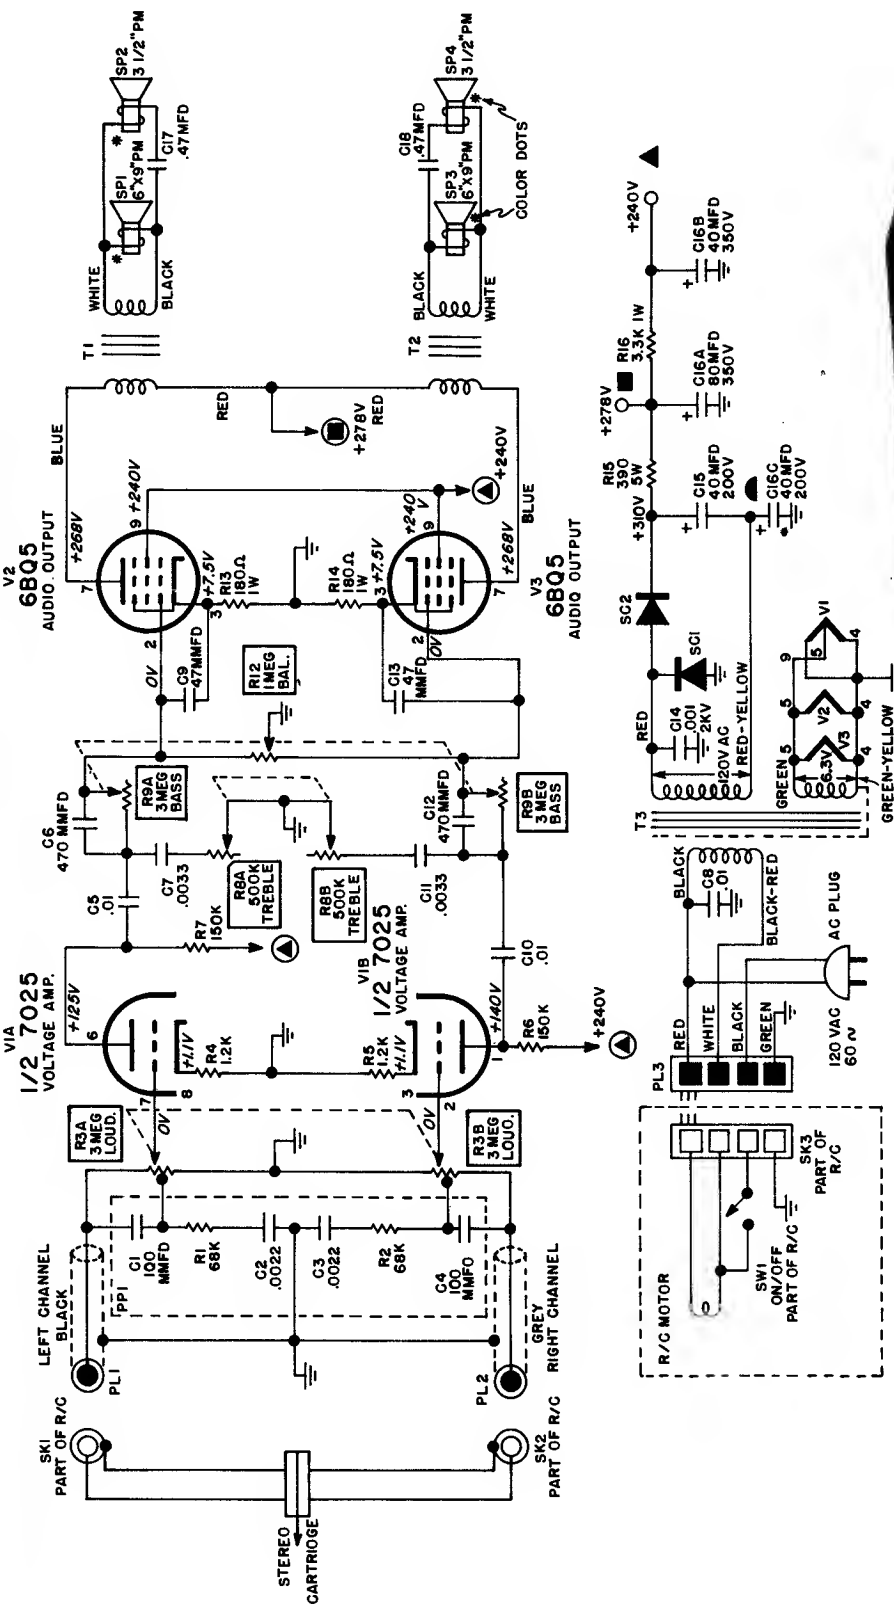


— SCHEMATIC NOTES —

1. VOLTAGES SHOWN ARE AVERAGE READINGS MEASURED TO CHASSIS WITH NO SIGNAL INPUT. VARIATIONS MAY BE NOTED DUE TO NORMAL PRODUCTION TOLERANCE.
2. LINE VOLTAGE 120 VOLT, 60 CYCLE.
3. ALL CAPACITORS IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
4. VOLTAGE SOURCES ARE INDICATED BY SYMBOLS ▲ ; THE CORRESPONDING SYMBOLS WITH CIRCLES ⊙ INDICATE VOLTAGE TIE POINTS.
5. [R3], [R8] AND [R9] ARE DUAL CONTROLS.
6. ⊕ DESIGNATES CHASSIS GROUND.

SYLVANIA Tuner 370-1 used in Chassis 802-1, -2, and 803-1, -2

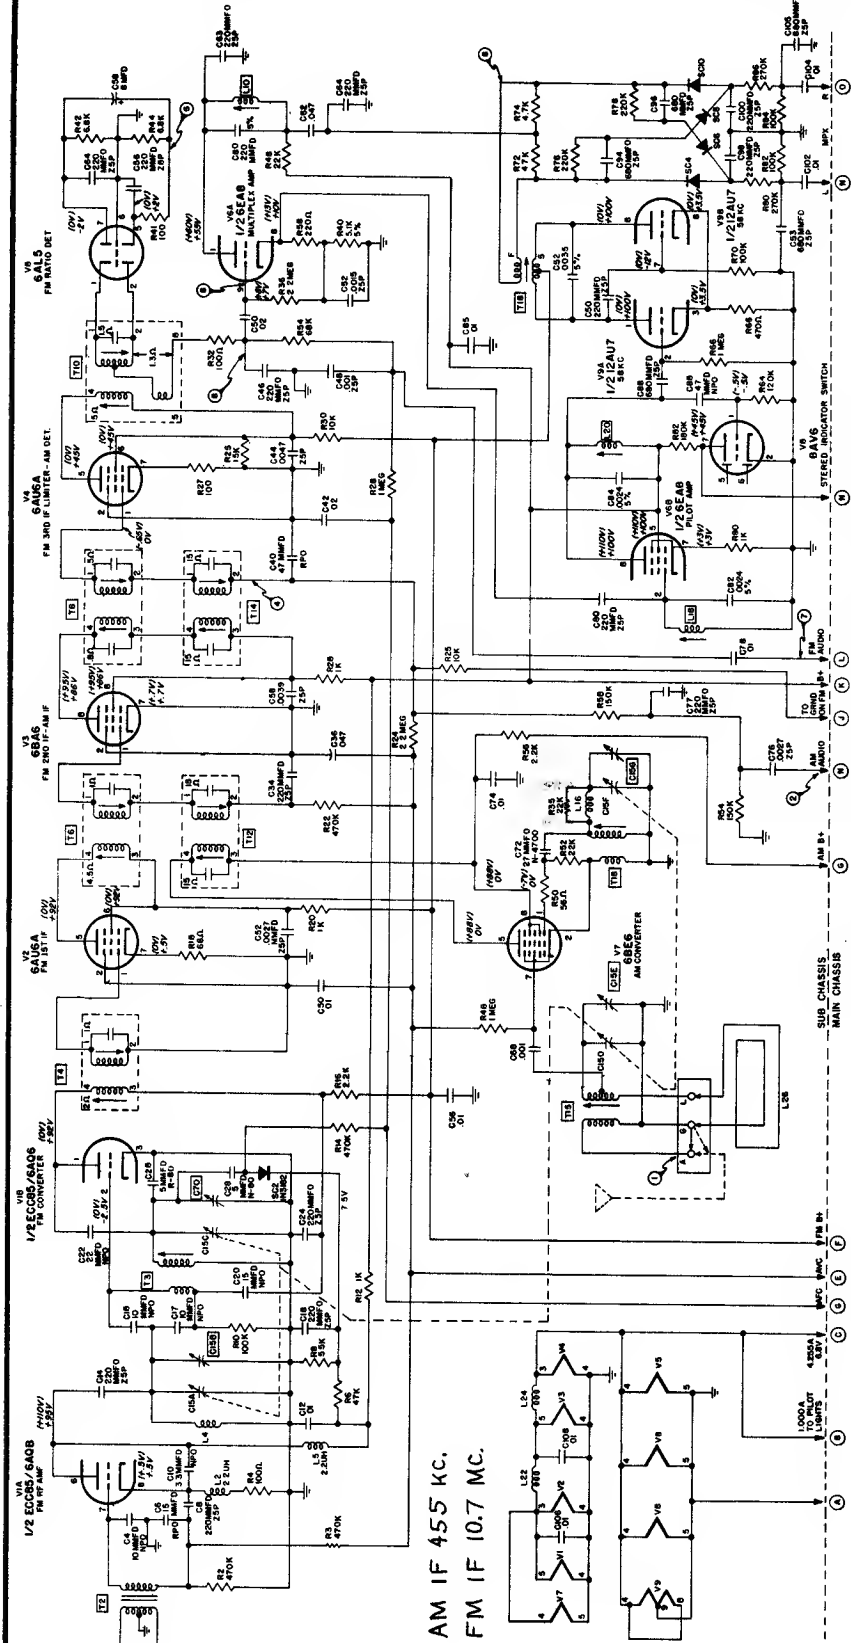

SCHEMATIC DIAGRAM 370-1 (AM/FM TUNER)

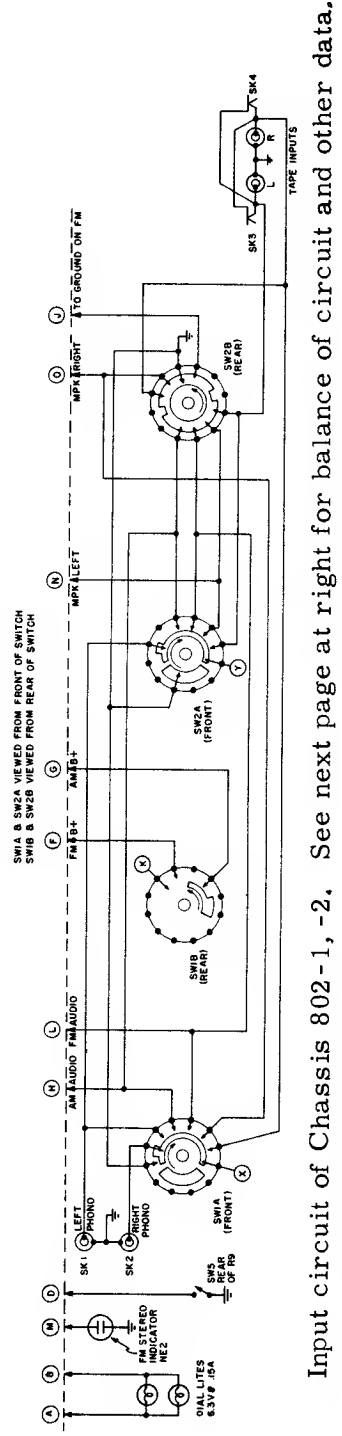



Input circuit of Chassis 802-1, -2. See next page at right for balance of circuit and other data.

SYLVANIA

CHASSIS: 802-1,-2

Models SC515M, W, SC521M, W, SC526K


For other material on these sets including Tuner 370-1 used, see preceding page.

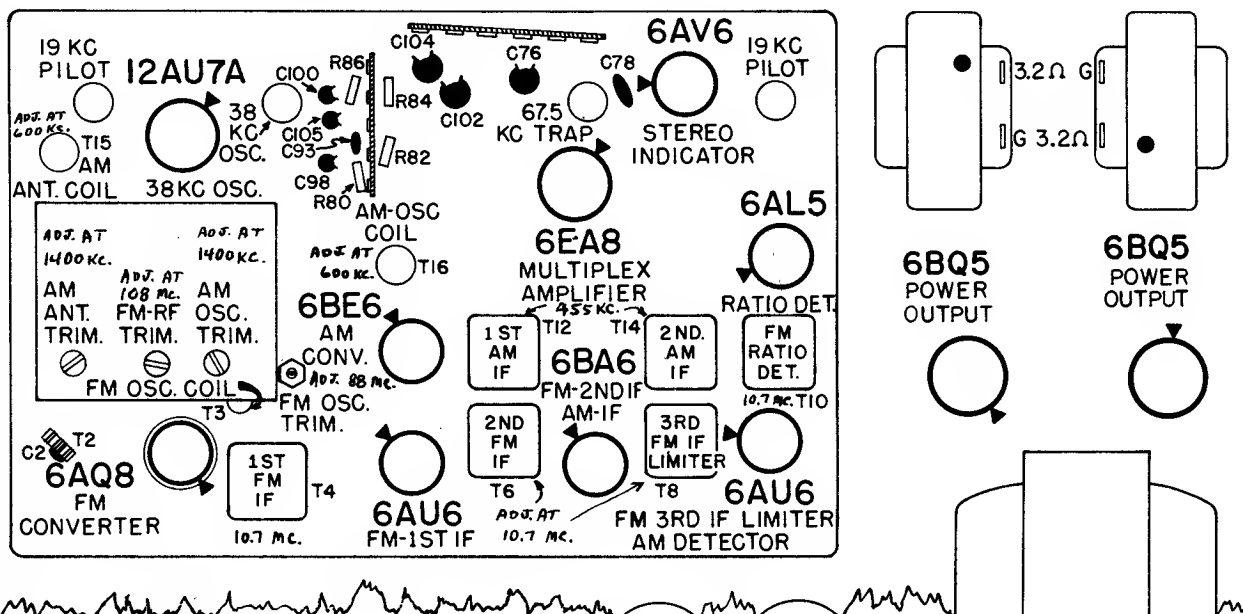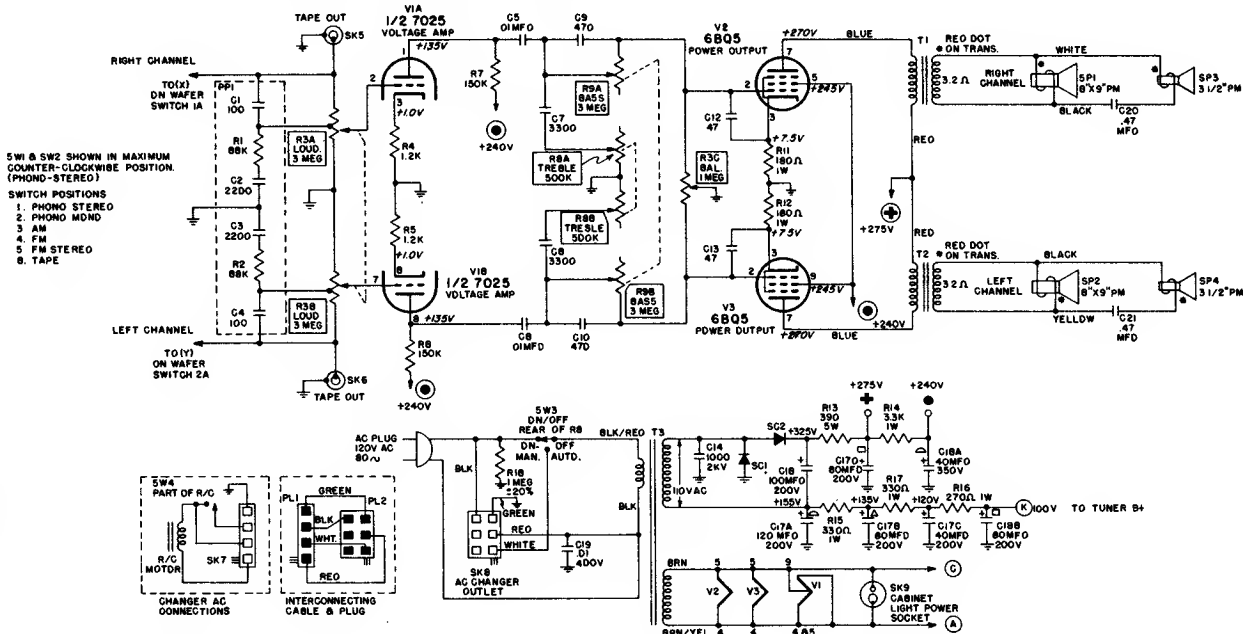

SYLVANIA

CHASSIS: 803-1, -2

MODELS SC541W, SC542CH, GN, M, SC543, SC561M, W
 (These models use Tuner 370-1, see page 152 for diagram)

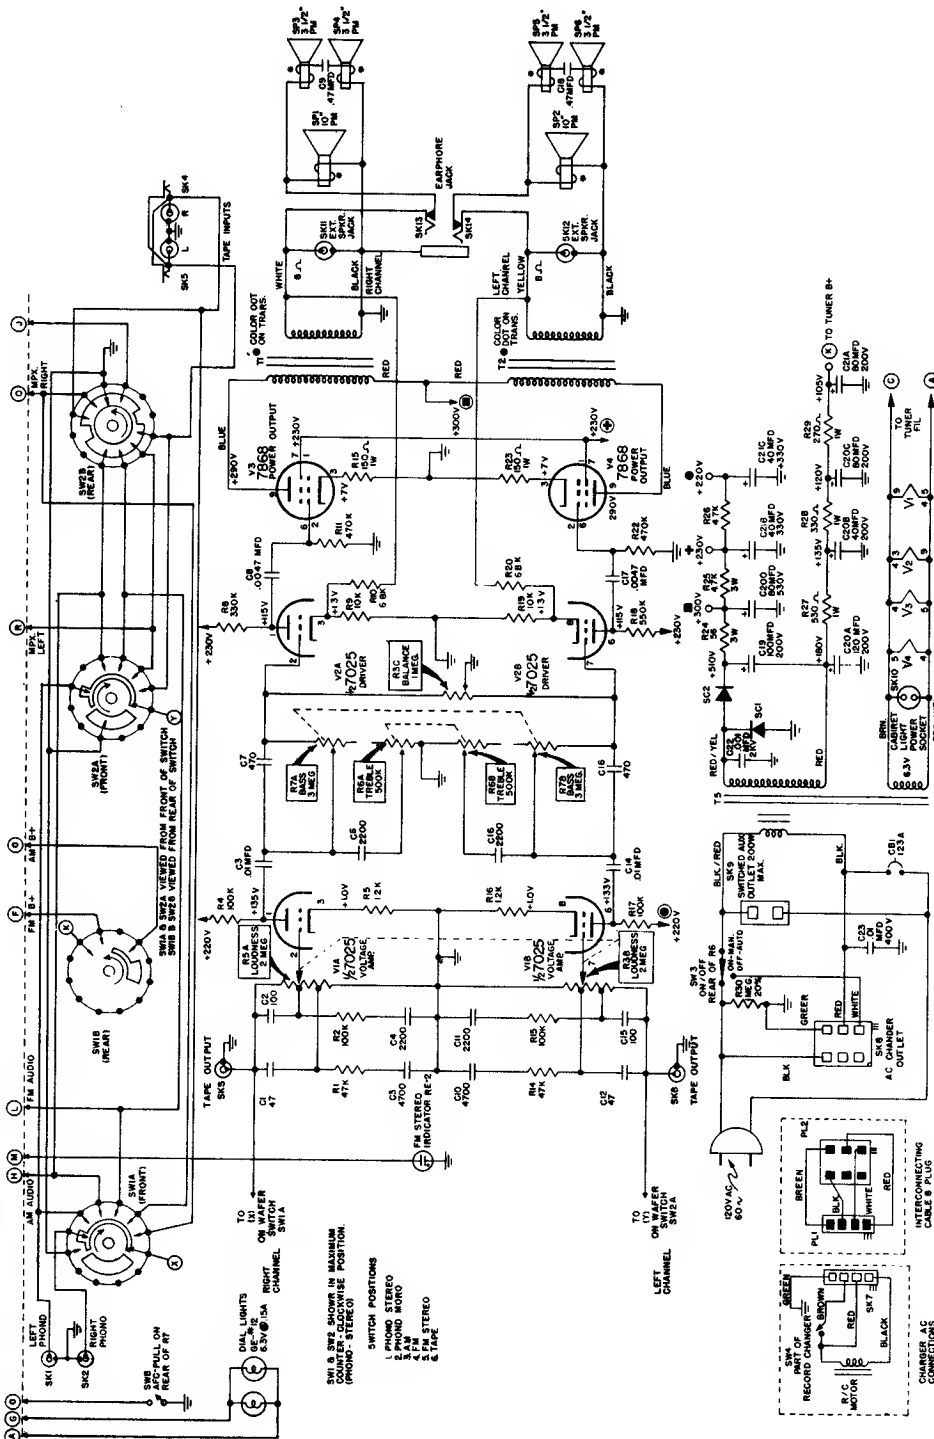


SCHEMATIC NOTES

1. VOLTAGES SHOWN ARE AVERAGE READINGS MEASURED TO CHASSIS WITH NO SIGNAL INPUT. VARIATIONS MAY BE NOTED DUE TO NORMAL PRODUCTION TOLERANCES.
2. AC POWER SOURCE 120 VOLT, 60 CYCLE.
3. CAPACITANCE IN MICROMICROFARADS UNLESS OTHERWISE SPECIFIED.
4. A VOLTAGE SOURCE IS INDICATED BY A SYMBOL ● ; THE


- CORRESPONDING SYMBOL WITH A CIRCLE ○ INDICATES THE VOLTAGE TIE POINT.
5. $\frac{1}{2}$ DESIGNATES CHASSIS GROUND.
 6. * INDICATES COLOR DOT ON SPEAKERS FOR CORRECT PHASING.
 7. [R3], [R6], [R7], ARE DUAL GANGED CONTROLS.

SYLVANIA

CHASSIS: 413-1
MODEL: 45P41 SERIES

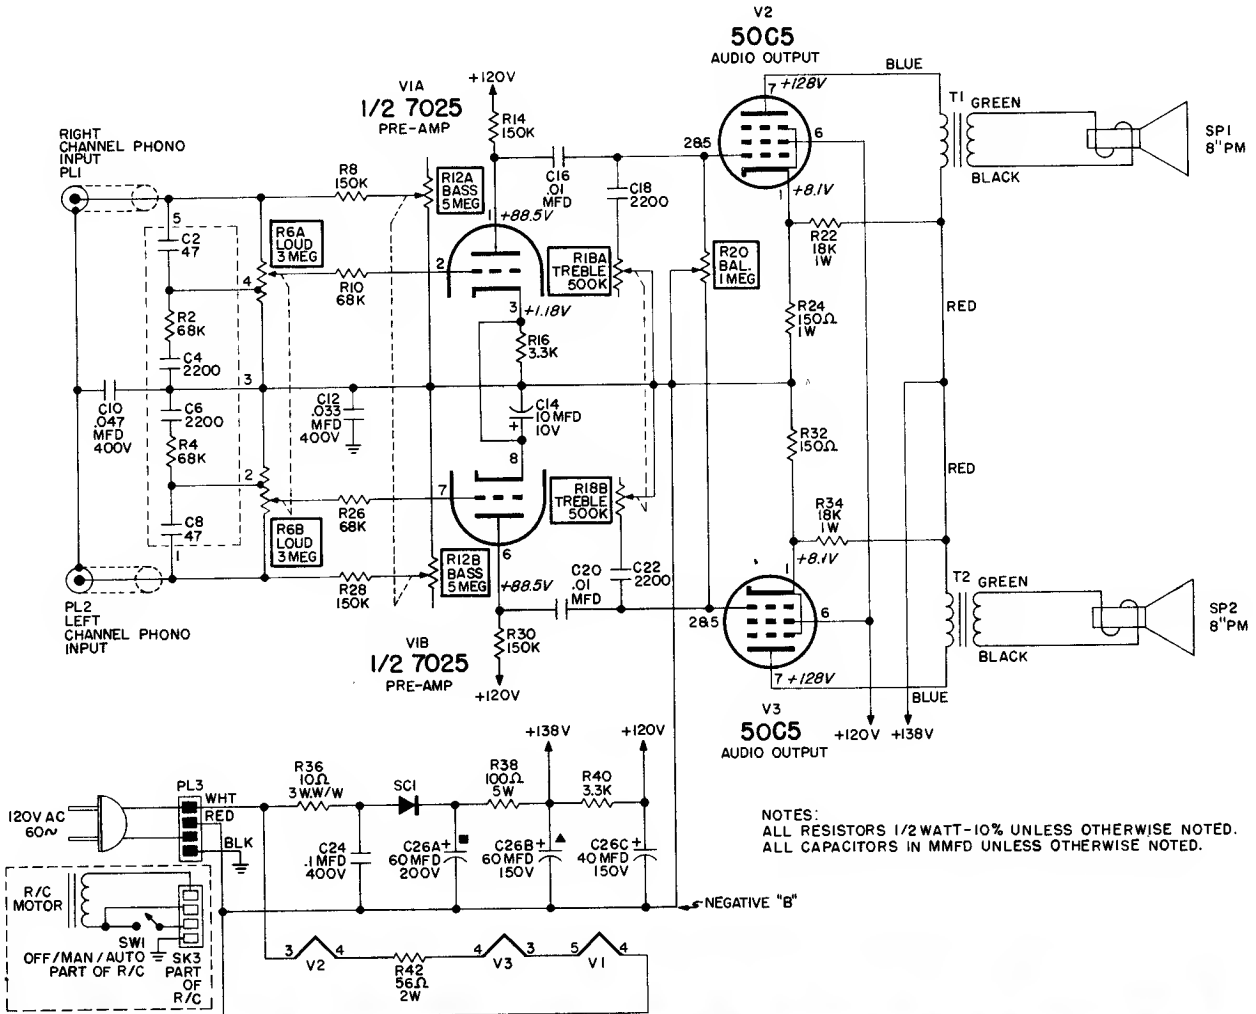


———— BOTTOM PARTS LAYOUT ————

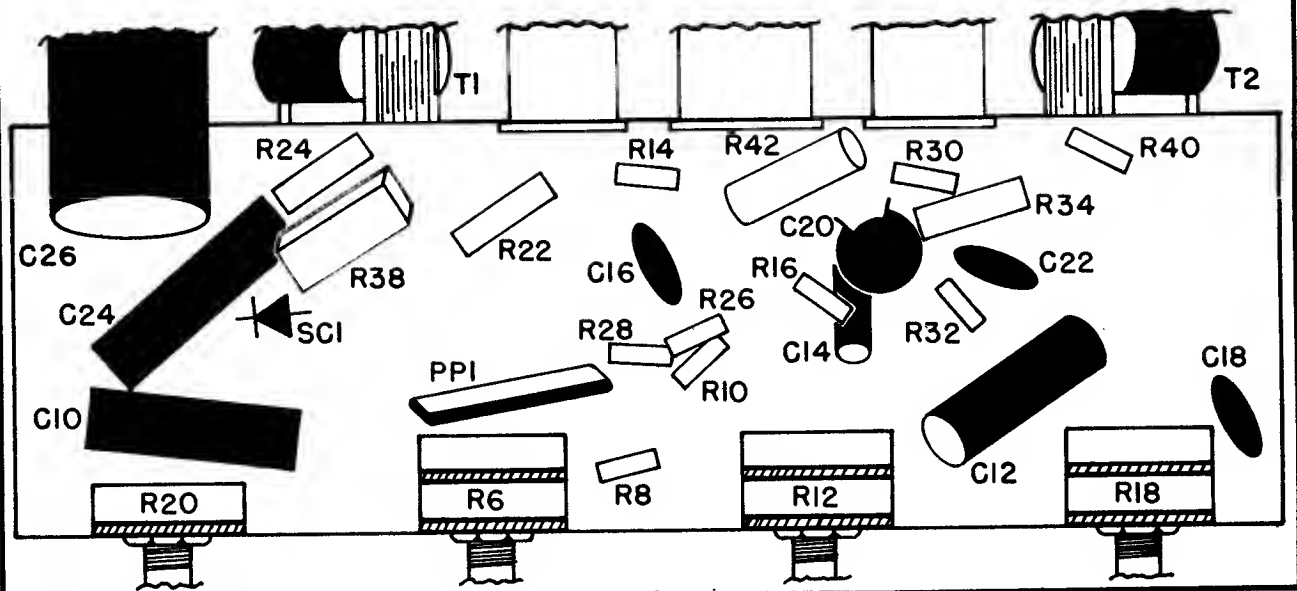

SYLVANIA


Tuner 371-1 used in Chassis 802-5, 803-5, see pages 157 and 158 for more material on this tuner and data on amplifiers used with these chassis.

SCHEMATIC DIAGRAM 371-1 (AM/FM TUNER)

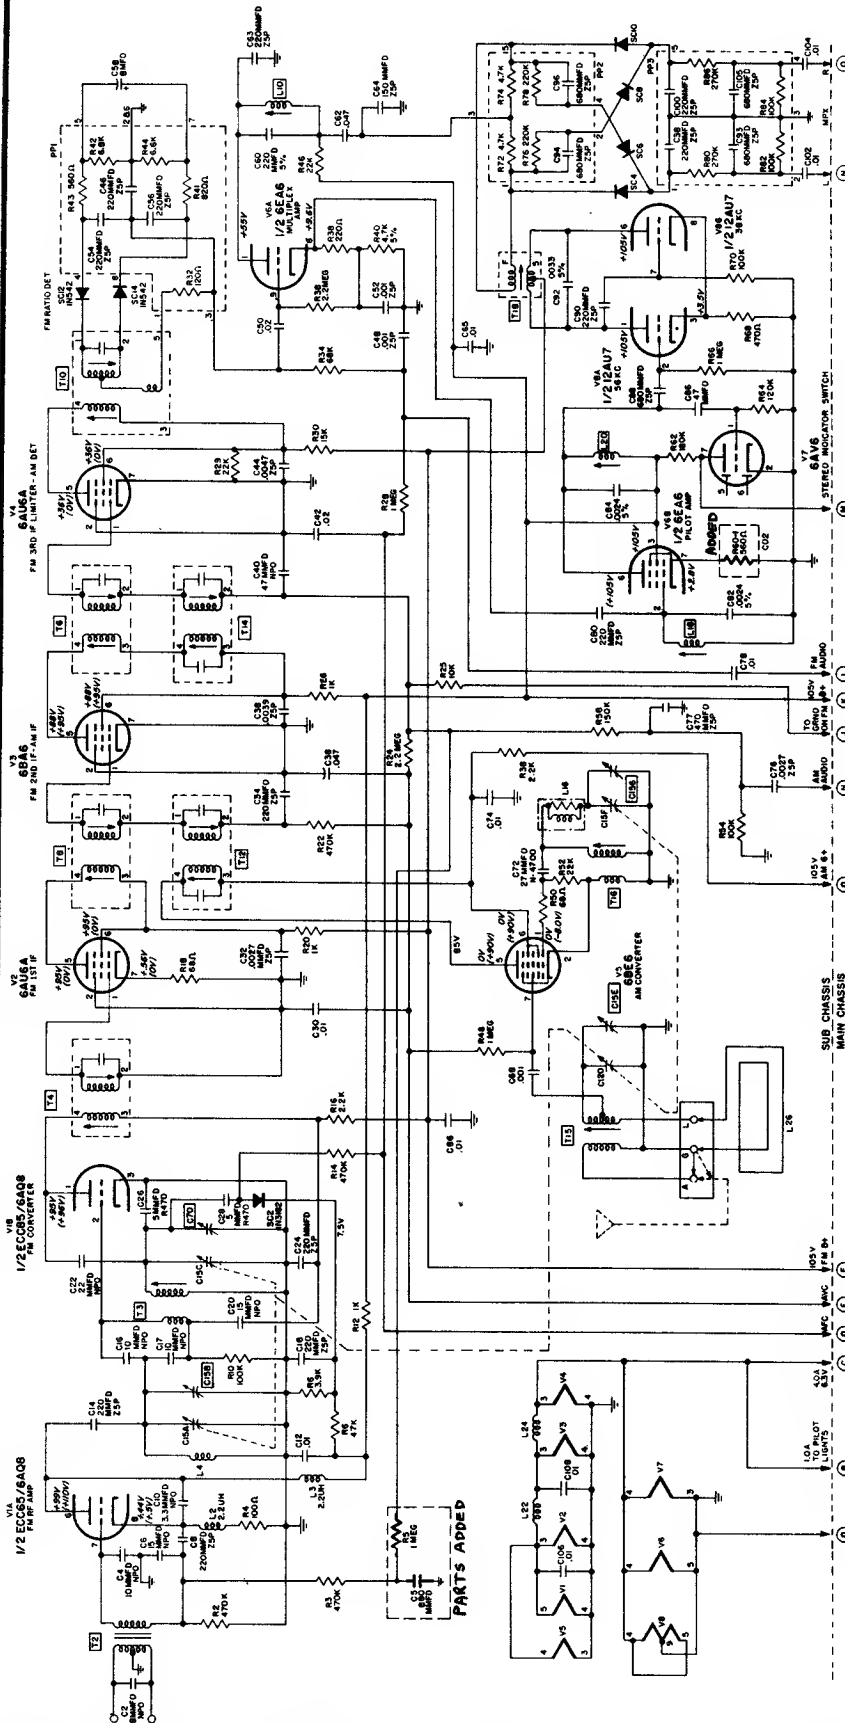

+100 IN AM SWITCH POS.
(+100V) IN FM "

DIAL STRINGING (371-1 CHASSIS)

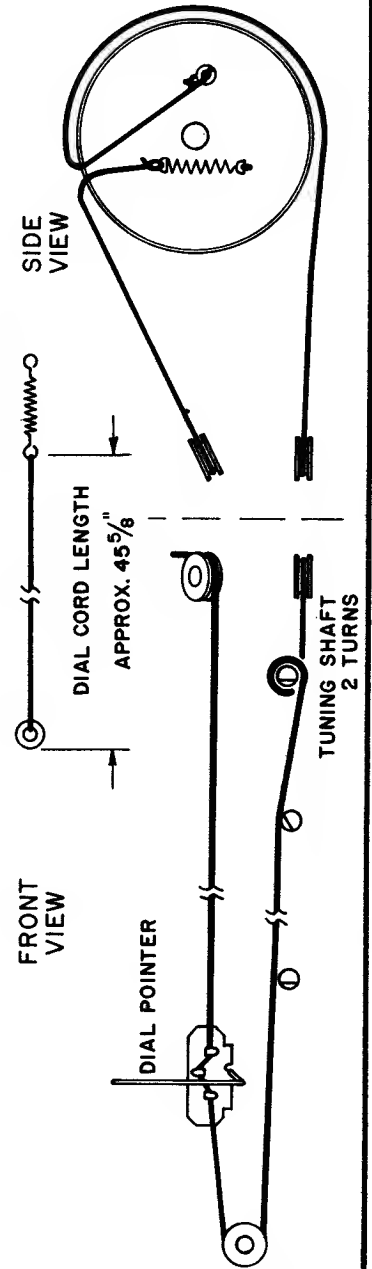

AM IF 455 KC.
FM IF 10.7 MC.

SYLVANIA

CHASSIS: 802-5

MODELS: SC721, SC724 SERIES



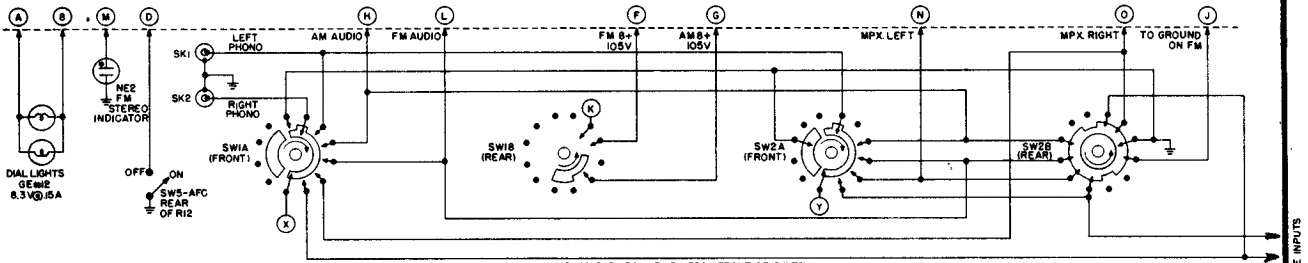


DIAGRAM 802-5

SW1A & SW2A VIEWED FROM FRONT OF SWITCH
SW1B & SW2B VIEWED FROM REAR OF SWITCH

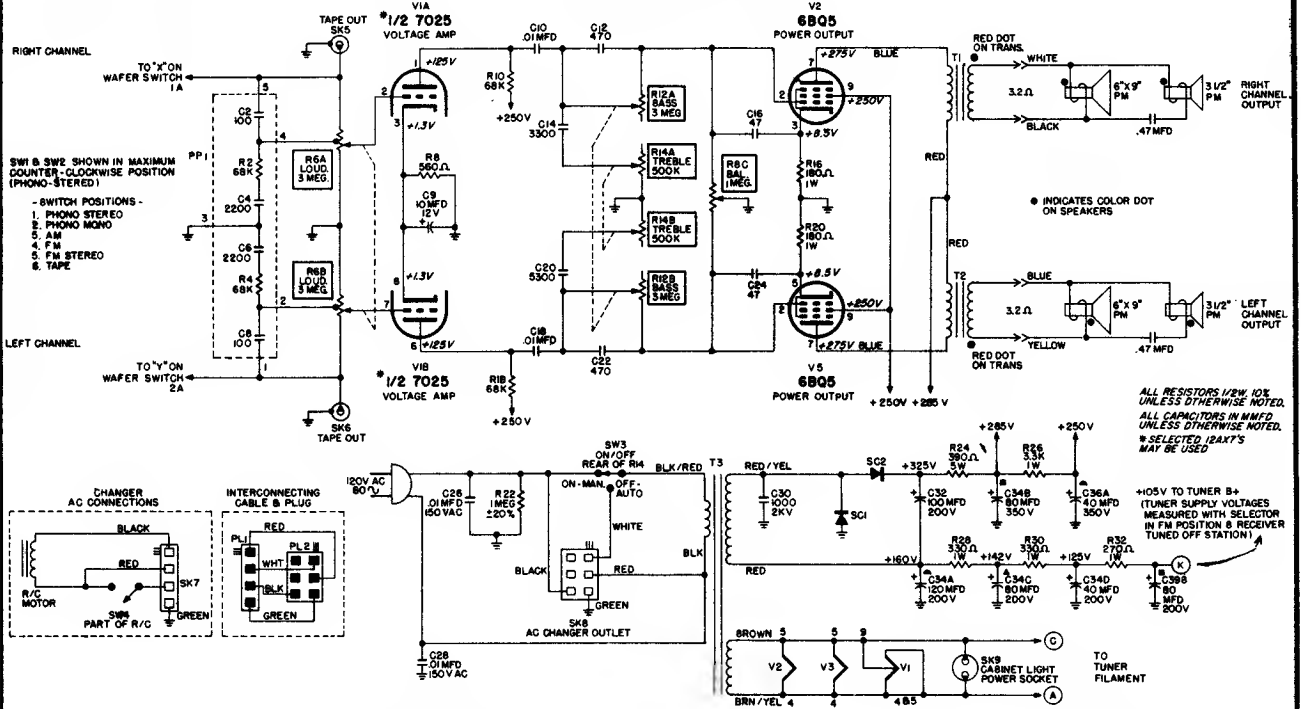

TOP PARTS LAYOUT (371-1)

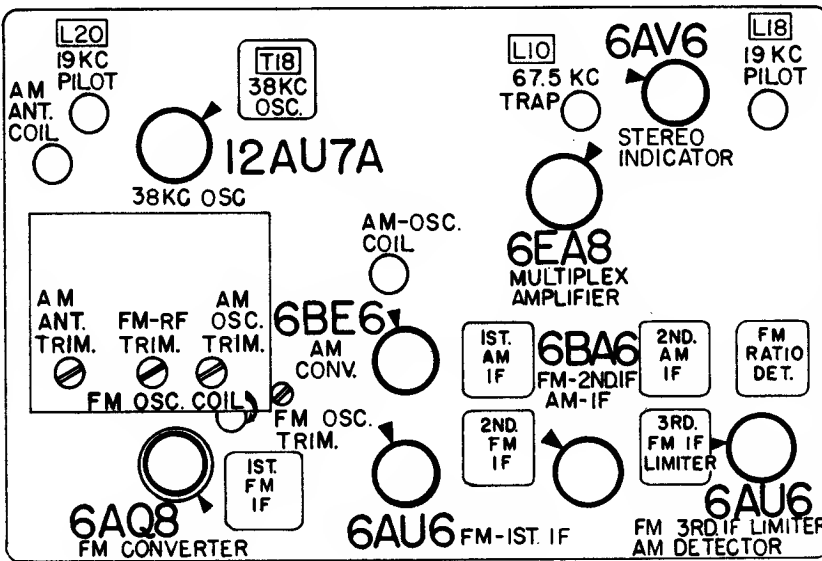

- CHASSIS REMOVAL**
1. Disconnect AC power cord from power outlet.
 2. Remove screws securing backcover to cabinet; remove back-cover.
 3. Identify and disconnect the following:
 - A. Speaker leads at output transformer.
 - B. Record changer motor plug on chassis.
 - C. Phono input leads on chassis.
 - D. Antenna lead connections on antenna terminal board.
 - E. Jewel indicating light connector at bottom rear of chassis.
 4. Remove screw anchoring AC line cord to the inside of the base of the cabinet.
 5. Remove the two (2) screws securing antenna terminal board to cabinet.
 6. Remove control knobs on the control panel by pulling straight up.
 7. Remove seven (7) screws securing chassis to cabinet and remove chassis from cabinet.


SYLVANIA

CHASSIS: 803-5

MODELS: SC740, SC741, SC743, SC744, SC746, SC748 SERIES

(These models use 371-1 AM-FM Tuner, see pages 156-157 for data)

SCHEMATIC DIAGRAM 803-5

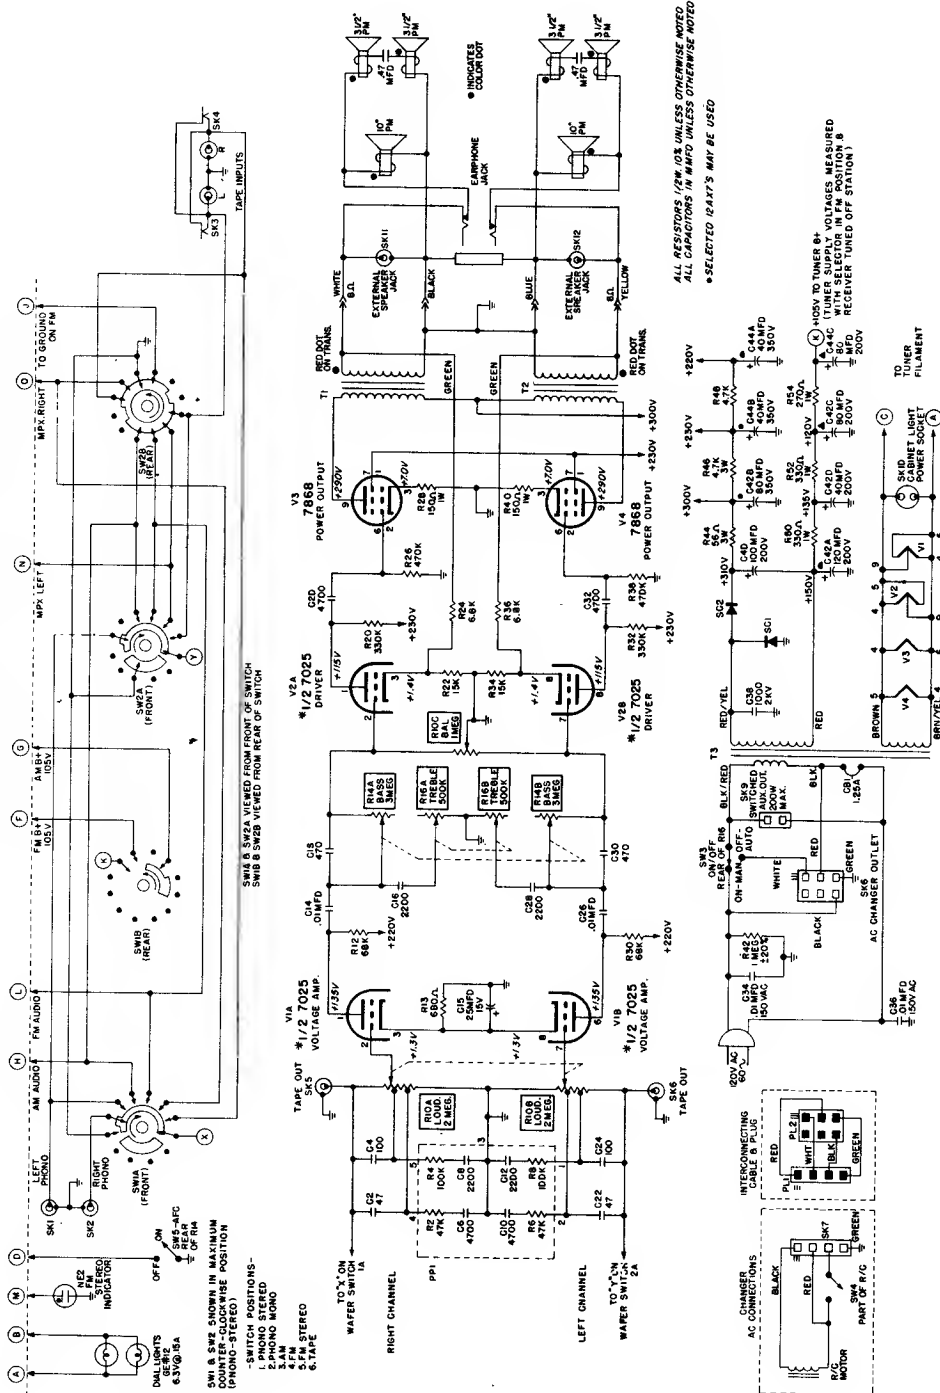


SCHEMATIC NOTES

1. Voltages shown are average readings measured to chassis with no signal input. Variations may be noted due to normal production tolerances.
2. AC power source 120 volt, 60 cycle.
3. Capacitance in micro-microfarads unless otherwise noted.
4. \oplus designates chassis ground.
5. \bullet indicates color dot on speakers for correct phasing.
6. **R10**, **R14**, **R16**, are dual ganged controls.




Westinghouse

MODEL
H-890P6P
CHASSIS V-2455-1

FUNCTION	TRANSISTOR	COMPLEMENT
CONVERTER	PNP 297V055H01	ALTERNATE 297V028H03
1ST I.F.	PNP 297V038H04	
2ND I.F.	PNP 297V038H03	
AUDIO DRIVER	PNP 297V051H02	ALTERNATE 297V004H06
AUDIO OUTPUT	PNP 297V050H01	ALTERNATE 297V023H04
MATCHED PAIR		

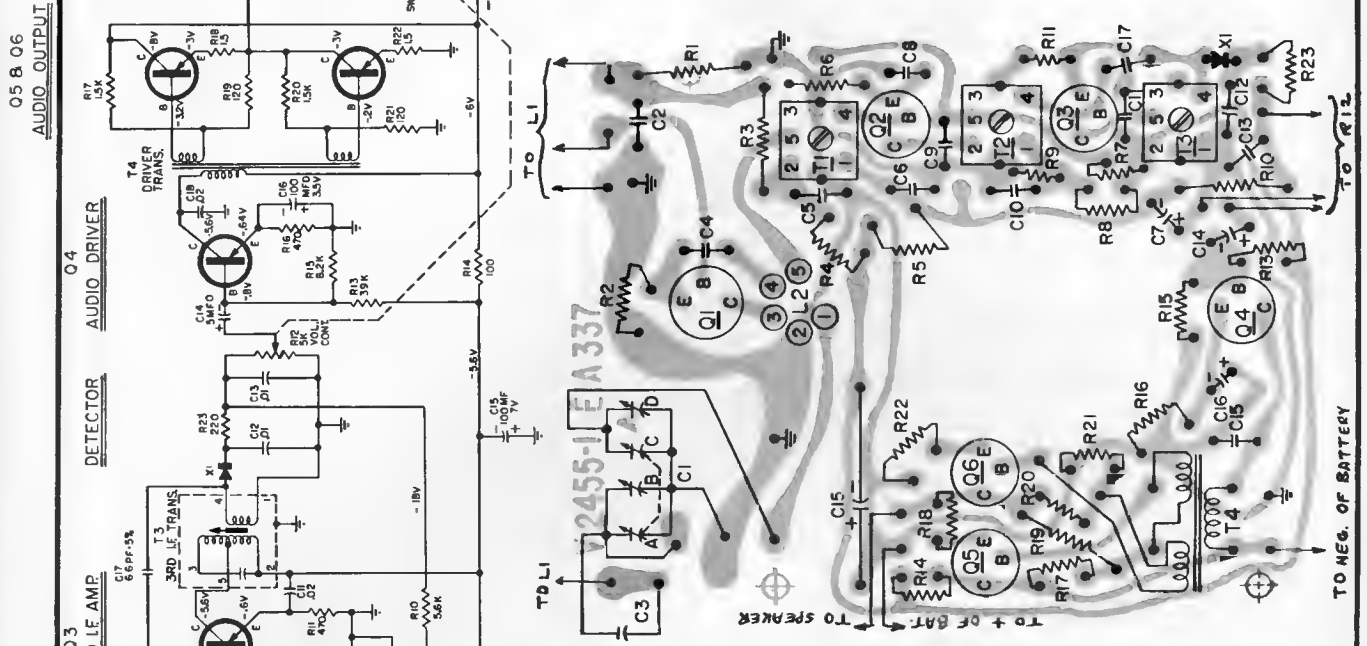

05 B 06
AUDIO OUTPUT

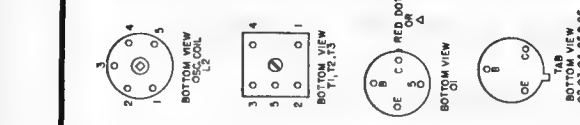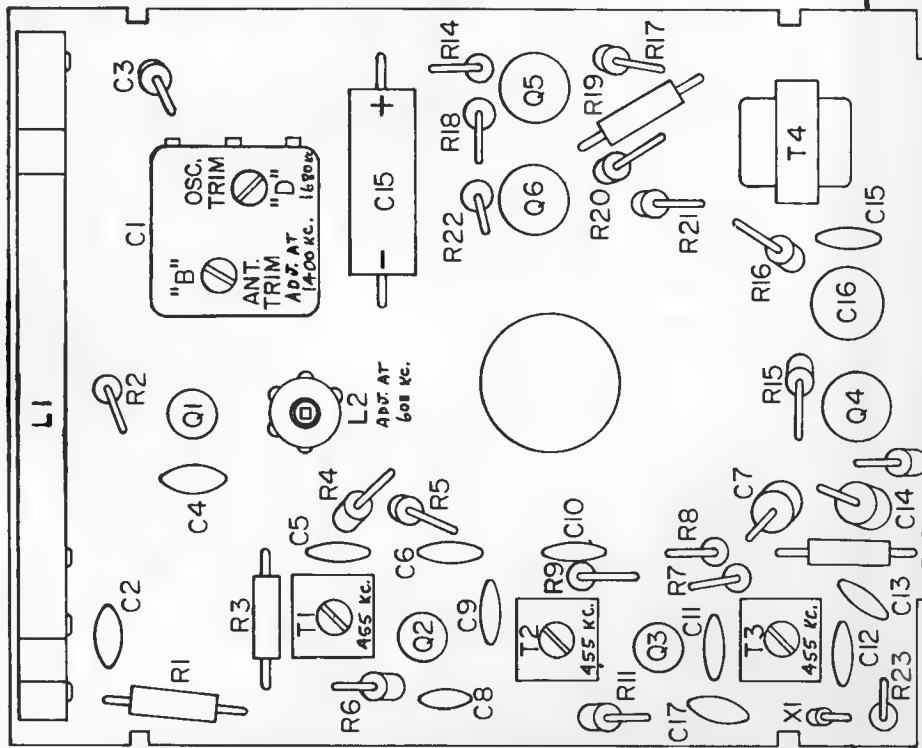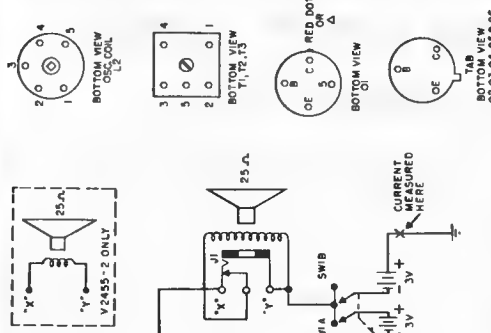


Westinghouse

MODELS H-898P8 H-899P8

CHASSIS V-2455-4


Also Models H-893P8GP, using Chassis V-2455-3, and Model H-897P8, using Chassis V-2455-5, are similar to V-2455-4 on this page and the page at right.

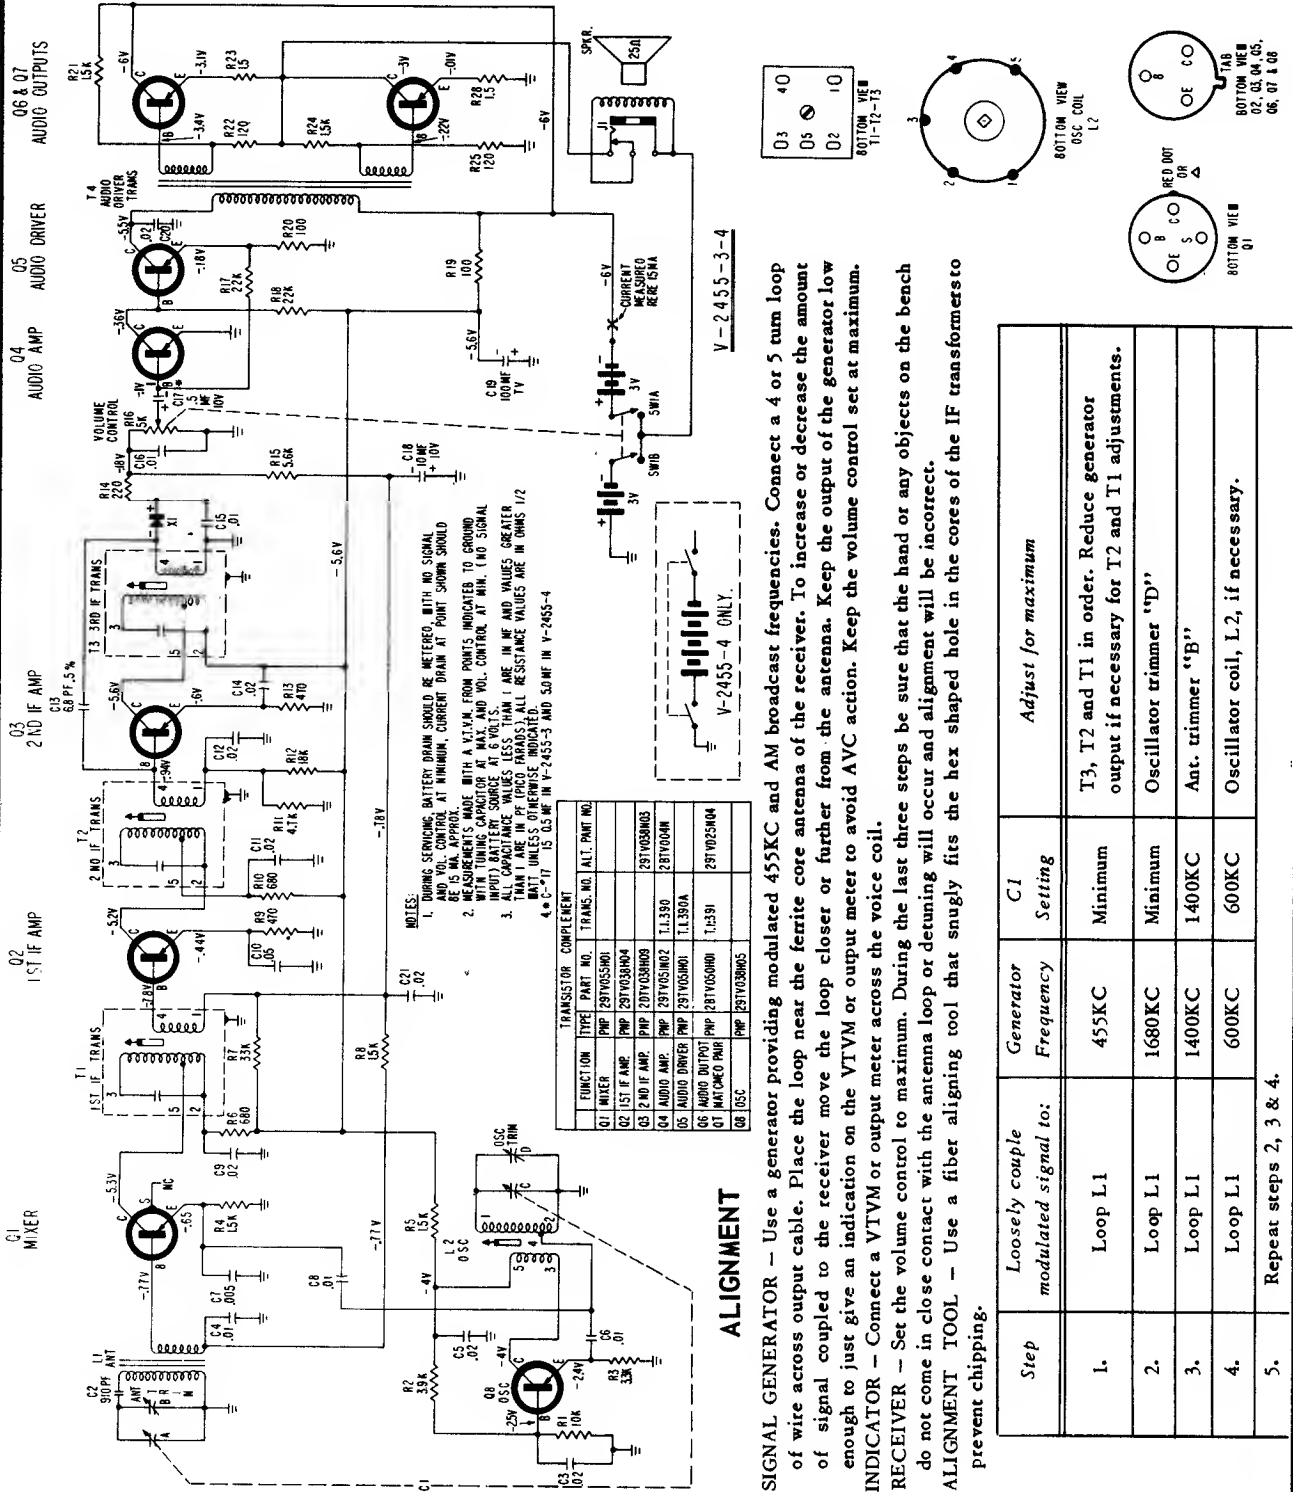


Step	Loosely couple modulated signal to:	Generator Frequency	C1 Setting	Adjust for maximum
1.	Loop L1	455KC	Minimum	T3, T2 and T1 in order. Reduce generator output if necessary for T2 and T1 adjustments.
2.	Loop L1	1680KC	Minimum	Oscillator trimmer "D"
3.	Loop L1	1400KC	1400KC	Ant. trimmer "B"
4.	Loop L1	600KC	600KC	Oscillator coil, L2, if necessary.
5.	Repeat steps 2, 3 & 4.			

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2455-4, Models H-898P8, H-899P8, Continued

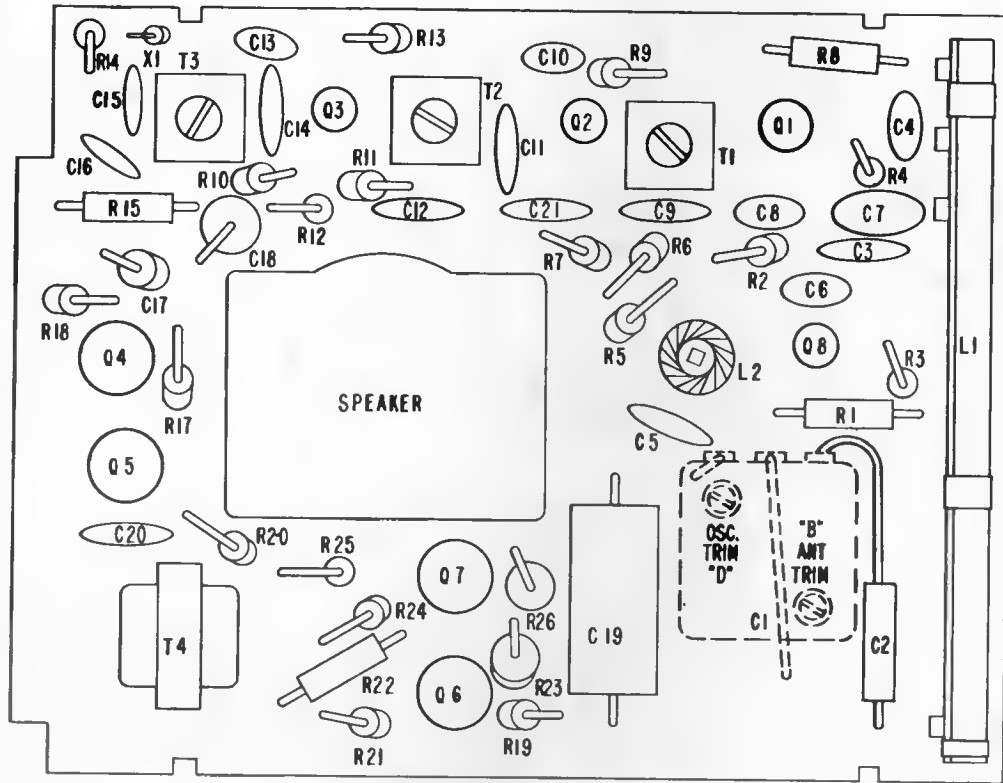


Top View

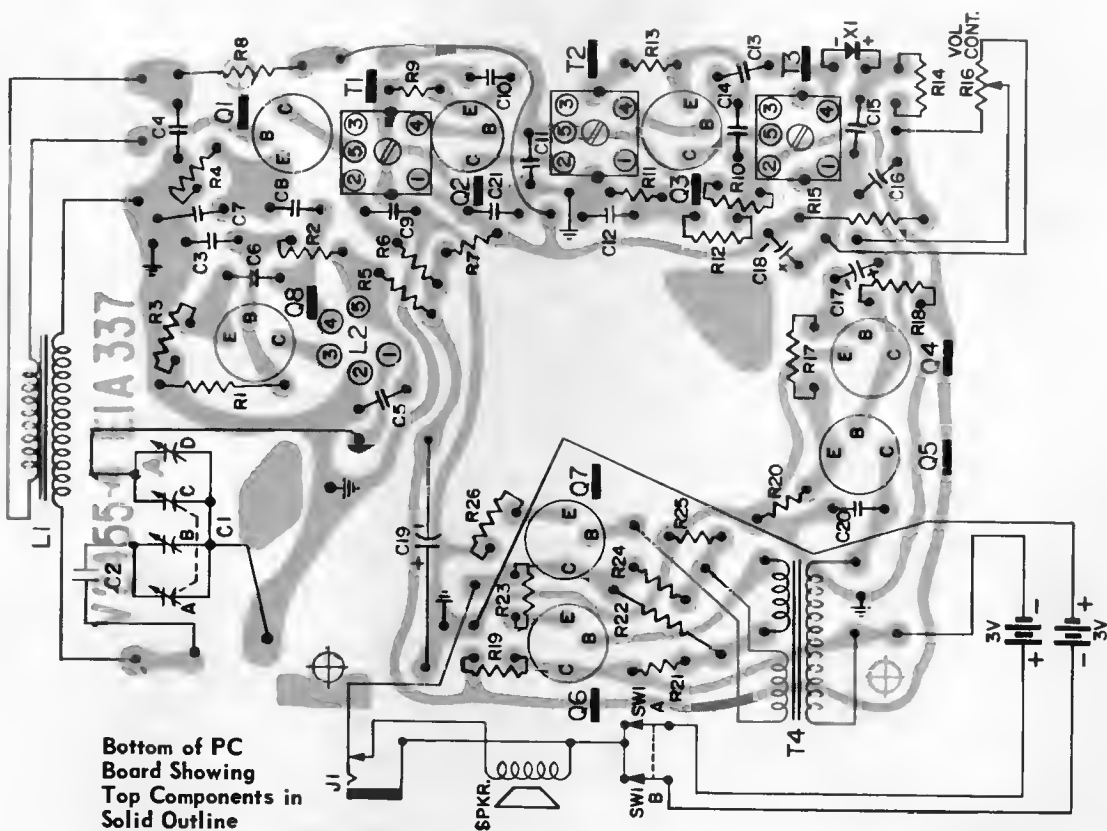

Bottom of PC Board Showing Top Components in Solid Outline

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

AUDIO OUTPUT
MATCHED PAIR

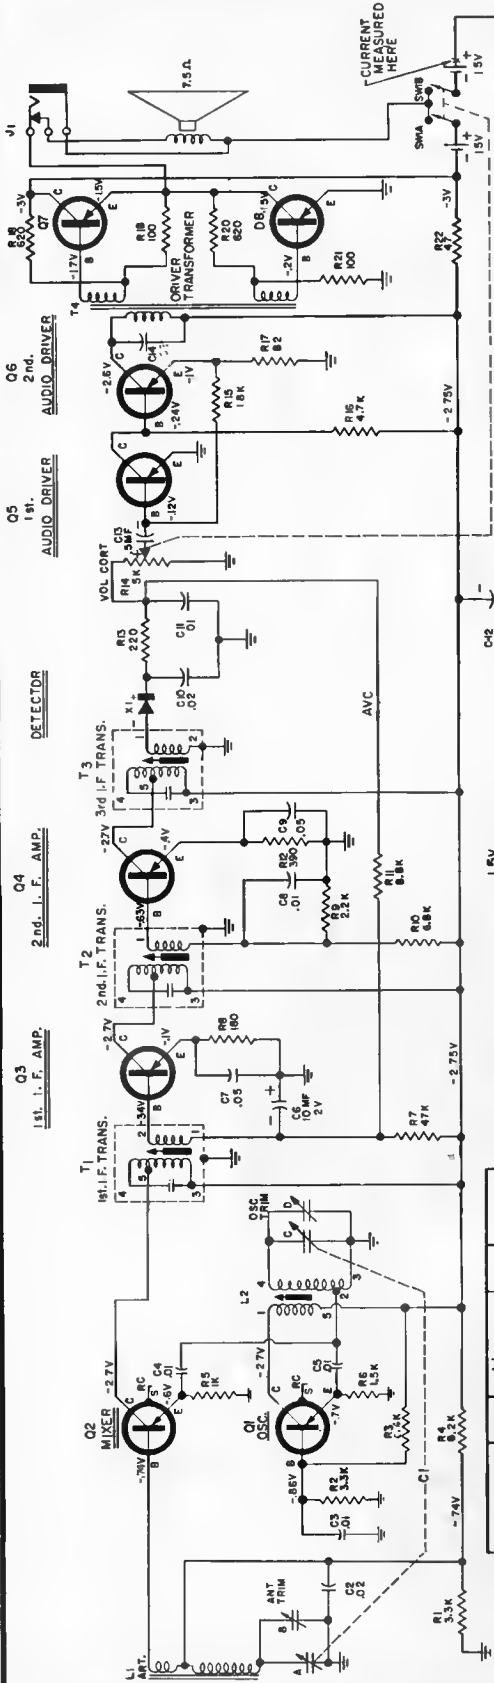


FUNCTION	TRANSISTOR TYPE	W PART NO.	ALTERNATE W PART NO.
OSC	287V035H01		
1st I.F. AMP	287V054H01		
2nd I.F. AMP	287V054H02		
3rd I.F. AMP	287V054H03		
3rd I.F. AMP	287V054H04		
AUDIO DRIVER	287V055H01		
AUDIO OUTPUT	287V055H01		


SMATCHED PAIR

NOTES:


- DURING SERVICING, BATTERY DRAIN SHOULD BE METERED. WITH NO SIGNAL AND VOLUME CONTROL AT MIN, CURRENT DRAIN AT POINT SHOWN SHOULD BE 15 MA APPROX.
- ALL CAPACITANCE VALUES IN μ F. ALL RESISTANCE Ω VALUES IN OHMS UNLESS OTHERWISE SPECIFIED.
- VOLTAGE MEASUREMENTS MADE WITH PINNING CAPACITOR AT MAX. VOLUME CONTROL AT MIN. (NO SIGNAL INPUT) BATTERY SOURCE AT 3 VOLTS.

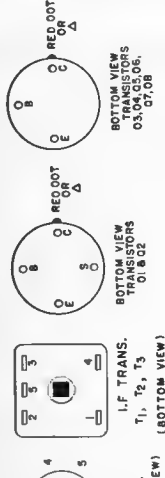

WESTINGHOUSE
Models H-903P8GP, H-904P8GP
Chassis V-2403-7

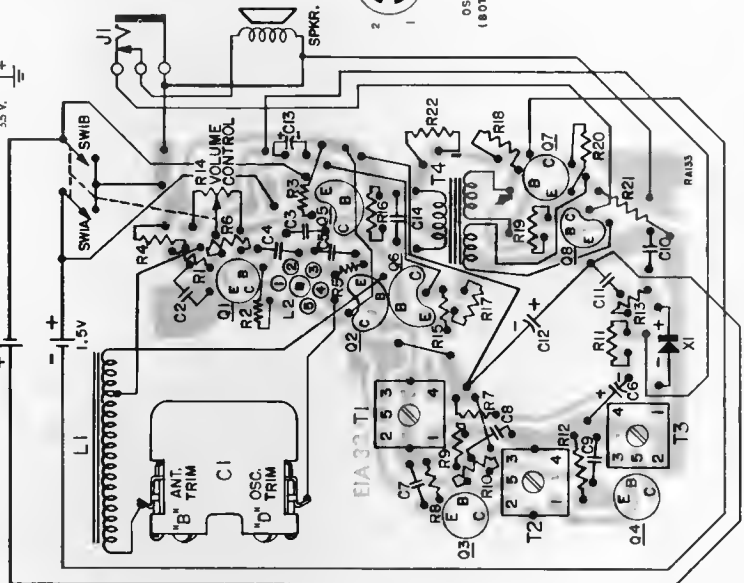


Bottom view of chassis.

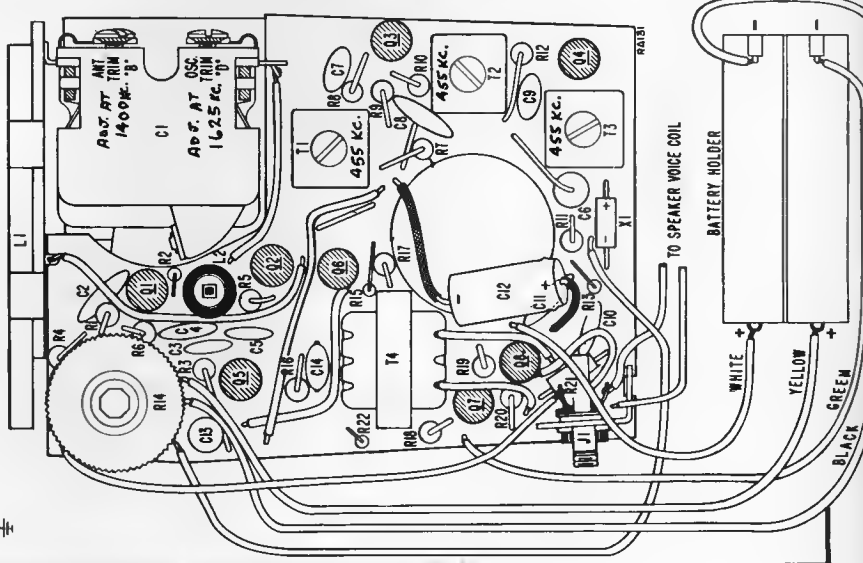

TO SPEAKER VOICE COIL
BATTERY HOLDER
WHITE
YELLOW
GREEN
BLACK


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE Model H-907P8, Chassis V-2456-1

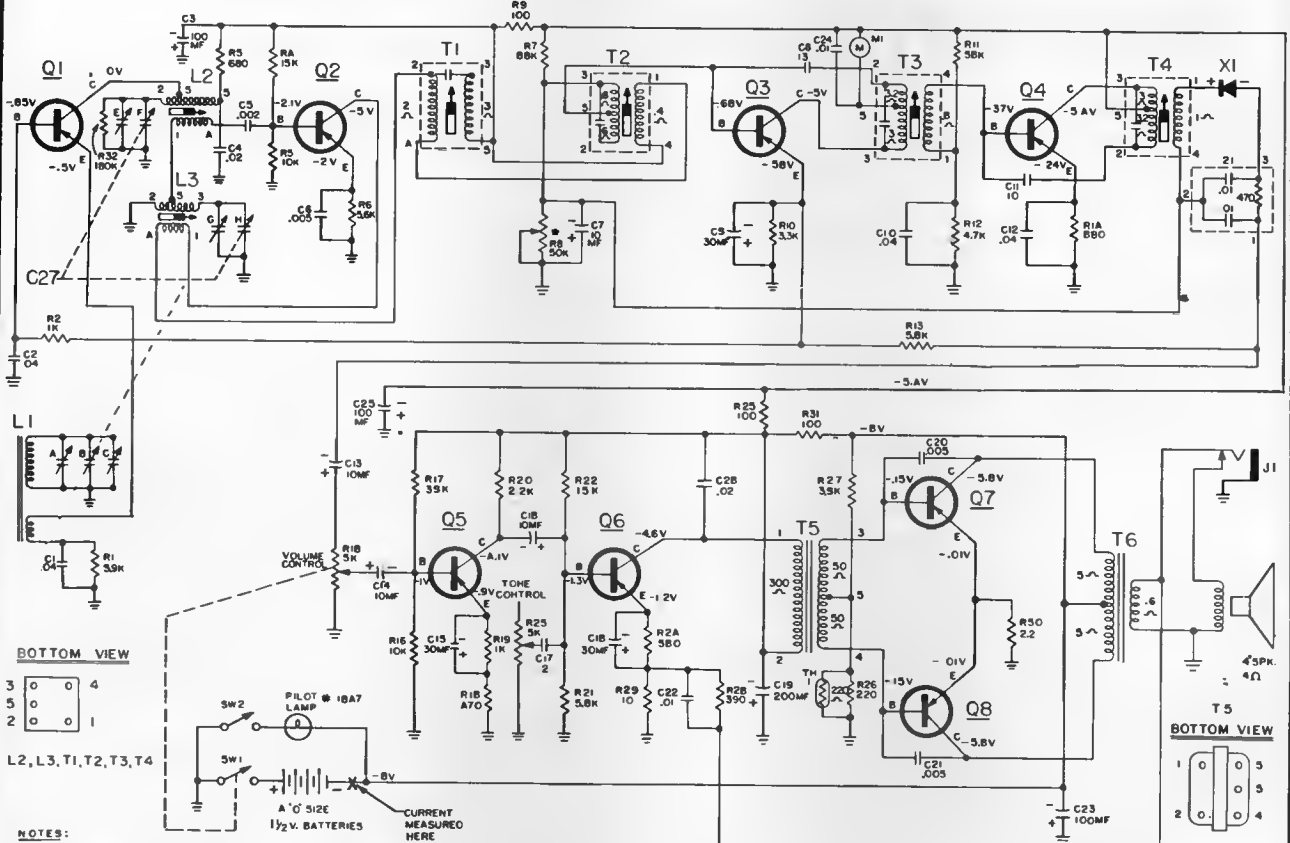

TRANSISTOR	FUNCTION	PART NO.	COMPLEMENT	ALTERNATES
Q1	RF.	690V047H54		
Q2	CONV.	690V047H55		
Q3	1ST IF.	690V047H56		
Q4	2ND IF.	690V047H57		
Q5	1ST. AUDIO	690V047H58		
Q6	AUDIO DRIVER	690V047H59		
Q7	AUDIO OUTPUT	690V047H58		
Q8	AUDIO OUTPUT	690V047H60		

• MATCHED PAIR

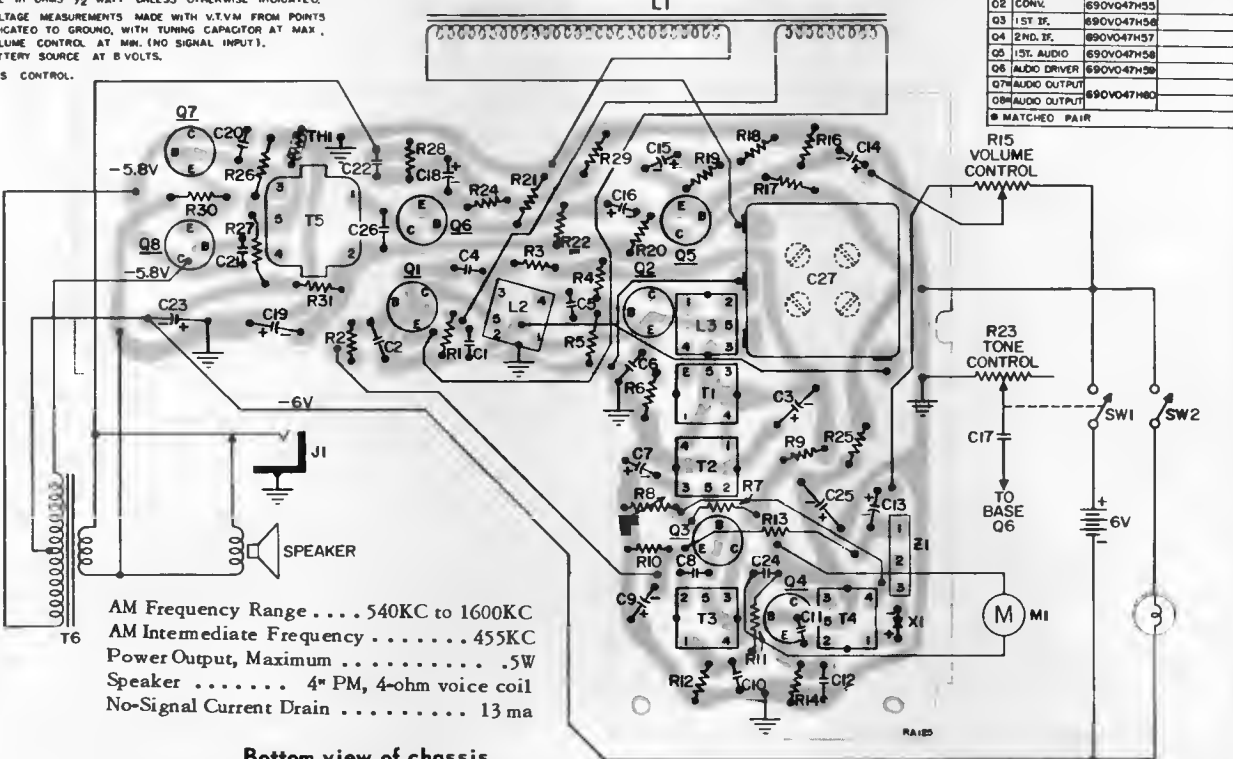

Bottom view of chassis.

Westinghouse

H-902P6GP

CHASSIS V-2461-1

CHASSIS REMOVAL


1. Remove the nut holding the earphone jack.
2. Remove three screws holding the PC board to the cabinet front.
3. Slide the chassis to the rear so that the Volume knob clears the cabinet. The speaker remains in the cabinet.

SPEAKER REMOVAL


1. Follow steps 1 thru 3 above.
2. Remove the speaker grille from the front of the cabinet. The grille is held to the cabinet front by metal tabs.
3. When replacing the speaker, the terminals should be at the bottom of the cabinet.

For circuit diagram and other material see page adjacent at right.

Speaker 2" round, 8 ohm PM
 Power Output (undistorted)140 watt
 (maximum)200 watt
 Power Supply (1) 9V battery
 No Signal Current Drain 6.6 ma

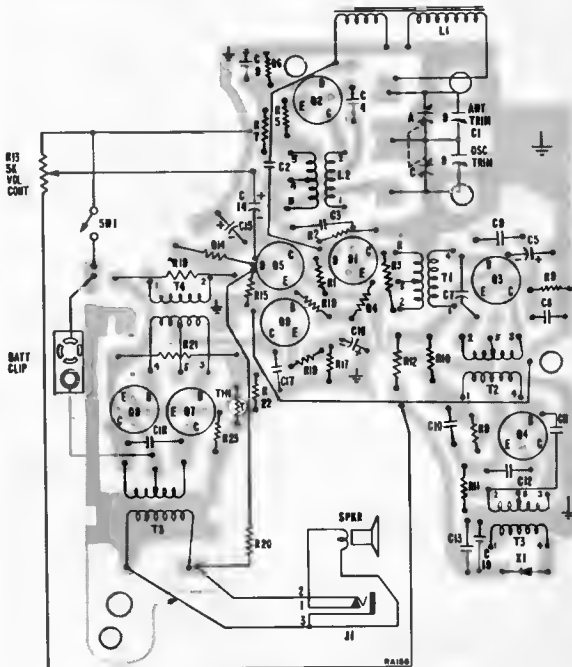

Bottom View of PC Board,
 Showing Top Components in Solid Outline.

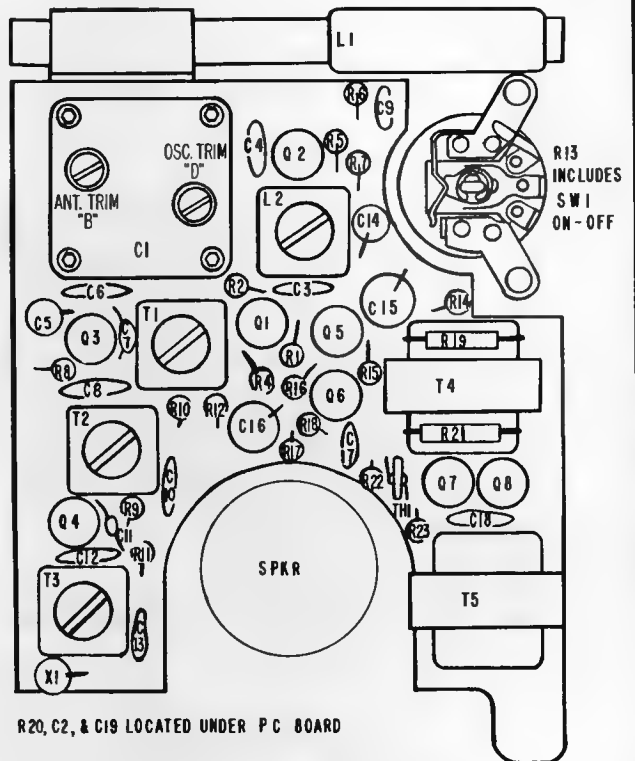

Top View of PC Board.

ALIGNMENT

SIGNAL GENERATOR – Use a generator providing modulated 455KC and AM broadcast frequencies. Connect a 4 or 5 turn loop of wire across output cable. Place the loop near the ferrite core antenna of the receiver. To increase or decrease the amount of signal coupled to the receiver move the loop closer or further from the antenna. Keep the output of the generator low enough to just give an indication on the VTVM or output meter to avoid AVC action. Keep the volume control set at maximum.

INDICATOR – Connect a VTVM or output meter across the voice coil.






RECEIVER – Set the volume control to maximum. During the last three steps be sure that the hand or any objects on the bench do not come in close contact with the antenna loop or detuning will occur and alignment will be incorrect.

ALIGNMENT TOOL – Use a fiber aligning tool that snugly fits the hex shaped hole in the cores of the IF transformers to prevent chipping.

Step	Loosely coupled modulated signal to:	Generator Frequency	C1 Setting	Adjust for maximum
1.	Loop L1	455KC	Minimum	T3, T2 and T1 in order. Reduce generator output if necessary for T2 and T1 adjustments.
2.	Loop L1	1650KC	Minimum	Oscillator trimmer "D"
3.	Loop L1	1400KC	1400KC	Ant. trimmer "B"
4.	Loop L1	600KC	600KC	Oscillator coil, L2, if necessary.
5.	Repeat steps 2, 3 & 4.			

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE Model H-902P6GP, Chassis V-2461-1, Continued

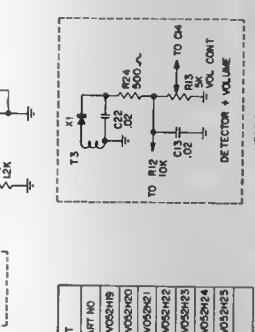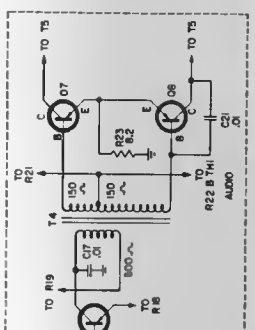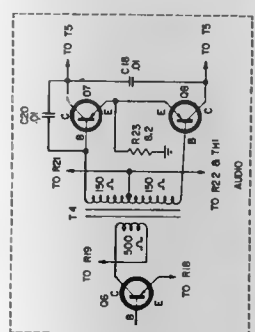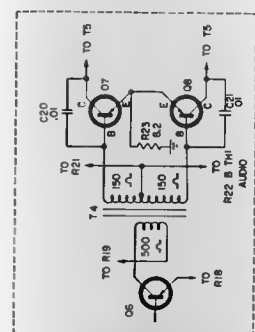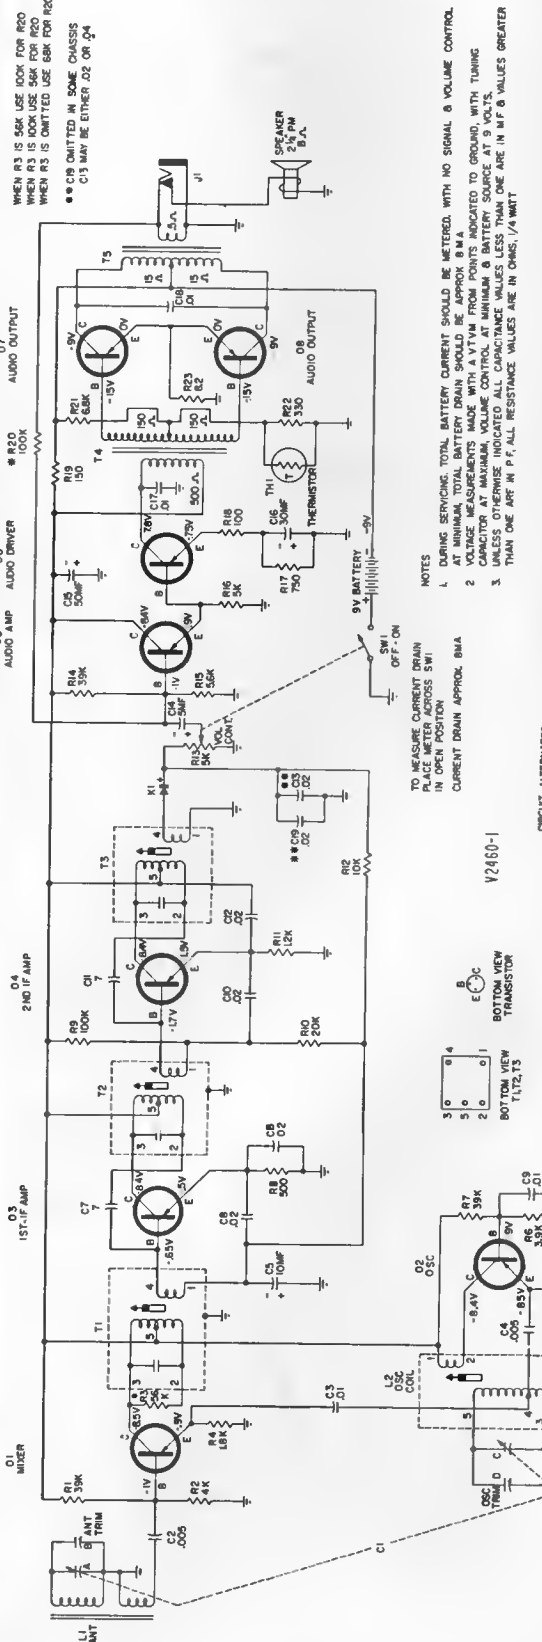

TRANSISTOR	COMPLEMENT	TYPE	W PART NO.
O1	MIXER	PNP	6S00058B9
O2	OSC	PNP	6S00058D0
O3	1ST IF AMP	PNP	6S00058G1
O4	2ND IF AMP	PNP	6S00058H2
O5	AUDIO AMP	PNP	6S00058H3
O6	AUDIO DRIVER	PNP	6S00058H4
O7	AUDIO OUTPUT	PNP	6S00058H5

MATCHED PAIR

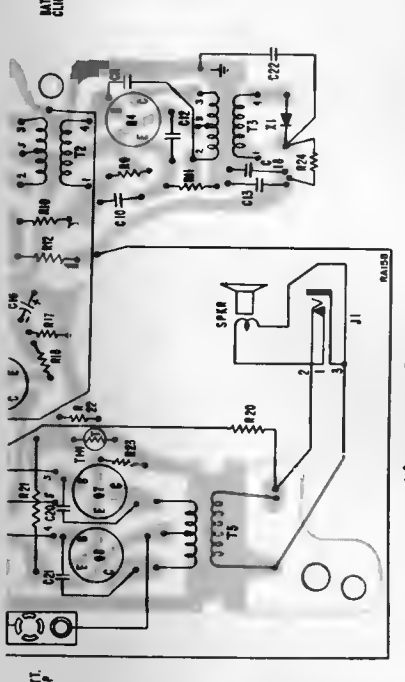
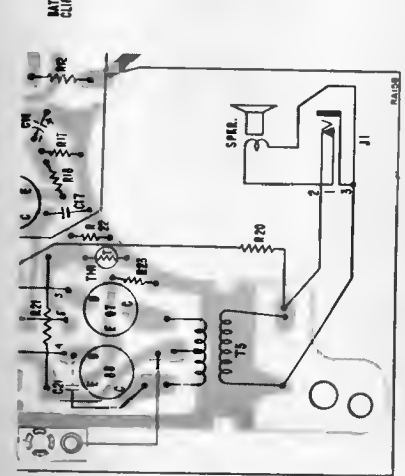
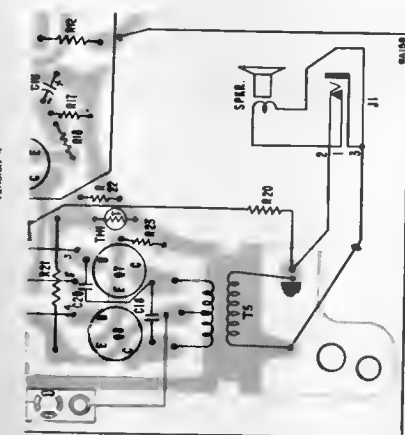


Figure 2C - Alternate 3


Figure 2B - Alternate 2

Alternates 1 & 4


Bottom Views of PC Board, Showing Circuit Alternates.

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE
 Chassis V-2515-11
 Models H-M1780, A,
 H-M1781, H-M1783
 (Material on 3 pages)


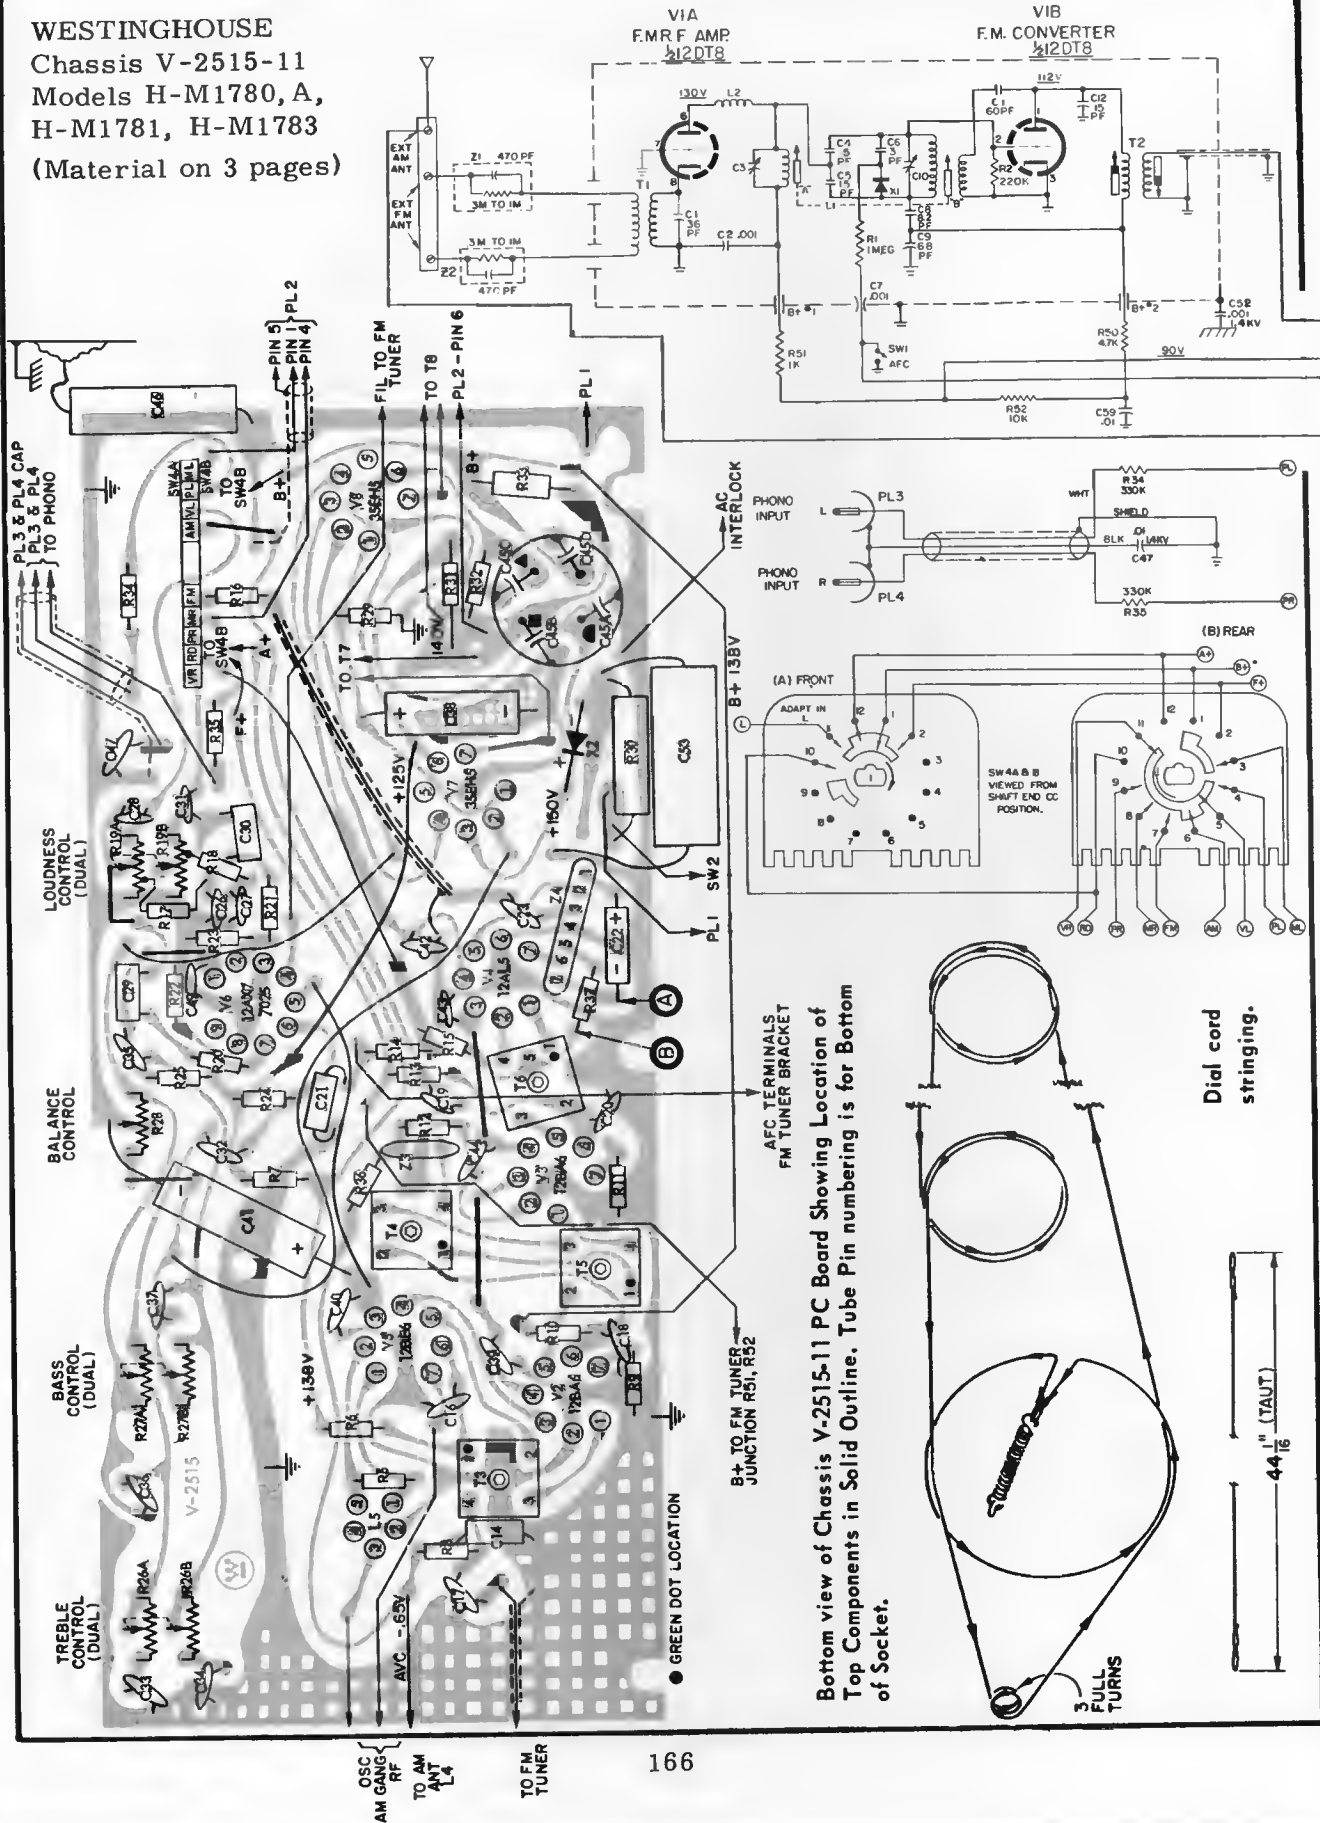


Bottom view of Chassis V-2515-11 PC Board Showing Location of Top Components in Solid Outline. Tube Pin numbering is for Bottom of Socket.

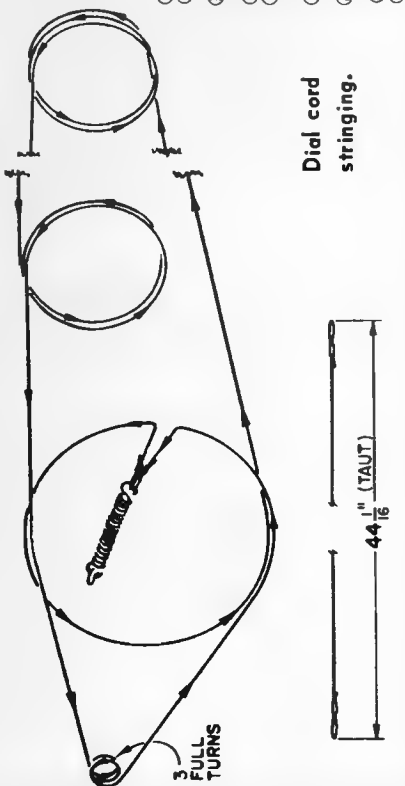

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2515-11, Models H-M1780, A, H-M1781, H-M1783

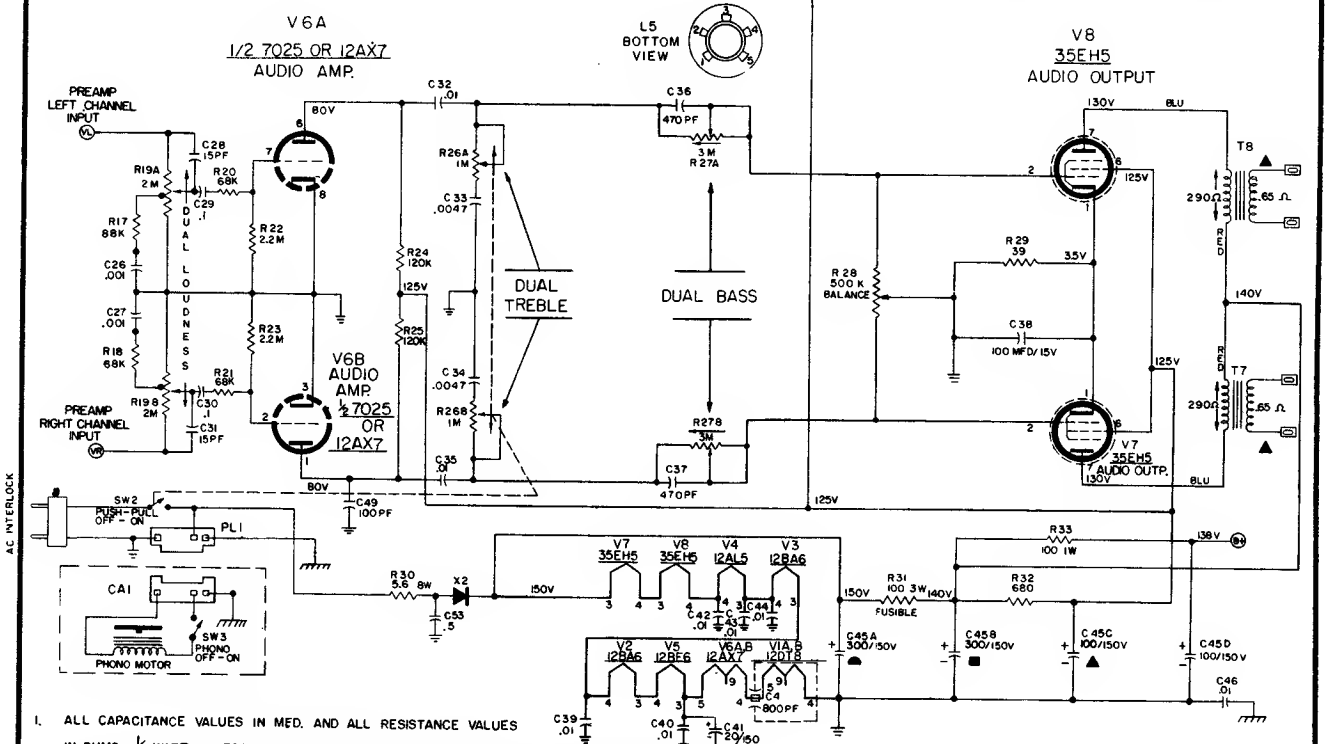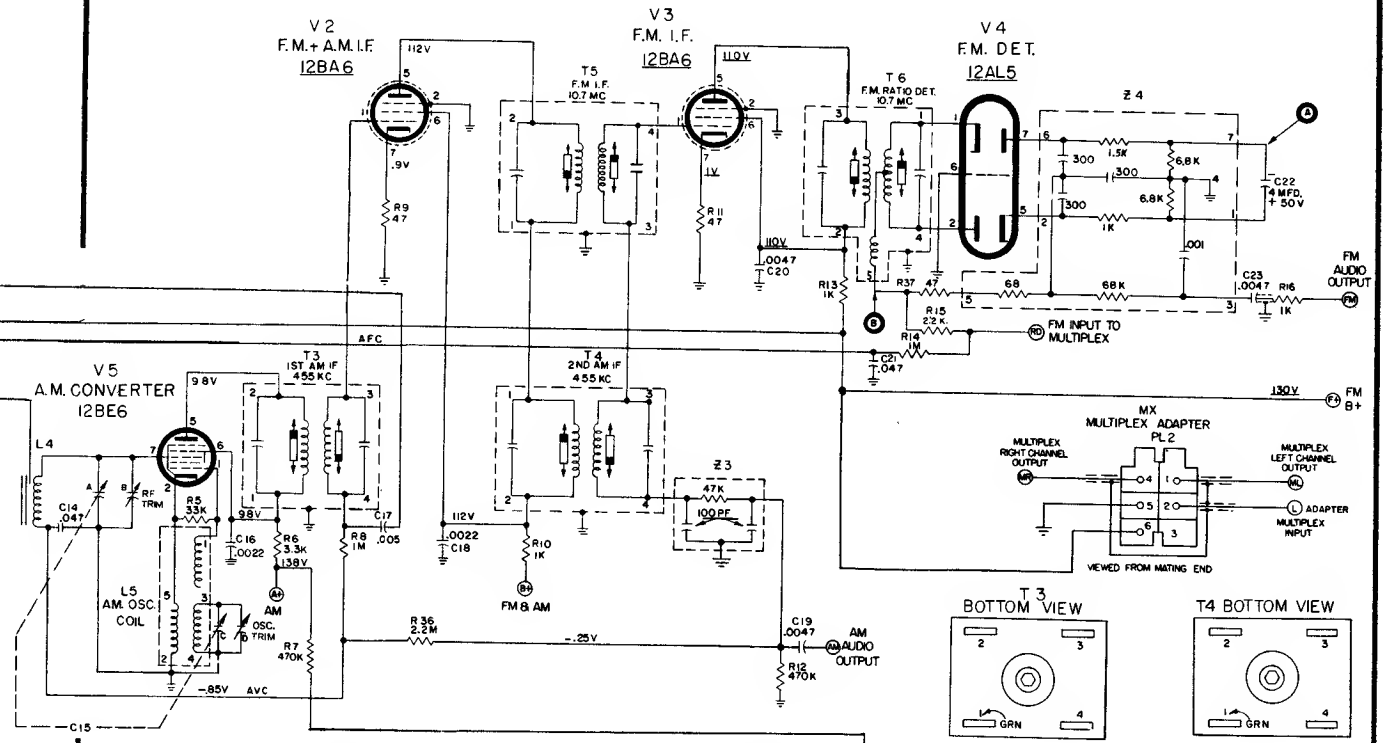


1. ALL CAPACITANCE VALUES IN MED. AND ALL RESISTANCE VALUES IN DHMS, 1/2 WATT, UNLESS OTHERWISE SPECIFIED.
2. D.C. VOLTAGES MEASURED FROM POINTS INDICATED TO CIRCUIT GROUND - NO SIGNAL APPLIED, USING A V.T.V.M. LINE VOLTAGE SET AT 120 V A.C. NO SIGNAL INPUT LCUDNESS AT MIN, TO TUNING CAPC. AT MAX.
3. UNDERLINED VOLTAGES ARE TAKEN IN FM POSITION.
4. SW4A AND B IS SHOWN IN THE CCW POSITION, (AM. POSITION)
5. ALL REFERENCES TO LEFT AND RIGHT ARE AS VIEWED FACING FRONT OF SET.
6. REAR SECTIONS OF CONTROLS (FARTHEST FROM SHAFTS) ARE RIGHT CHANNEL.
7. ARROWS DN-CONTROLS INDICATE CW ROTATION (CONTROL VIEWED FROM SHAFT END.)

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2515-11, Models H-M1780, A, H-M1781, H-M1783


(Continued)

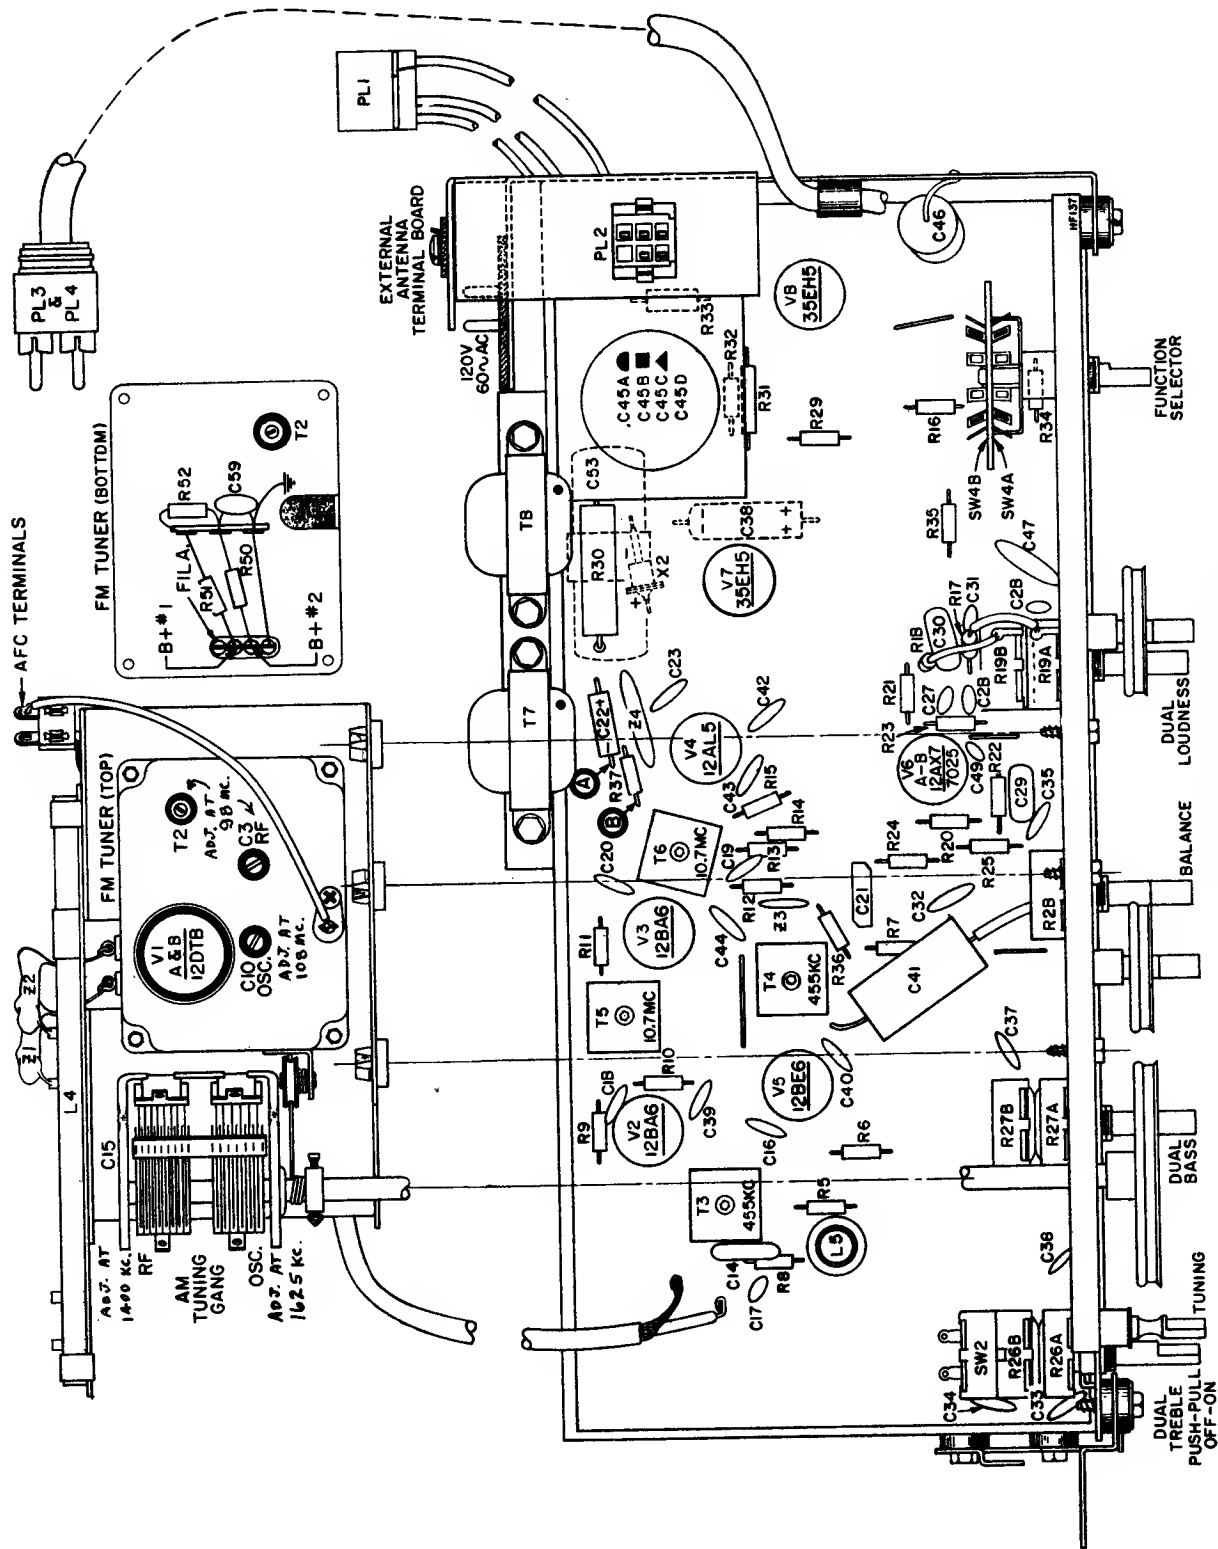

Top View of V-2515-11 Chassis

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION



WESTINGHOUSE Models H-91ACS1, H-120ACS1, H-121ACS1, Chassis V-2524-1
 Model H-92ACS1, Chassis V-2524-2
 Models H-F1030, H-F1031, H-F1033, Chassis V-2524-3

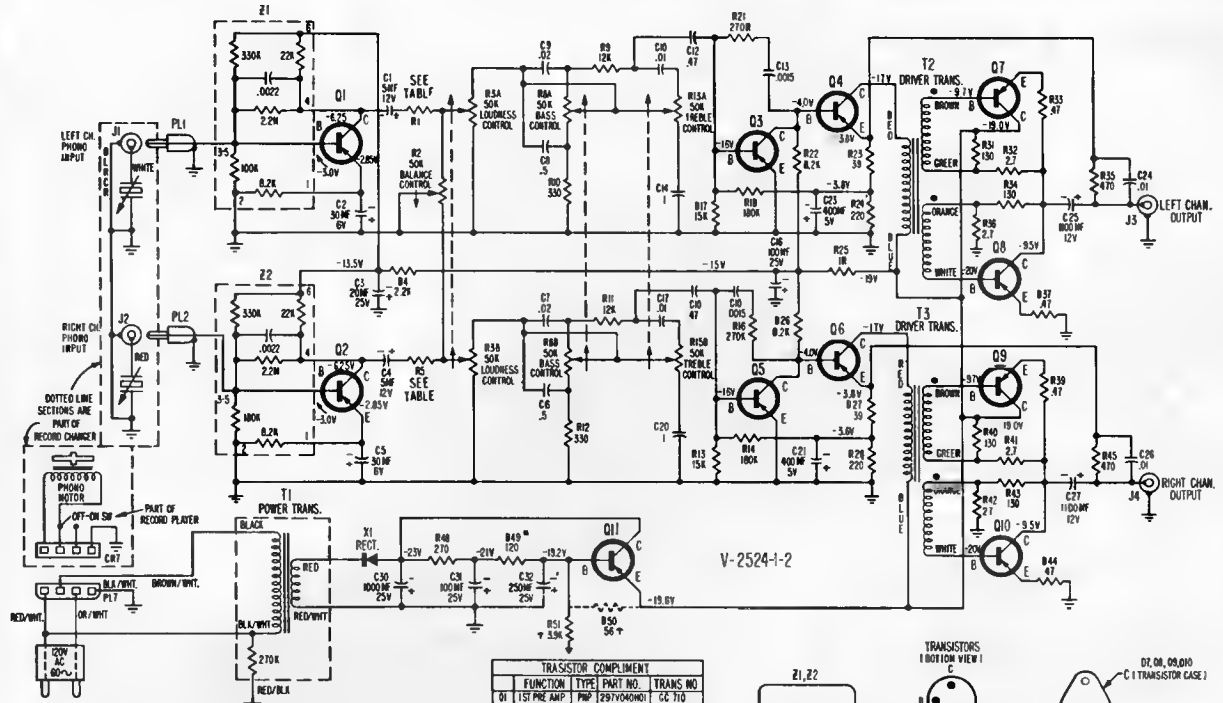

1. ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROLS VIEWED FROM SHAFT END).
2. REAR SECTIONS OF CONTROLS ARE RIGHT CHANNEL.
3. D.C. VOLTAGES MEASURED FROM CIRCUIT GROUND USING 9 VTCUM, CONTROLS SET AT MINIMUM.
4. ALL CAPACITANCE VALUES ARE IN MFD AND ALL RESISTANCE VALUES IN OHMS, 1/2 WATT UNLESS OTHERWISE SPECIFIED.
- EARLY PRODUCTION WAS 270 OHMS; 120 USED WITH R51
- R50 RESISTOR USED IN EARLY PRODUCTION ONLY; R51 LISTED PROD. ONLY.

TRANSISTOR COMPLIMENT			
FUNCTION	TYPE	PART NO.	TRANS. NO.
Q1 1ST PRE AMP	PNP	287V040H01	Q2 710
Q2 1ST PRE AMP	PNP	287V040H01	Q2 710
Q3 2ND PRE AMP	PNP	287V040H01	Q2 710
Q4 AUDIO DRIVER	PNP	287V040H03	Q2 676
Q5 2ND PRE AMP	PNP	287V040H01	Q2 710
Q6 AUDIO DRIVER	PNP	287V040H03	Q2 676
Q7 AUDIO OUT	PNP	287V040H01	B1709
Q8 AUDIO OUT	PNP	287V040H01	B1709
Q9 AUDIO OUT	PNP	287V040H01	B1709
Q10 MULTIPLEX	PNP	287V040H01	B1709

CHASSIS NO.	R1	R5
V 2524-1 2	560Ω	560Ω
U-2524-3	2700Ω	2700Ω

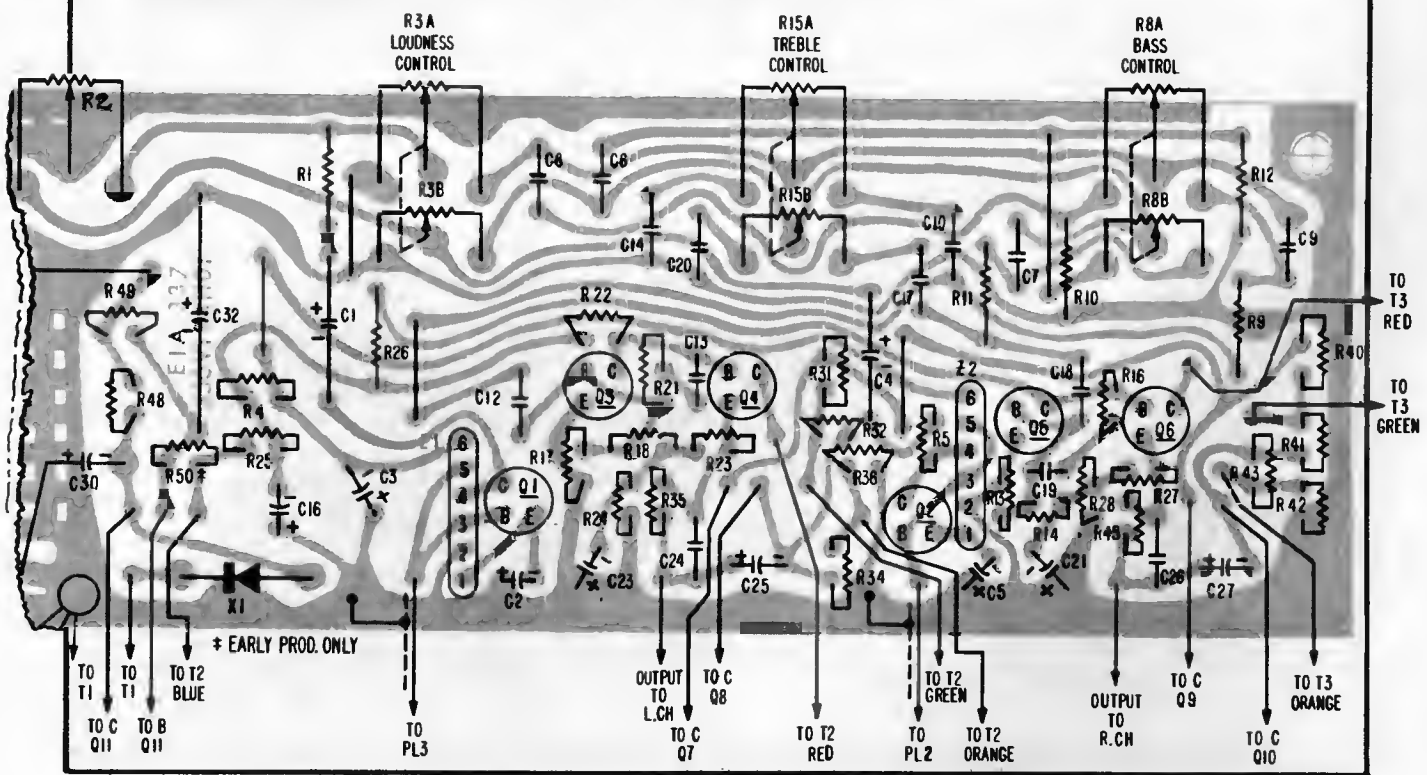


Bottom view of PC board.

Westinghouse

MODELS H-99AC1 H-99AC2
charcoal gray olive green

CHASSIS V-2526-1

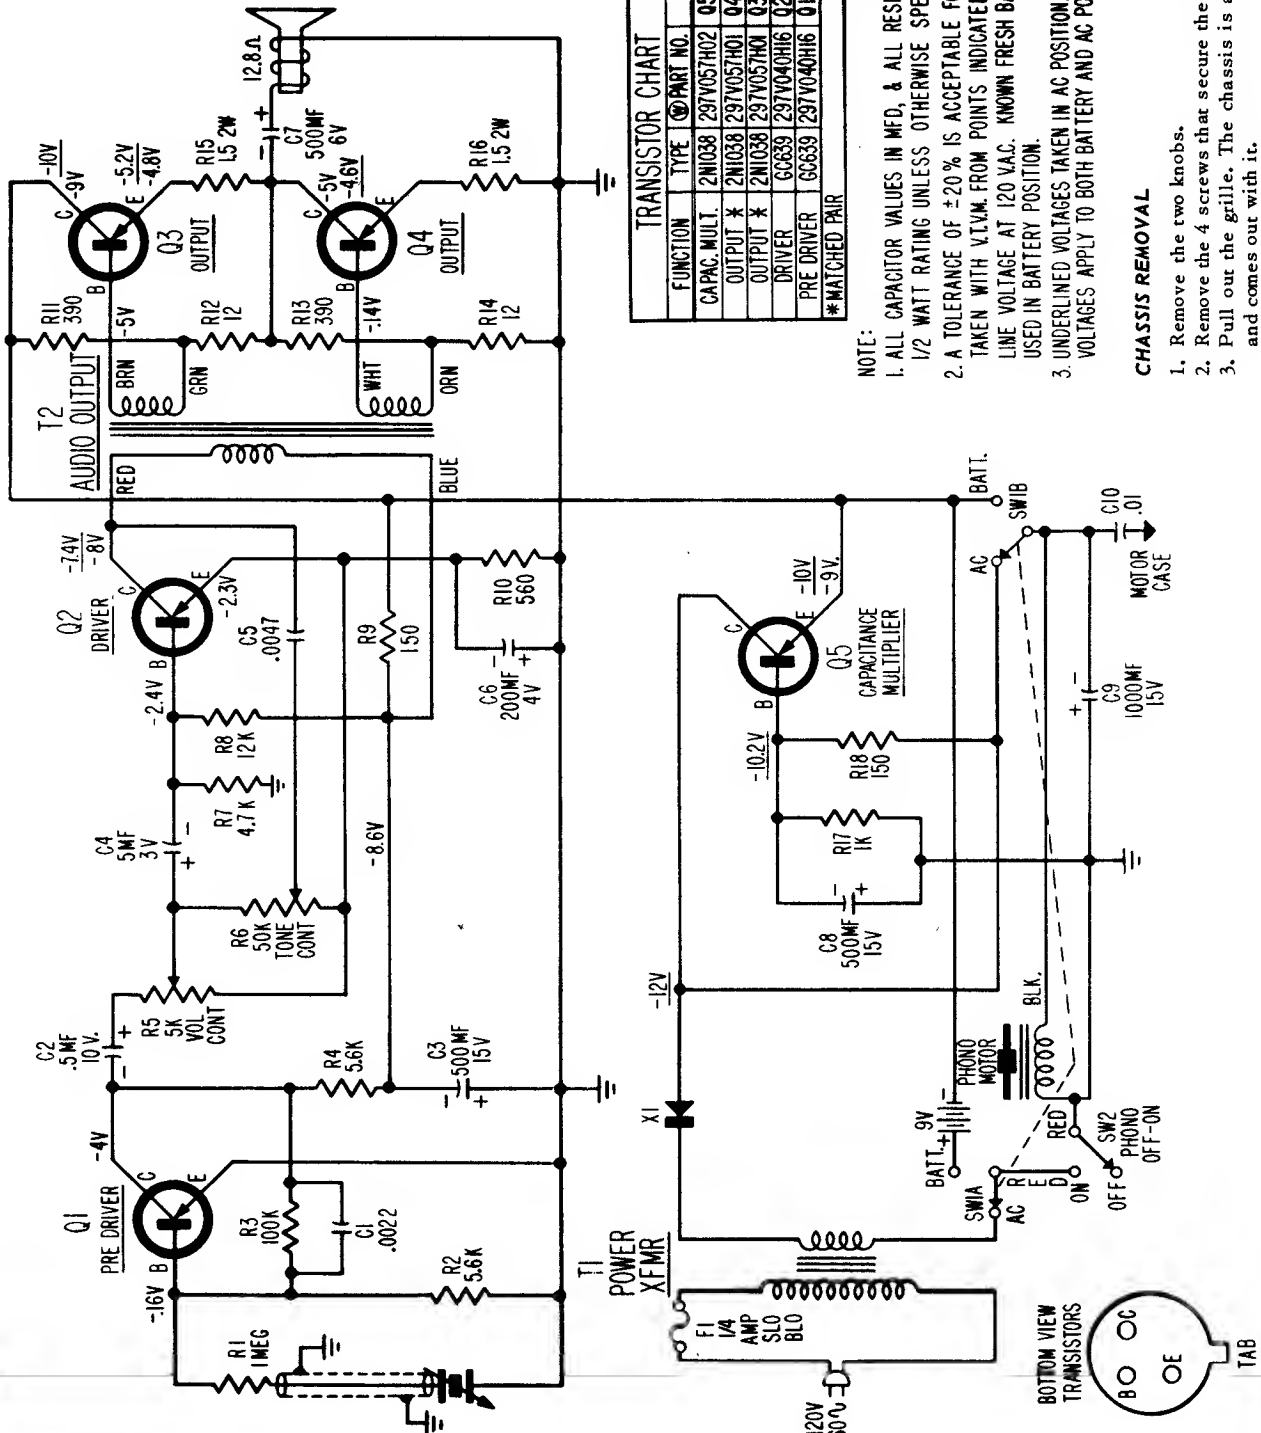


TRANSISTOR CHART		
FUNCTION	TYPE	ALT. TYPE
CAPAC. MULT.	2N1038	297V057H02 Q5
OUTPUT *	2N1038	297V057H01 Q4
OUTPUT *	2N1038	297V057H01 Q3
DRIVER	6C639	297V040H16 Q2
PRE DRIVER	6C639	297V040H16 Q1
*MATCHED PAIR		


NOTE:
 1. ALL CAPACITOR VALUES IN MFD. & ALL RESISTORS IN OHMS 1/2 WATT RATING UNLESS OTHERWISE SPECIFIED.
 2. A TOLERANCE OF ±20% IS ACCEPTABLE FOR VOLTAGES TAKEN WITH VTVM. FROM POINTS INDICATED TO WITH LINE VOLTAGE AT 120 VAC. KNOWN FRESH BATTERIES MUST BE USED IN BATTERY POSITION.
 3. UNDERLINED VOLTAGES TAKEN IN AC POSITION. ALL OTHER VOLTAGES APPLY TO BOTH BATTERY AND AC POSITIONS.

CHASSIS REMOVAL


1. Remove the two knobs.
2. Remove the 4 screws that secure the grille.
3. Pull out the grille. The chassis is attached to the grille and comes out with it.

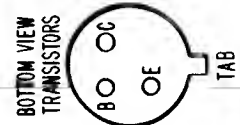

WESTINGHOUSE Chassis V-2534-2, Model H-107ACS1

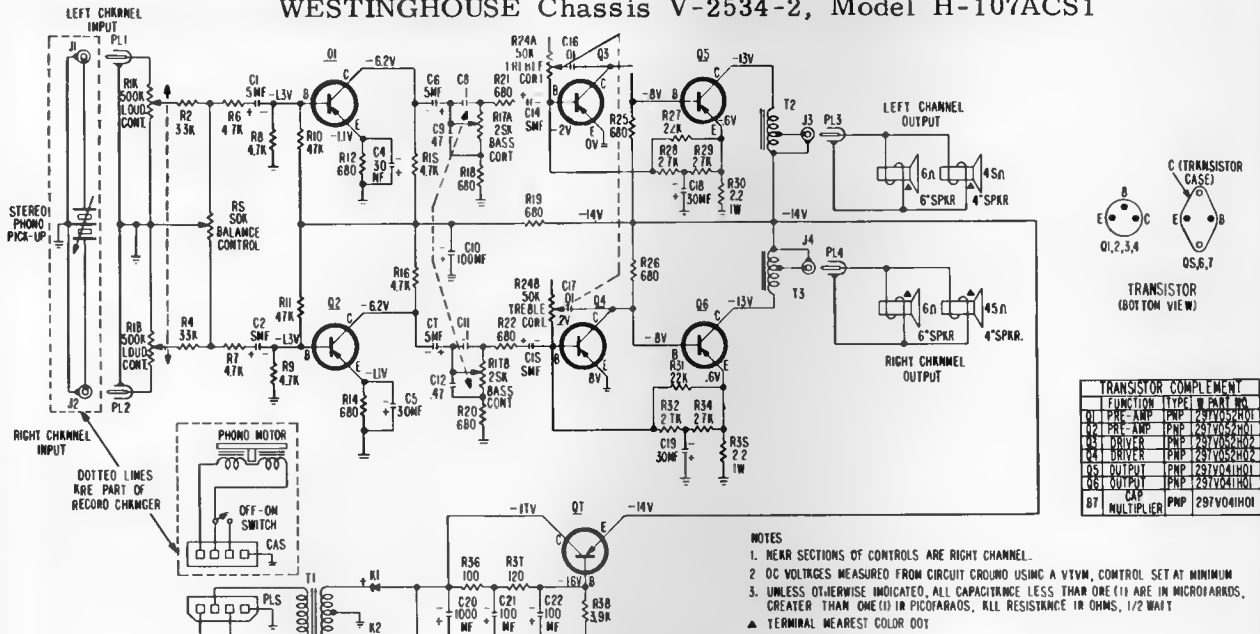

NOTES
 1. NEAR SECTIONS OF CONTROLS ARE RIGHT CHANNEL.
 2. DC VOLTAGES MEASURED FROM CIRCUIT GROUND USING A VTVM, CONTROL SET AT MINIMUM.
 3. UNLESS OTHERWISE INDICATED, ALL CAPACITANCE LESS THAN ONE (1) ARE IN MICROFARADS, GREATER THAN ONE (1) IN PICOFARADS, ALL RESISTANCE IN OHMS, 1/2 WATT
 ▲ TERMINAL NEAREST COLOR DOT

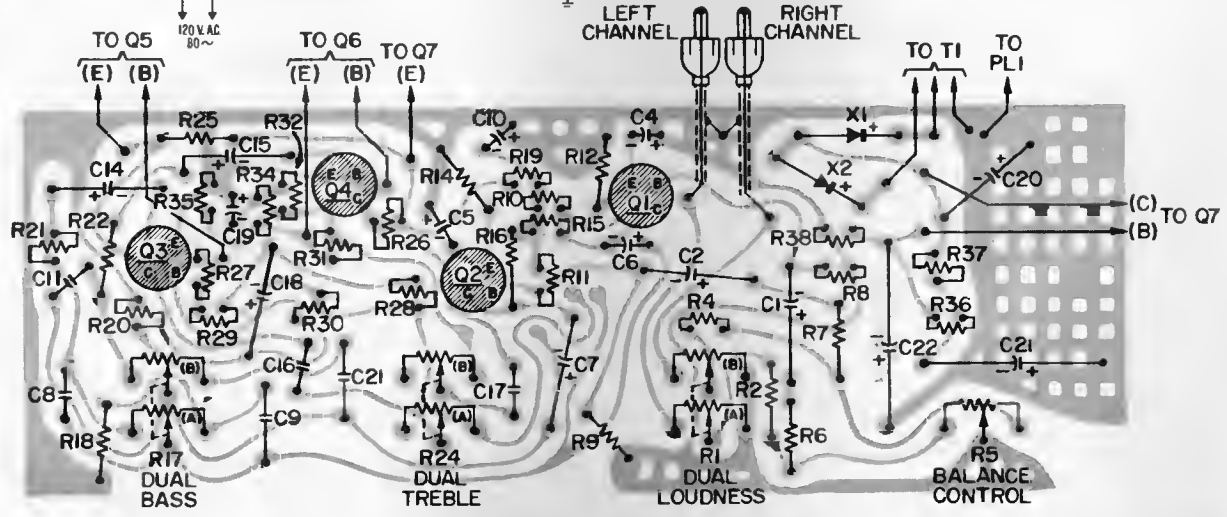

WESTINGHOUSE Chassis V-2537-2
 Models H-105ACS1, A, H-106ACS1

CHASSIS REMOVAL

1. Remove the VOLUME knobs.
2. Remove the six screws from the baffle.
3. Remove the escutcheon and the two screws under it.
4. Pull out the baffle. The chassis is fastened to the baffle by two speed nuts.


TRANSISTOR COMPLEMENT			
FUNCTION	TYPE	PART NO.	
Q1 Q2	DRIVER	NPN	291V052H01
Q3 Q4	AUDIO OUTPUT	NPN	291V042H01

SEE NOTE 3




NOTES

- * EARLY PRODUCTION ONLY.
1. VOLTAGE MEASUREMENTS MADE WITH A VTVM FROM POINTS INDICATED TO GROUND, VOLUME CONTROLS AT MINIMUM, LINE VOLTAGE AT 120 VAC
 2. UNLESS OTHERWISE INDICATED ALL CAPACITANCE VALUES LESS THAN 1 ARE IN OHMS & VALUES GREATER THAN 1 ARE IN PF, ALL RESISTANCE VALUES ARE IN OHMS, 1/2 WATT.
 3. IF EITHER RIGHT OR LEFT CHANNEL DRIVER OR OUTPUT TRANSISTOR BECOMES DEFECTIVE, ORDER AND REPLACE 60MH DRIVER OR BOTH OUTPUT TRANSISTORS.

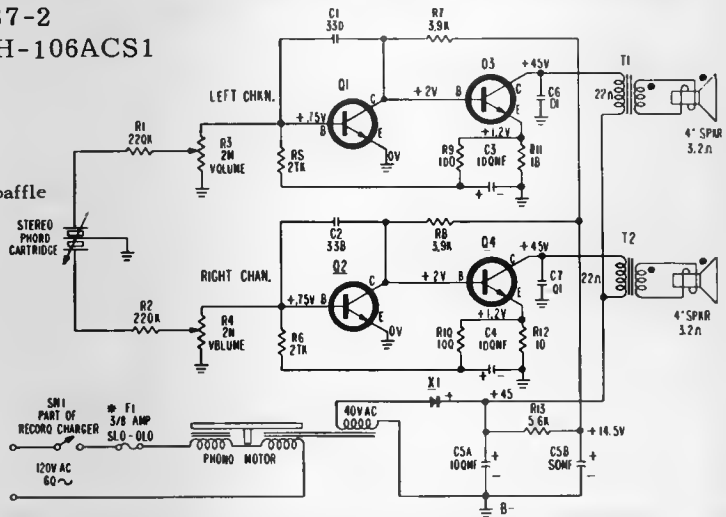

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

WESTINGHOUSE Chassis V-2537-1, Models H-100AC1, H-100AC2
Chassis V-2537-3, Models H-111MP1, H-111MP2

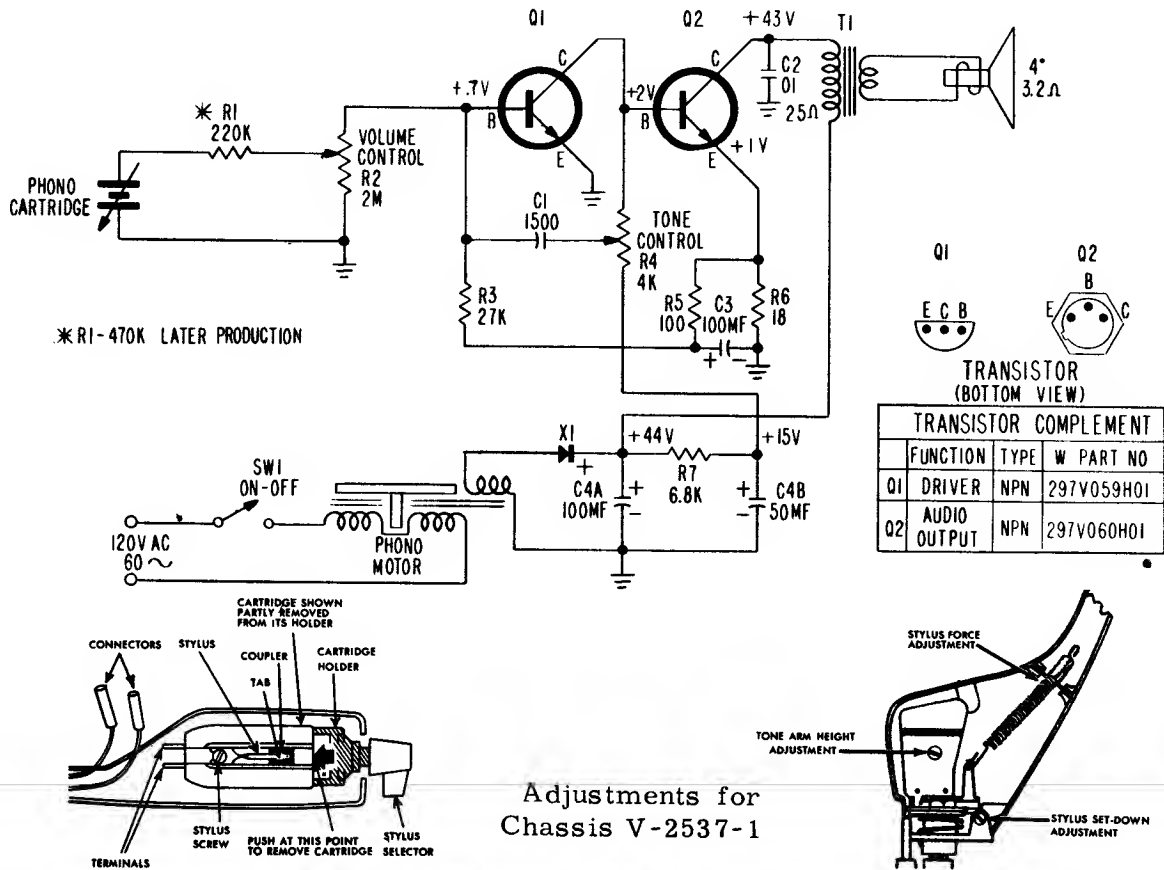

WESTINGHOUSE Chassis V-2536-1, Models H-102ACS1, H-102ACS2


NOTES

- VOLTAGE MEASUREMENTS MADE WITH A VTVM FROM POINTS INDICATED TO GROUND, VOLUME CONTROLS AT MINIMUM, LINE VOLTAGE AT 120 V.AC
- UNLESS OTHERWISE INDICATED: ALL CAPACITANCE VALUES LESS THAN 1 ARE MF & VALUES GREATER THAN 1 ARE IN PF. ALL RESISTANCE VALUES ARE IN OHMS, 1/2 WATT.
- IF EITHER RIGHT OR LEFT CHANNEL DRIVER OR OUTPUT TRANSISTOR BECOMES DEFECTIVE, ORDER AND REPLACE BOTH DRIVER OR BOTH OUTPUT TRANSISTORS.





TRANSISTOR COMPLEMENT			
FUNCTION	TYPE	PART NO	
Q1 - Q2 DRIVER	NPN	297V059H01	
Q3 - Q4 AUDIO OUTPUT	NPN	297V060H01	

SEE NOTE 3

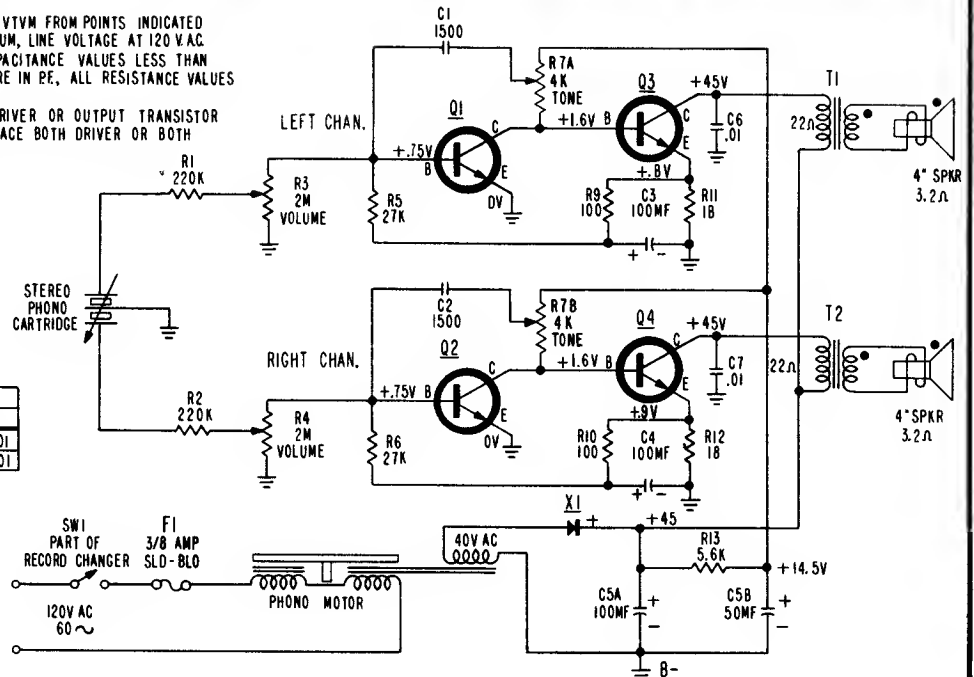


ZENITH RADIO MODELS L513C,F,V & W AND L514C,P,W & G USING CHASSIS 5L02



Also Models L509J, L, W, Chassis 5J13 (less Clock) are similar to 5L02

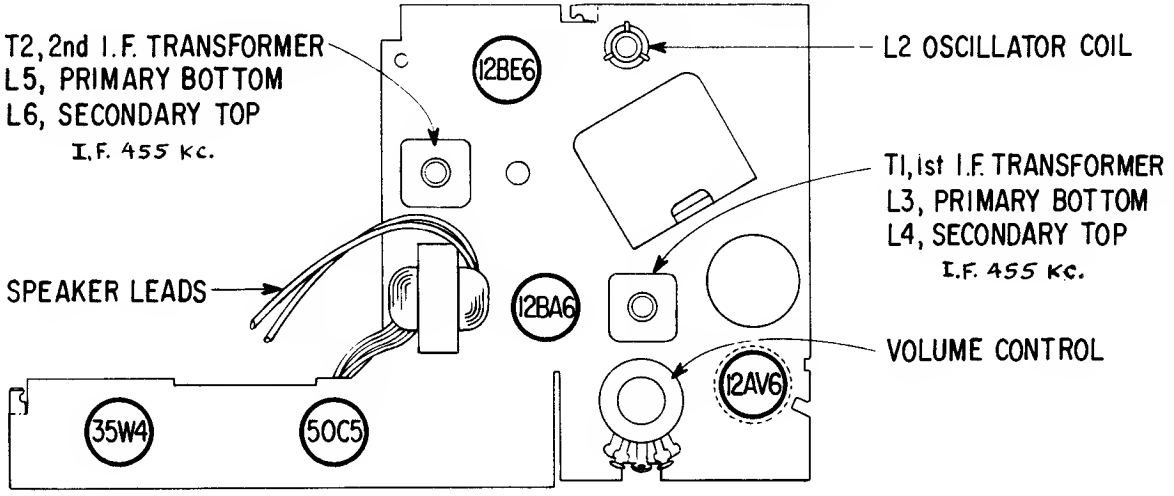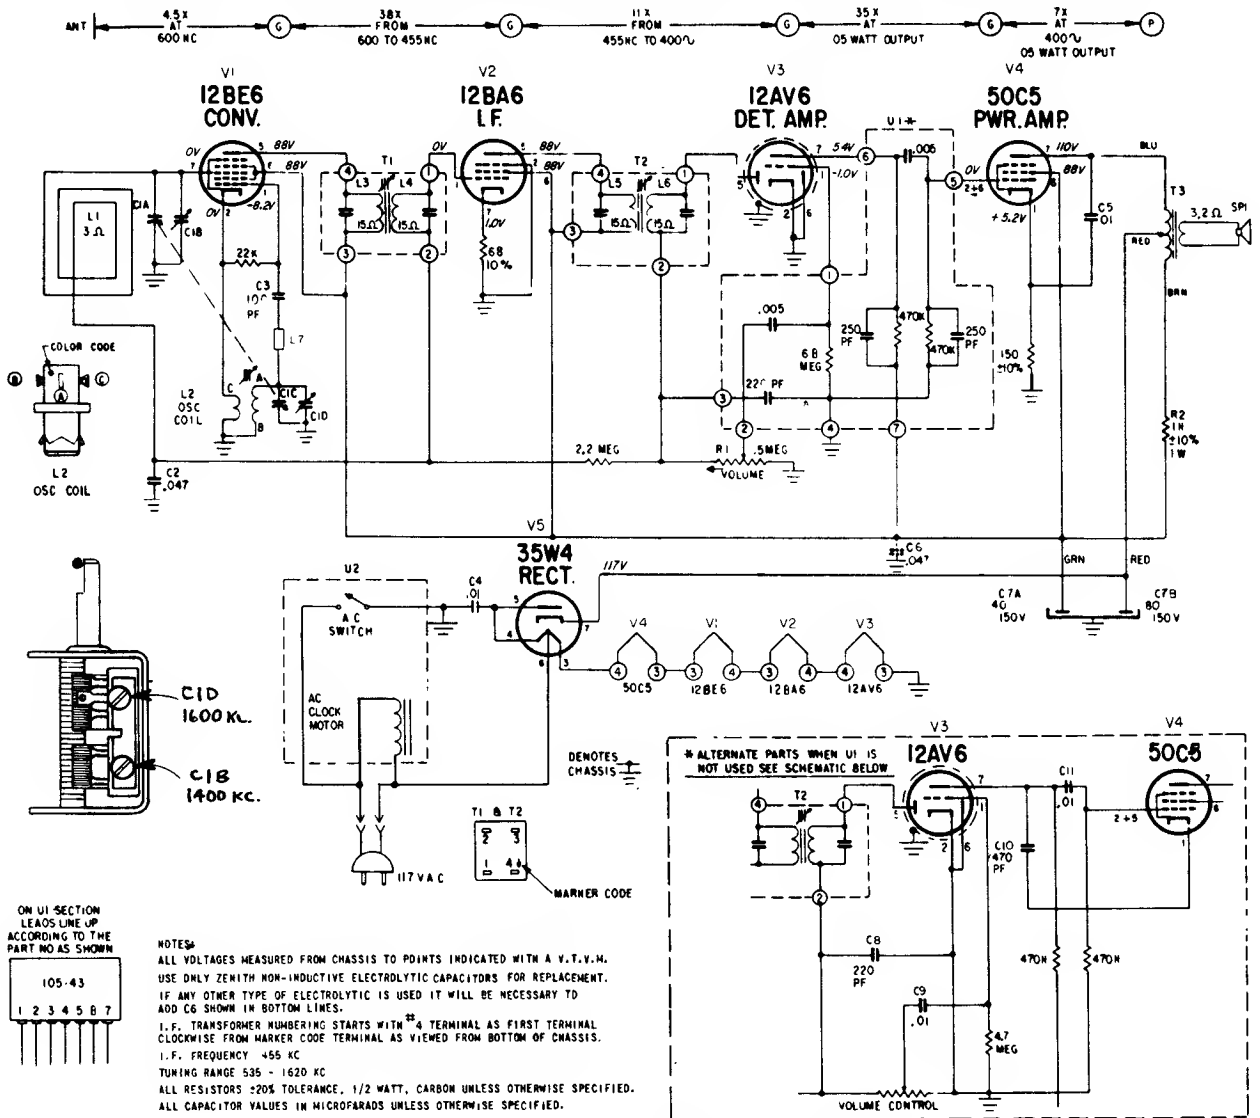

ZENITH RADIO CORPORATION MODELS L615G, L & W CHASSIS 6L05

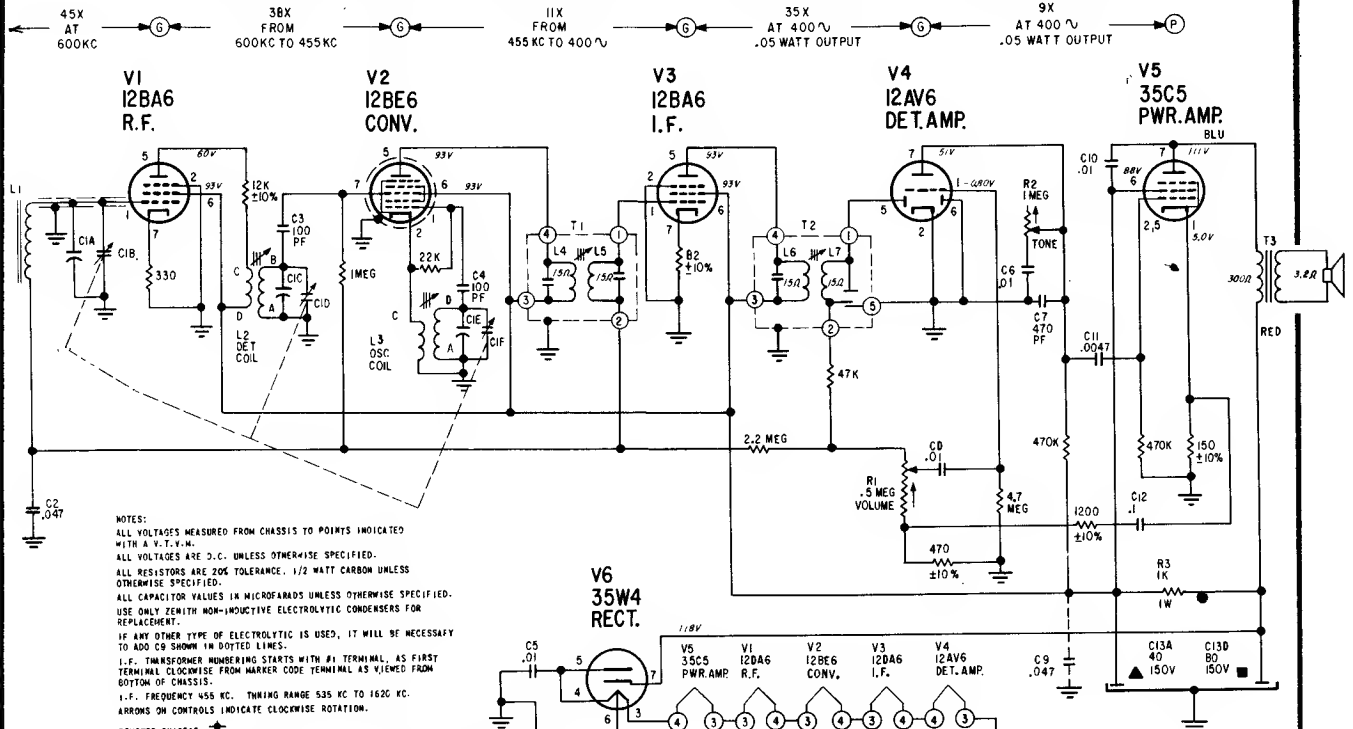

DIAL CORD DRIVE
COUNTERCLOCKWISE POSITION

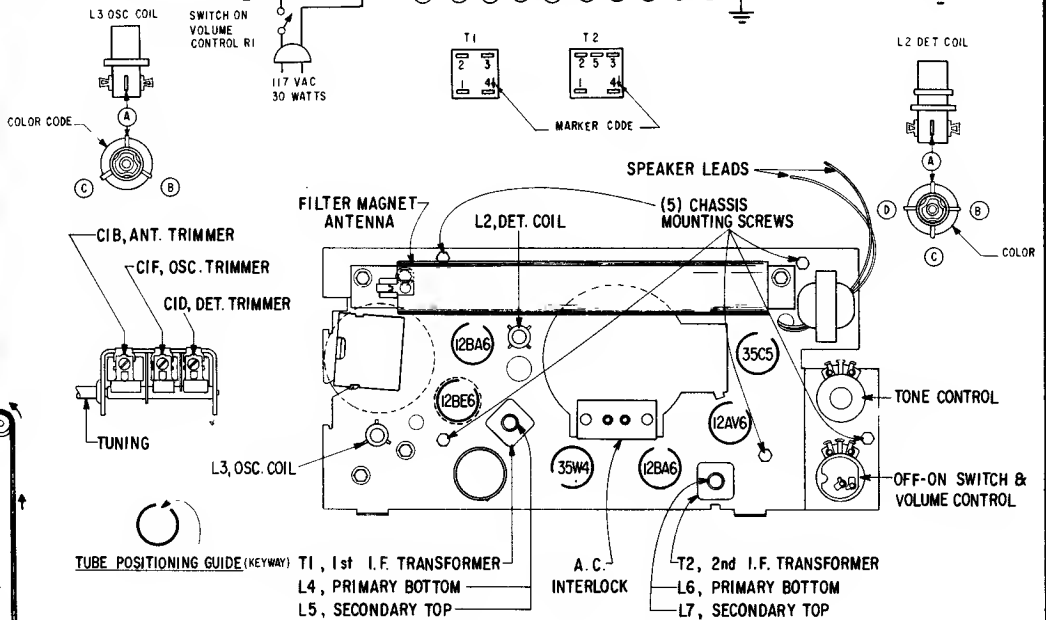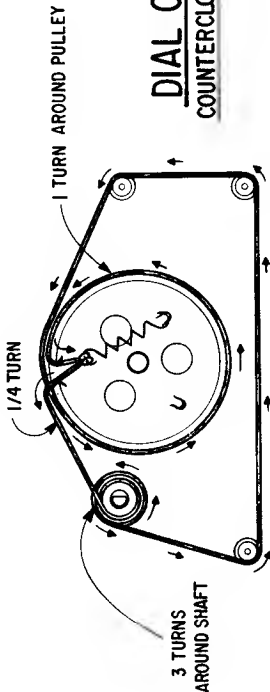


ALIGNMENT PROCEDURE

Operation	Connect Oscillator To	Dummy Antenna	Input Sig. Frequency	Set Dial At	Trimmers	Purpose
1	Converter Grid	.5 Mfd.	455 Kc.	600 Kc	L4, L5, L6, L7	For I.F. Alignment.
2	One Turn Loop Coupled	—	1600 Kc.	1600 Kc.	C1F	Set Oscillator to Dial Scale
3	Loosely to Wave Magnet	—	1400 Kc.	1400 Kc.	C1D, C1B	Align Detector and Antenna Stage


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

ZENITH RADIO MODEL M722C, L & W CHASSIS 6M06


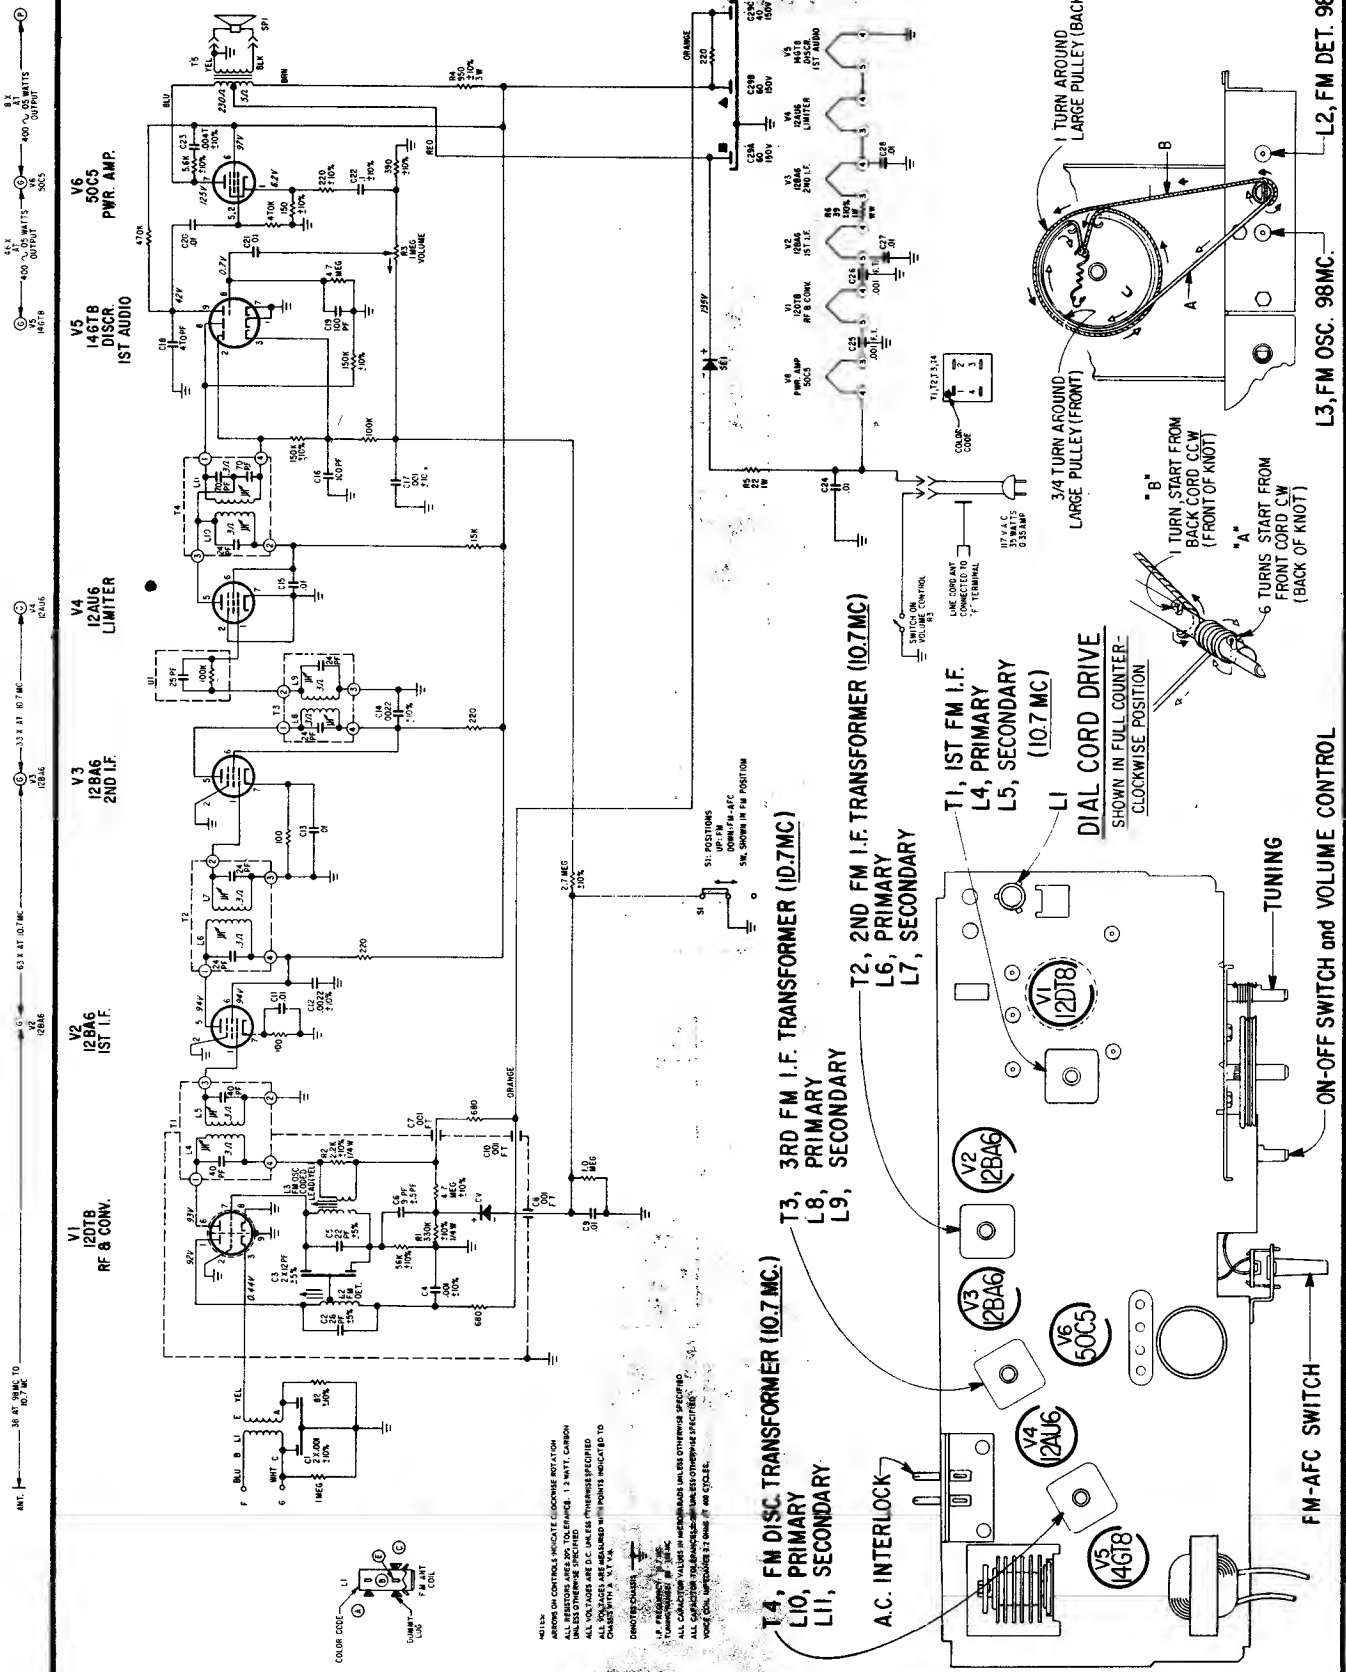


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO

ZENITH RADIO CORPORATION
MODEL L724C, L&W CHASSIS 7L02

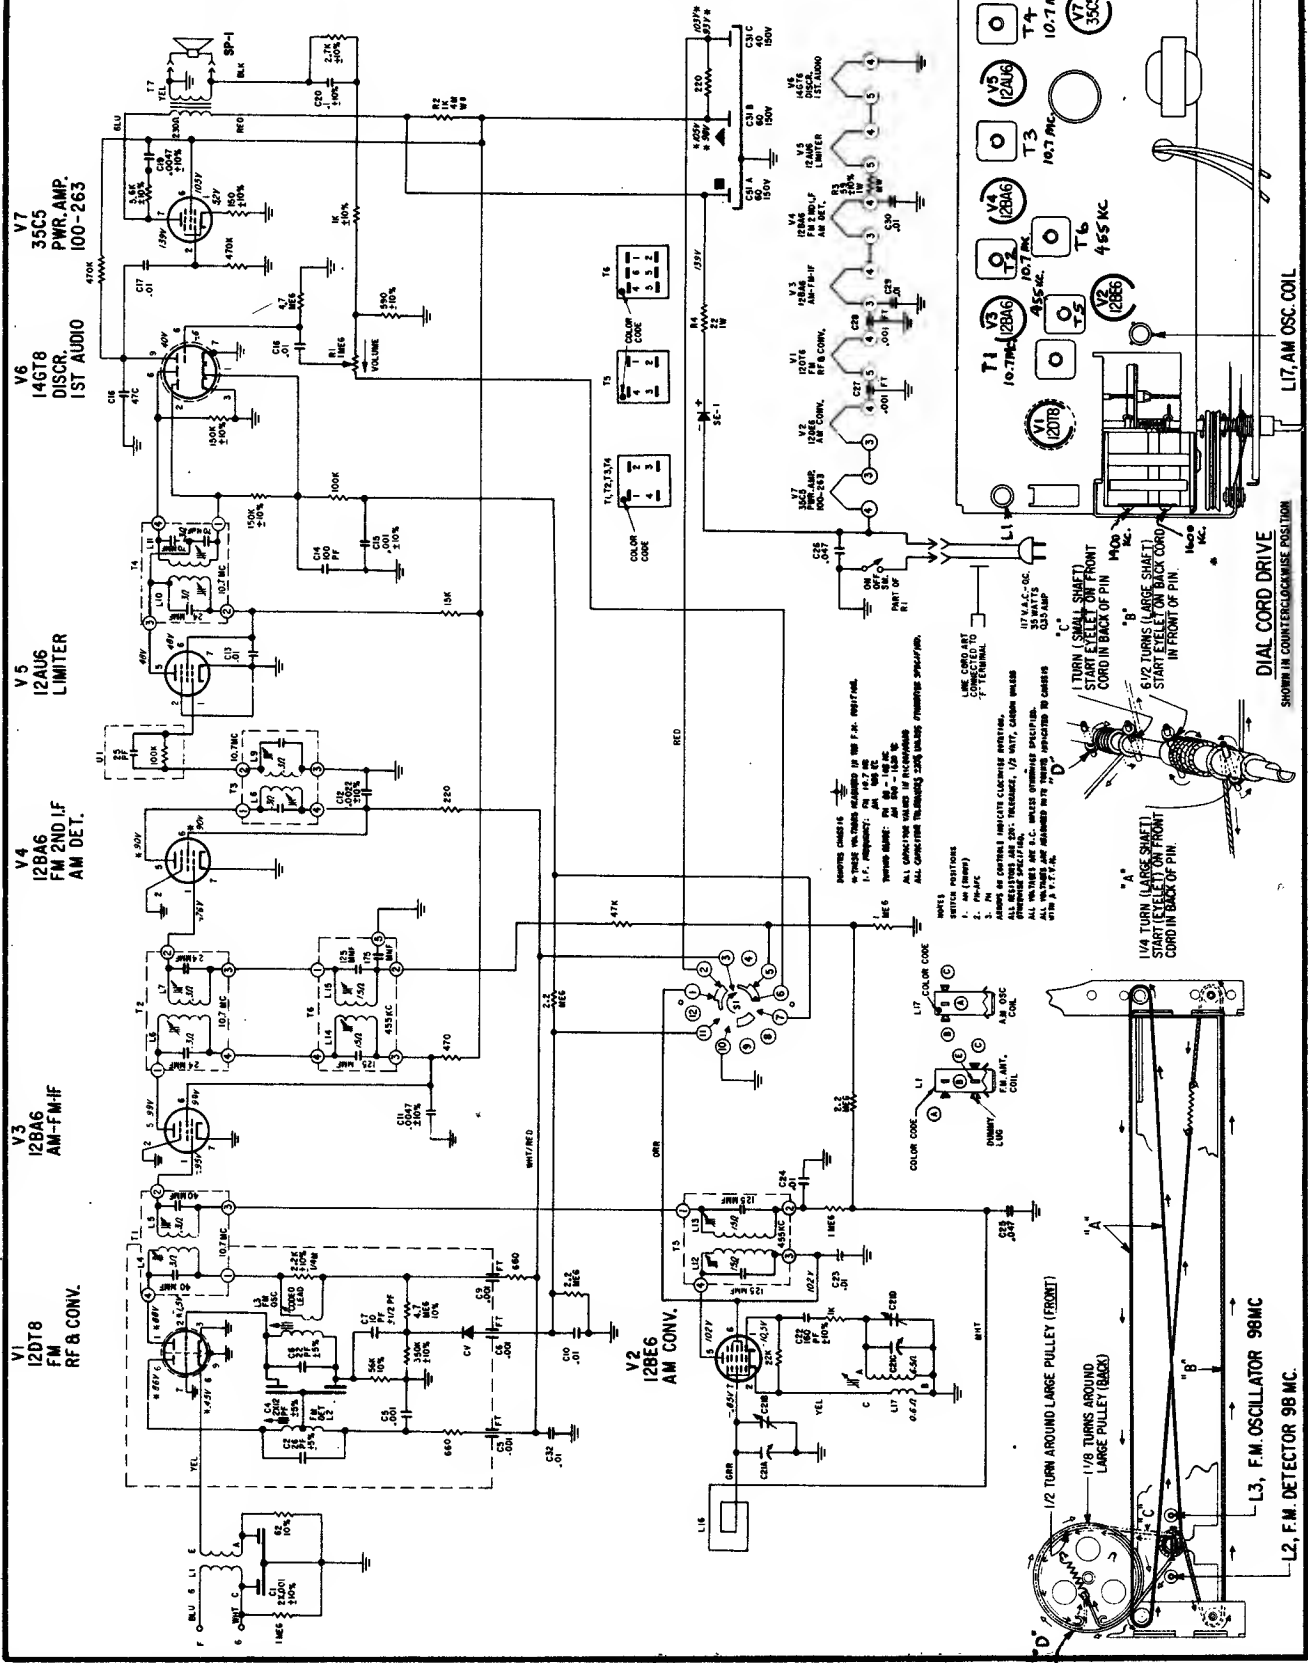


SWITCHES
SERIES POSITIONS
1. PWR-ON
2. PWR-OFF
3. FM AS DETECTOR INDICATE ELECTRONIC TUNING
ALL RESISTORS ARE 5% TOLERANCE, UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS UNLESS OTHERWISE SPECIFIED.

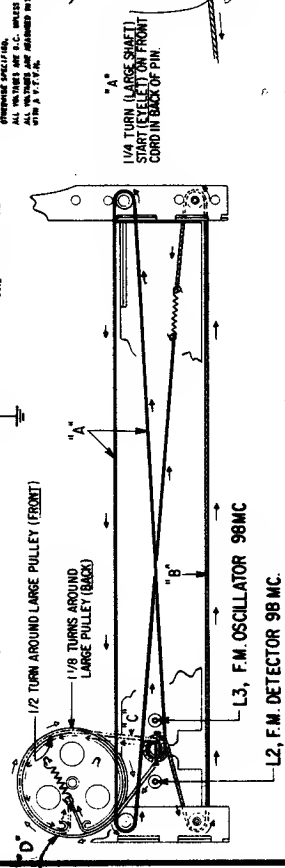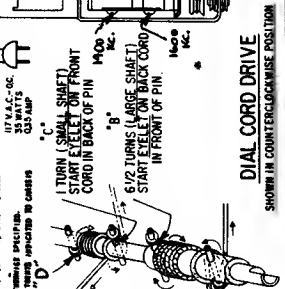

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


ZENITH RADIO Models M723A, C, W, Chassis 7M04,
Clock Models L727C, L, W, Chassis 7L03, are almost identical.

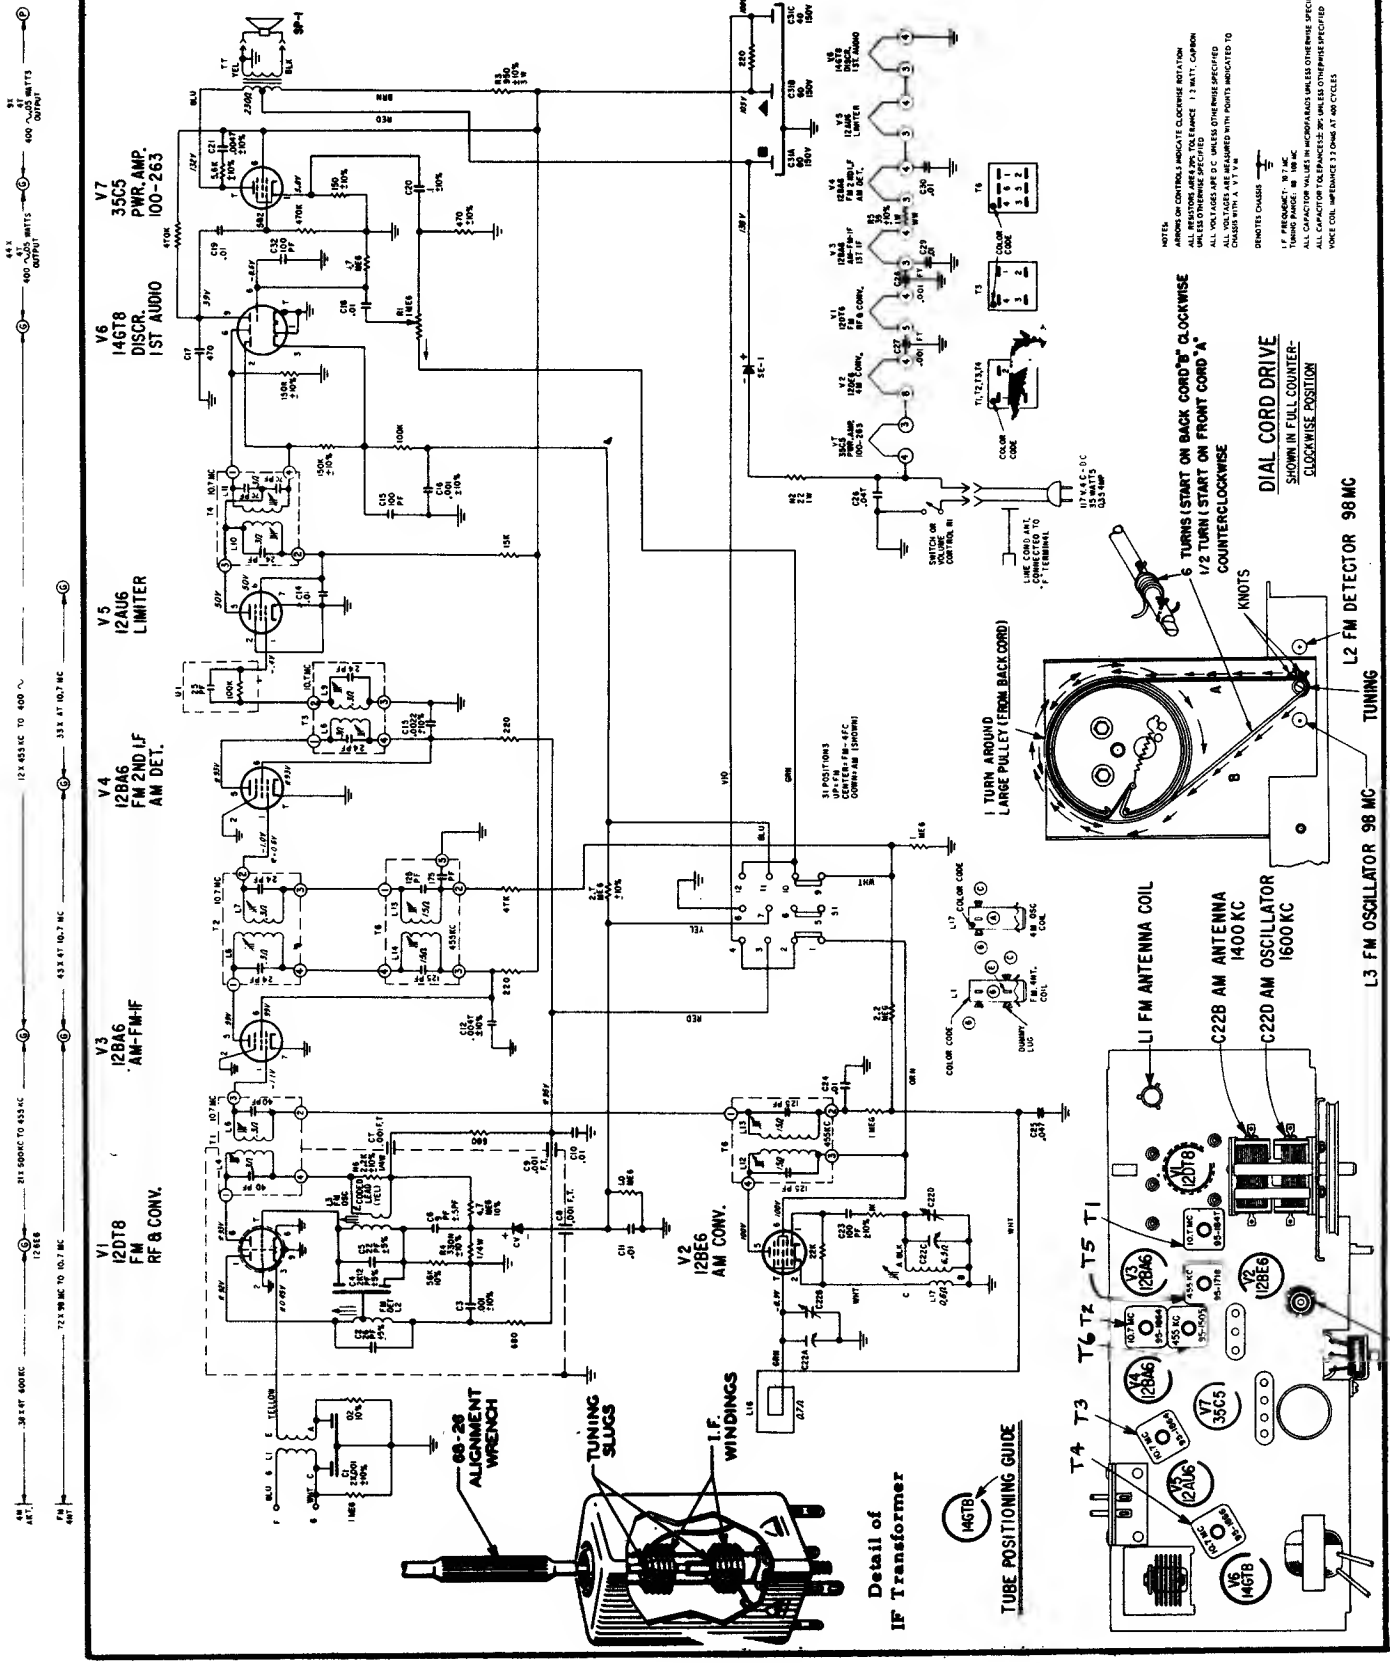


ZENITH RADIO MODEL "ROYAL 645L"

CHASSIS 6LT45Z2



(Continued on the next page, at right)

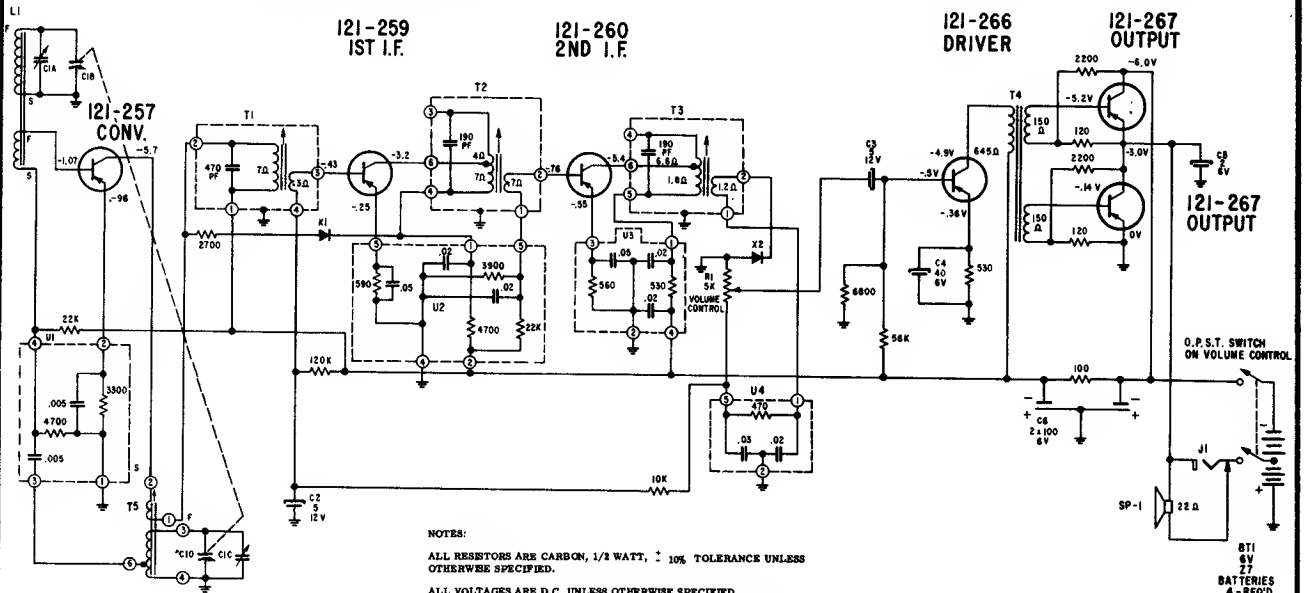

NOTES:
 ALL RESISTORS ARE CARBON, 1/2 WATT, ± 10% TOLERANCE UNLESS OTHERWISE SPECIFIED.
 ALL VOLTAGES ARE D.C. UNLESS OTHERWISE SPECIFIED.
 ALL CONDENSERS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
 D.C. VOLTAGES SHOWN ARE MEASURED FROM CHASSIS WITH NO SIGNAL USING A VACUUM TUBE VOLTMETER.
 DENOTES CHASSIS ⏚
 BATTERY CURRENT DRAIN APPROX. 7 MA WITH VOLUME CONTROL AT MINIMUM.
 SPEAKER IMPEDANCE 22Ω AT 400 CPS.

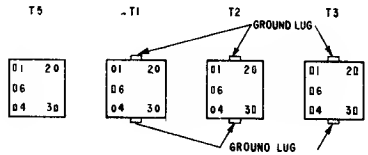


PNP TRANSISTORS

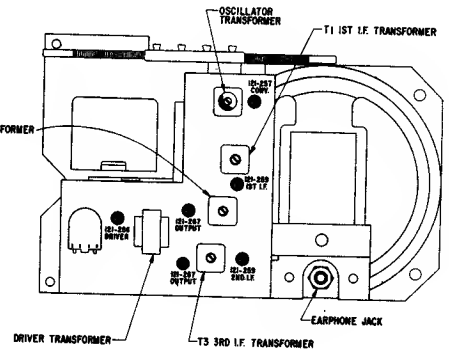

ALIGNMENT PROCEDURE


Operation	Input Signal Frequency	Connect Inner Conductor From Oscillator To	Connect Outer Shield Conductor From Oscillator To	Set Dial At	Trimmers	Purpose
1	455 KC	ONE TURN LOOSELY COUPLED TO WAVEMAGNET	Chassis	600 KC	Adj. T1, T2, T3 for maximum output.	For I.F. Alignment
2	1620 KC		—	Gang wide open.	C1C	Set Oscillator to dial scale.
3	535 KC		—	Gang Closed	Adjust slug in T6	Set Oscillator to dial scale.
4	REPEAT STEPS 2 & 3		—	—	—	—
5	1260 KC	—	—	1260 KC	C1A	Align loop ant.

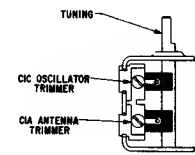

TRANSISTOR INFORMATION CHART

Chassis	Part No.	Conv.	1st I.F.	2nd I.F.	Crystal Diode	Driver	Output-Output	Supplier
6LT45Z2	Zenith Type E.I.A.	121-257 PNP 2N1526	121-259 PNP 2N1524	121-260 PNP 2N1524	103-44	121-266 PNP 2N406	121-267 Pair PNP 2N408	R.C.A.

ZENITH RADIO Model Royal 645L, Chassis 6LT45Z2
(Continued from preceding page, at left)

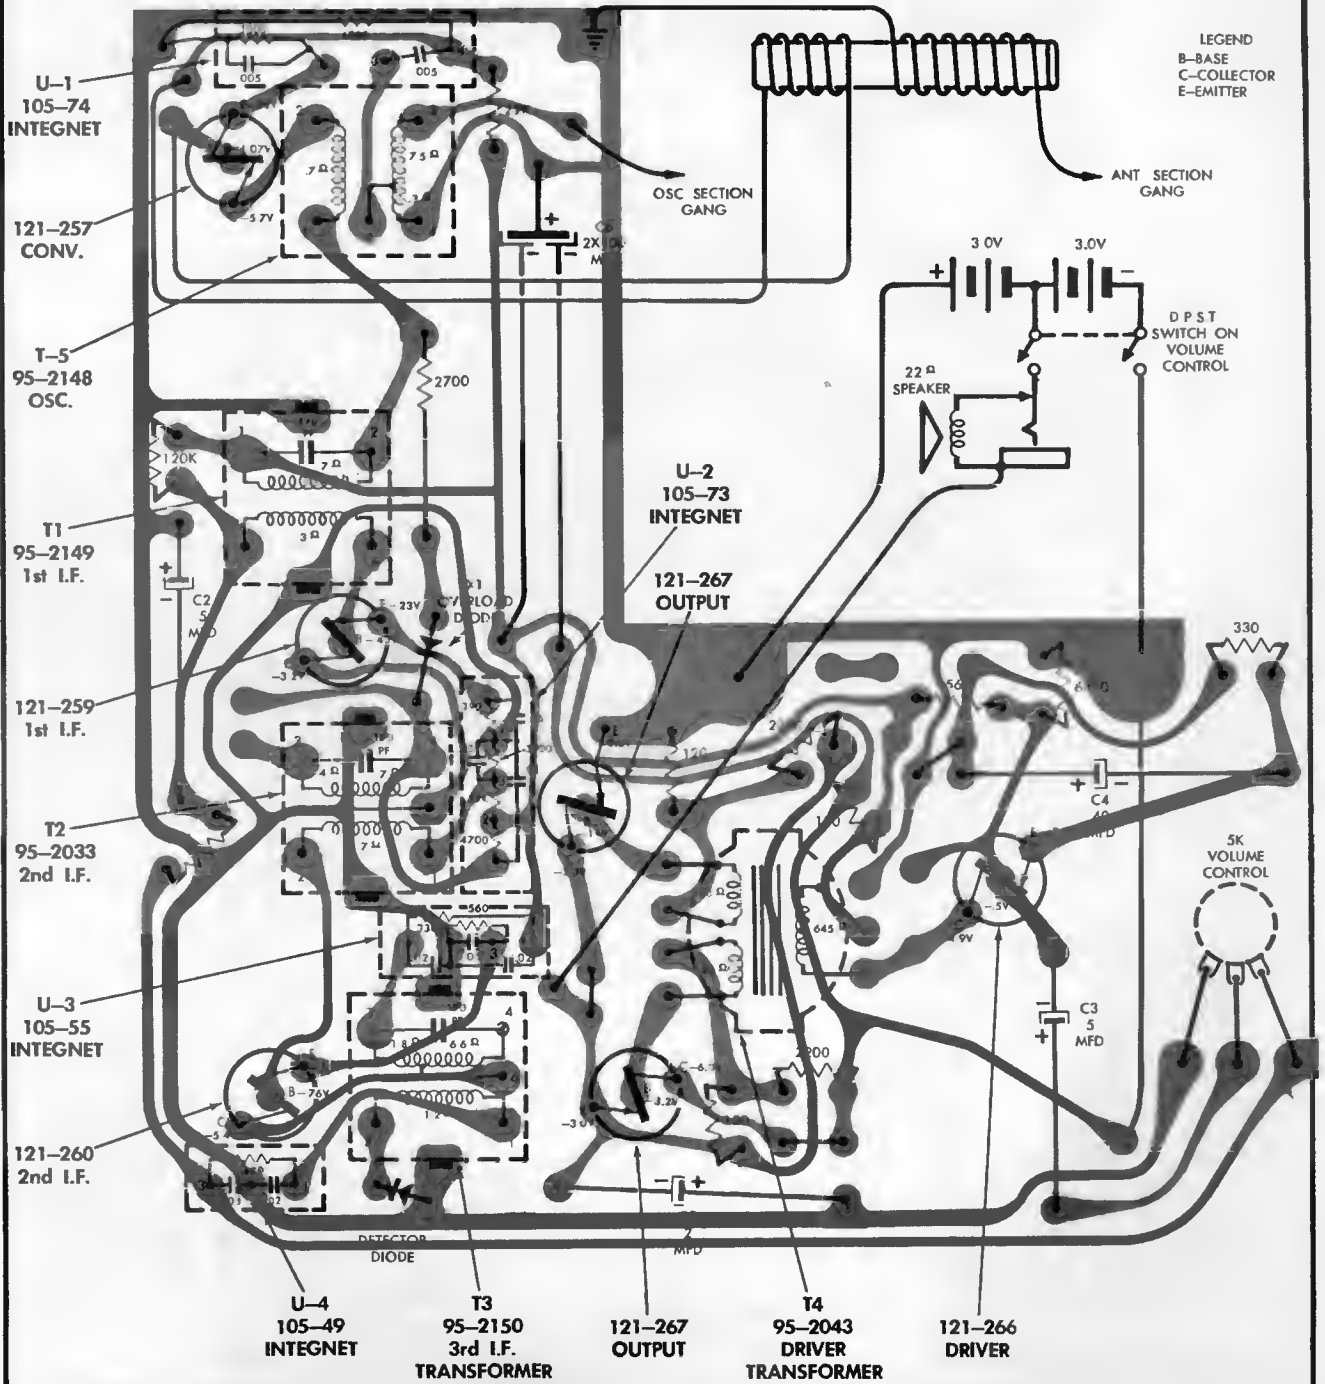


CHASSIS, WIRING AND COMPONENTS VIEWED FROM WIRING SIDE

Resistors and capacitors should be replaced by clipping out the defective part and neatly soldering in the new part. If a unit, such as the oscillator coil or I.F. transformer, is to be removed heat the mounting lugs with a pencil type soldering iron and move them away from the soldered connection with a long-nose pliers or metal pick. Continue heating the lugs and brush away the molten

solder with a small stiff glue brush. Remove the defective unit by lifting it off the chassis. Before inserting the new unit, be certain that the lug holes are open and free from solder. Forcing a lug against a solder filled lug hole may break the bond between the chassis base and the printed wiring. It is, therefore, necessary to exercise care when replacing units.

ZENITH RADIO CHASSIS 8LT40Z1 MODEL "ROYAL 500H-1"


(Continued on the next page, at right)

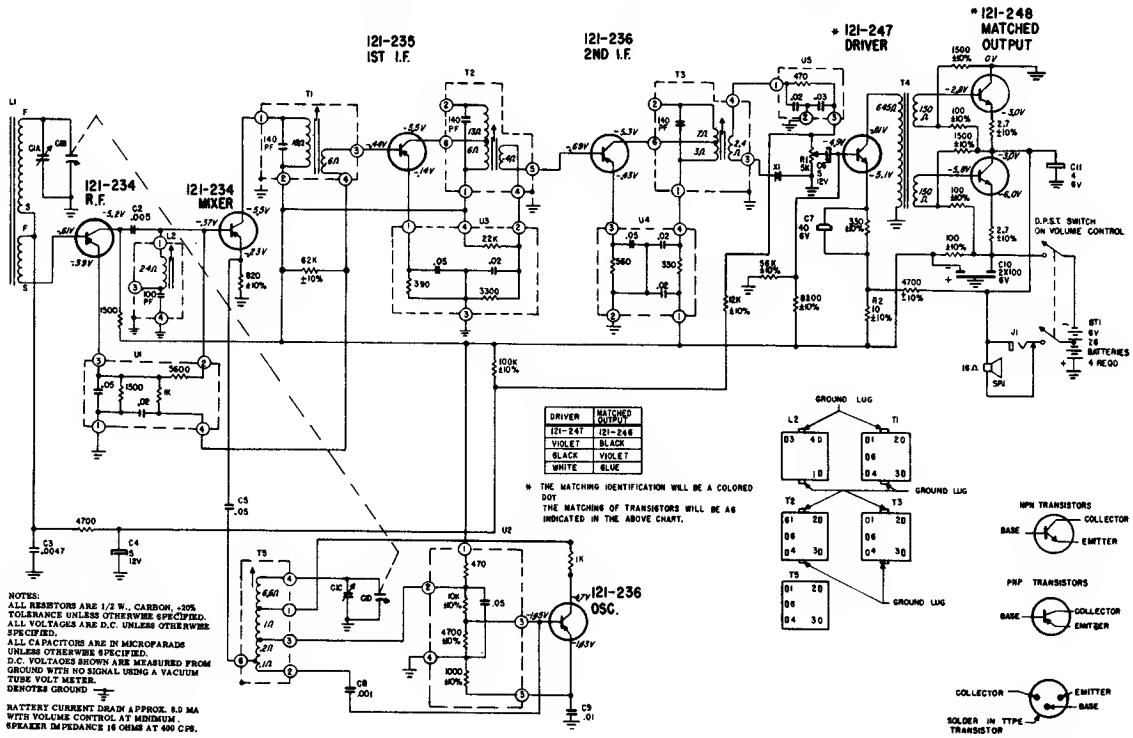

NOTES:
 ALL RESISTORS ARE 1/2 W. CARBON, ±2% TOLERANCE UNLESS OTHERWISE SPECIFIED. ALL VOLTAGES AND D.C. UNLESS OTHERWISE SPECIFIED.
 ALL CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
 D.C. VOLTAGES SHOWN ARE MEASURED FROM GROUND WITH NO SIGNAL USING A VACUUM TUBE VOLT METER.
 DESIGNATE GROUND
 BATTERY CURRENT DRAIN APPROX. 6.5 MA WITH VOLUME CONTROL AT MINIMUM. SPEAKER IMPEDANCE 16 OHMS AT 400 C/P.

ALIGNMENT PROCEDURE

Operation	Input Frequency	Connect Inner Conductor From Oscillator To	Set Dial At	Trimmers	Purpose	
1	455 KC	ONE TURN LOOSELY COUPLED TO THE ANTENNA	600 KC	Adj. T1, T2 T3 for Maximum output	For I.F. Alignment	
2	455 KC		600 KC	Adj. L2 for Minimum output	Tune Trap to IF Frequency	
3	1620 KC		Gang Wideopen	C1C	Set Oscillator To Dial Scale	
4	600 KC		Near 600	Adjust slug in T5	Adjust T5 for Maximum output while rocking gang. Tune T5 for Maximum output regardless of dial accuracy	
5	Repeat Steps 3 & 4					
6	1260 KC		1260 KC	C1A	Align Loop Antenna	

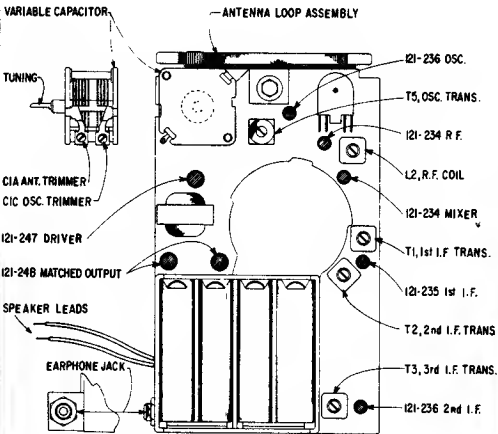


TRANSISTOR & TRIMMER LAYOUT

CHASSIS INFORMATION CHART

CHASSIS	PART NO.	R.F.	MIXER	OSC.	1ST I.F.	2ND I.F.	CRYSTAL DIODE DETECTOR	DRIVER	OUTPUT-OUTPUT	SUPPLIER
8LT40Z1	Zenith Type E.I.A.	121-234 PNP GC282	121-234 PNP GC282	121-236 PNP GC284	121-235 PNP GC284	121-236 PNP GC284	103-19 or 103-44	121-247 NPN GC608	121-248 Pair NPN NPN GC609	Texas Instrument

ZENITH RADIO Model "Royal 500H-1" -- Chassis 8LT40Z1
 (Continued from preceding page, at left)

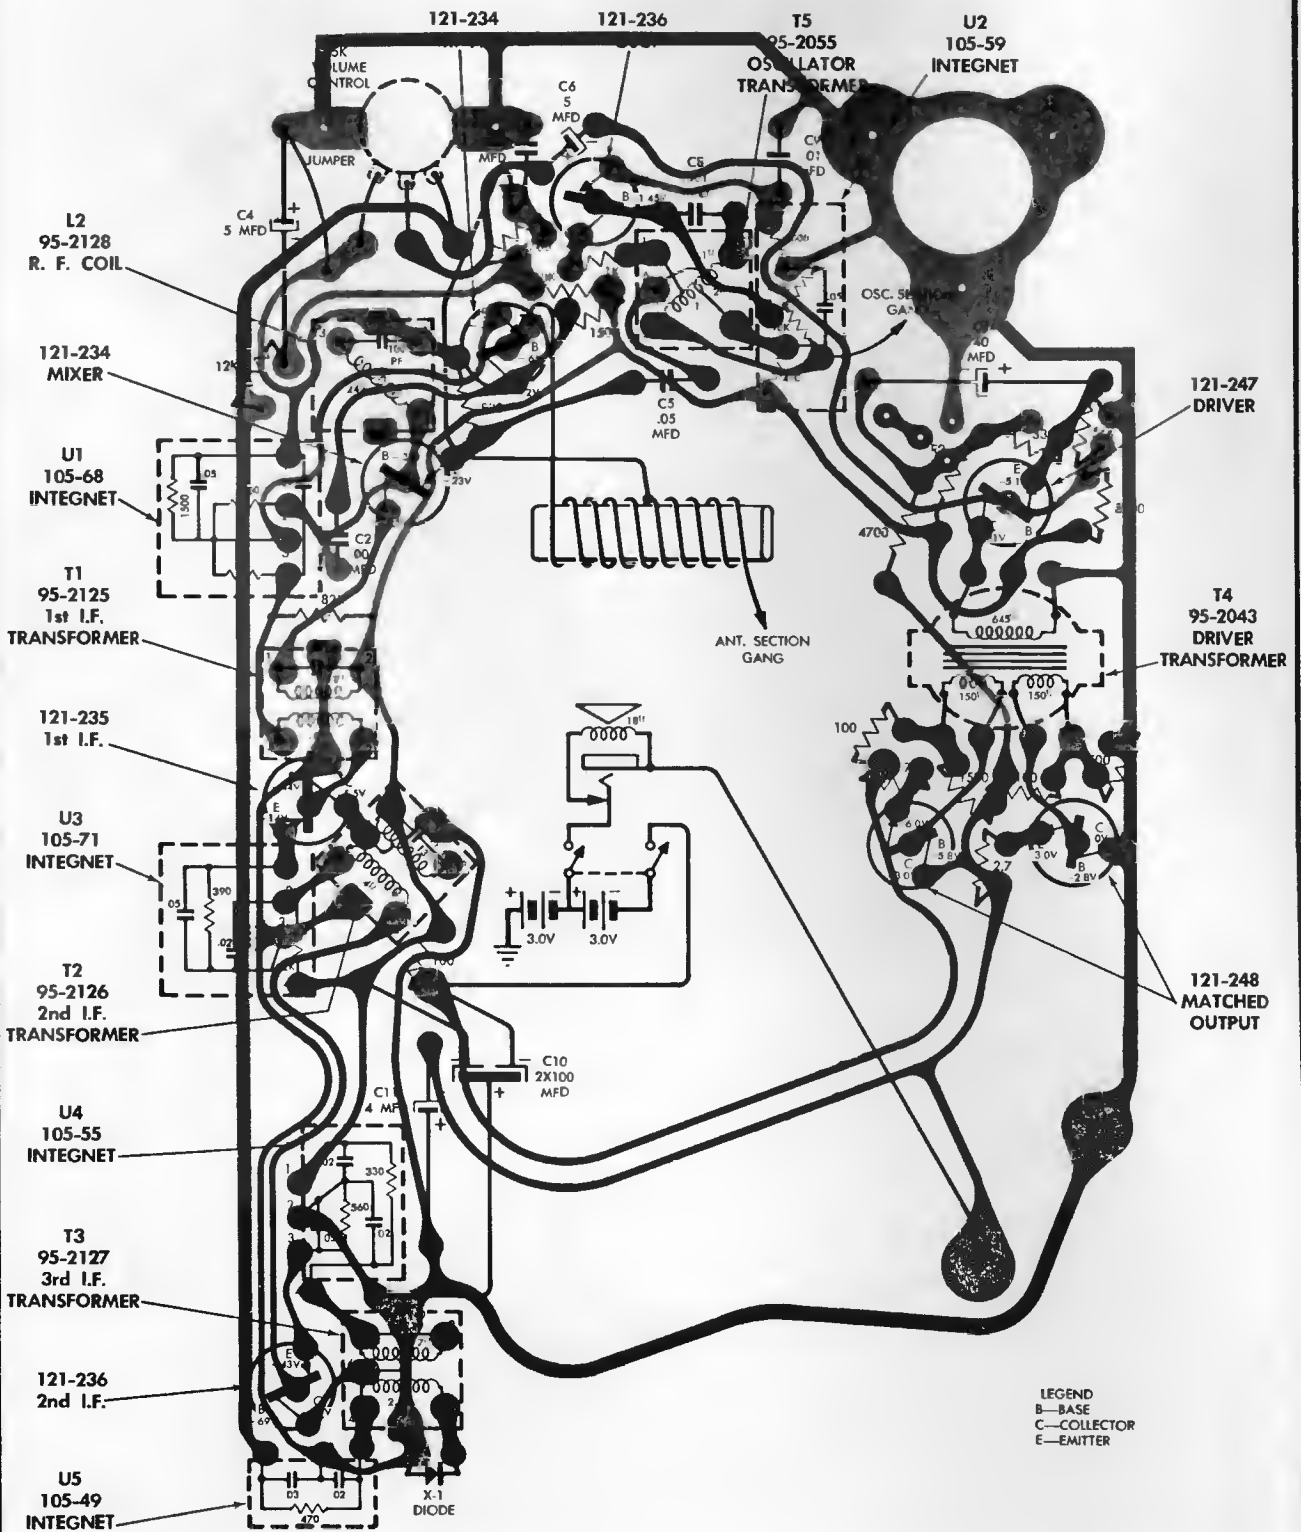


CHASSIS, WIRING AND COMPONENTS

VIEWED FROM WIRING SIDE

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

ZENITH RADIO Chassis 8LT45Z1, 8LT45Z3, Model "Royal 500L"
(Continued from preceding page, at left)

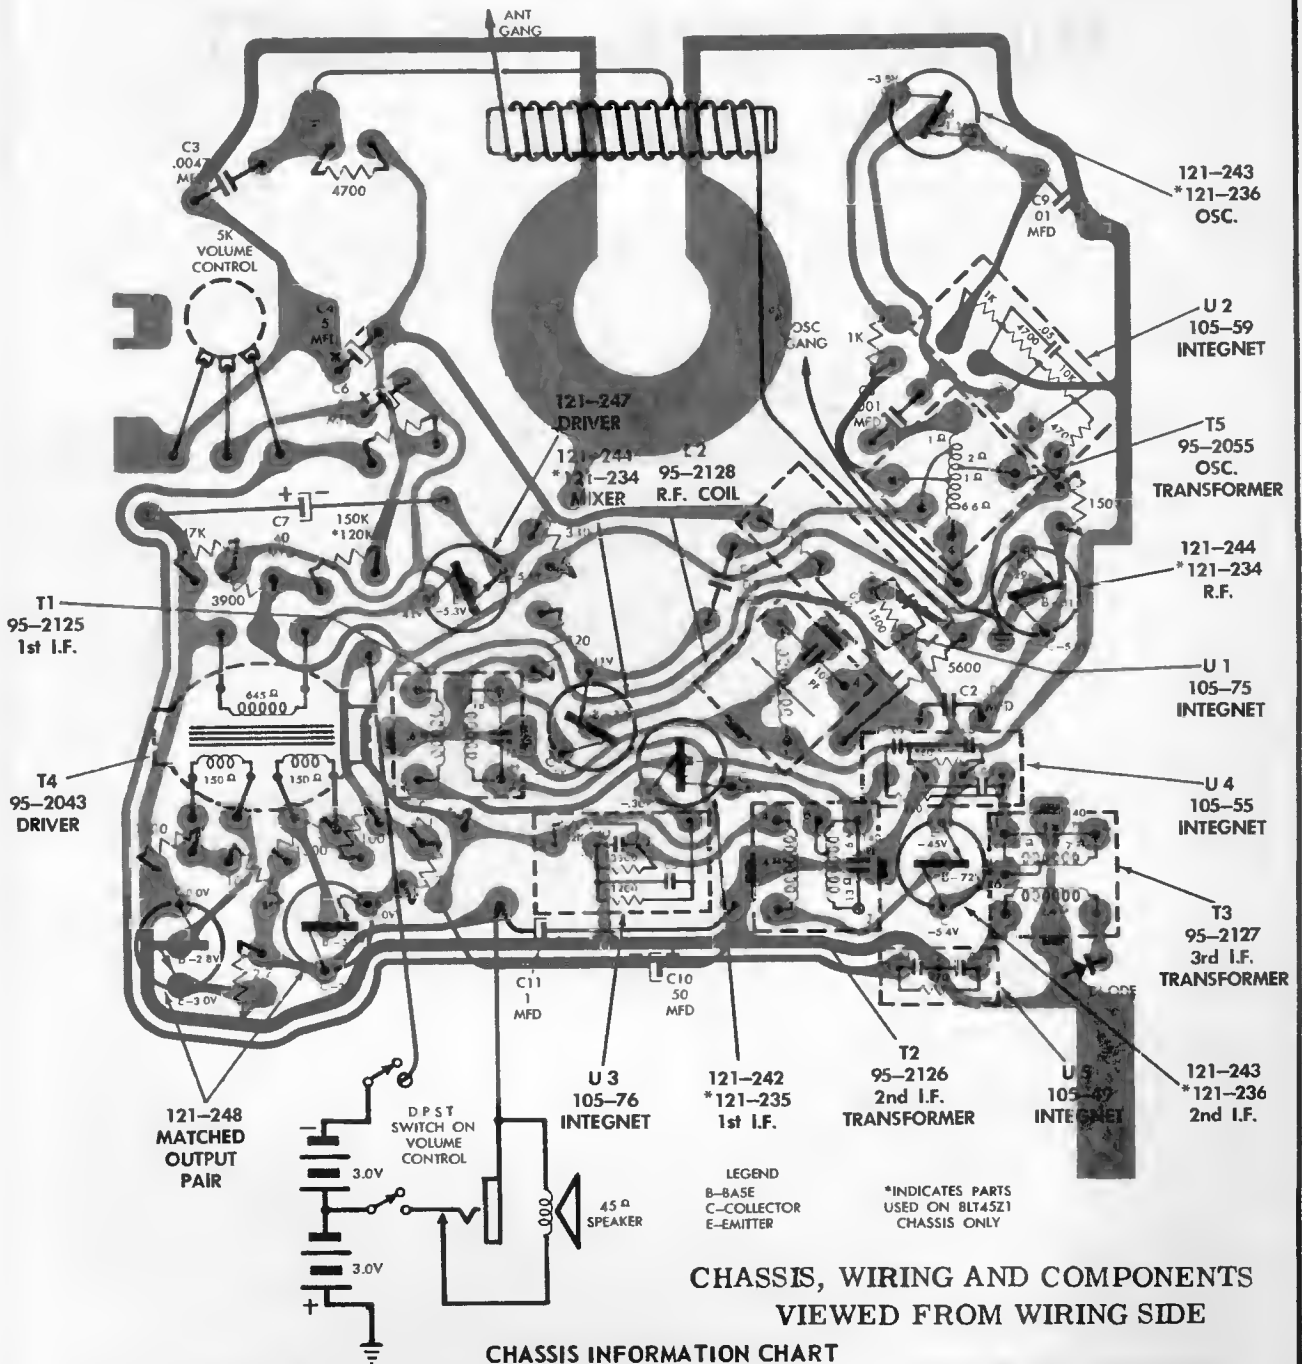


CHASSIS, WIRING AND COMPONENTS
VIEWED FROM WIRING SIDE


CHASSIS INFORMATION CHART

Chassis	Part No.	R. F.	Mixer	Osc.	1st I.F.	2nd I.F.	Crystal Diode Detector	Driver	Output	Supplier
8LT45L1	Zenith Type E.I.A.	121-234 PNP GC282	121-234 PNP GC282	121-236 PNP GC284	121-235 PNP GC284	121-236 PNP GC284	103-19 or 103-44	121-247 NPN GC608	121-248 Matched Pair NPN NPN GC609	Texas Instrument
8LT45Z3	Zenith Type E.I.A.	121-244 PNP 2N993	121-244 PNP 2N993	121-243 PNP 2N993	121-242 PNP 2N993	121-243 PNP 2N993	Same as Above	Same as Above	Same as Above	Amperex

ZENITH RADIO CORP. CHASSIS 8KT40Z2 MODELS ROYAL 285-500E1

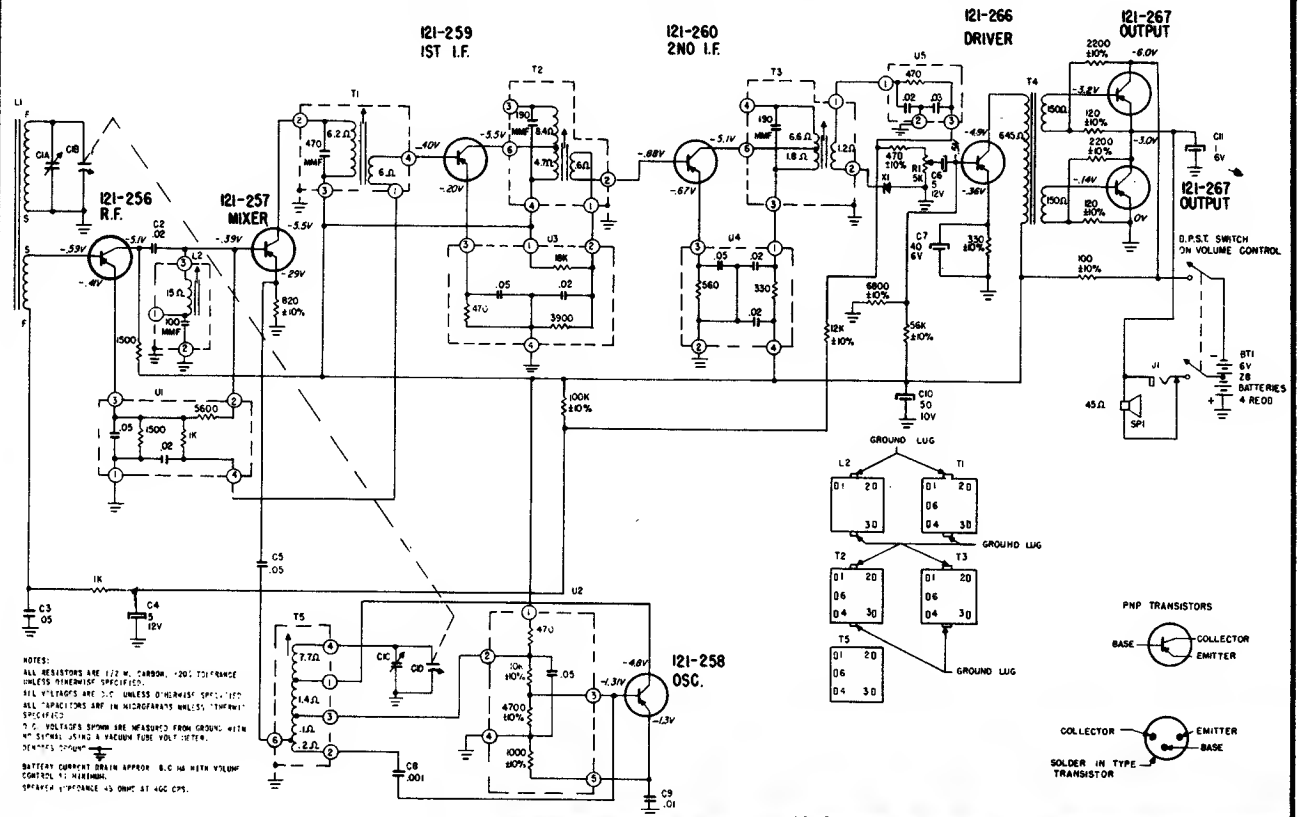

NOTES:
ALL RESISTORS ARE 1/2 W. CARBON, ±20% TOLERANCE UNLESS OTHERWISE SPECIFIED.
ALL VOLTAGES ARE 0.5% UNLESS OTHERWISE SPECIFIED.
ALL CAPACITORS ARE IN MICROFARADS UNLESS OTHERWISE SPECIFIED.
D.C. VOLTAGES SPREAD ARE MEASURED FROM GROUND WITH AN OSCILLOSCOPE IN VACUUM TUBE SOCKET TESTER.
DETUNING CONTROL
BATTERY CURRENT DRAIN APPROX. 0.5 C.H. WITH VOLUME CONTROL AT MAXIMUM.
SPEAKER IMPEDANCE 45 OHMS AT 400 CPS.

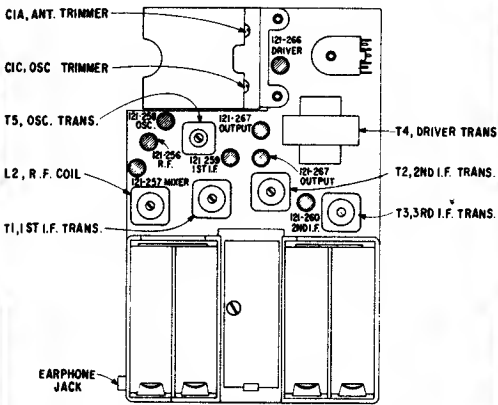

TRANSISTOR & TRIMMER LAYOUT

ALIGNMENT PROCEDURE


Operation	Input Signal Frequency	Connect Inner Conductor From Oscillator To	Set Dial At	Trimmers	Purpose	
1	455 KC	ONE TURN LOOSELY COUPLED TO THE ANTENNA	600 KC	Adj. T1, T2, T3 for Maximum output	For I.F. Alignment	
2	455 KC		600 KC	Adj. L2 for Minimum output	Tune Trap to IF Frequency	
3	1620 KC		Gang Wideopen	C1C	Set Oscillator To Dial Scale	
4	600 KC		Near 600	Adjust slug in T5	Adjust T5 for Maximum output while rocking gang. Tune T5 for Maximum output regardless of dial accuracy	
5	Repeat Steps 3 & 4					
6	1260 KC		1260 KC	C1A	Align Loop Antenna	

CHASSIS INFORMATION CHART


Chassis	Part No.	R.F.	Mixer	Osc.	1st I.F.	2nd I.F.	Crystal Diode Detector	Driver	Output-Output	Supplier
8KT40Z2	Zenith Nyp E.I.A.	I21-256 PNP 2N1632	I21-257 PNP 2N1526	I21-258 PNP 2N1524	I21-259 PNP 2N1524	I21-260 PNP 2N1524	103-19 or 103-44	I21-266 PNP 2N406	I21-267 Pair PNP PNP 2N408	R.C.A.

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION


ZENITH Chassis 3L03, Model LPS50

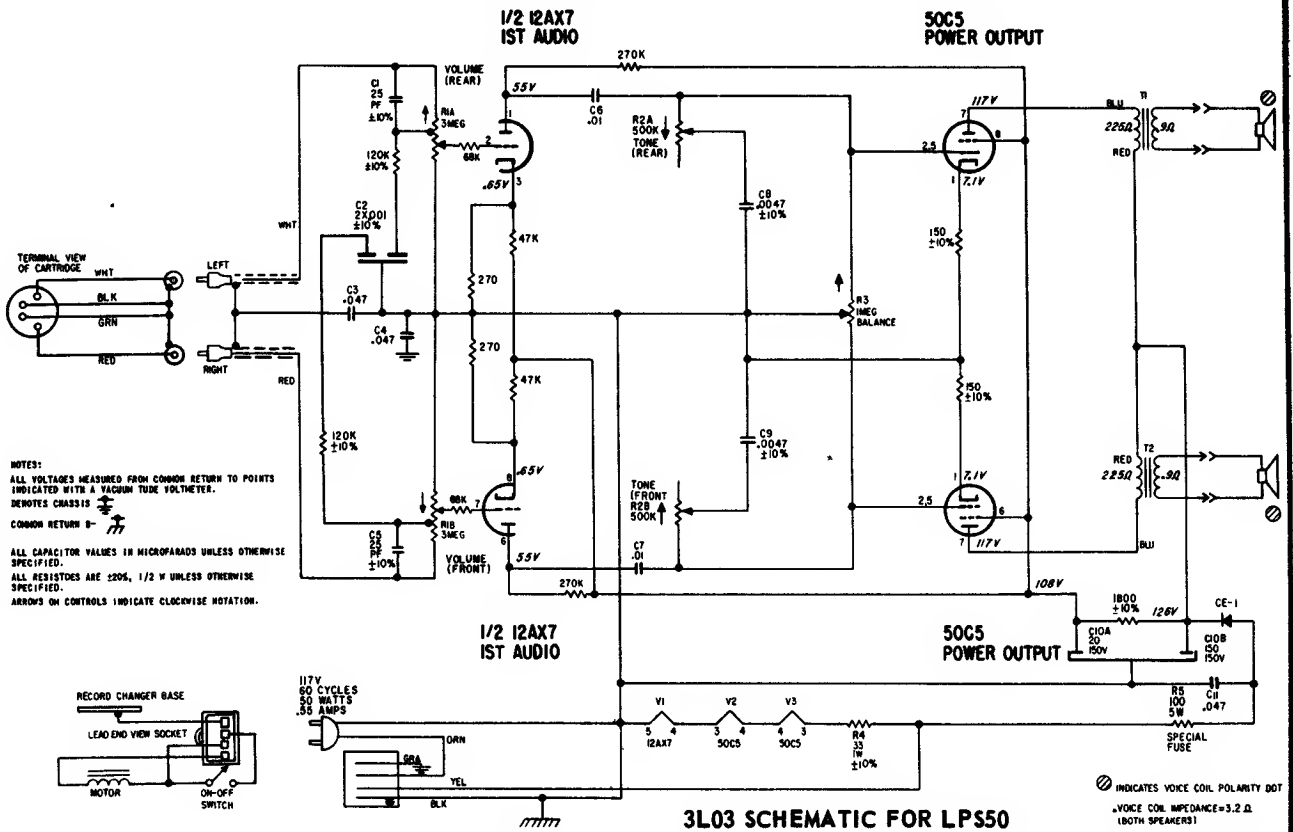

ZENITH Chassis 3L05, Model LPS75

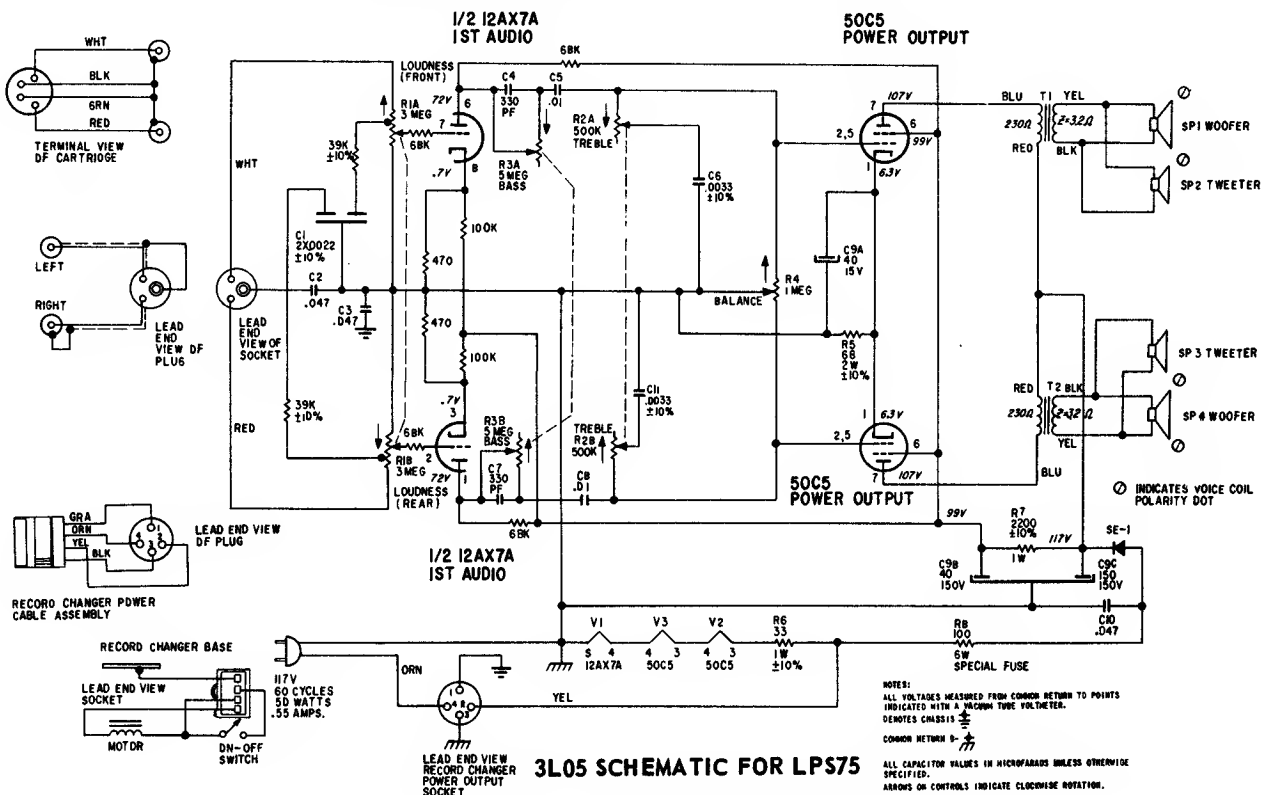


VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

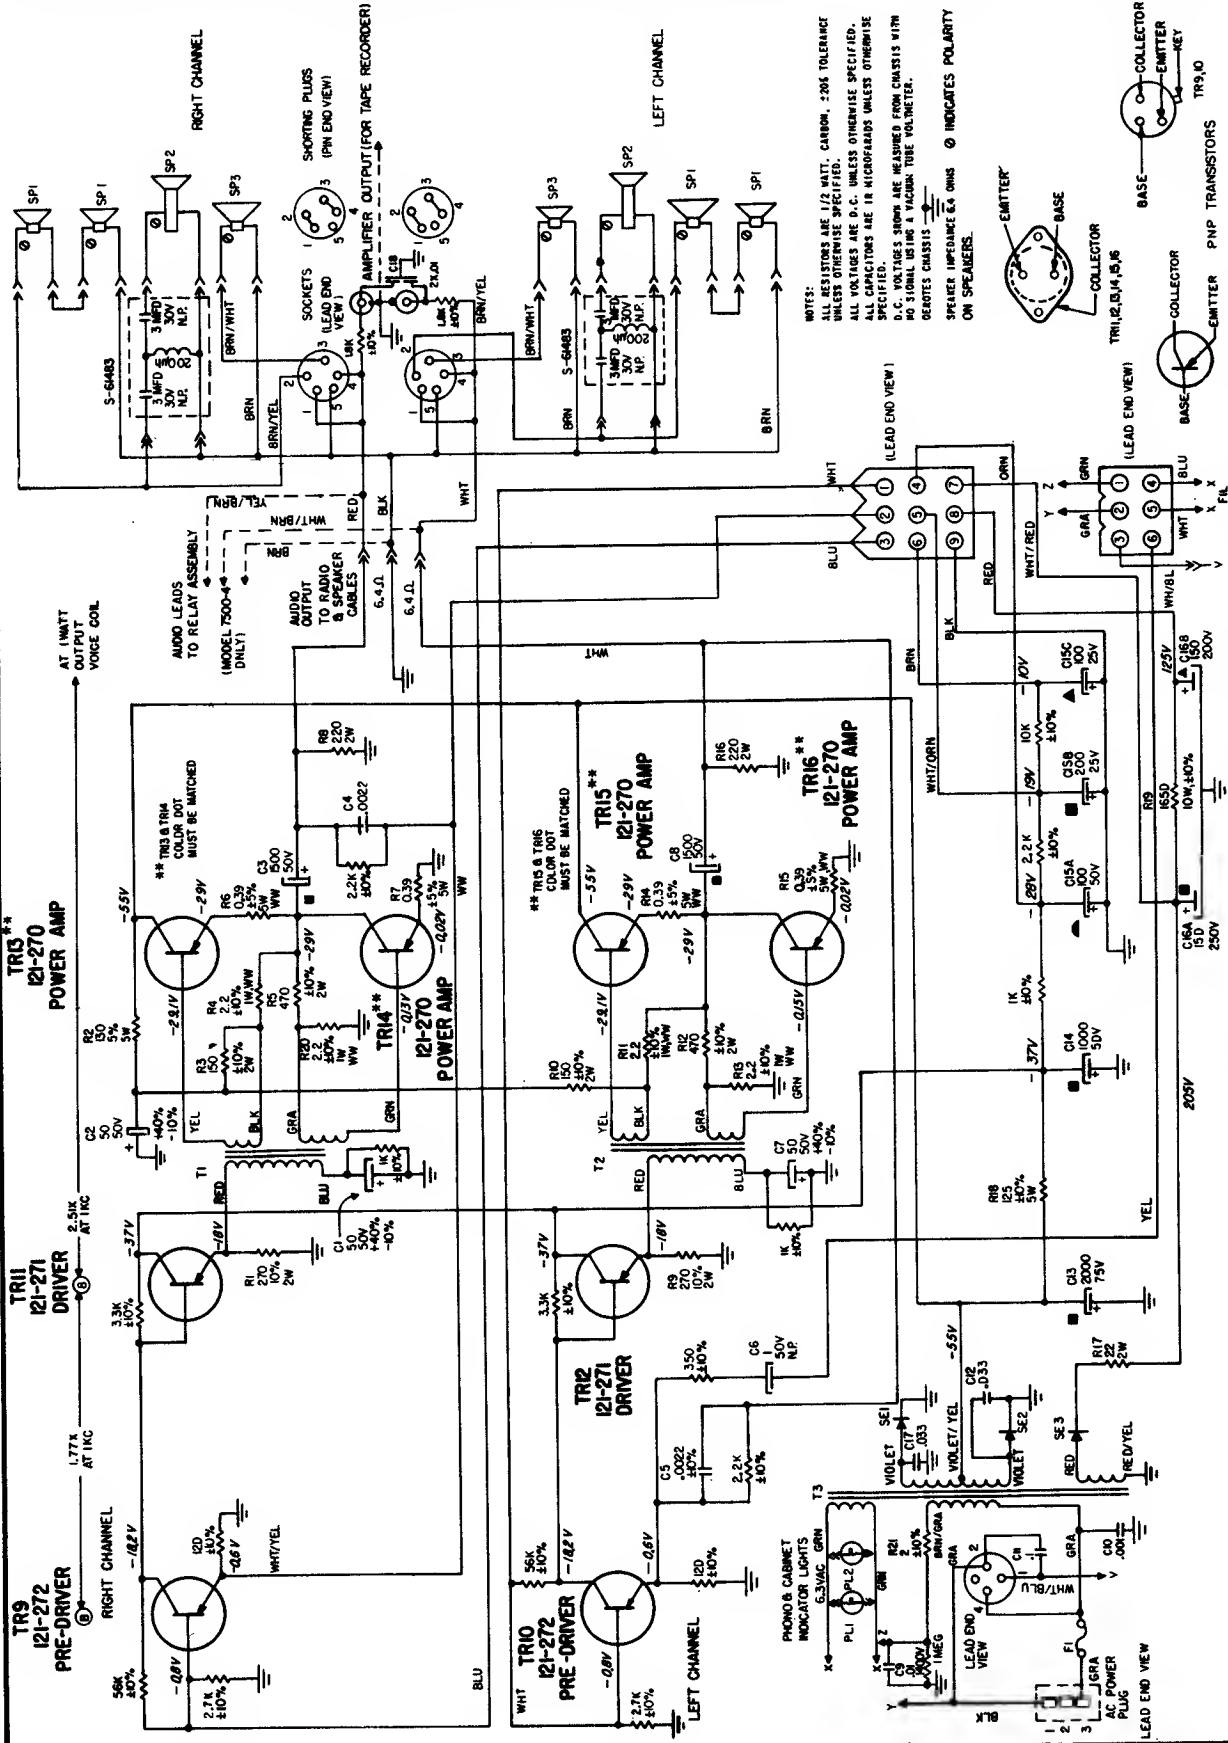

ZENITH 8L25Z SCHEMATIC FOR MODELS ML2670-3, ML2675-3, ML2685-3 AND 7500-3

VOLUME R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

ZENITH Chassis 10LT20 used in Models ML2608-3, ML2610-3, ML2636-3, and 7200-3.

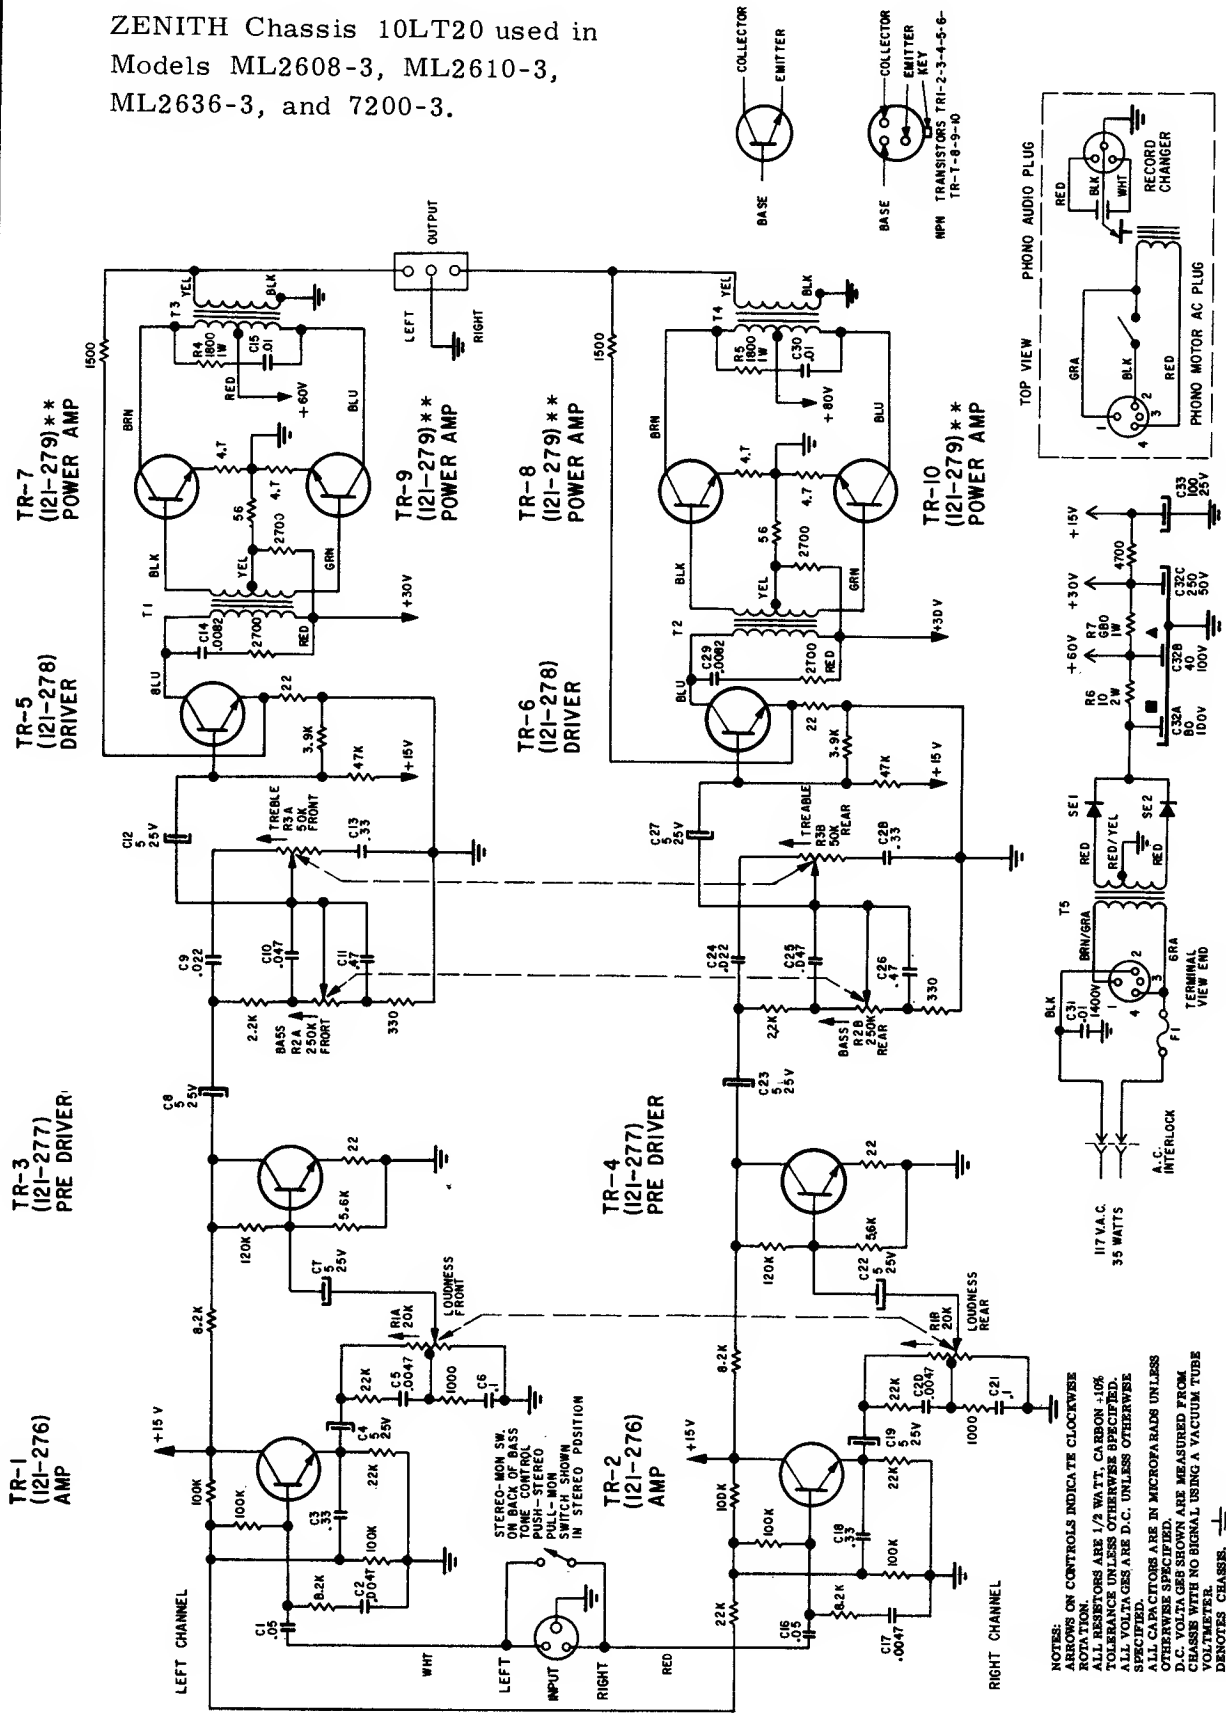


NOTES:
 ARROWS ON CONTROLS INDICATE CLOCKWISE
 ALL RESISTORS ARE 1/2 WATT CARBON J105
 TOLERANCE UNLESS OTHERWISE SPECIFIED.
 ALL VOLTAGES ARE D.C. UNLESS OTHERWISE
 SPECIFIED.
 ALL CAPACITORS ARE IN MICROFARADS UNLESS
 OTHERWISE SPECIFIED.
 D.C. VOLTAGES SHOWN ARE MEASURED FROM
 CHASSIS WITH NO SIGNAL USING A VACUUM TUBE
 VOLTMETER.
 DENOTES CHASSIS.

**** ** IMPEDANCE 6.4 OHMS.
 ALL 10LT20 CHASSIS
 MUST HAVE THE SAME COLOR CODE.**

10LT20 SCHEMATIC FOR MODELS ML2608-3, ML2610-3, ML2636-3 AND 7200-3

ZENITH Chassis 10L23, Models ML2785-3 and ML2786-3, Continued

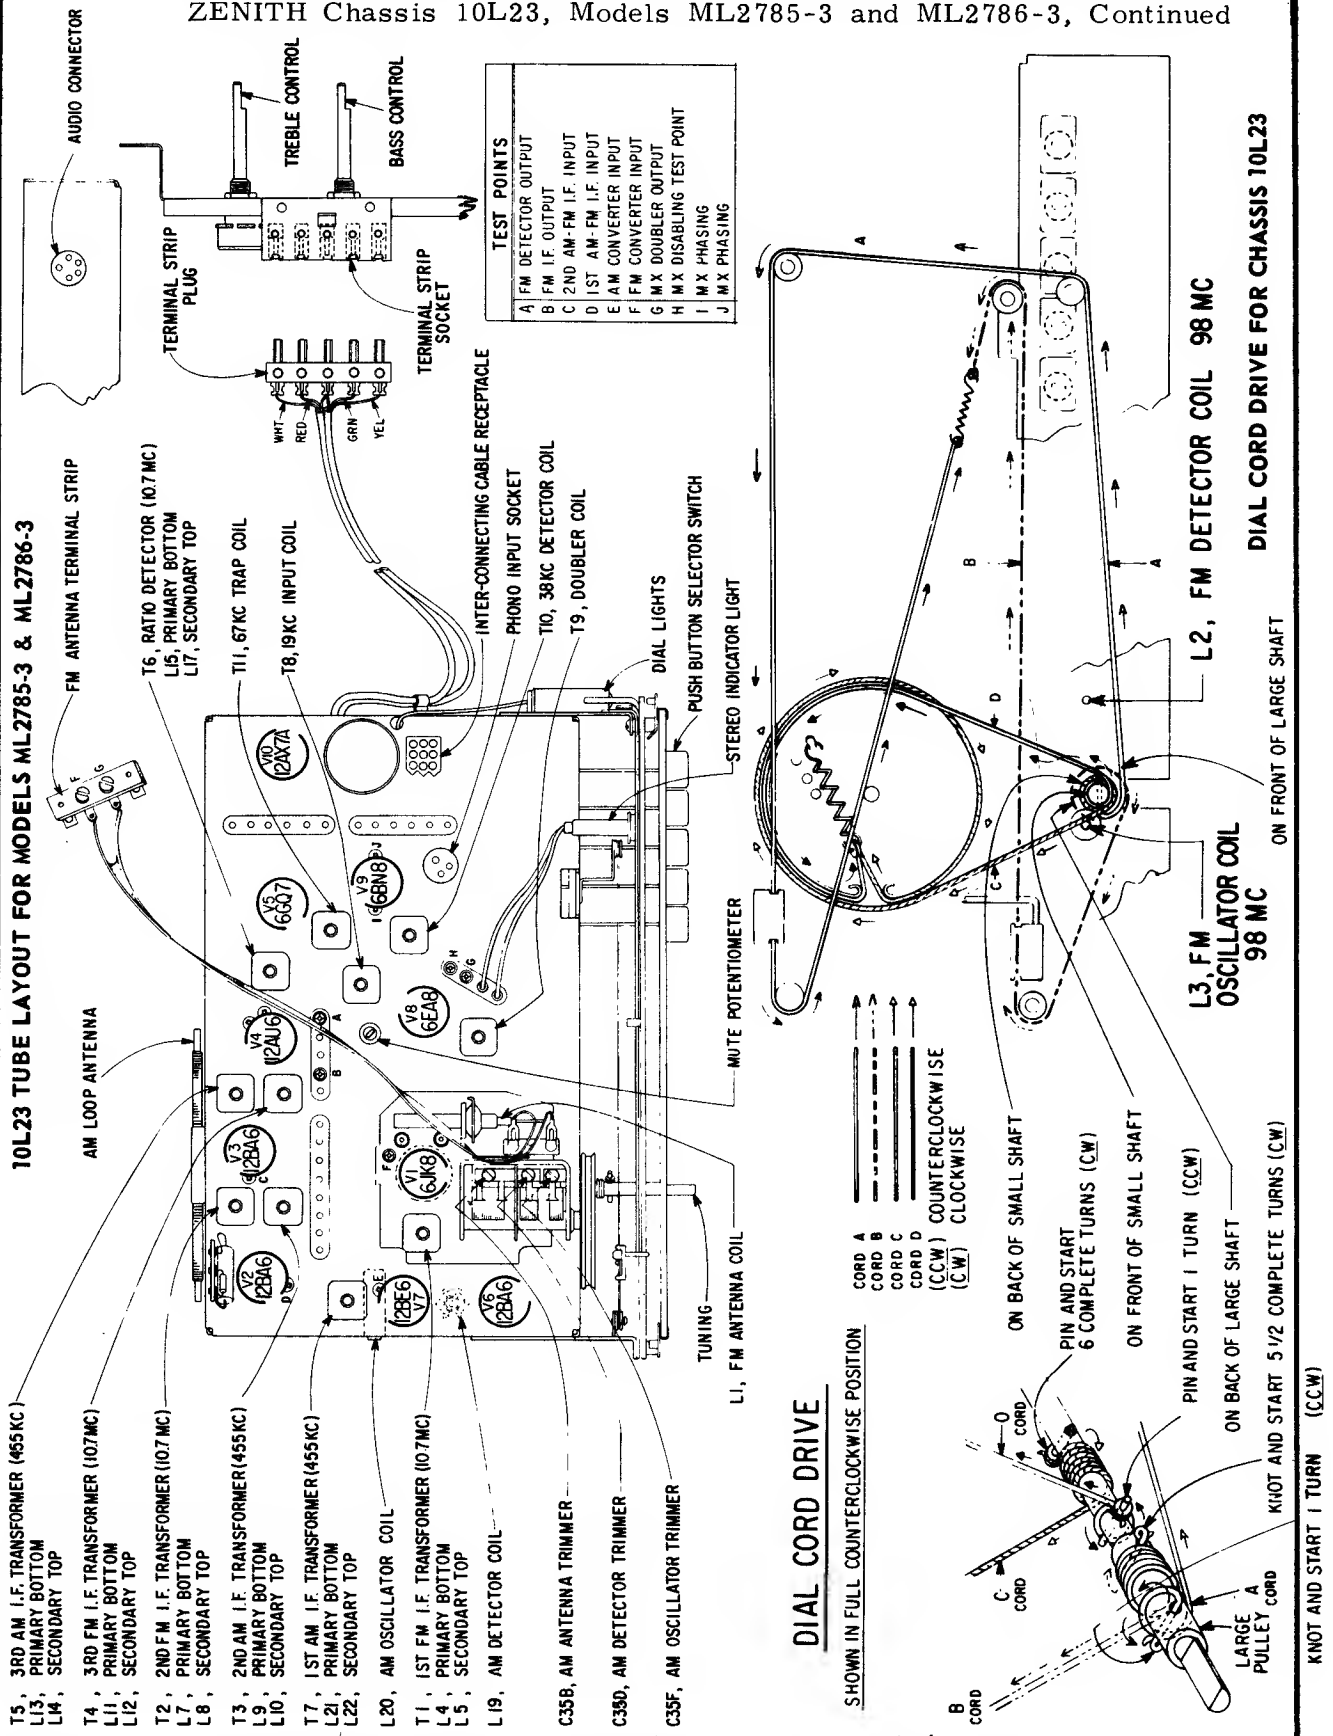

INDEX to R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

Admiral Corp.		Admiral, Cont.		Emerson, Cont.		Hitachi		Motorola, Cont.	
2K1, A, B	9	Y3717	4	P-1938	23	TH-600	49	SKR148	79
3J2A	9	Y3720	4	P-1939	27	TH-812	50	SK150	79
3L2A, B	9	Y3727	4	P-1940	27	TH-848	52	SKR150	79
4A4	3	Y3729	4	P-1944	30	<u>Magnavox</u>		SK151	82
4C4	12	Y5009	9	P-1946	30	2AM-70	53	SKR151	82
5D6D	5	Y5017	9	120664, L	26	2ST686	57	SK152	82
5D6E	5	Y5027	9	120715	23	2ST687	57	SKR152	82
5D6F	5	Y5037	9	120716	23	2ST690	57	SK154	79
5E6	4	Y5097	9	120719	27	AM82	56	SKR154	79
5K6	5	Y6001	9	120720C	27	AM83	54	SKR155	82
5L6	5	Y6002	9	120724	23	R207	57	SKR156	82
5M6	5	Y6021	9	120726	30	A551	61	SKR157	82
6W3, A	6	Y6022	9	120745	31	A590	61	SKR158	82
8D3	12	Y8157	8	120747	32	<u>Montgomery</u>		SKR159	82
8K2-1N	7	Y8177	8	471538	32	<u>Ward</u>		SKR160	82
8K2-2N	7	Y8181	8	<u>Gamble-Skogmo</u>		GEN-1250A	62	SK161	74
8K2-3N	7	Y8201	8	60-9925A	34	GEN-1251A	62	SKR161	74
8N2	8	Y8202	8	RA60-9930B	34	GEN-1257A	63	SK162	74
12A2	10	Y8601	10	<u>General</u>		GEN-1802A	64	SKR162	74
Y701A	10	Y8615	10	<u>Electric</u>		GEN-1803A	64	SK163	77
PA731	10	Y8629	10	T7	48	GEN-1804A	64	SKR163	77
TM731	10	<u>Arvin</u>		TU222	45	GEN-1805A	64	SK164	79
PS751	10	13R07	13	T295	36	GEN-1806A	64	SKR164	79
Y2411GP	7	13R08	13	C403D	37	<u>Motorola</u>		SK165	79
Y2413GP	7	14R18	14	C505B	37	BC4	66	SKR165	79
Y2421GP	7	14R68	15	C506B	37	B7	65	SK166	74
Y2423GP	7	15R75	16	C550A, B	40	B8	65	SKR166	74
Y2441	7	64R29	18	C551A, B	40	B9	65	SKR167	74
Y3321A	5	64R38	17	C555A	36	B10	65	SK172A	88
Y3323A	5	1.81001	14	A-600	35	BC11	66	SK173A	88
Y3381A	5	1.81501	15	P910AA	38	BC12	66	PK175A	91
Y3383A	5	1.81601	17	P911AA	38	A25	69	SK175A	88
Y3408	6	1.82001	16	P914AA	38	A26	70	PK176A	91
Y3411	6	1.84701	18	P920A	41	A27	70	SK176A	88
Y3412	6	1.86401	13	P950A	38	C38	70	PK177A	91
Y3503	3	<u>Bulova Watch</u>		P960A	38	C39	70	SK177A	88
Y3508	3	430	20	P995A	38	SP53	73	PK178A	91
Y3509	3	S-912	19	P996A	38	SP54	73	SK178A	88
Y3513	5	<u>Delmonico</u>		RP2020A, B	42	PP80A	93	PK180A	92
Y3517	5	120	21	RP2021	42	HK81	81	SK180A	84
Y3519	5	150	21	RP2040A	43	PF81A	93	SK181A	84
Y3523	5	FMS-411	22	RP2041A	43	ST82A	88	PK182A	92
Y3528	5	<u>DuMont</u>		RP2041A	43	PP90A	90	SK182A	84
Y3529	5	524	27	RP2100	42	PP91A	90	PK183A	92
Y3543	5	525	27	RP2101	42	PP92A	90	SK183A	84
Y3554	5	526	27	RP2108	42	SKR120	72	PK190A	90
Y3557	5	<u>Emerson Radio</u>		RP2140	43	SKR121	72	SK190A	84
Y3559	5	31T01	32	RP2142	43	SKR124	72	PK191A	90
Y3564	5	32P01	31	RP2143	43	SKR125	72	SK191A	84
Y3568	5	899	26	RC4640A	44	SK135	78	SK192A	84
Y3569	5	P-1925A	23	RC4641	44	SKR135	74	SK193A	84
Y3573	5	P-1927	23	RC4642	44	SK136	74	SD194A	84
Y3577	5	RC4650A, B	44	RC4651	44	SKR136	74	SD195A	84
Y3579	5	RC4652	44	RC4652	44	SK145	77	SD196A	84
Y3703	4	RC4660	44	RC4660	44	SKR145	77	HS-1128	72
Y3708	4	RC4661	44	RC4662	44	SKR147	77	HS-1130	73
Y3709	4	RC4662	44	<u>Emerson</u>		SKR147	79	HS-1137	74
Y3710	4			P-1925A	23	SKR147	79	HS-1138	74
Y3714	4			P-1927	23	SK148	79	HS-1141	79
				P-1935	23				

INDEX to R-25, MOST-OFTEN-NEEDED 1965 RADIO SERVICING INFORMATION

Motorola, Cont.	Philco, Cont.	RCA, Cont.	Sylvania, Cont.	Westinghouse+
HS-1147 72	NT-913 114	VFP-6OE 130	413-1 155	V-2461-1 164
HS-1150 78	N-940 107	VFP-65E 132	SG508K,+ 151	V-2515-11 166
HS-1181 73	N-942 108	VFT-65W 136	SG511M,W 151	V-2524-1 169
HS-1185 77	N-944 108	VFT-72W 136	SC515M,W 153	V-2524-2 169
HS-1186 77	M-1001 118	VFT-74L,Z 136	SC521M,W 153	V-2524-3 169
HS-1197 79	NT-1004 116	VFT-76W 136	SC526K 153	V-2526-1 170
HS-1198 79	N-1508 124	VFT-82M,V 136	SC541W 154	V-2534-2 171
HS-1199 82	M-1620 118	VFT-83F,V 136	SC542++ 154	V-2536-1 172
HS-1200,-1 82	M-1662 118	VFT-84E 136	SC543 154	V-2537-1 172
HS-1222 74	M-1663 118	VFT-85W 136	SC561M,W 154	V-2537-2 171
HS-1239 77	M-1664 118	VFT-86L 136	SC721 157	V-2537-3 172
HS-1241 84	M-1666 122	RS-188B 125	SC724 157	
HS-1242 90	M-1669 122	RS-203C 133	SC740 158	<u>Zenith Radio</u>
HS-1253 73	M-1680 122	RS-206A 132	SC741 158	3L03 185
HS-1259 84	M-1688 122	RS-210A 136	SC743 158	3L05 185
HS-1260 88	M-1689 122	RS-212A 137	SC744 158	5J13 173
HS-1261 91	M-1700 118	RP-219+ 130	SC746 158	5L02 173
HS-1262 92	M-1701 118	RC-1210E 128	SC748 158	6L05 174
HS-1264 84	M-1704 122	RC-1210F 128	802-1,-2 153	6LT45Z2 178
HS-1266 90		RC-1213A,+ 126	802-5 157	6M06 175
HS-1269 93	<u>RCA Victor</u>	RC-1213C,D 126	803-1,-2 154	7L01 186
HS-1323 88	VFE-01W 125	RC-1213J,+ 126	803-5 158	7L02 176
HS-1328 84	VFR-05M,W 133	RC-1213KL 126		7L03 177
HS-4108 65	VFT-05M,W 133	RC-1213P 138	<u>Westinghouse</u>	7M04 177
HS-4109 65	VFP-09E,T 130	RC-1215DE 133	H-91ACS1 169	8KT40Z2 184
HS-4123 65	VFT-10E 133	RC-1215J,K 136	H-92ACS1 169	8LT25Z 187
HS-4134 66	RFA-11V,+ 126	RC-1215M 137	H-99AC1 170	8LT40Z1 180
HS-4135 66	RFD-11V,+ 126	RC-1219A,B 131	H-99AC2 170	8LT45Z1 182
HS-4137 69	VFP-11A,+ 130		H-100AC1 172	8LT45Z3 182
	RFA-15A,+ 126	<u>Sears, Roebuck</u>	H-100AC2 172	10L23 189
<u>Packard-Bell</u>	RFC-15E,W 128	5008 139	H-102ACS1 172	10LT20 188
5R11 94	RFD-15V 126	5009 139	H-102ACS2 172	LPS50 185
5R12 94	RFS-15W 128	5036 142	H-105ACS1 171	LPS75 185
5RC13 94	RFC-19W 128	5037 142	H-106ACS1 171	285-500E1 184
5RC14 94	RFD-19G,+ 126	5038 142	H-107ACS1 171	500H-1 180
	VFP-19E,T 130	5039 142	H-111MP1 172	500L 182
<u>Philco Corp.</u>	VFR-19M 133	5045 140	H-111MP2 172	L509J,L,W 173
T-69 95	VFT-19M 133	5046 140	H-120ACS1 169	L513C,+ 173
NT-600 98	RFG-20A,+ 131	132.83601 139	H-121ACS1 169	L514C,+ 173
NT-601 96	VFP-21A,T 130	132.84101 140	H-890P6GP 159	L615G,L,W 174
N-721 103	VFT-22W 133	528.63101 142	H-893P8GP 160	645L 178
N-723 105	RGD-24,+ 138		H-897P8 160	M722C,L,W 175
N-724 105	RFG25B,E 131	<u>Sharp Elect.</u>	H-898P8 160	M723A,C,W 177
N-725 106	VFR-25L 133	FMA-11 145	H-899P8 160	L724C,L,W 176
N-727 106	VFT-25L 133	BP-374 143	H-902P6GP 164	L727C,L,W 177
N-730 107	VFT-26W 137	BP-460 144	H-903P8GP 162	ML2420-3 186
N-731 108	VFT-27L 137	BP-485 146	H-904P8GP 162	ML2601-3 186
N-732 108	VFT-28M 137		H-907P8 163	ML2602-3 186
N-795 104	VFT-29W 137	<u>Sony</u>	H-F1030 169	ML2603-3 186
NT-802 101	VFT-30W 137	TR-8 147	H-F1031 169	ML2608-3 188
NT-807 109	VFT-31L 137	TR-830 148	H-F1033 169	ML2610-3 188
NT-808 110	VFP-32E,G 130		H-M1780,A 166	ML2636-3 188
N-880 103	VFP-43A 130	<u>Sylvania</u>	H-M1781 166	ML2670-3 187
N-881 103	VFT-44W 136	45P41 155	H-M1783 166	ML2675-3 187
N-884 105	VFP-49E 130	309-1 149	V-2455-1 159	ML2685-3 187
N-885 105	VFT-52M 136	324-1 150	V-2455-3 160	ML2785-3 189
NT-900 102	VFT-54L 136	370-1 152	V-2455-4 160	ML2786-3 189
NT-906 111	VFT-56C 136	371-1 156	V-2455-5 160	7200-3 188
T-908 112	VFP-58A 130	408-1,-2 151	V-2456-1 163	7500-3 187