


ALIGNMENT PROCEDURE, CROSLEY CORP. MODELS 66CA. 66CP. 66CQ

- 1. Turn the tuning condenser to the completely closed position against the stop and set the dial pointer to the reference line at the end of the dial scale.
- 2. Connect the output meter across the speaker voice coil.
- 5. The r.f. signal input from the signal generator should be connected to the external antenna post as indicated in the alignment chart. Connect the low side (ground) of the signal generator to the chassis.
- generator to the chassis.

 4. Turn the volume control on full and adjust the signal generator output to produce approximately mid-scale deflection of the output meter, but maintain the signal generator output as low as possible to prevent AVC action.

Alignment Sequence	Signal Generator Output			Position of		
	Frequency in kc.	In Series With	То	Band Switch	Tuning Dial	Adjust for Maximum Output
1	455	200 mmf.	Ant.	A	1620	A & B
2	455	200 mmf.	Ant.	A	1620	C*
3	15,300	400 ohms	Ant.	0	15,300	D
4	15,000	400 ohms	Ant.	0	15,000	E
5	1620	200 mmf.	Ant.	A	1620	F
6	1400	200 mmf.	Ant.	A	1400	G
7	600	200 mmf.	Ant.	A	600	Н
8	1400	200 mmf.	Ant.	A	1400	Recheck G

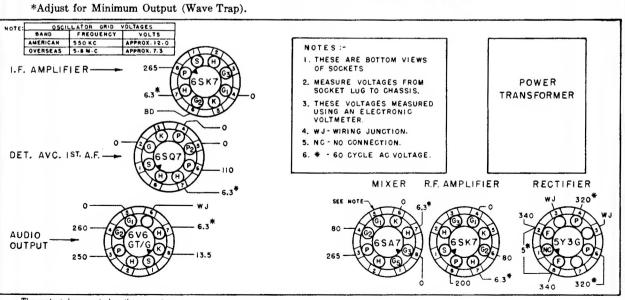

The material presented on this page has been prepared by and is printed through the courtesy of THE CROSLEY CORP.