

## **Alignment Procedure**

Output Meter Alignment.—If this method is used, connect the meter across the voice coil, and turn receiver the volume control to maximum.


Test-Oscillator.—For all alignment operations, connect the low side of the test-oscillator to the receiver chassis, and keep the oscillator output as low as possible to avoid a-v-c action.

Calibration Scale.—The glass tuning dial may be removed from the cabinet and mounted above the pointer for reference during alignment. The extreme left hand mark of the Standard Broadcast scale must be in line with the left hand mark on the dial backing plate.

Dial Backing Plate.—In the event that only the chassis is returned for service, the masks on the dial backing plate may be used during alignment; refer to the Dial Indicator and Drive Mechanism drawing for corresponding frequencies.

Dial Pointer.—With the gang condenser in full mesh the dial pointer should be set to the left hand reference mark on the dial backing plate.

For additional information refer to booklet, "RCA Victor Receiver Alignment."

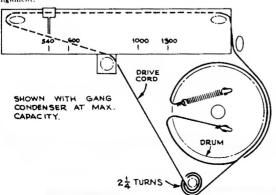

## Model 8X53

Chassis No. RC-1064

3	Stator of C1 through 0.1 mfd. Short wire	1,300 kc	1,300 kc	C4 (osc.) C2 (ant.)
2		455 kc	end of dial	*T1 Top & bottom
ı	12SK7 I-F grid through 0.1 mfd. capacitor	455.1	Quiet-point	T2 Top & bottom 2nd. I-F trans
Steps	Connect the high side of test-oscillator to—	Tune test-osc. to	Turn radio dial to—	Adjust the fol- lowing for max. peak output

\*Do not readjust T2 when test oscillator is connected to C1.

